

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Dining Chair

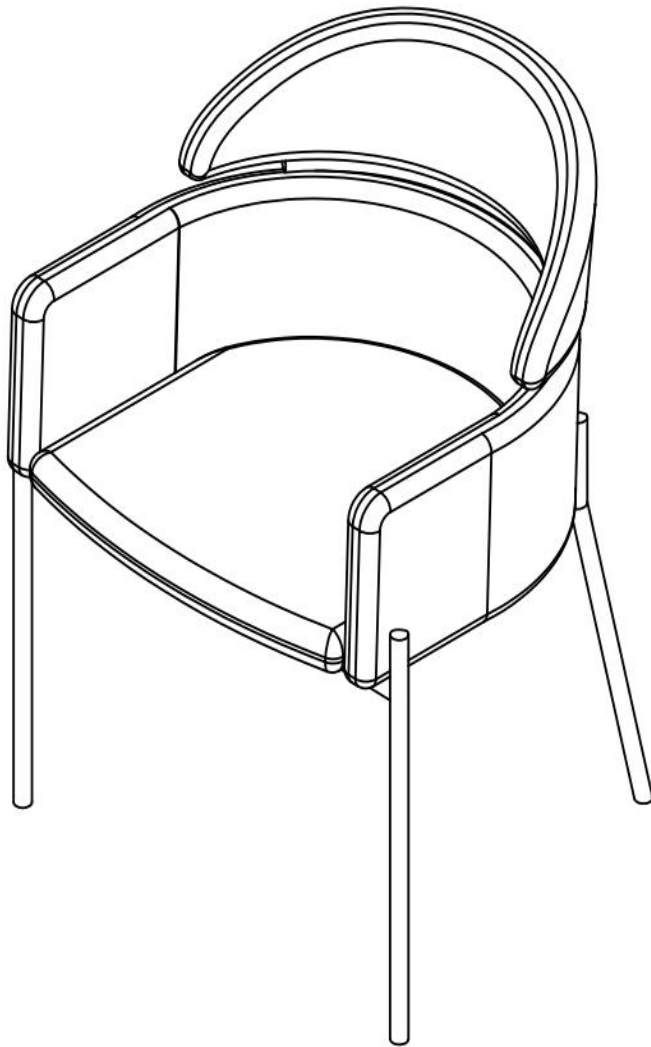

Parts List

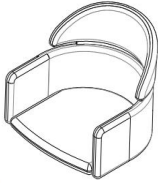Label	Picture	Description	QTY
A		Back & Seat	1
B		Chair Frame	1

Hardware

Label	Picture	Description	QTY
①		Allen Screw (M6x45mm)	4
②		Washer (Ø6x16x1.2mm)	4
③		Allen Key (4mm) (White)	1

Spare Hardware

①		Allen Screw (M6x45mm)	1
②		Washer (Ø6x16x1.2mm)	1

Assembly Preparation

Before
Beginning
Assembly:



A



B



①X4



②X4



③X1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

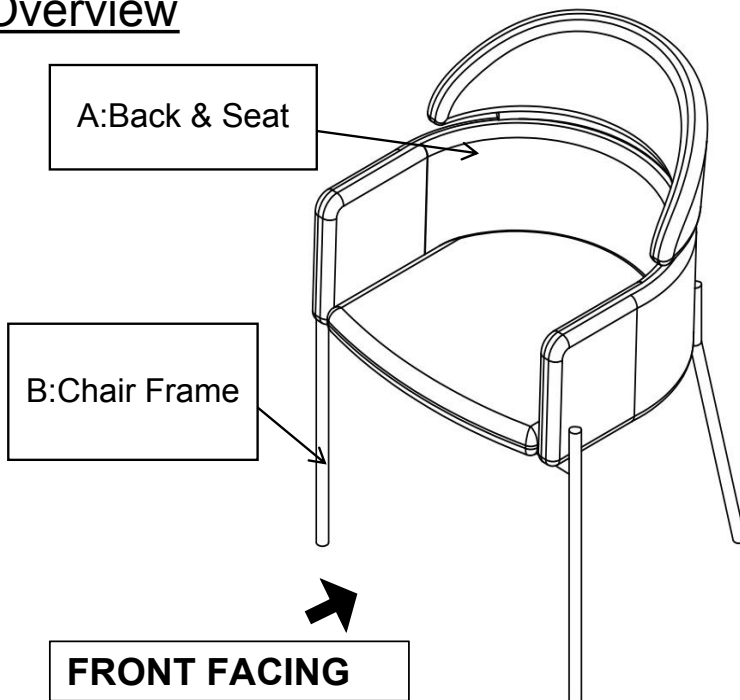


This dining chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the dining chair, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1

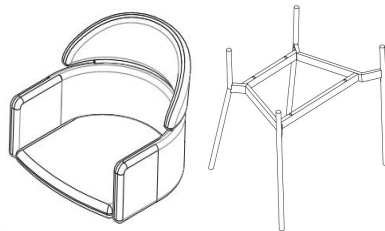


Unpack and place all parts on a clean, non-marring surface.

Step 2

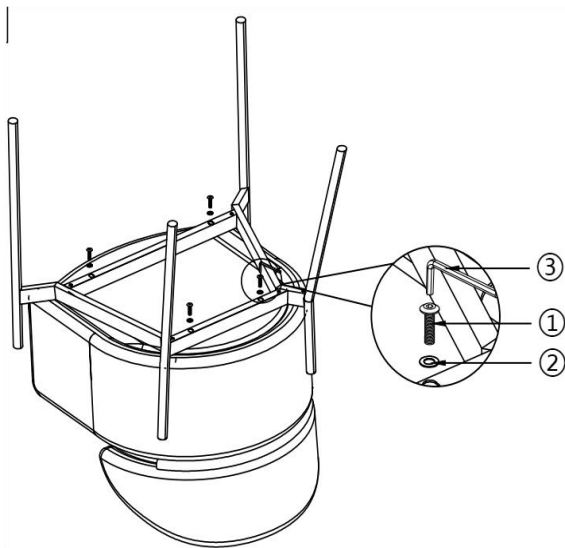

Align the Allen screws ① and washers ② with the holes on the seat cushion as shown in the diagram, and tighten them using the Allen key ③.

Step 3

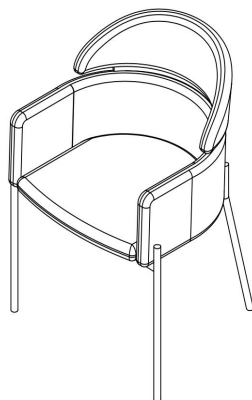

Inspect and make sure all parts are connected.

The Dining Chair is ready for use.

Caution: The Dining Chair can only be used on a flat, level surface.