

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.





- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Dining Chair

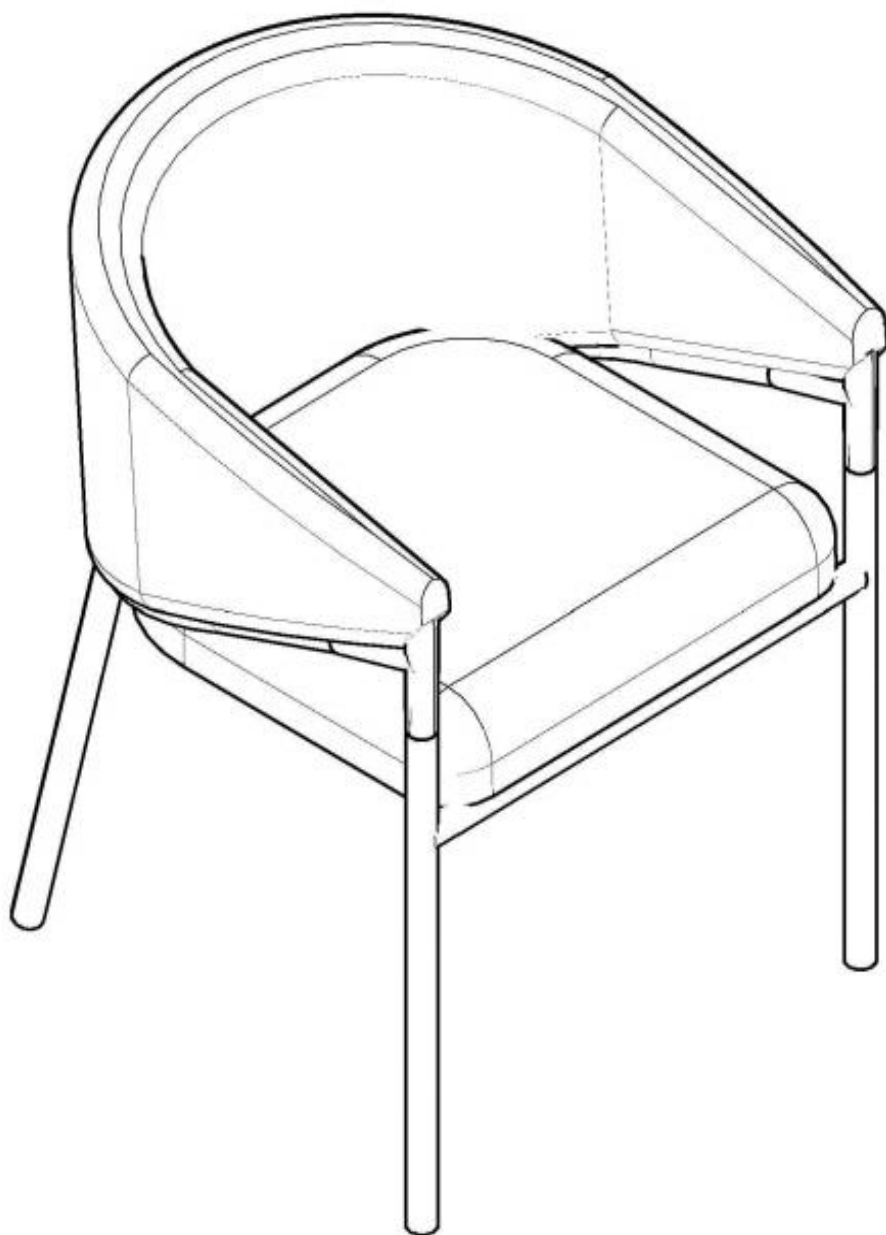


Parts List

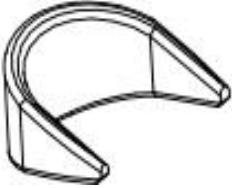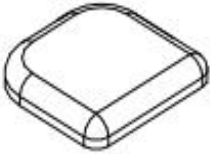Label	Picture	Description	QTY
A		Backrest	1
B		Seat Cushion	1
C		Back Leg	1
D		Front Leg	1
E		Die-cast Part	2

Hardware			
Label	Picture	Description	QTY
①		Allen Screw (M6x40mm)	2
②		Allen Screw (M6x16mm)	3
③		Allen Screw (Stainless Steel) (M6x10mm)	2
④		Allen Screw (M8x30mm)	2
⑤		Allen Key (4mm)	1
⑥		Allen Key (6mm 150mm)	1
⑦		Wrench Socket	1
Spare Hardware			
Label	Picture	Description	QTY
①		Allen Screw (M6x40mm)	1
②		Allen Screw (M6x16mm)	1
③		Allen Screw (Stainless Steel) (M6x10mm)	1
④		Allen Screw (M8x30mm)	1

Assembly Preparation

Before Beginning Assembly:

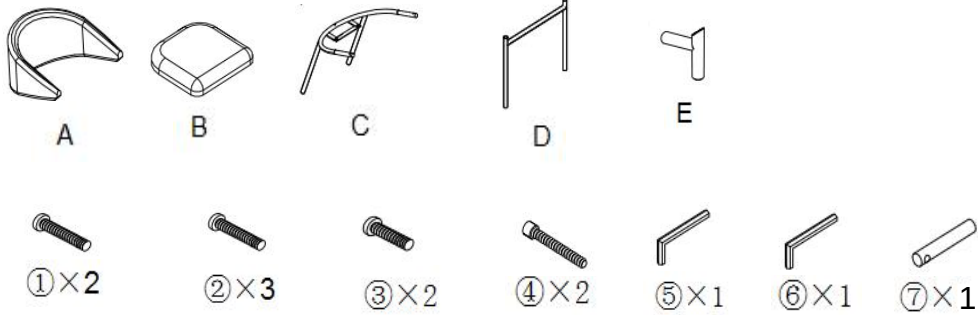

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

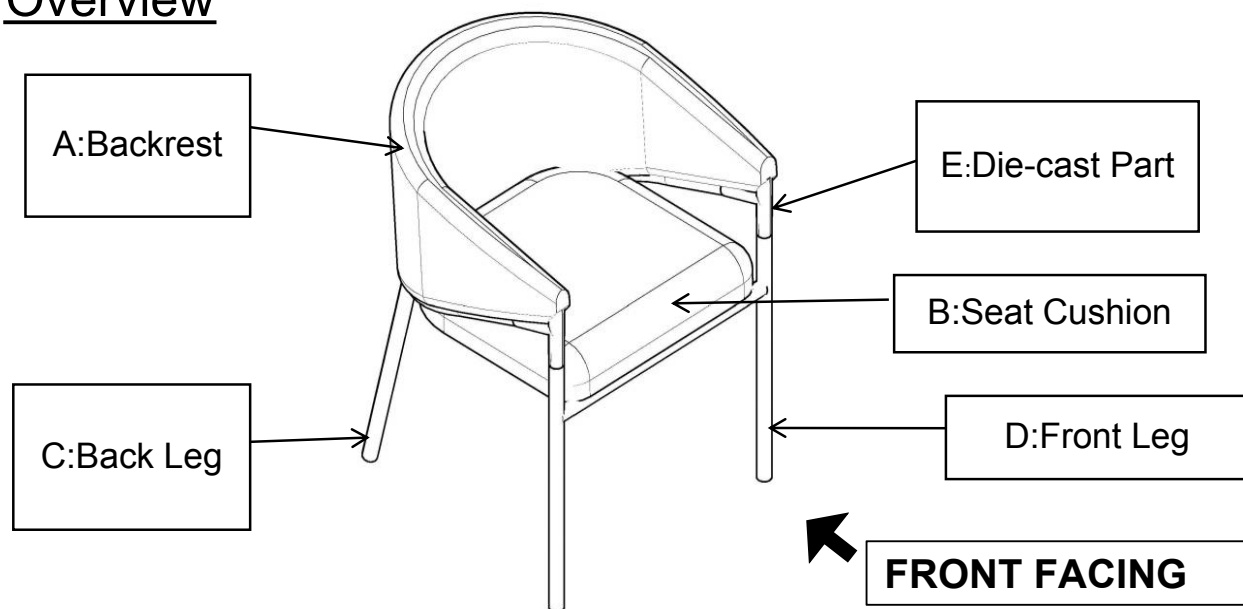


This dining chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the dining chair, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1

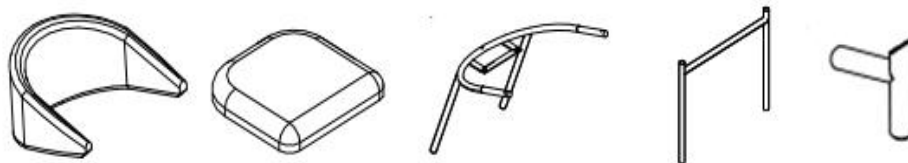


Unpack and place all parts on a clean, non-marring surface.

Step 2

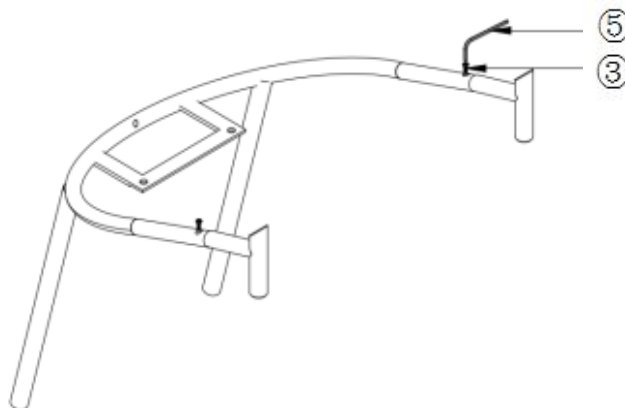


Connect the rear leg frame (C) and die-cast part (E) using the hex key (⑤) to loosely attach the chamfered hex socket (③). Do not tighten it fully at this stage.

Step 3

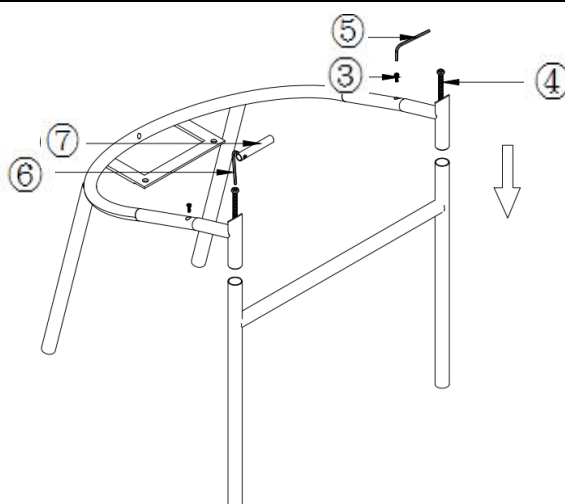

Insert the short end of the hex key (⑥) into the socket (⑦), then place the cap head hex bolt (④) into the designated hole and tighten. Securely tighten the chamfered hex socket (③) from Step 2.


Step 4

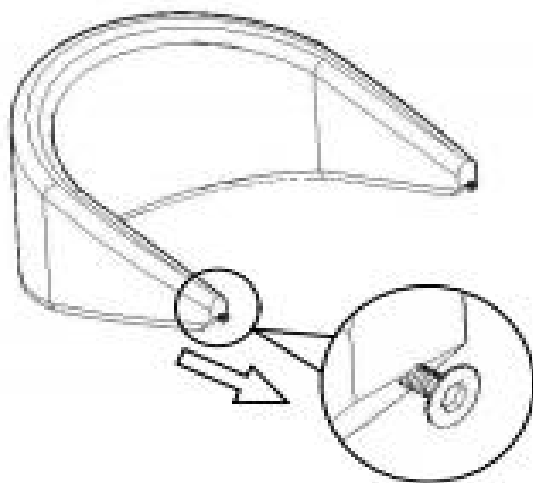

Loosen the chamfered hex socket on the front of the backrest (A) by turning it 10mm in the direction of the arrow.


Step 5

When installing screw ②, gently press the center of the chair back cushion.

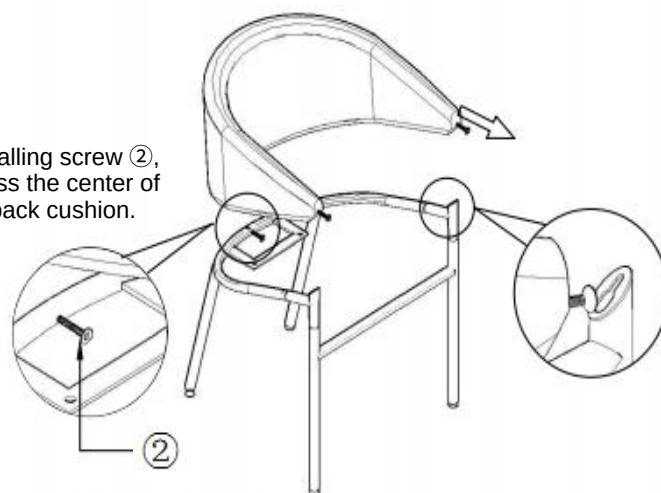

Insert the loosened chamfered hex socket from the backrest into the front leg frame (D). Adjust the backrest and gently tilt the chair to align the chamfered hex socket (②) with the backrest hole. Do not tighten yet.

Step 6

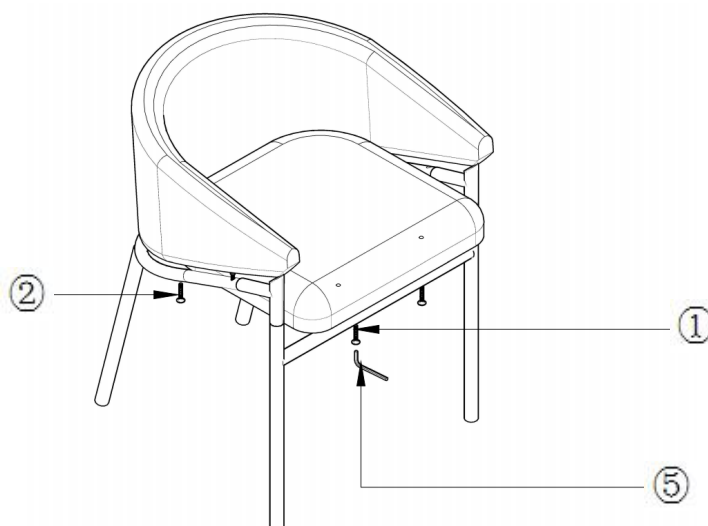

Align the chamfered hex sockets on the seat cushion (B) with the corresponding holes as shown in the diagram, and tighten them using the hex key (⑤).

Step 7



Inspect and make sure all parts are connected.

The Dining Chair is ready for use.

Caution: The Dining Chair can only be used on a flat, level surface.