 
 


Instruction Manual

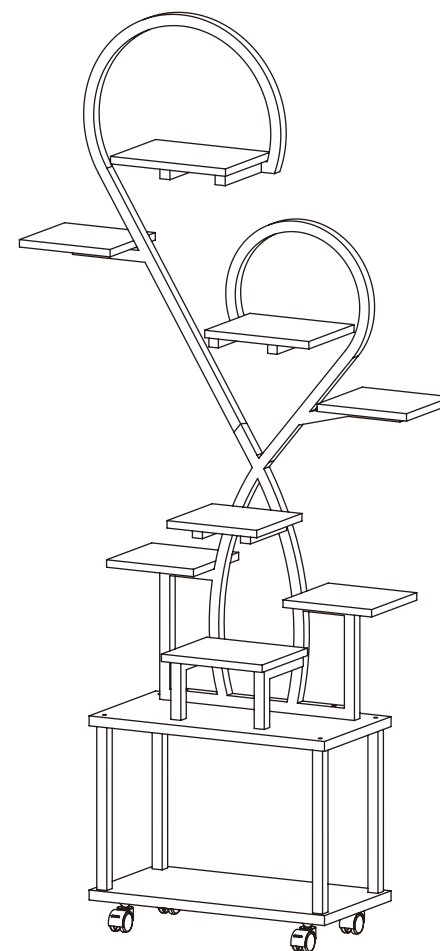

Feature and Specification

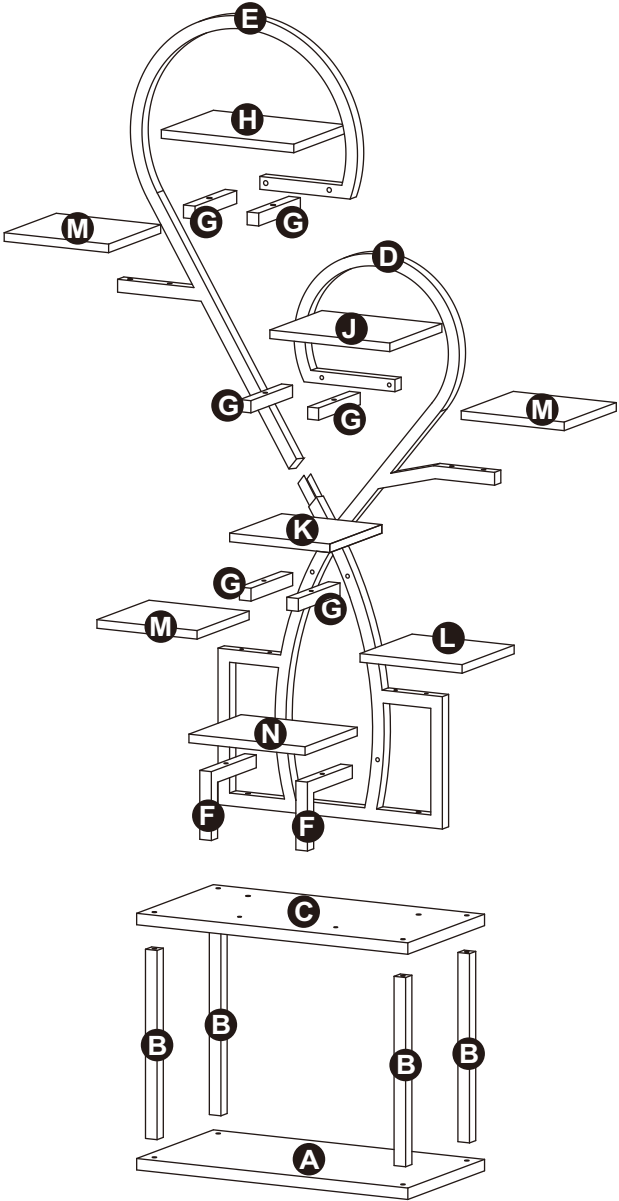


Main Parts


Ax1		Bx4		Cx1	
Dx1		Ex1		Fx2	Gx6
Hx1		Jx1		Kx1	
Lx1		Mx3		Nx1	
ax18		bx16		dx2	nx2
 M6*35mm		 M6*30mm			 M6*10mm
ex8	fx1	gx1	hx1	jx4	mx16

Installation Diagram

 1.

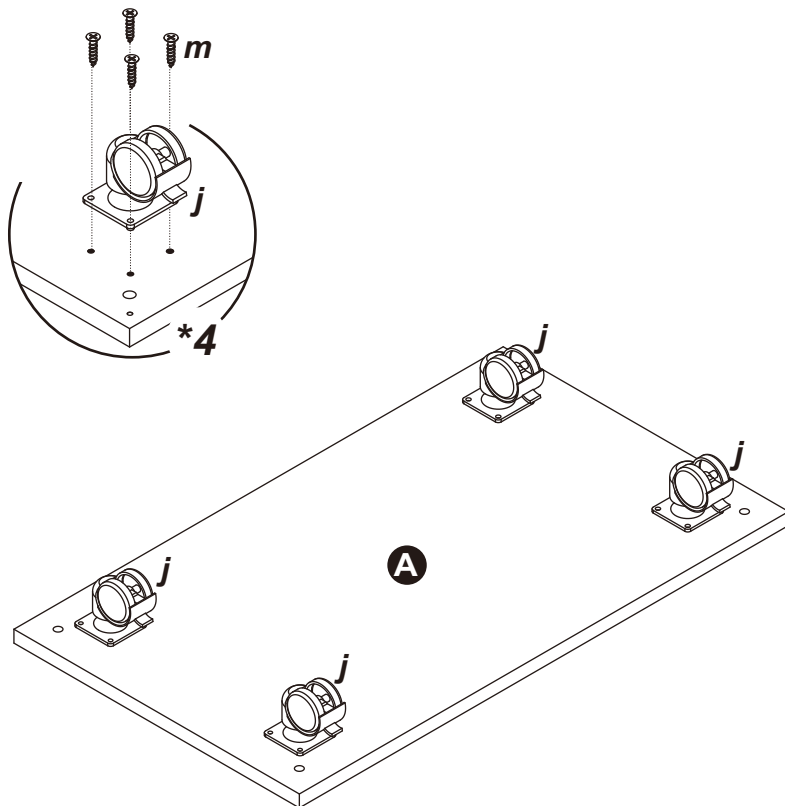

 2.

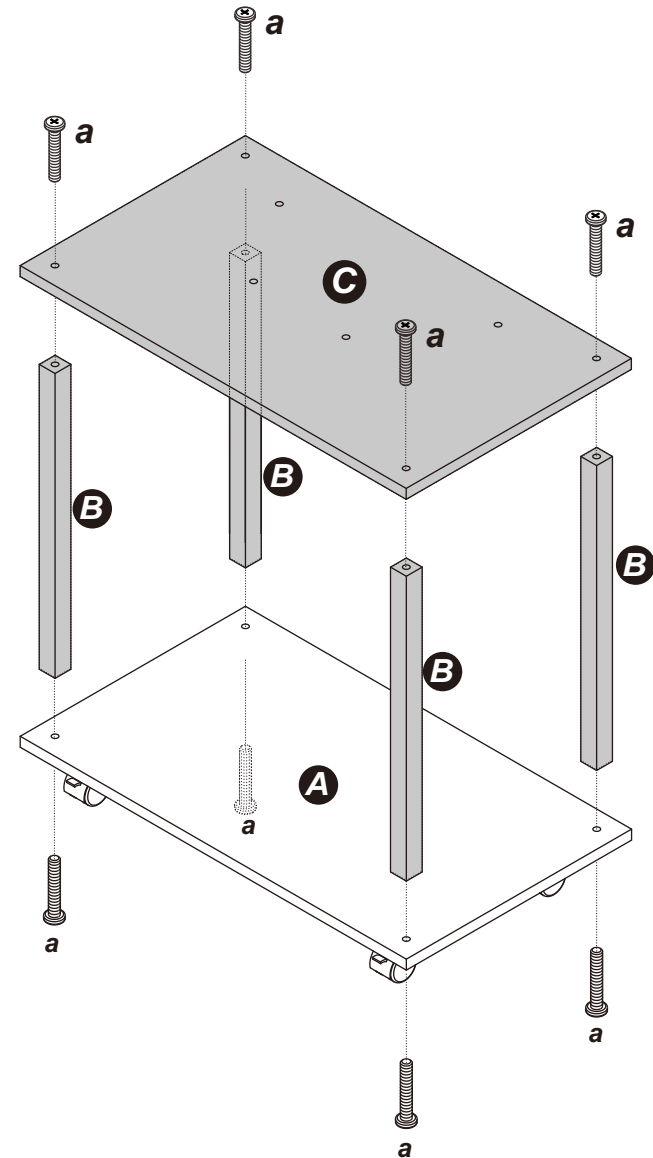


3.


4.



3.

<i>nx2</i> 	
---	--

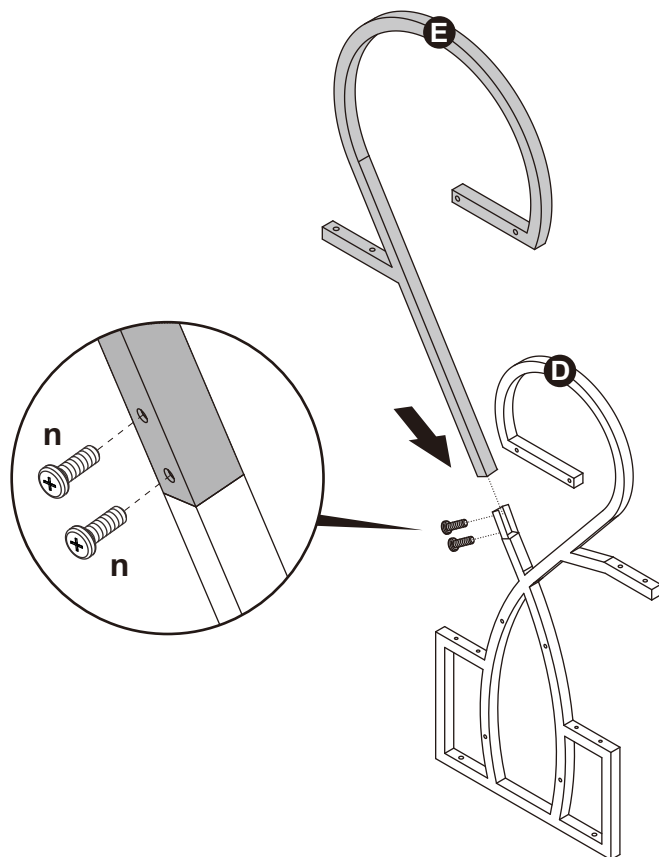 

 4.

<i>dx2</i>  	
---	---

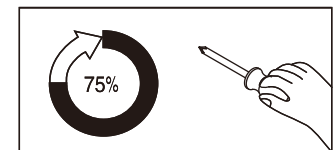 
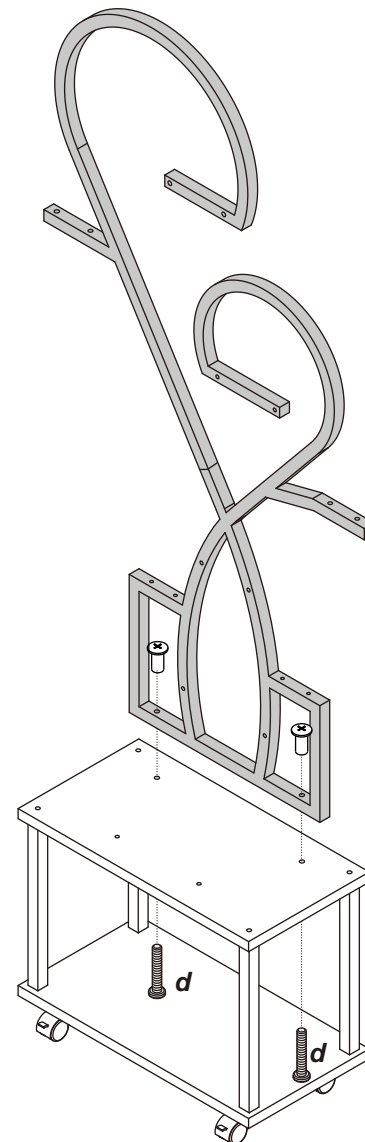 


Screw mounting 75%



5.

6.

  5.

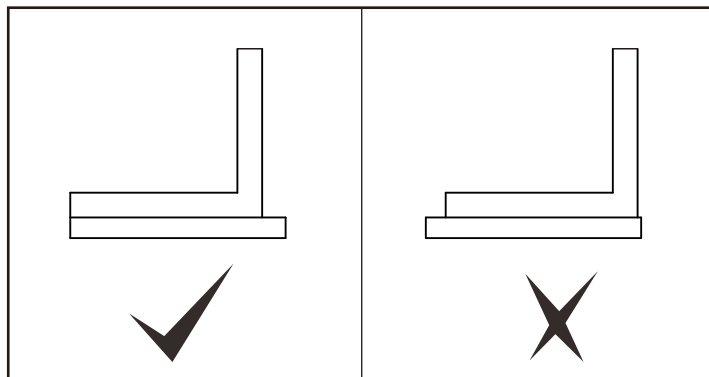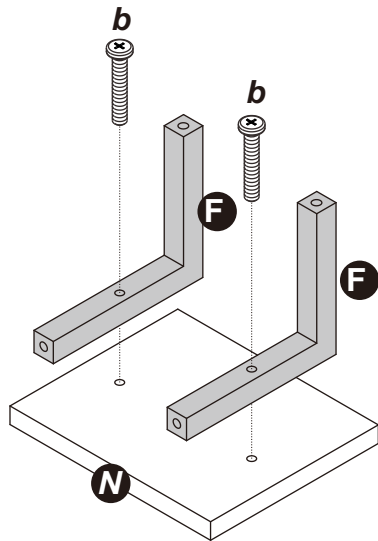


  6.

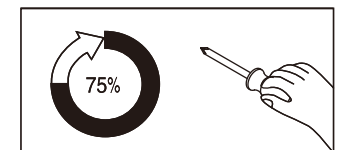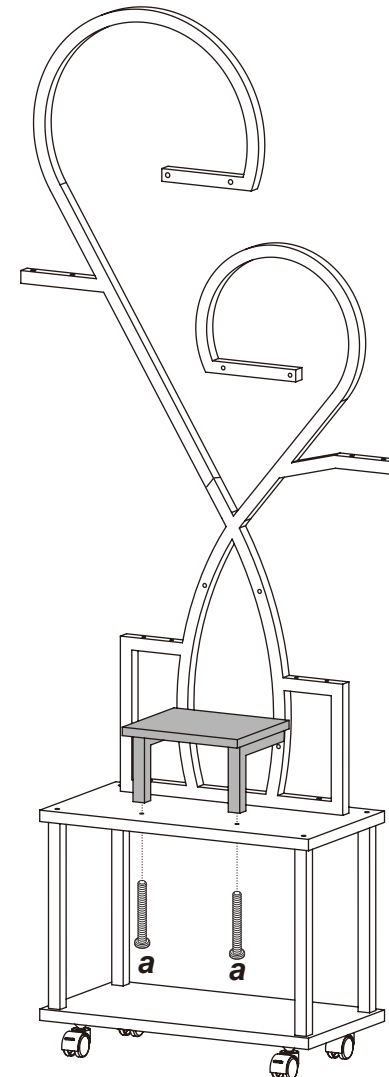


Screw mounting 75%

 
7.

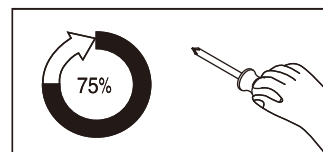


Screw mounting 75%

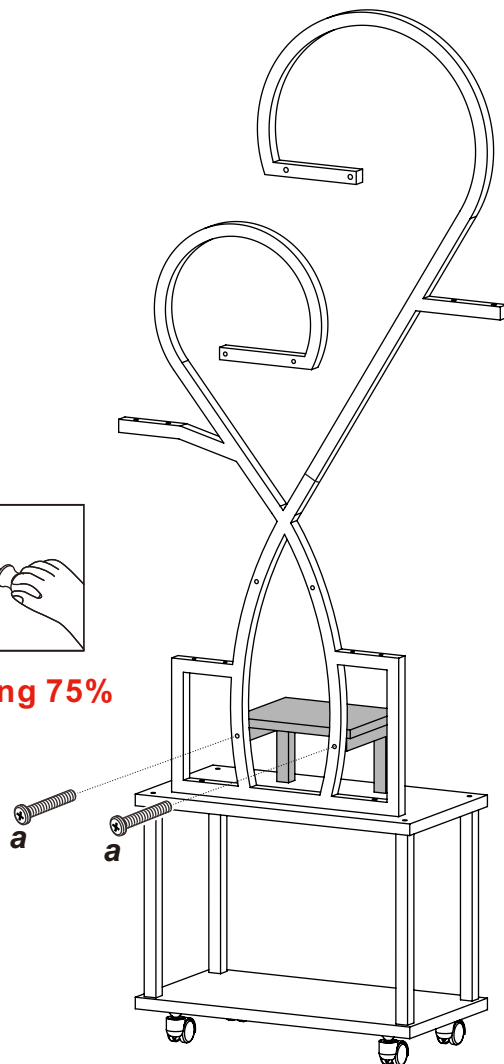 


 
8.

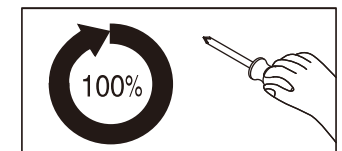


Screw mounting 100%

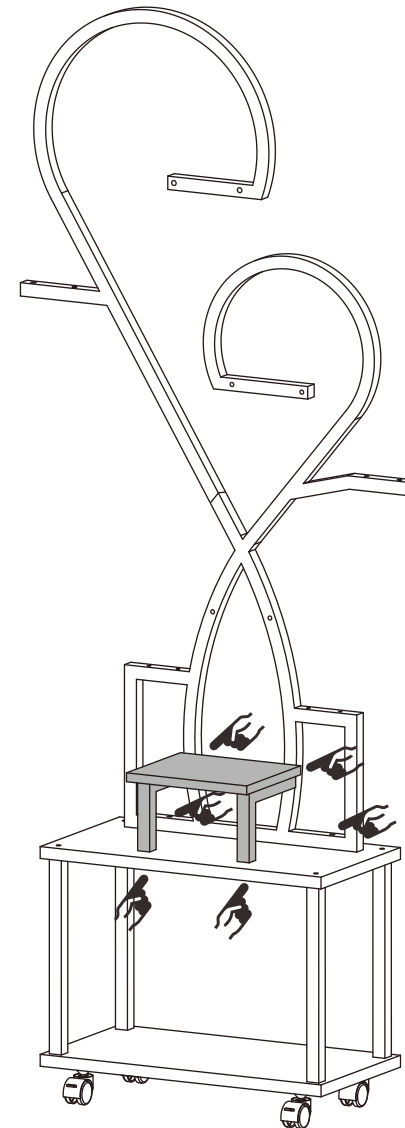 

 
 
9.

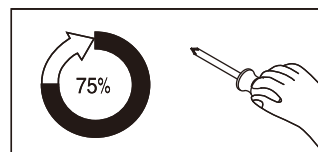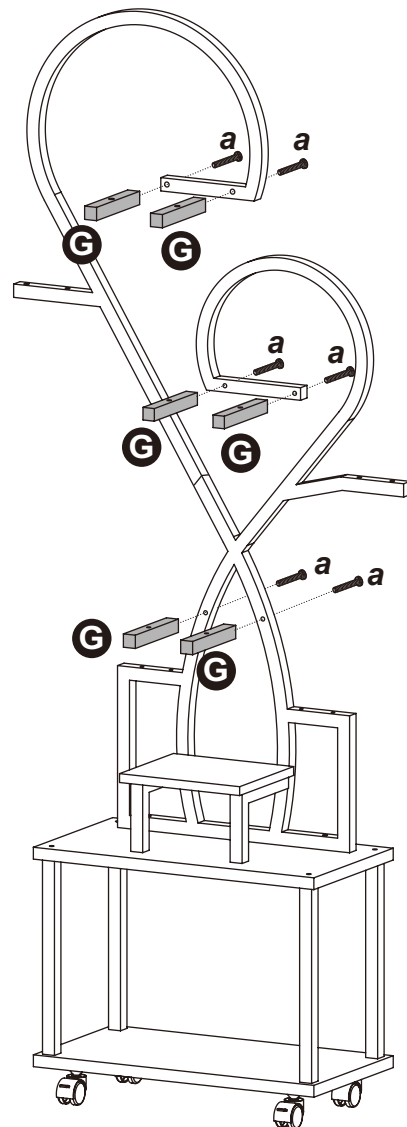



Screw mounting 75%

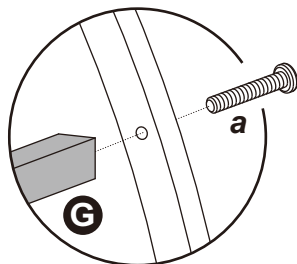 

  10.

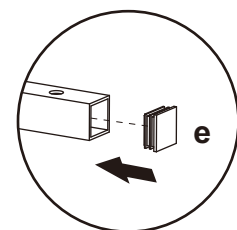
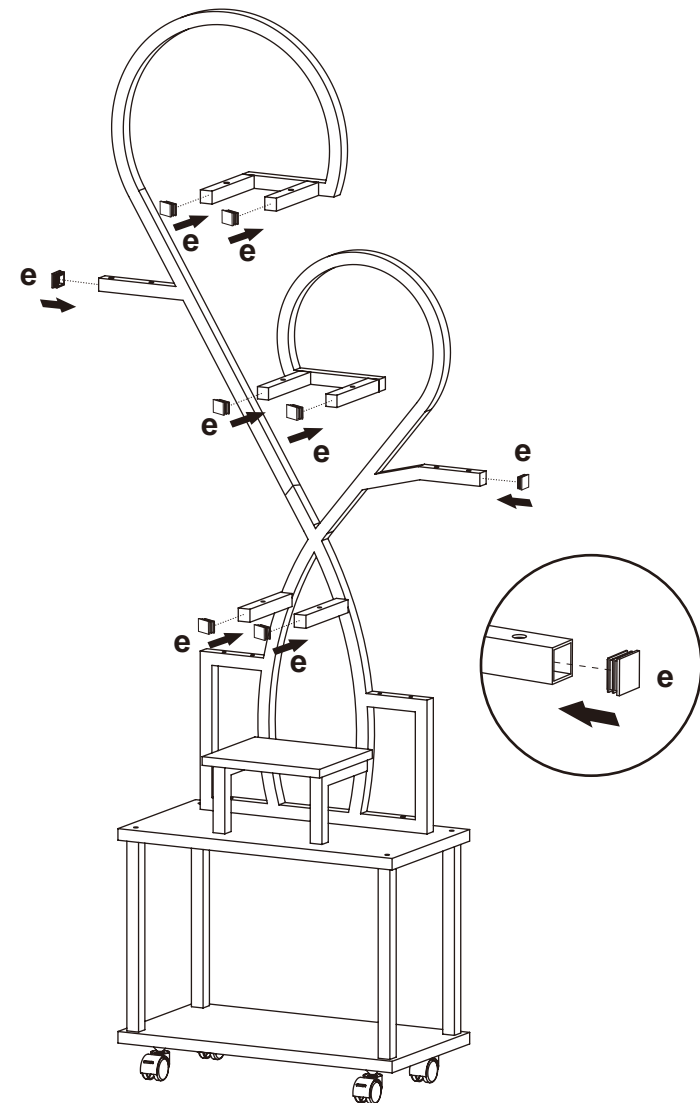


  11.

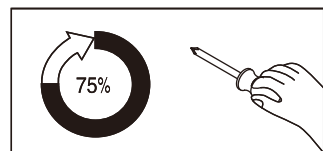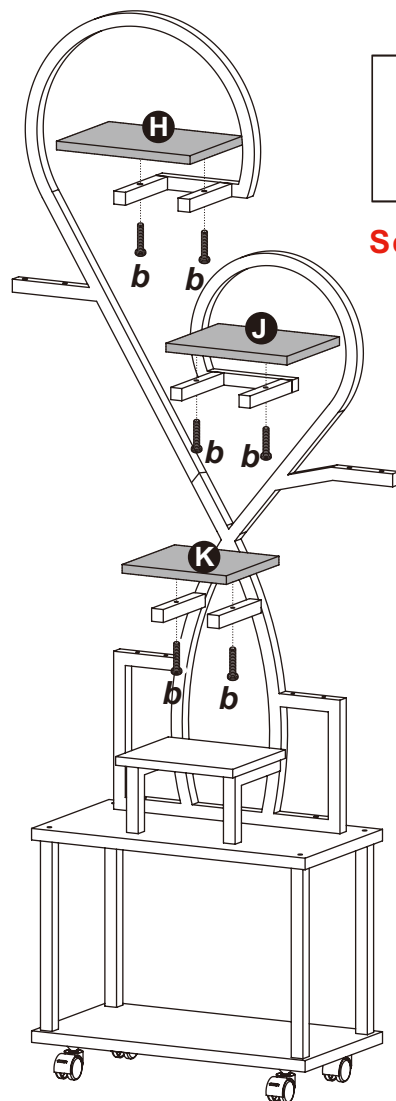

Screw mounting 75%

 
 
12.

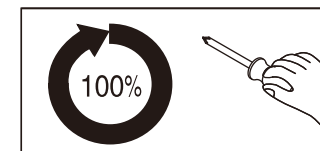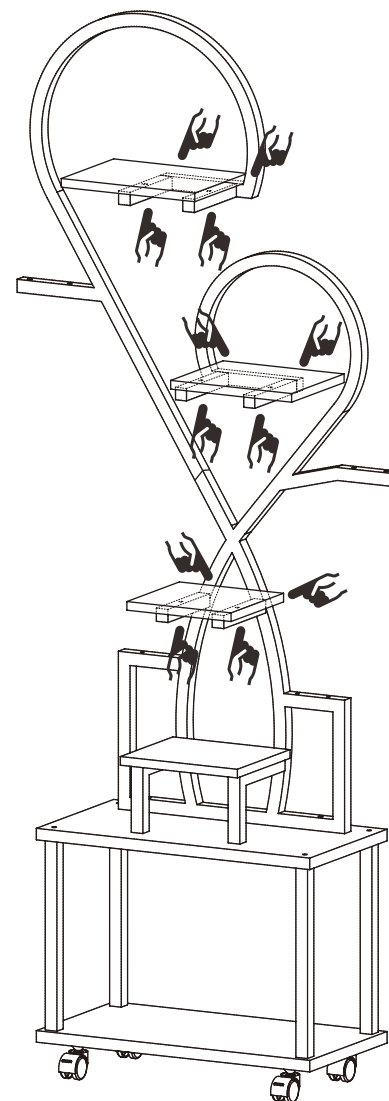


Screw mounting 100%

13.


 
 
bx8

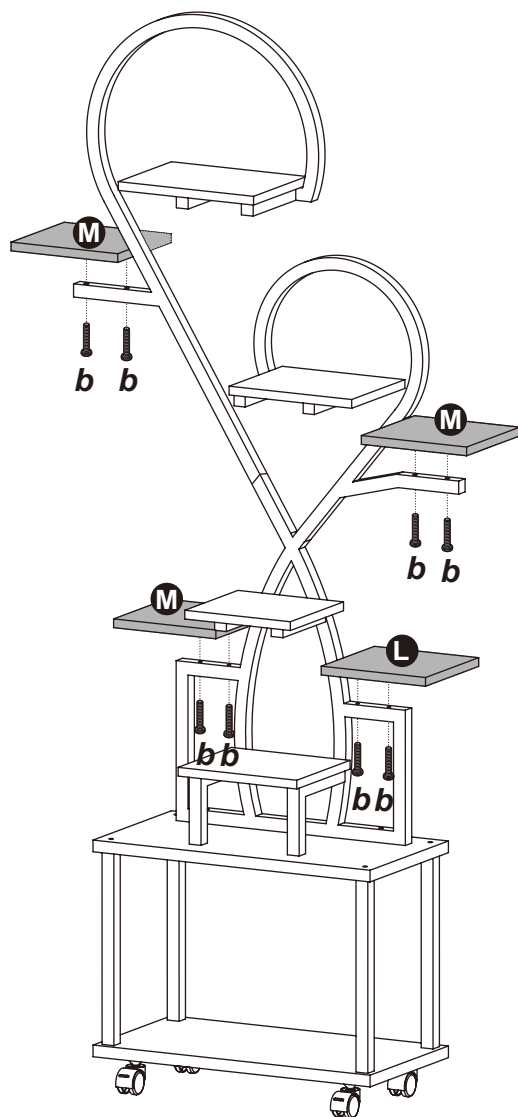

 
14.



fx1

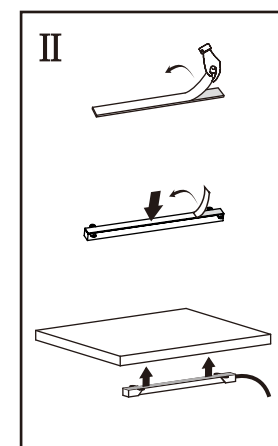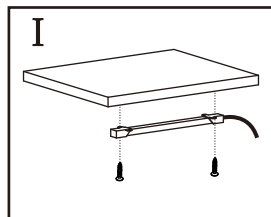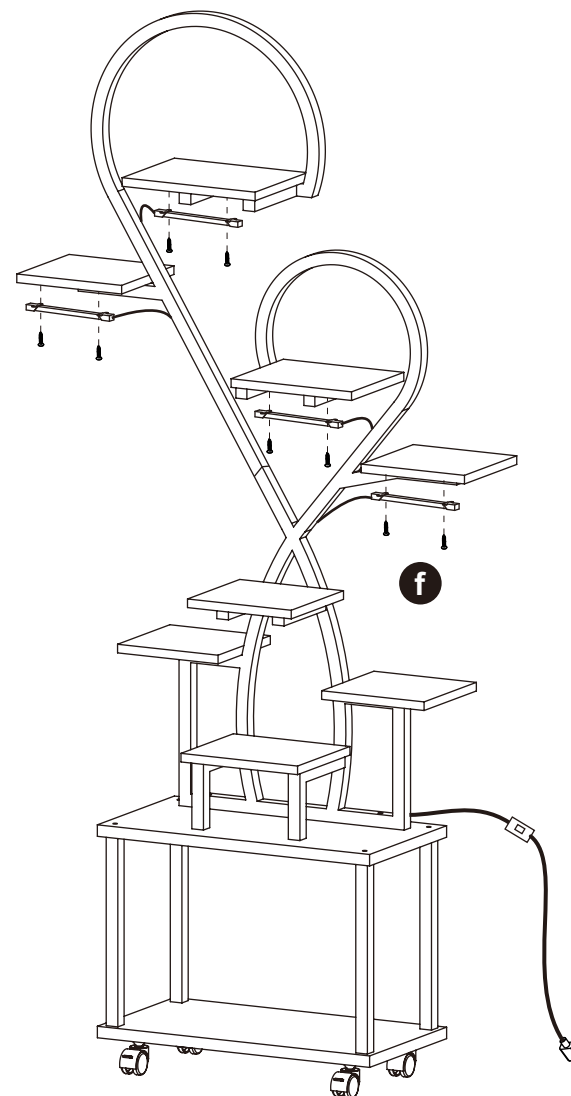   

 15.

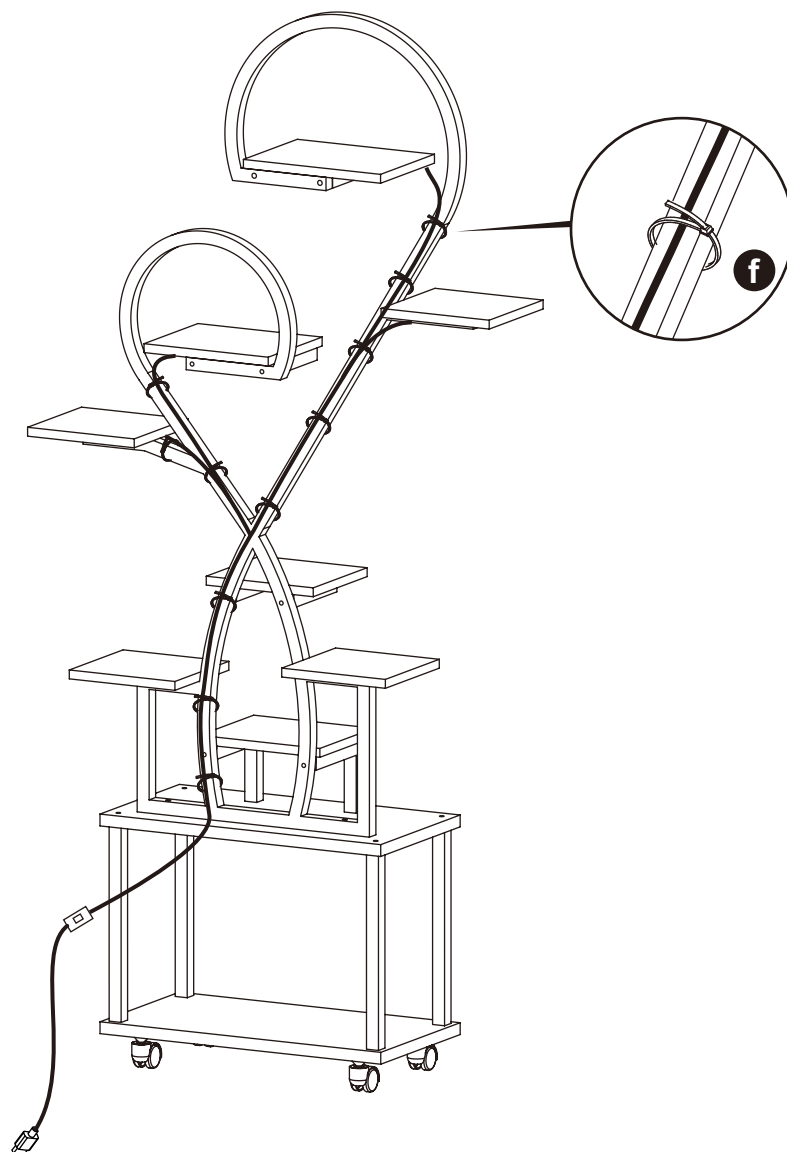

16.

