



ASSEMBLY INSTRUCTION

H08-RZ-US3001LR


Ax1

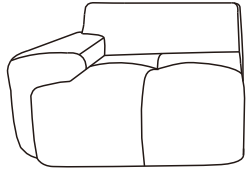


Bx1

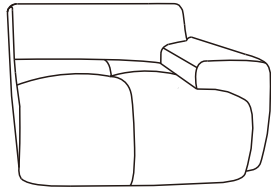


①

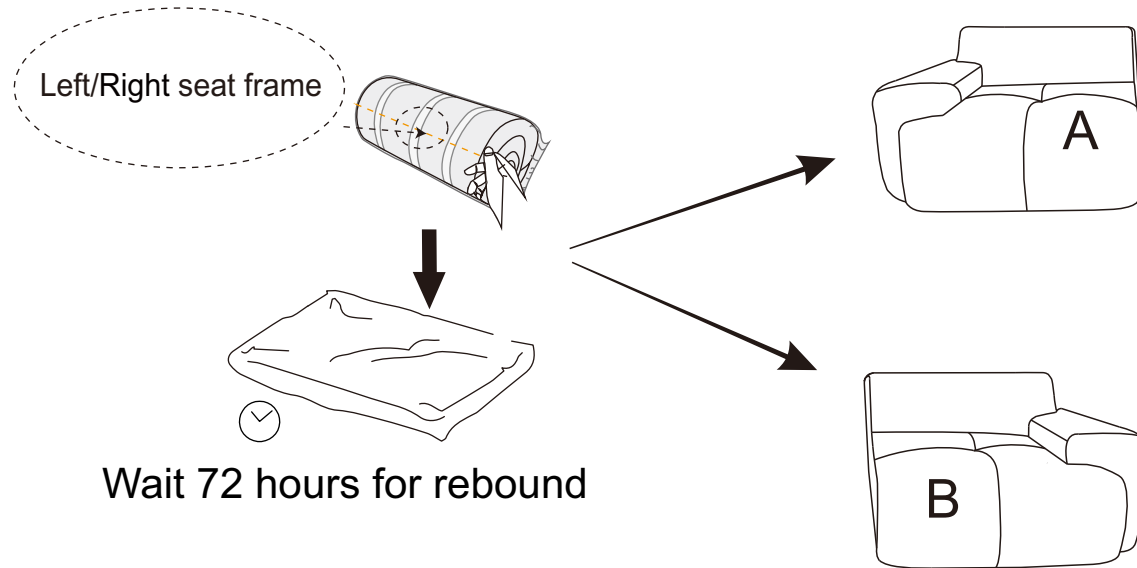


Cx2

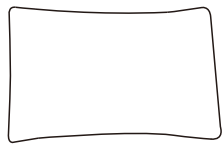

Dx2

 

②

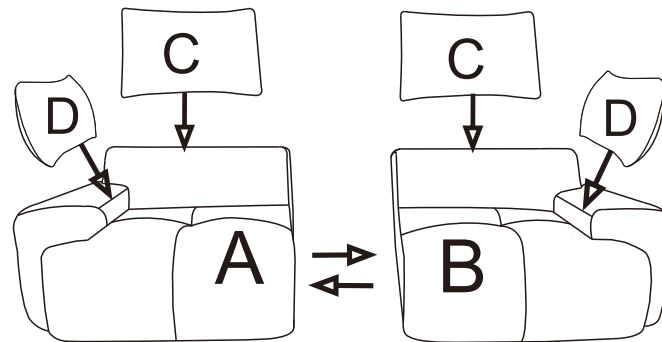

③

