



Using Instruction of Fingerprint Digital safe

Notice: For the first opening, please remove the small round plastic cover (at the right down of the keypad), then take out the emergency key from the plastic bag, insert the keys into the lock hole, turn the key anti-clockwise, turn the knob clockwise, the door will be opened. After that, put 4 batteries of 1.5V in the battery box (on the back of the door), then turn the key to close the door and take the keys out.

● Set and delete the fingerprint

1) Set the fingerprint

Press the red reset button (on the left-side of back of door), the fingerprint reader flashing, then put your finger on the reader, followed by two sounds “Di, Di” and one beep. Total 32 fingerprints could be stored.

If red light and green light flashing at the same time, beep 3 times, it means failed operation.

2) Delete all fingerprints

Press the red reset button (on the left-side of back of door), after green light flashing 15 times, with a long sound of beep, all fingerprints deleted.

Notice: The digital code will go back to the original code “1234” after you press the reset button, so please reset the digital code immediately.

● Reset the code

Press digit “1”, green light flashing, enter the previous code (enter the factory code “1234” for the first reset), then press “start” button, followed by a long sound of beep, enter the new code (3-8 digits) and press “start”, then enter the code again and press “start” to confirm, followed by a sound of beep, it means the successful operation.

● Open the safe

1) Open the door by fingerprint

Press “start”, fingerprint reader flashing, put your finger on it, followed by a sound of beep and green light flashing, the door opened. (If red light and green light flashing at the same time, and beep 3 times, it means failed operation)

Note: when the fingerprint system has no registered fingerprint, every user can open the door.

2) Open the door by digital code

Enter your digital code, press “start”, green light flashing, the door unlocked automatically. (If red light and green light flashing at the same time, and beep 3 times, it means failed operation.)

● Close the safe

Close the door, then turn the knob anti-clockwise, the control system works and the safe will be locked..

● Emergency status

(1) If you forgot both code and fingerprint, use the emergency key to open the safe as the first opening, and then reset the code and fingerprint again.

(2) If there is low battery, the red light flashing, it mentions that it’s time to replace batteries.

Please keep the emergency keys out of the safe.