



Using Instruction of Electronic Safe

Notice: For the first opening, please take off the cover (on the middle of keypad), then take out the tubular emergency key from the plastic bag, insert the keys into the lock hole, turn the key, then turn the knob to open the door. After that, put 4 batteries of 1.5V in the battery box (on the back of the door), then leave the door open and take the keys out.

- **Change the personal code**

Press the red reset button(on the left-side of back of door), the yellow light will be on, then input any 3-8 digits you want, press "A" or "B" to confirm, followed by two beeps, indicating that the new code has been accepted and stored.

If the yellow light flashes with the buzzer beeps three times means the new code is invalid and should operate again.

- **Open the safe**

Input the personal code, followed by one beep and yellow light flashing, then press "A" or "B" to confirm, the green light will be on, rotate the knob and pull out, the door will be opened.

If the code you input is incorrect, there will be 5 beeps sound.

If 3 incorrect codes input continuously, the keypad will be blocked for 20s.

- **Close the safe**

Close the door, then turn the knob anti-clockwise, the control system works and the safe will be locked..

- **Emergency status**

(1) If you forgot the code, use the emergency key to open the safe as the first opening, and then press the red button(on the left-side of back of door) to reset the code.

(2) If both the red light and green light are on, indicating that you should change the batteries. Please have a test before you close the door.

Please keep the emergency keys out of the safe.