Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.




 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Dining Chair

Parts List				
Label	Picture	Description	QTY	
Α		Backrest	1	
В		Seat Cushion	1	
С		Chair Frame	1	
Hardware				
Label	Picture	Description	QTY	
1)		Allen Screw (M6x50mm)	3	
2		Allen Screw (M6x70mm)	4	
3		Washer (∅ 6*16*1.2)	4	
4		Non-woven Fabric Dry Rubber Pad (∅ 25*2)	4	
(5)		Allen Key (4mm)	1	

Spare Hardware				
1		Allen Screw (M6x50mm)	1	
2		Allen Screw (M6x70mm)	1	
3		Washer (∅ 6*16*1.2)	1	
4		Non-woven Fabric Dry Rubber Pad (∅ 25*2)	1	

Assembly Preparation

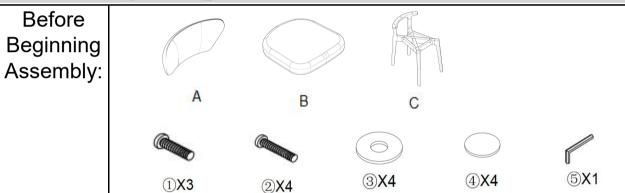



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

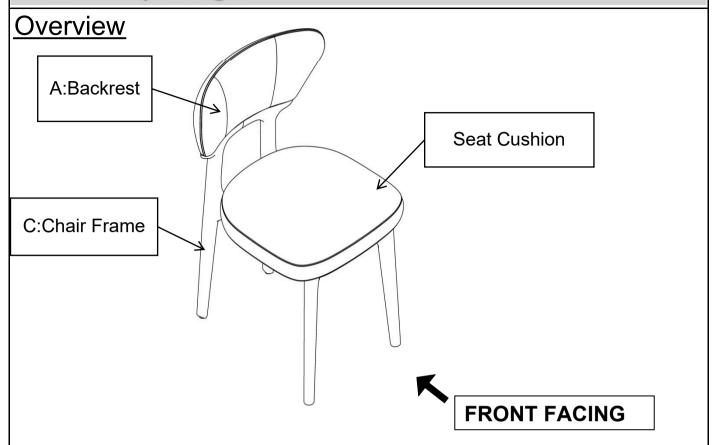


This dining chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the dining chair, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

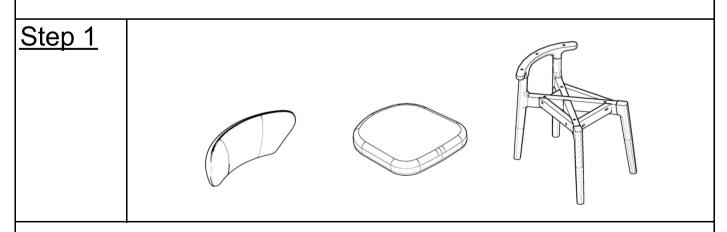


Unpack and place all parts on a clean, non-marring surface.

Step 2

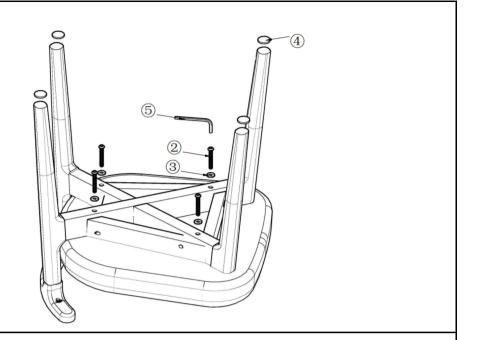

Align Seat (B) with chair frame (C). Insert Allen screw (②) through Washer (③) and the pre-drilled holes on Seat (B) and chair frame (C). Tighten using the Allen key (⑤). Attach the non-woven fabric dry rubber pads (④) to the bottom of each leg.

Step 3

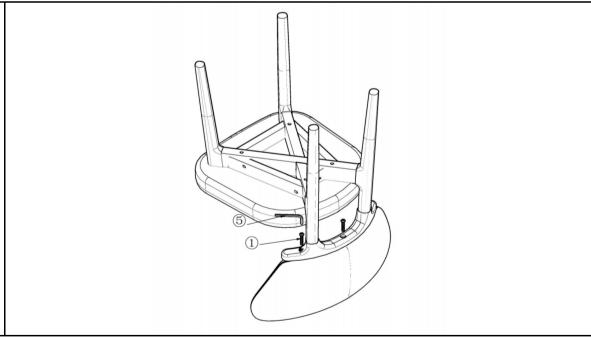

Attach Backrest (A) to chair frame (C).Insert Allen screw (1) through the pre-drilled holes and tighten with the Allen key (5).

