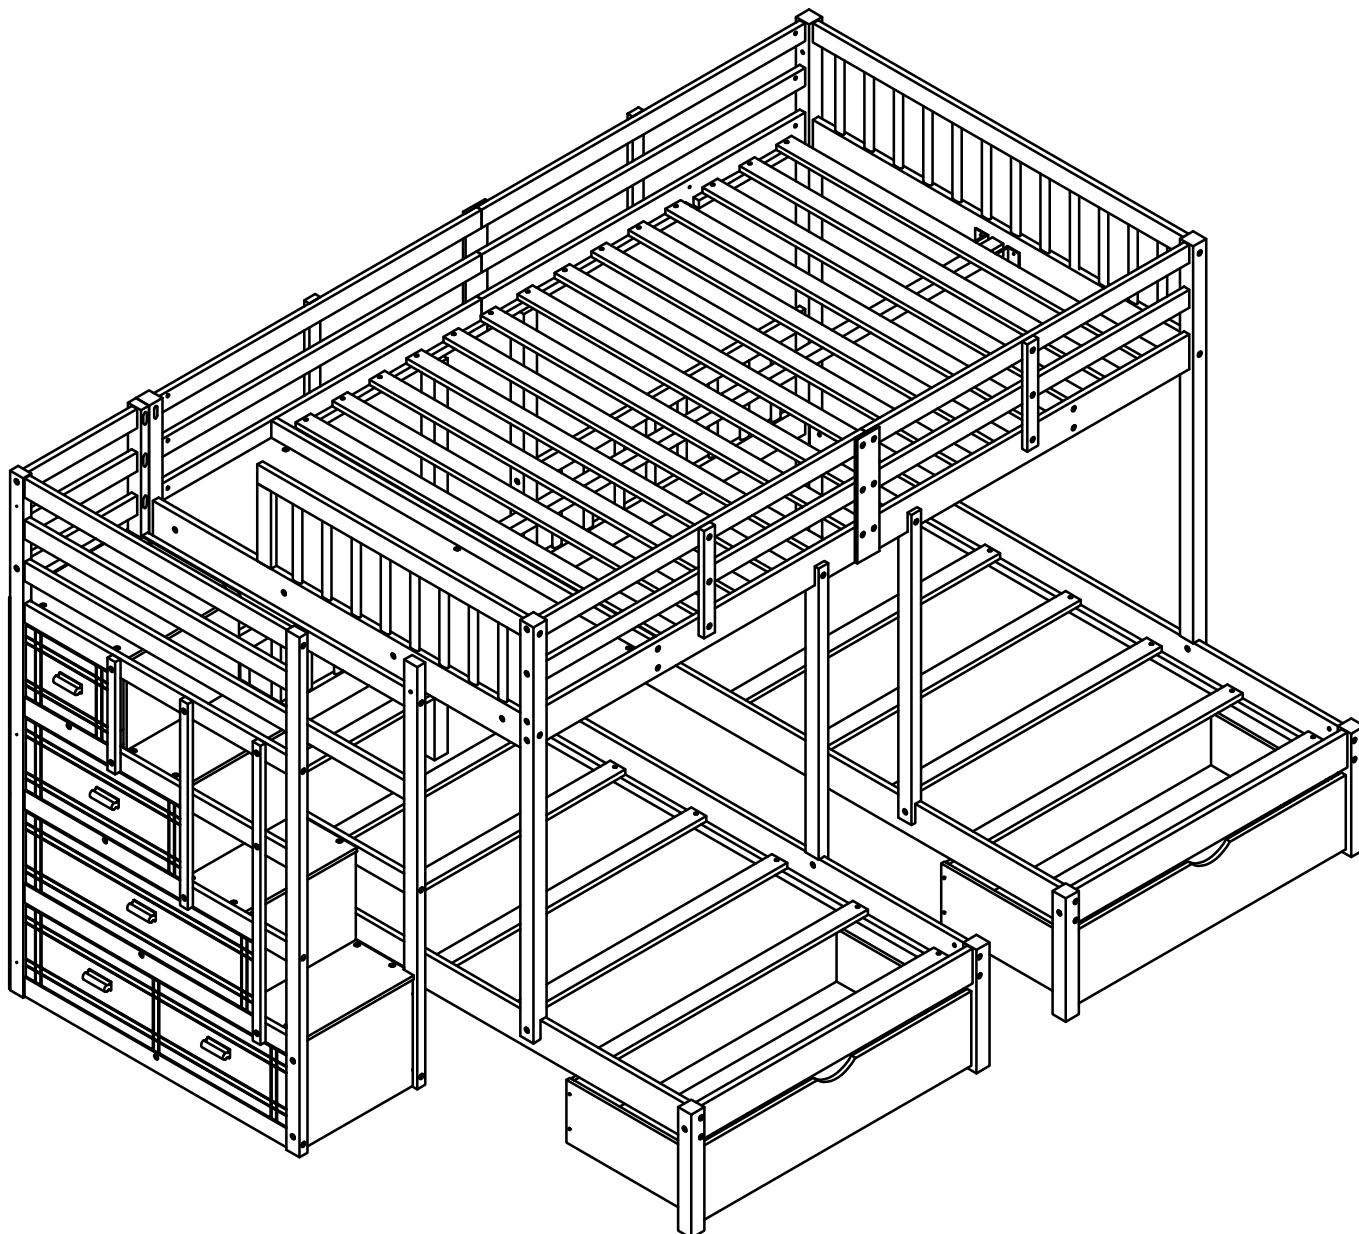


ASSEMBLY INSTRUCTION

SKU CODE: (WF293769-WF293770-WF293771)

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team



! SAFETY WARNINGS !

1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk

Upper bed

Bed Type
Full Standard

Length
74" - 75"

Width
53 1/2"

Thickness
6" max

Lower bed

Bed Type
Twin Standard


Length
74" - 75"

Width
38 1/2"


Thickness
8" max

2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE CITY OF INDUSTRY, CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunkAlways use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part
11. Use of a night light may provide added safety precaution for a child using the upper bunk..
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes
15. Keep these instruction for future reference
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

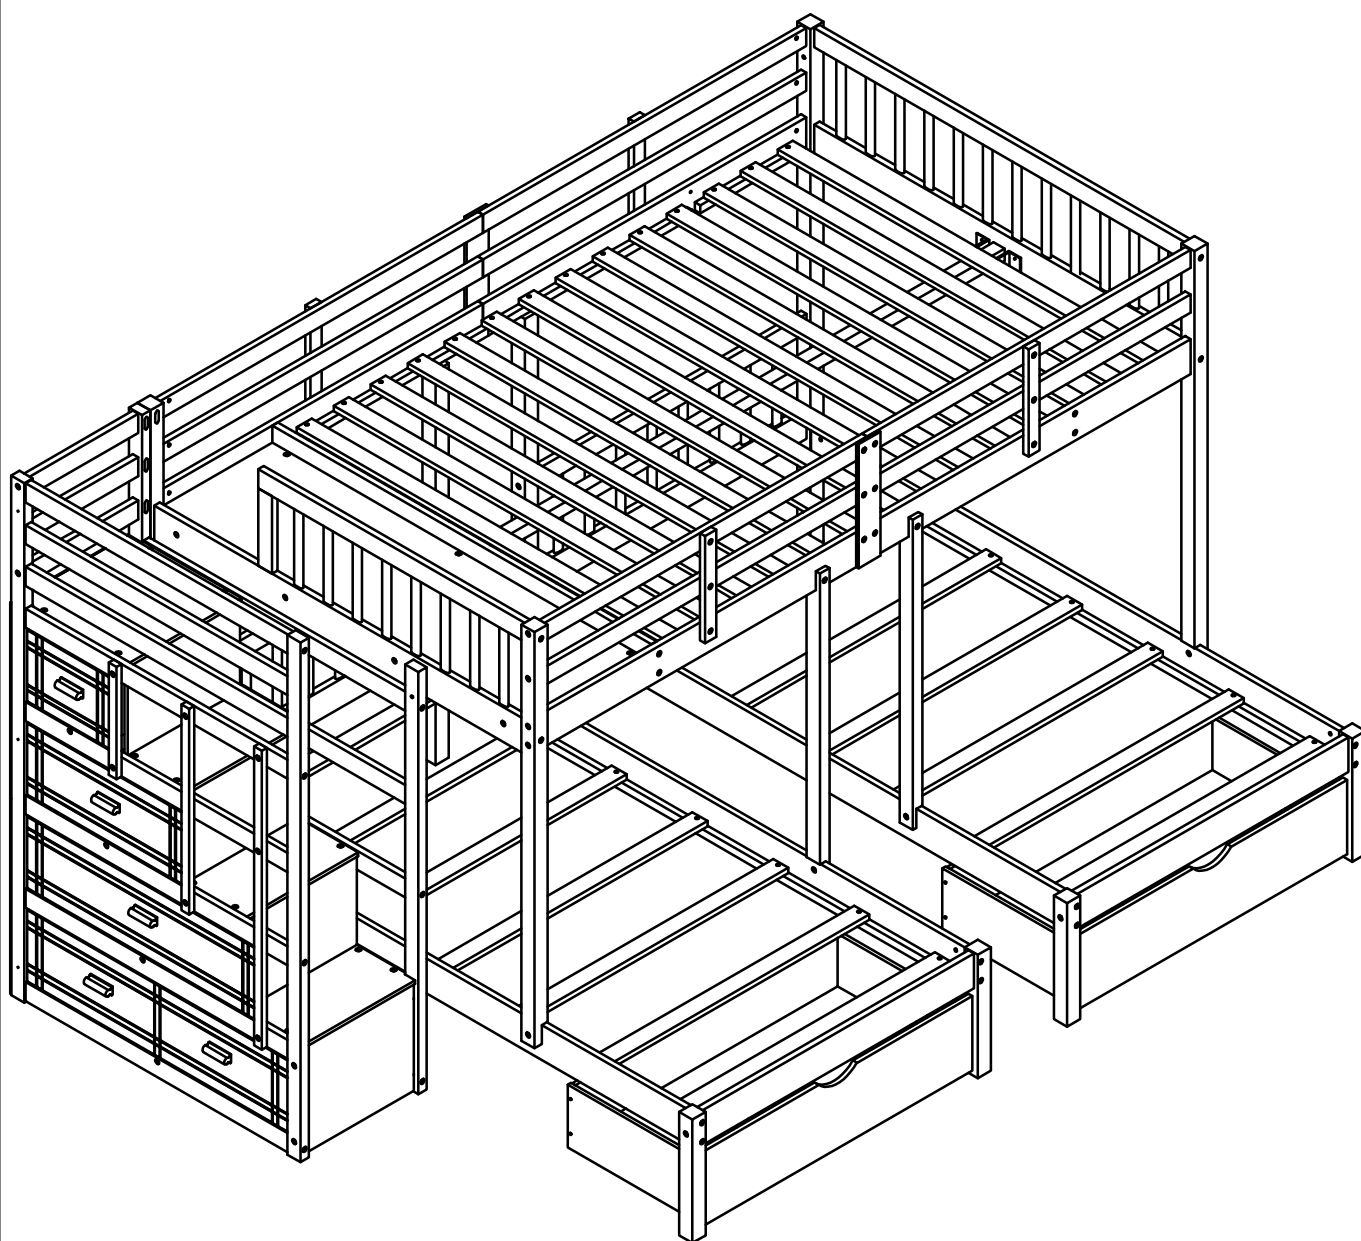
OPTION 1: STAIR IN LEFT














OPTION 2: STAIR IN RIGHT

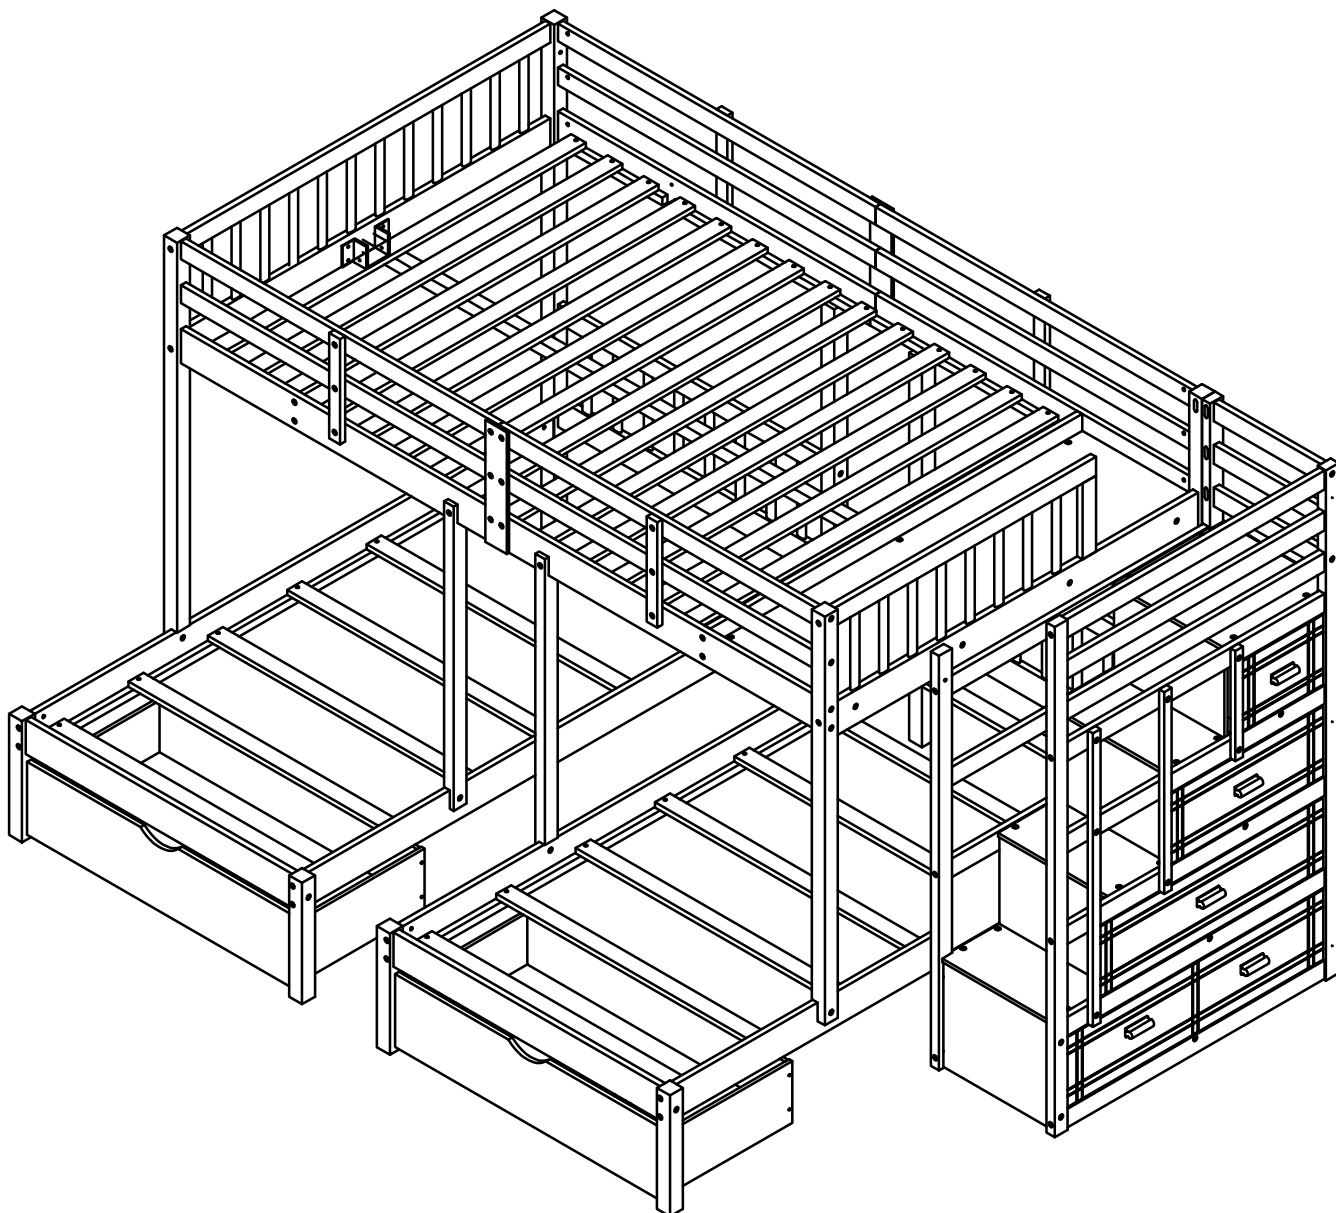
















ASSEMBLY INSTRUCTION

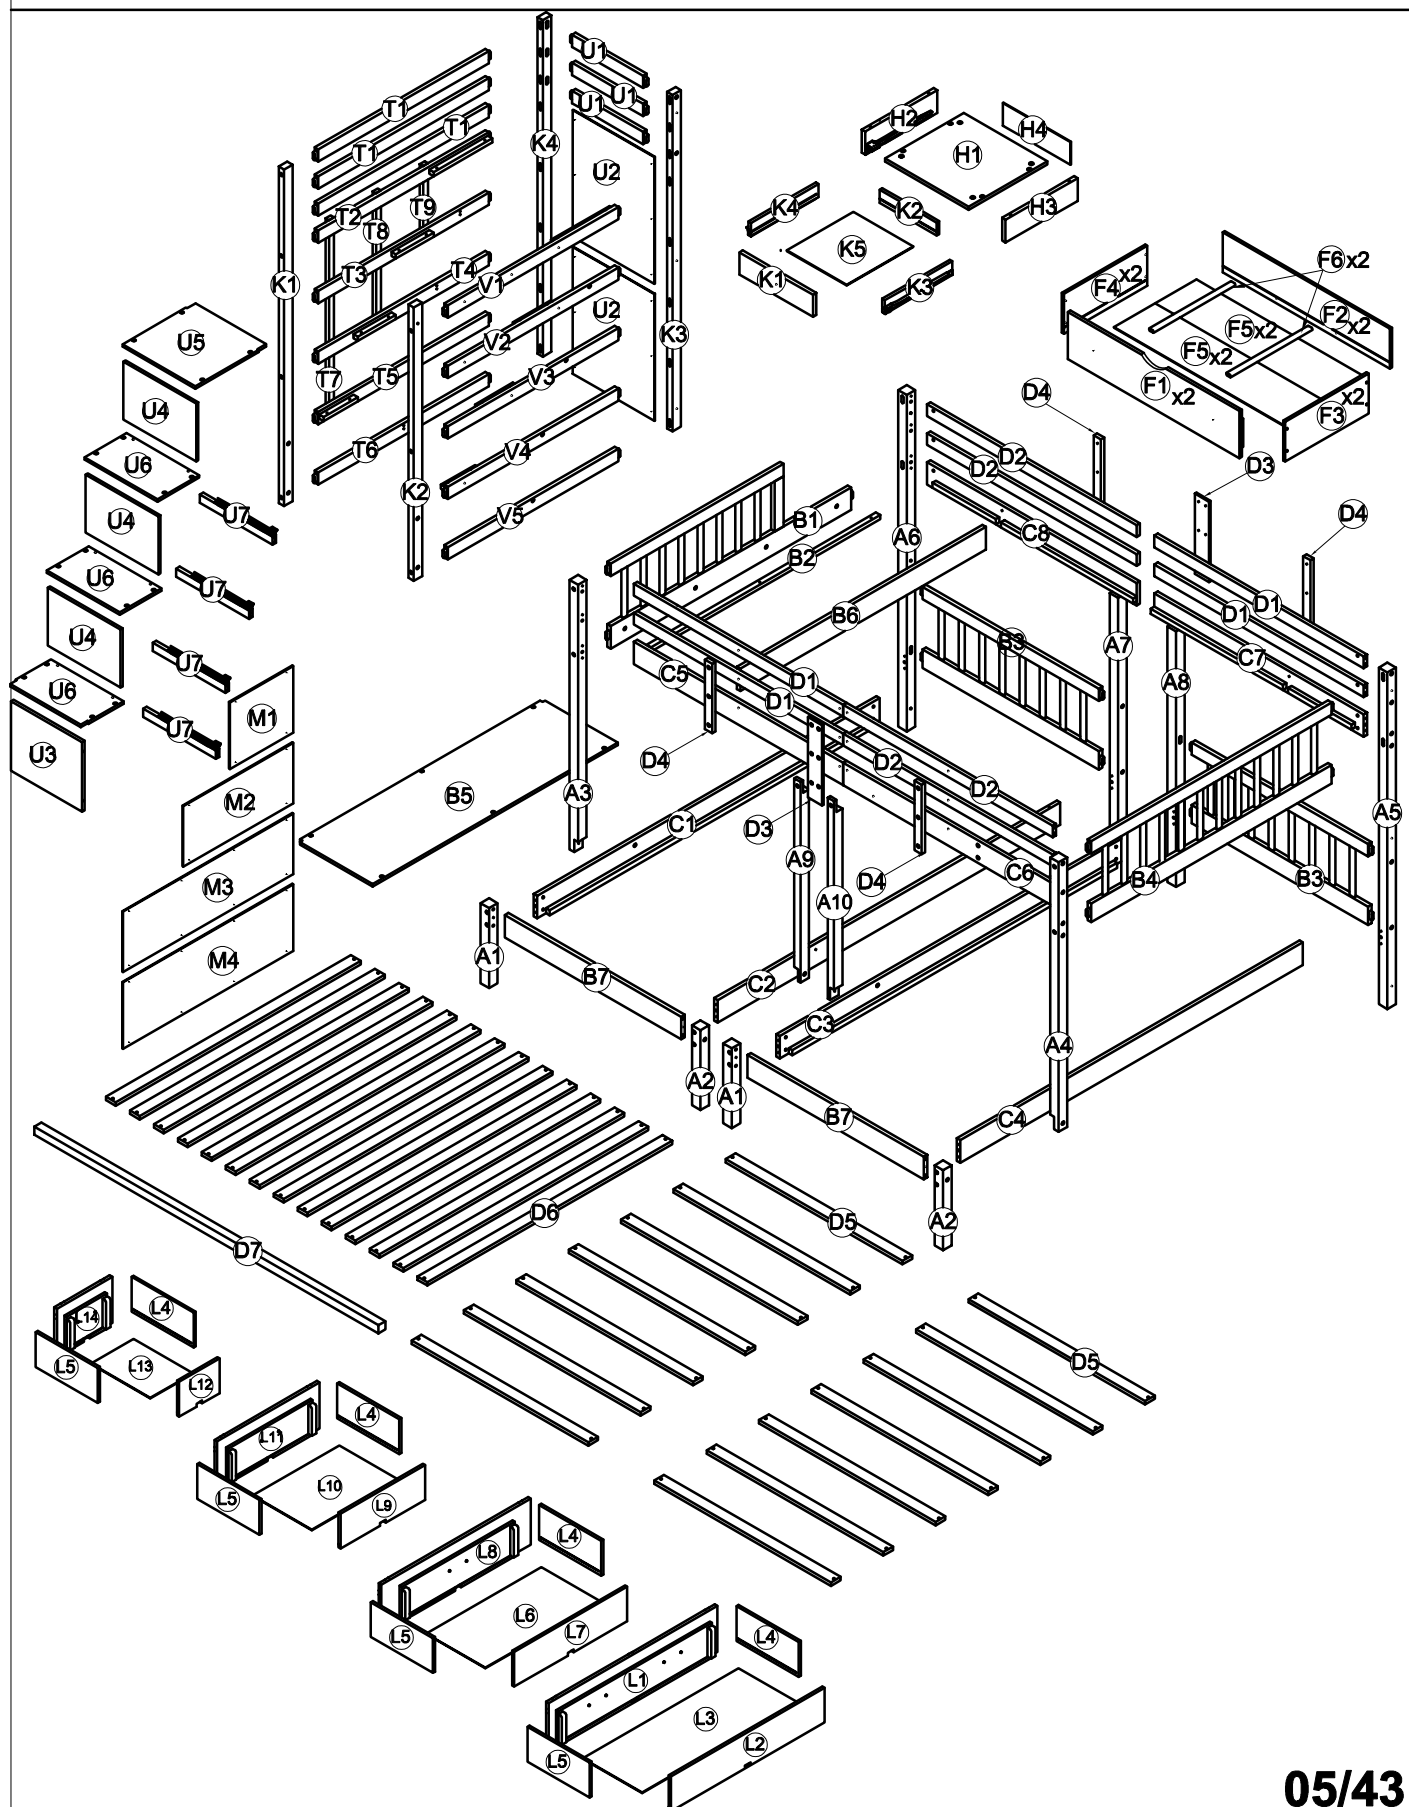



















Part List(Box 1-WF293769)

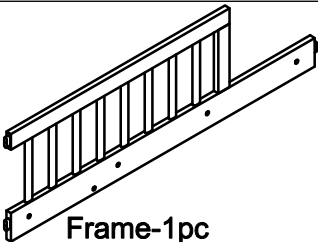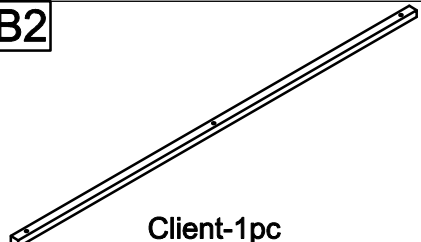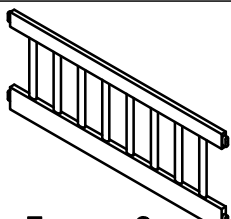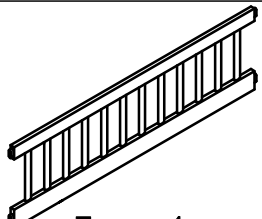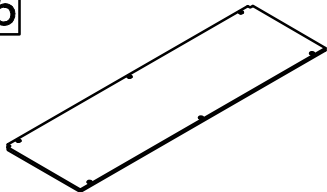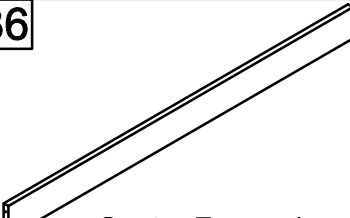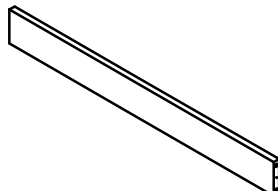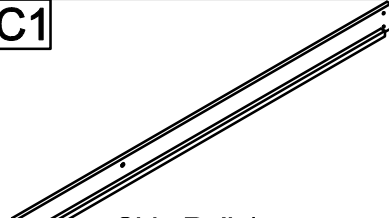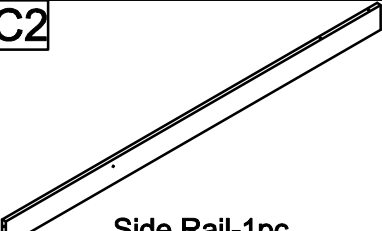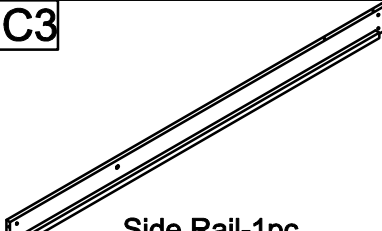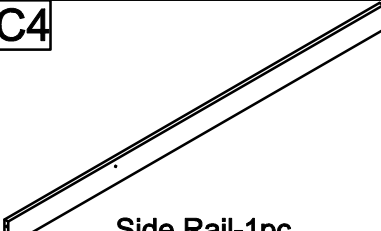A1  Legs-2pcs	A2  Legs-2pcs	A3  Leg-1pc
A4  Leg-1pc	A5  Leg-1pc	A6  Leg-1pc
A7  Leg-1pc	A8  Leg-1pc	A9  Leg-1pc
A10  Leg-1pc	B1  Frame-1pc	B2  Client-1pc
B3  Frames-2pcs	B4  Frame-1pc	B5  Panel-1pc
B6  Center Frame-1pc	B7  Wood Bars-2pcs	C1  Side Rail-1pc
C2  Side Rail-1pc	C3  Side Rail-1pc	C4  Side Rail-1pc






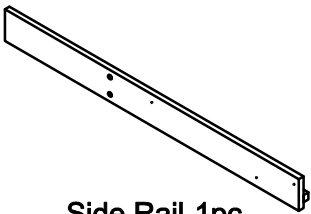
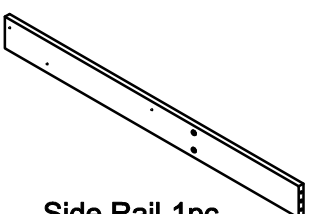
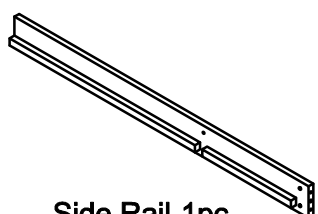
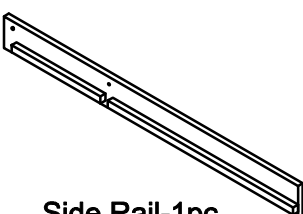
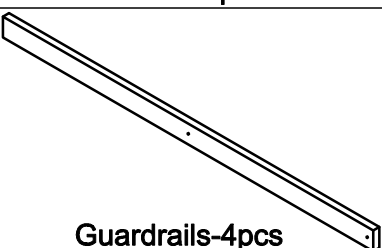
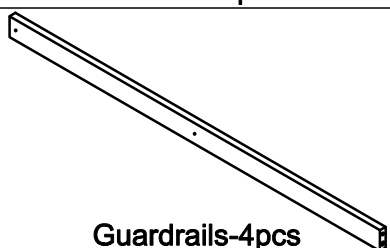
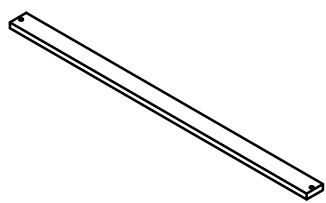
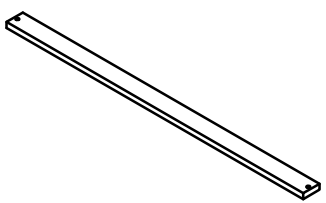
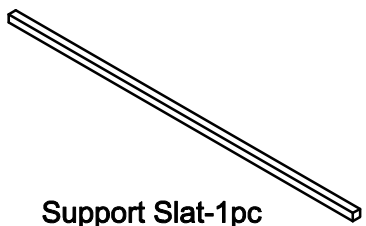
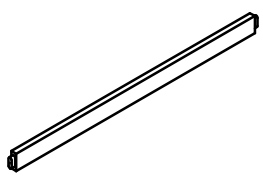
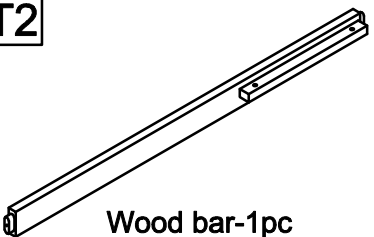
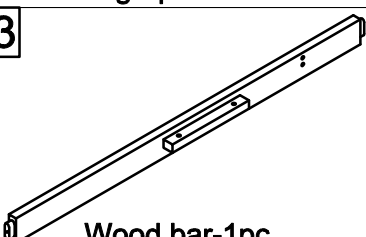
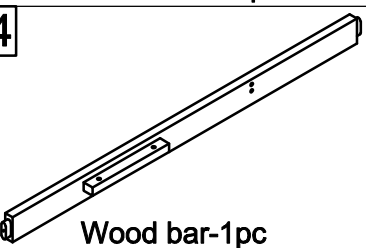
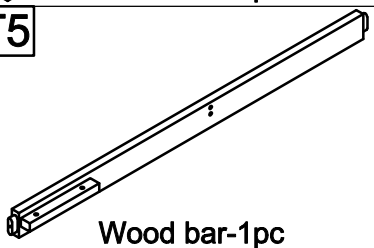
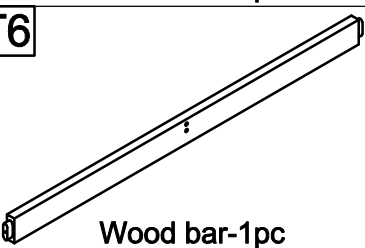
Part List(Box 2-WF293770)

C5  Side Rail-1pc	C6  Side Rail-1pc	C7  Side Rail-1pc
C8  Side Rail-1pc	D1  Guardrails-4pcs	D2  Guardrails-4pcs
D3  Vertical Bars-2pcs	D4  Vertical Bars-4pcs	D5  Short Slast-14pcs
D6  Long Slast-14pcs	D7  Support Slat-1pc	K1  Leg-1pc
K2  Leg-1pc	K3  Leg-1pc	K4  Leg-1pc
T1  Wood bars-3pcs	T2  Wood bar-1pc	T3  Wood bar-1pc
T4  Wood bar-1pc	T5  Wood bar-1pc	T6  Wood bar-1pc

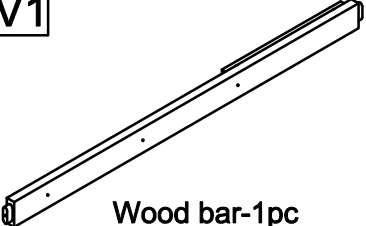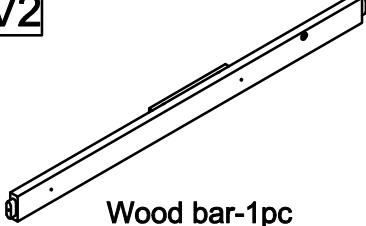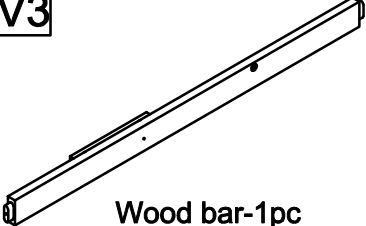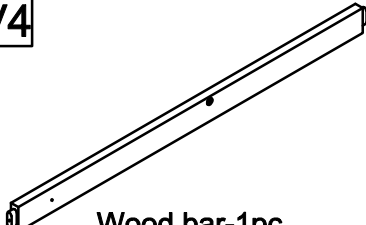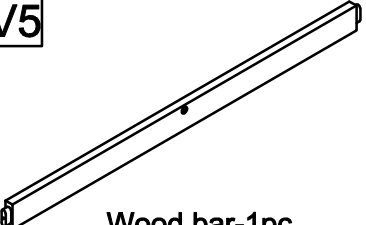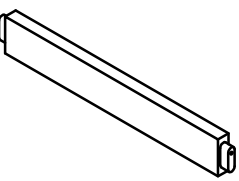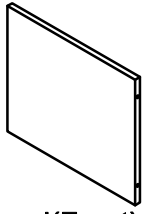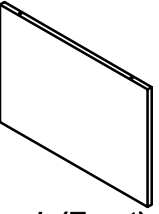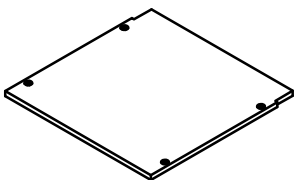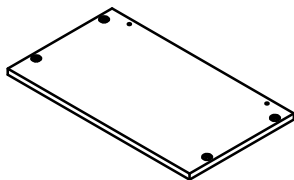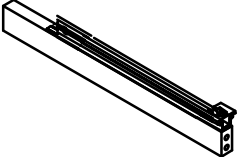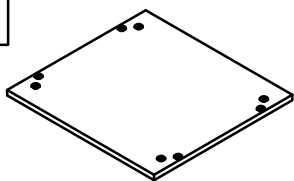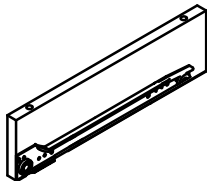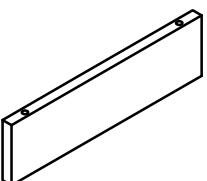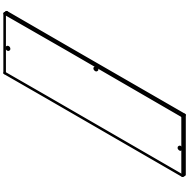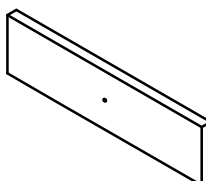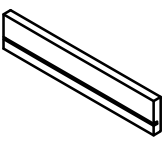Part List(Box 3-WF293771)


T7  Vertical Bar-1pc	T8  Vertical Bar-1pc	T9  Vertical Bar-1pc
V1  Wood bar-1pc	V2  Wood bar-1pc	V3  Wood bar-1pc
V4  Wood bar-1pc	V5  Wood bar-1pc	U1  Wood bars(Back)-3pcs
U2  Panels(Back)-2pcs	U3  Panel(Front)-1pc	U4  Panels(Front)-3pcs
U5  Panel(Top)-1pc	U6  Panel(Top)-1pc	U7  Wood bars-4pcs
H1  Panle-1pc	H2  Side Panle-1pc	H3  Side Panle-1pc
H4  Back Panle-1pc	K1  Drawer-Front Panle-1pc	K2  Drawer-Back Panle-1pc

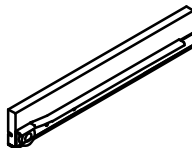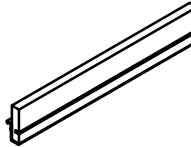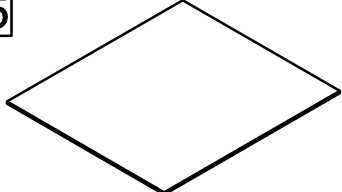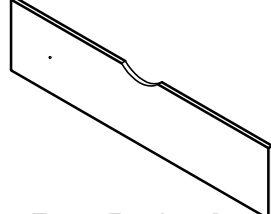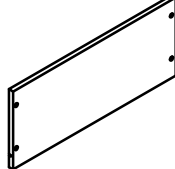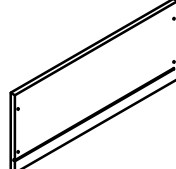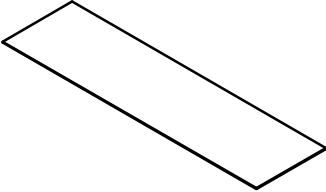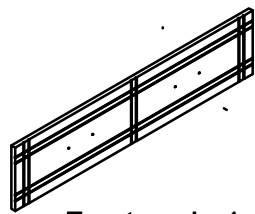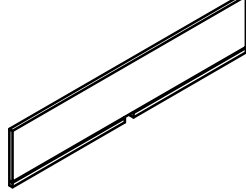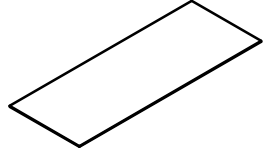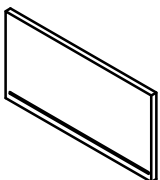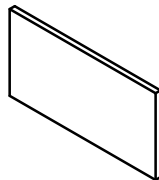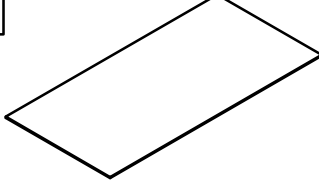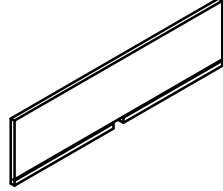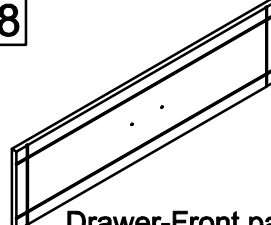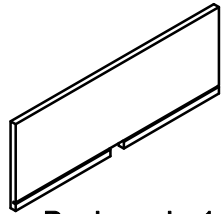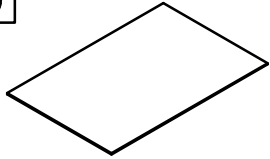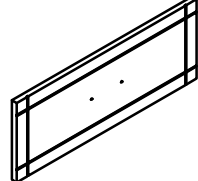Part List & Hardware List(Box 3-WF293771)

K3  Drawer-Side Panle-1pc	K4  Drawer-Side Panle-1pc	K5  Drawer-Bottom Panle-1pc
F1  Drawer-Front Panles-2pcs	F2  Drawer-Back Panles-2pcs	F3  Drawer-Side Panles-2pcs
F4  Drawer-Side Panles-2pcs	F5  Drawer-Bottom Panles-4pcs	F6  Drawer-Support Bottom Panles-4pcs
L1  Drawer-Front panle-1pc	L2  Drawer-Back panle-1pc	L3  Drawer-Bottom panle-1pc
L4  Drawer-Side panles-4pcs	L5  Drawer-Side panles-4pcs	L6  Drawer-Bottom panle-1pc
L7  Drawer-Back panle-1pc	L8  Drawer-Front panle-1pc	L9  Drawer-Back panle-1pc
L10  Drawer-Bottom panle-1pc	L11  Drawer-Front panle-1pc	L12  Drawer-Back panle-1pc


Part List &Hardware List(Box 3-WF293771)

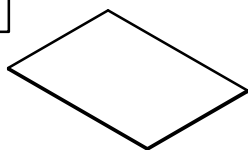L13




Drawer-Bottom panle-1pc

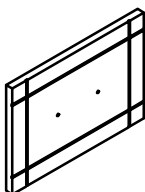L14




Drawer-Front panle-1pc

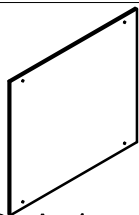M1




Panle-1pc

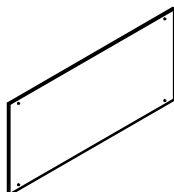M2




Panle-1pc

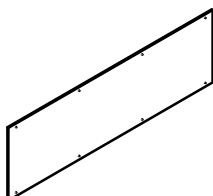M3









Panle-1pc

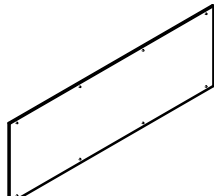M4






Panle-1pc

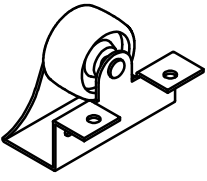Hardware List(Box 3-WF293771)

1		2		3	
	M4 x 30 mm Wood Screws 120pcs		Ø10 x 40 mm Wood dowel 28pcs		Screws 1/4" x80 4pcs
4		5		6	
	Screws 1/4" x70 43pcs		Ø1/4" x 35 mm Hex-Head bolts 6pcs		Ø1/4" x 100 mm Hex-Head bolts 32pcs
7		8		9	
	Ø1/4" x 13 mm Horizontal-Hole bolts 32pcs		Allen Key 1pc		Ø1/4" x 15 mm Canopy head though -4pcs
10		11		12	
	Screws 1/4" x30 35pcs		Screws 1/4" x50 16pcs		Ø1/4" x 25 mm Hex-Head bolts 32pcs
13		14		15	
	Ø1/4" x 40 mm Hex-Head bolts 4pcs		Ø8 x 30 mm Wood dowel 12pcs		Ø6 x 25 mm Wood dowel 12pcs
16		17		18	
	M4 x 15 mm Wood Screws 39pcs		Screws 1/4" x40 1pc		Ø1/6" x 25 mm Hex-Head bolts 1pc
19		20		21	
	Handle Wood 1pc		M3.5x 12 mm Wood Screws 24pcs		Wheels 8pcs

Hardware List(Box 3-WF293771)


22  Handle 5pcs	23  Small Bolts M4x20 10pcs	24  Runner(4pcs) 340*30mm
25  Screw M3.5x12 mm 12pcs	26  Steel Bracket 2pc	27  M4 x 20 mm Wood Screws 8pcs
28  Stop Drawer-4pcs		

STEP1: Following below illustration Assembly Bottom bed's Footboard .

-Using hardware #1 connect B7 Woodbar with Stop Drawer #28



-Using hardware #3 and dowel #2 connect A1(x2) ,A2(x2) legs with B7 Woodbar




3	2	1
		
2x2pcs	4x2pcs	4x2pcs
28		
		
2x2pcs		

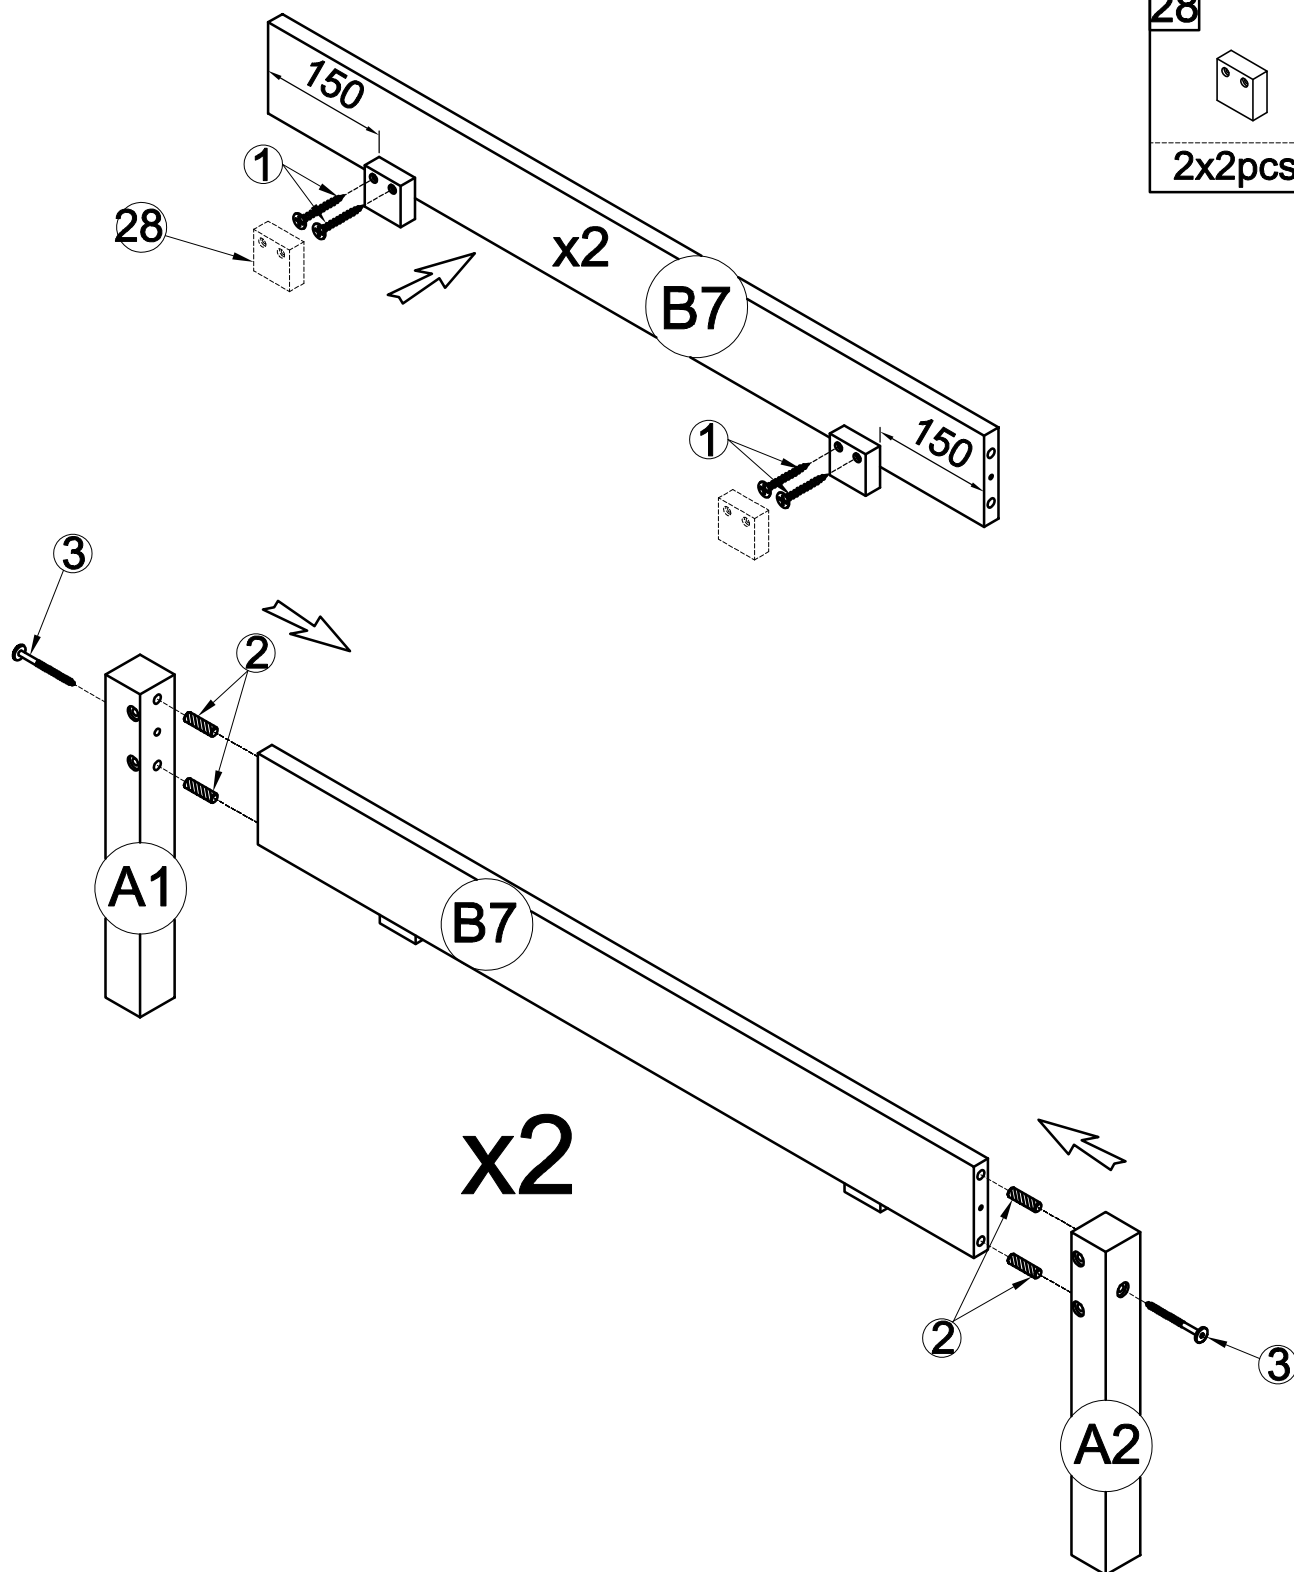

STEP 2: Following below illustration. .

Using hardware #27 connect Steel Bracket(#26) with B4 and B6.
Look at detail view for more detail

27	26
	
8pcs	2pcs

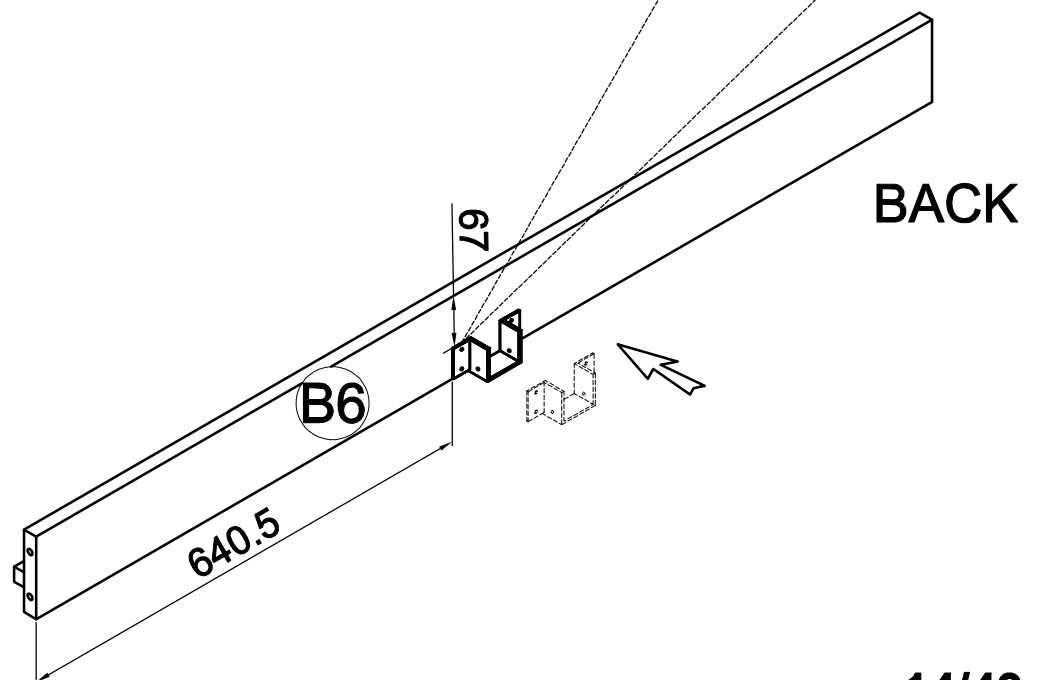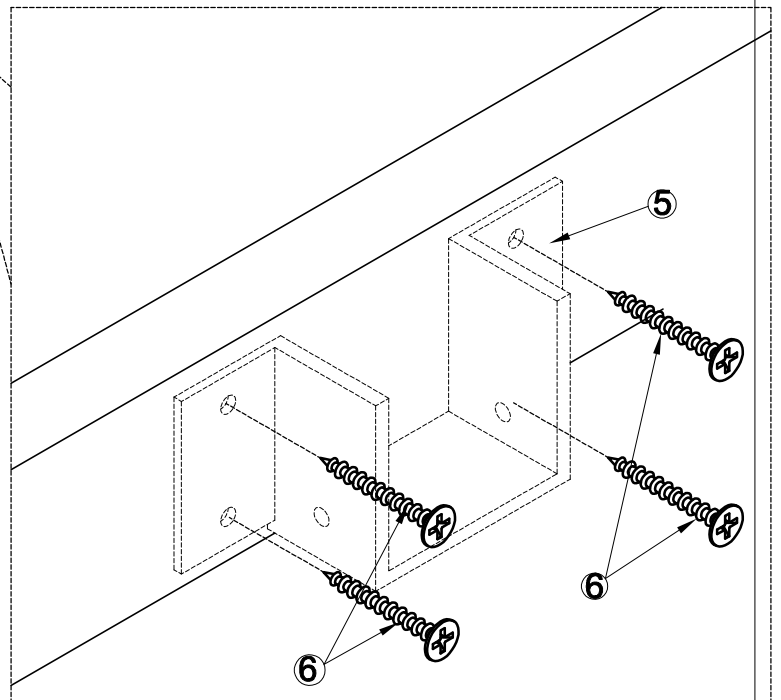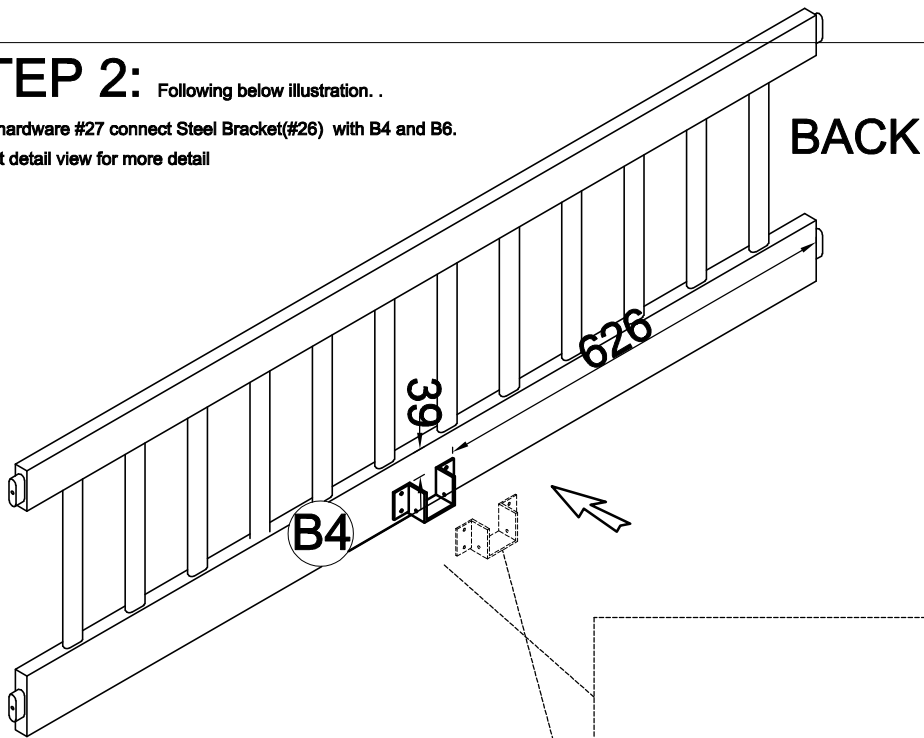

STEP 3: Following below illustration Assembly Bottom bed's Headboard .

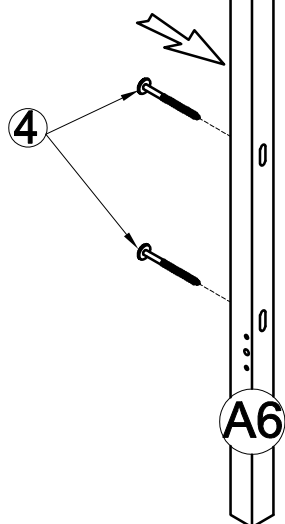
-Using hardware #4 connect B3 Frame with A6,A7 Legs

-Using hardware #3 connect B3 Frame with A5,A8 Legs



4




4x2pcs



LEFT

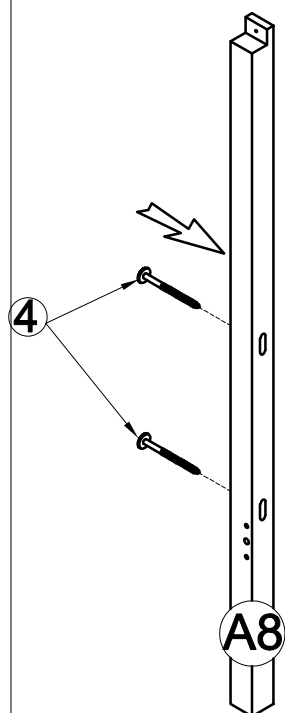
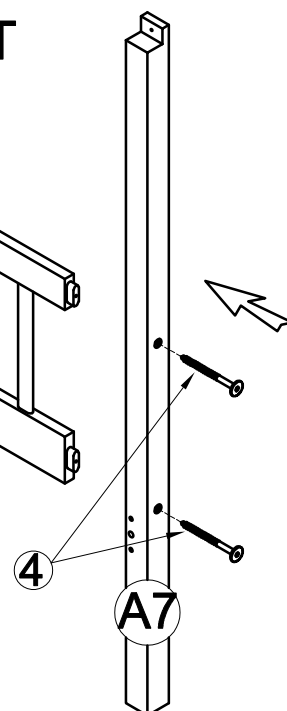


RIGHT

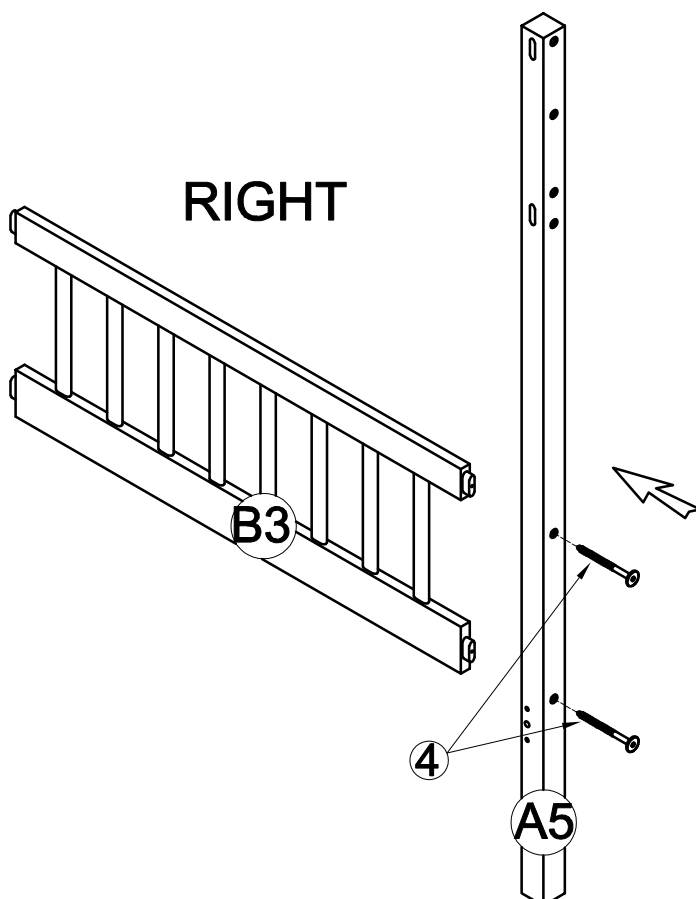

STEP 4: Following below illustration:

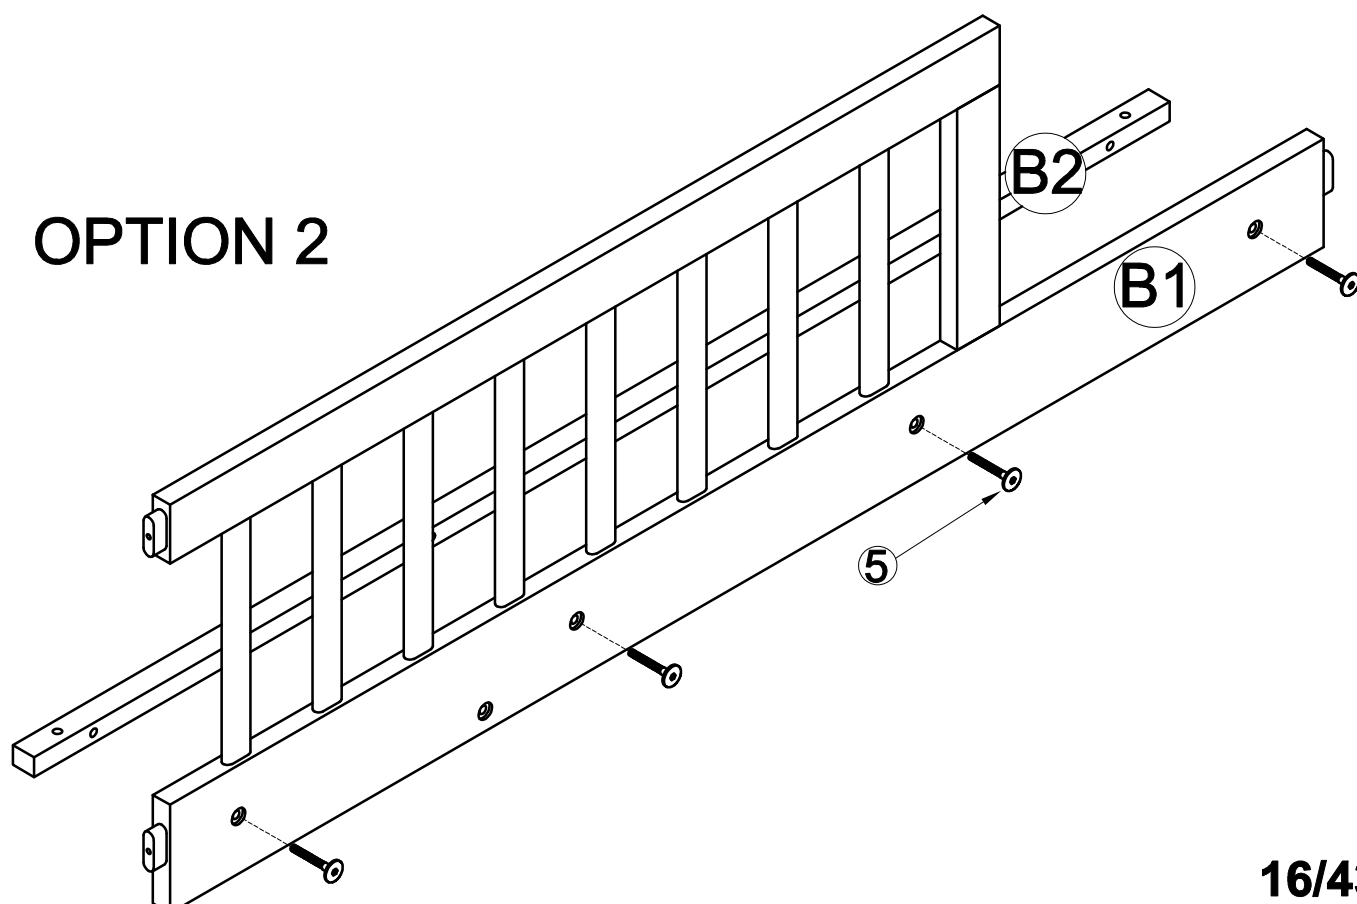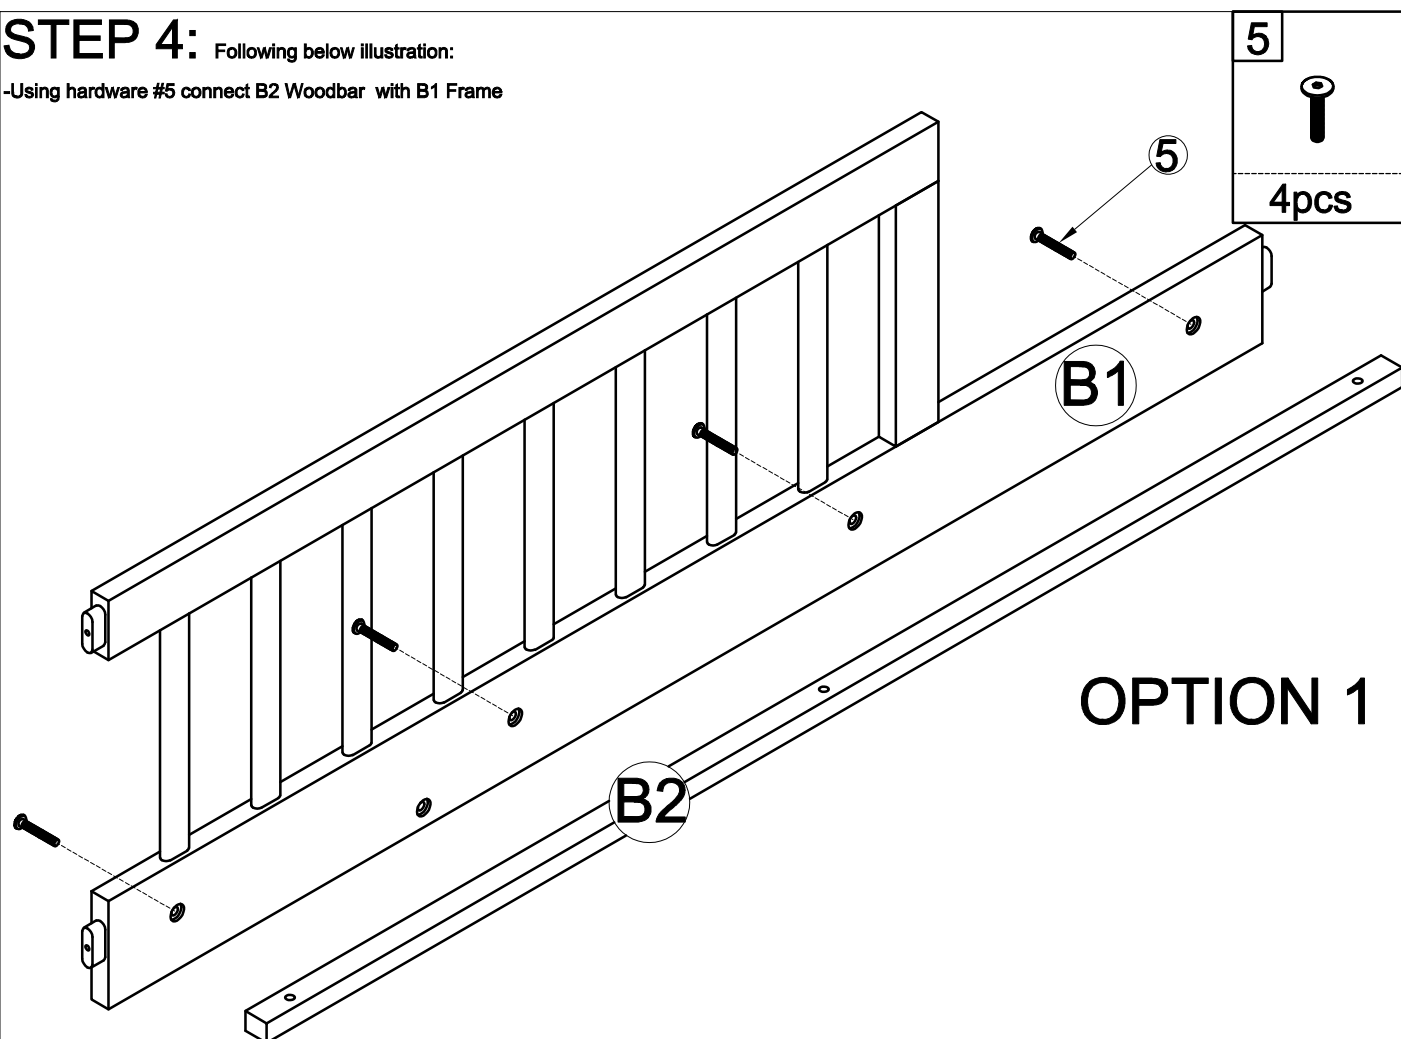-Using hardware #5 connect B2 Woodbar with B1 Frame



STEP 5(OPTION 1): Following below illustration

- Using hardware #4 connect B1 Frame with A3 Leg
- Using hardware #4 connect B4 Frame with A4 Leg

4



4pcs

LEFT

B1

Completed on step 4-OPTION 1

4

A3

4

A4

B4

RIGHT

STEP 5(OPTION 2): Following below illustration

- Using hardware #4 connect B1 Frame with A4 Leg
- Using hardware #4 connect B4 Frame with A3 Leg

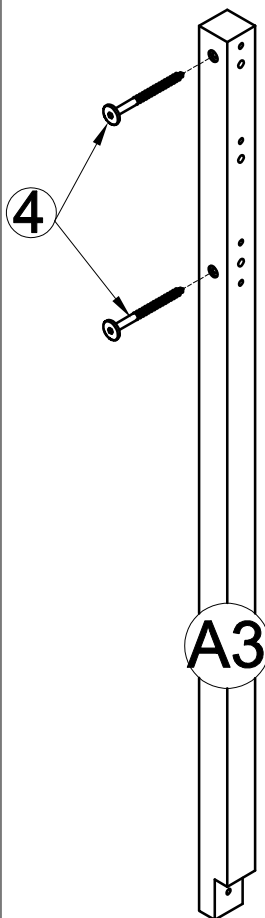
4




4pcs

LEFT


B4



A3

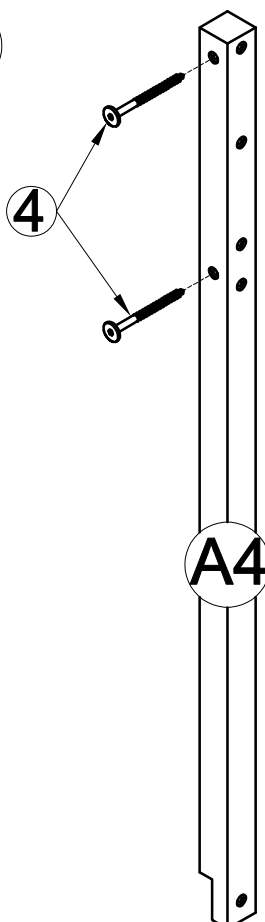

A4

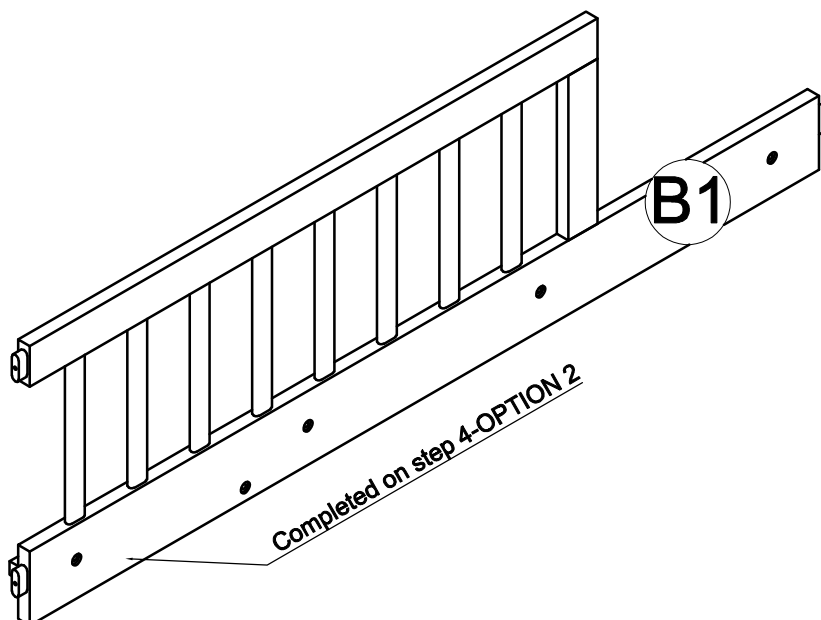

B1

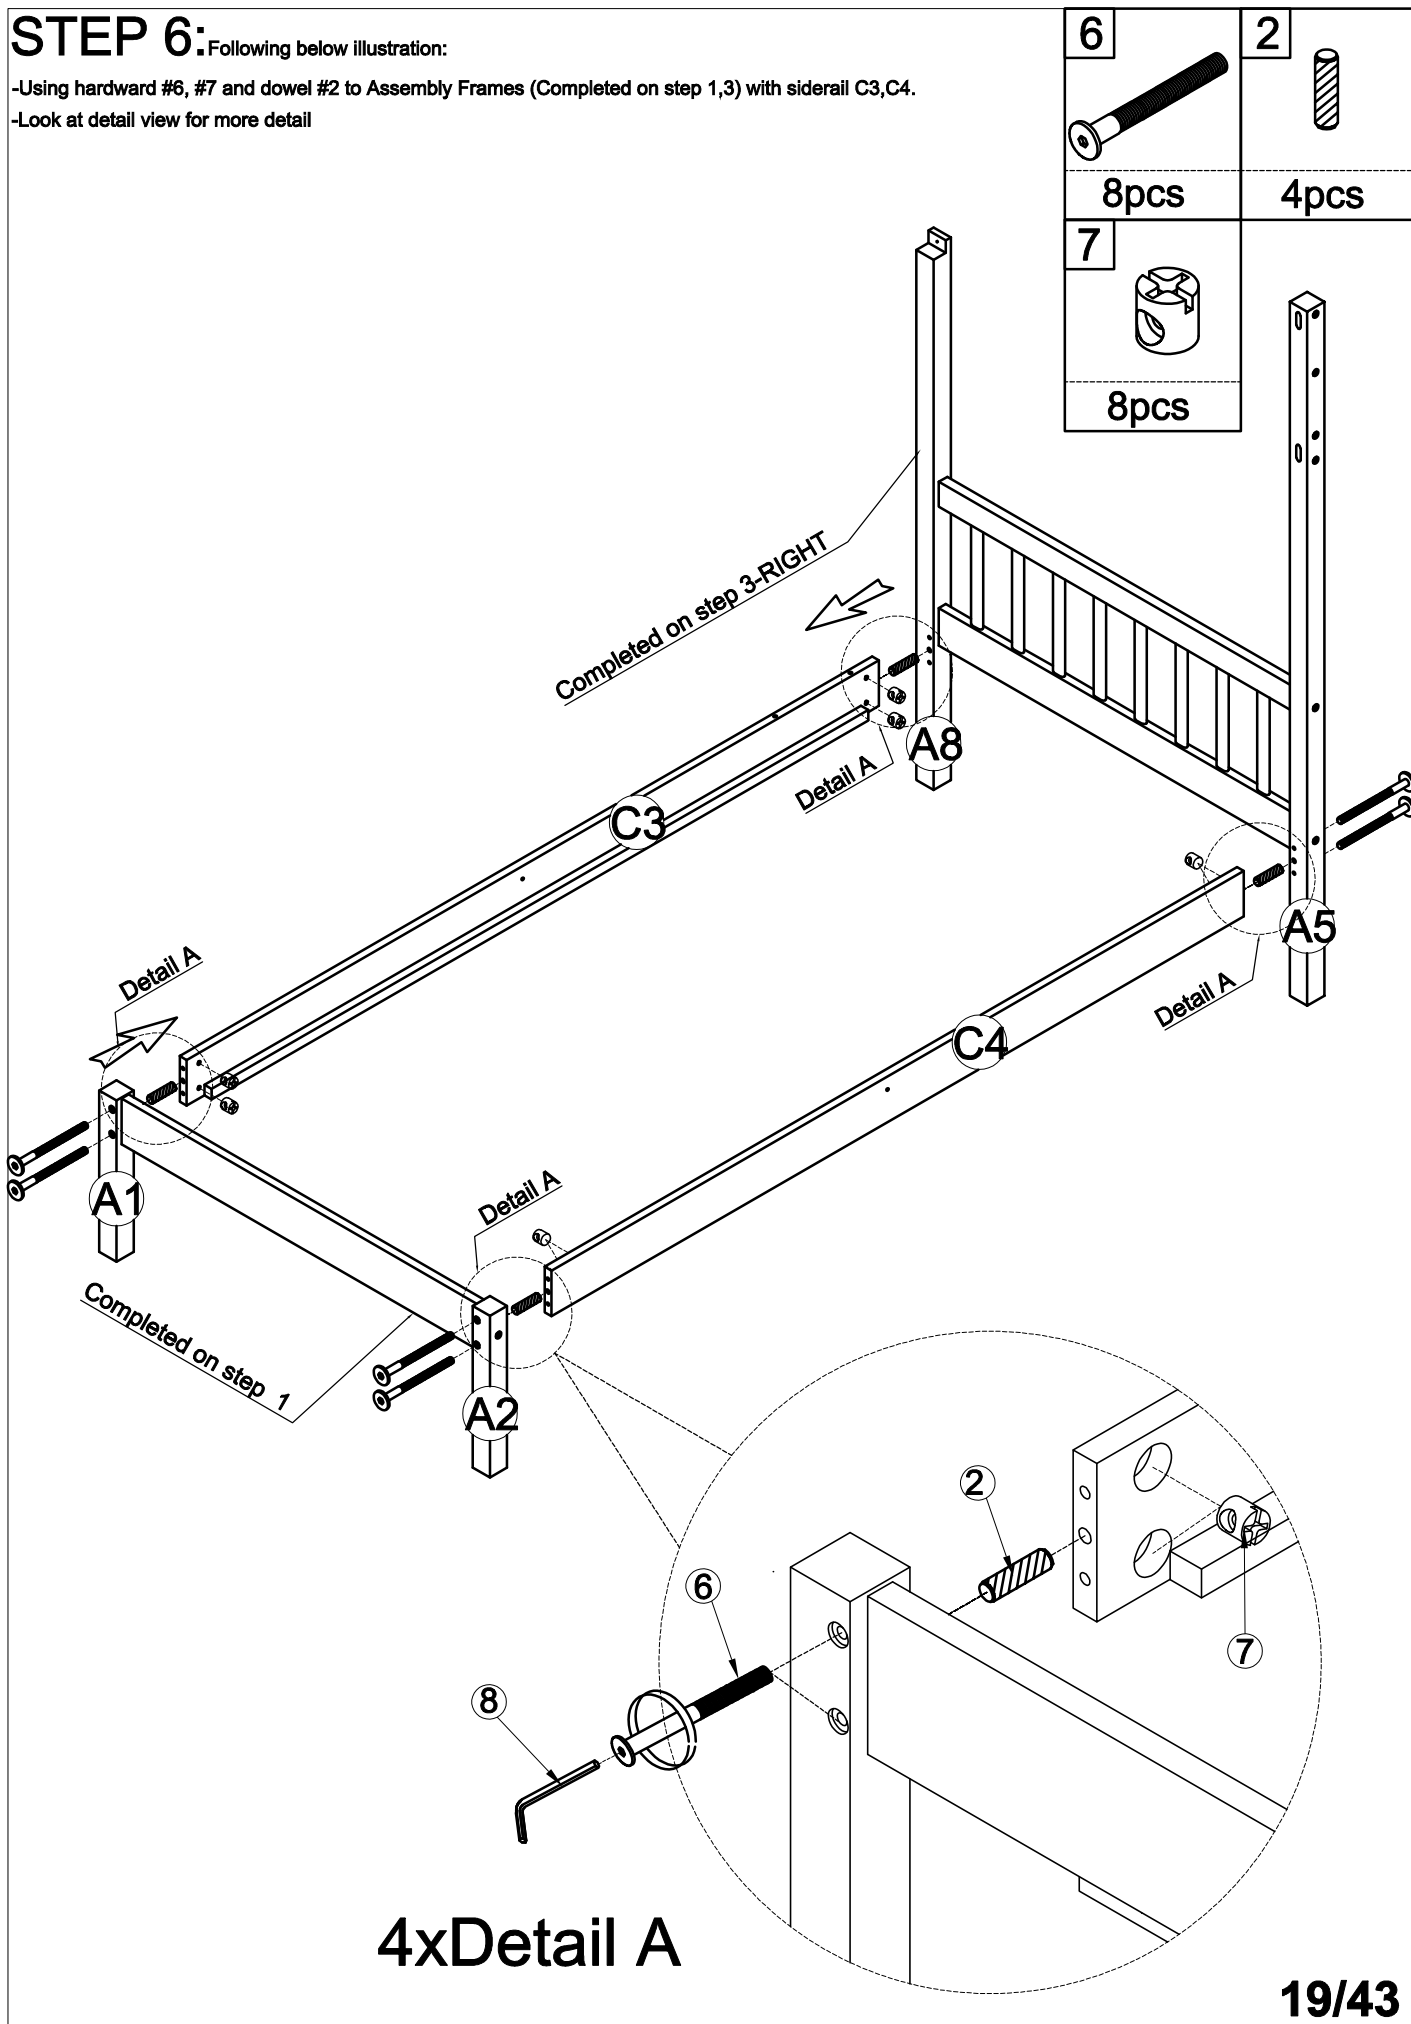
Completed on step 4-OPTION 2

RIGHT

STEP 6: Following below illustration:

-Using hardward #6, #7 and dowel #2 to Assembly Frames (Completed on step 1,3) with siderail C3,C4.

-Look at detail view for more detail




STEP 7: Following below illustration

-Using hardware #4,#5,#9 connect Frame(completed on step 5 OPTION 1-RIGHT) with Frame (completed on step 6)

Option 2:

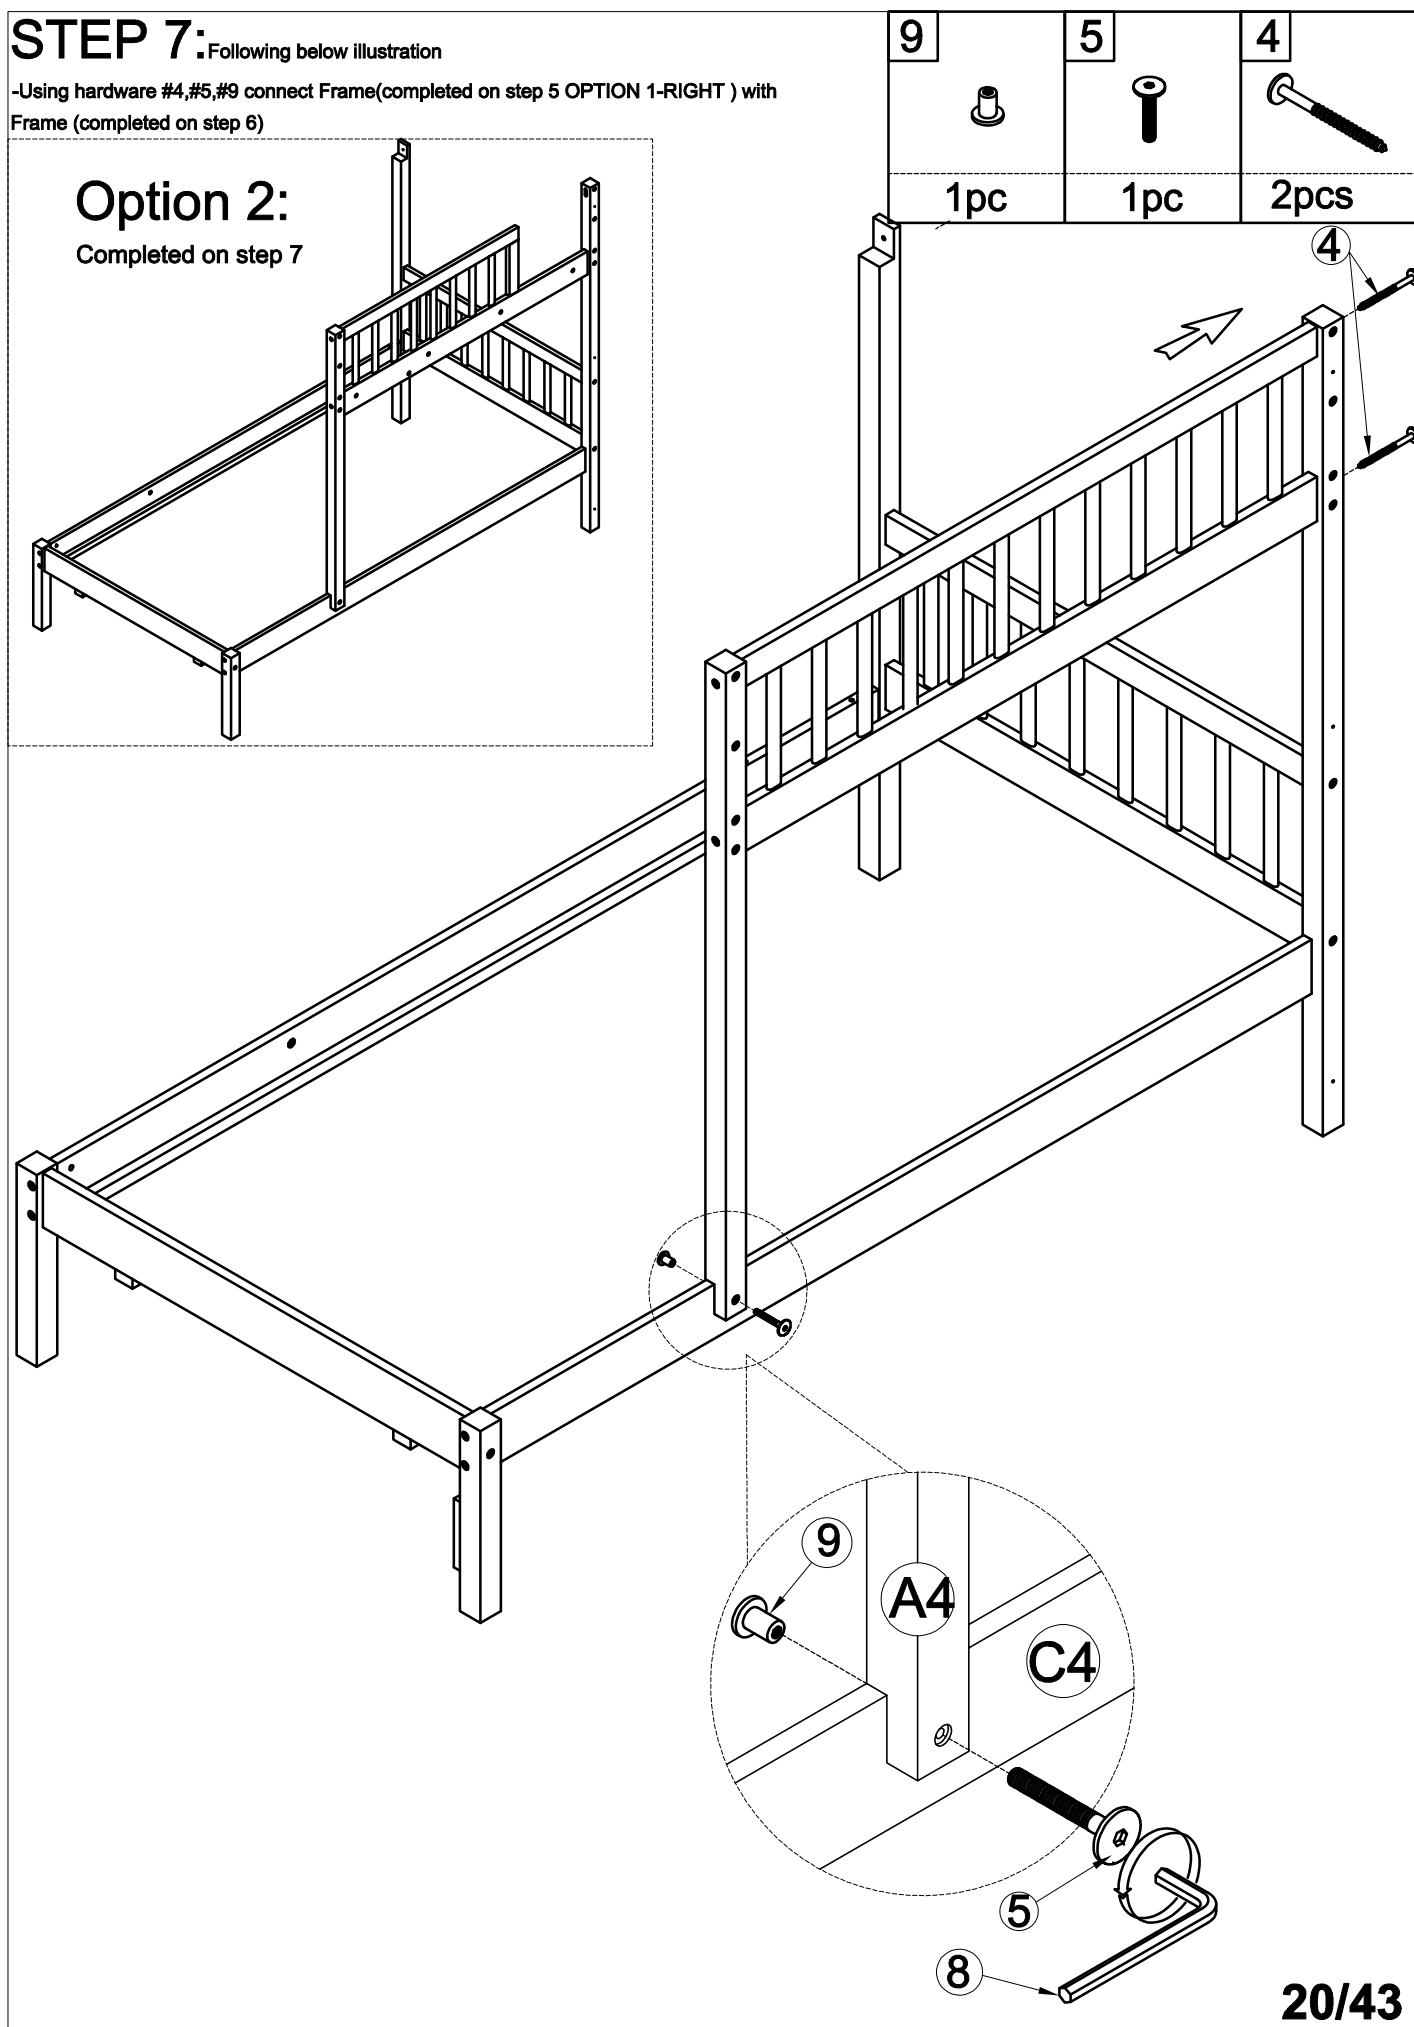
Completed on step 7




STEP 8: Following below illustration:

- Screw 7slats D5 with Side Rail C3,C4 by using hardward #1.
- Look at detail view for more detail

1





14pcs

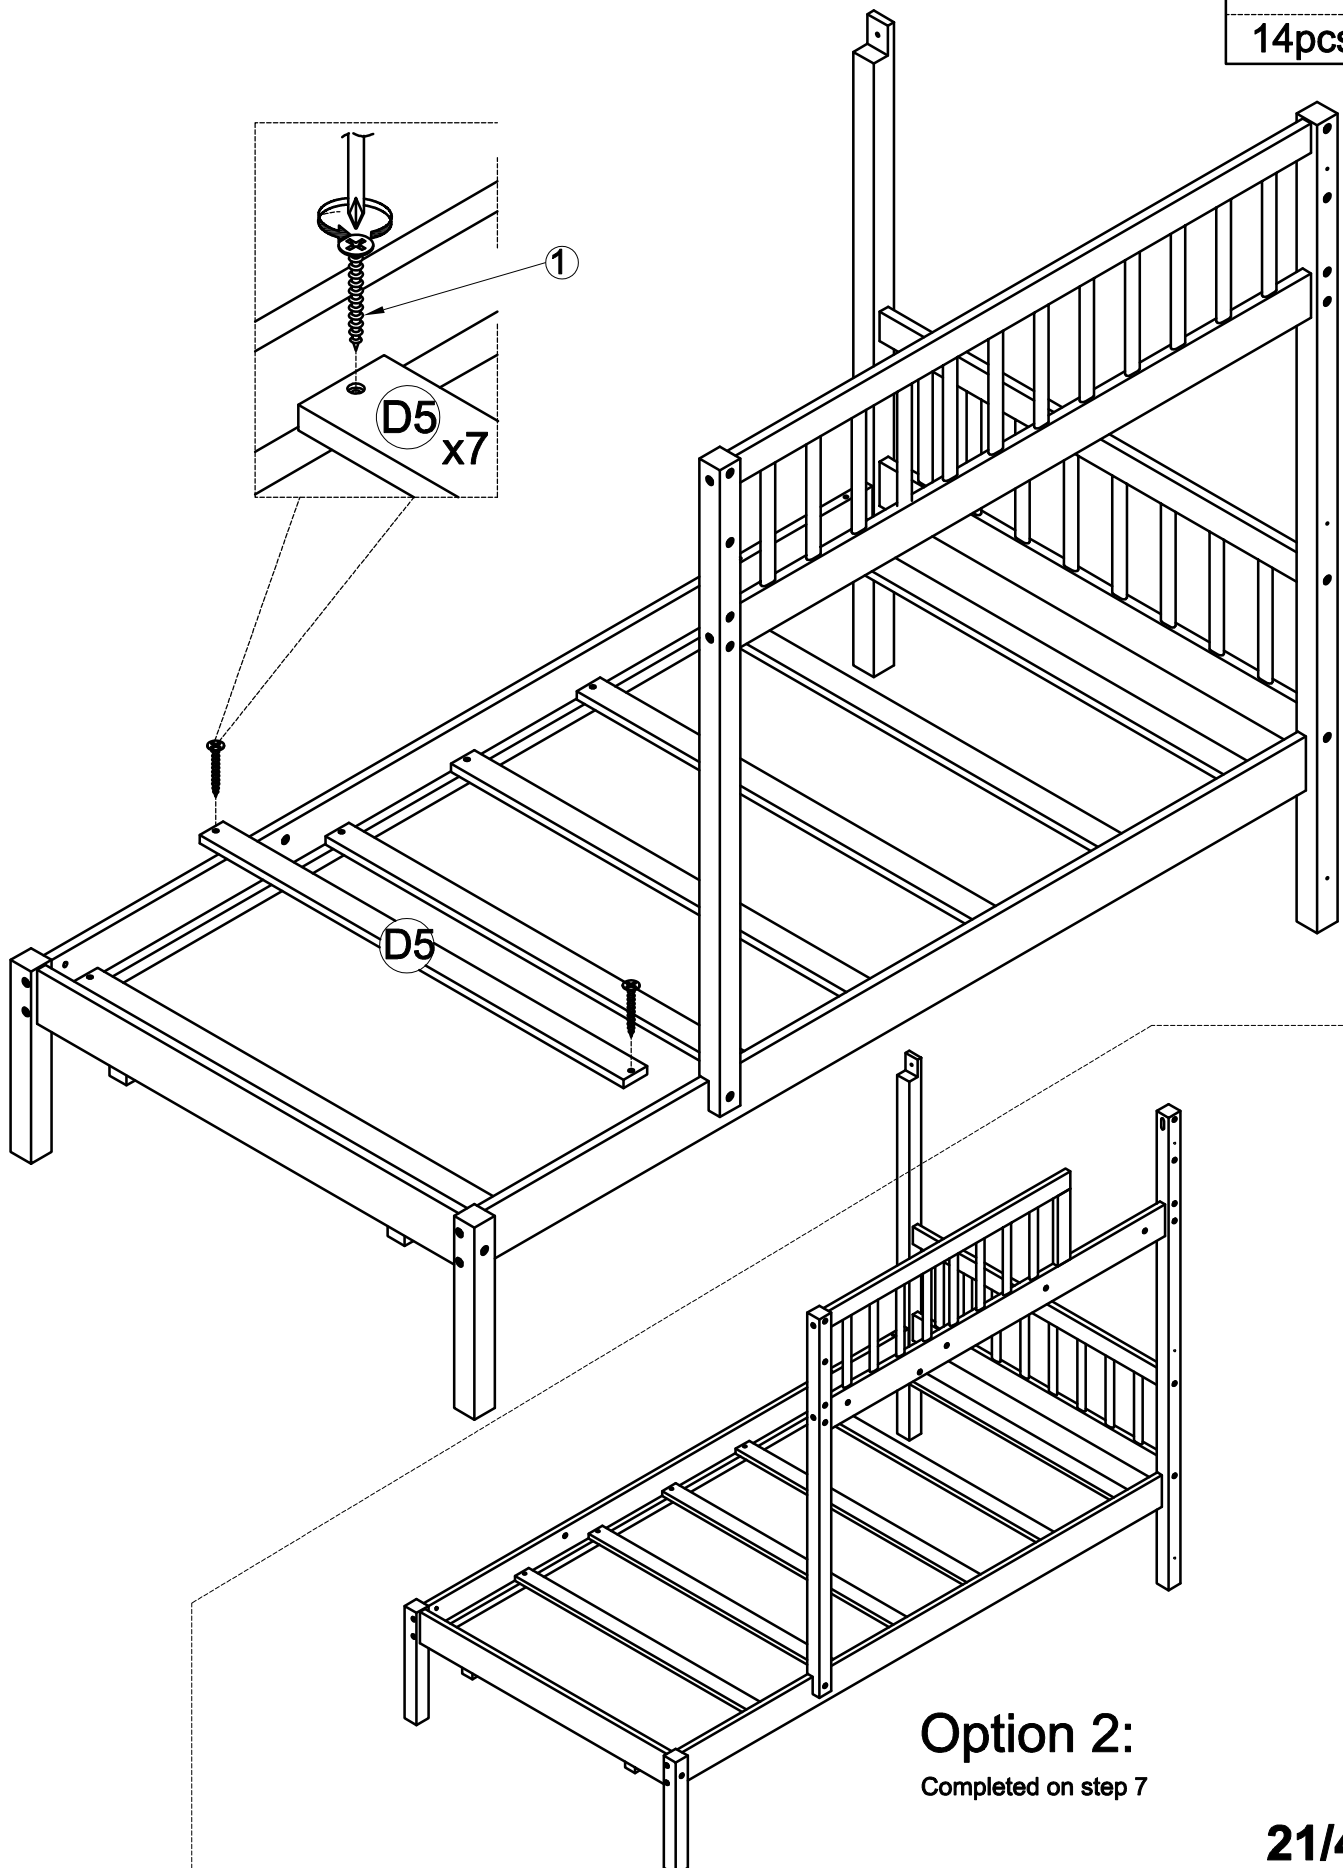

STEP 9: Following below illustration:

- Using hardward #6, #7 and dowel #2 to Assembly Frames (Completed on step 1,3) with siderail C1,C2.
- Look at detail view for more detail

6	2
	
8pcs	4pcs
7	
	
8pcs	

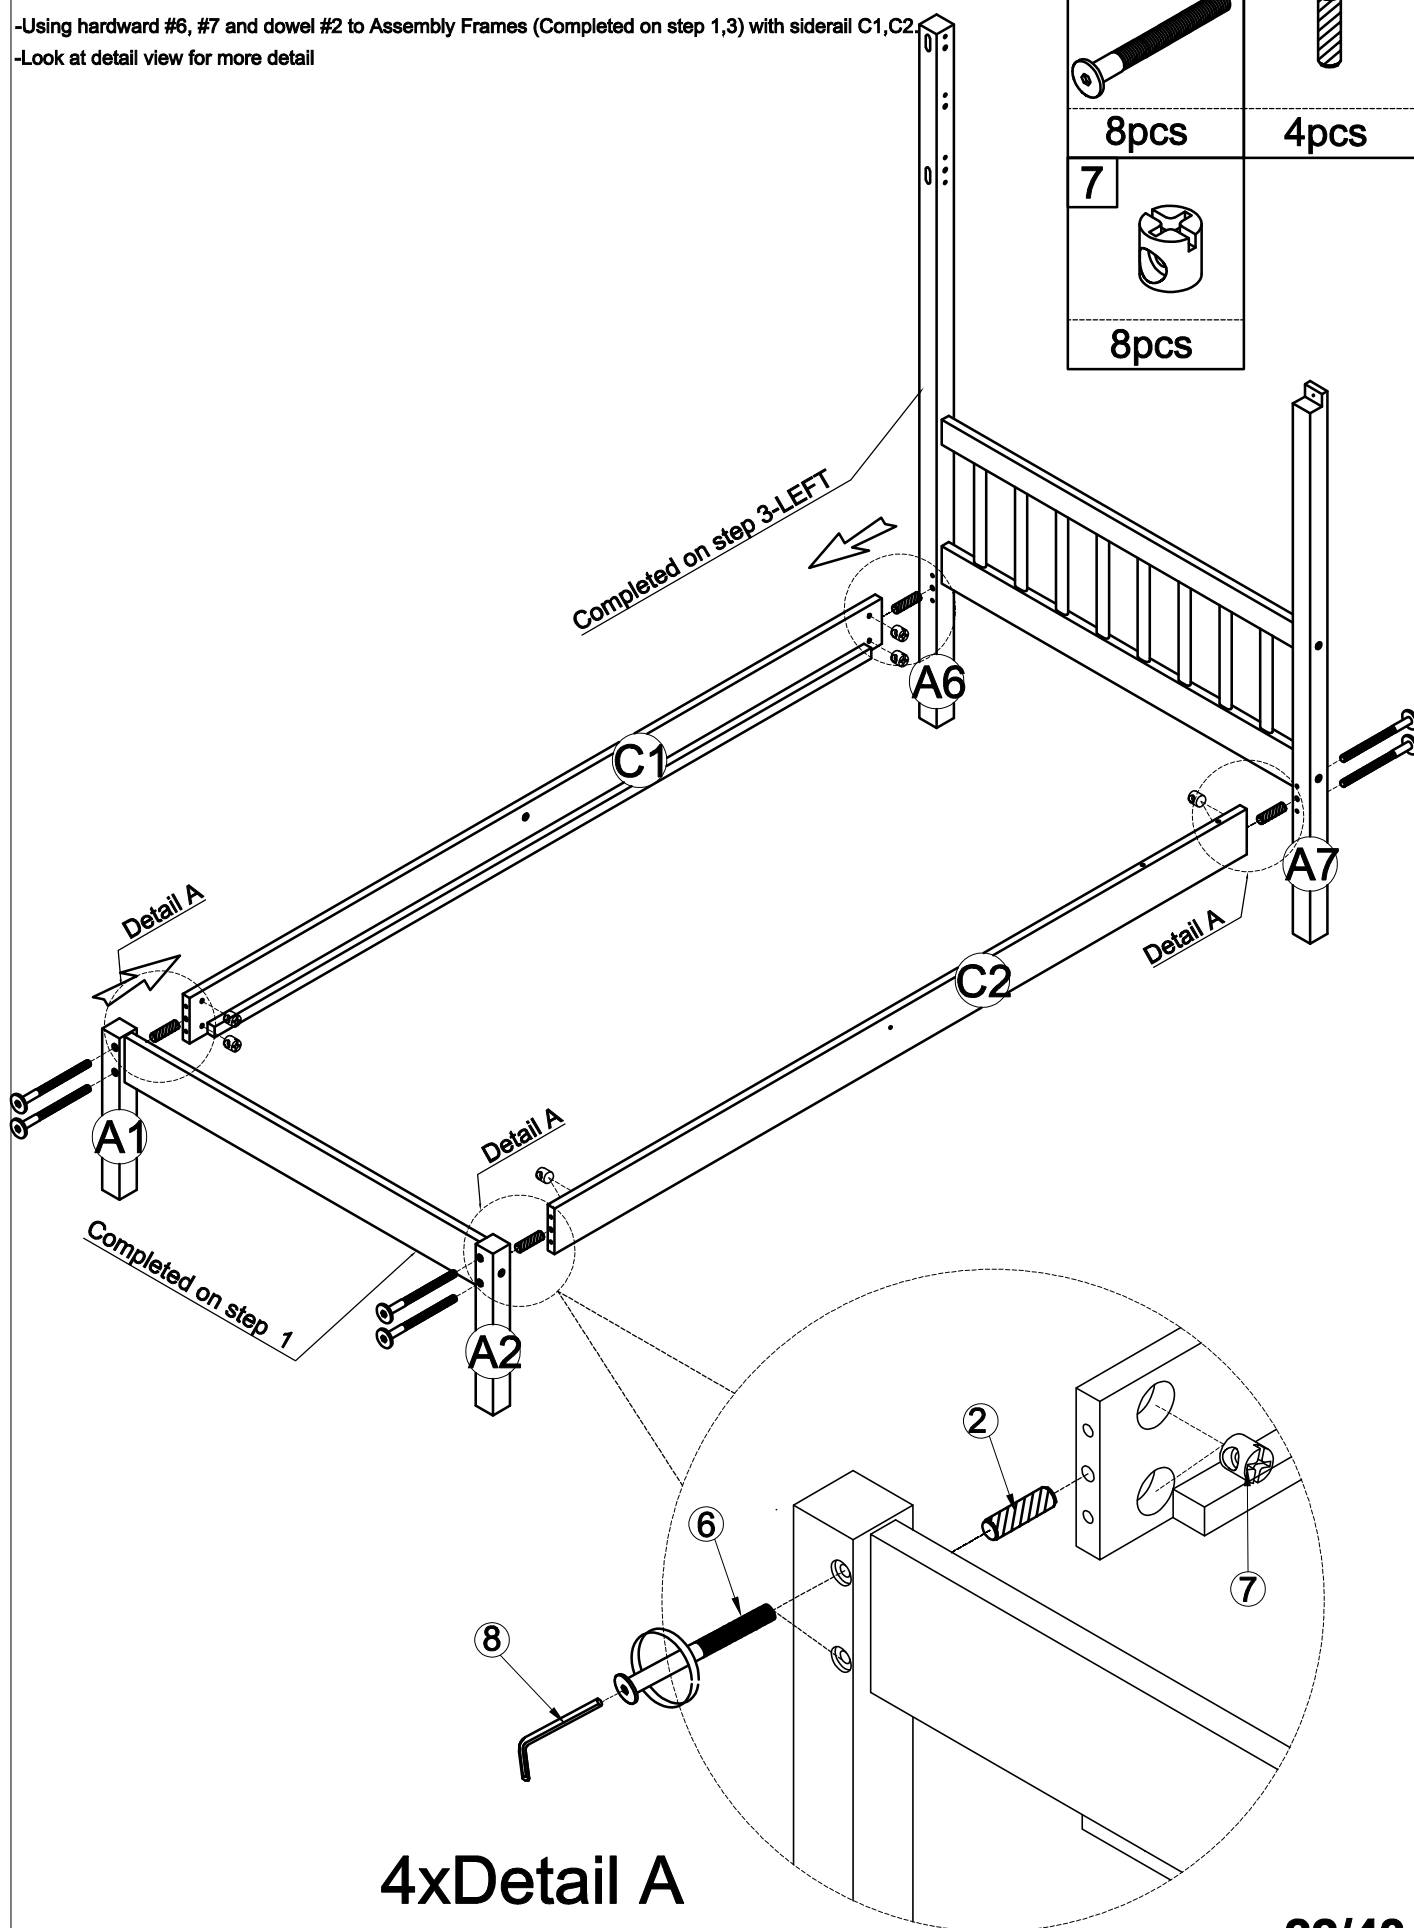


STEP 10: Following below illustration

-Using hardware #4,#5,#9 connect Frame(completed on step 5 OPTION 1-LEFT) with Frame (completed on step 9)

9	5	4
		
1pc	1pc	1pc

Option 2:

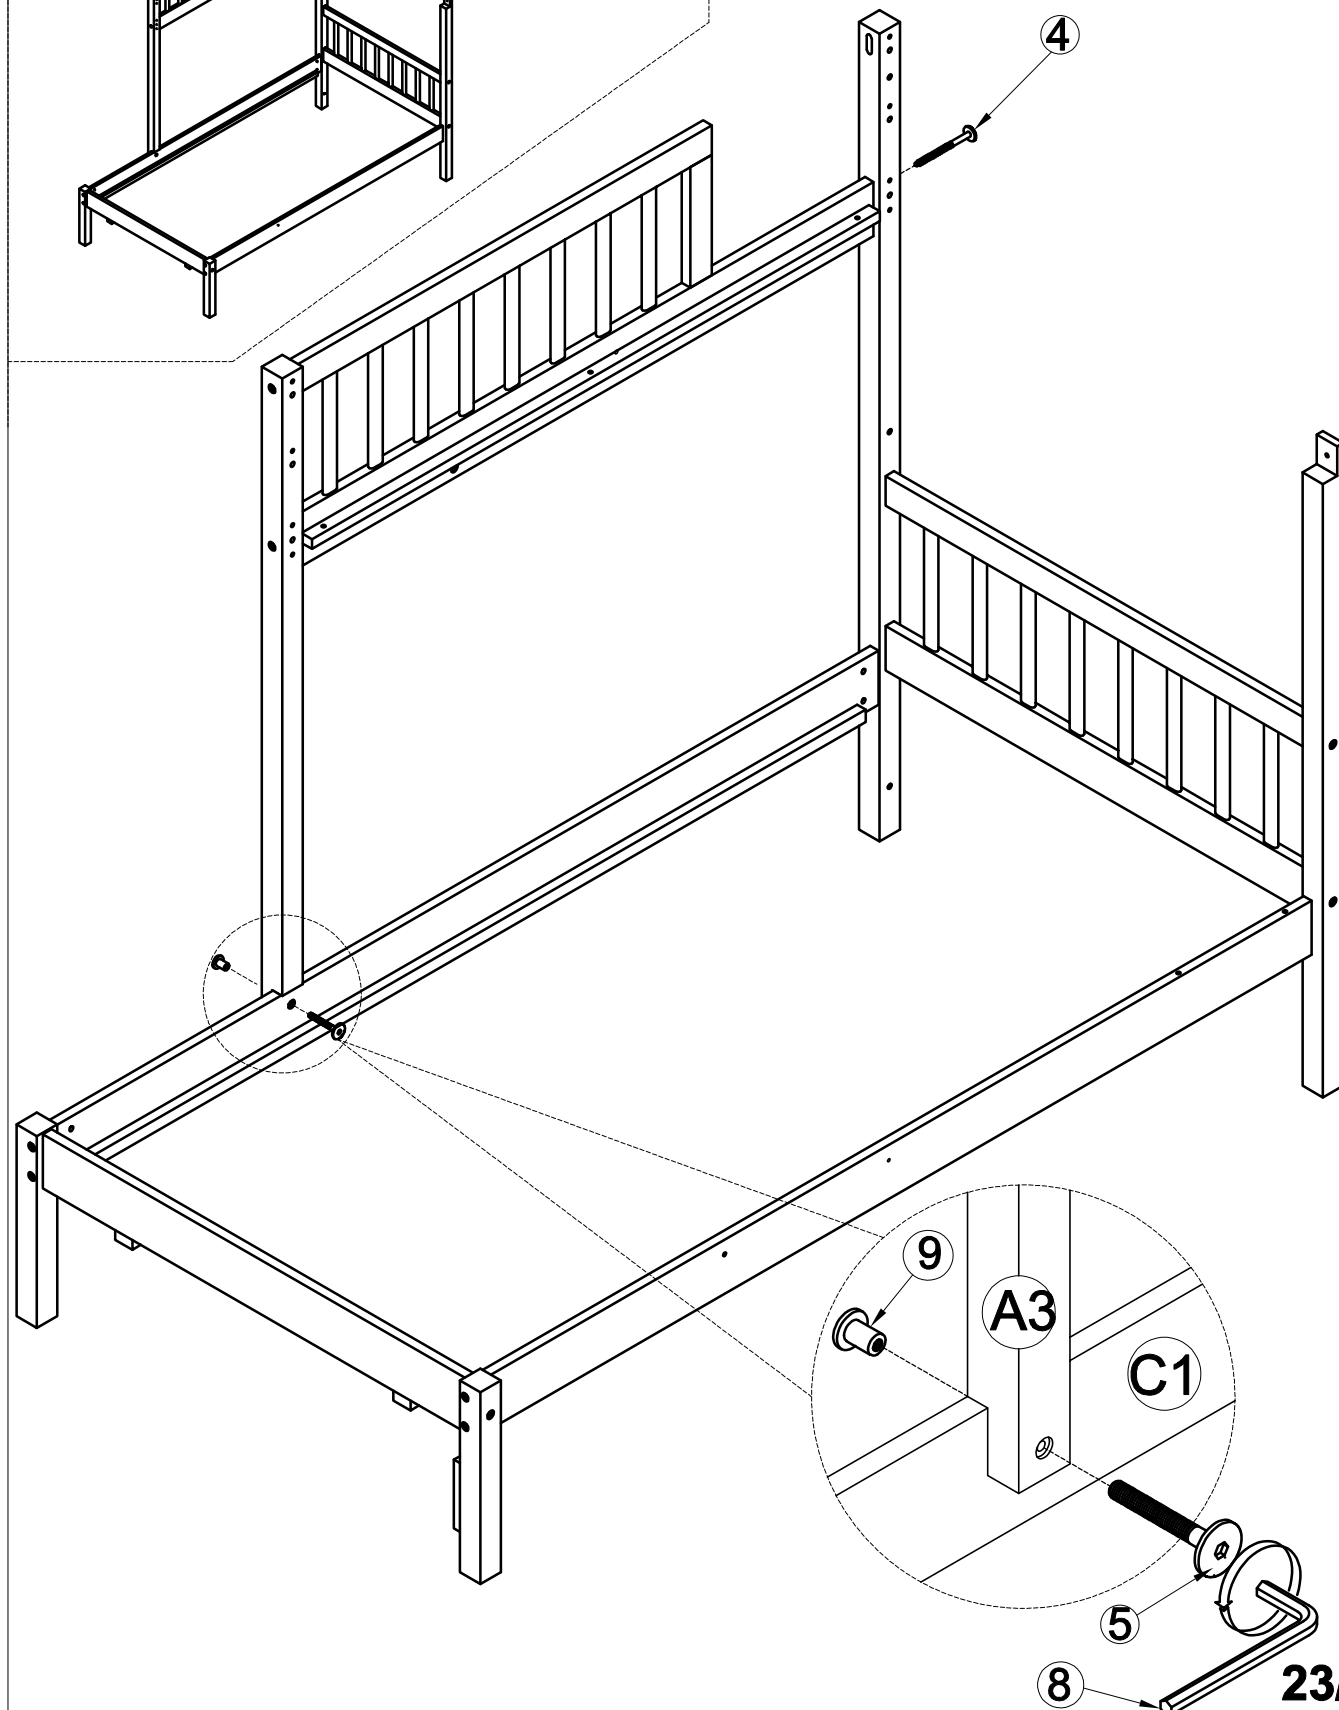Completed on step 10





STEP 11: Following below illustration:

- Screw 7slats D5 with Side Rail C1,C2 by using hardward #1.
- Look at detail view for more detail

1



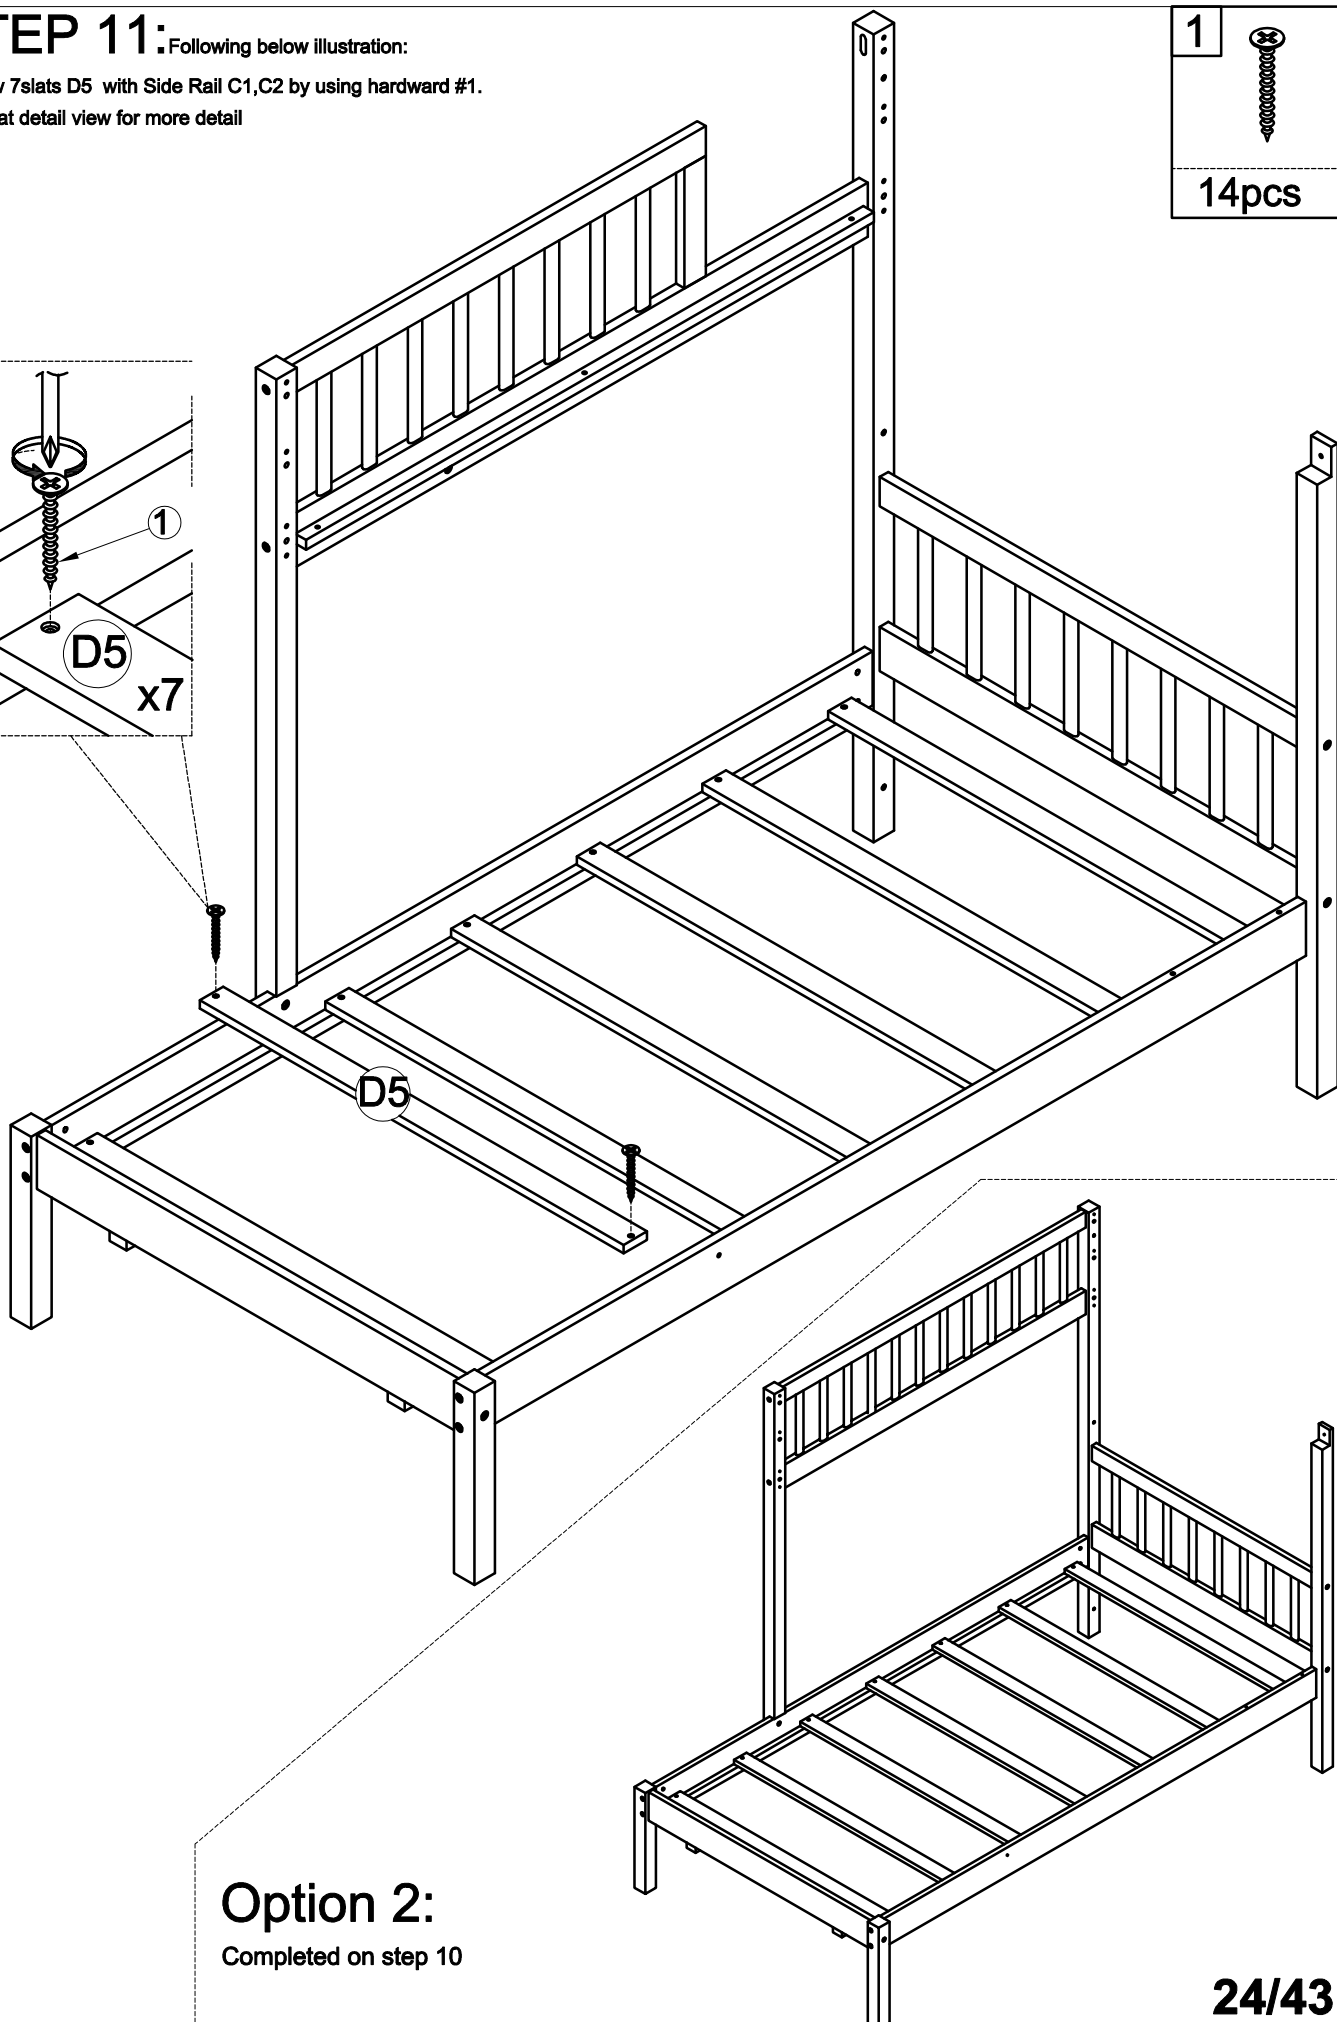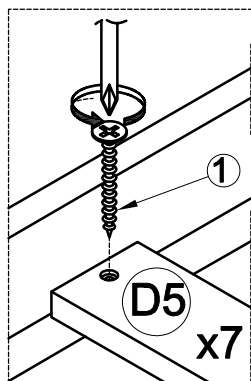14pcs





Option 2:

Completed on step 10

STEP 12: Following below illustration:

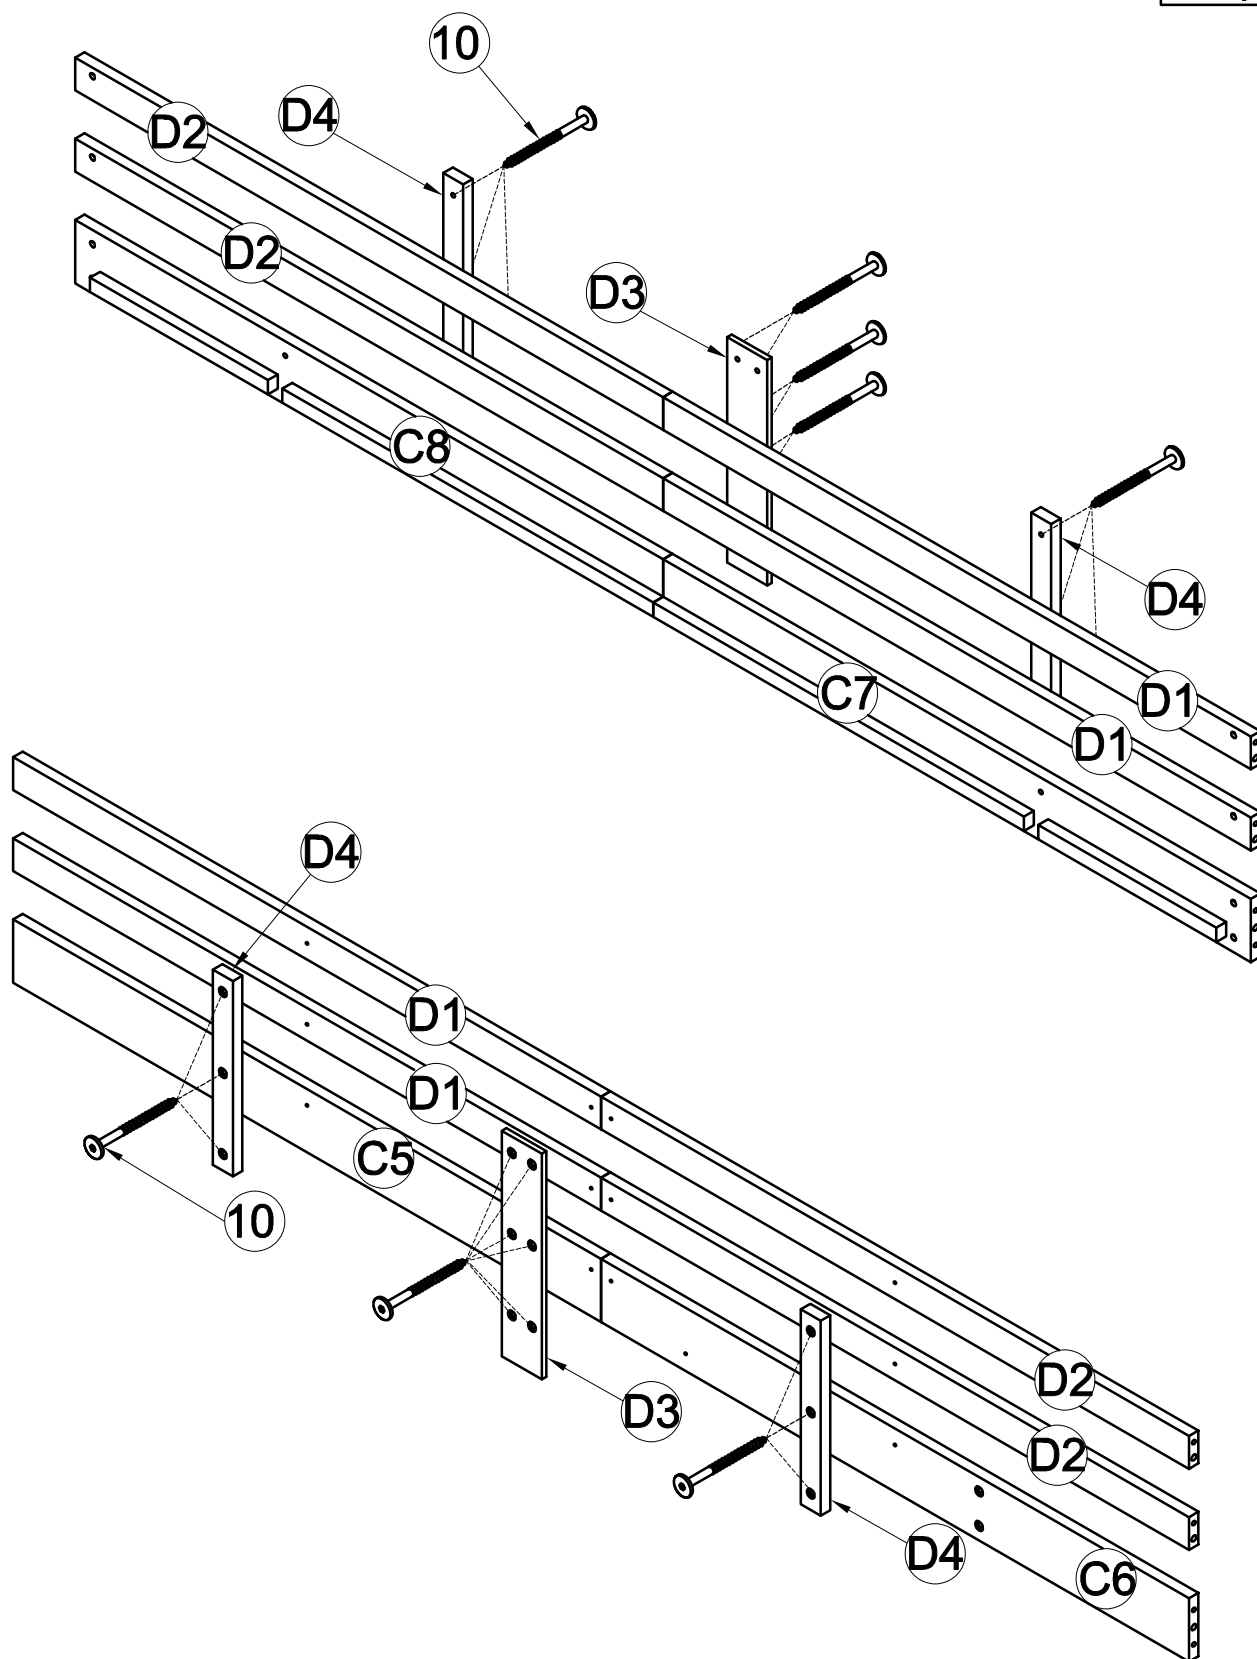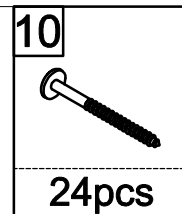- Using hardware #10 connect Side Rails C5,C6 and Guardrails D1(x2) ,D2(x2) with Rails D3,D4(x2)
- Using hardware #10 connect Side Rails C7,C8 and Guardrails D1(x2) ,D2(x2) with Rails D3,D4(x2)
- Look at detail view for more detail





- Using hardware #6,#7,#10 and dowel #2 connect Frames (Completed on step 8,11) with Frame (Completed on step 12).
- Look at detail view for more detail

Back View



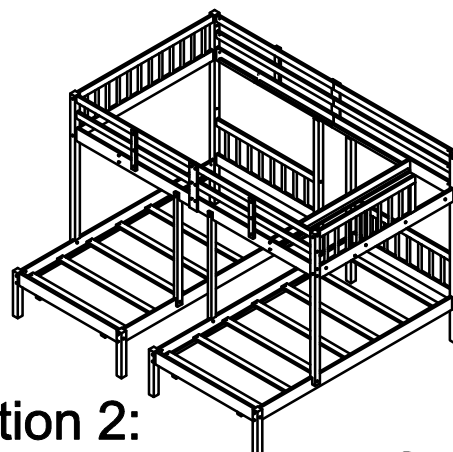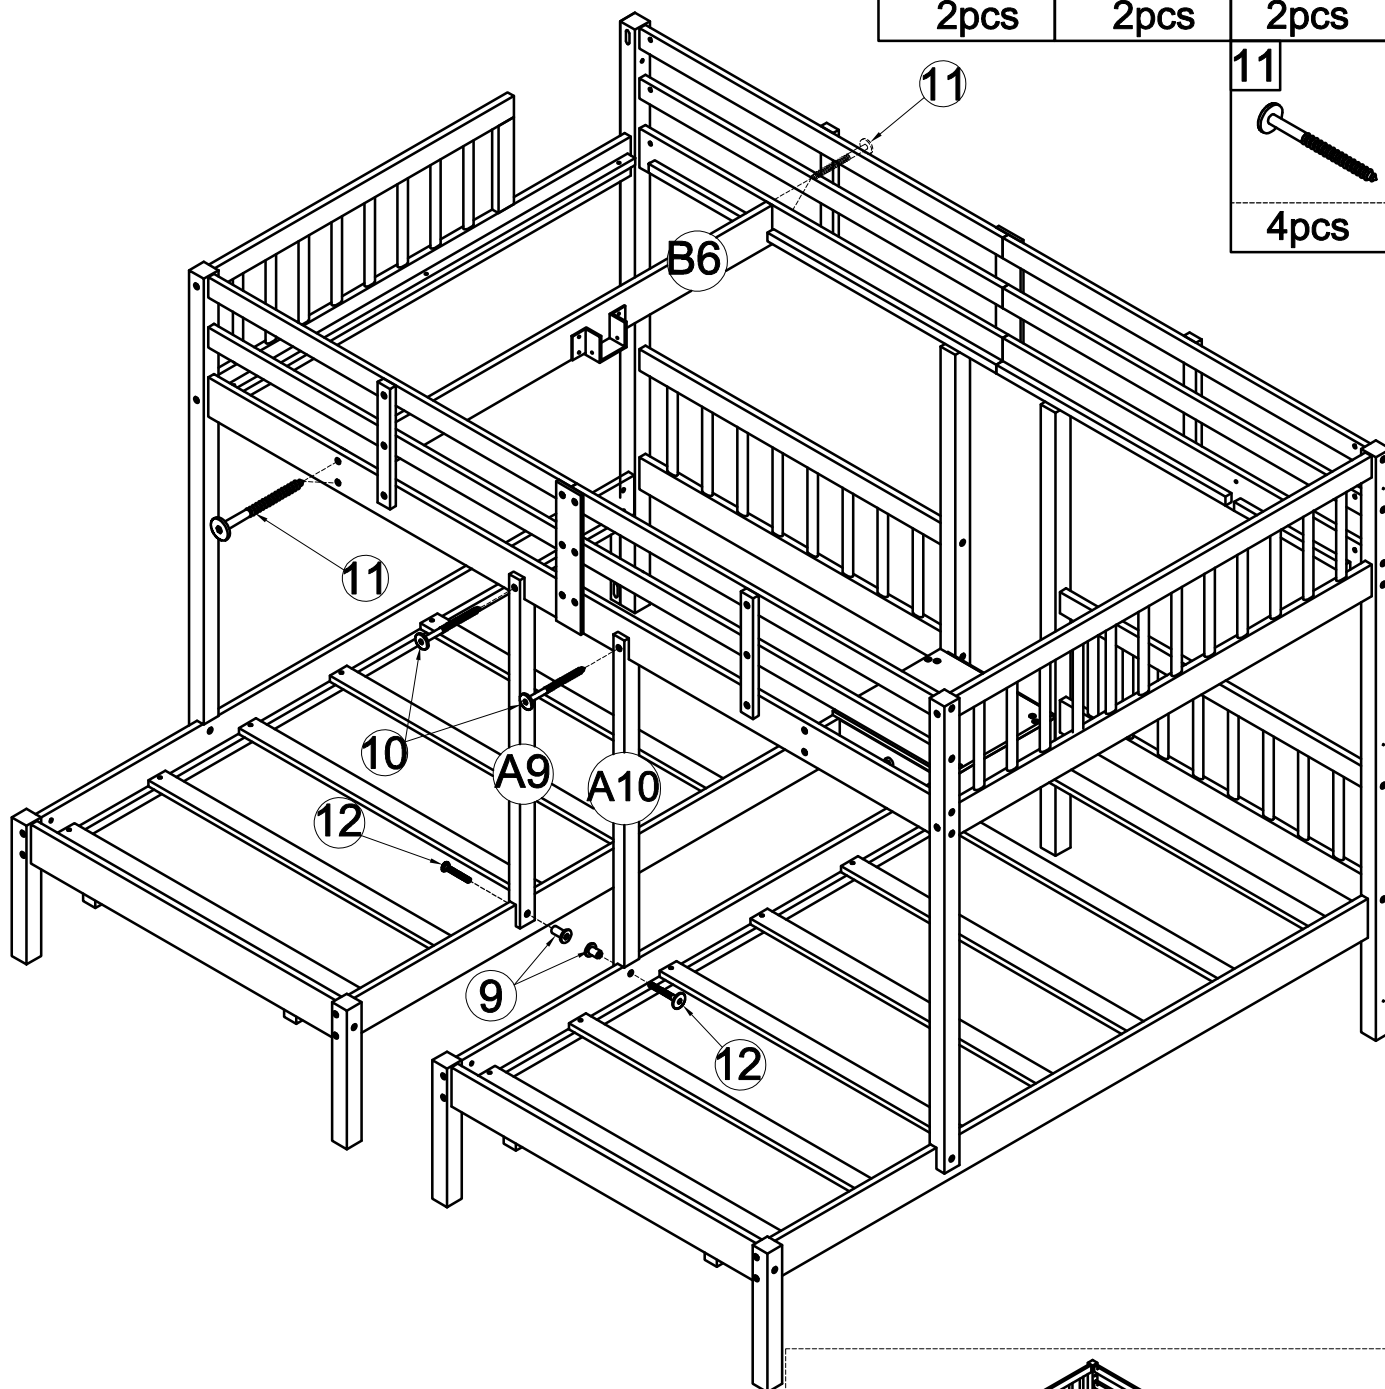- Using hardware #11 connect Frame (completed on step 13) with B6 Frame
- Using hardware #9,#10,#12 connect Frame (Completed on step 13) with A9,A10 Legs



Completed on step 14

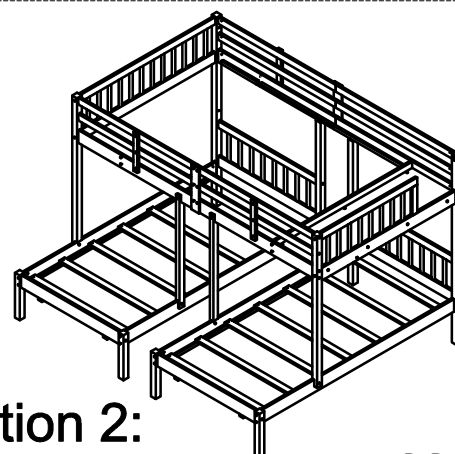
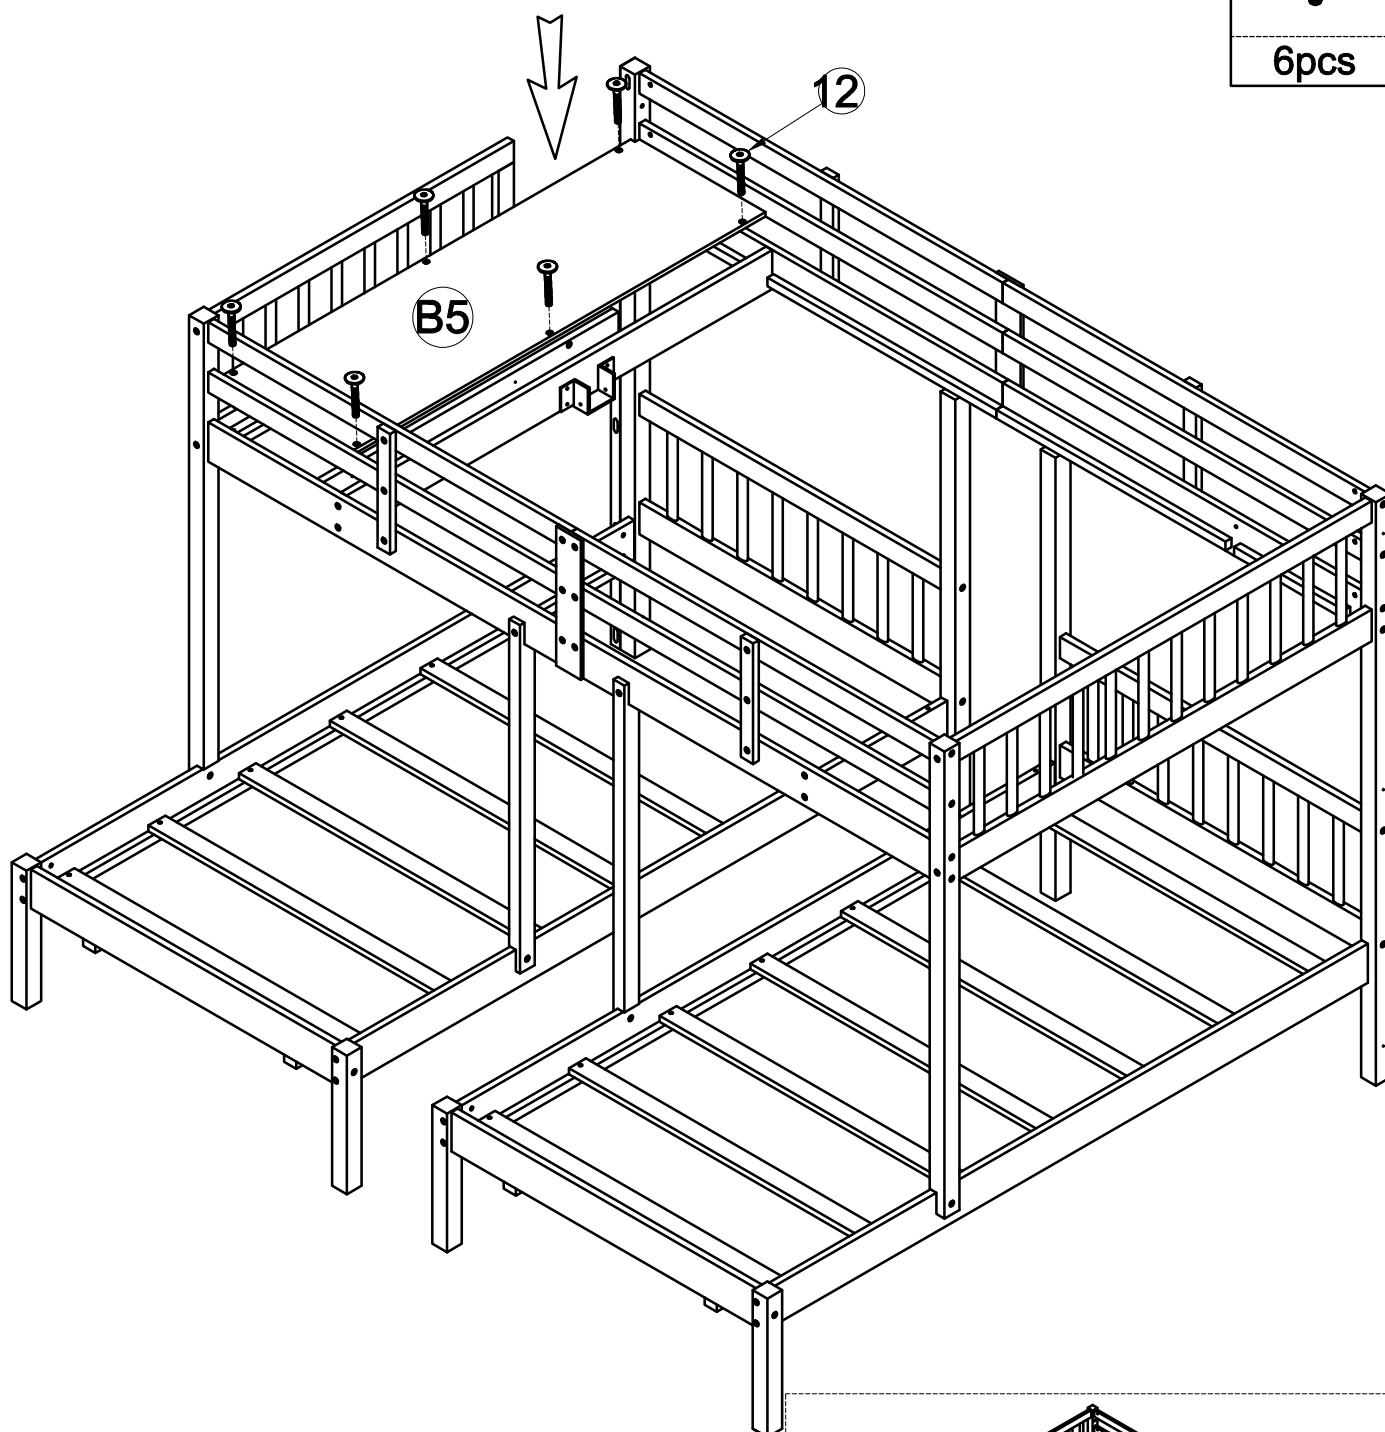
STEP 15: Following below illustration

-Using hardware #12 connect Frame(completed on step 14) with Panel B5

12



6pcs







Option 2:

Completed on step 14

28/43

STEP 16: Following below illustration:

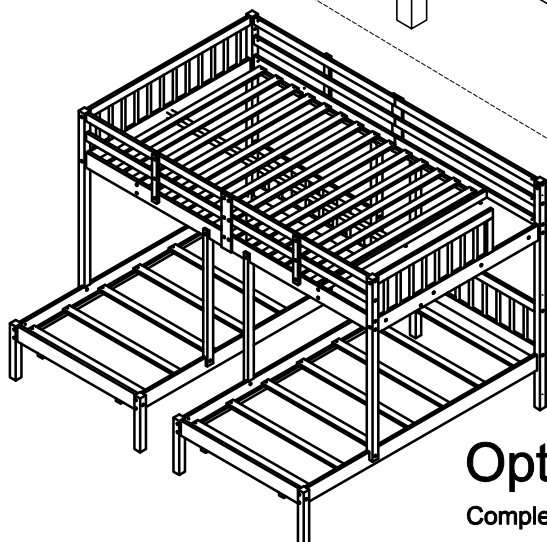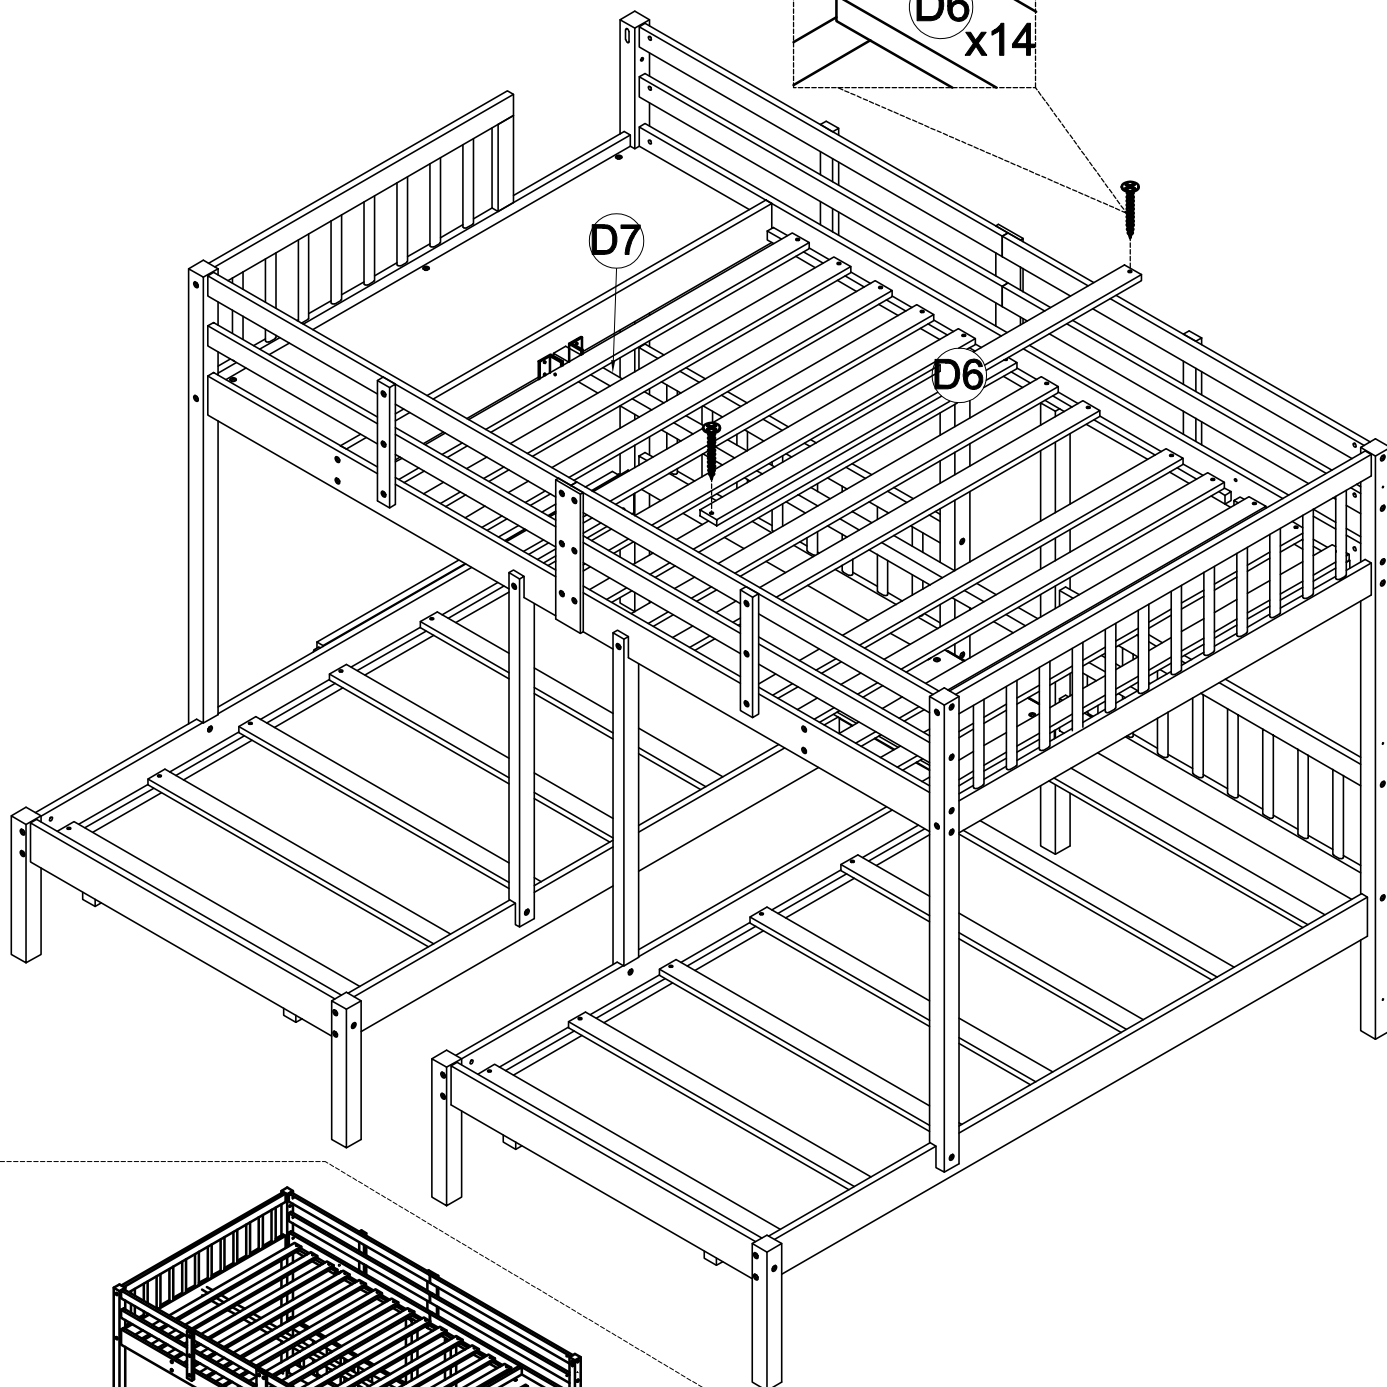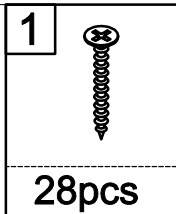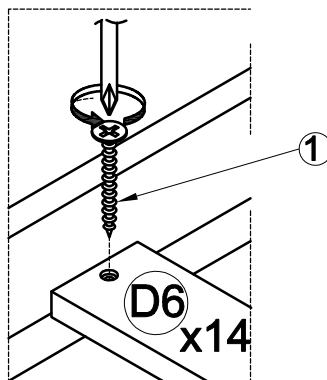- Put Support Slat (D7) on Bracket
- Screw 14 slats D6 with Side Rail C5,C6 by using hardware #1.
- Look at detail view for more detail




Option 2:
Completed on step 16

STEP 17(OPTION 1): Following below illustration:

- 17.1: Using hardware #4 connect K1, K4 Legs with T1(x3), T2, T3, T4, T5 Wood Bars
- 17.2: Using hardware #10 connect Frame (completed on step 17.1) with T7, T8, T9 Wood Bars
- 17.3: Using hardware #4 connect K2, K3 Legs with V1, V2, V3, V4, V5 Wood Bars


10	4
7pcs	14pcs

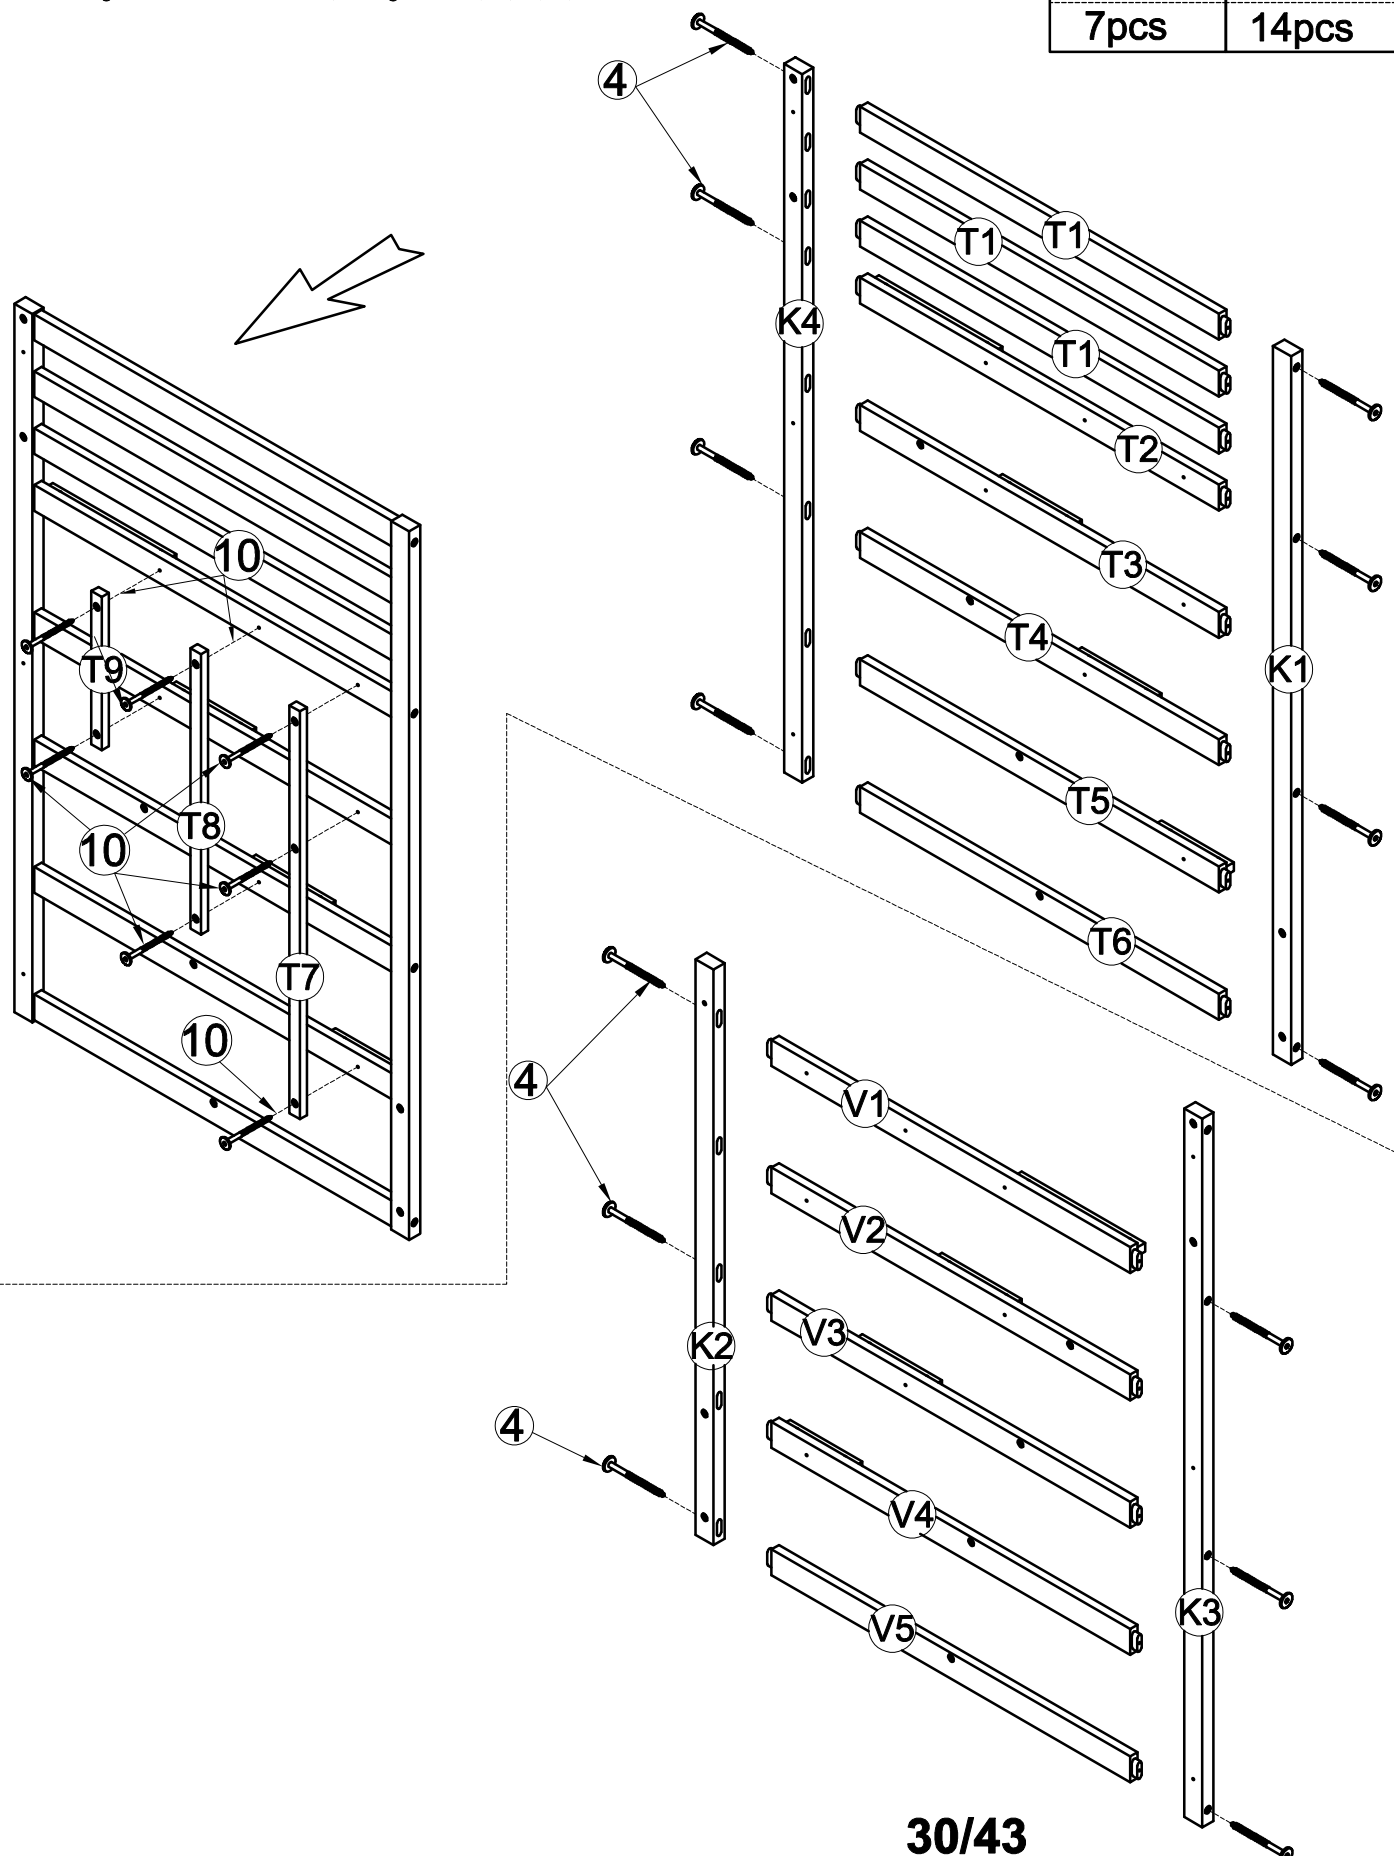

STEP 17(OPTION 2): Following below illustration:

- 17.1: Using hardware #4 connect K1, K3 Legs with T1(x3), V1, V2, V3, V4, V5 Wood Bars
- 17.2: Using hardware #10 connect Frame (completed on step 17.1) with T7, T8, T9 Wood Bars
- 17.3: Using hardware #4 connect K2, K4 Legs with T2, T3, T4, T5, T6 Wood Bars

10	4
	
7pcs	14pcs

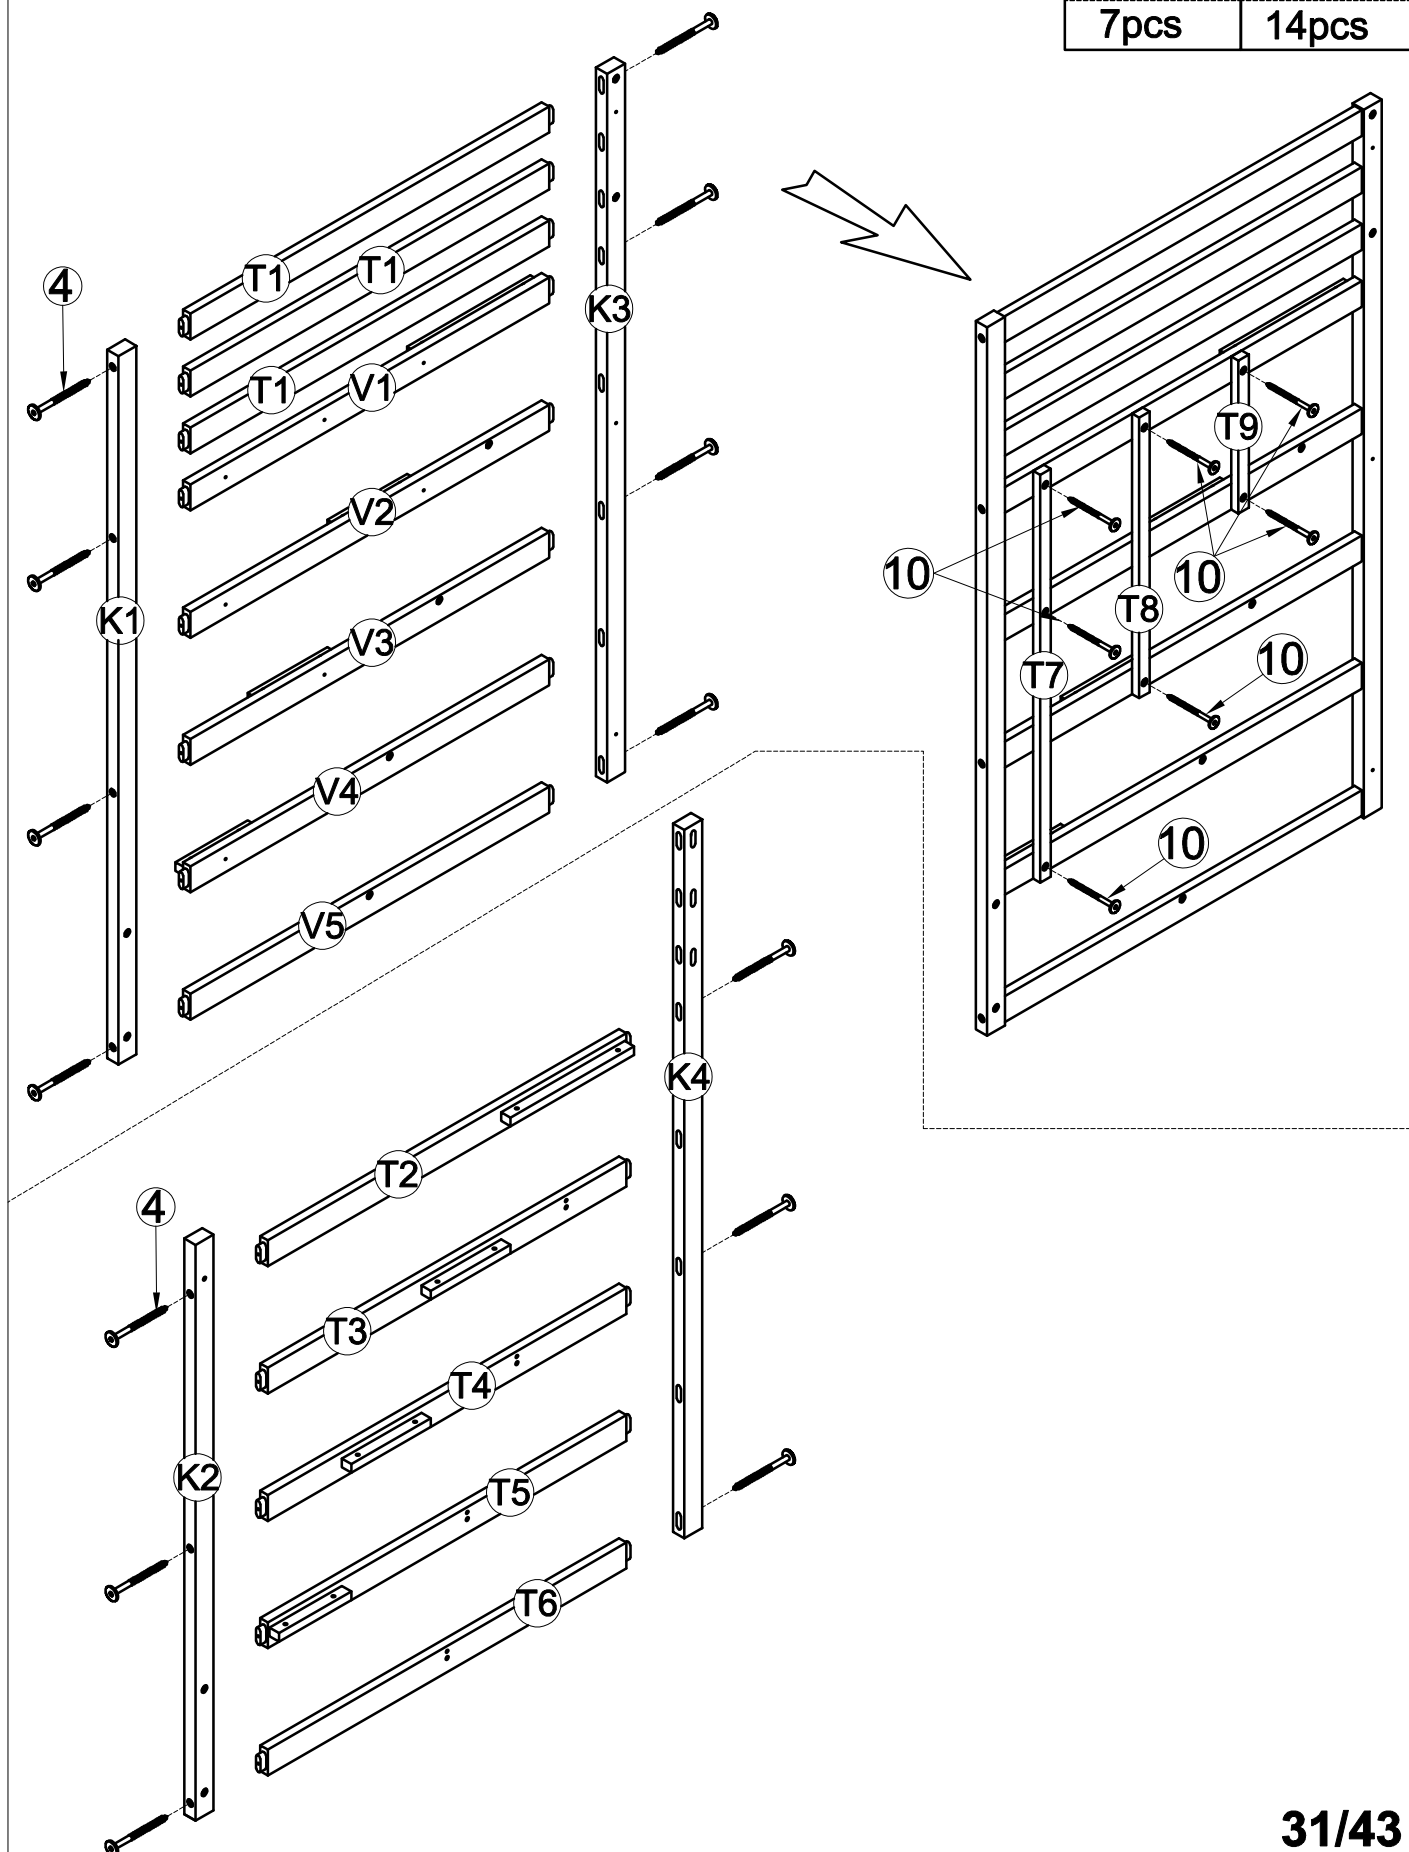


STEP 18: Following below illustration:


-Using hardware #11, #13 and Dowel 14 connect U1(x3), U7(x4) Wood Bars and U3 Panel with Frames (completed on step 17)

13	14
	
4pcs	8pcs
	11
	
	12pcs

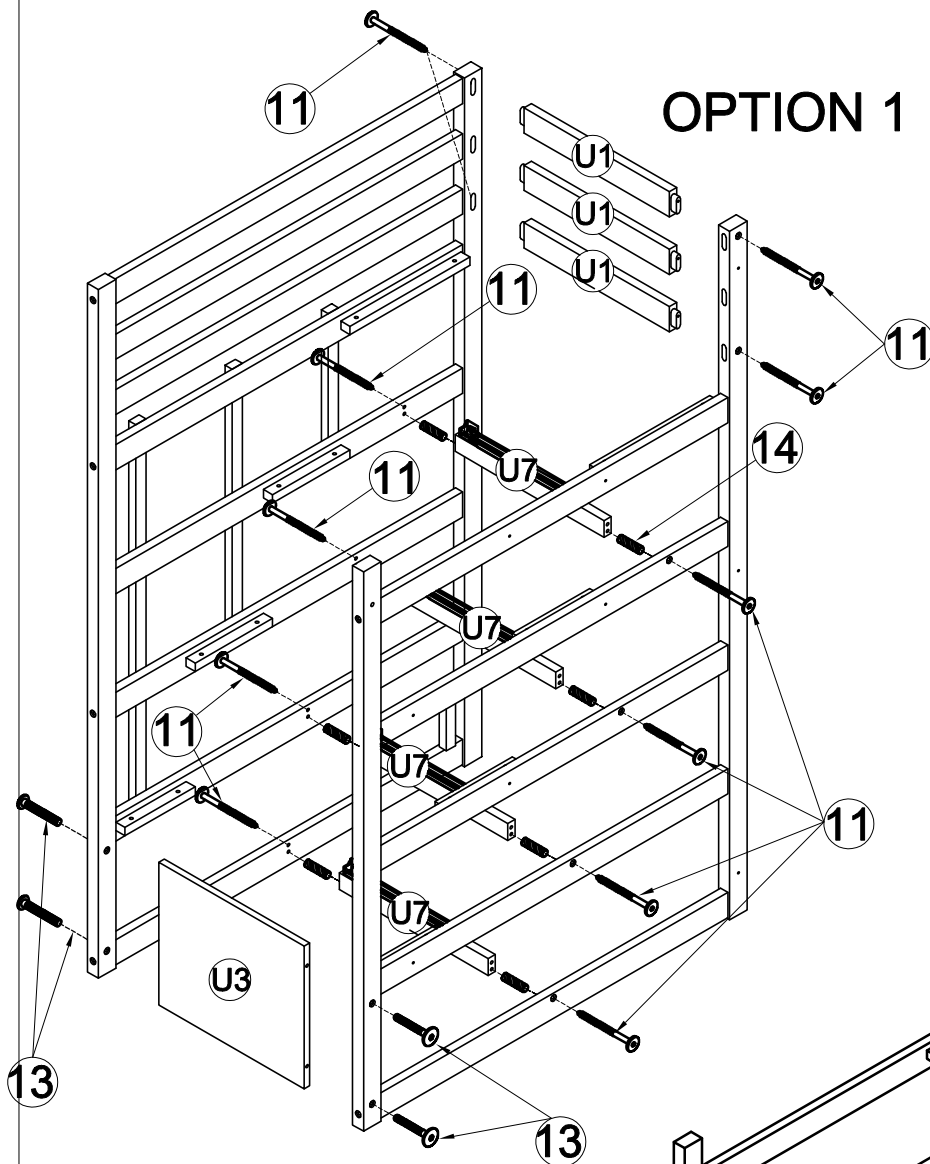OPTION 1




OPTION 2

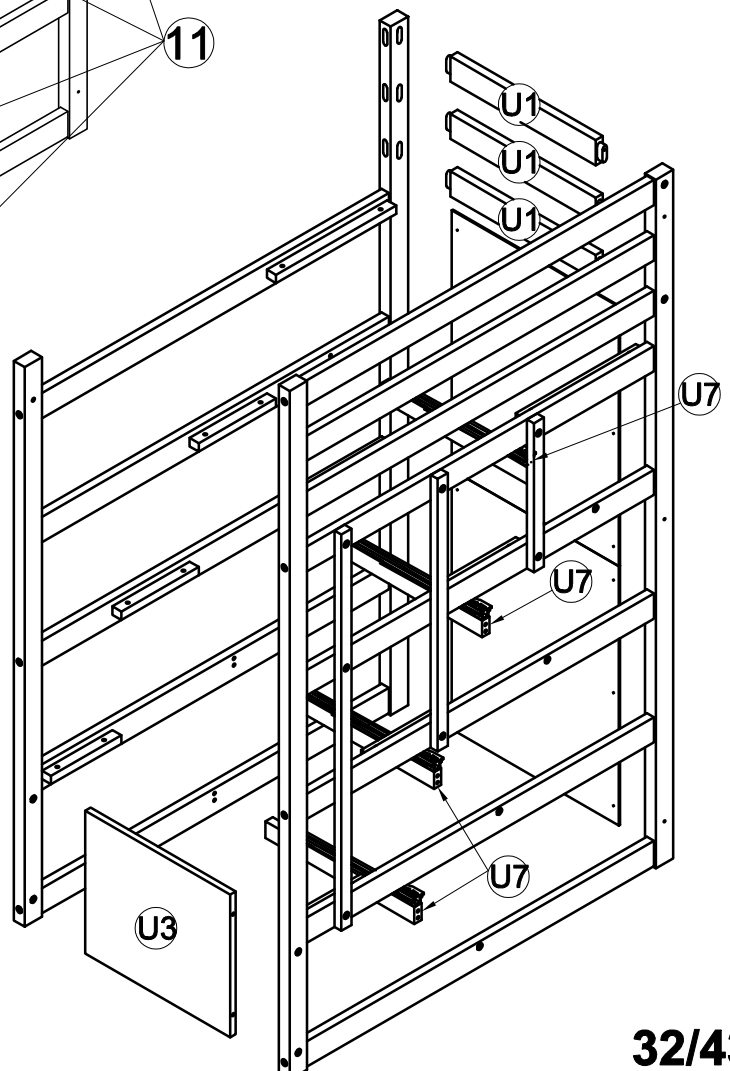

STEP 19: Following below illustration:


-Using hardware #12 and Dowel 15 connect U5,U4(x3),U6(x3) Panels with Frame(completed on step 18)
with Frames(completed on step 18)

15	12
	
12pcs	16pcs

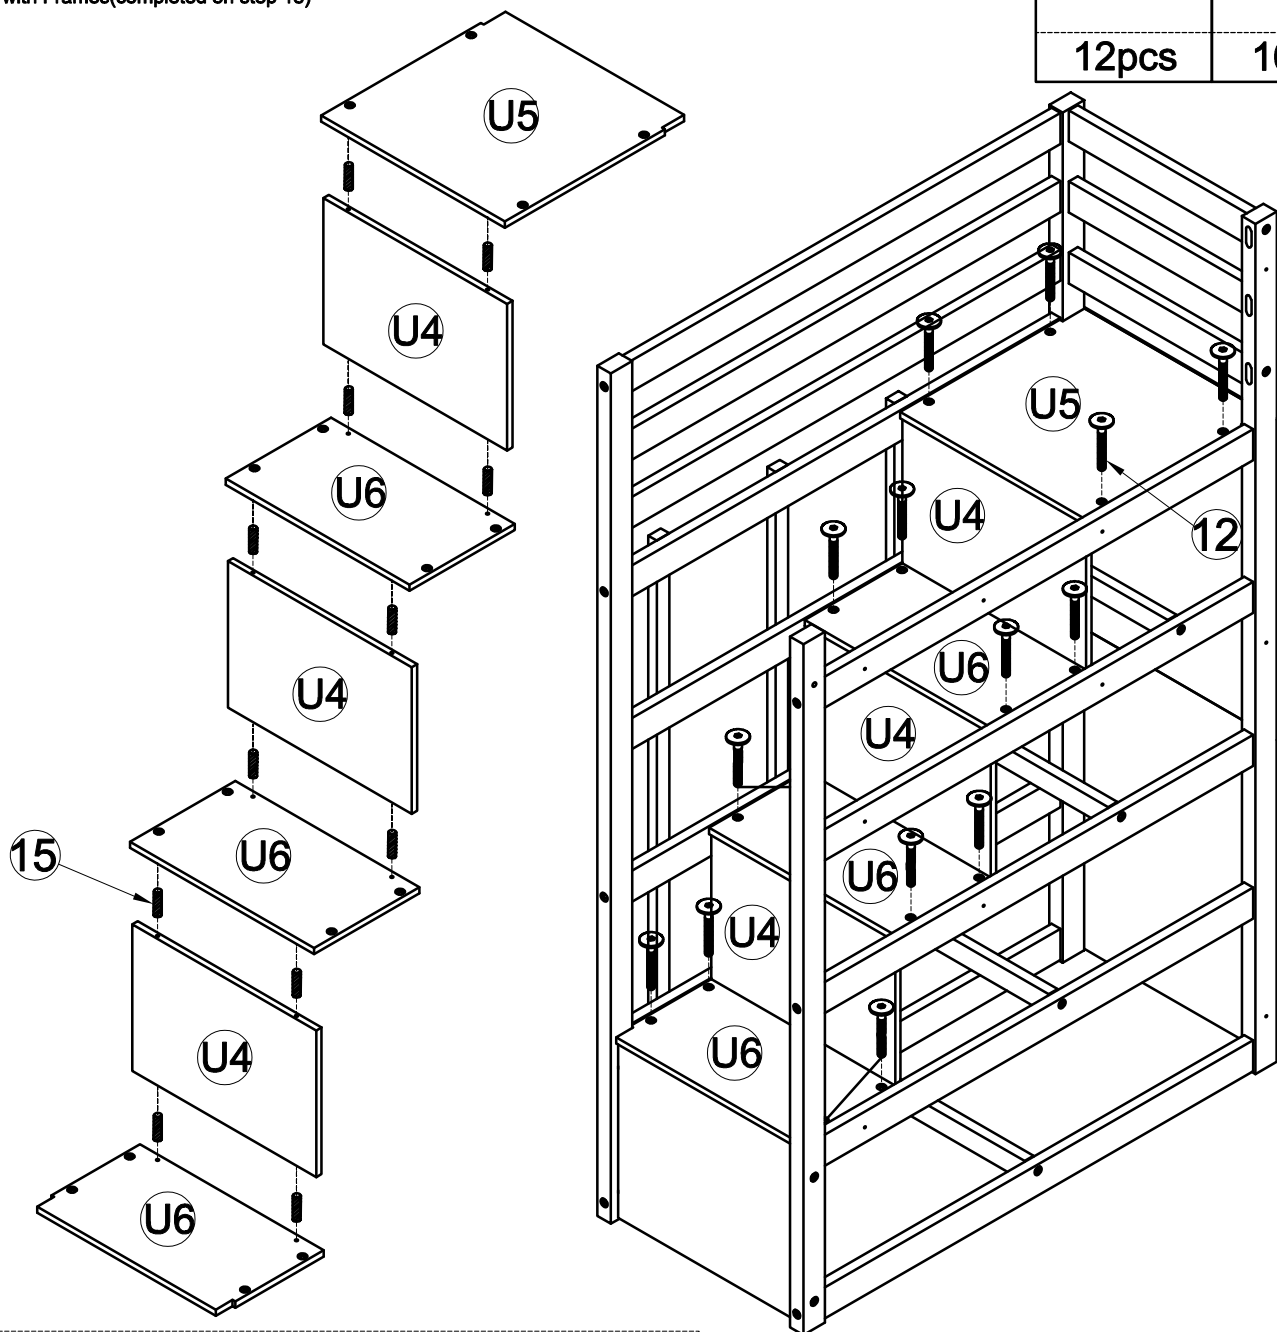

Option 2:

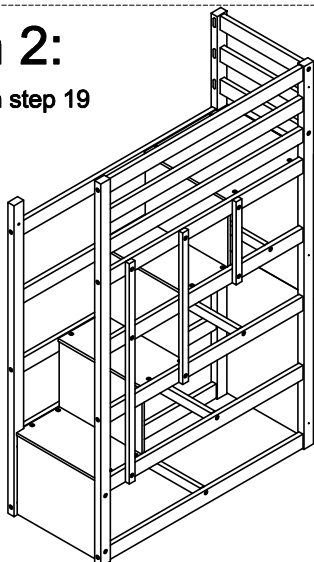
Completed on step 19





STEP 20: Following below illustration:

-Using hardware #16 connect U2(x2),M1,M2,M3,M4 Panels with Frame(completed on step 19)

16



36 pcs

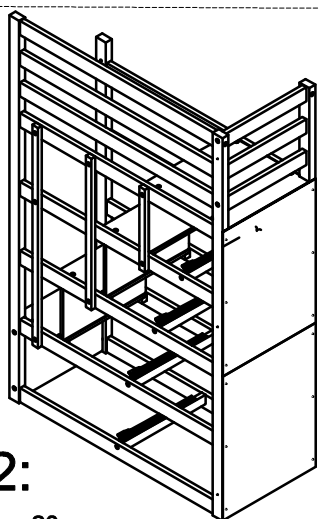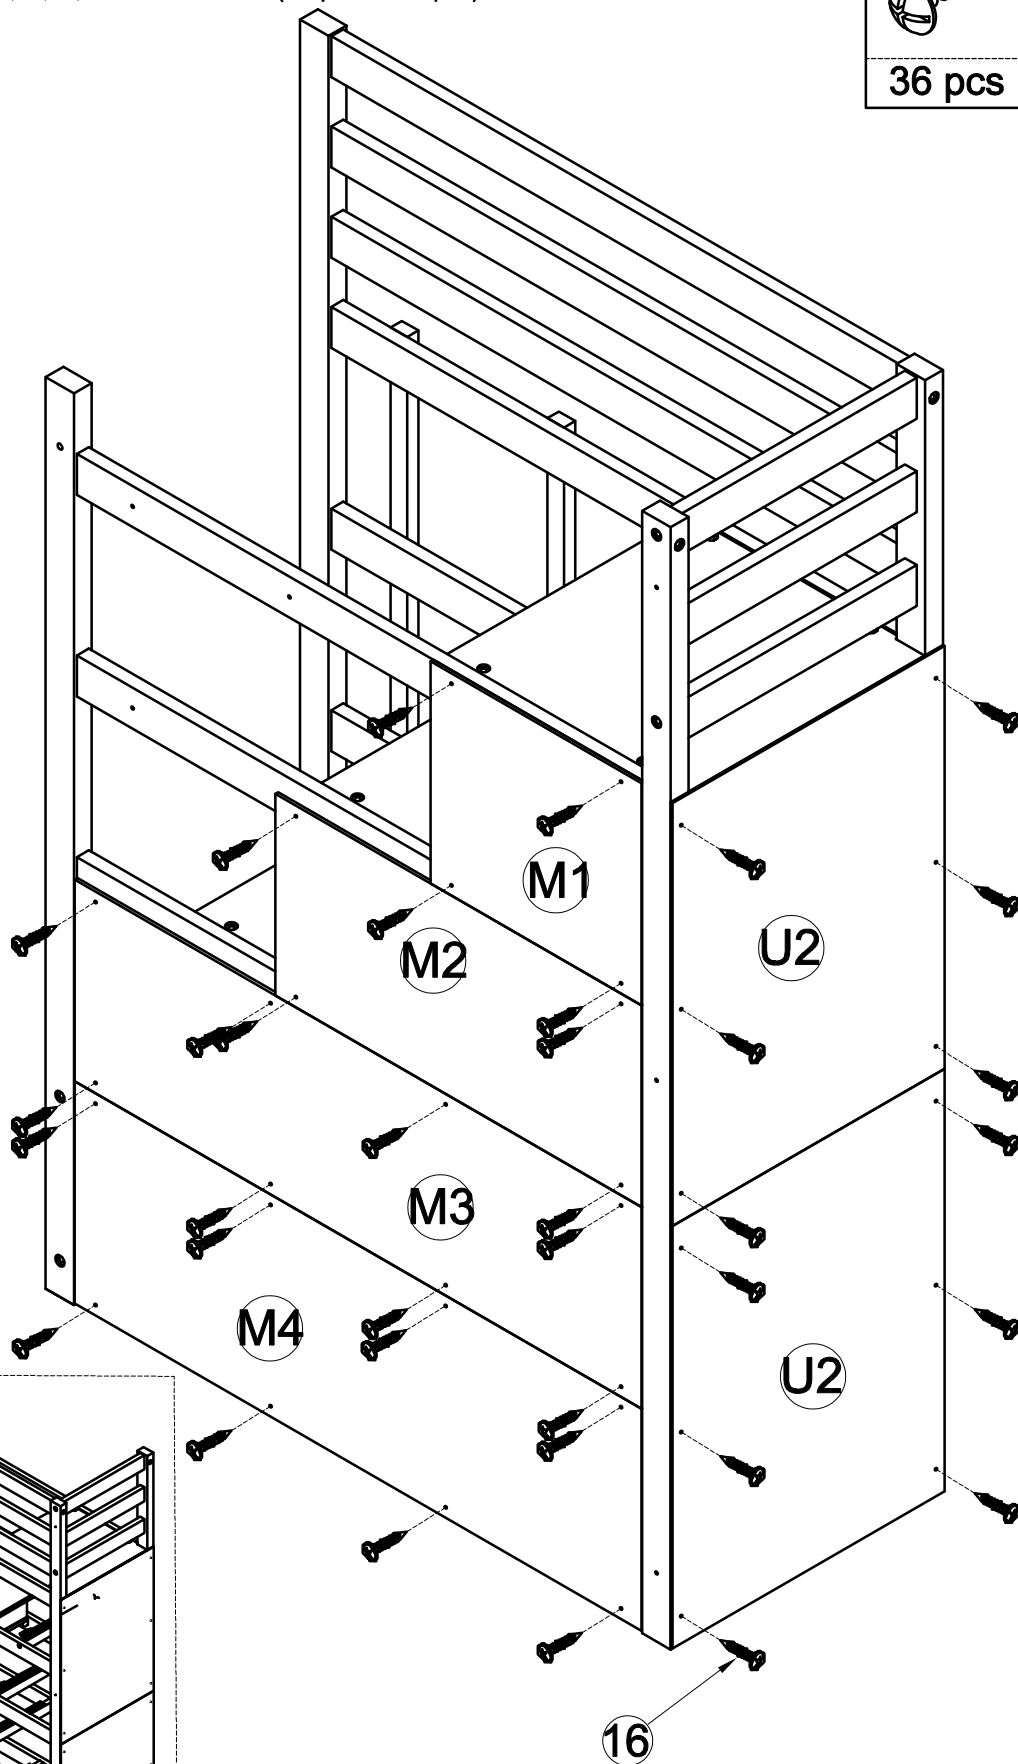



Option 2:

Completed on step 20

STEP 21: Following below illustration:

-Using hardware #4,#17 connect Frame(completed on step 16) with Frames(completed on step 20)

4	17
	
2pc	1pc

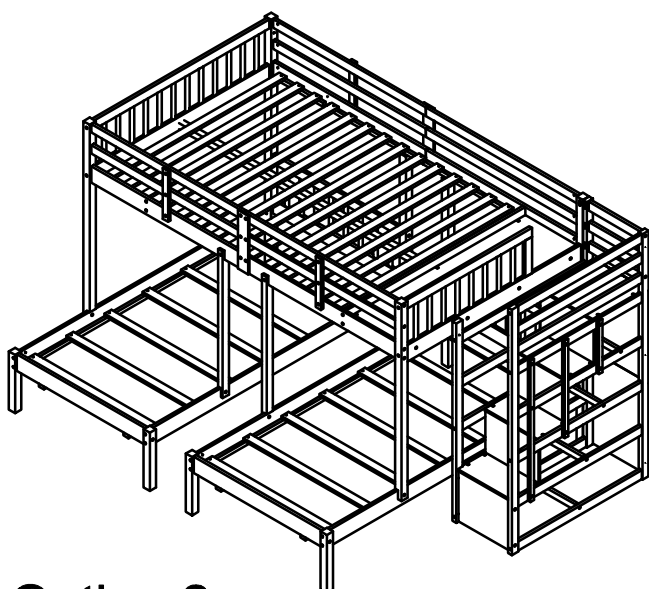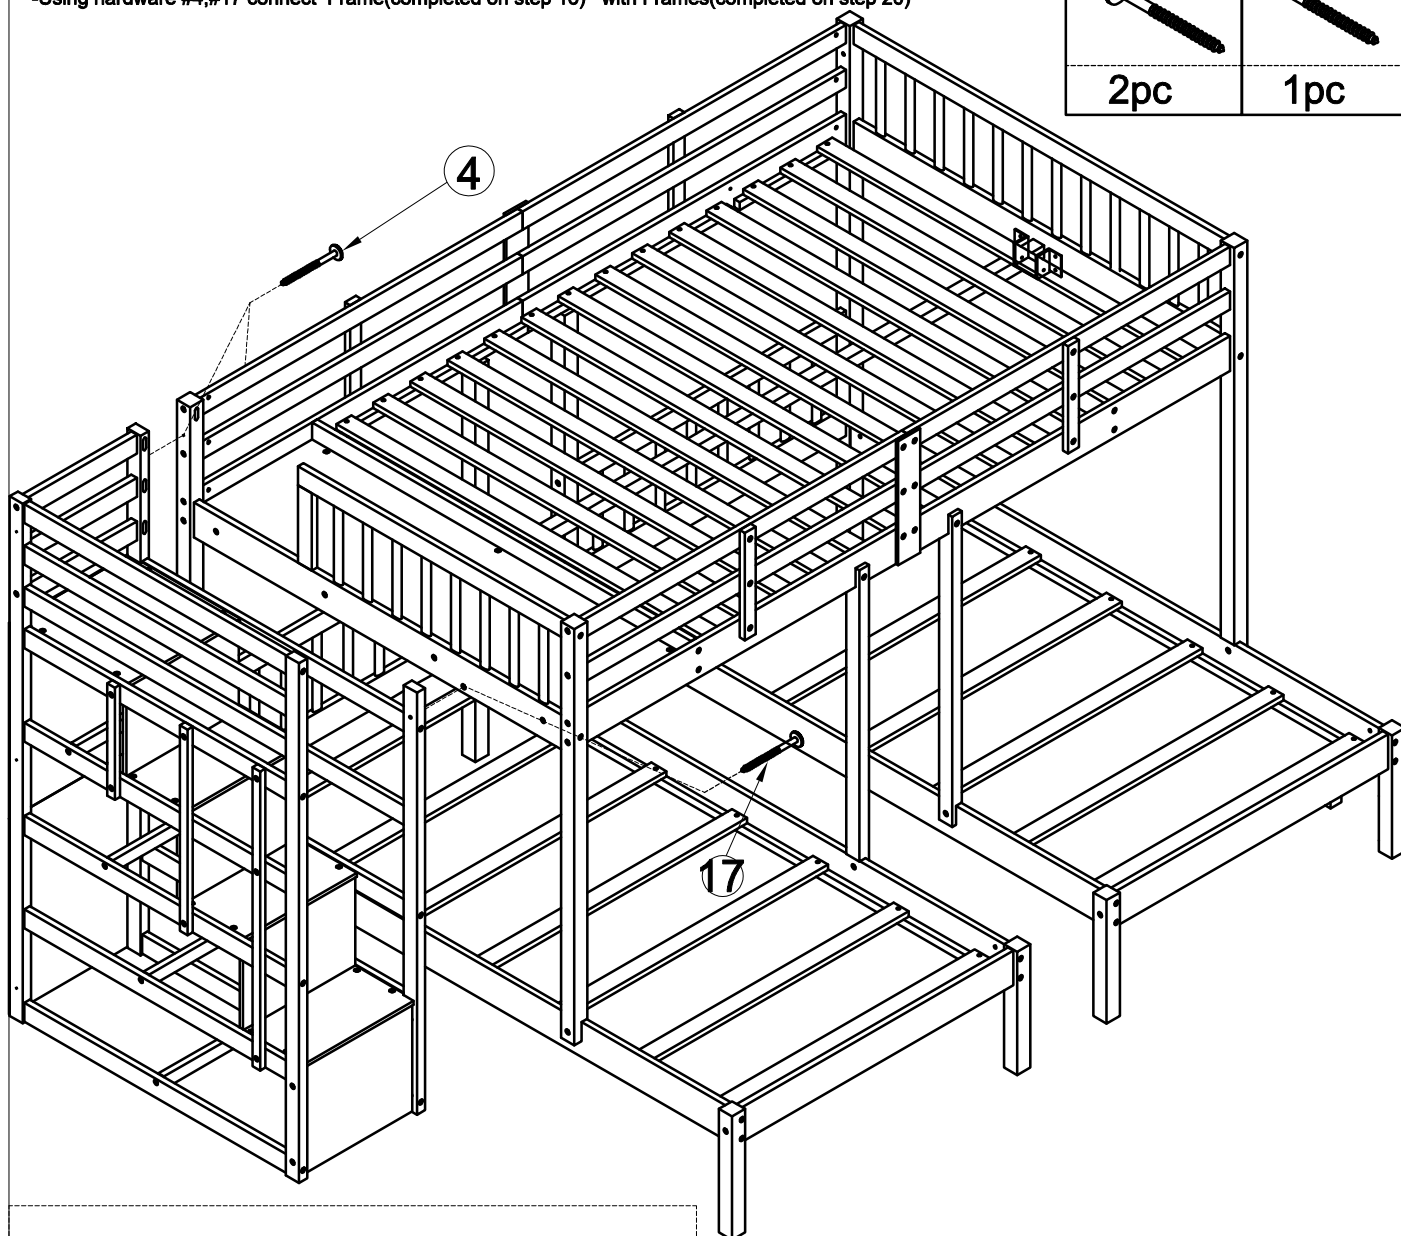


Option 2:

Completed on step 21

STEP 22-1: Following below illustration:

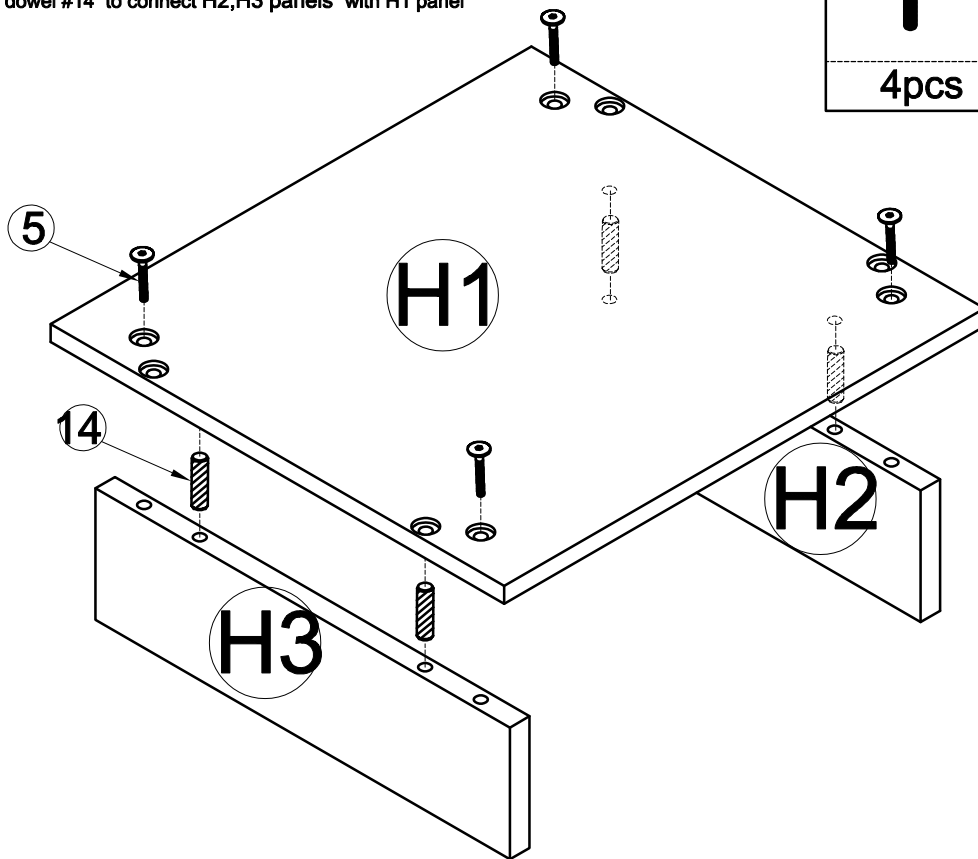
-Using hardward #12 and dowel #14 to connect H2,H3 panels with H1 panel



12	14
	
4pcs	4pcs

STEP 22-2: Following below illustration:

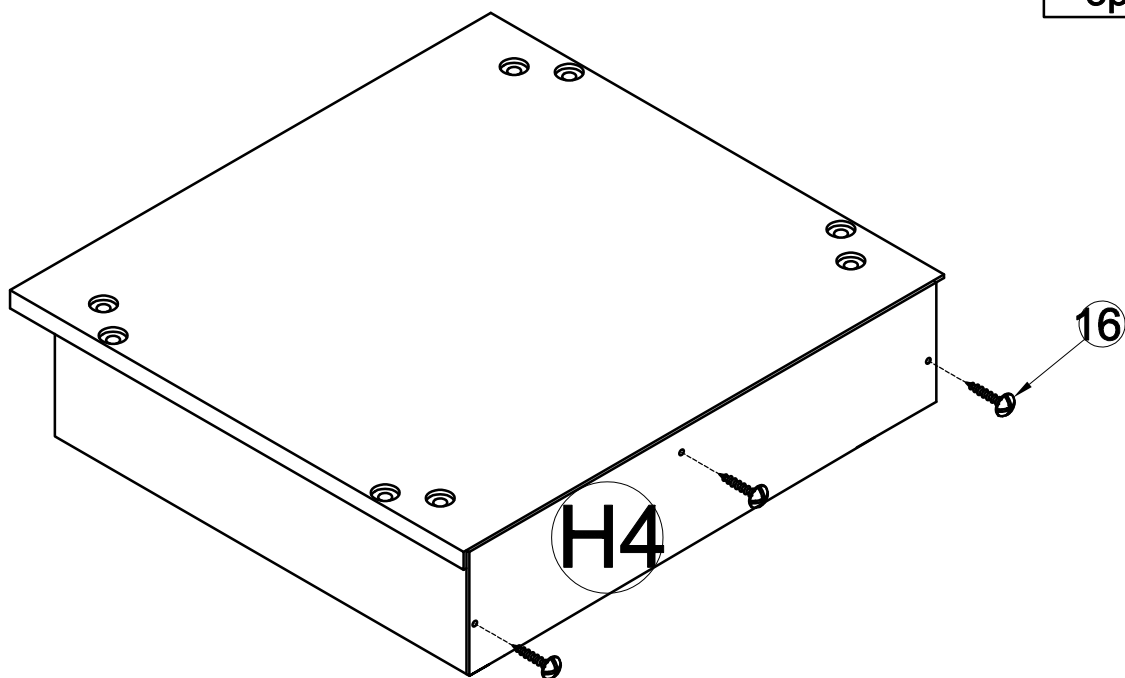-Using hardward #16 to connect Frame(completed on step 22-1) with Back panel H4



16

3pcs

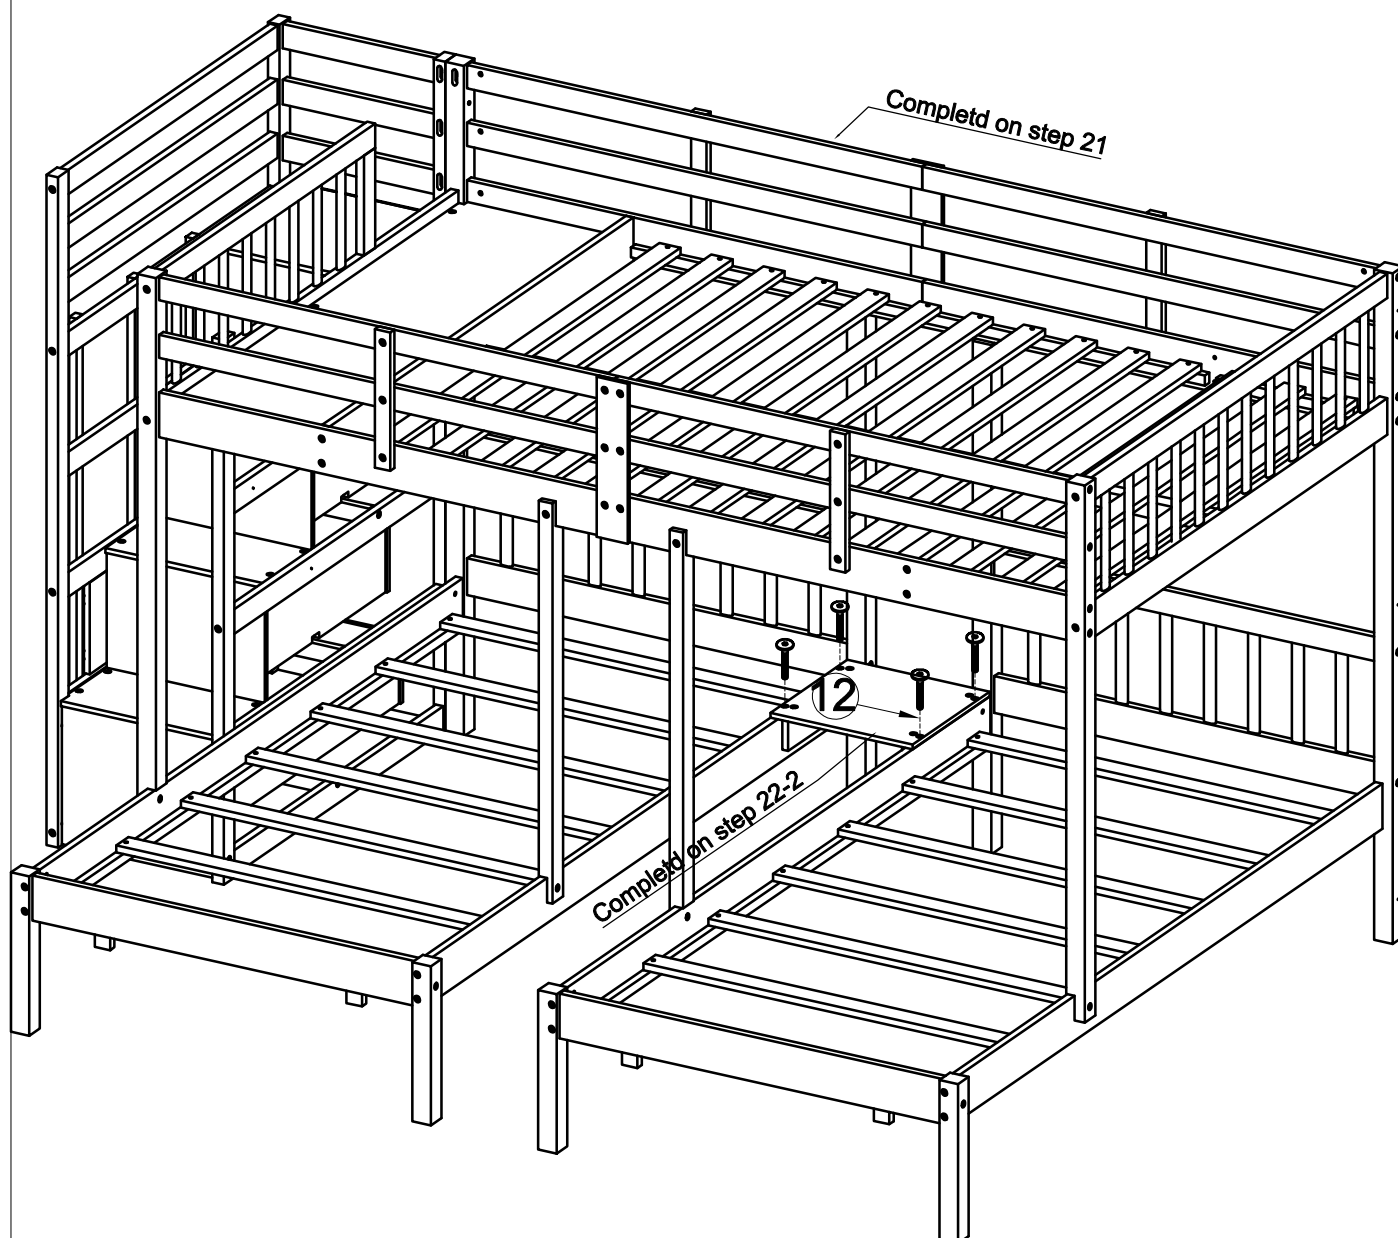
STEP 23: Following below illustration:

-Using hardware #12 connect Frame (completed on step 21) with Frame (completed on step 22-2)


12



4pcs




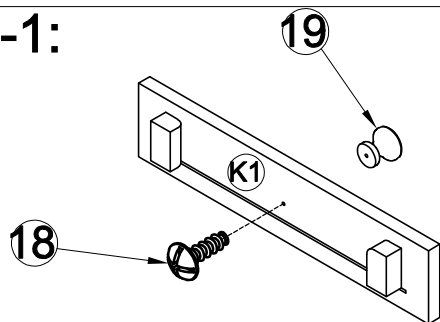STEP 24-1:




19	18
1pc	1pc

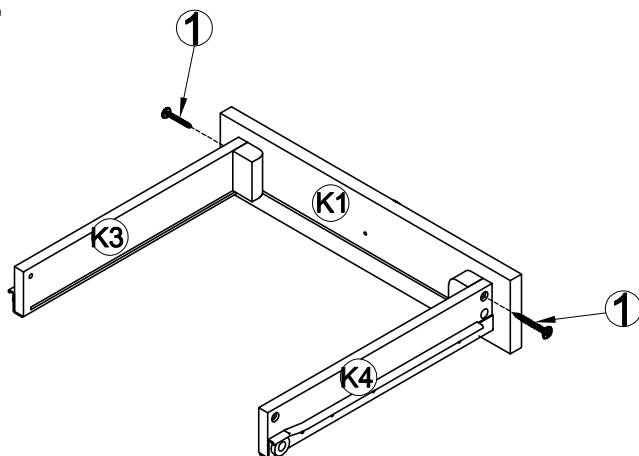STEP 24-2:





1	
2pcs	

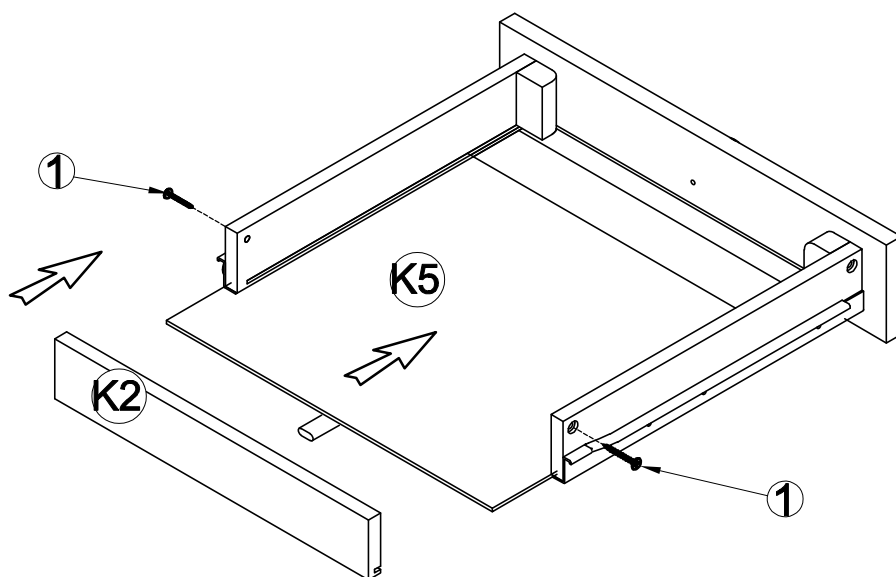STEP 24-3:





1	
2pcs	

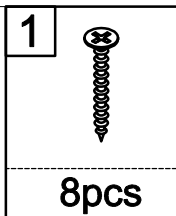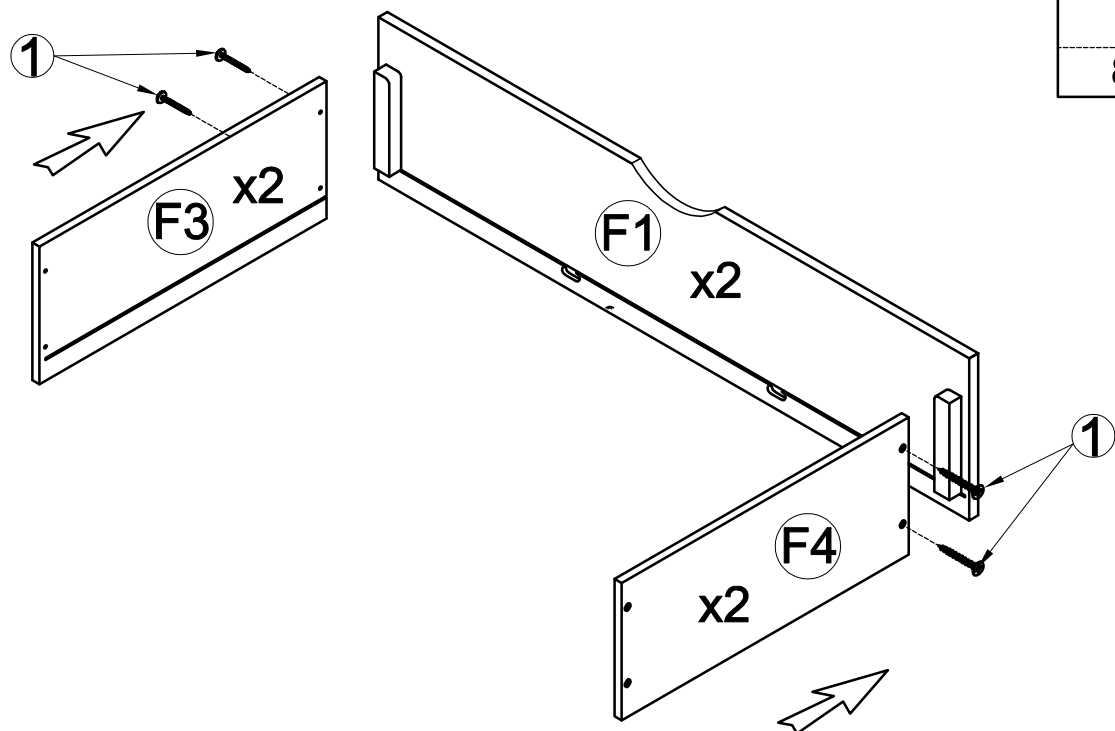
STEP 25-1:



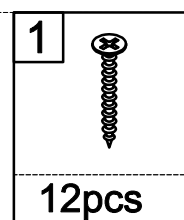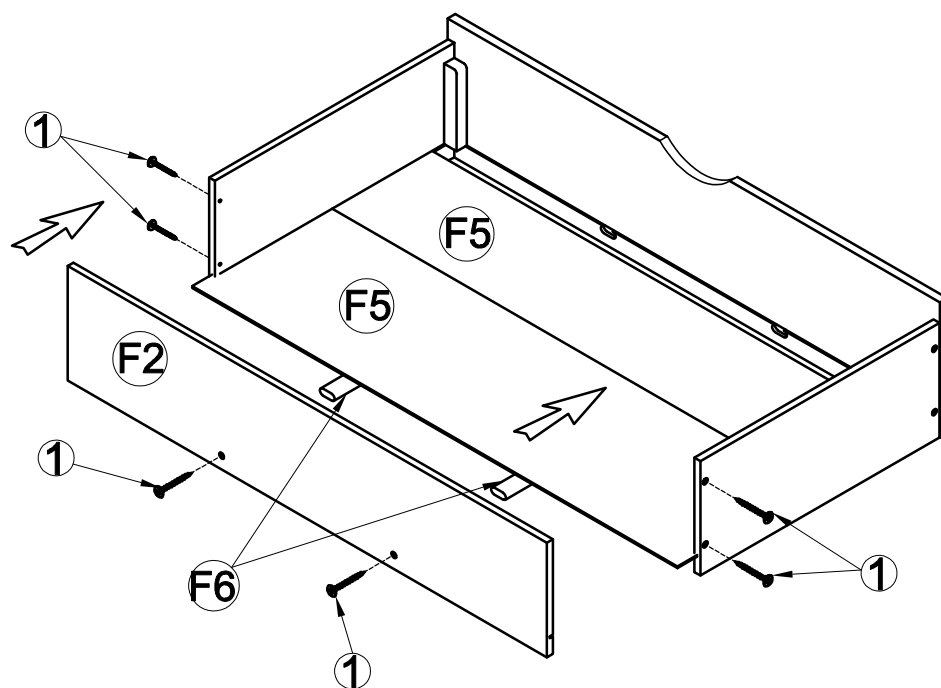
STEP 25-2:



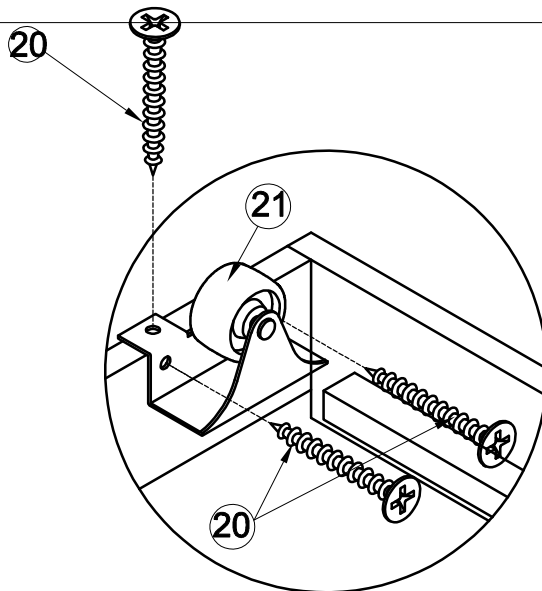
STEP 25-3




21	20
2x4pcs	2x12pcs

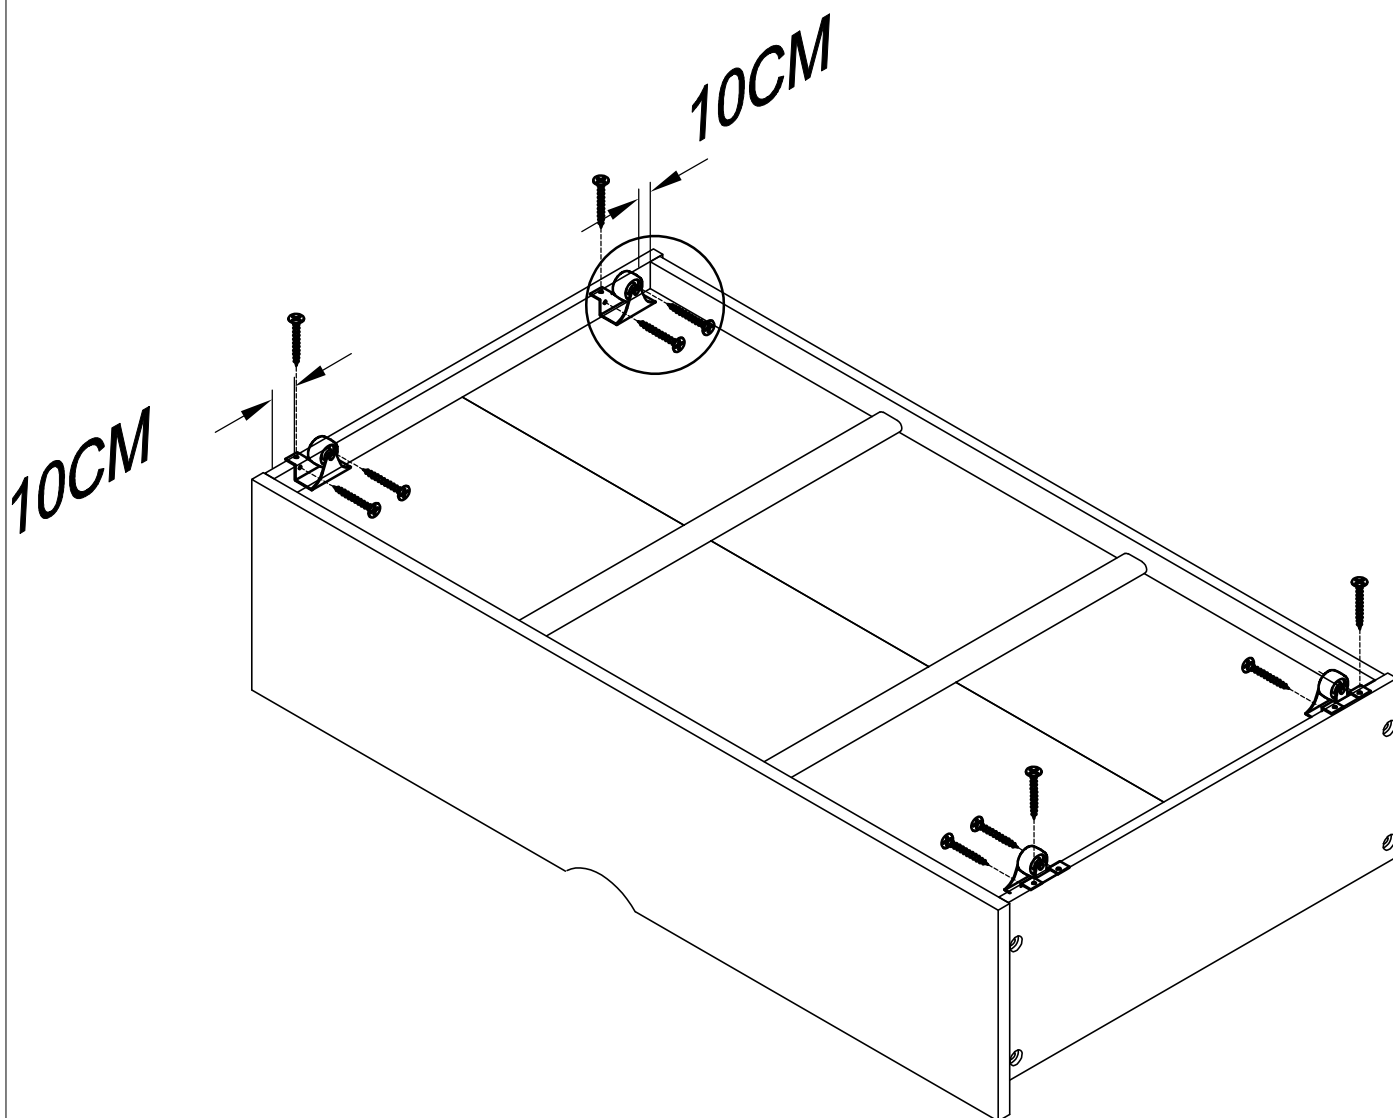

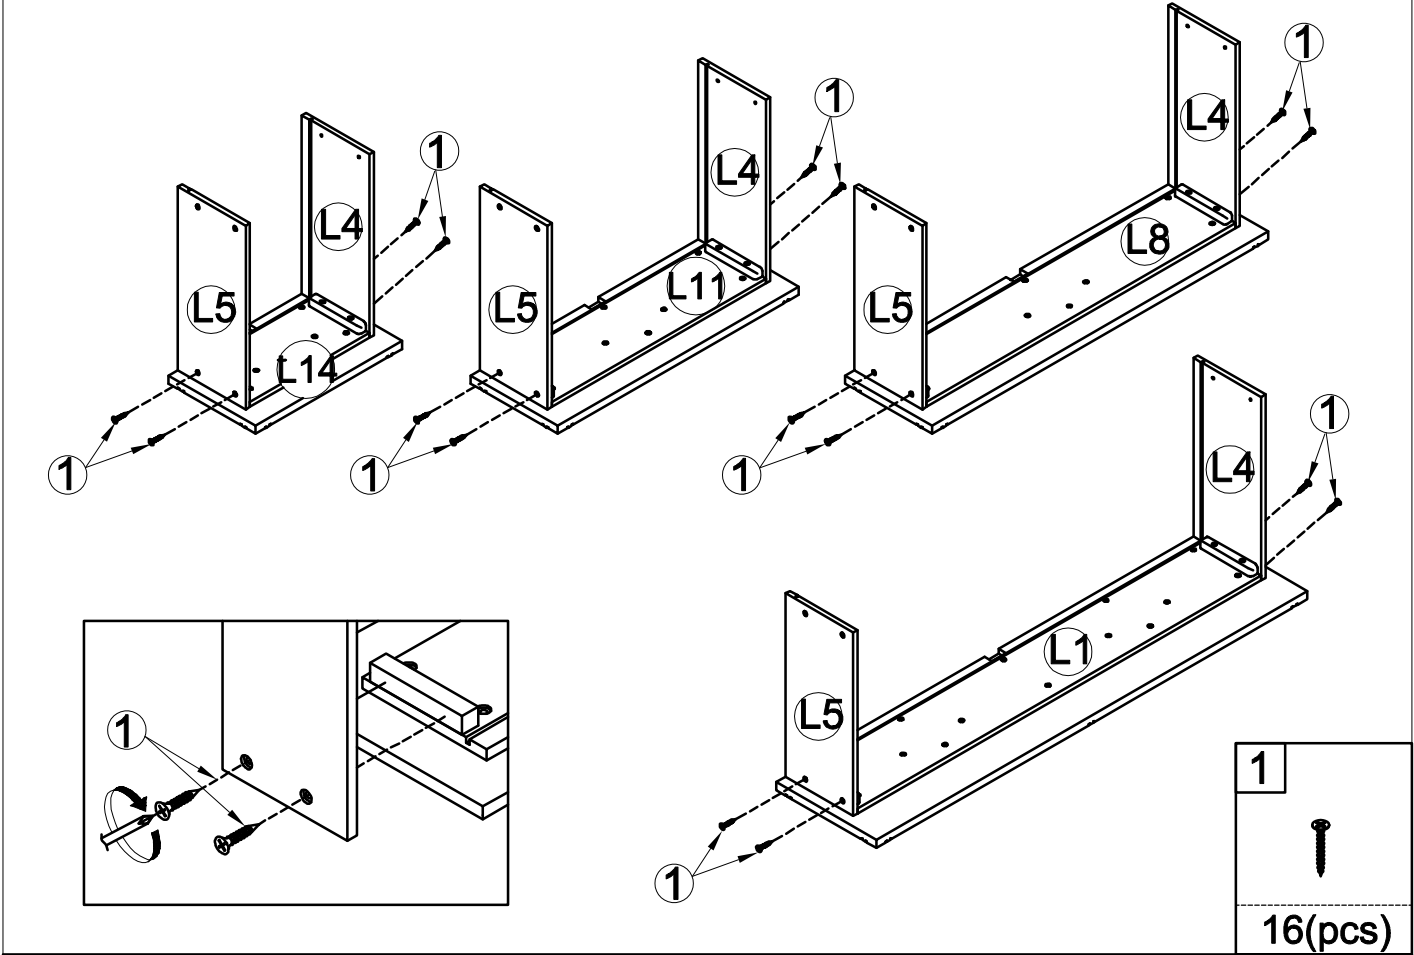
STEP 26-1:ASSEMBLY DRAWER



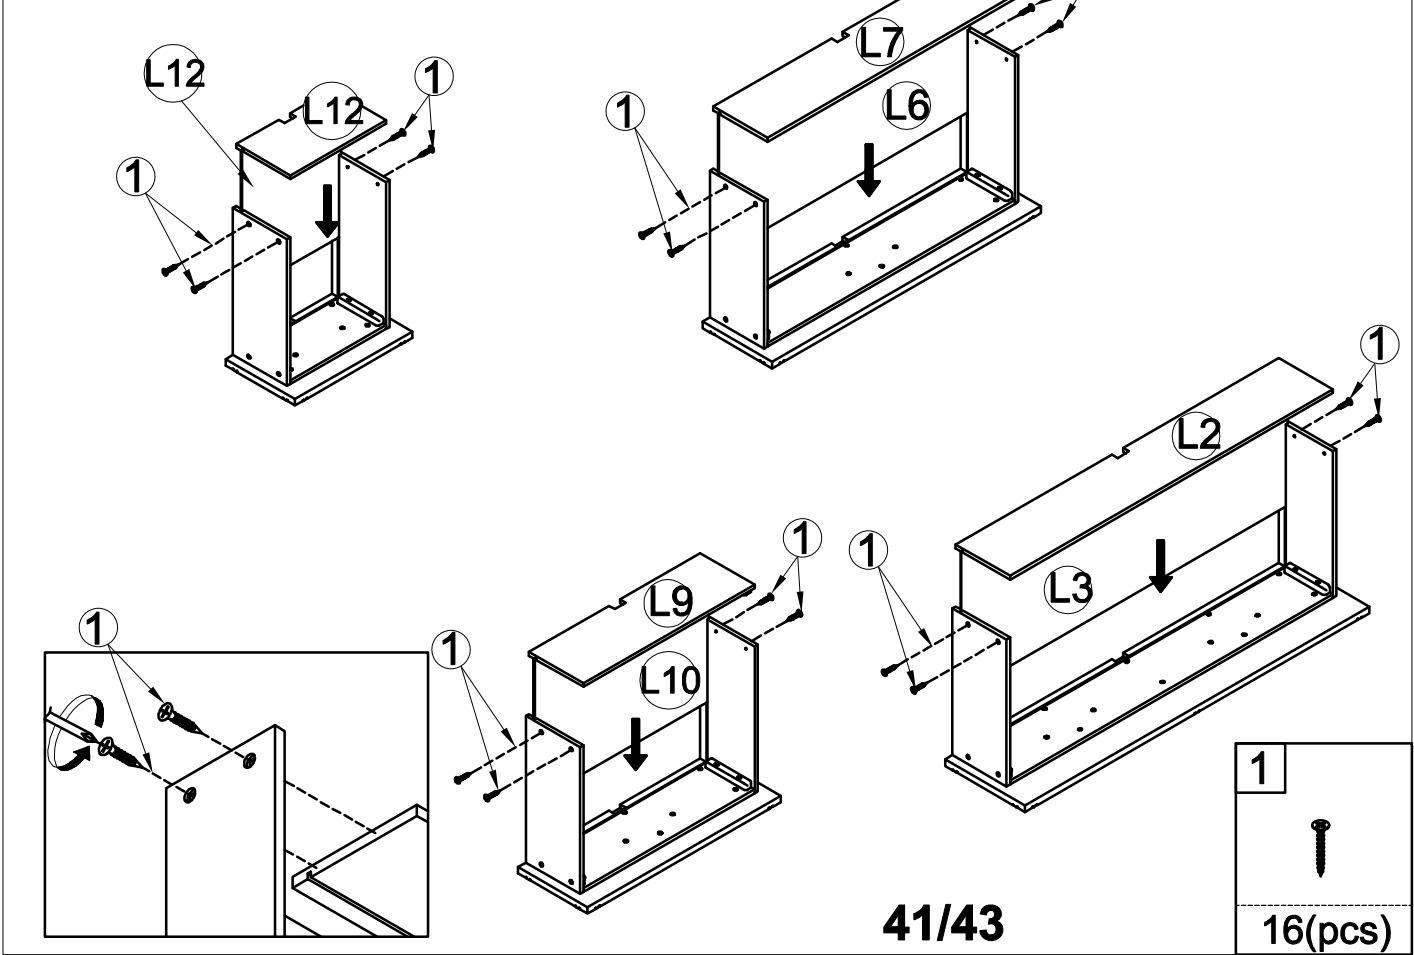
STEP 26-2:ASSEMBLY DRAWER



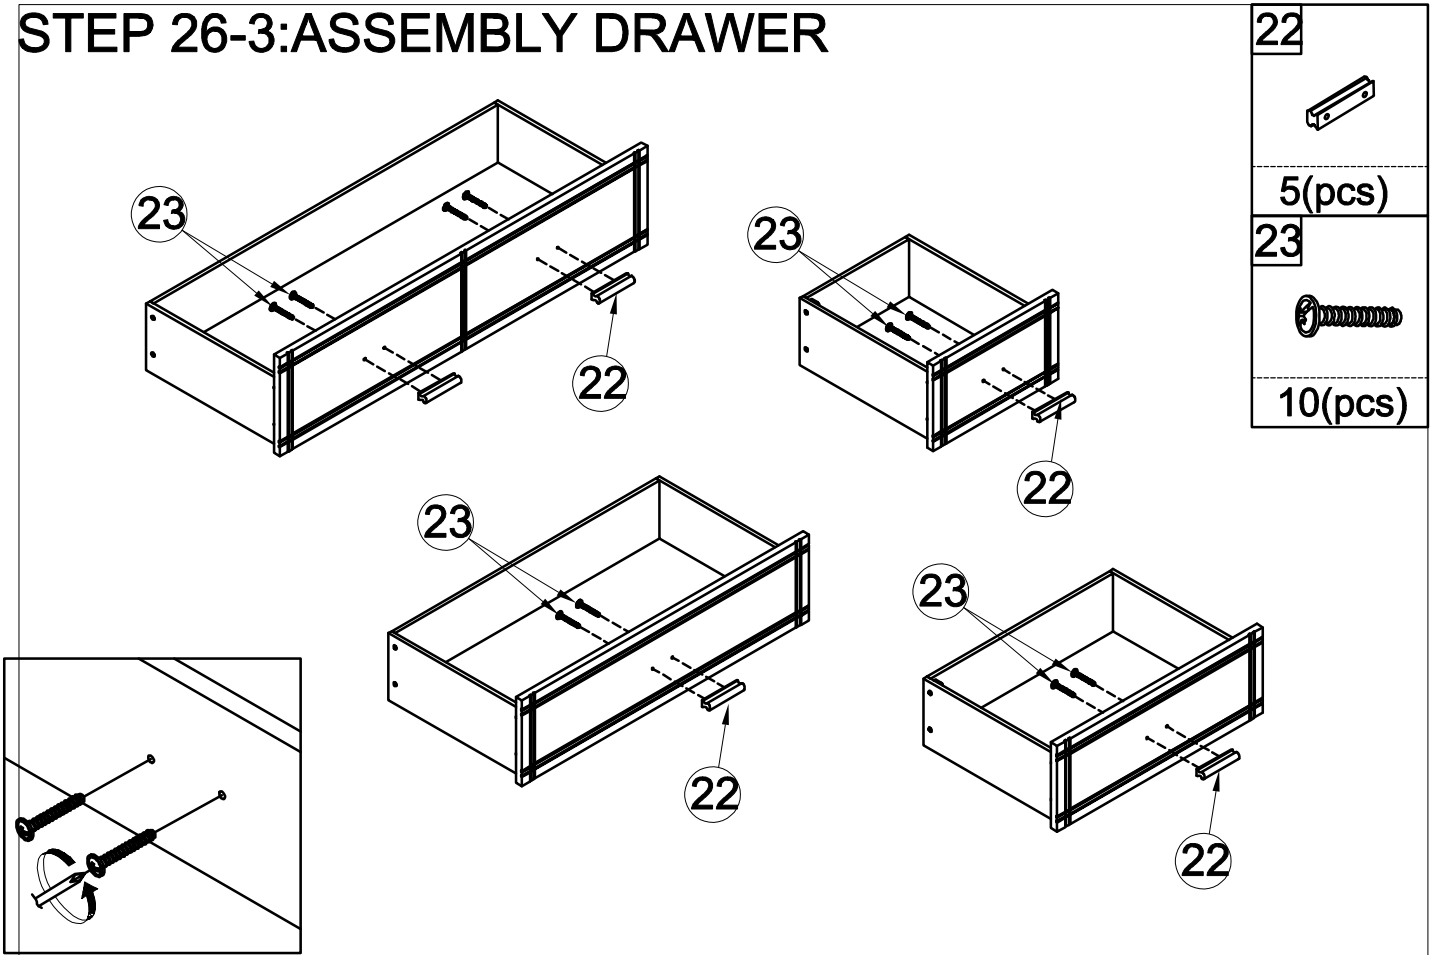STEP 26-3:ASSEMBLY DRAWER



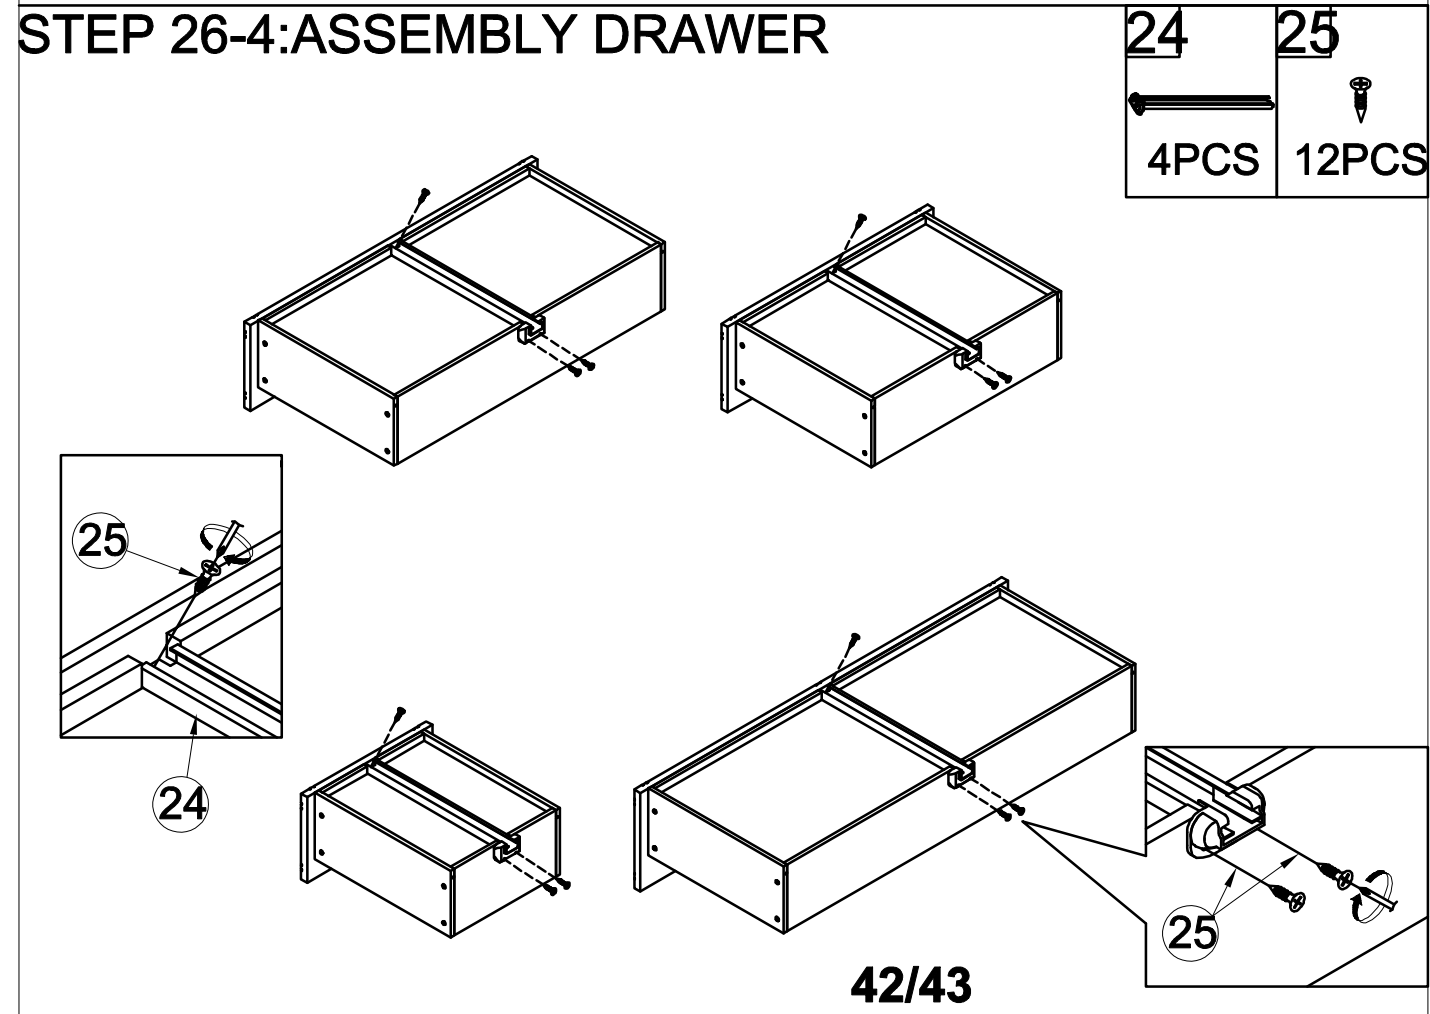STEP 26-4:ASSEMBLY DRAWER



STEP 27: CONGRATULATION. YOU HAVE COMPLETED THE BED

Push 7 drawer into it position

