


Sunroom

Instruction manual

size:422Lx292Wx222/312Hcm

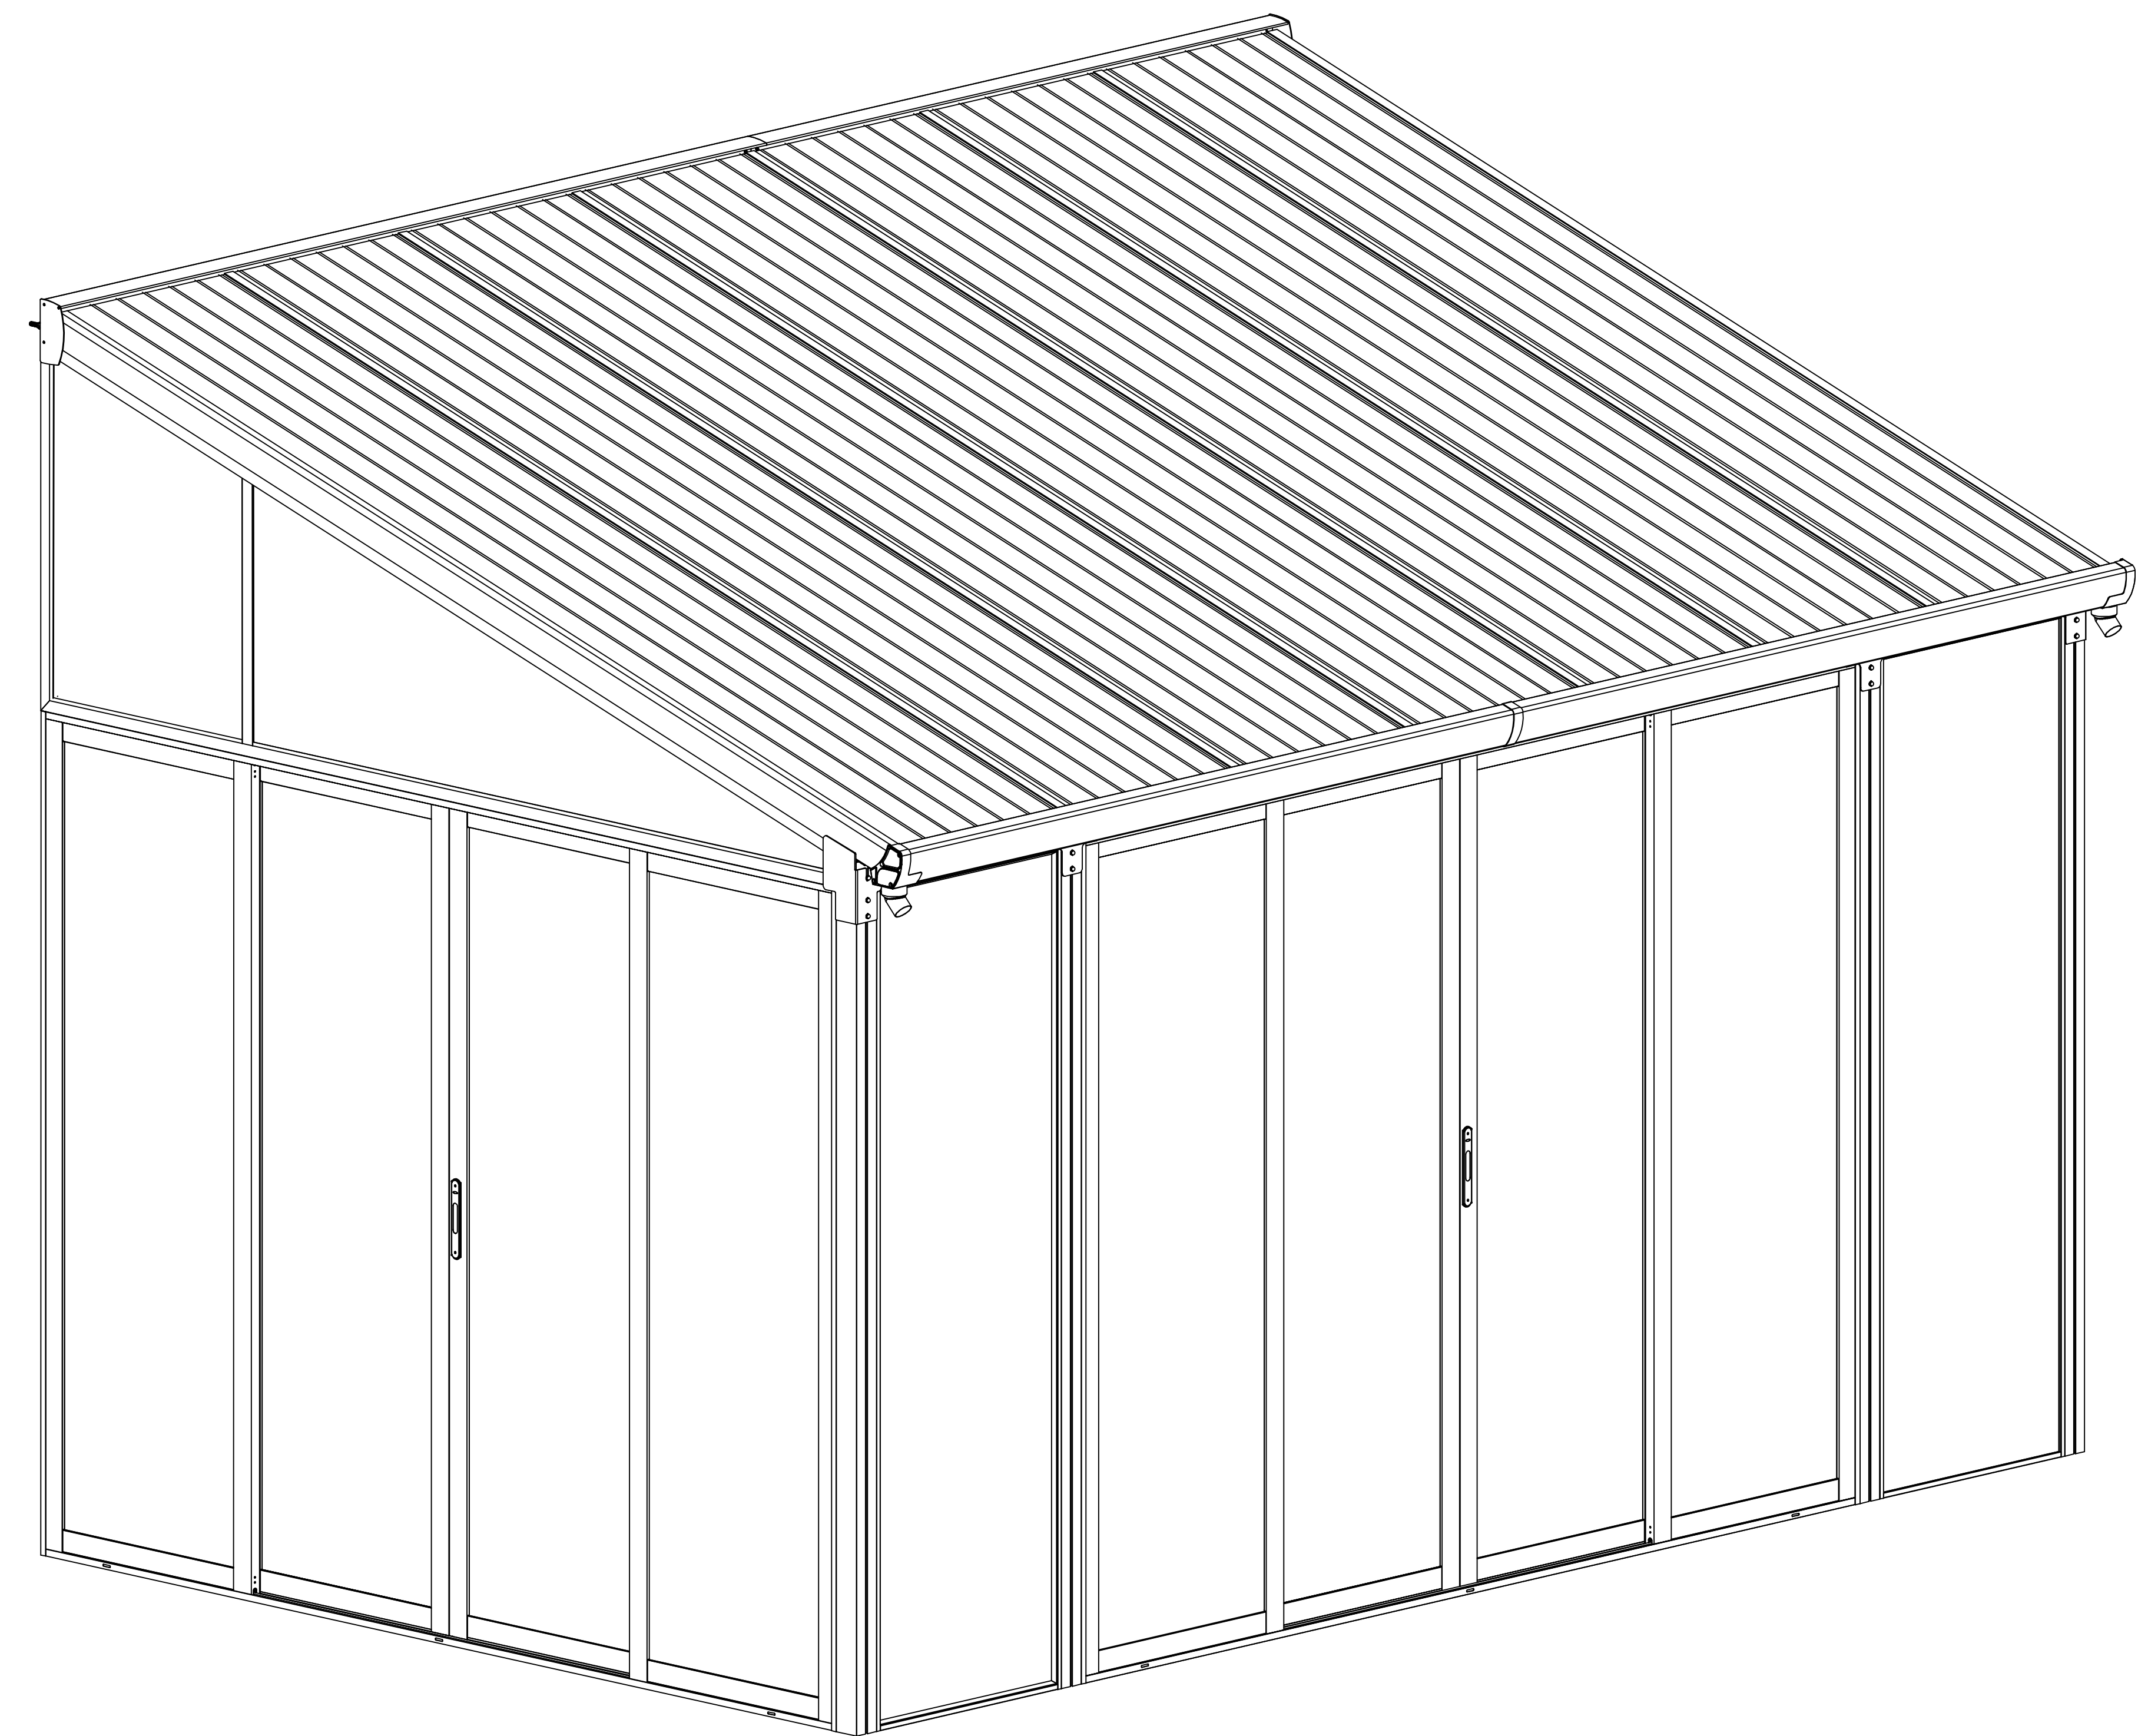

WG-QA7

IMPORTANT

You must read this instruction carefully before you start to assemble this .Please ensure that you find all parts in the carton box in the correct type and quantity as mentioned in the list illustrated in every page accordingly.

Please carry out the steps in order according to the instruction.

Do not tighten the steps in until completing the assembly of the polycarbonate panels.

Keep this instruction in a safe place for future reference

SAFETY ADVICE

We strongly recommend the use of work gloves during assembly.

Do not attempt to assemble the Sunroom in windy or wet conditions,

Do not touch overhead power cables with the aluminum profiles.

Always wear shoes and safety goggles when working with extruded aluminum.

Dispose of all plastic bags safely-keep them out of reach of small children.

The Sunroom must be positioned and fixed on a flat level surface.

Do not lean against or push the Sunroom during construction.

Keep children away from the assemble area.

Do not position your Sunroom in an area exposed to excessive wind.

Do not attempt to assemble this Sunroom if you are tired, have taken drugs or alcohol or if you are prone to dizzy spells.

If using a step ladder or power tools, pls follow the manufacturer's safety advice.

Hot items such as recently used grills, blowtorches etc.must not be stored in the Sunroom.

Ensure there are no hidden pipes or cables in the ground before inserting the pegs.

GENERAL ADVICE

This is a multi-part assembly, pls plan your time carefully.

Selecting a site-choose a sunny level position away from overhanging trees.

If you are fixing your Sunroom directly to a solid concrete foundation, pls use the predrilled holes in the metal base supplied.

The component parts should be checked and laid out close to hand.

Keep all small parts(screws etc)in a bowl so they do not get lost.

Keep roof clear from snow and leaves.

CARE & MAINTENANCE

When your Sunroom needs cleaning, use a mild detergent solution and risen with cool clean water.

Do NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

TOOLS & EQUIPMENT REQUIRED


Protective Equipment:

- 1.Helmet
- 2.Glove
- 3.Long Sleeve Cotton Overalls
- 4.Emergency Medicine Cabinet
- 5.Eye Shield




Measure (metric):

- 1.The Tape (5 m)
- 2.Angle Square
- 3.Level Meter

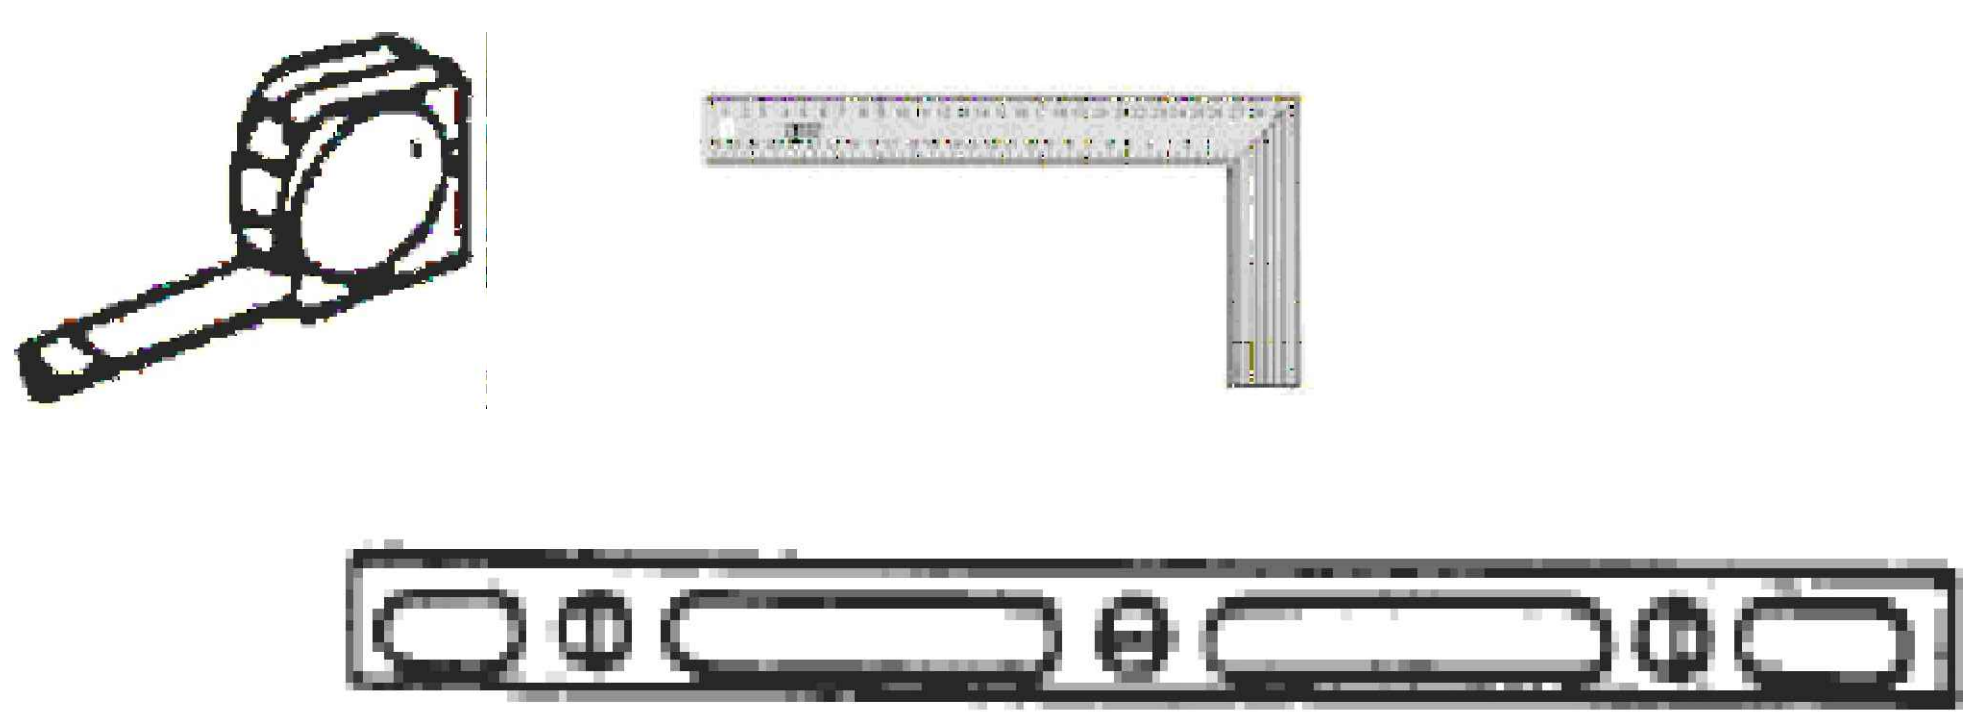

Installation Tool:

- 1.Triangle Stairs≈1.5m Height
- 2.Spanner 10mm (Ratchet Wrench is better)
- 3.Spanner 14mm (Install the expansion screw)
- 4.Hexagon wrench 5mm
- 5.Electric screwdriver+5mm Hexagon wrench (suggest)
- 6.Wooden Mallet
- 7.Marking Pen
- 8.Silicon
- 9.Percussion bit(8mm and 10mm)
- 10.Knife
- 11.Phillips screwdriver

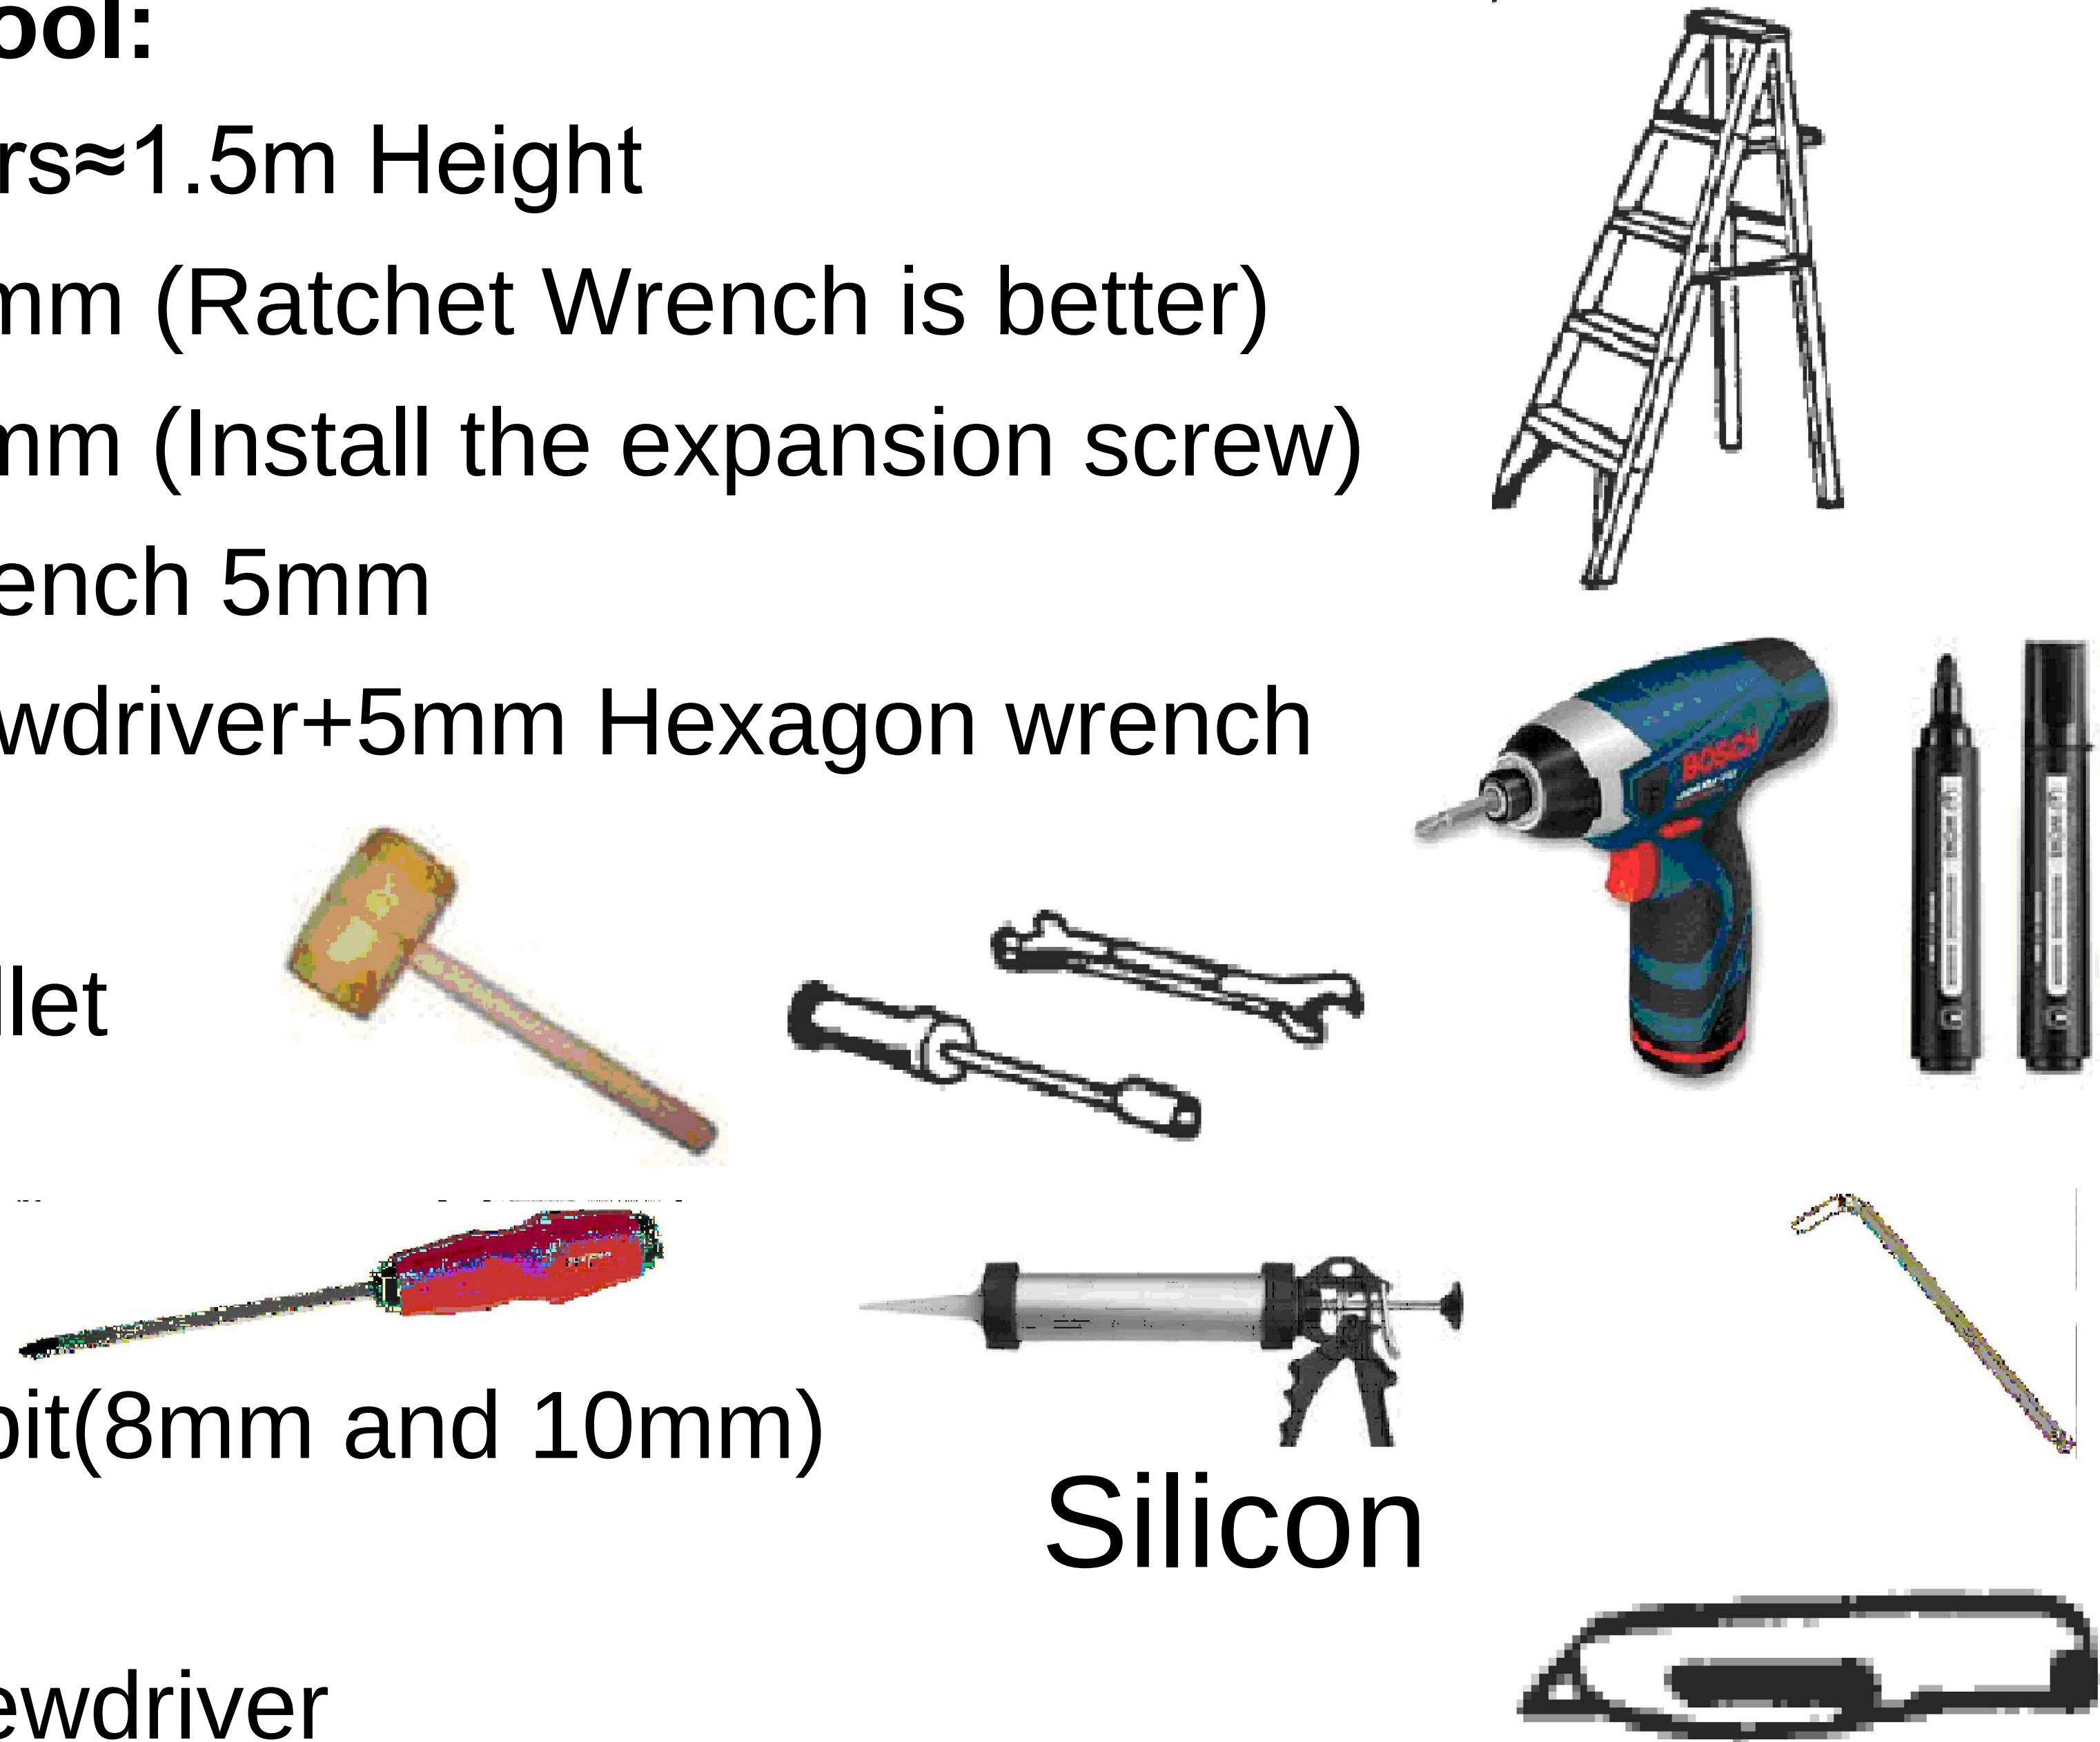


PRODUCT SIZE








Make sure a good installation location









OTHER CAUTIONS






- 1. 3 people required, one is for measuring & taking marks to ensure the installation dimension ,the second person is responsible for the installation and the last one do as assistant and assure the safety.
- 2. Firstly, make sure the sunroom is strong enough for installation.
- 3. High-power electric tools are required, ensure the normal work of them and highly pay attention to electric safety.
- 4. Be careful when using the kind of blunt tools, like hammer.
- 5. Wearing long sleeve cotton overalls,gloves and helmet during installation and wear safety glasses when using power tools .
- 6.Don't look up when Working in high position, or the drop screws may hurt your eyes and suffocation causing accidentally when falling into your mouth.
- 7. No climbing, No standing on the sunroom to avoid falling down.
- 8. If injuries immediately, using the first-aid kit to stop bleeding, bind up, In case of emergency, taken immediately to a nearby medical institutions

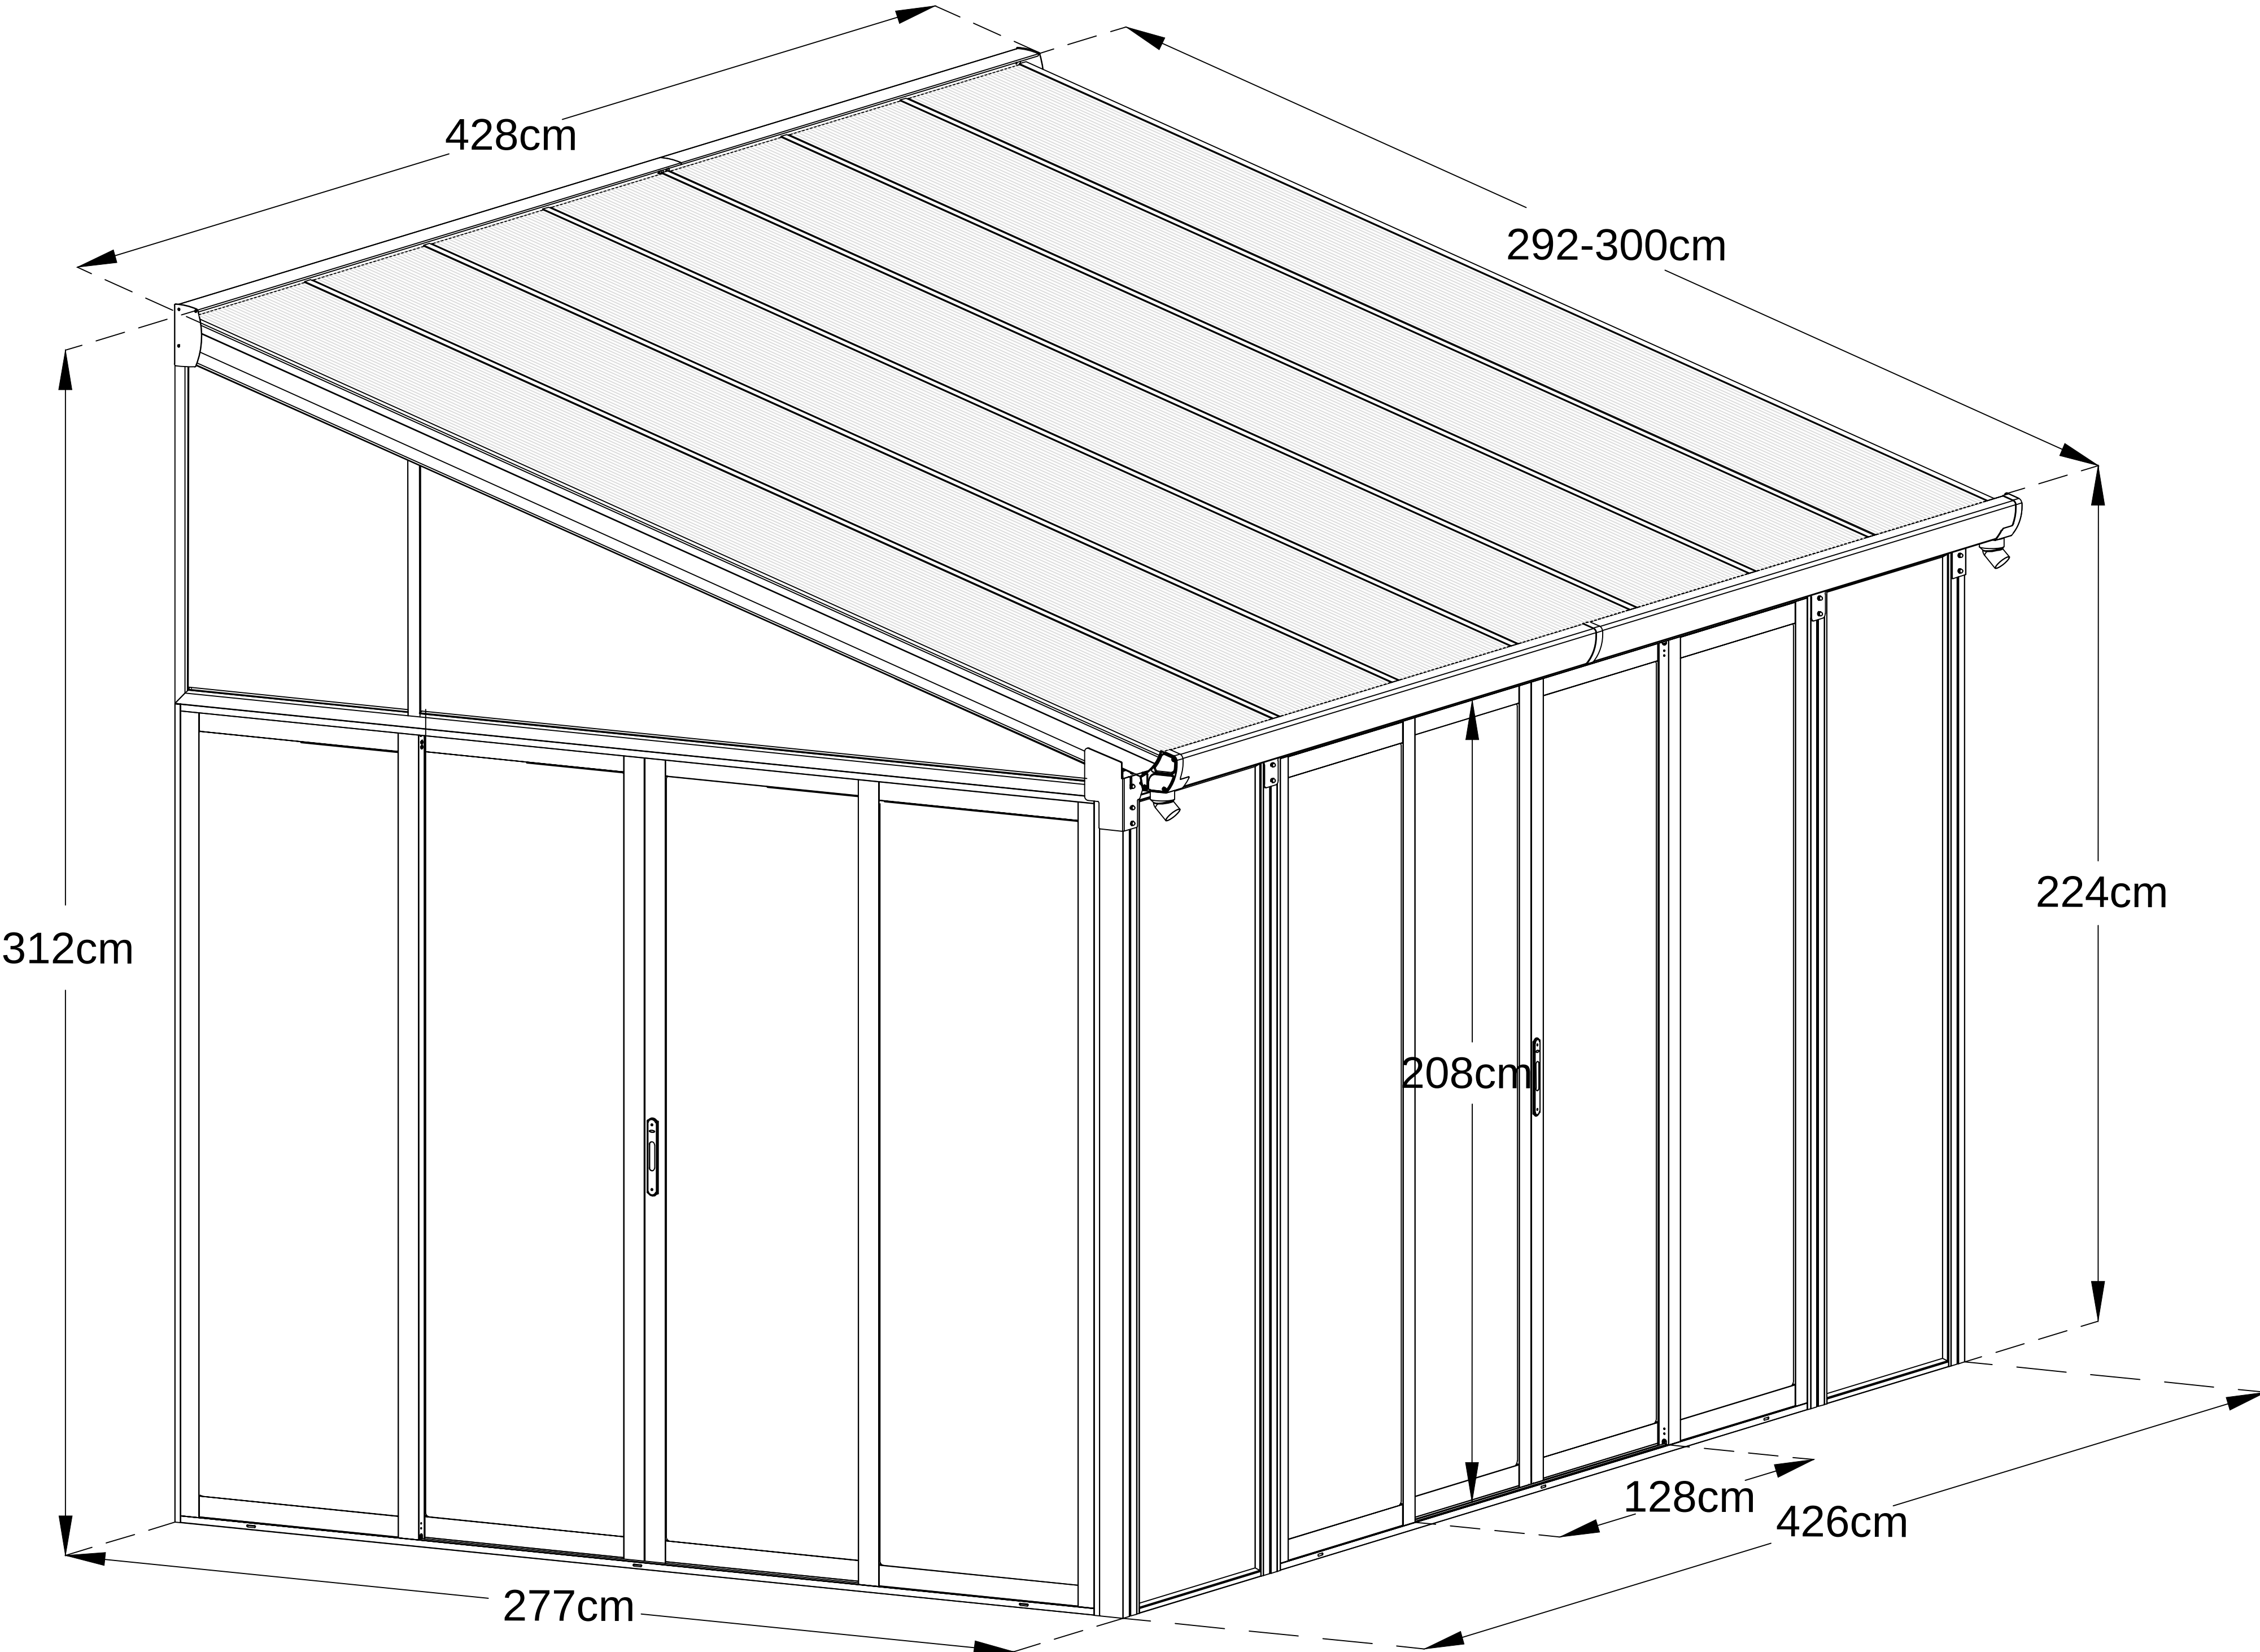









Contents



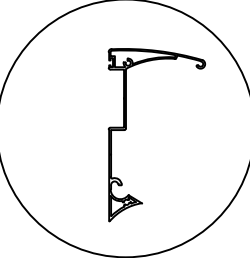
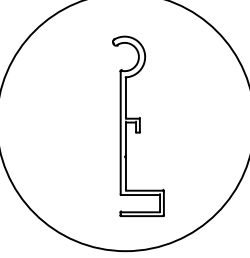
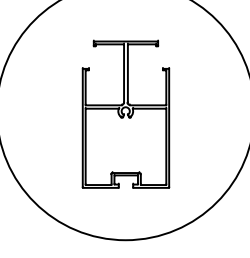
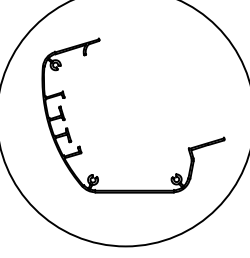
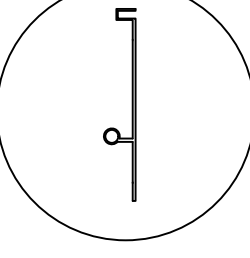
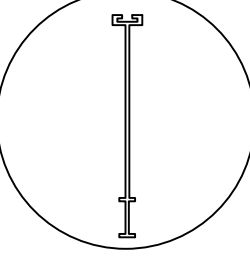
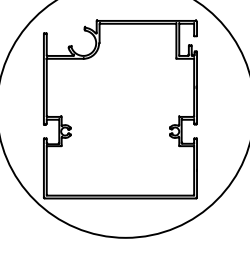
Item	Qty	MM
	1L 1 PCS	2448
	1R 1 PCS	1806
	2L 1 PCS	1806
	2R 1 PCS	2448
	3 6 PCS	3000
	4 2 PCS	3000
	12L 1 PCS	2125
	12R 1 PCS	2125
	13L 1 PCS	2126
	13R 1 PCS	2126
	14 7 PCS	562
	15L 1 PCS	745
	15R 1 PCS	745

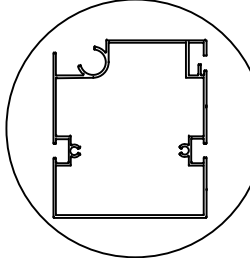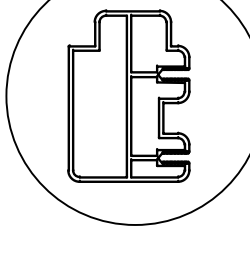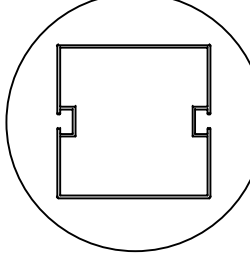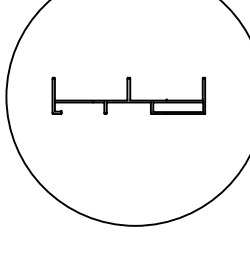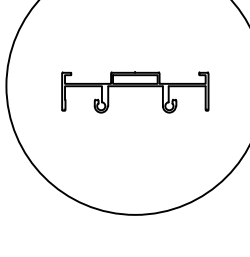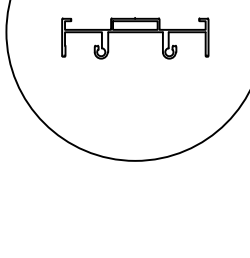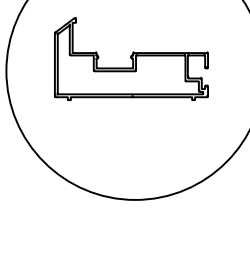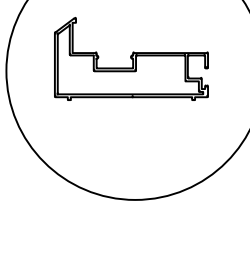
Item	Qty	MM
	16 1 PCS	2764
	17 2 PCS	300
	18 4 PCS	2100
	21 6 PCS	2100
	22 3 PCS	2684
	23 3 PCS	2684
	24L 1 PCS	2696
	24R 1 PCS	2696
	25L 1 PCS	907
	25R 1 PCS	907

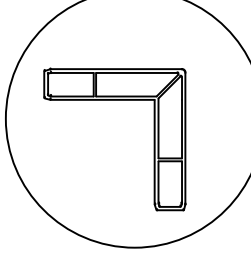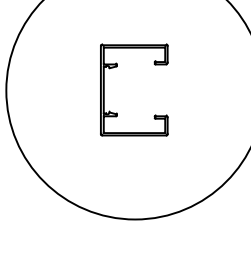
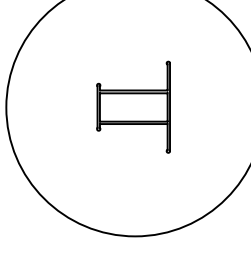
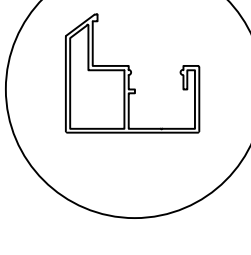
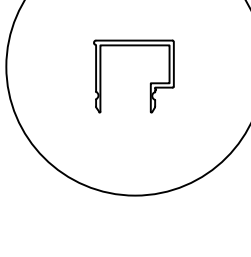
Item	Qty	MM
	26 2 PCS	19
	27L 1 PCS	682
	27R 1 PCS	682
	28L 1 PCS	682
	28R 1 PCS	682
	29 2 PCS	2736
	30 2 PCS	2038
	31 4 PCS	652
	32 2 PCS	1987
	33 2 PCS	858

Contents

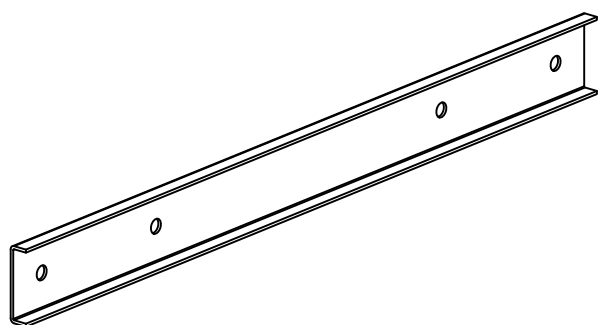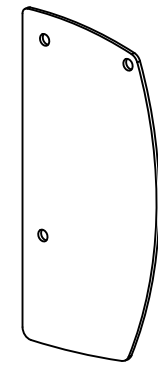
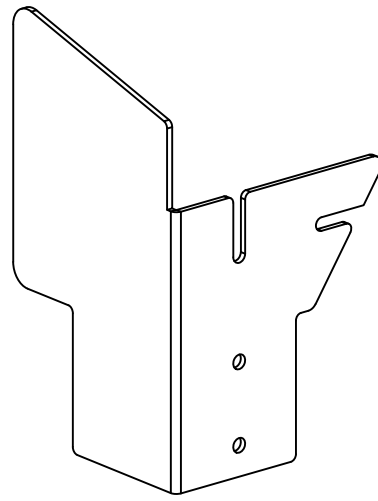
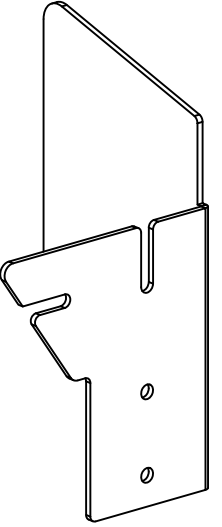
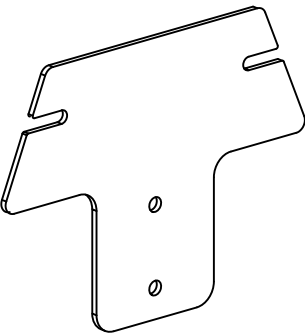
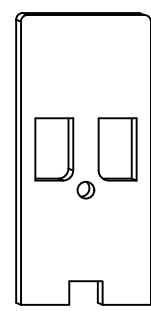
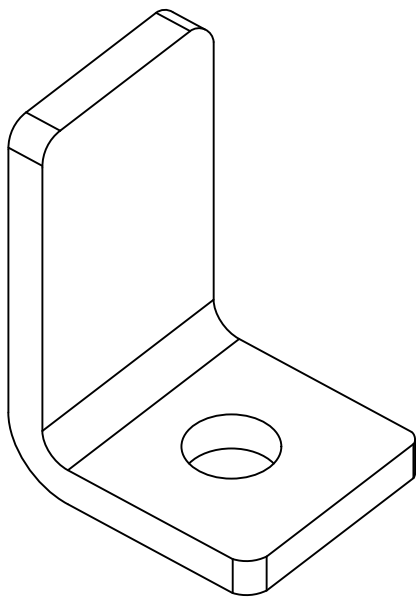
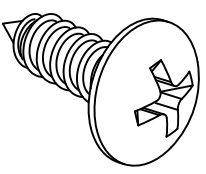
Item	Qty
34 2 PCS 	
35 2 PCS 	
36L 1 PCS 	
36R 1 PCS 	
37 4 PCS 	
38 8 PCS 	
39 12 PCS 	
F10 2 PCS  ST4.8X20	

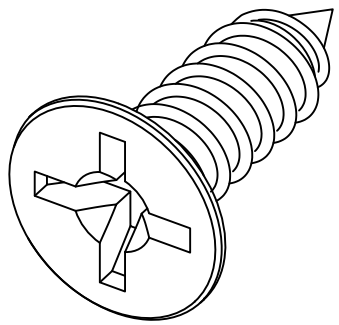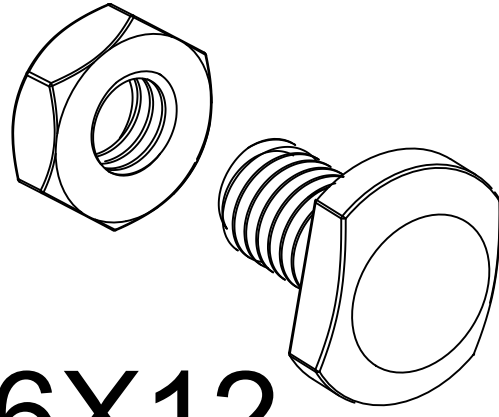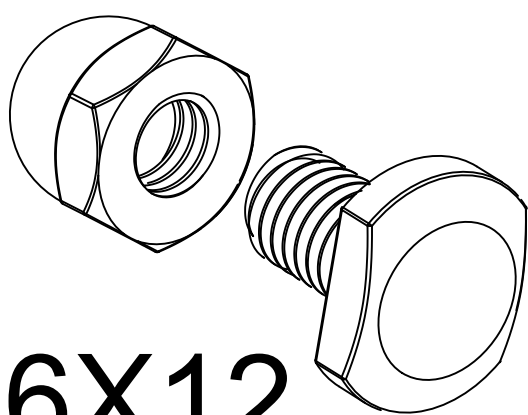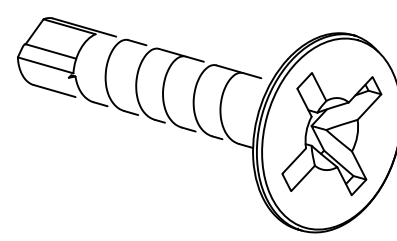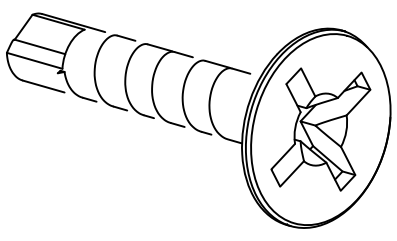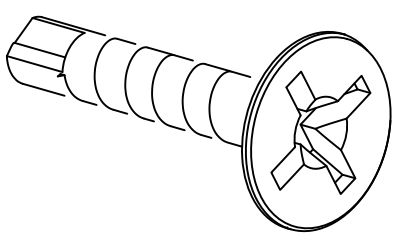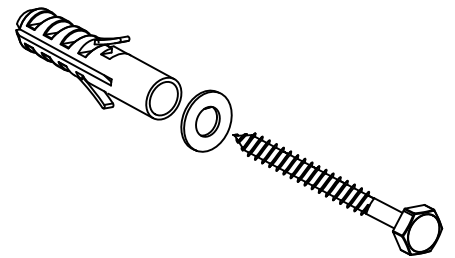
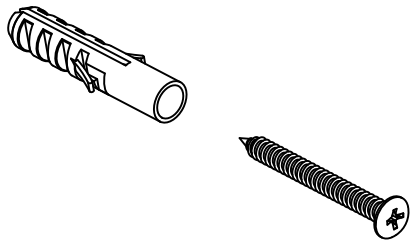
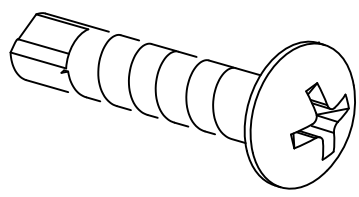
Item	Qty
F1 46 PCS  ST4.2X20	
F2 6 PCS  M6X12	
F3 32 PCS  M6X12	
F4 28 PCS  ST4.2X20	
F8 31 PCS  ST4.2X25	
F9 6 PCS  ST4.2X30	
F5 8PCS  ST6.3X60	
F6 29 PCS  ST6.3X60	
F7 8 PCS  ST6.2X16	

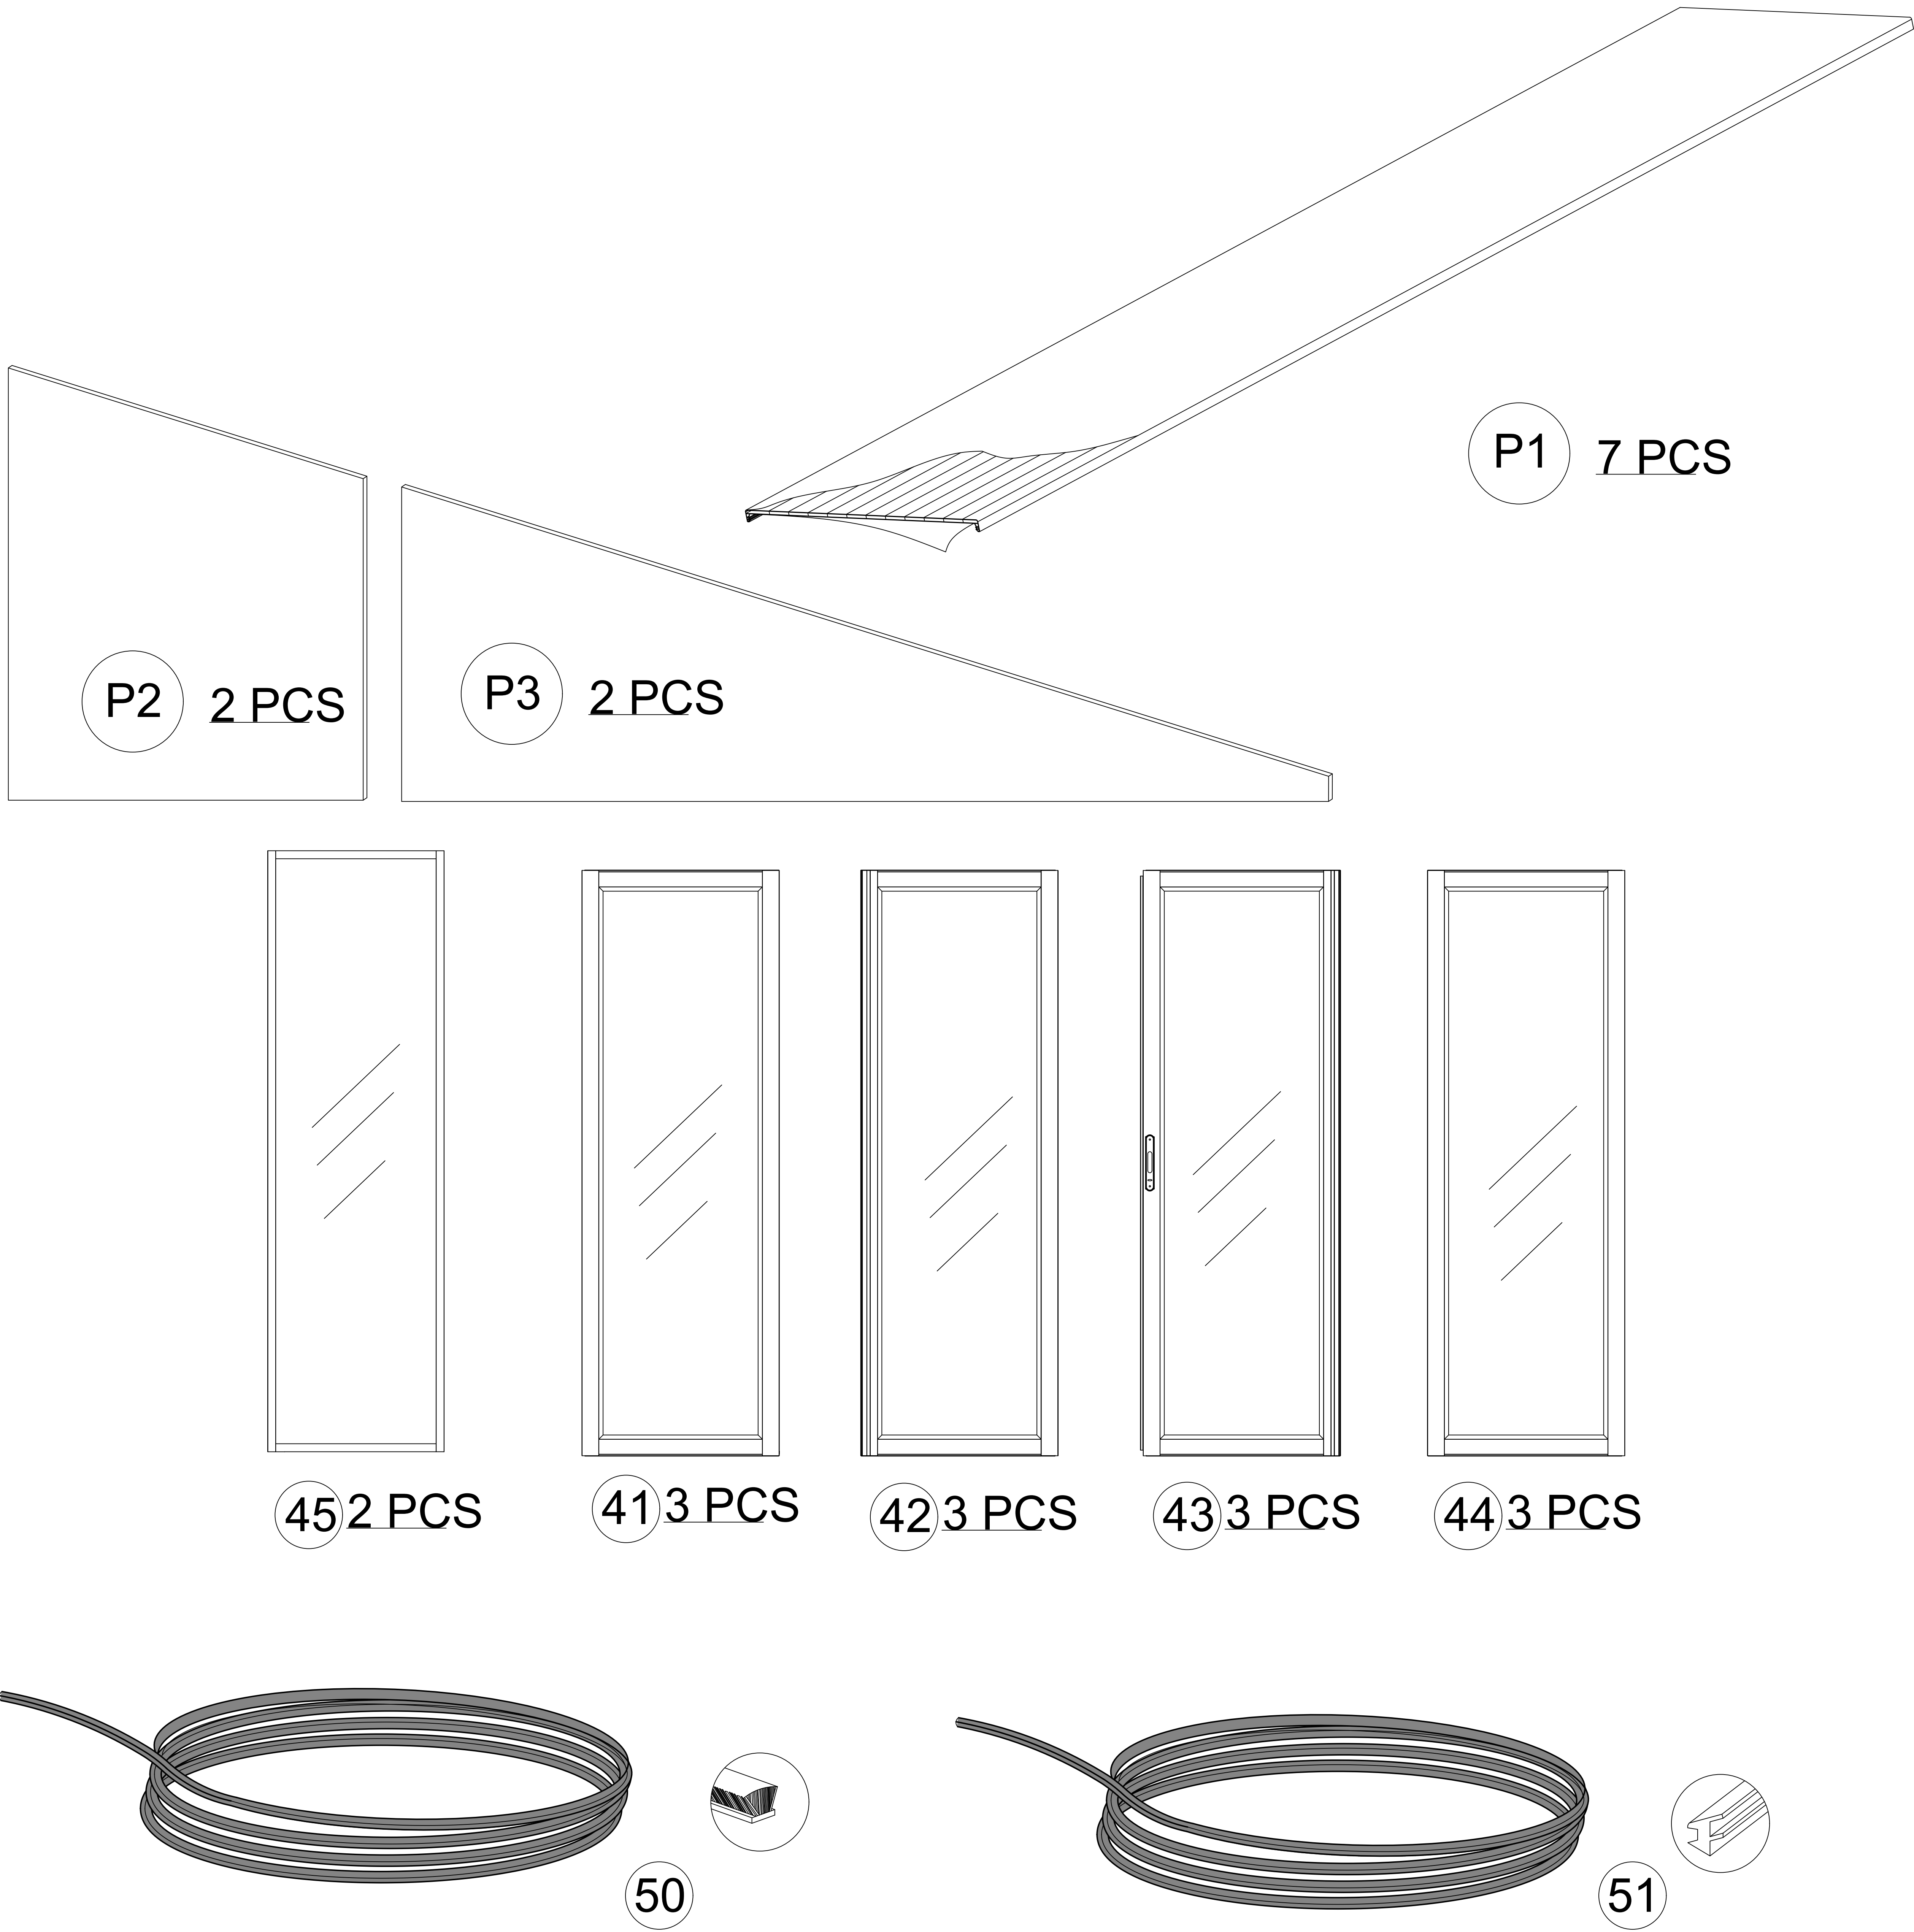

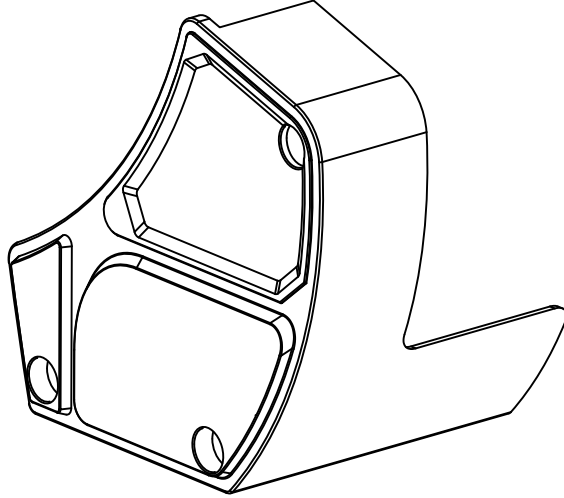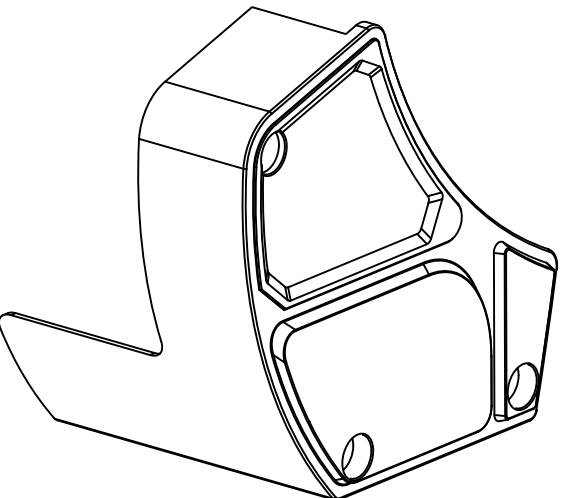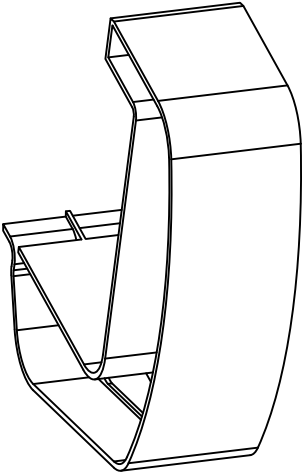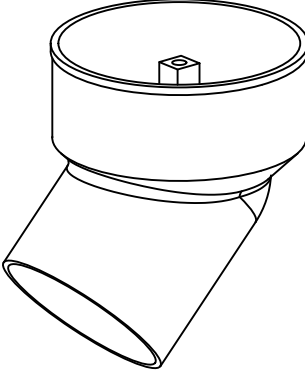
S1L 1 PCS 	S1R 1 PCS 	S2 1 PCS 	S3 2 PCS 
--	---	---	---


1



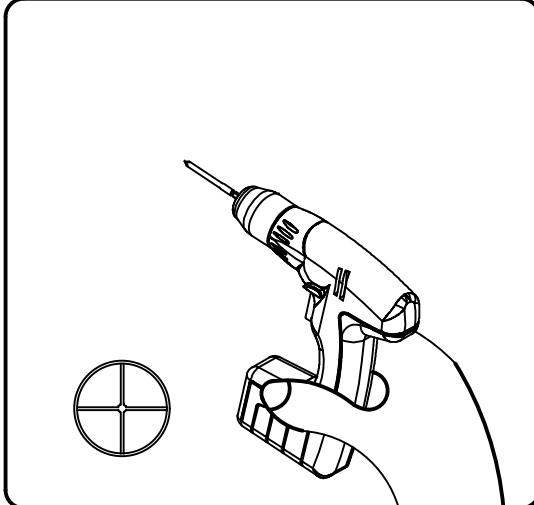
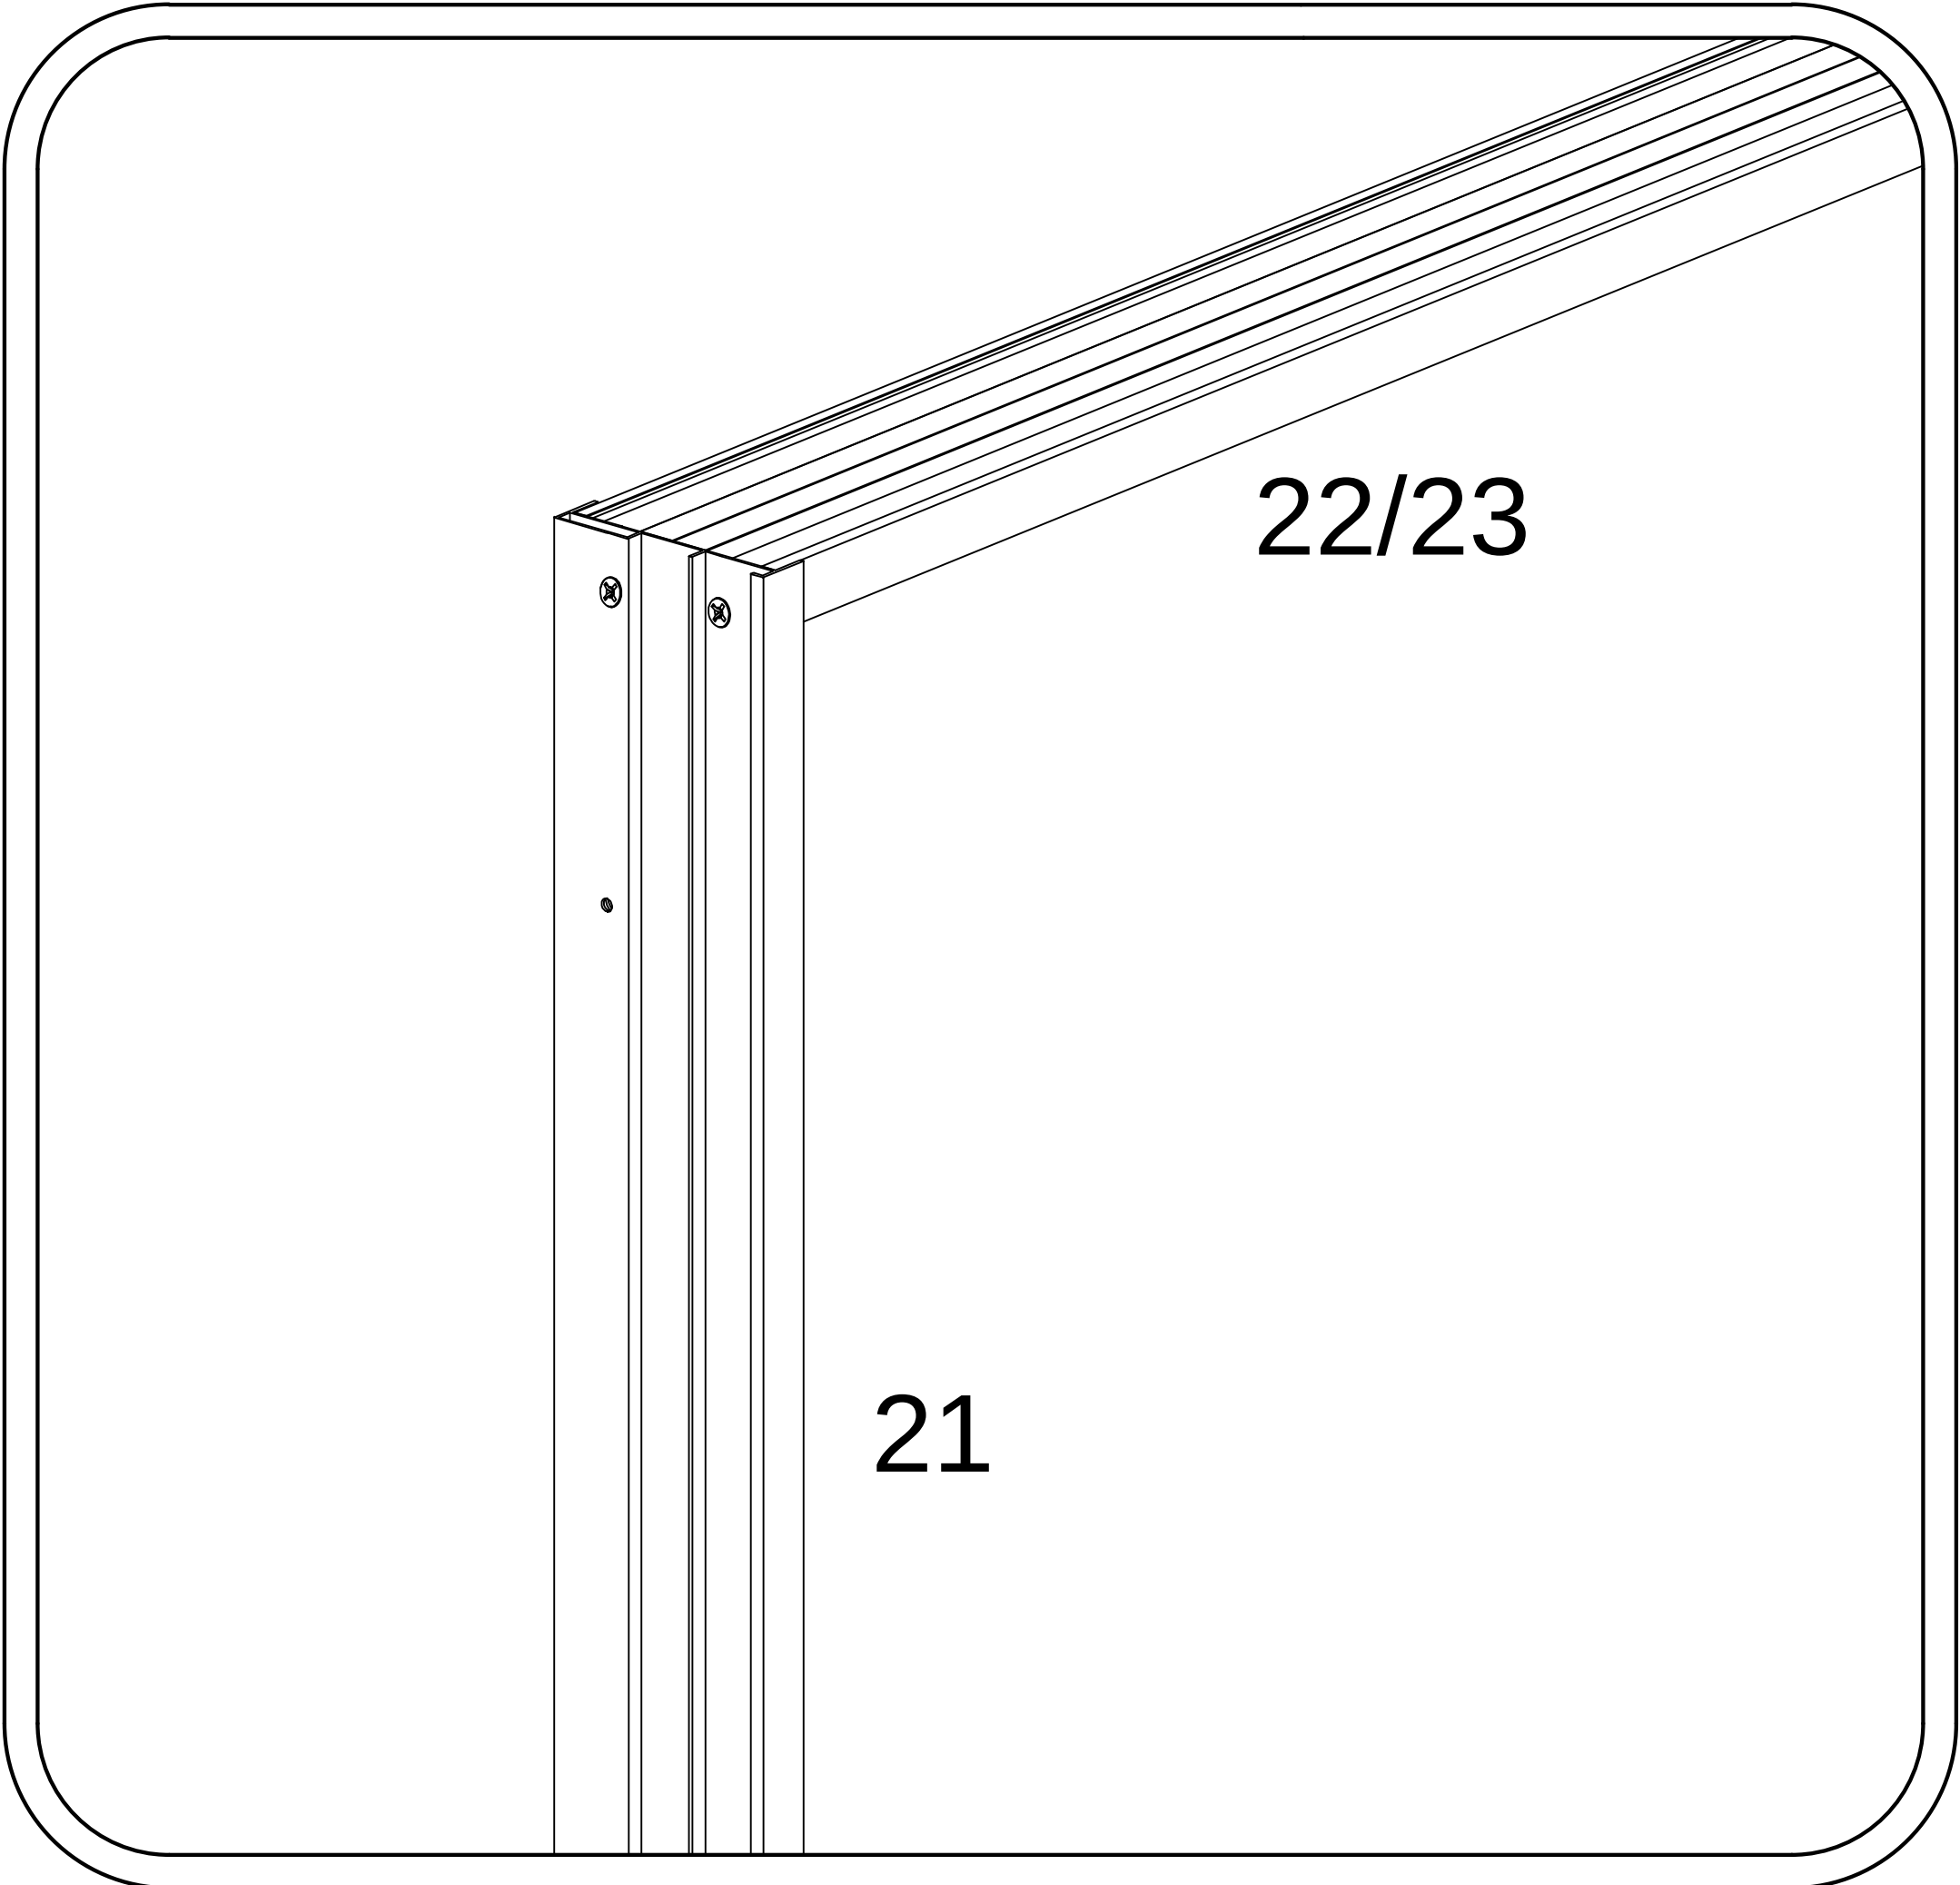
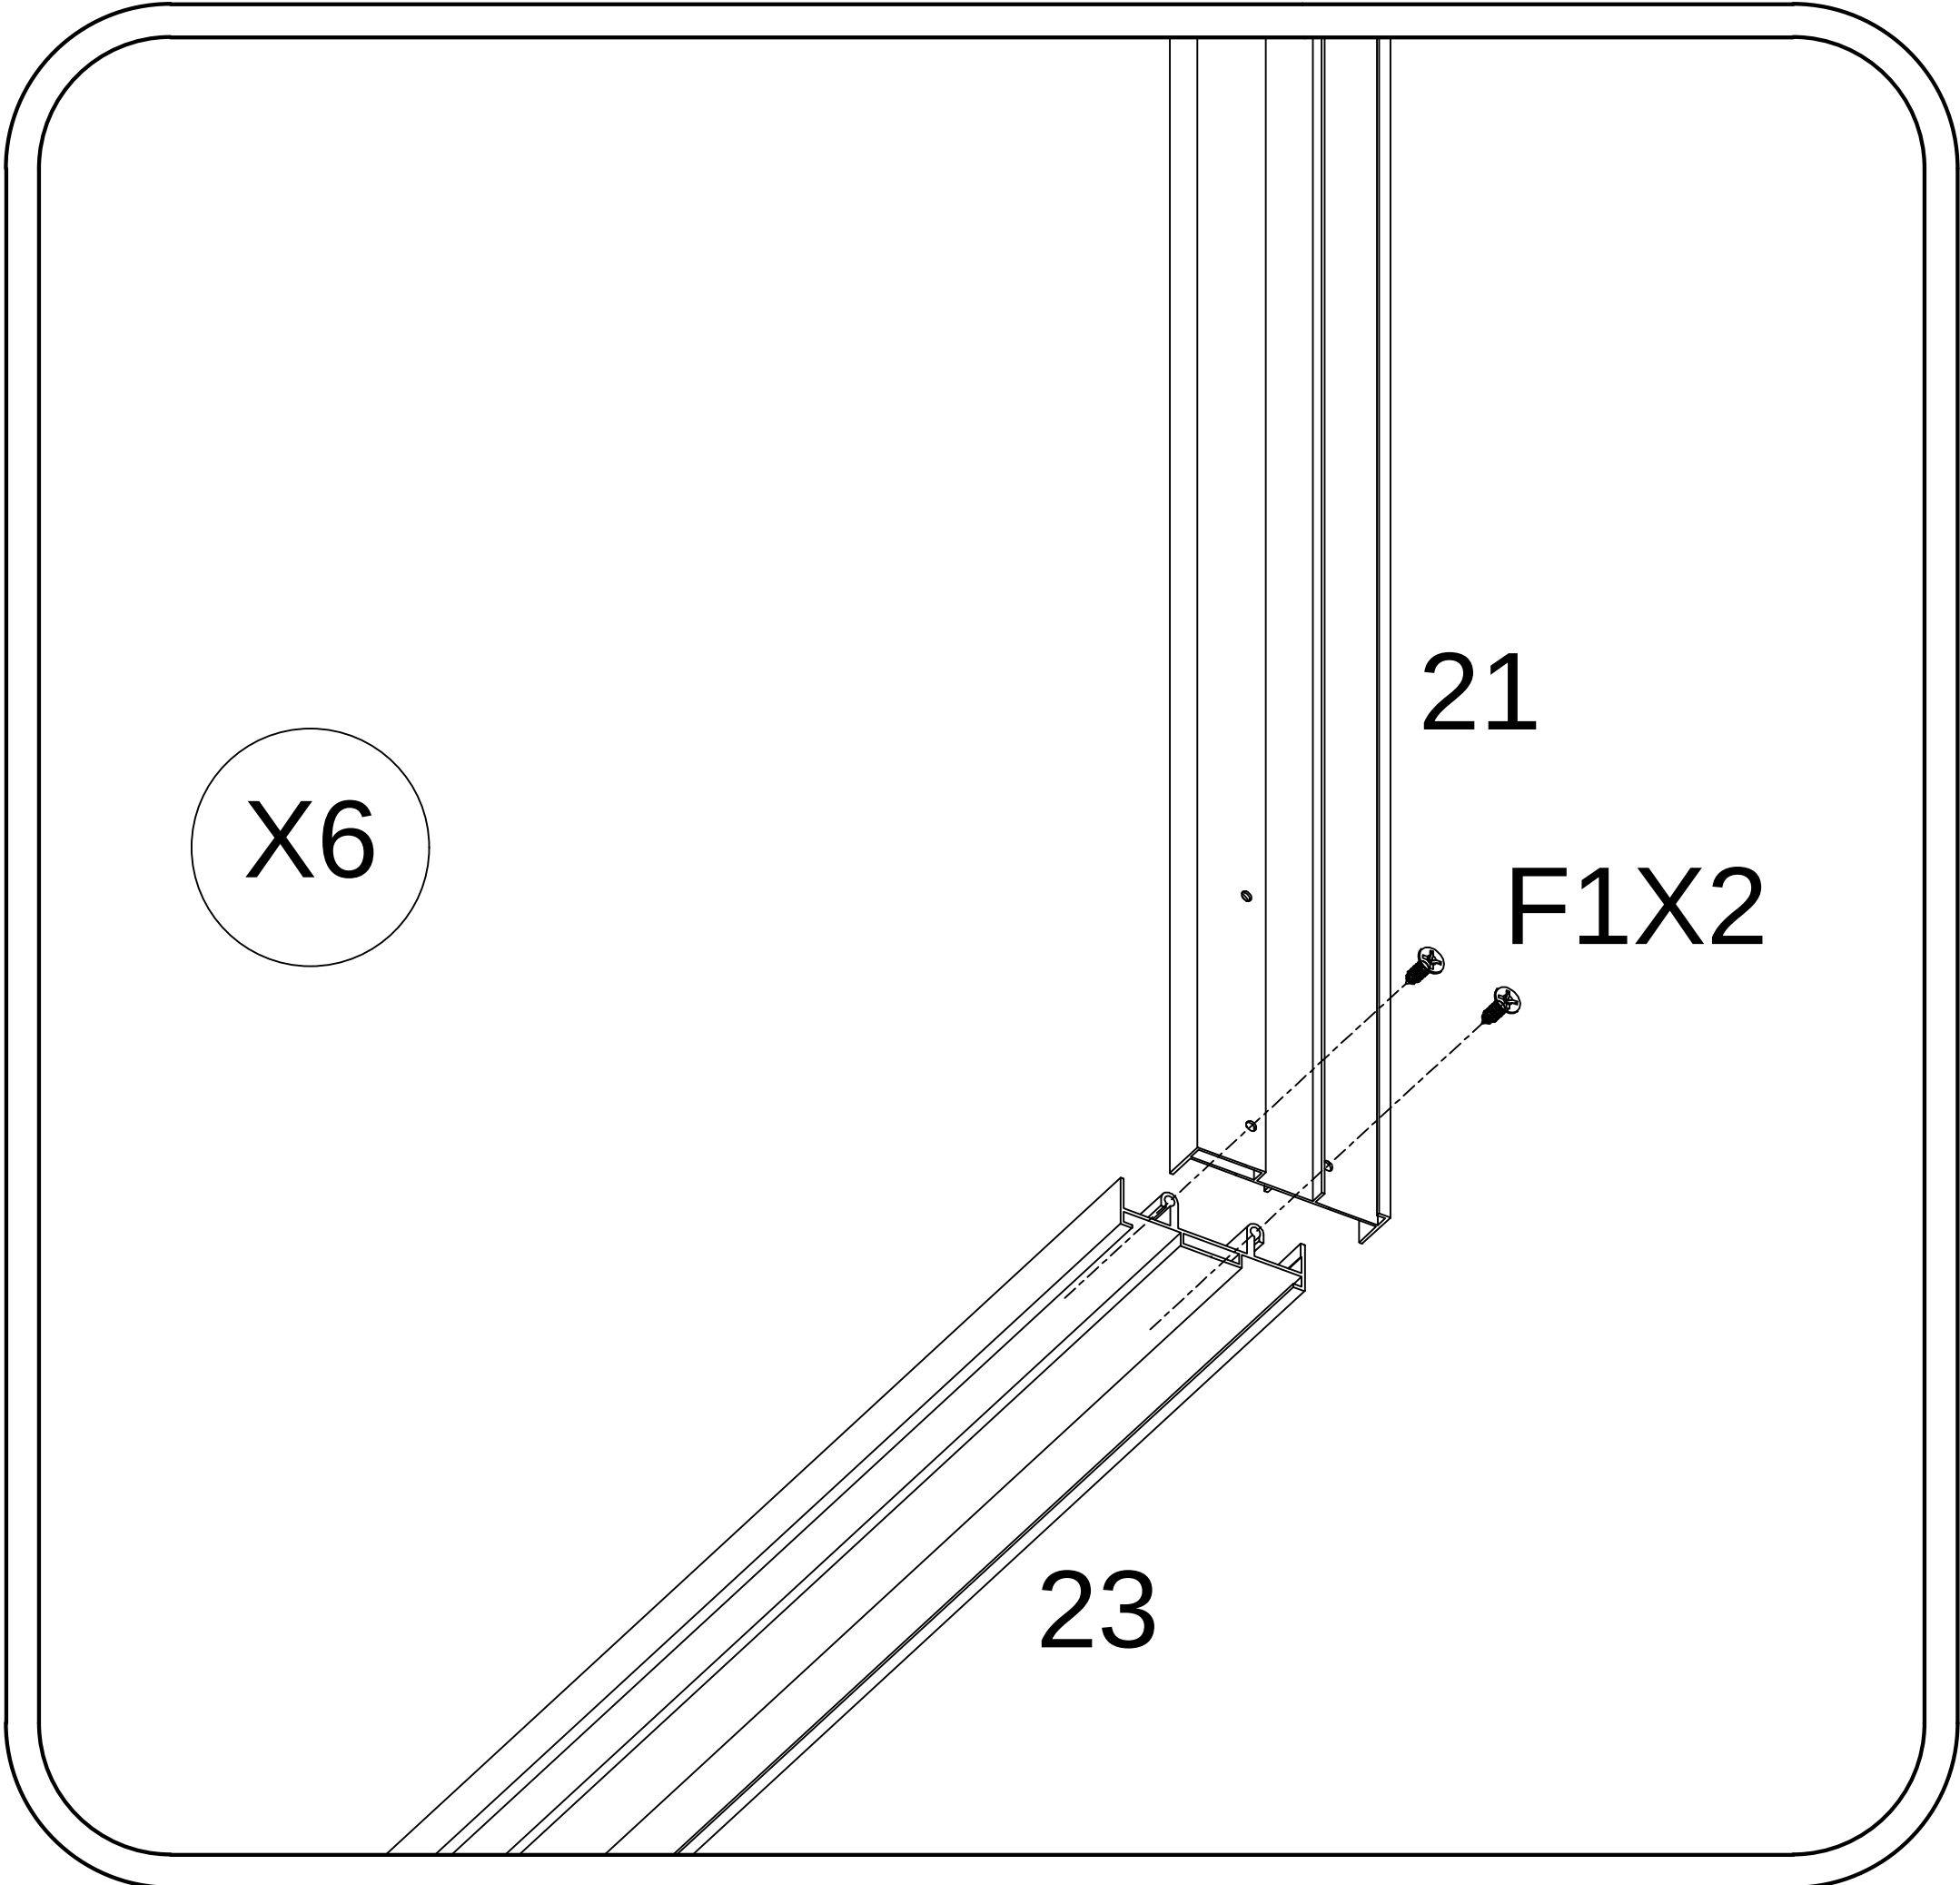
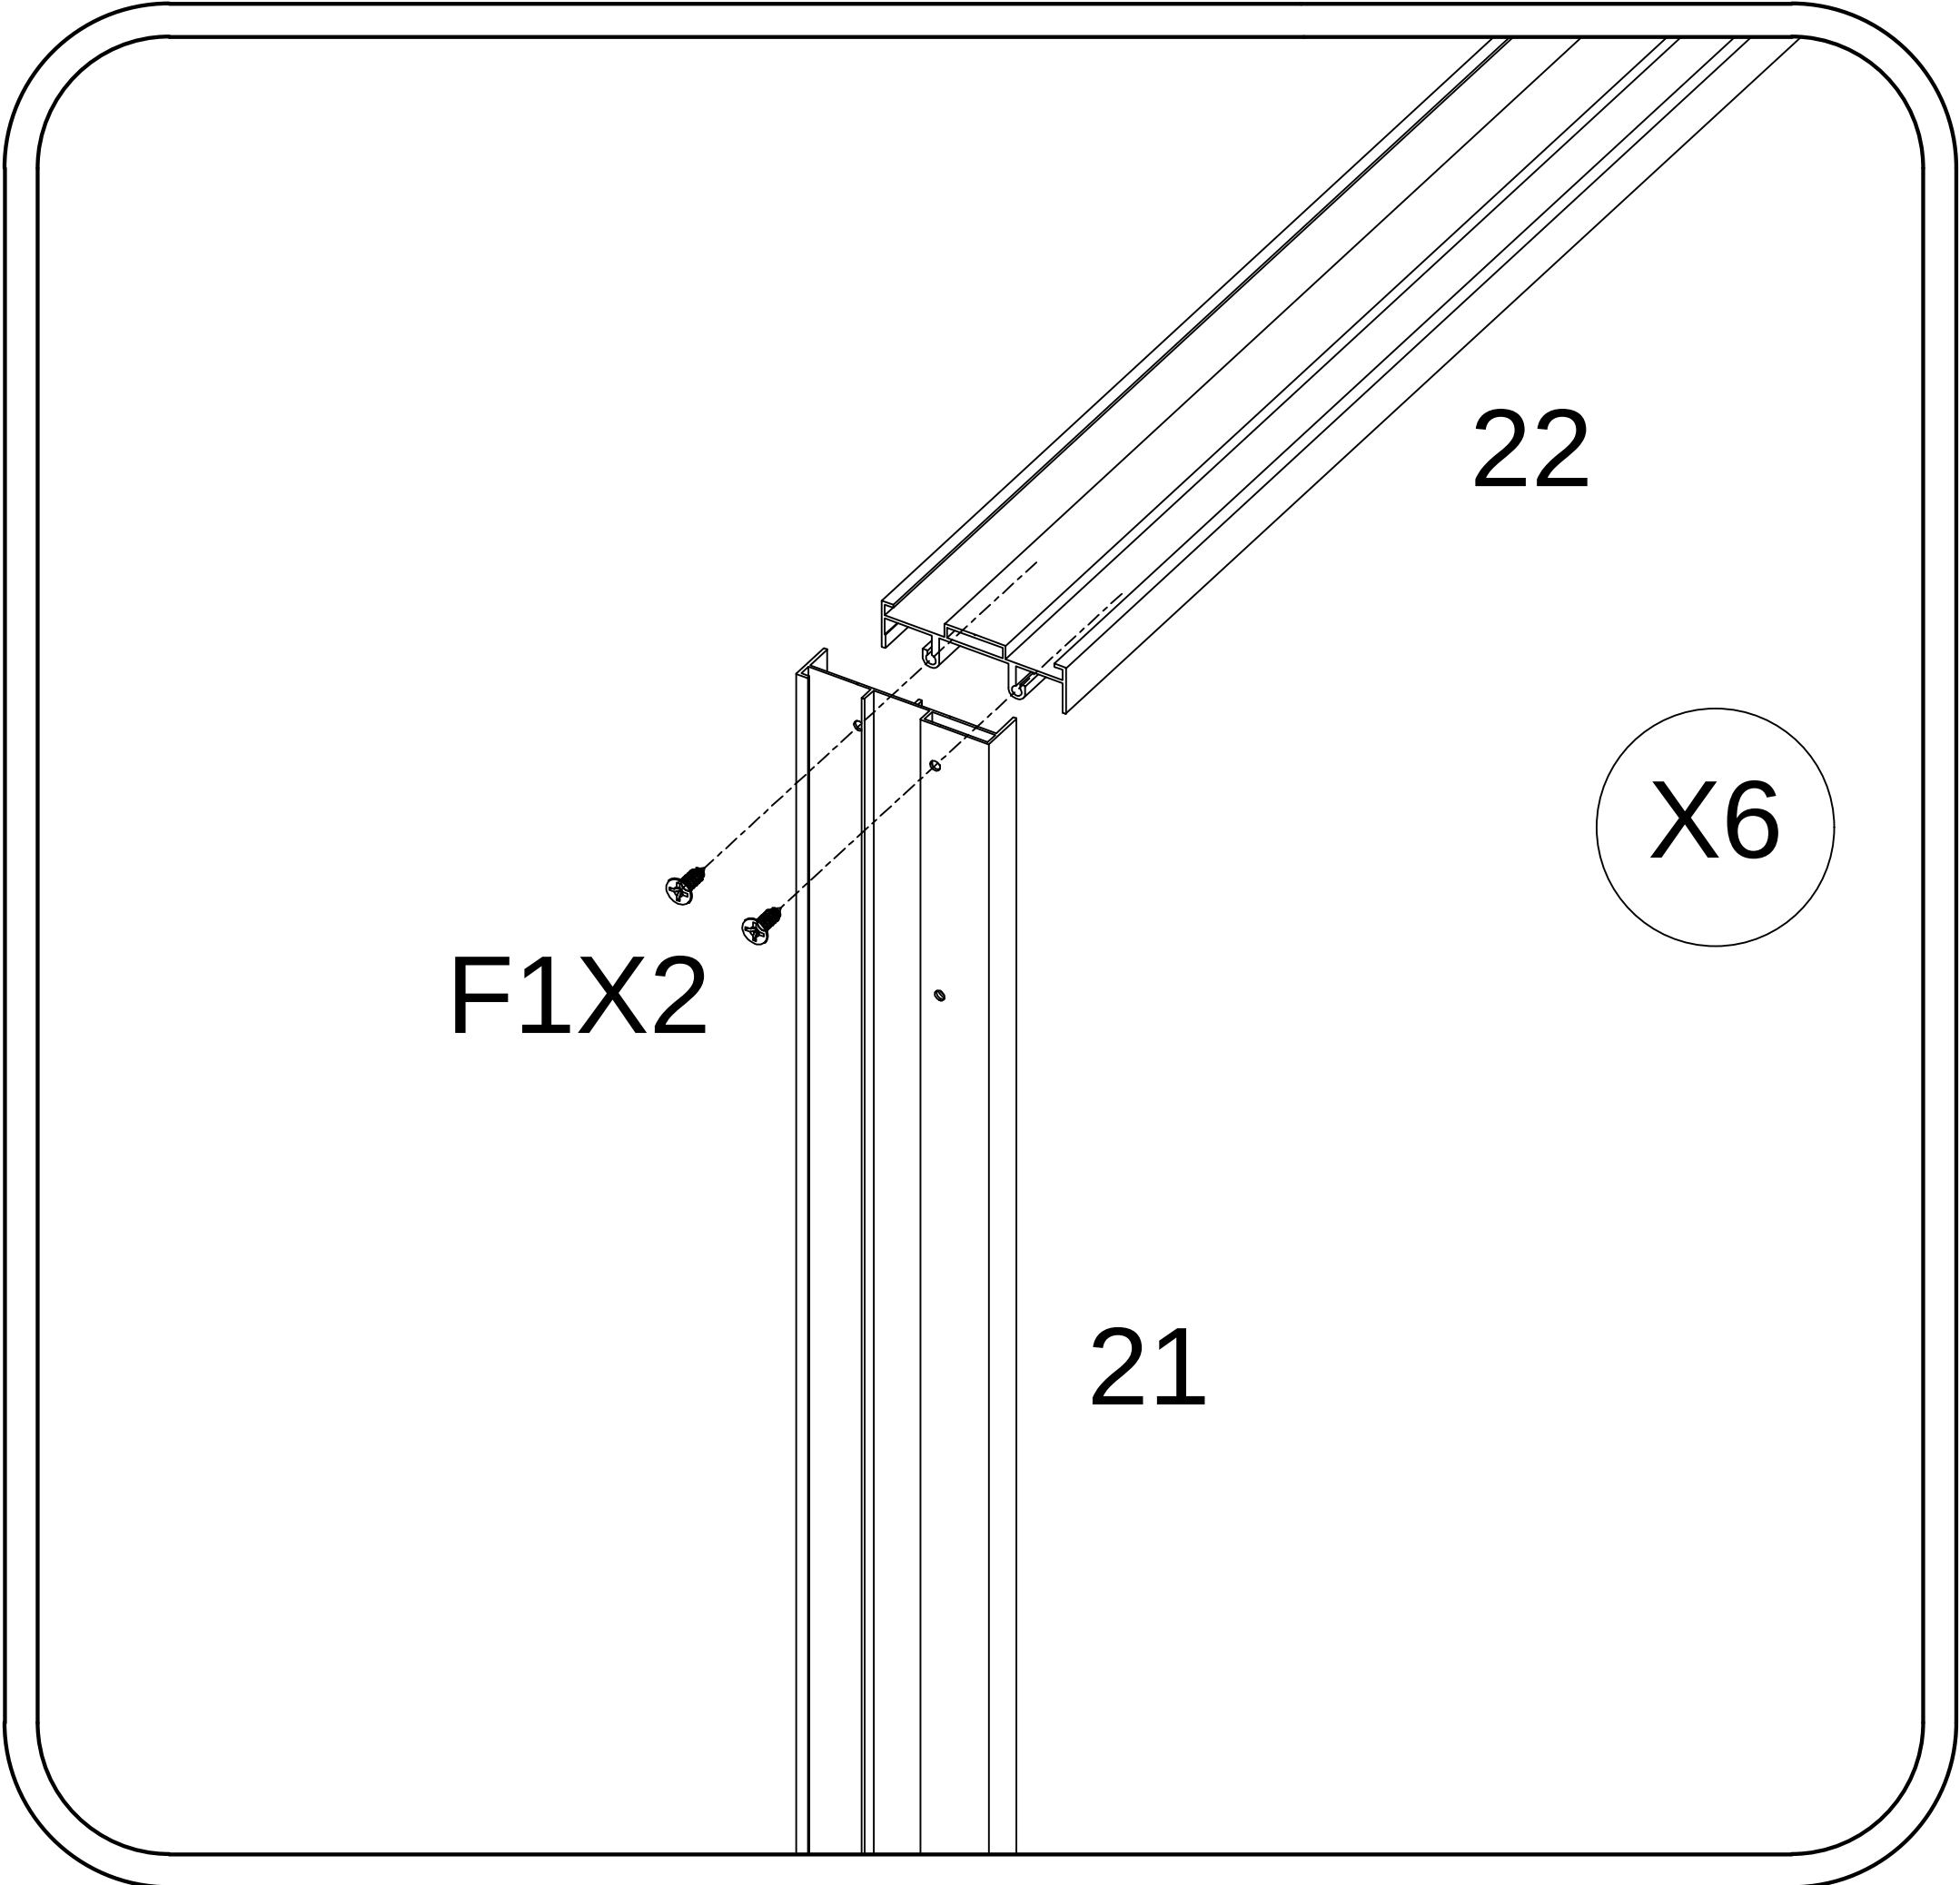
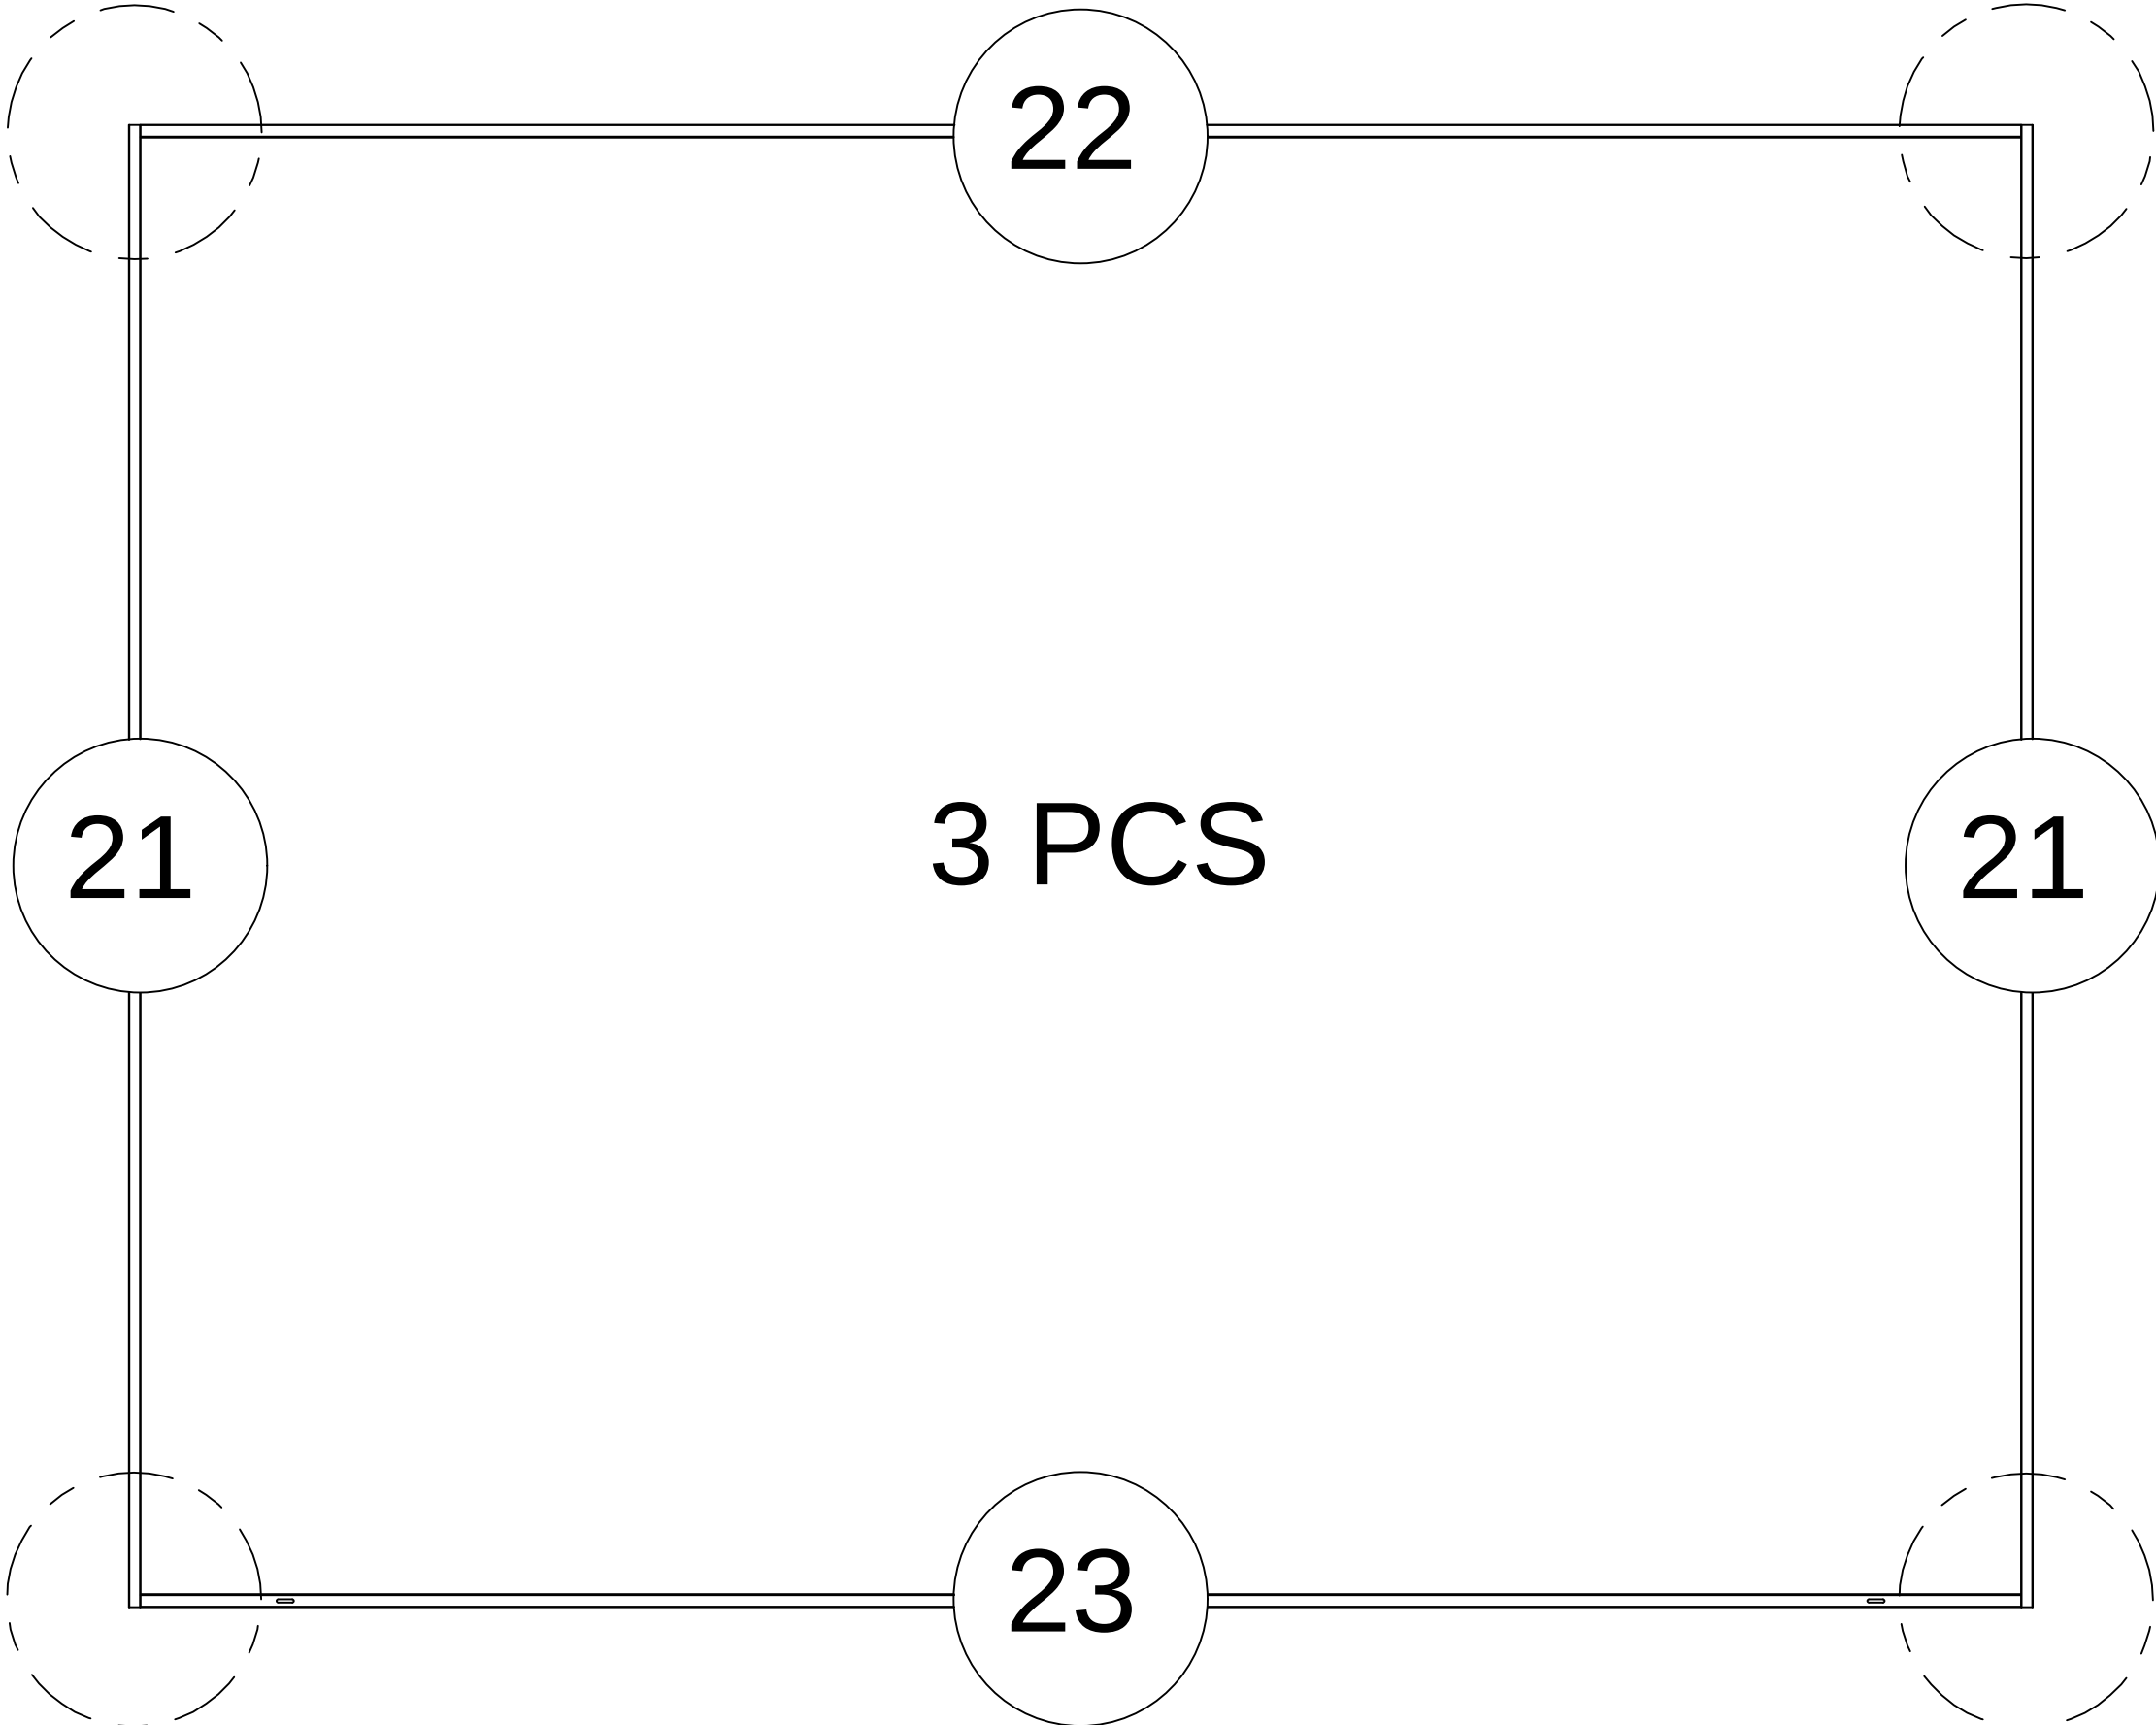
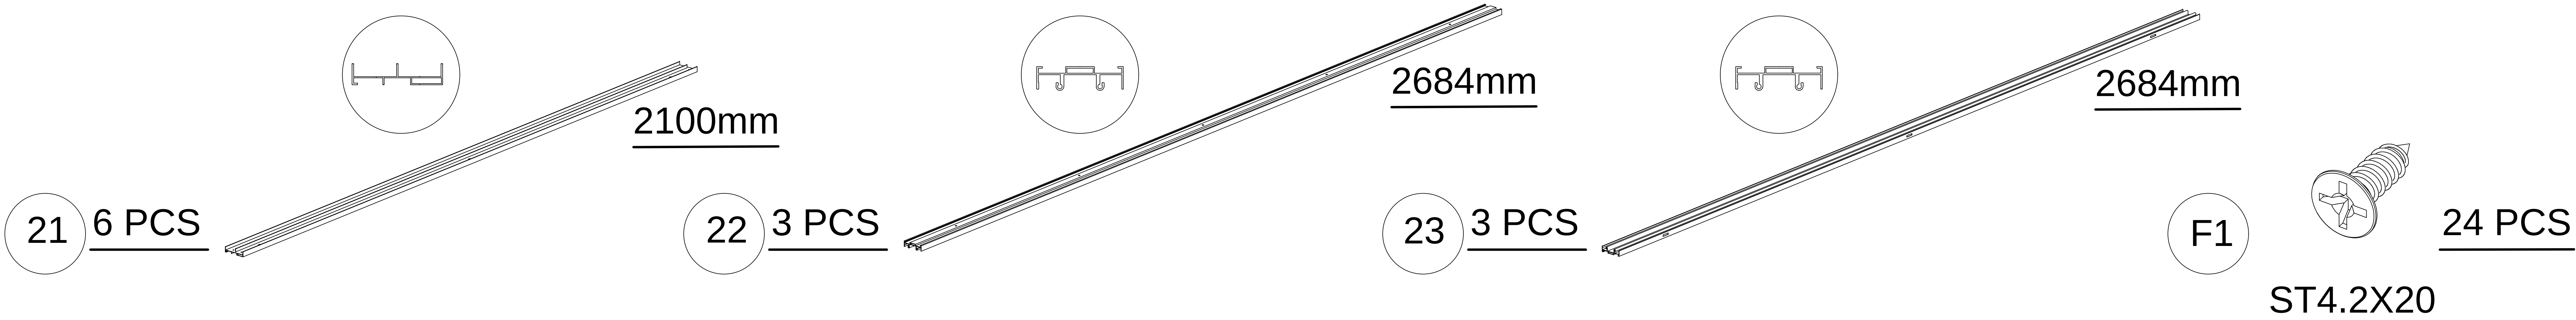
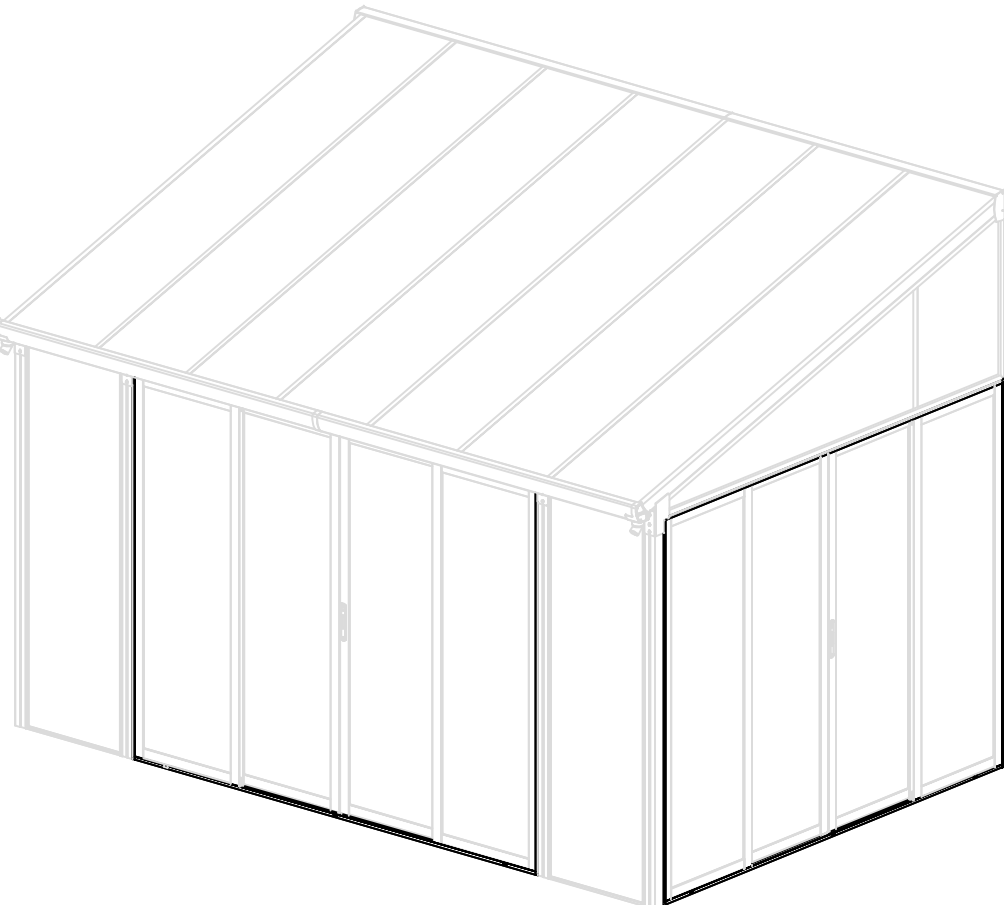


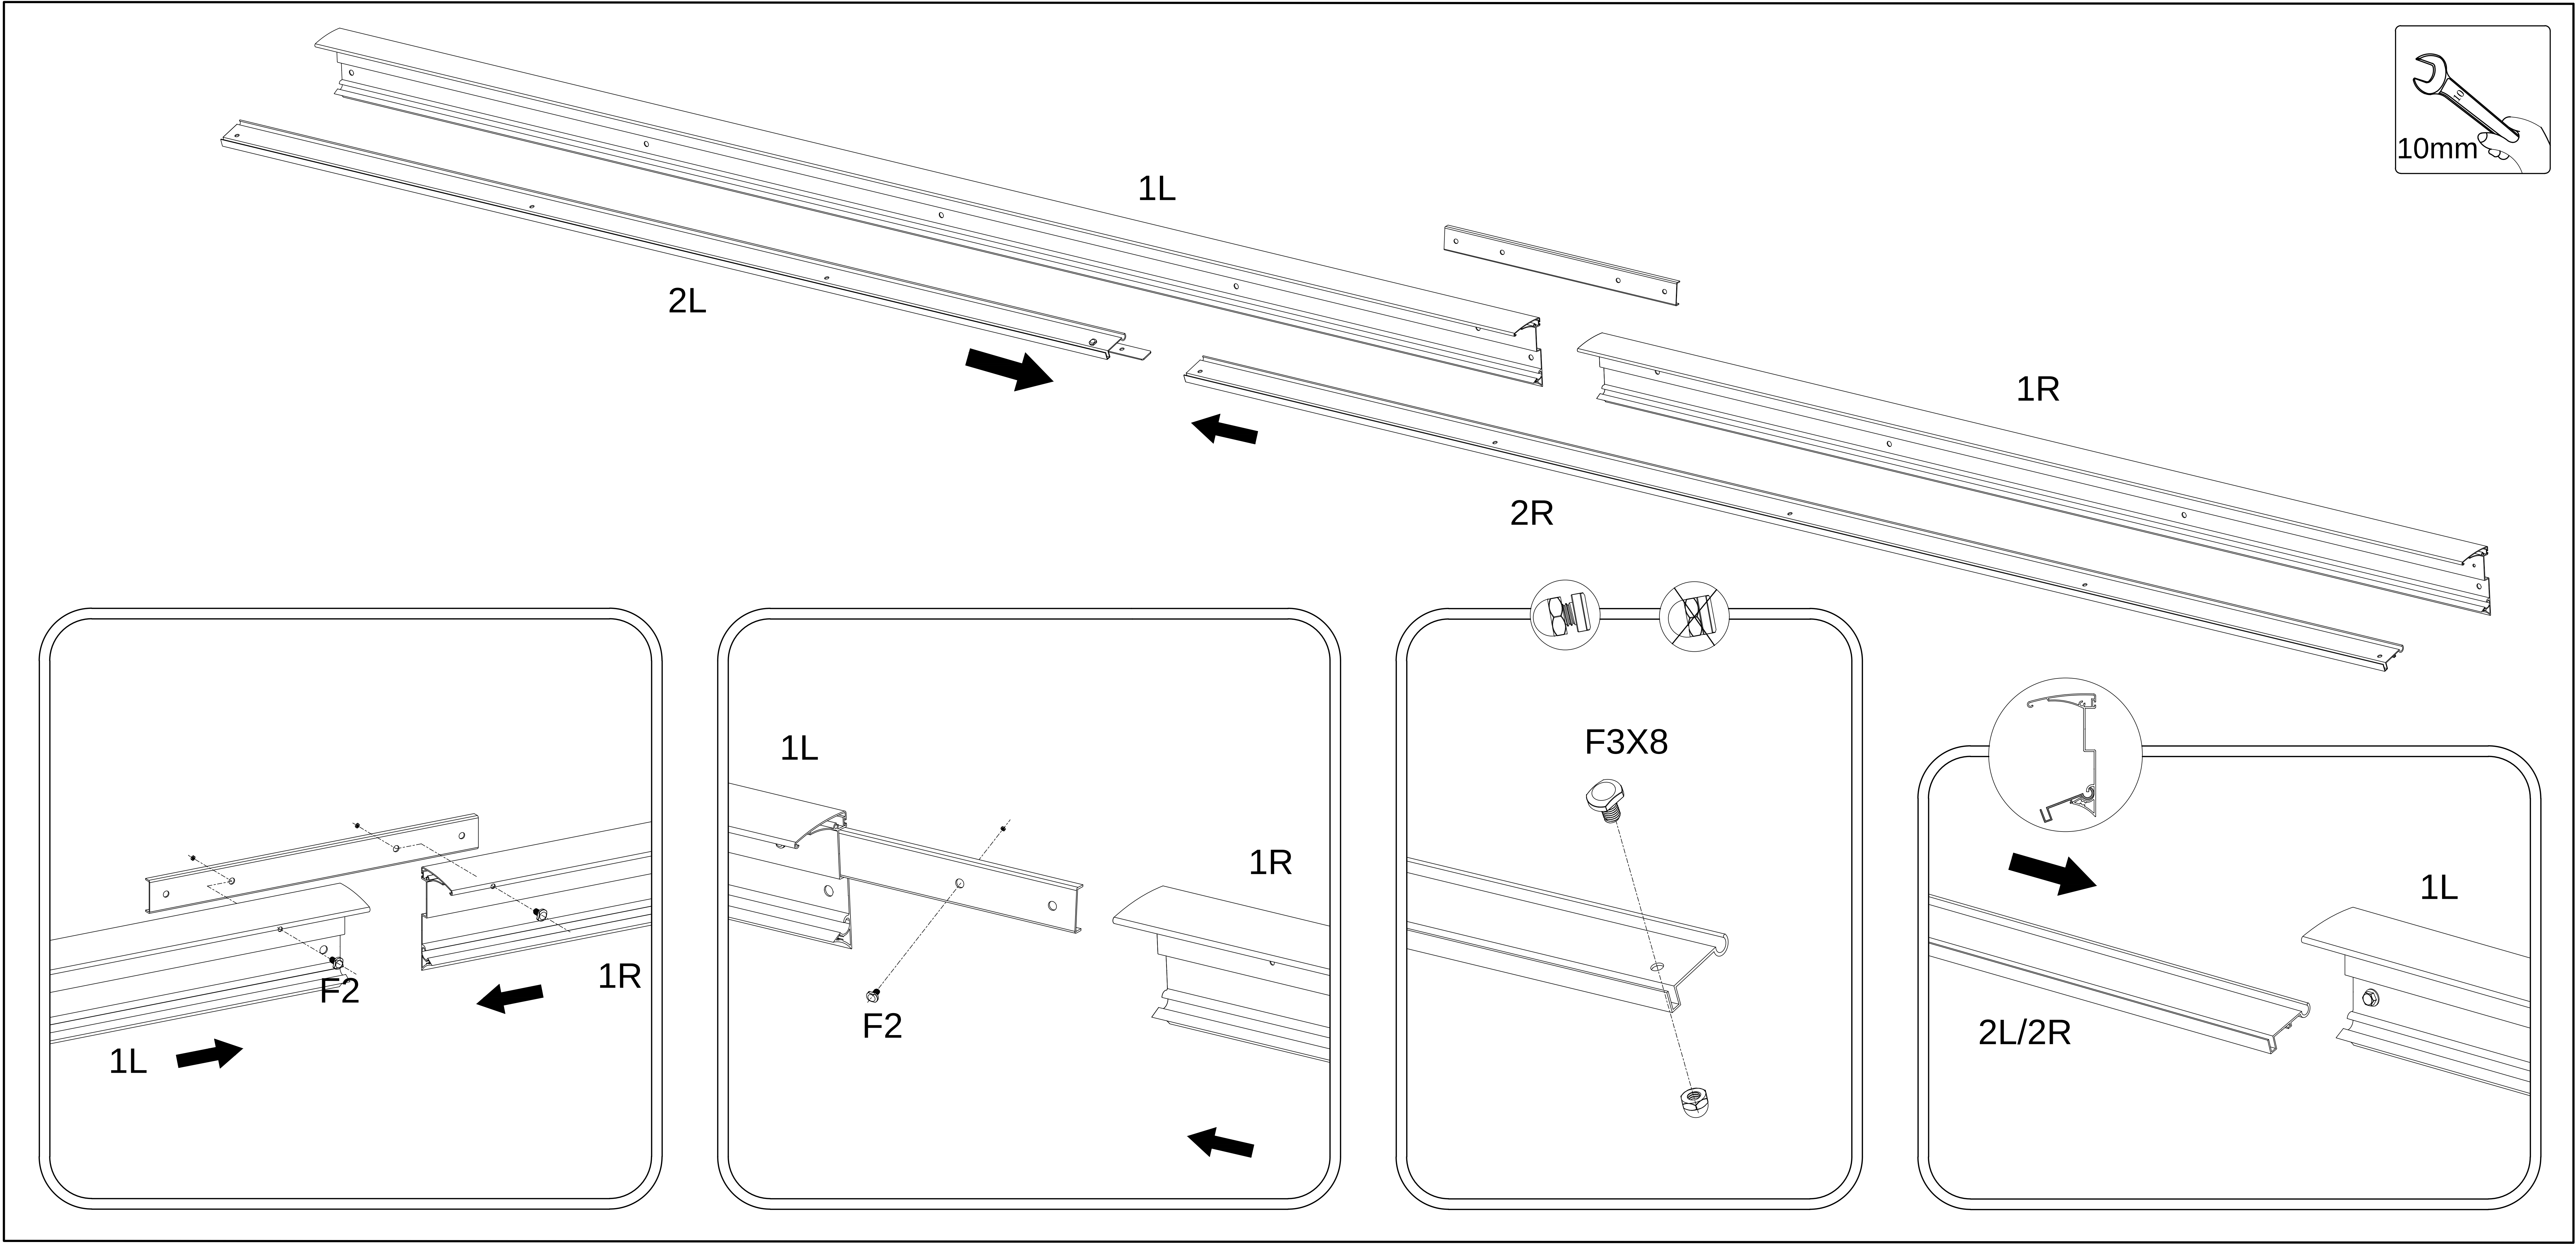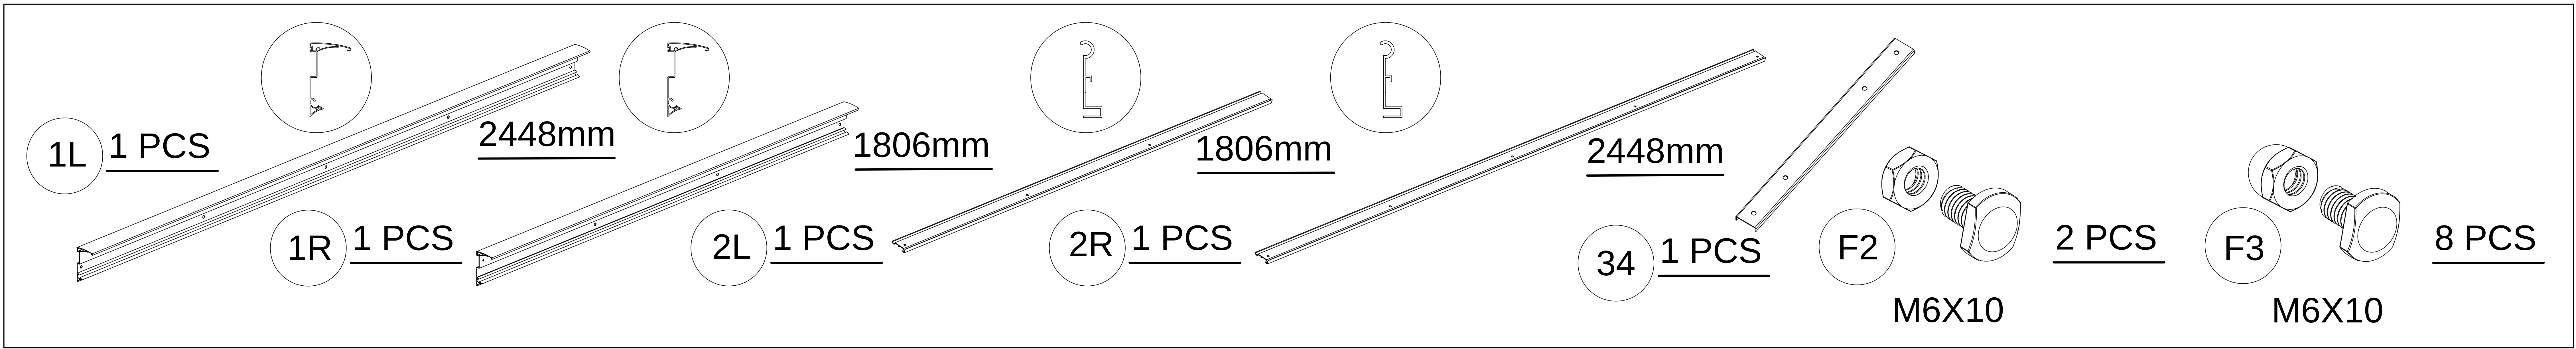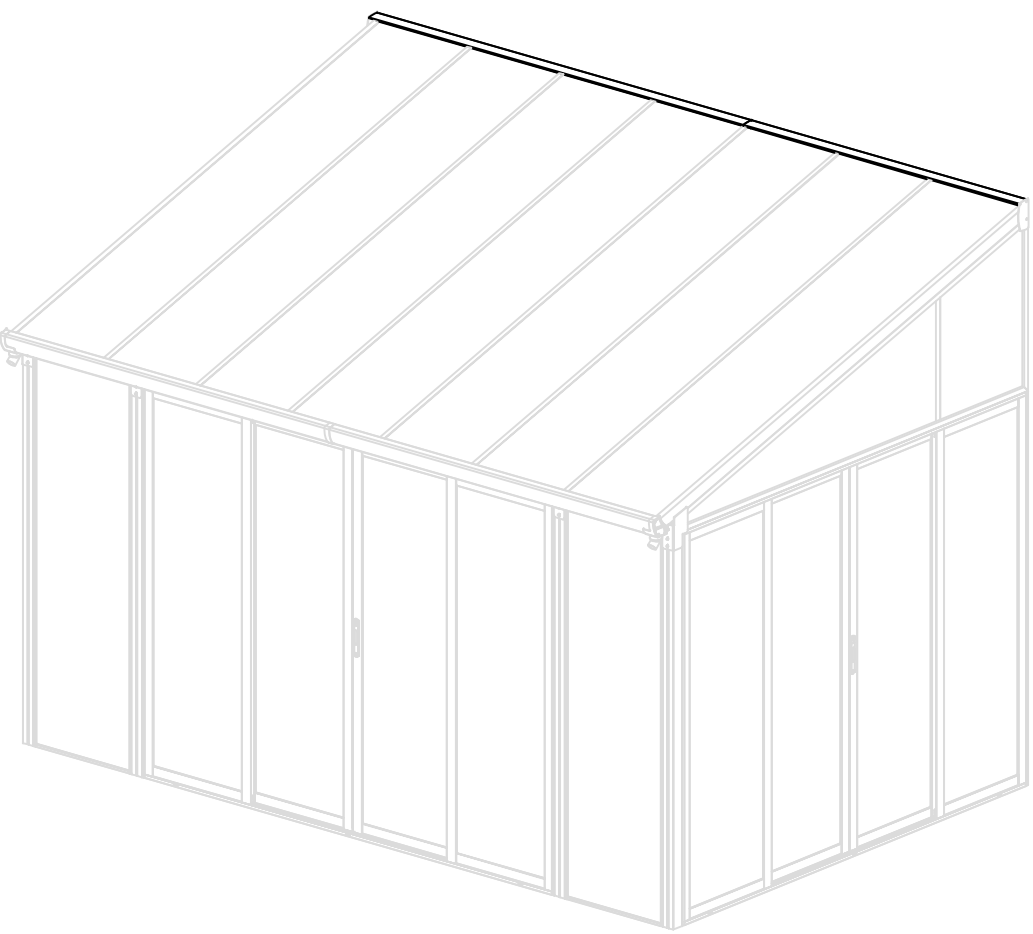


3

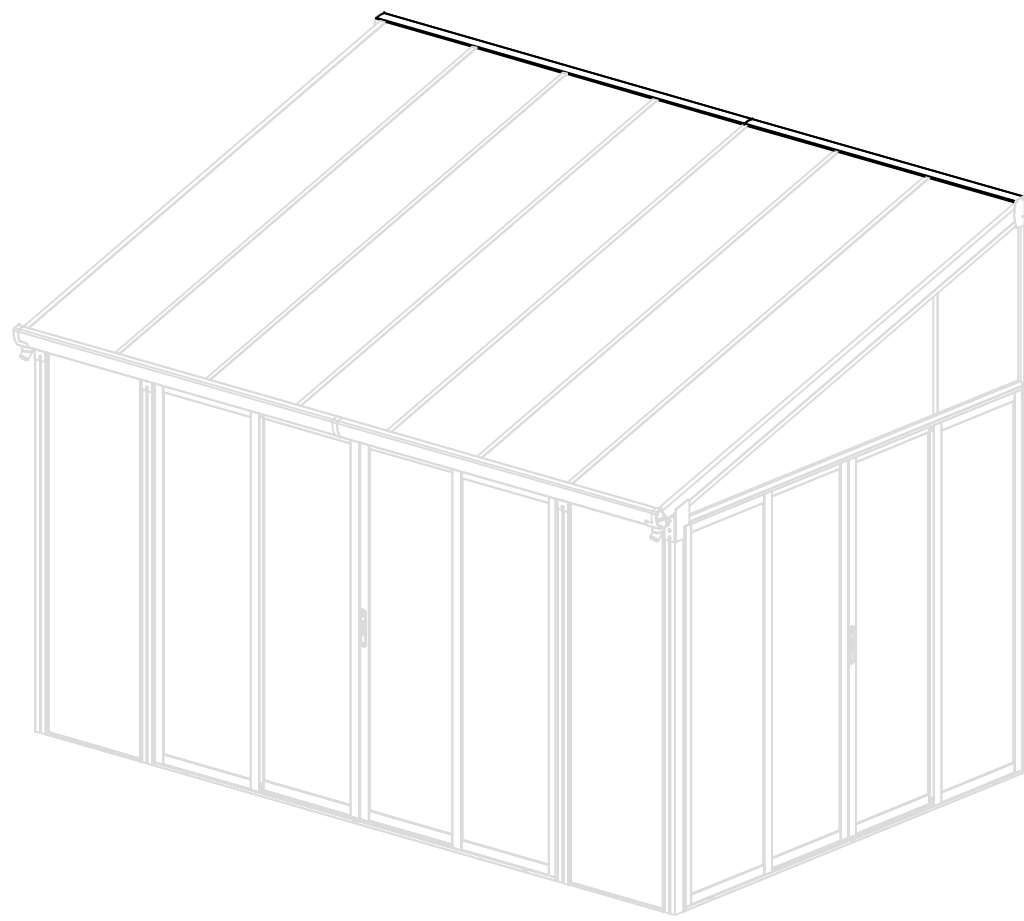

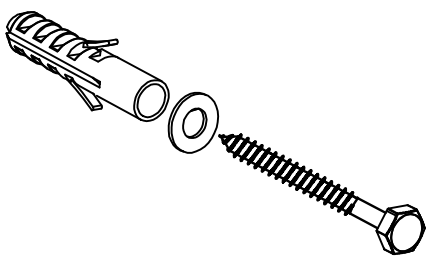
F5  8 PCS
ST6.3X60

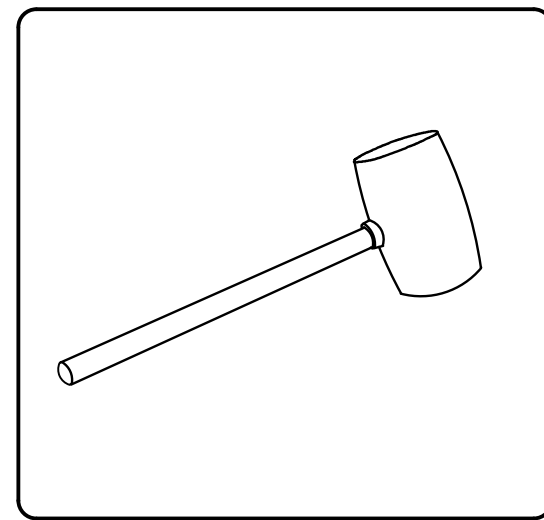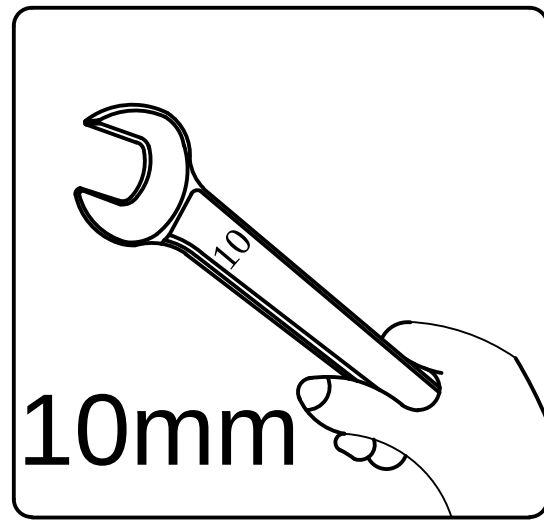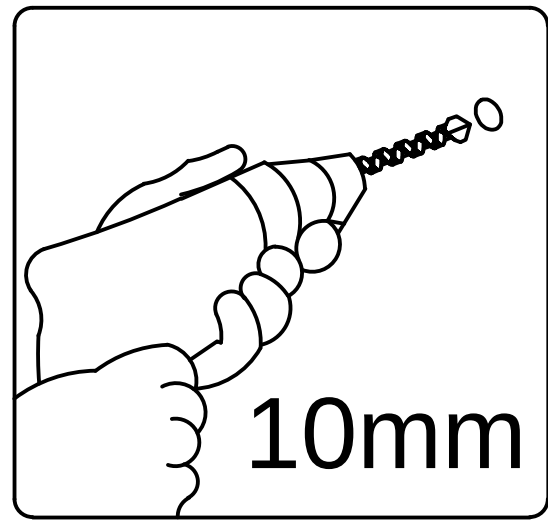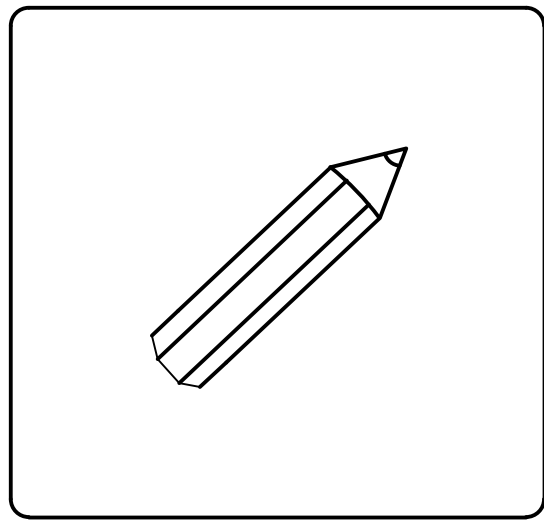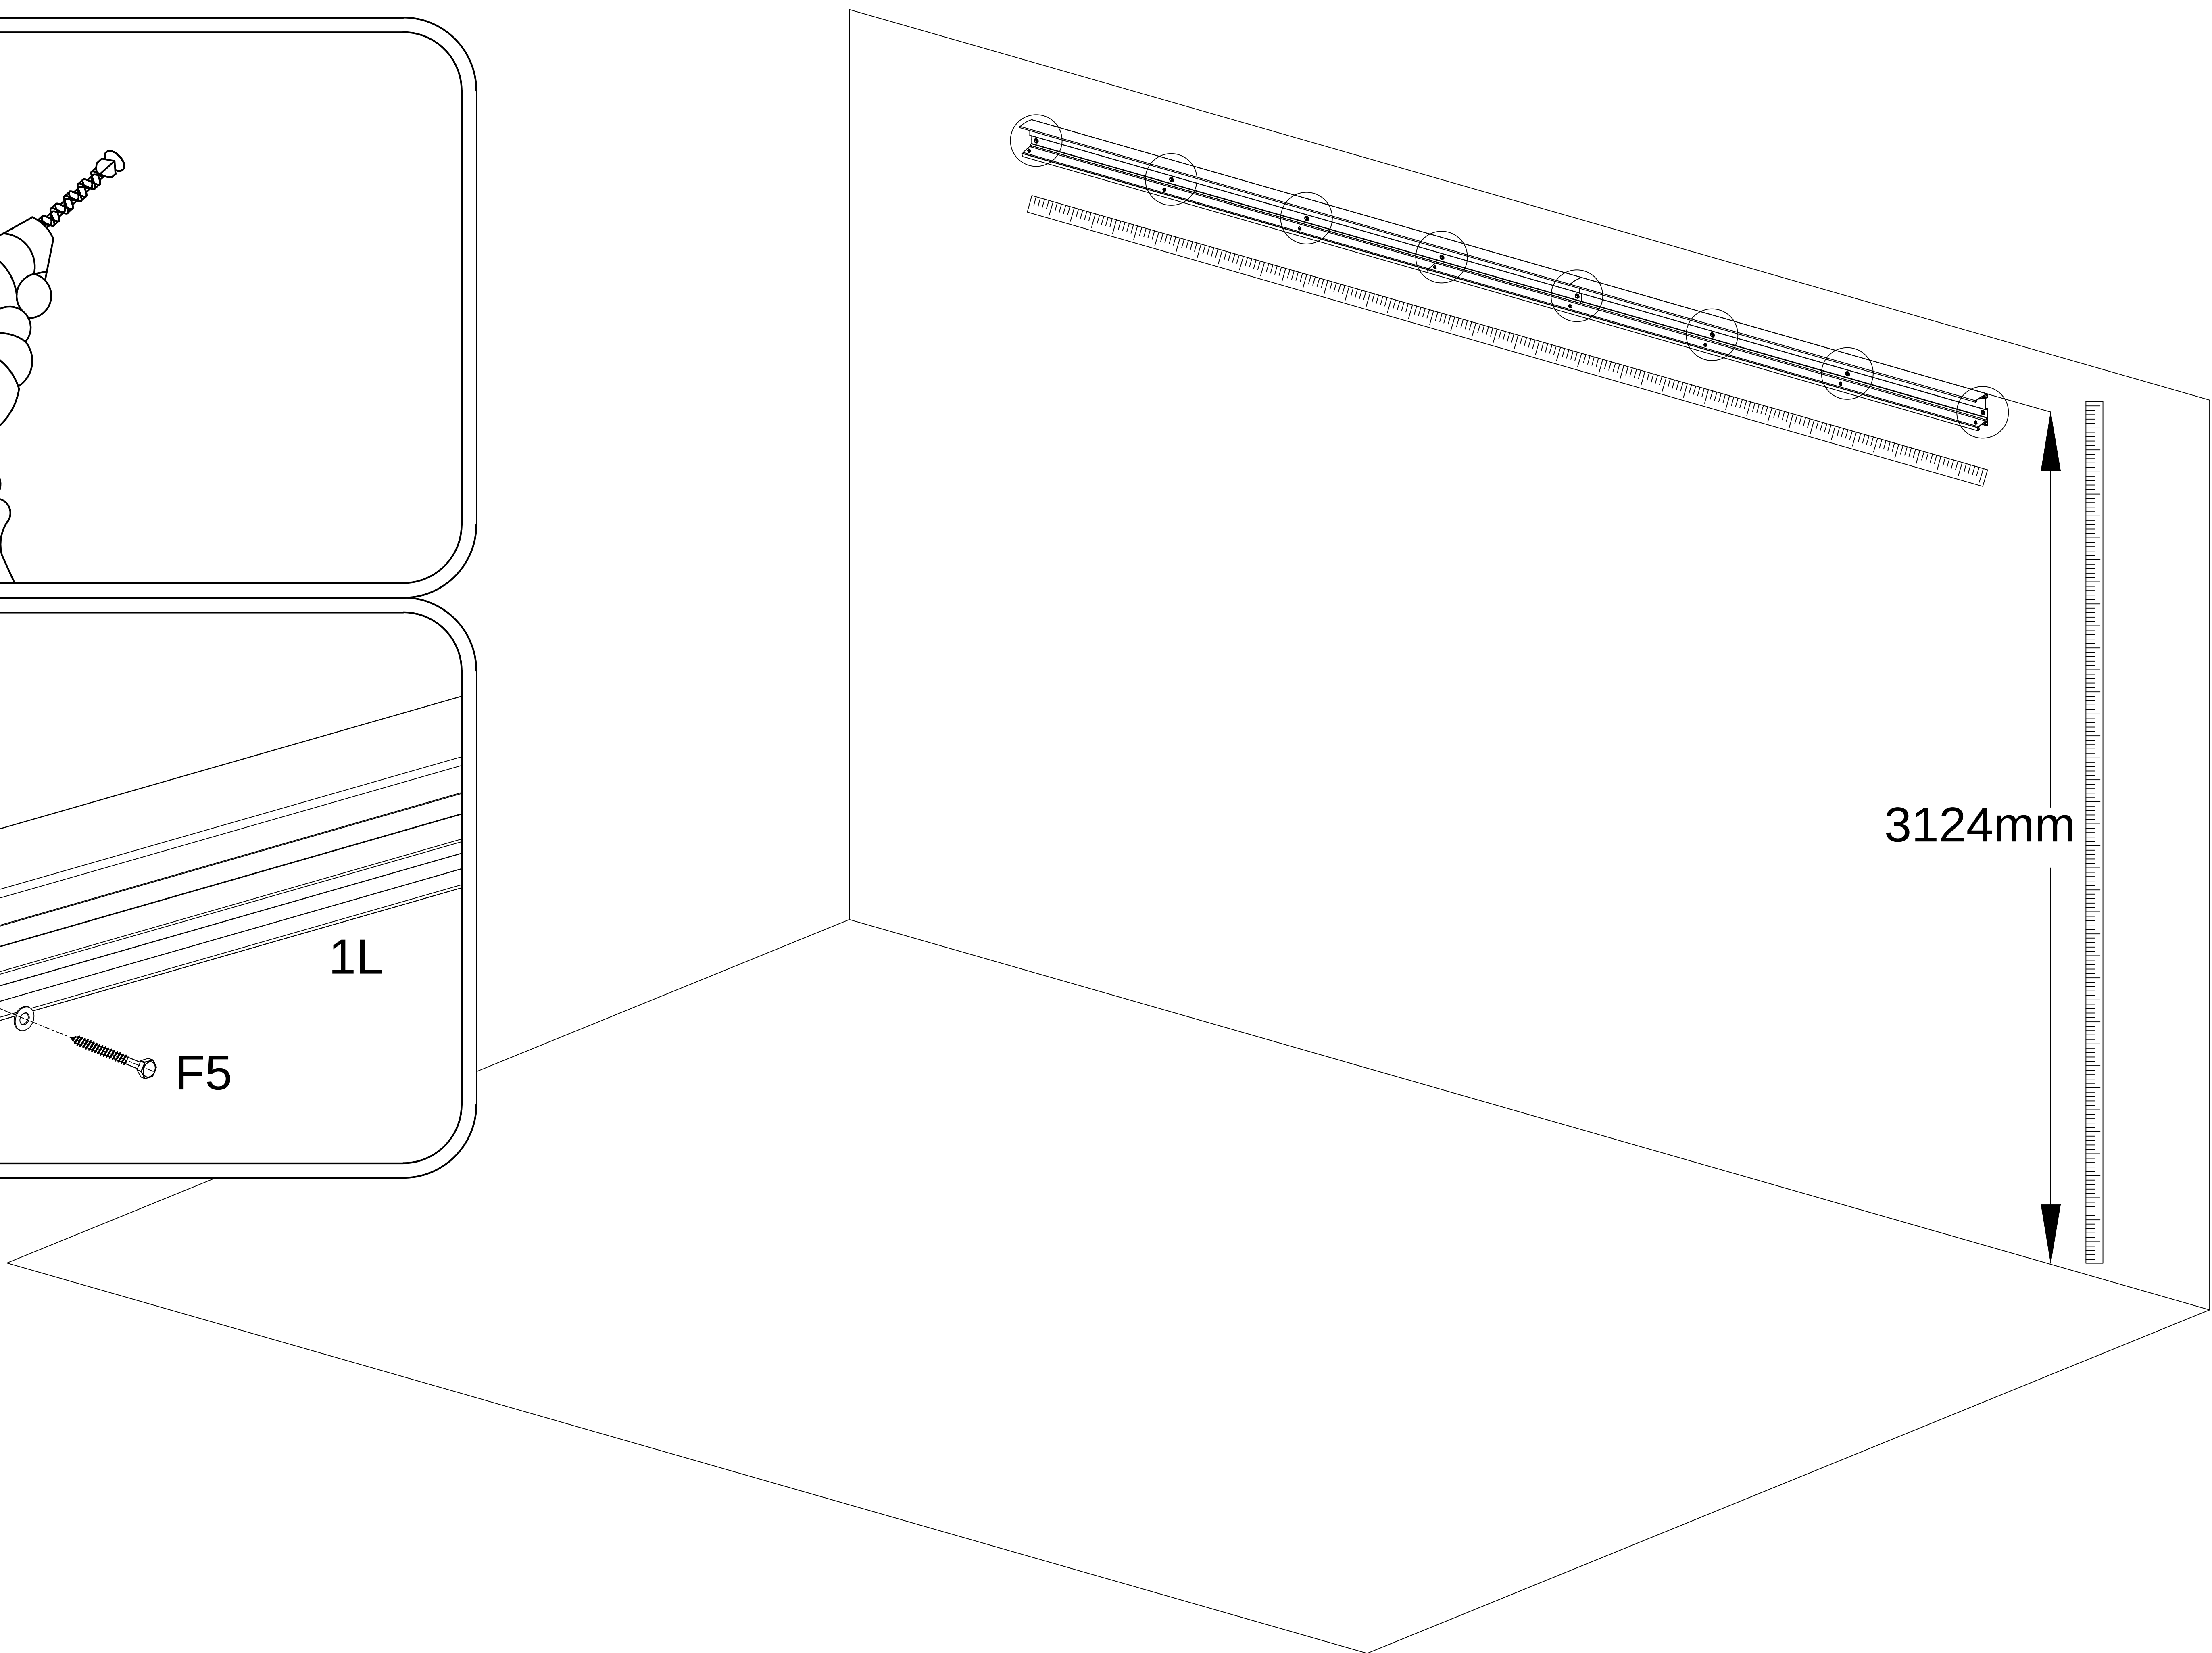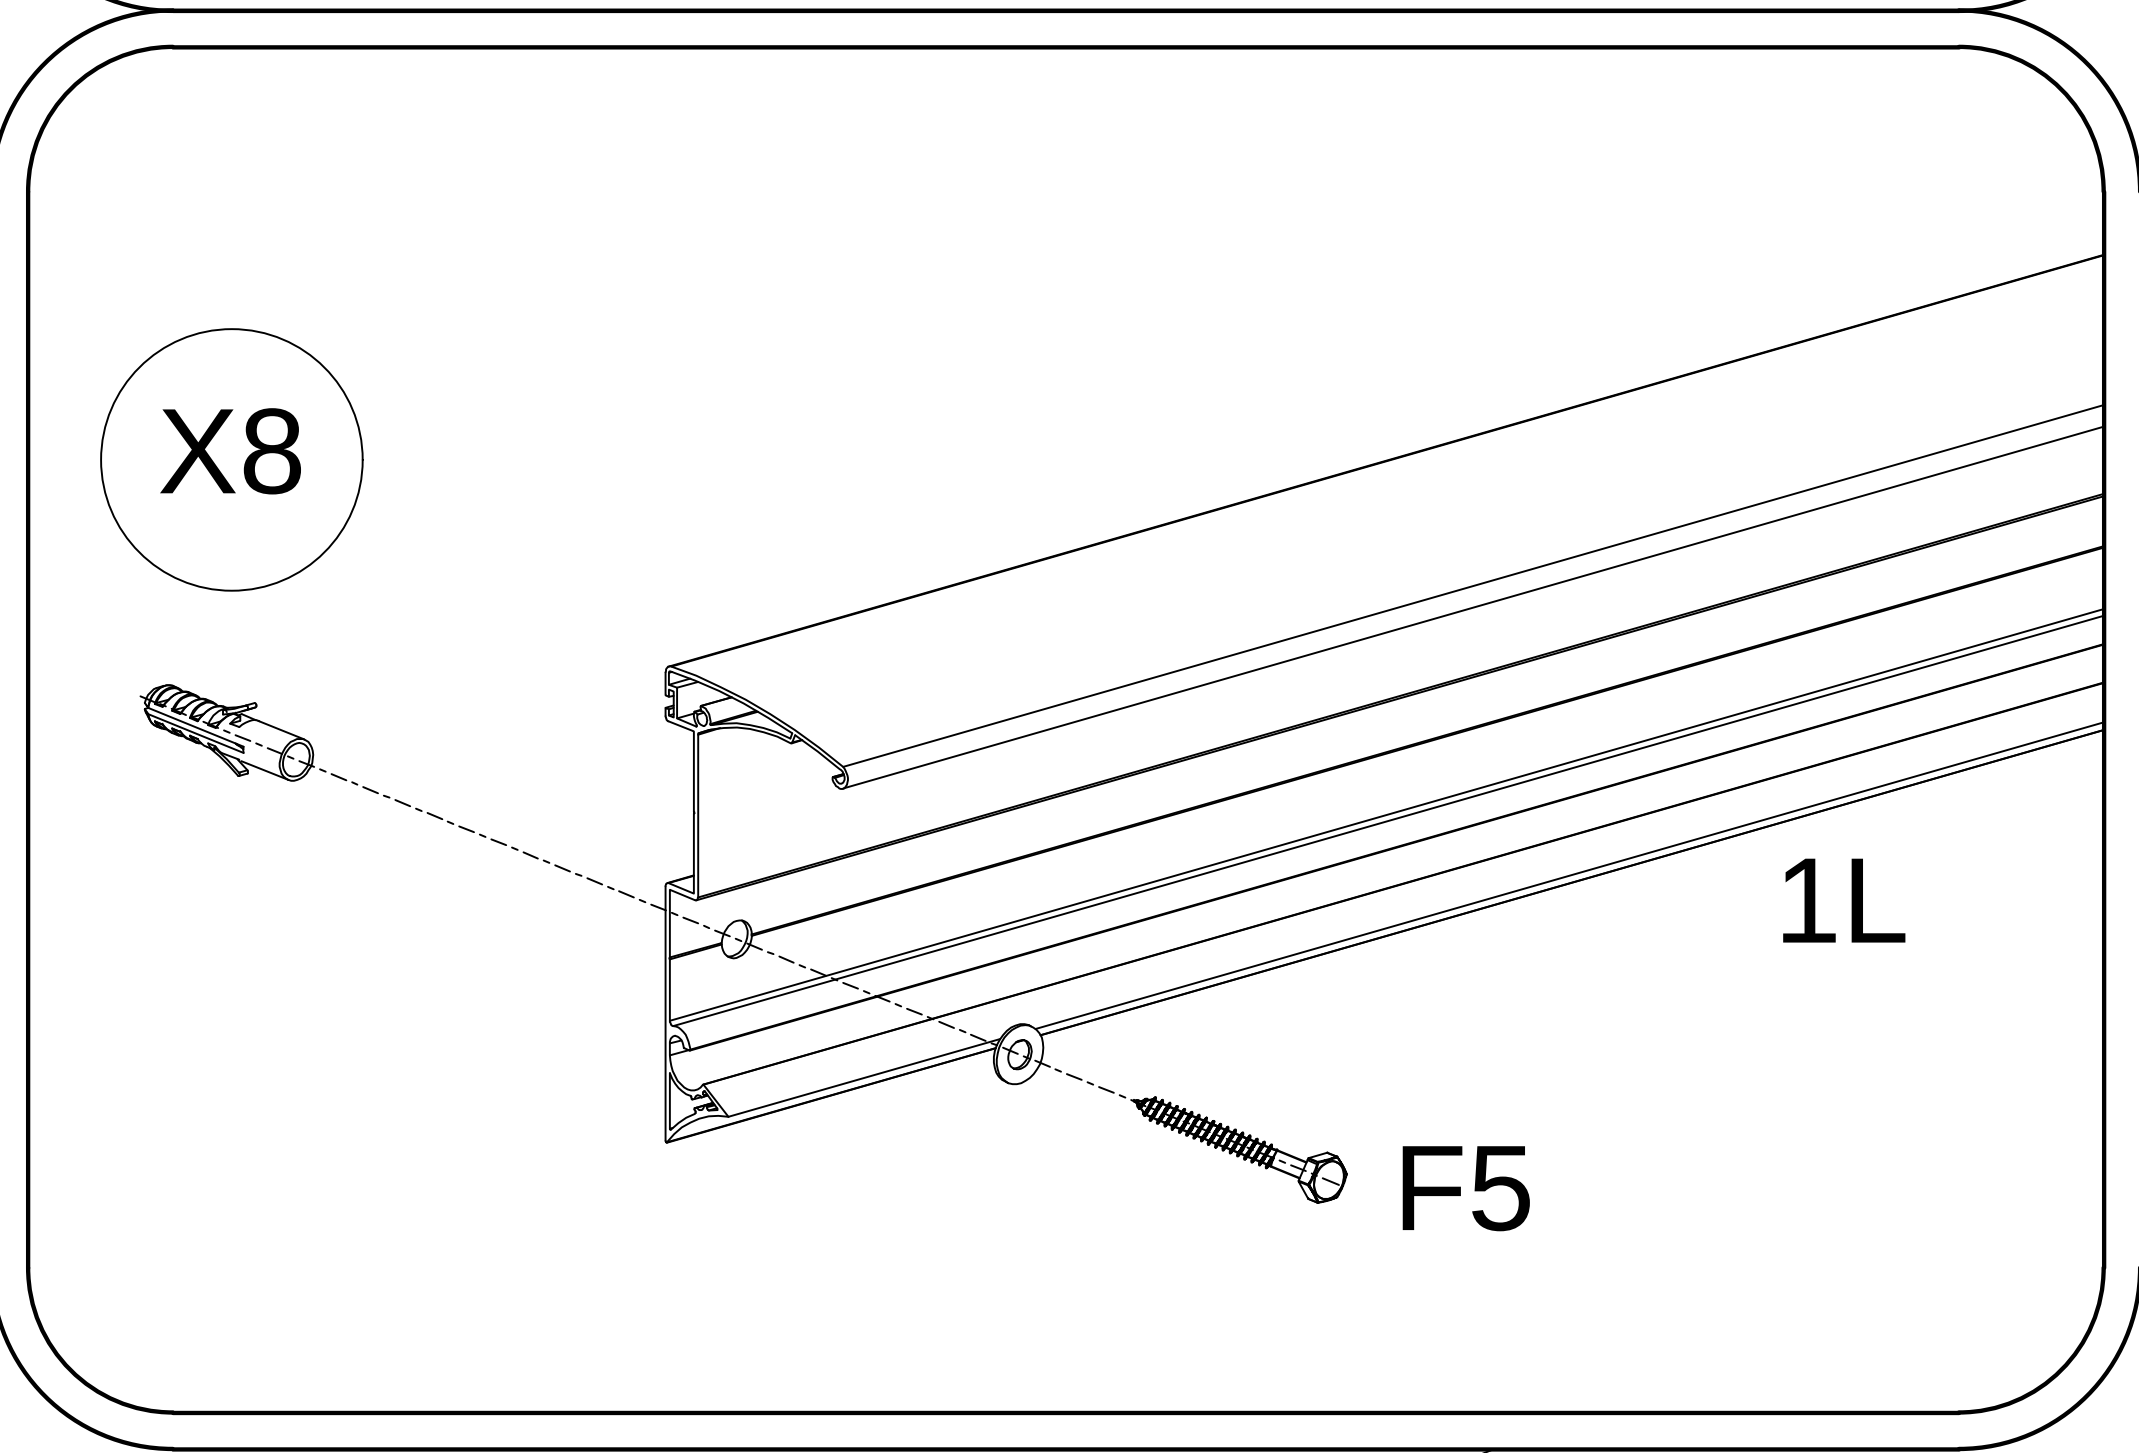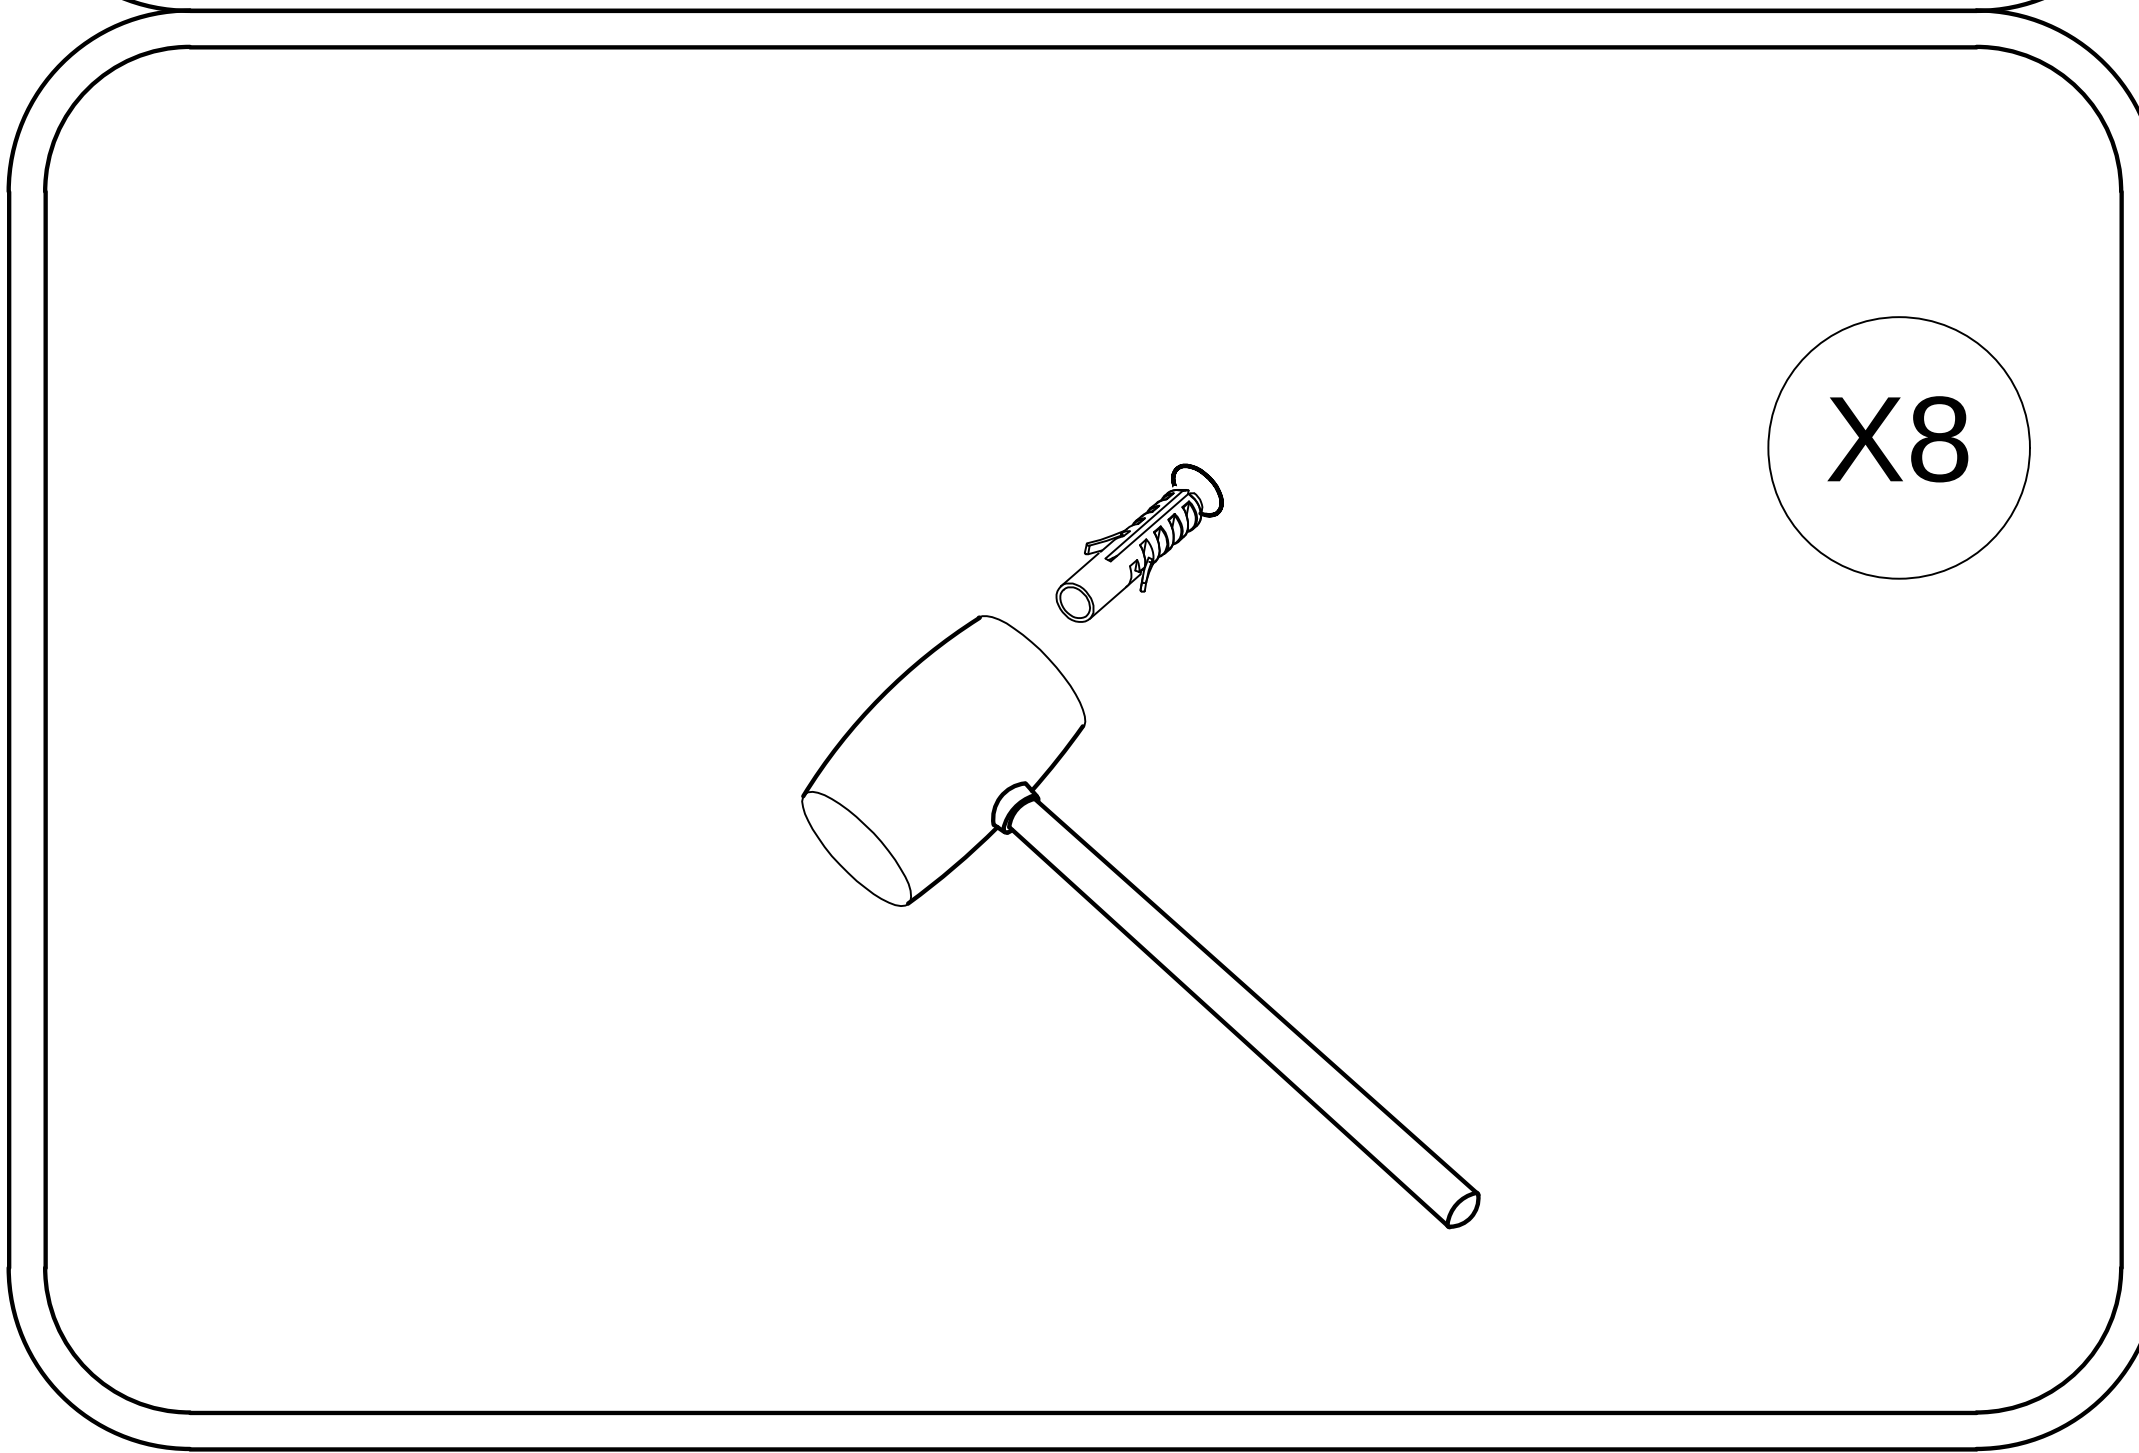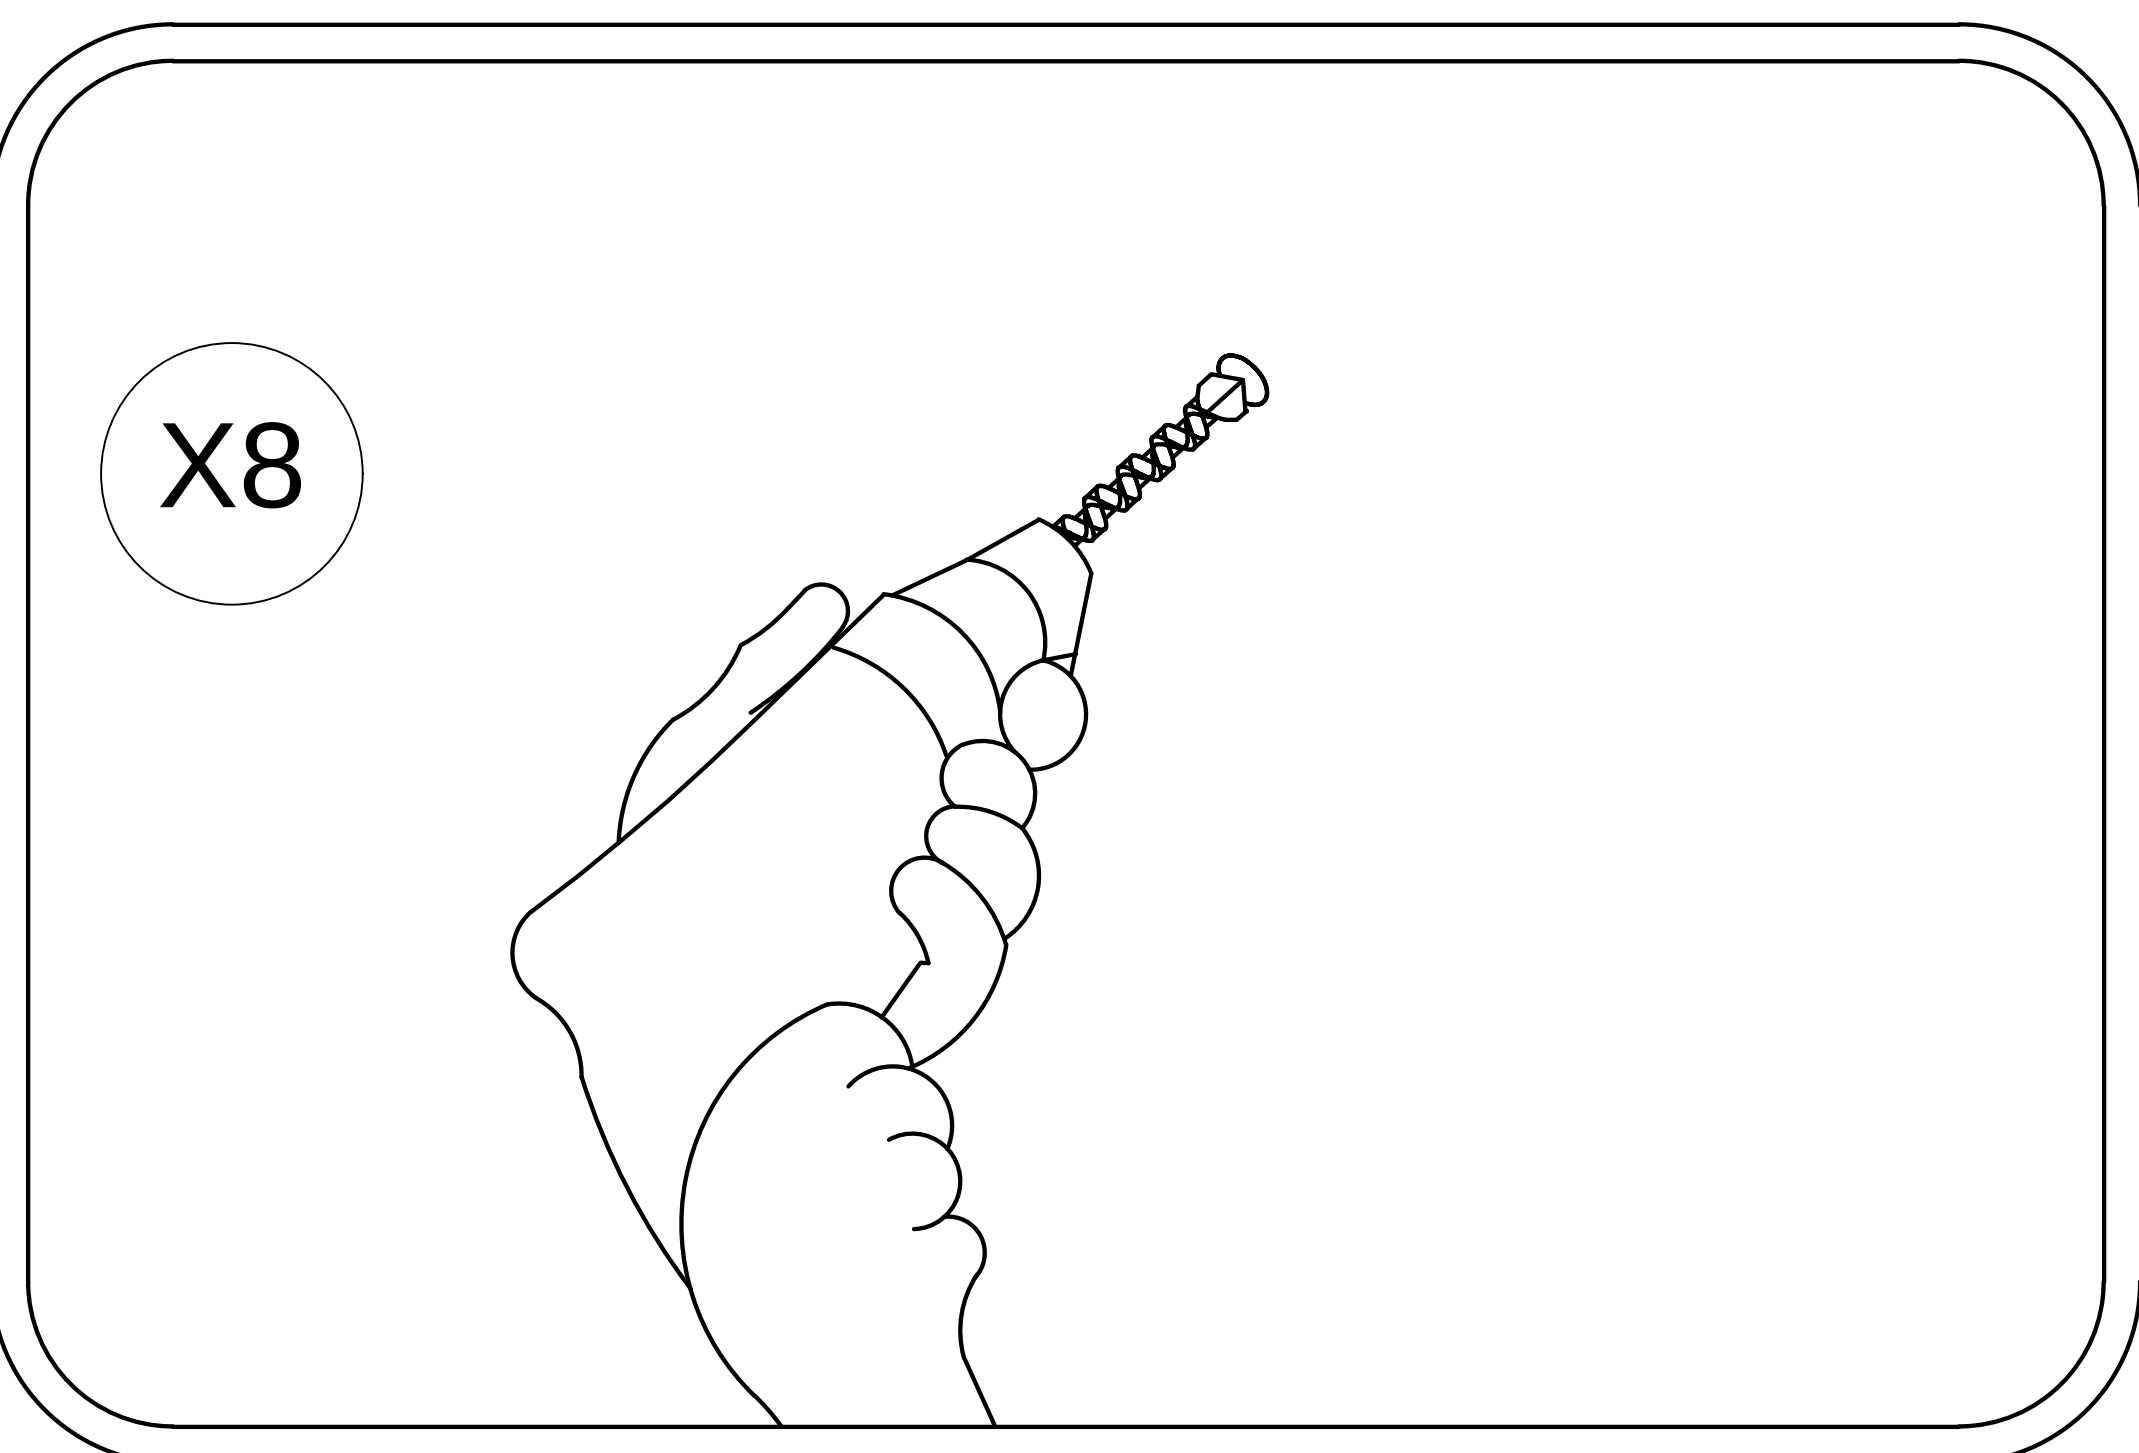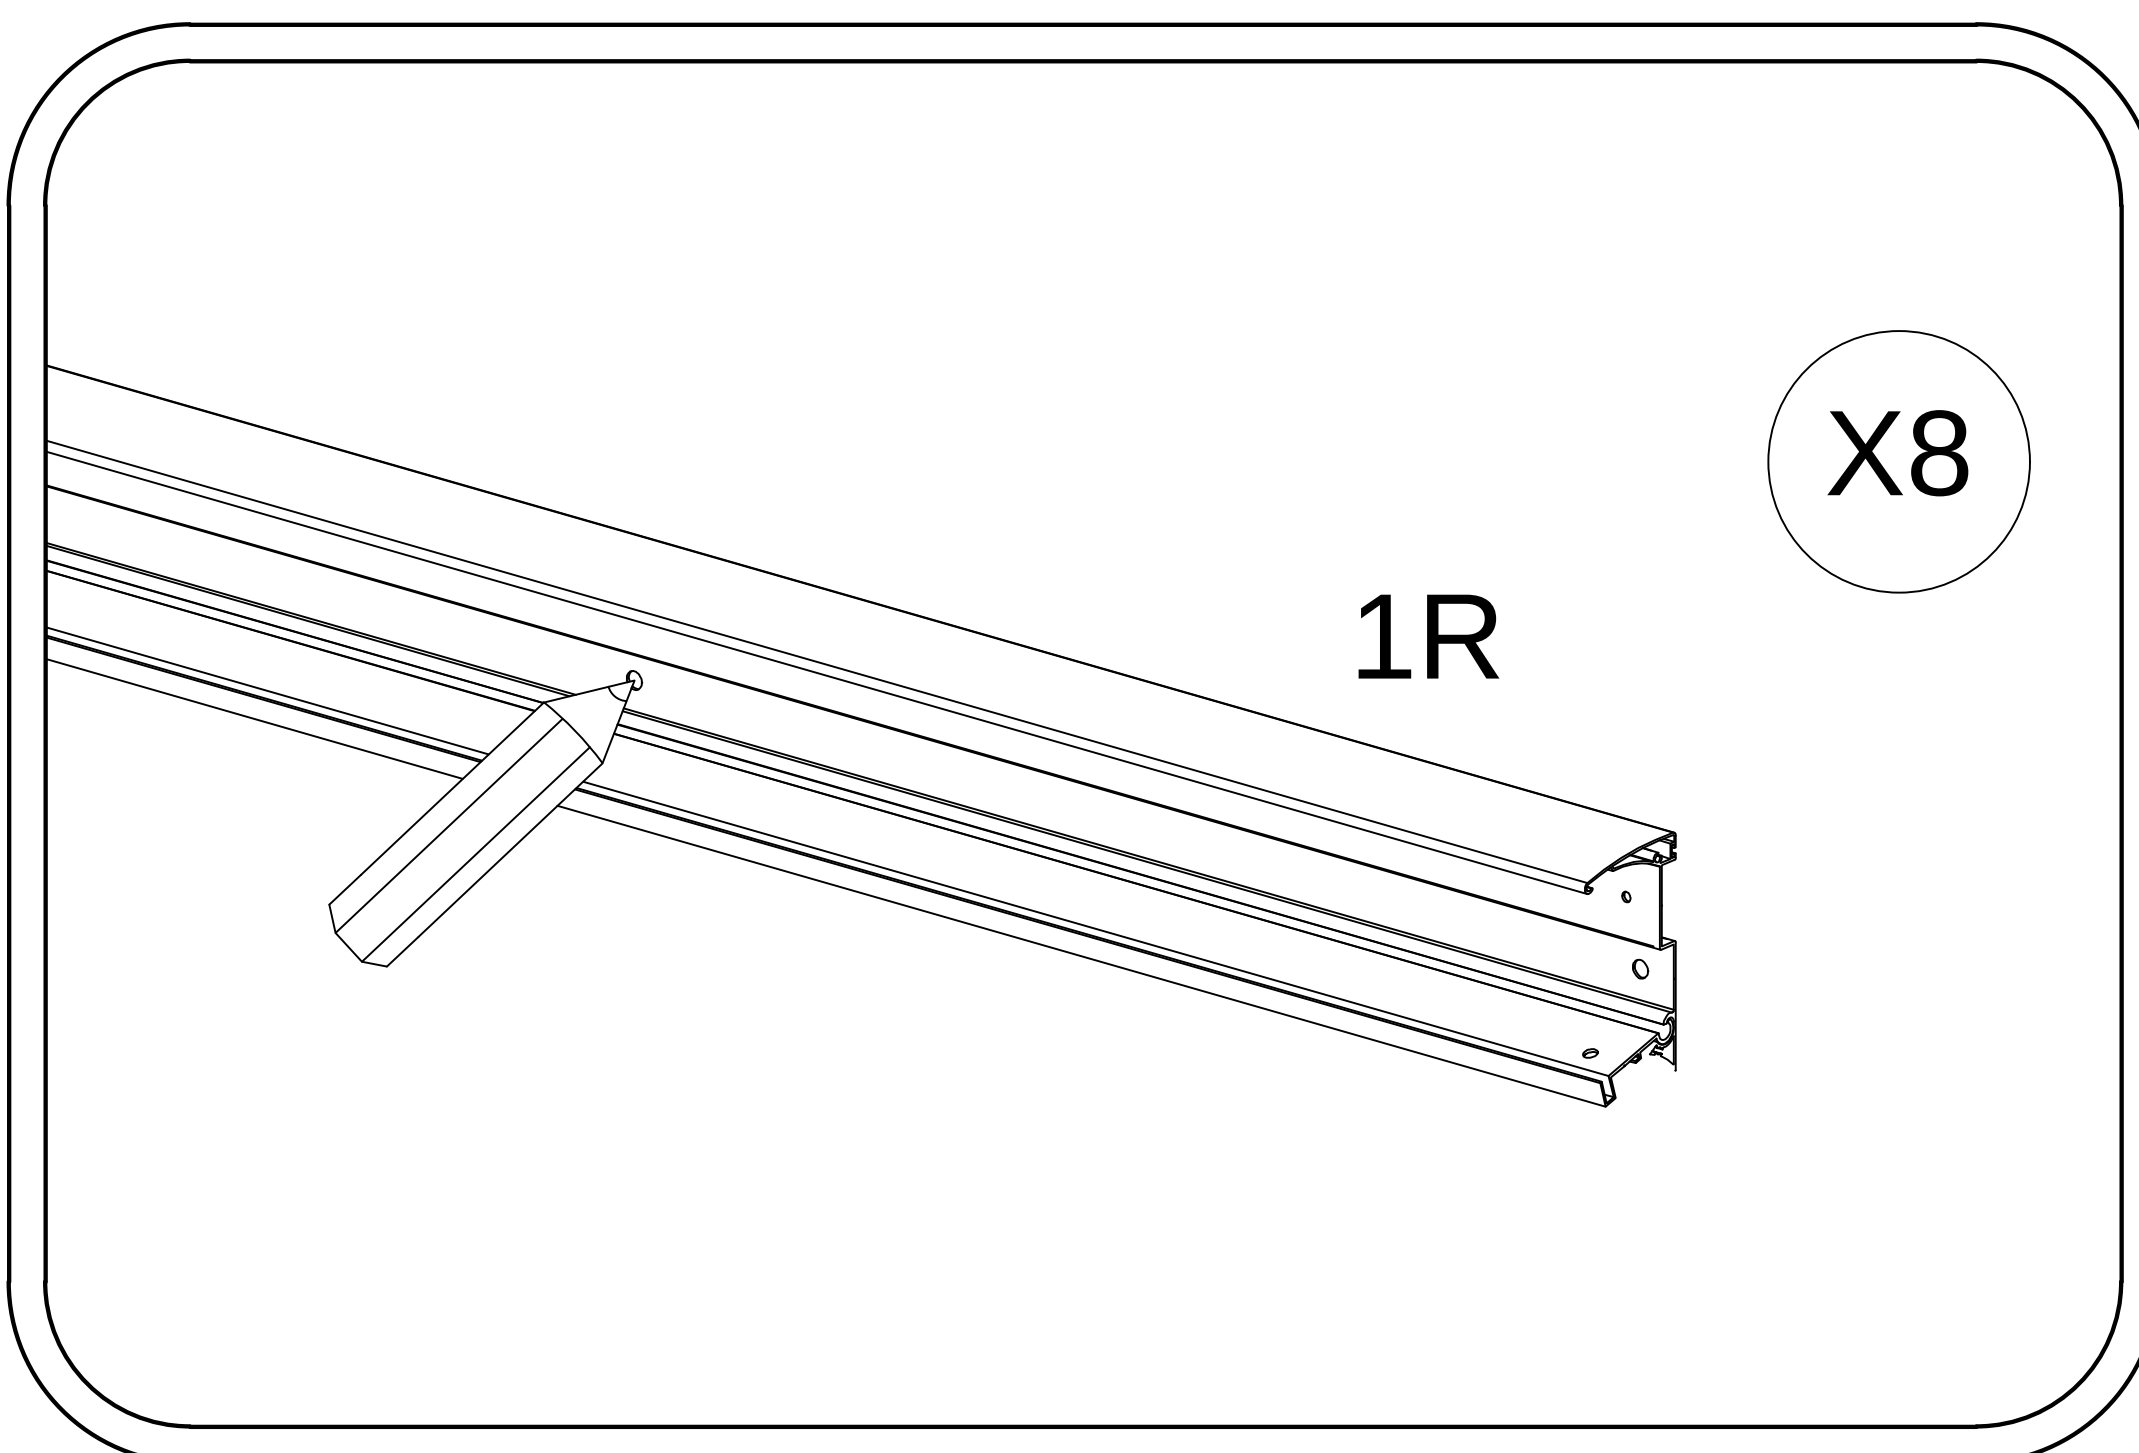


4

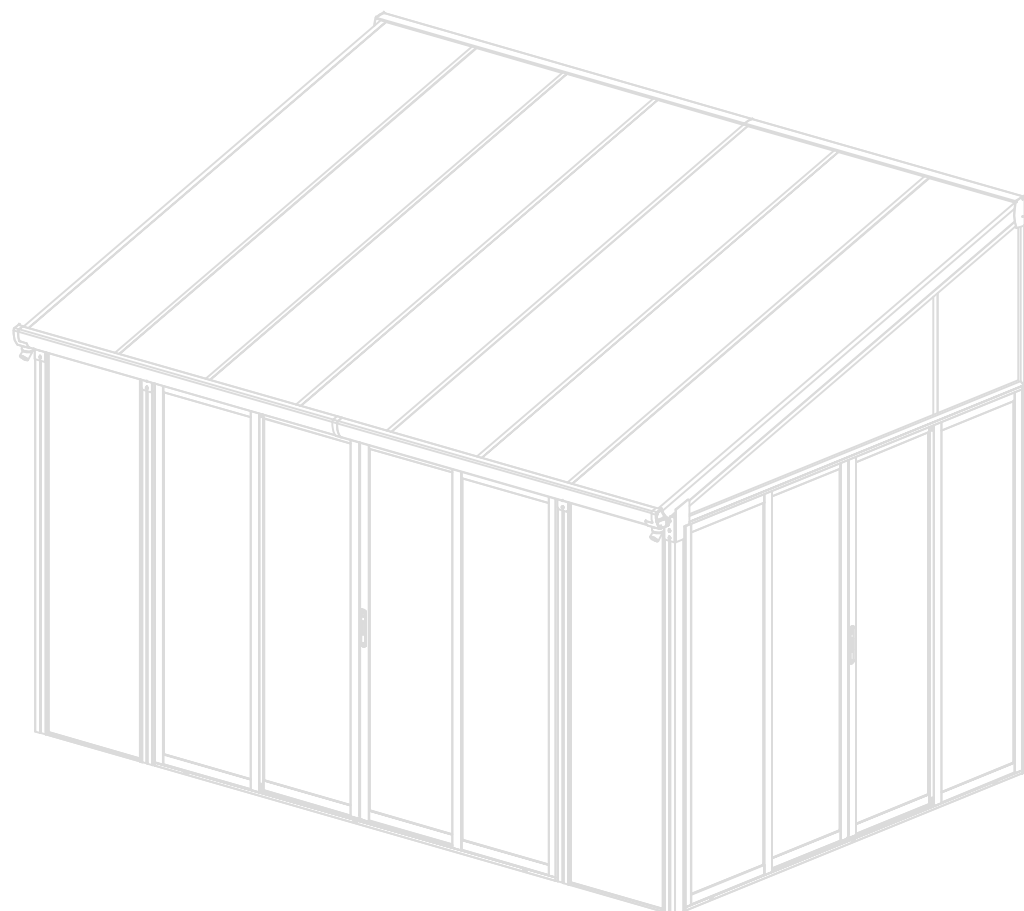

35 2 PCS




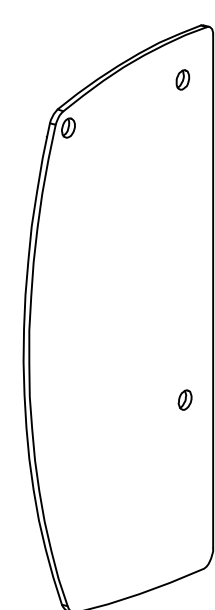



F1

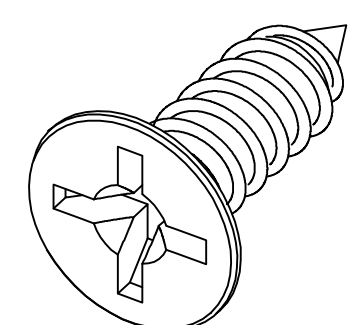








6 PCS









ST4.2X20

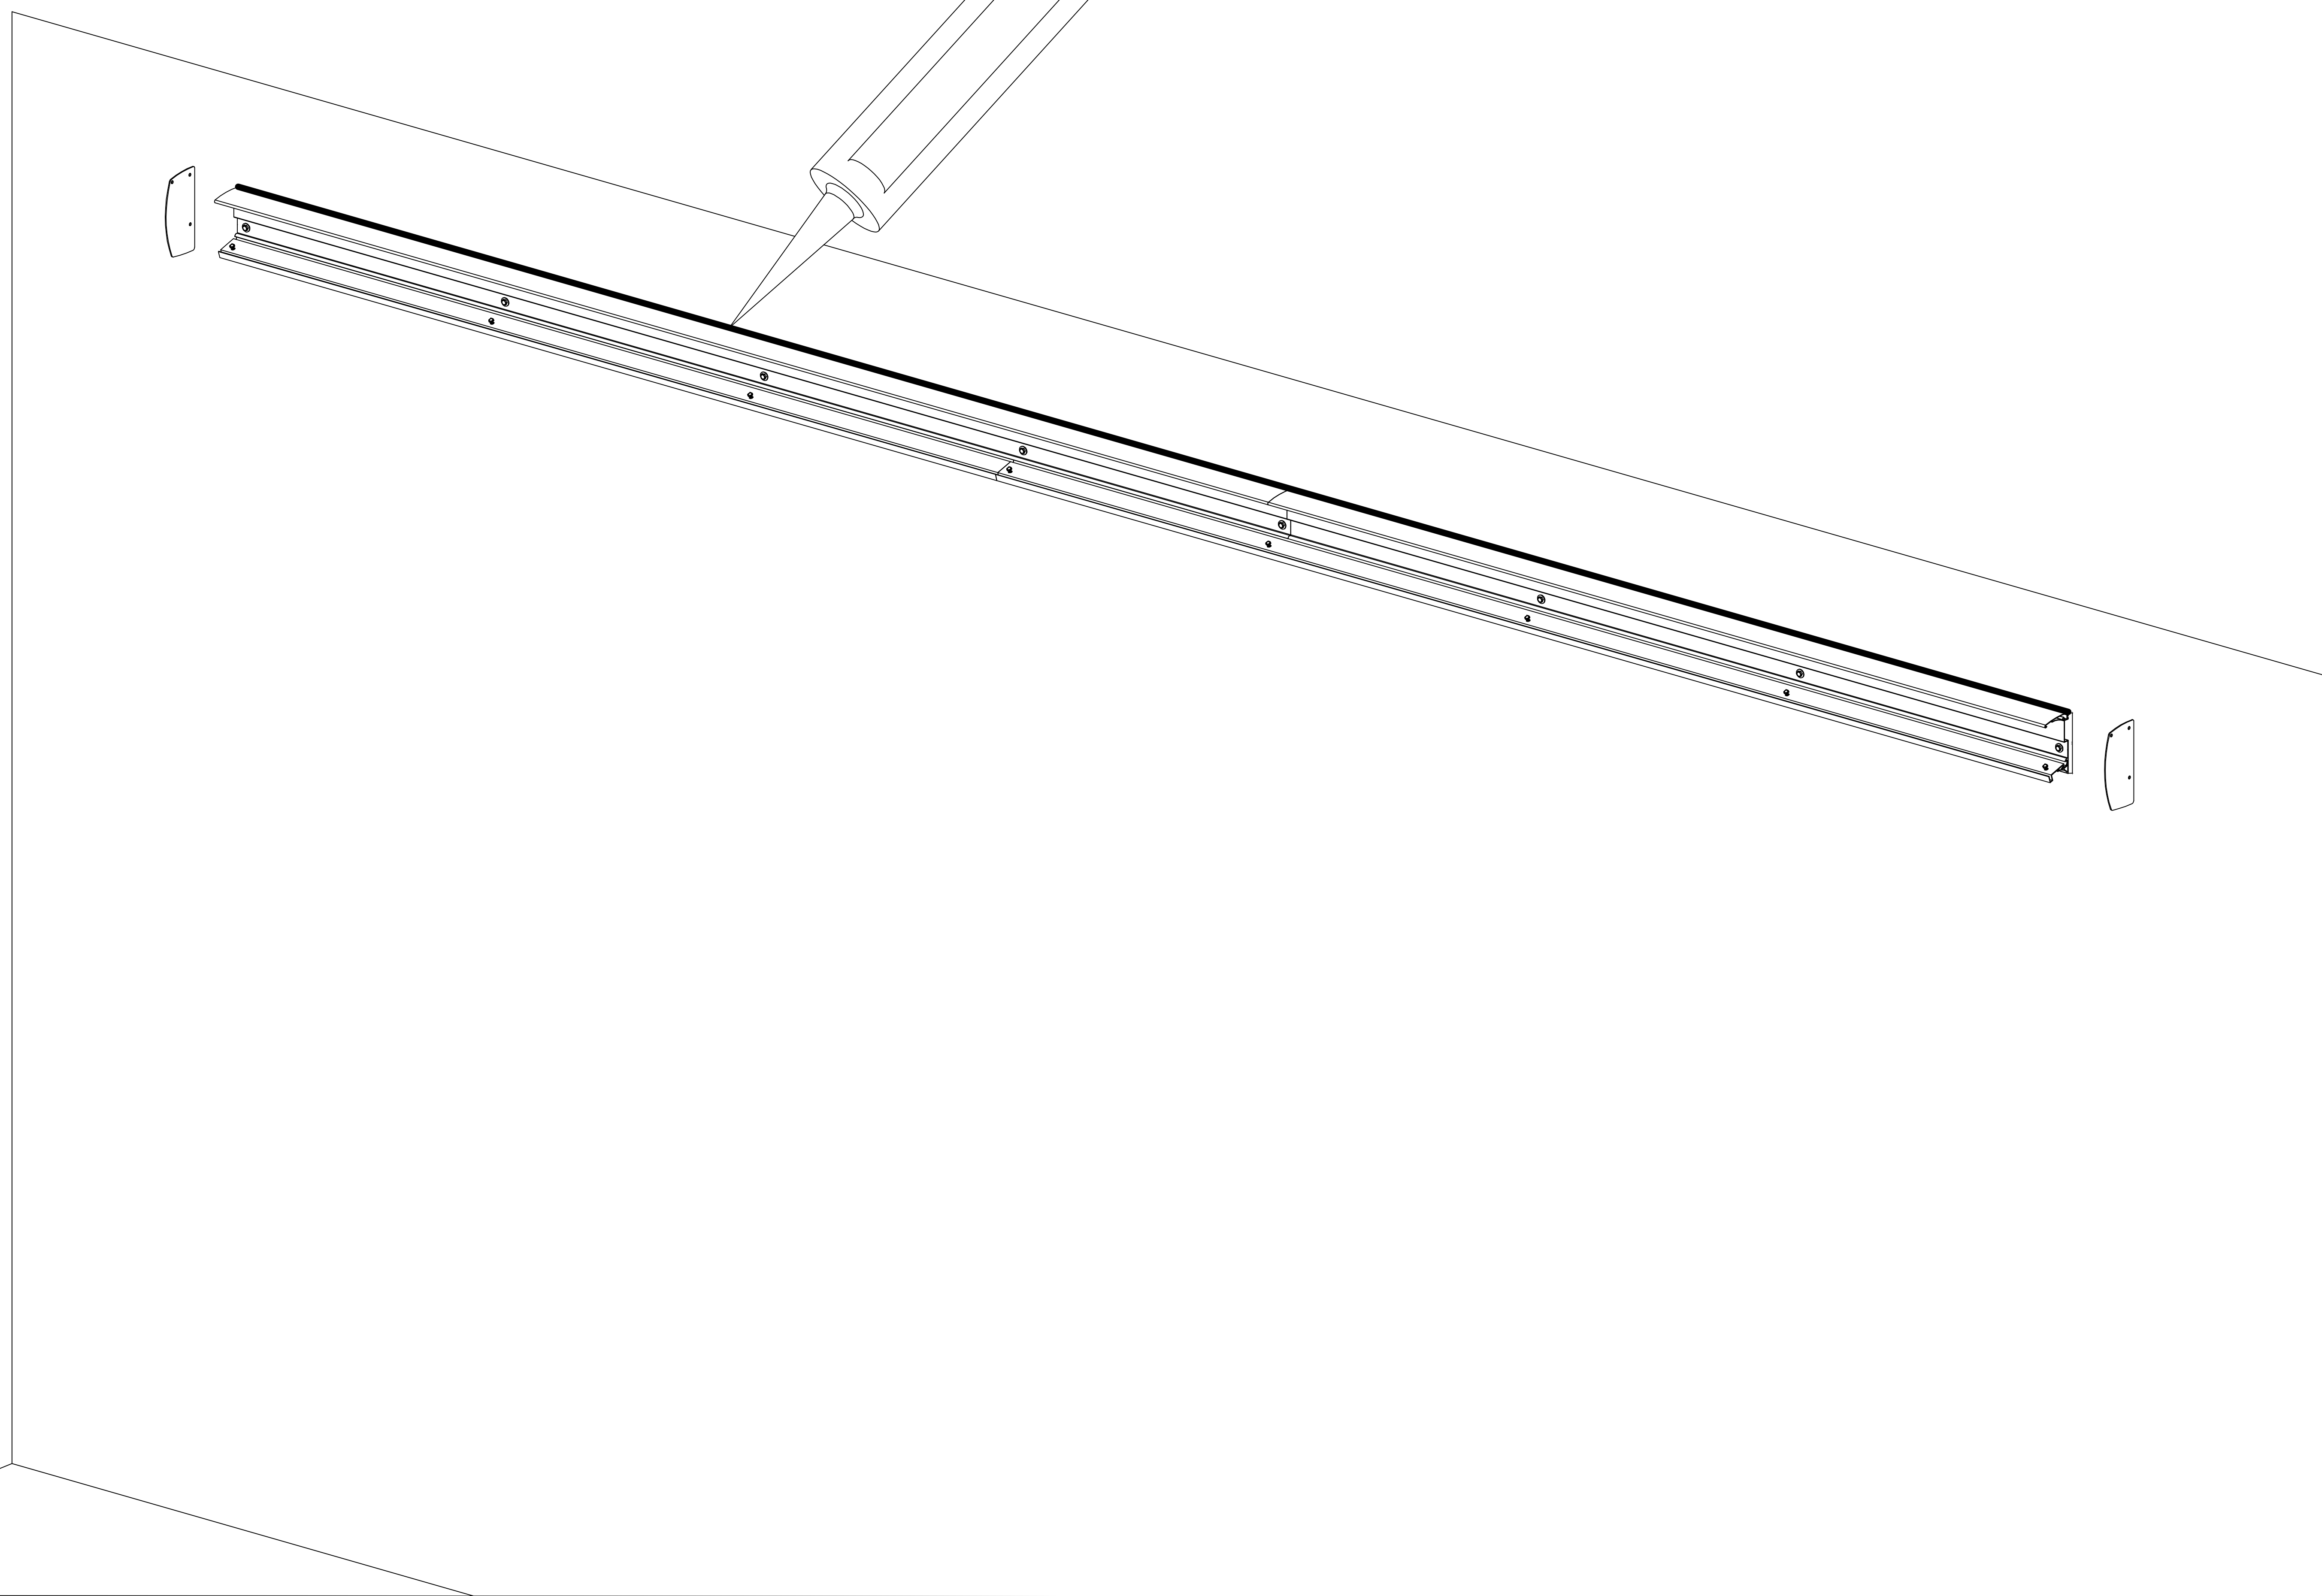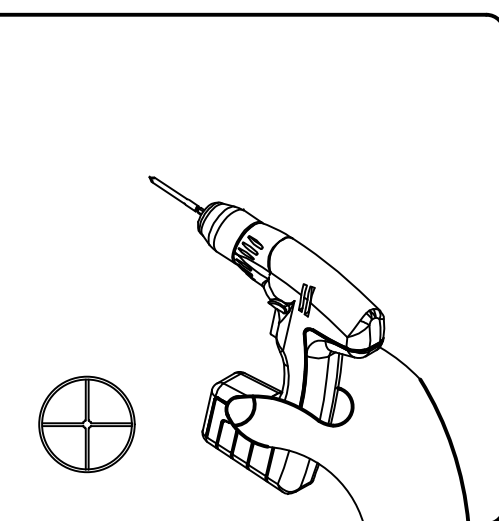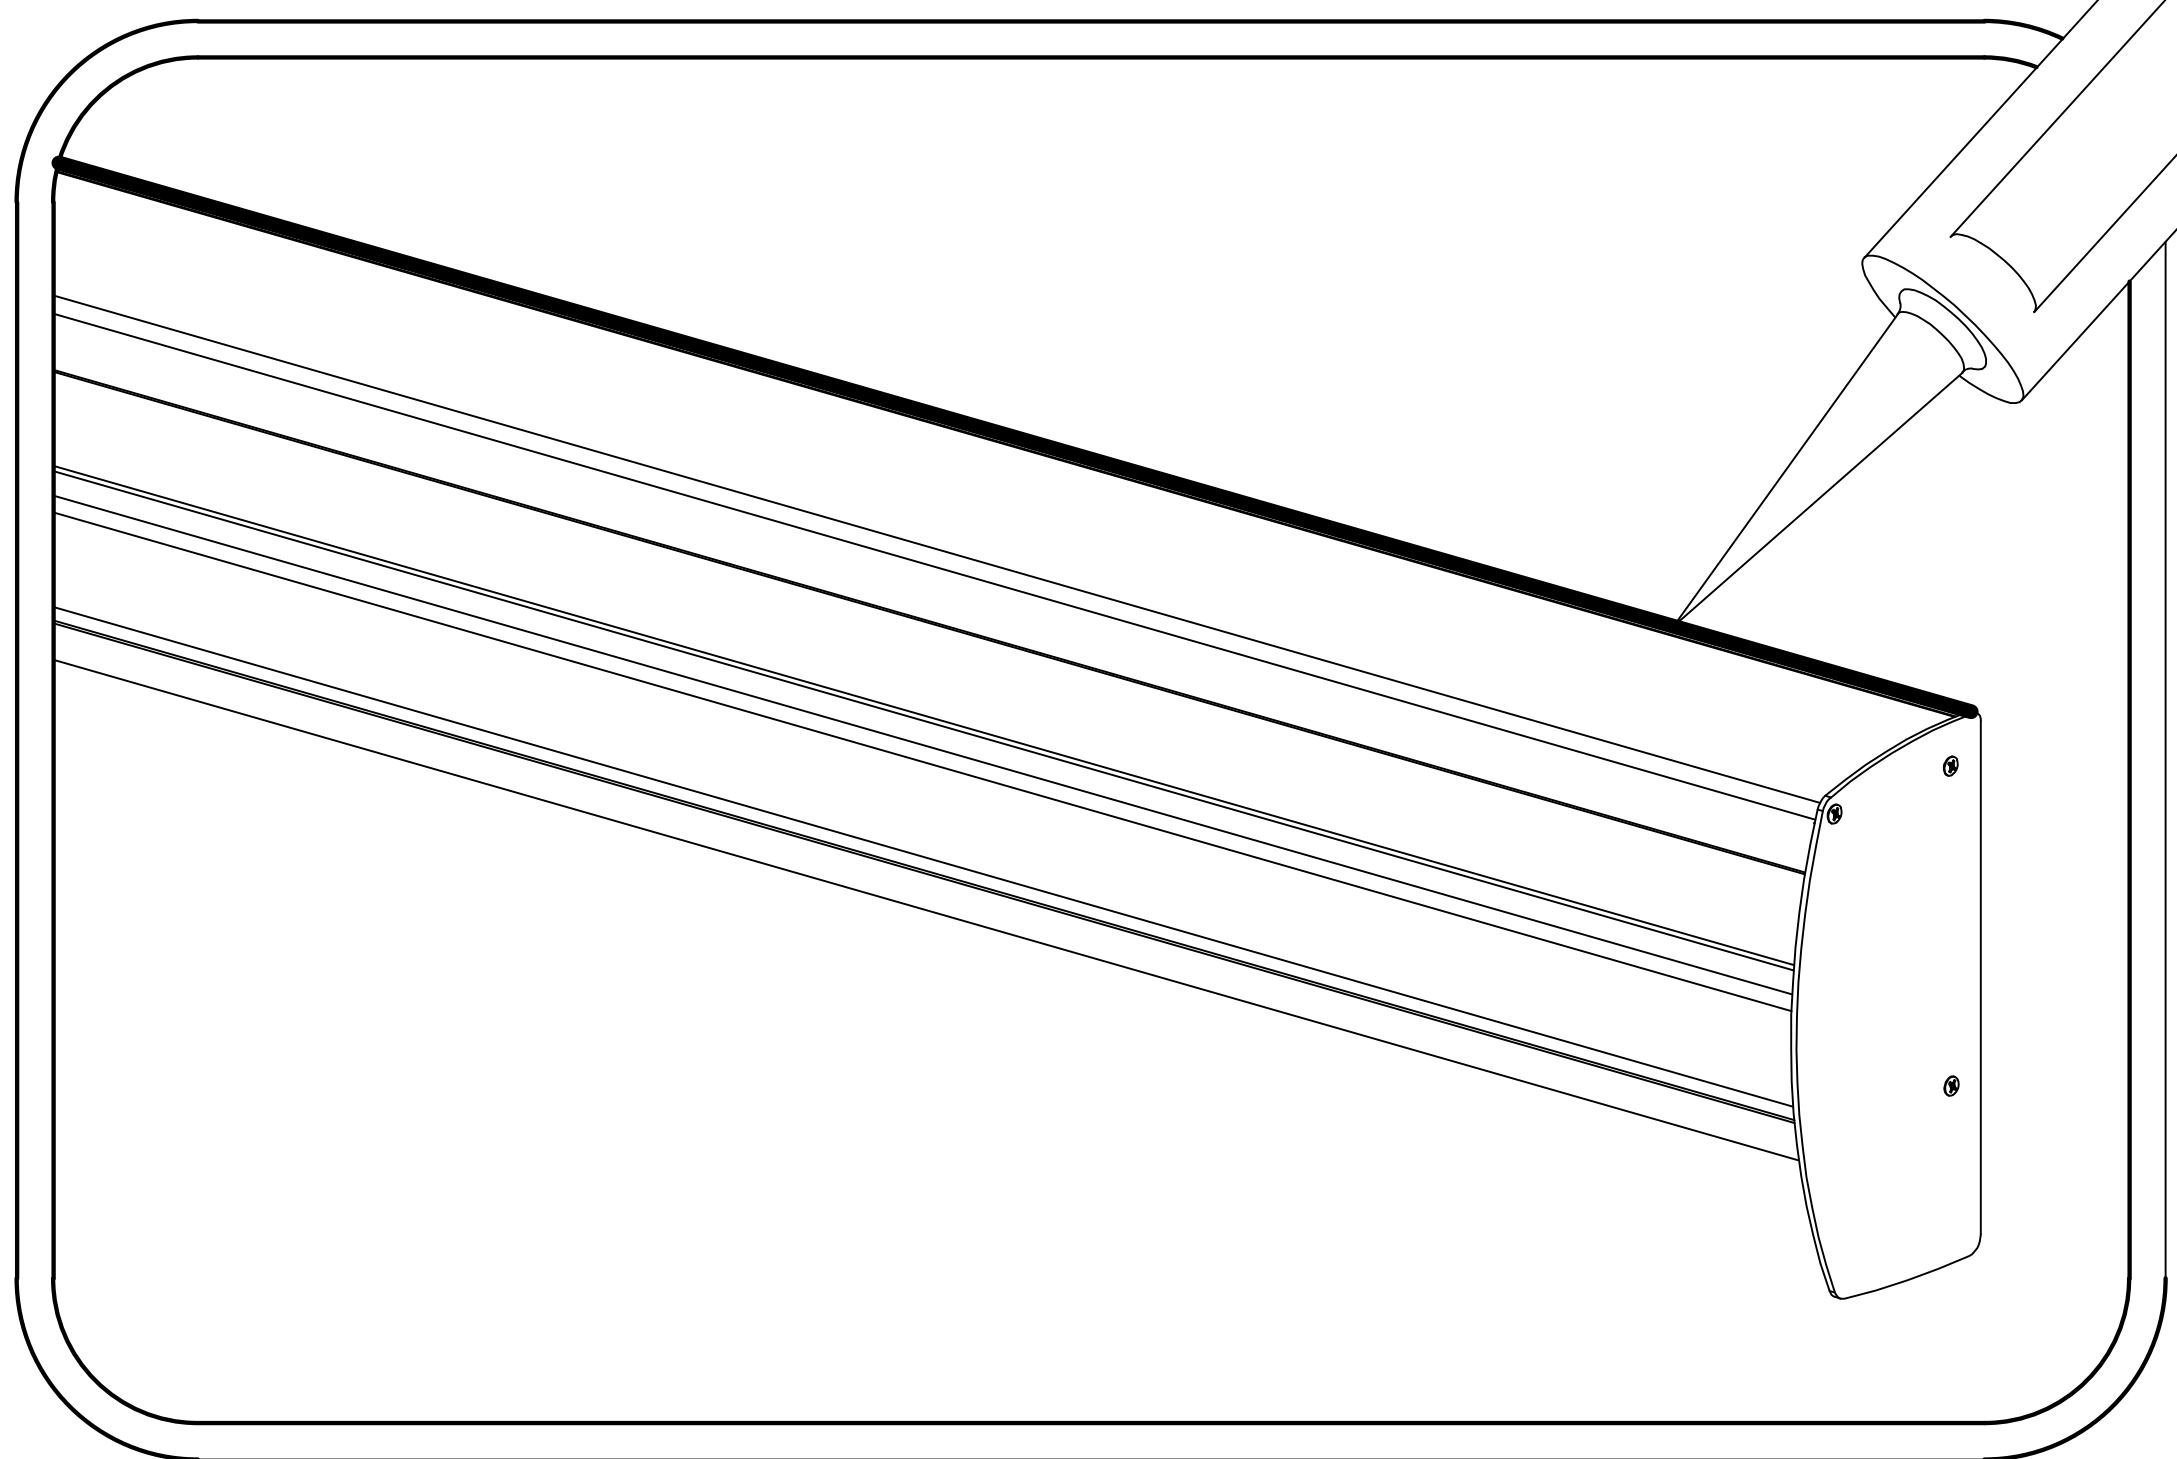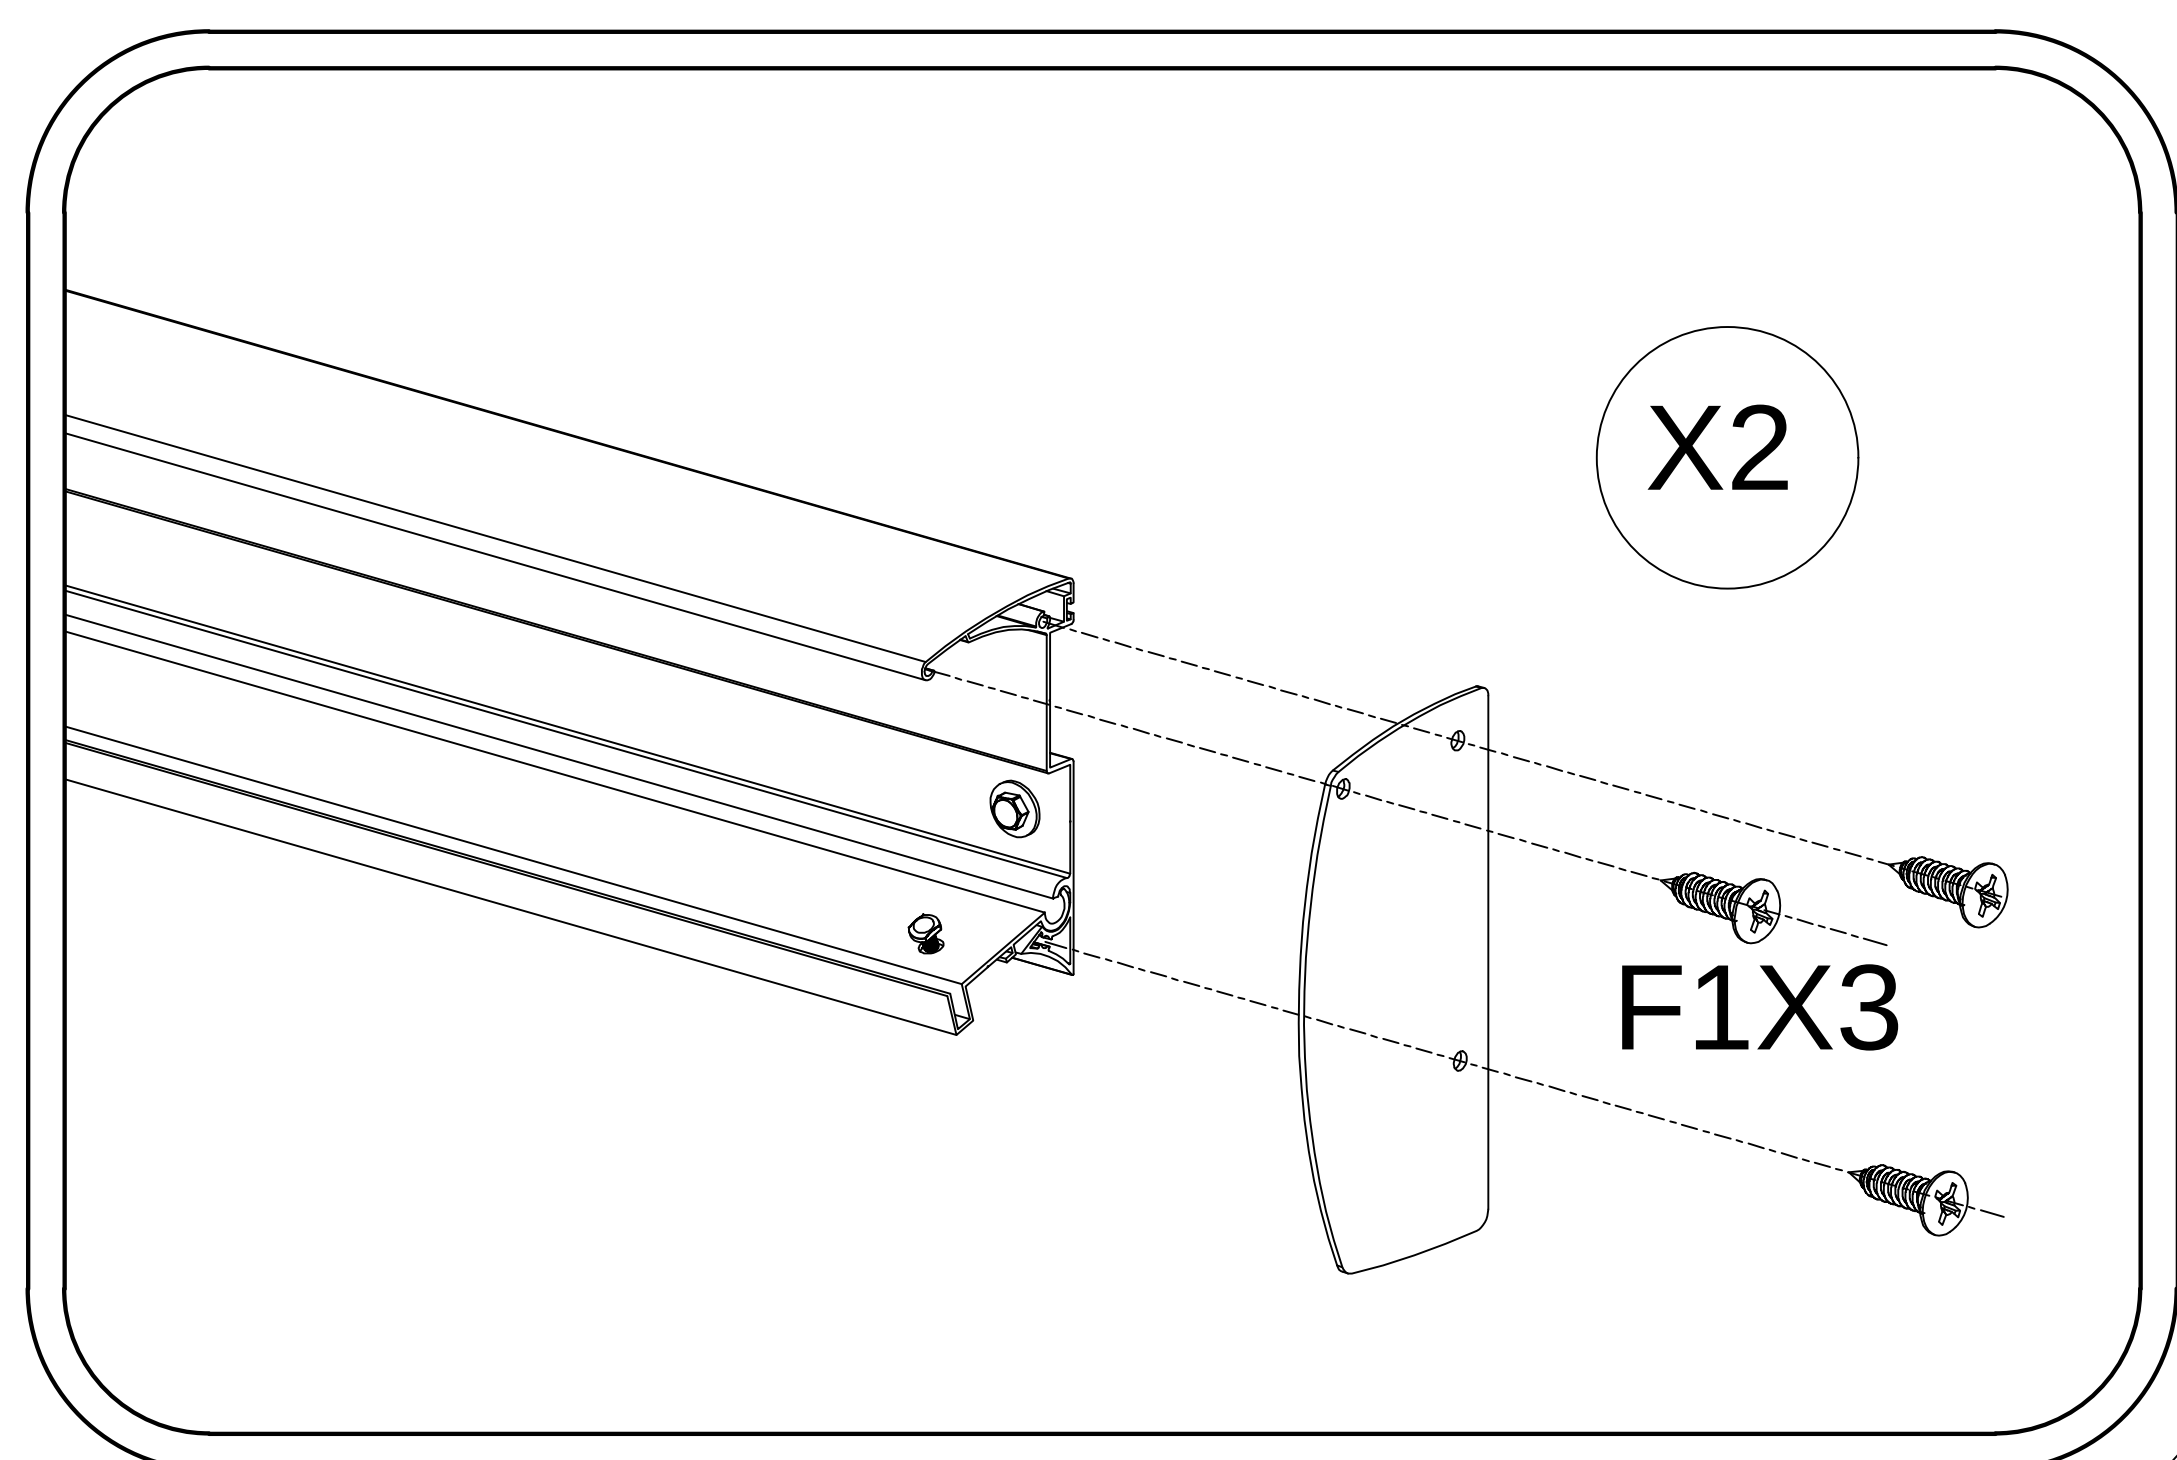


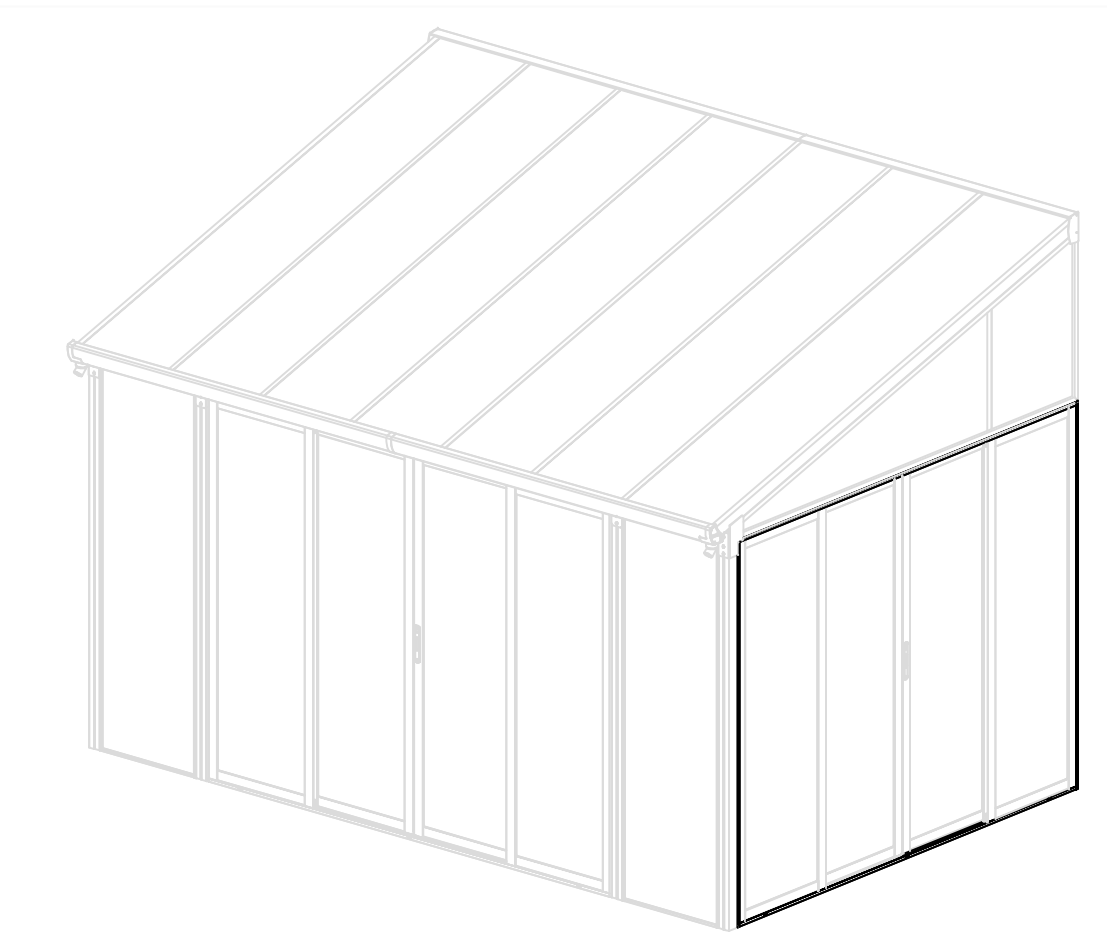


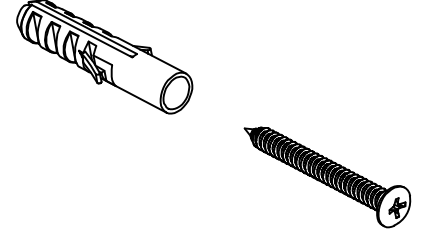F6  16 PCS
ST6.3X60

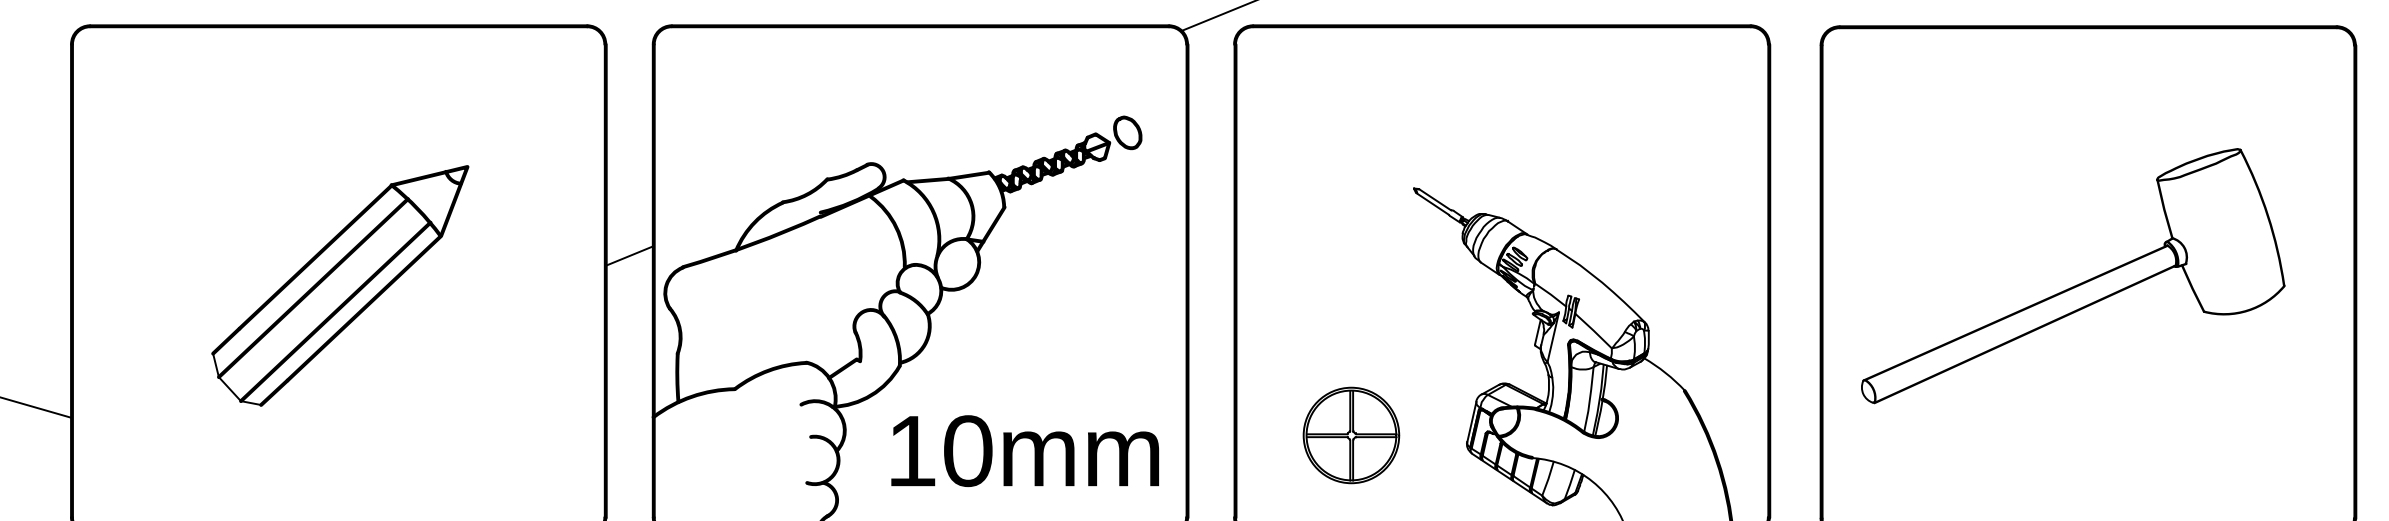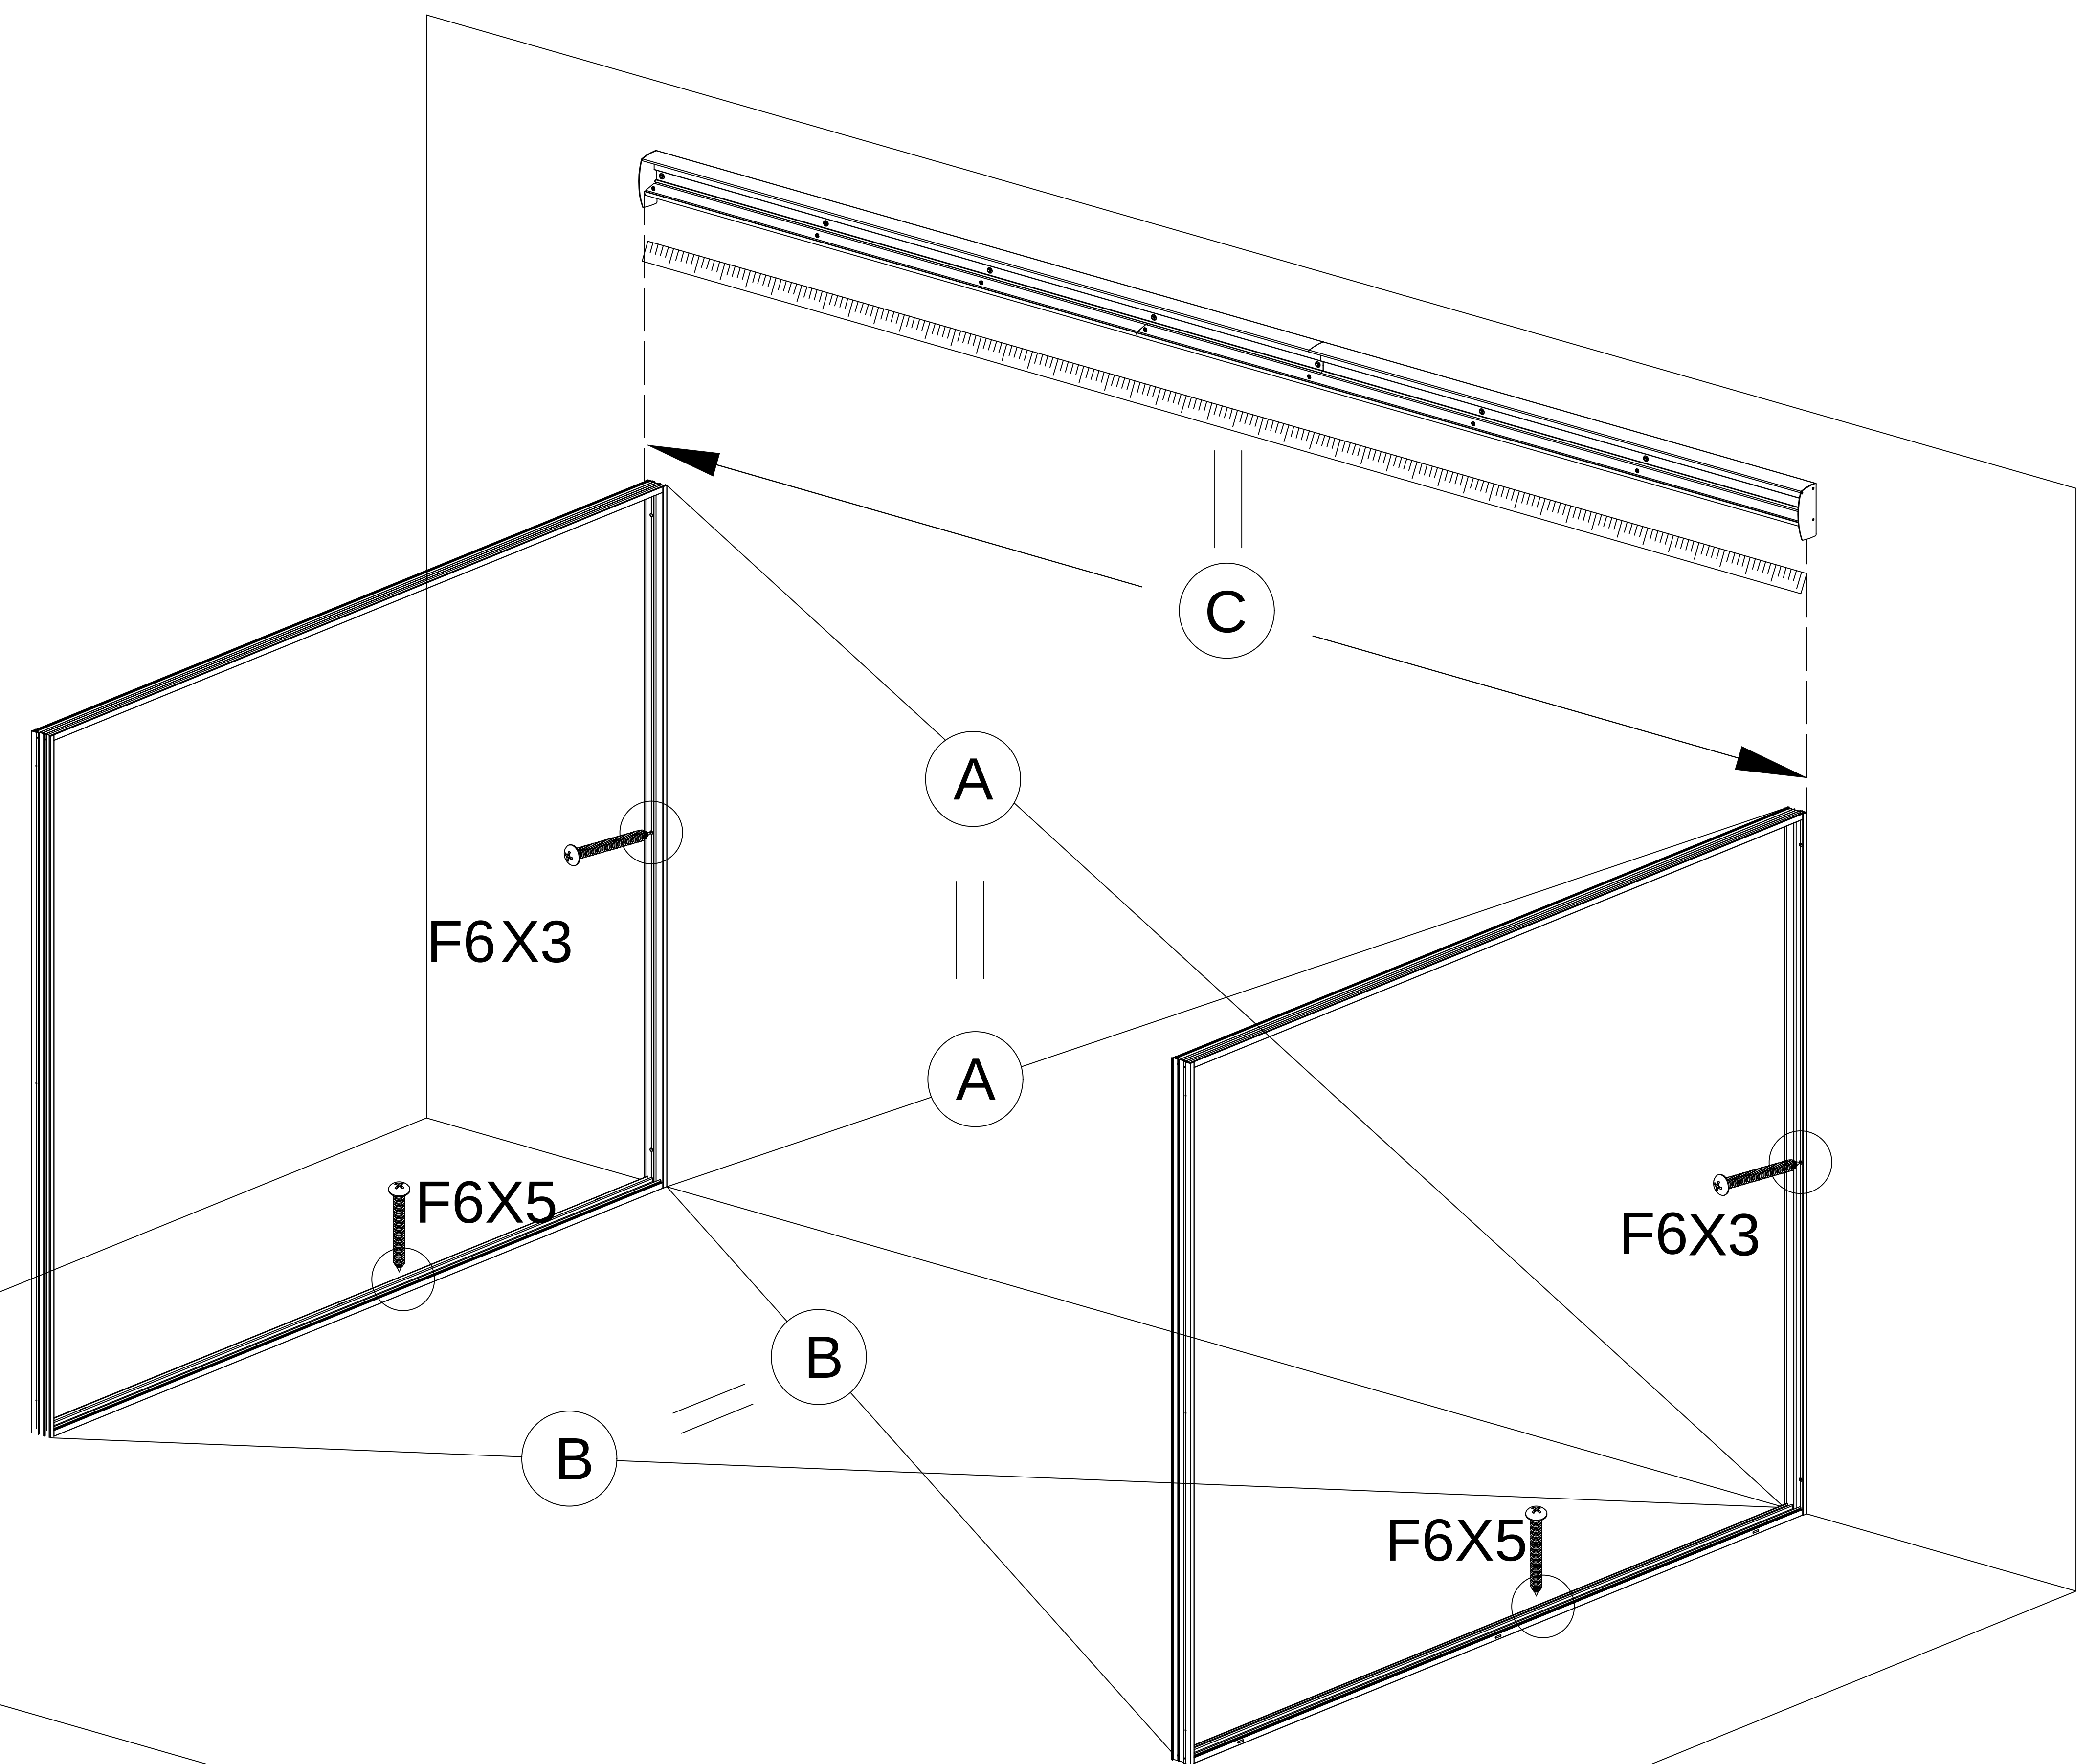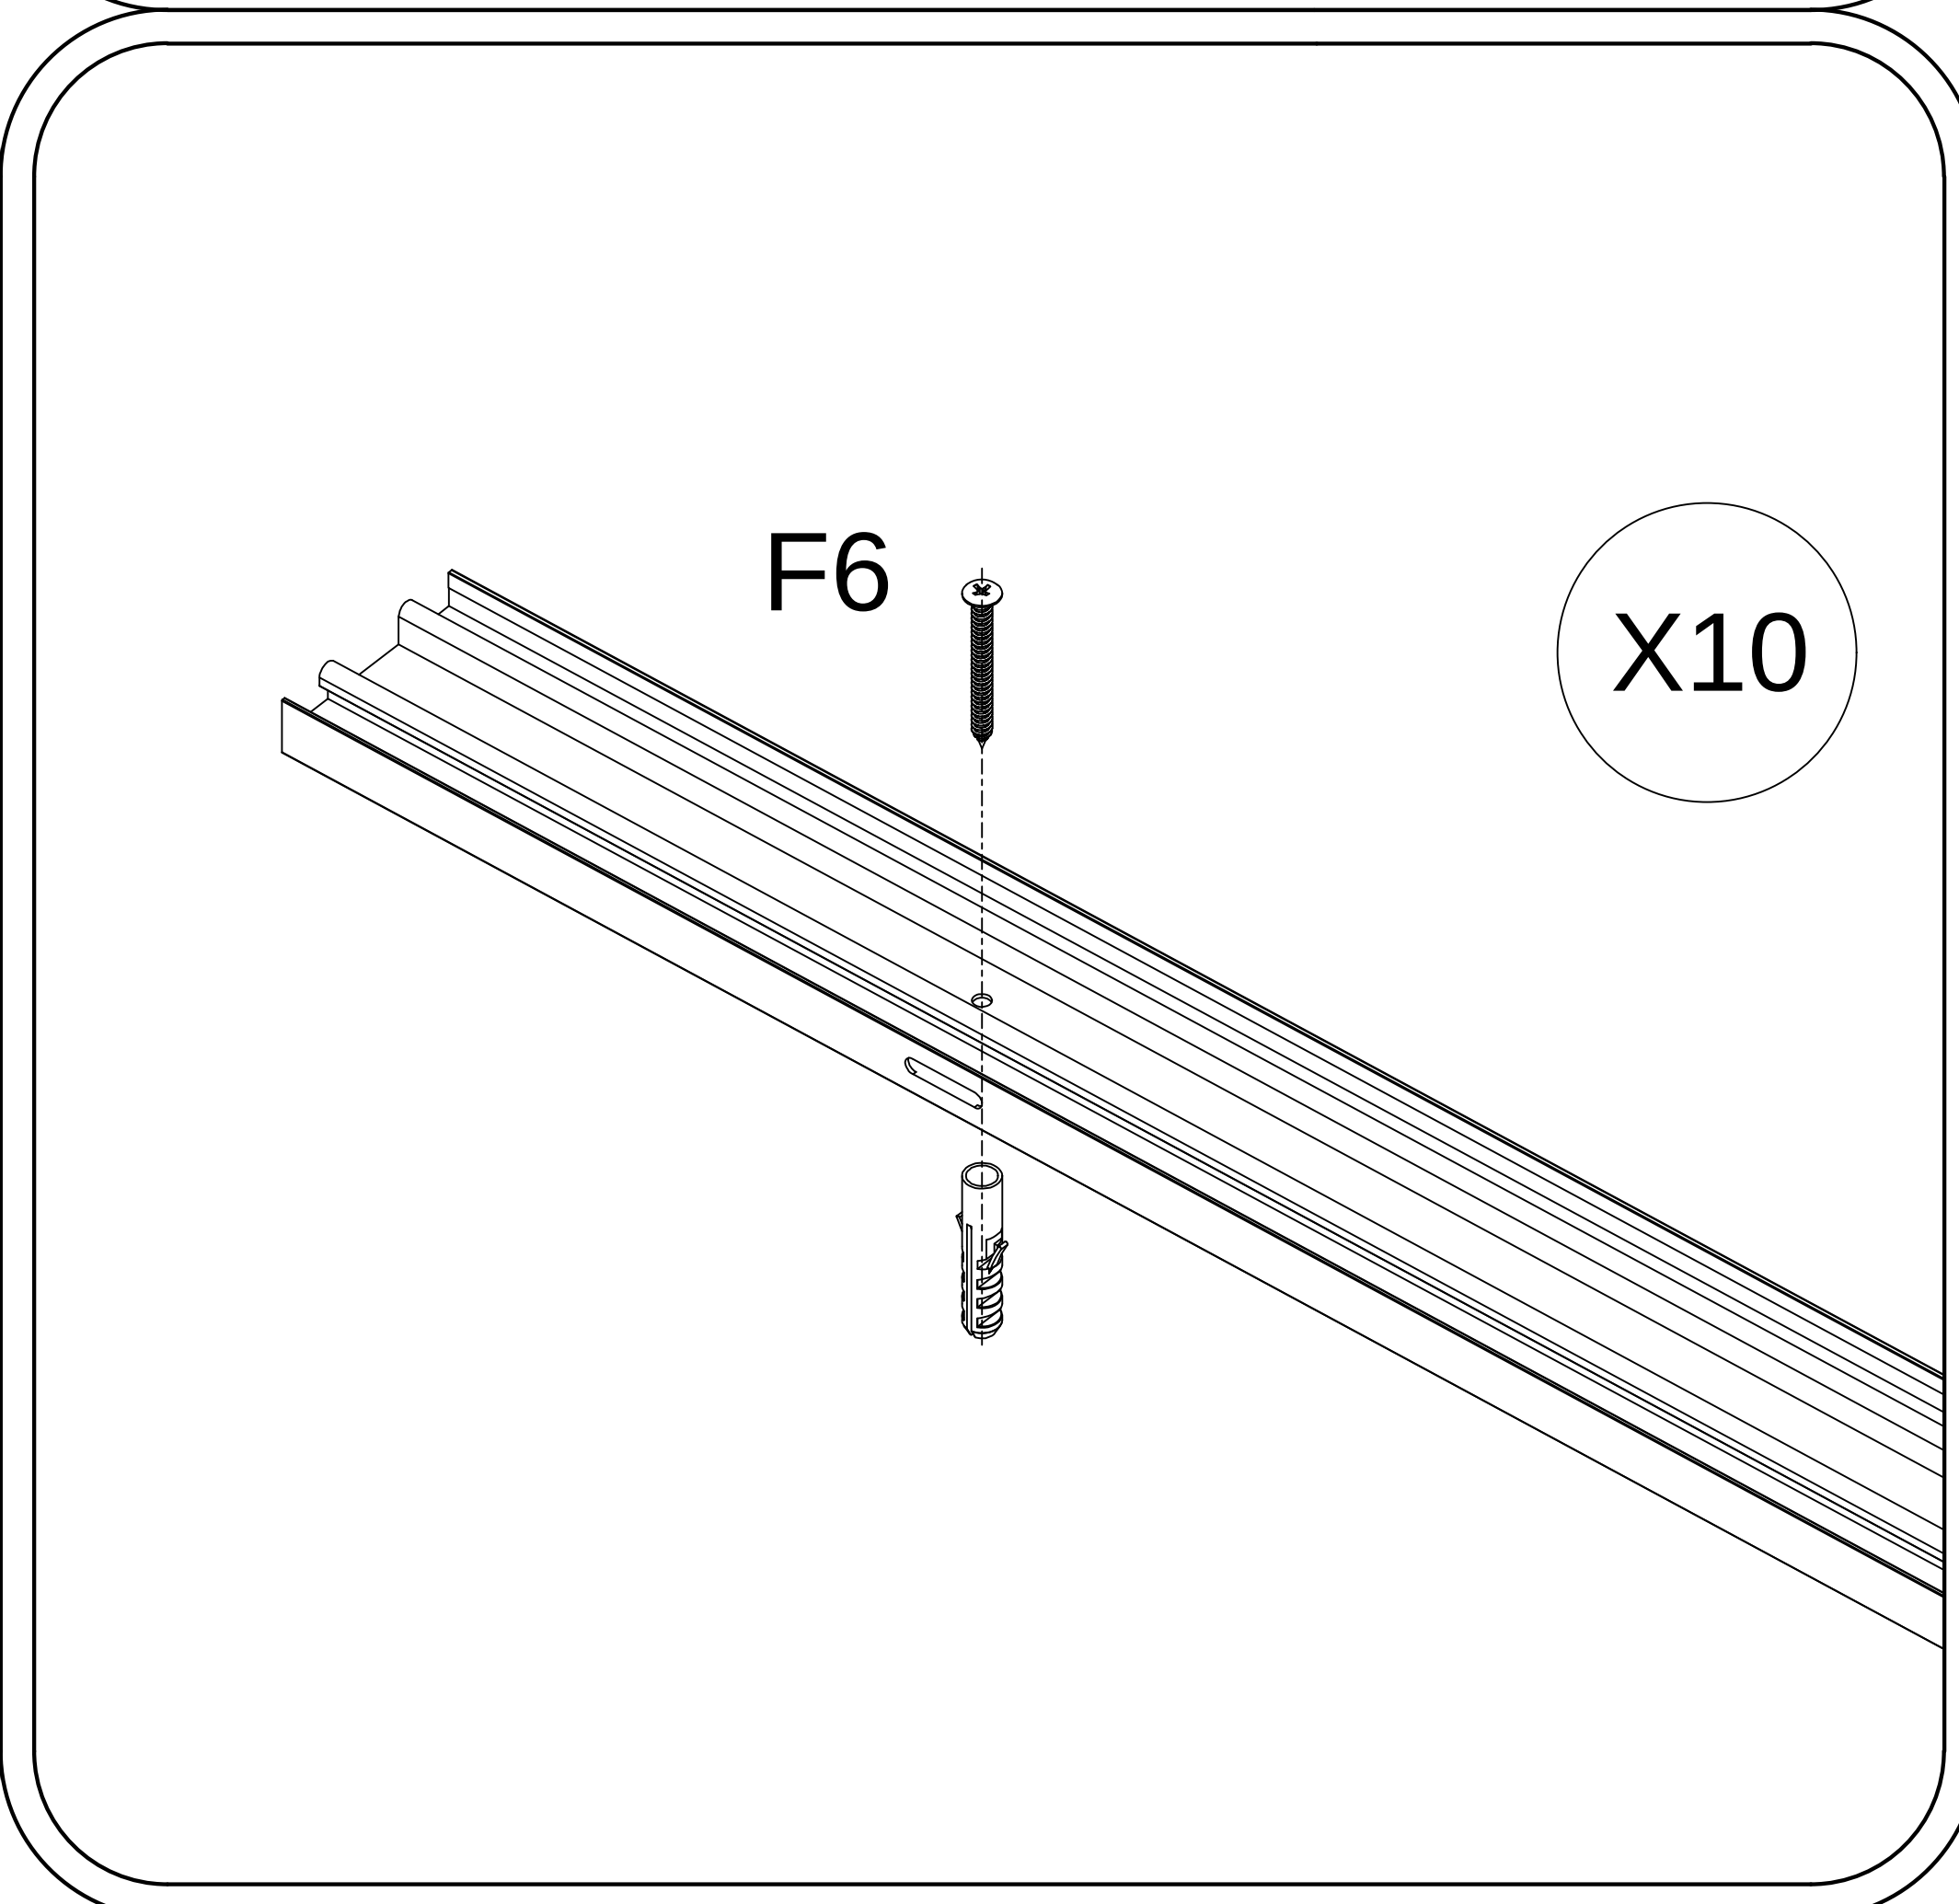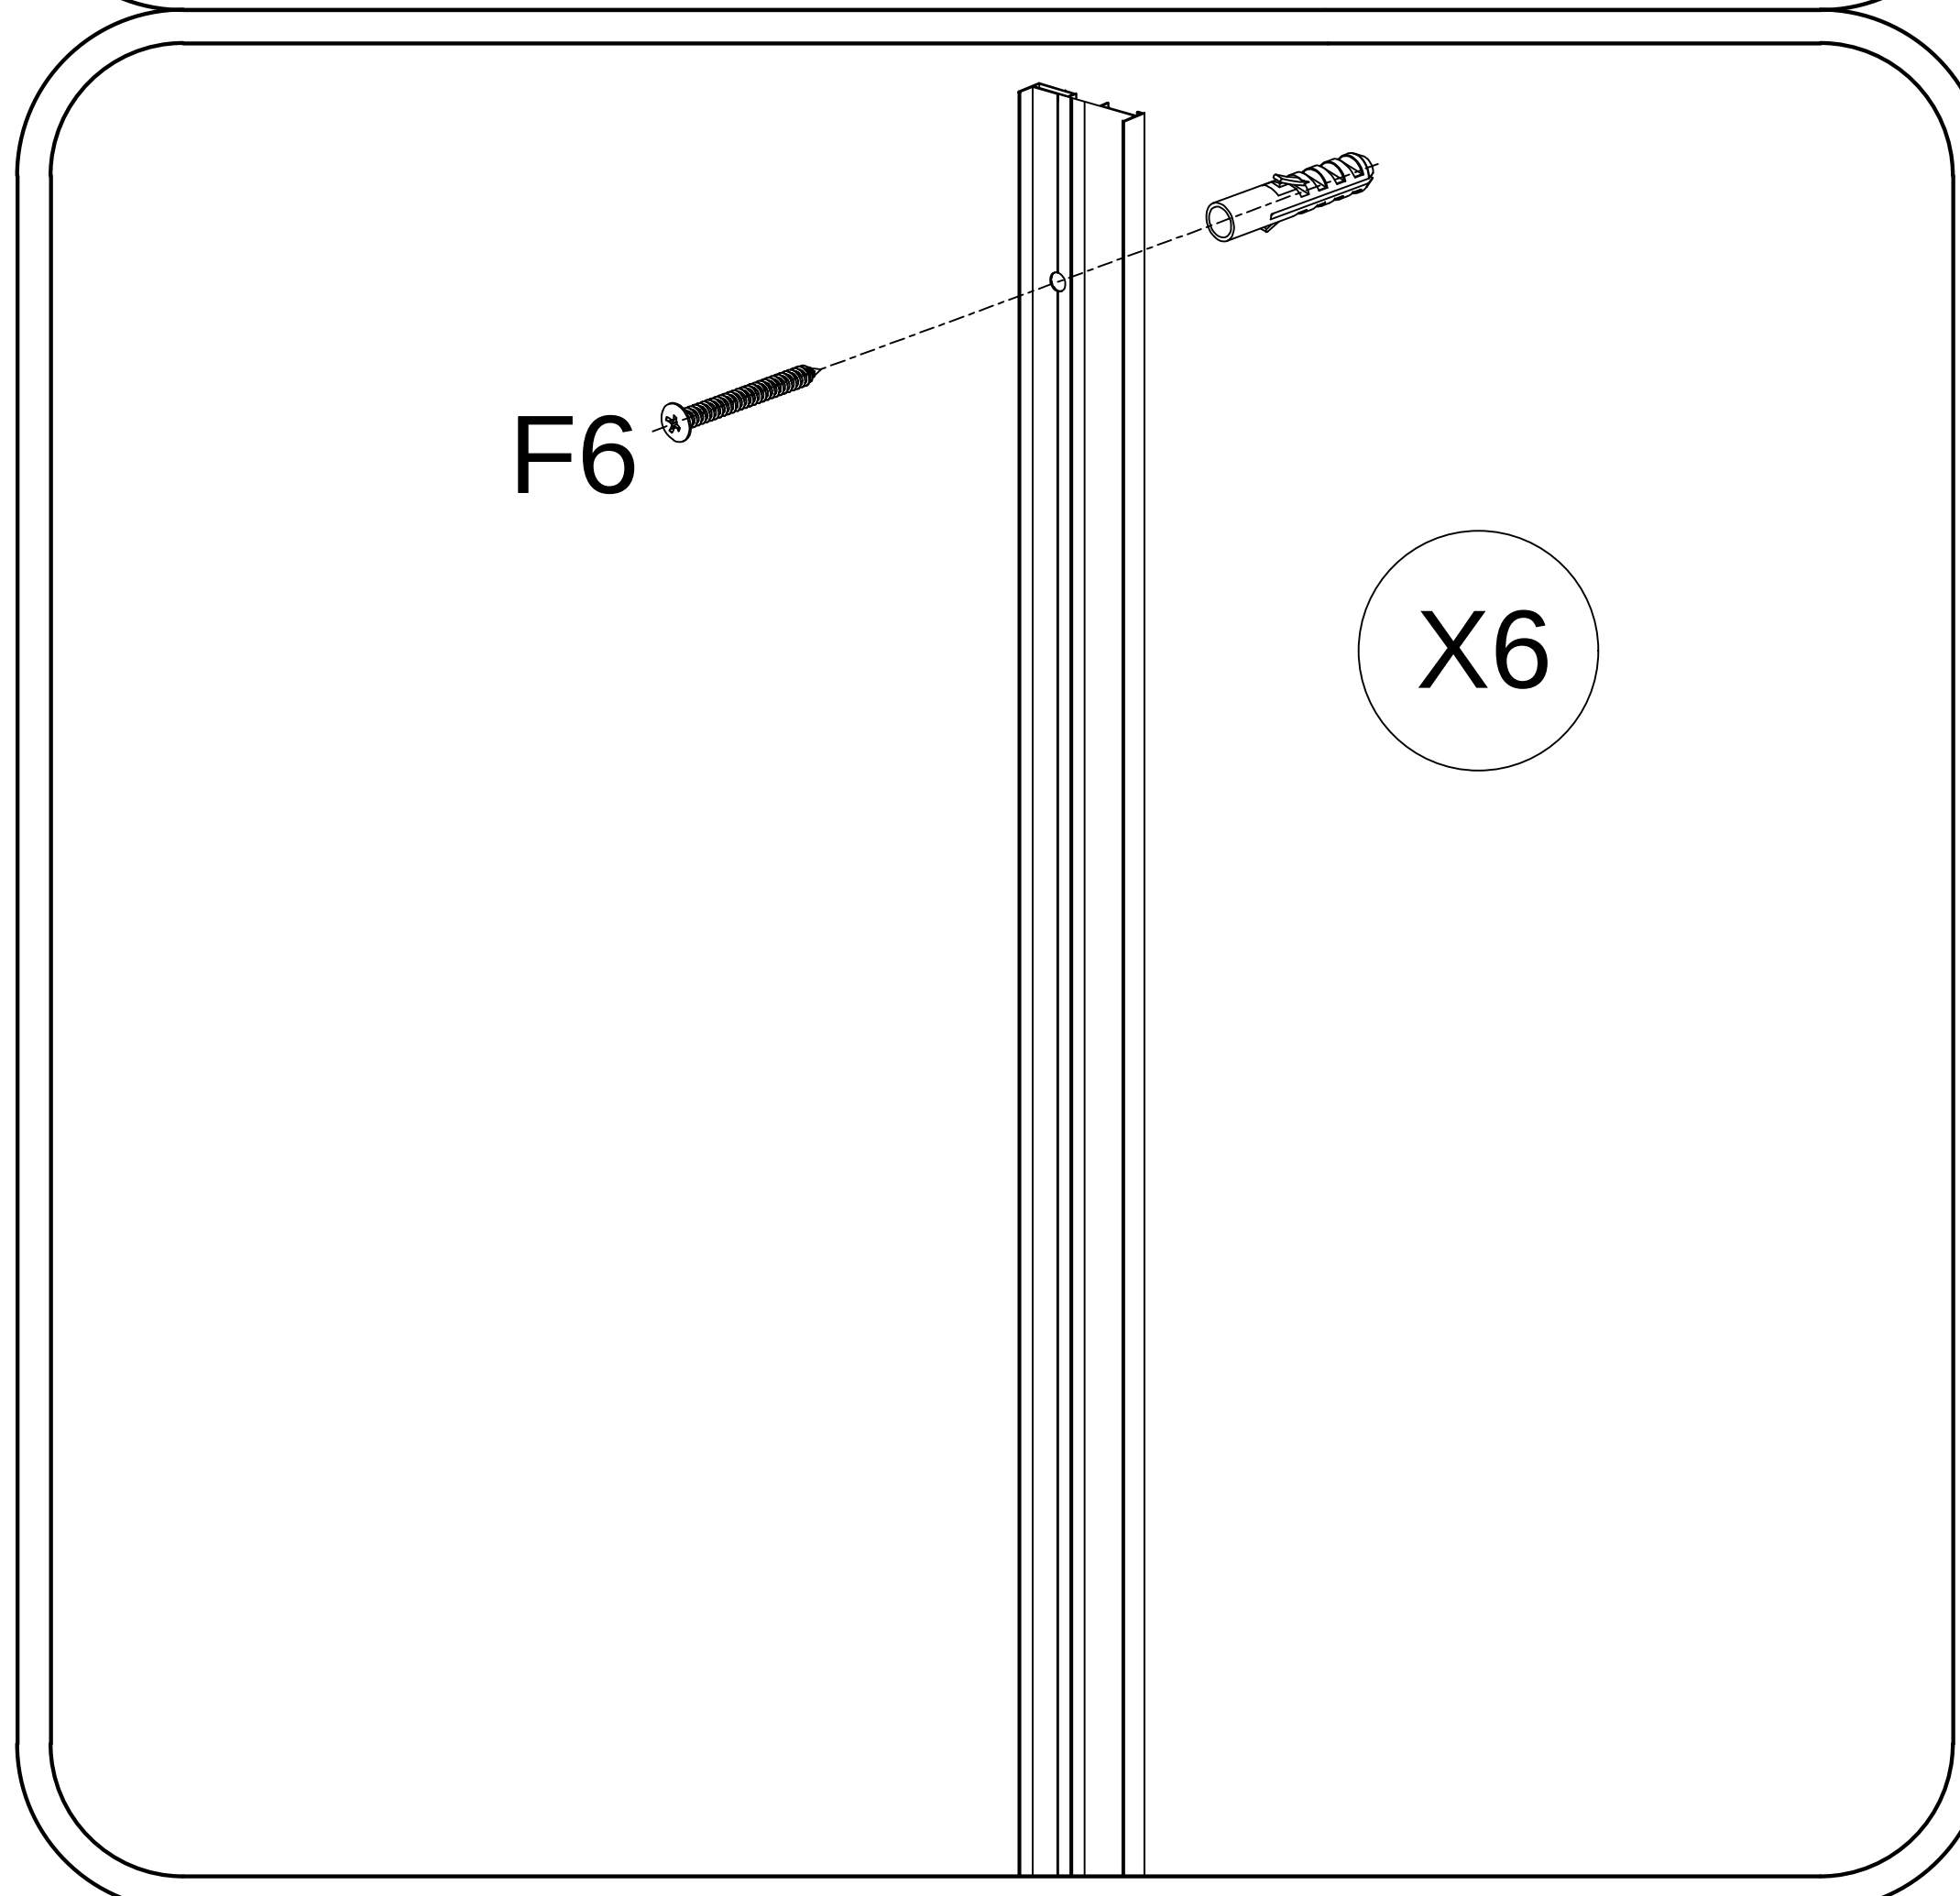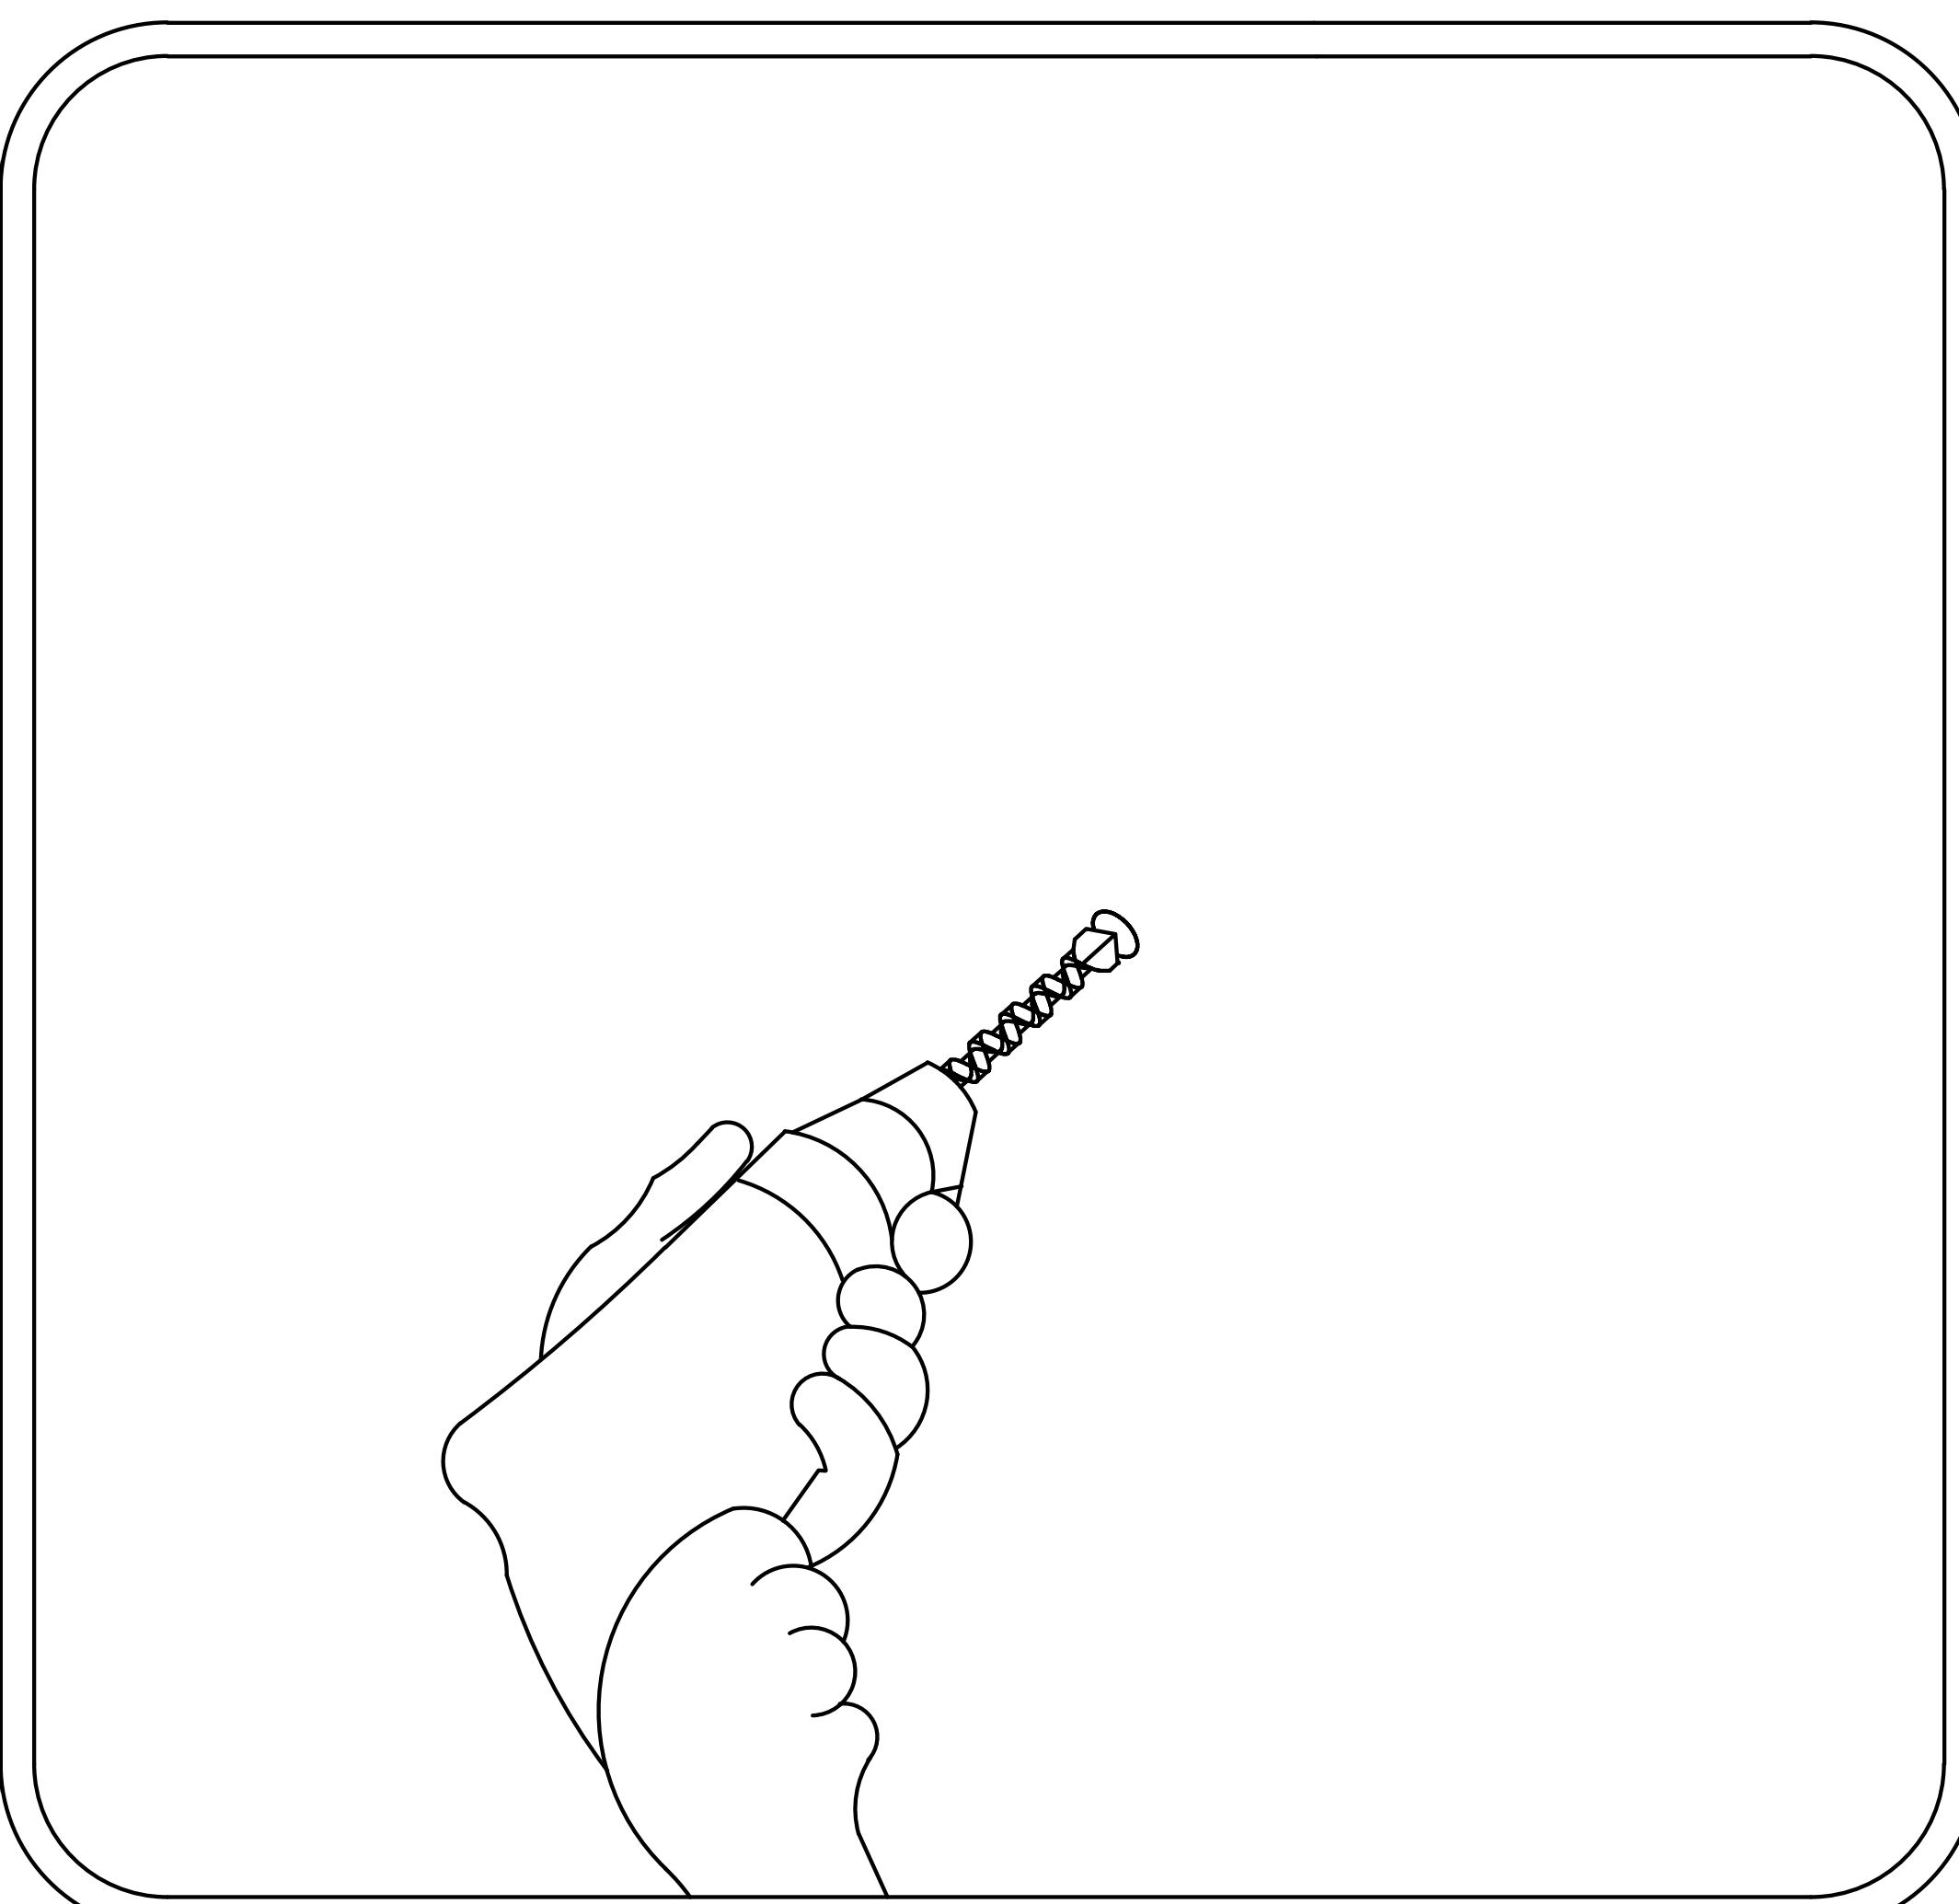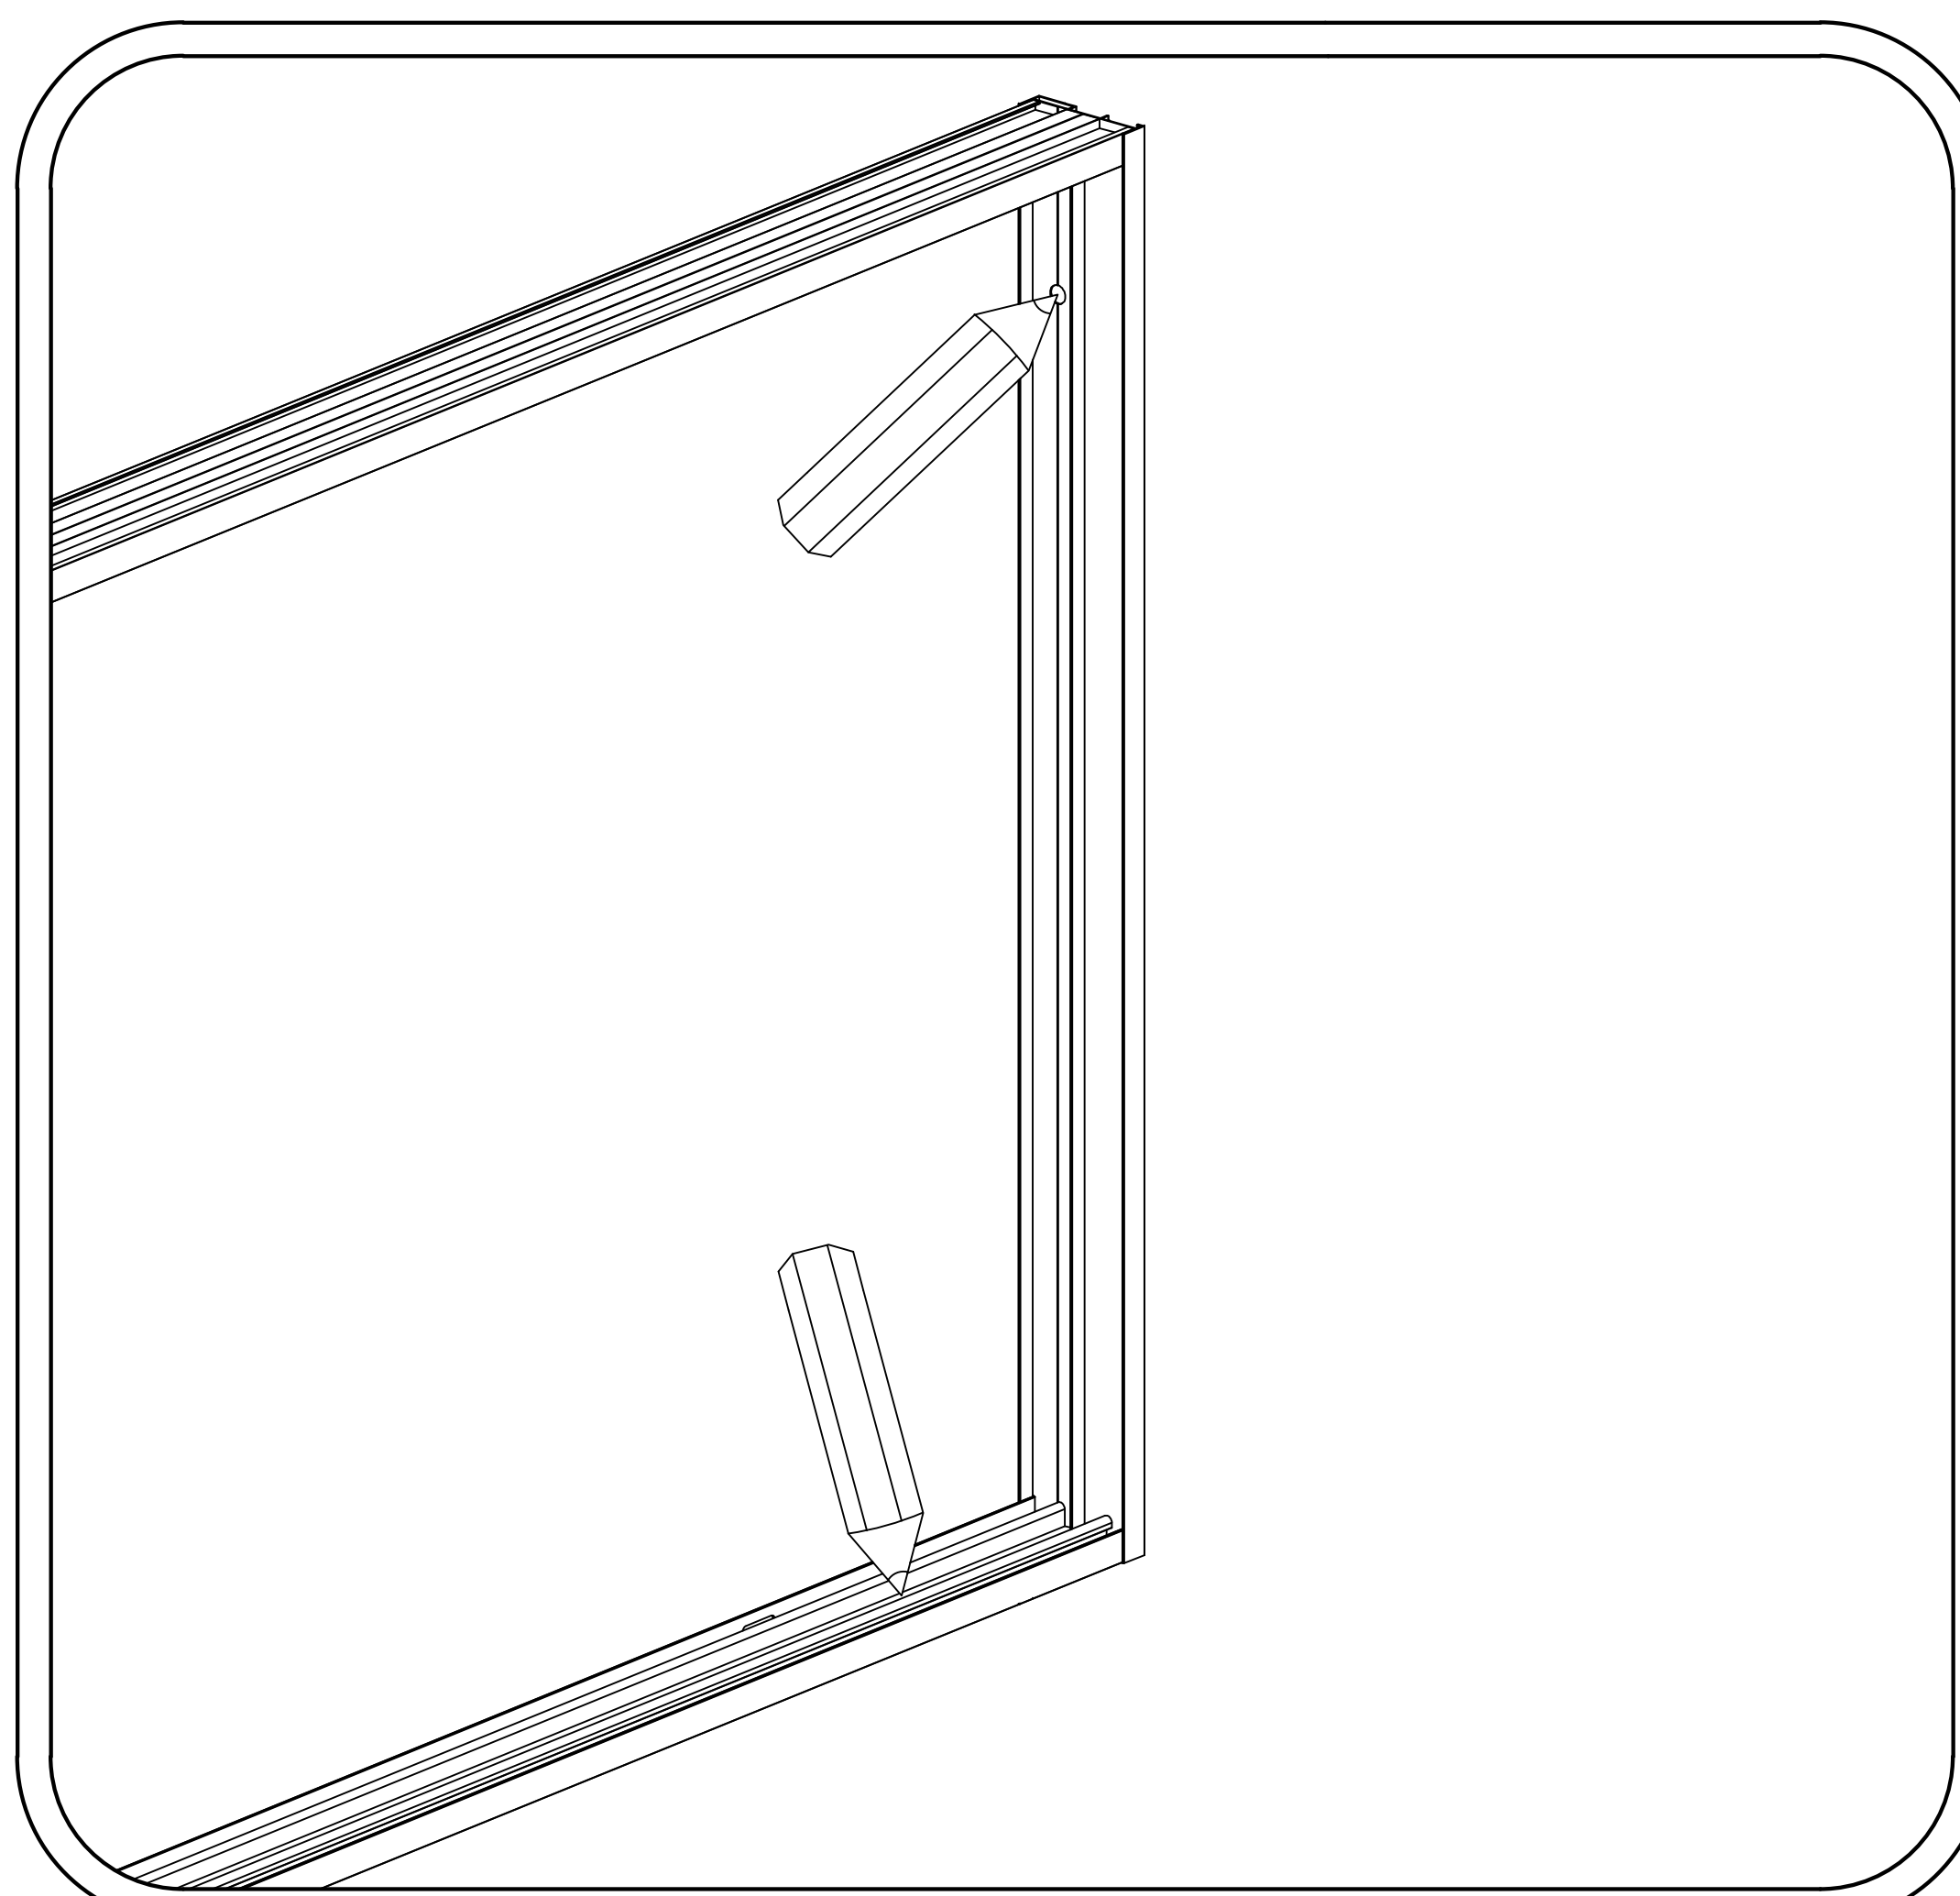

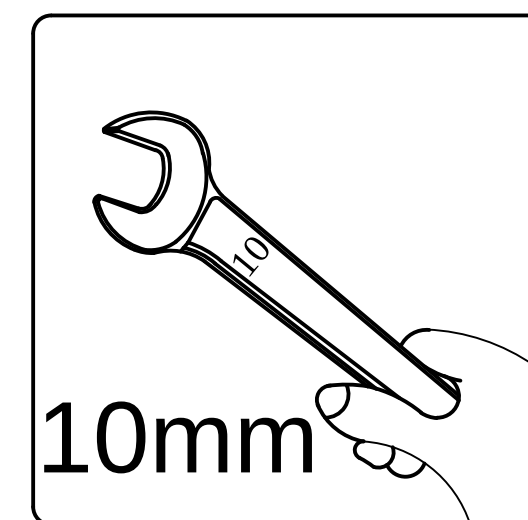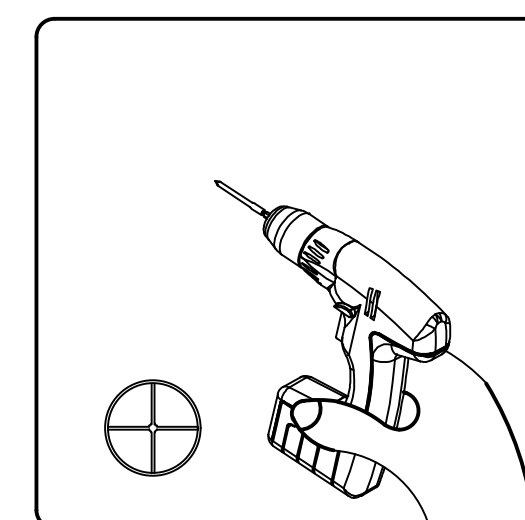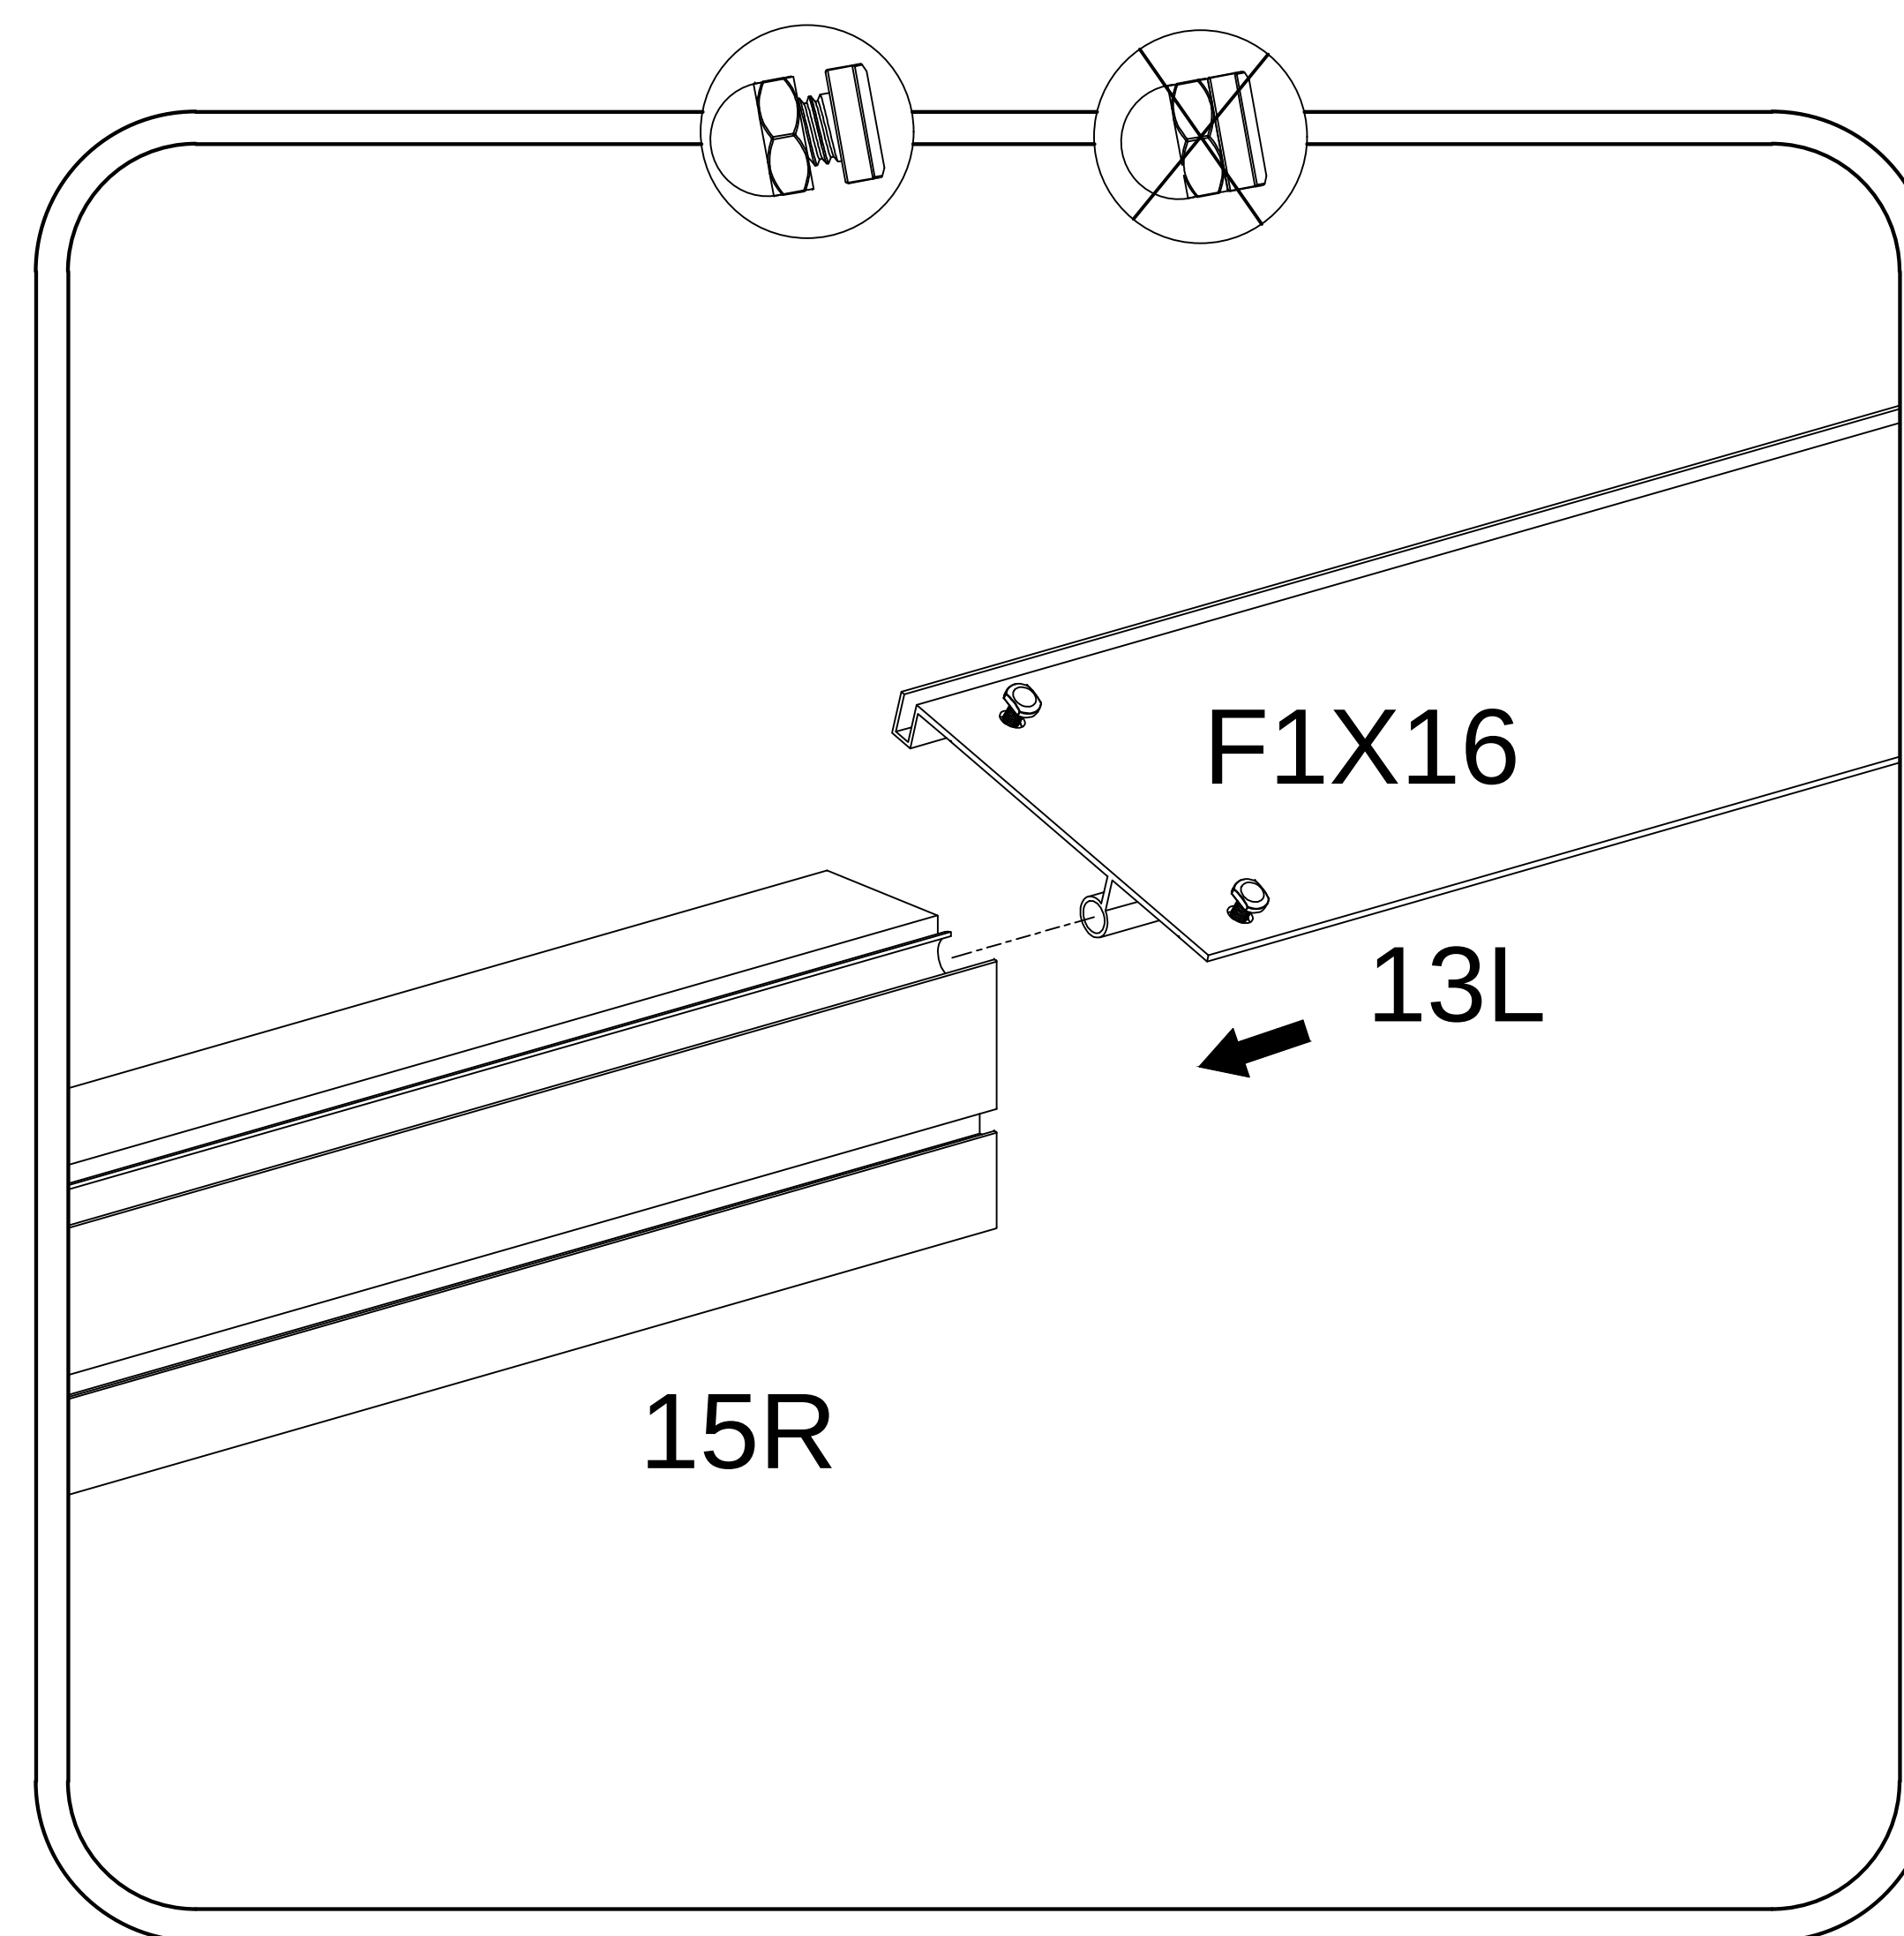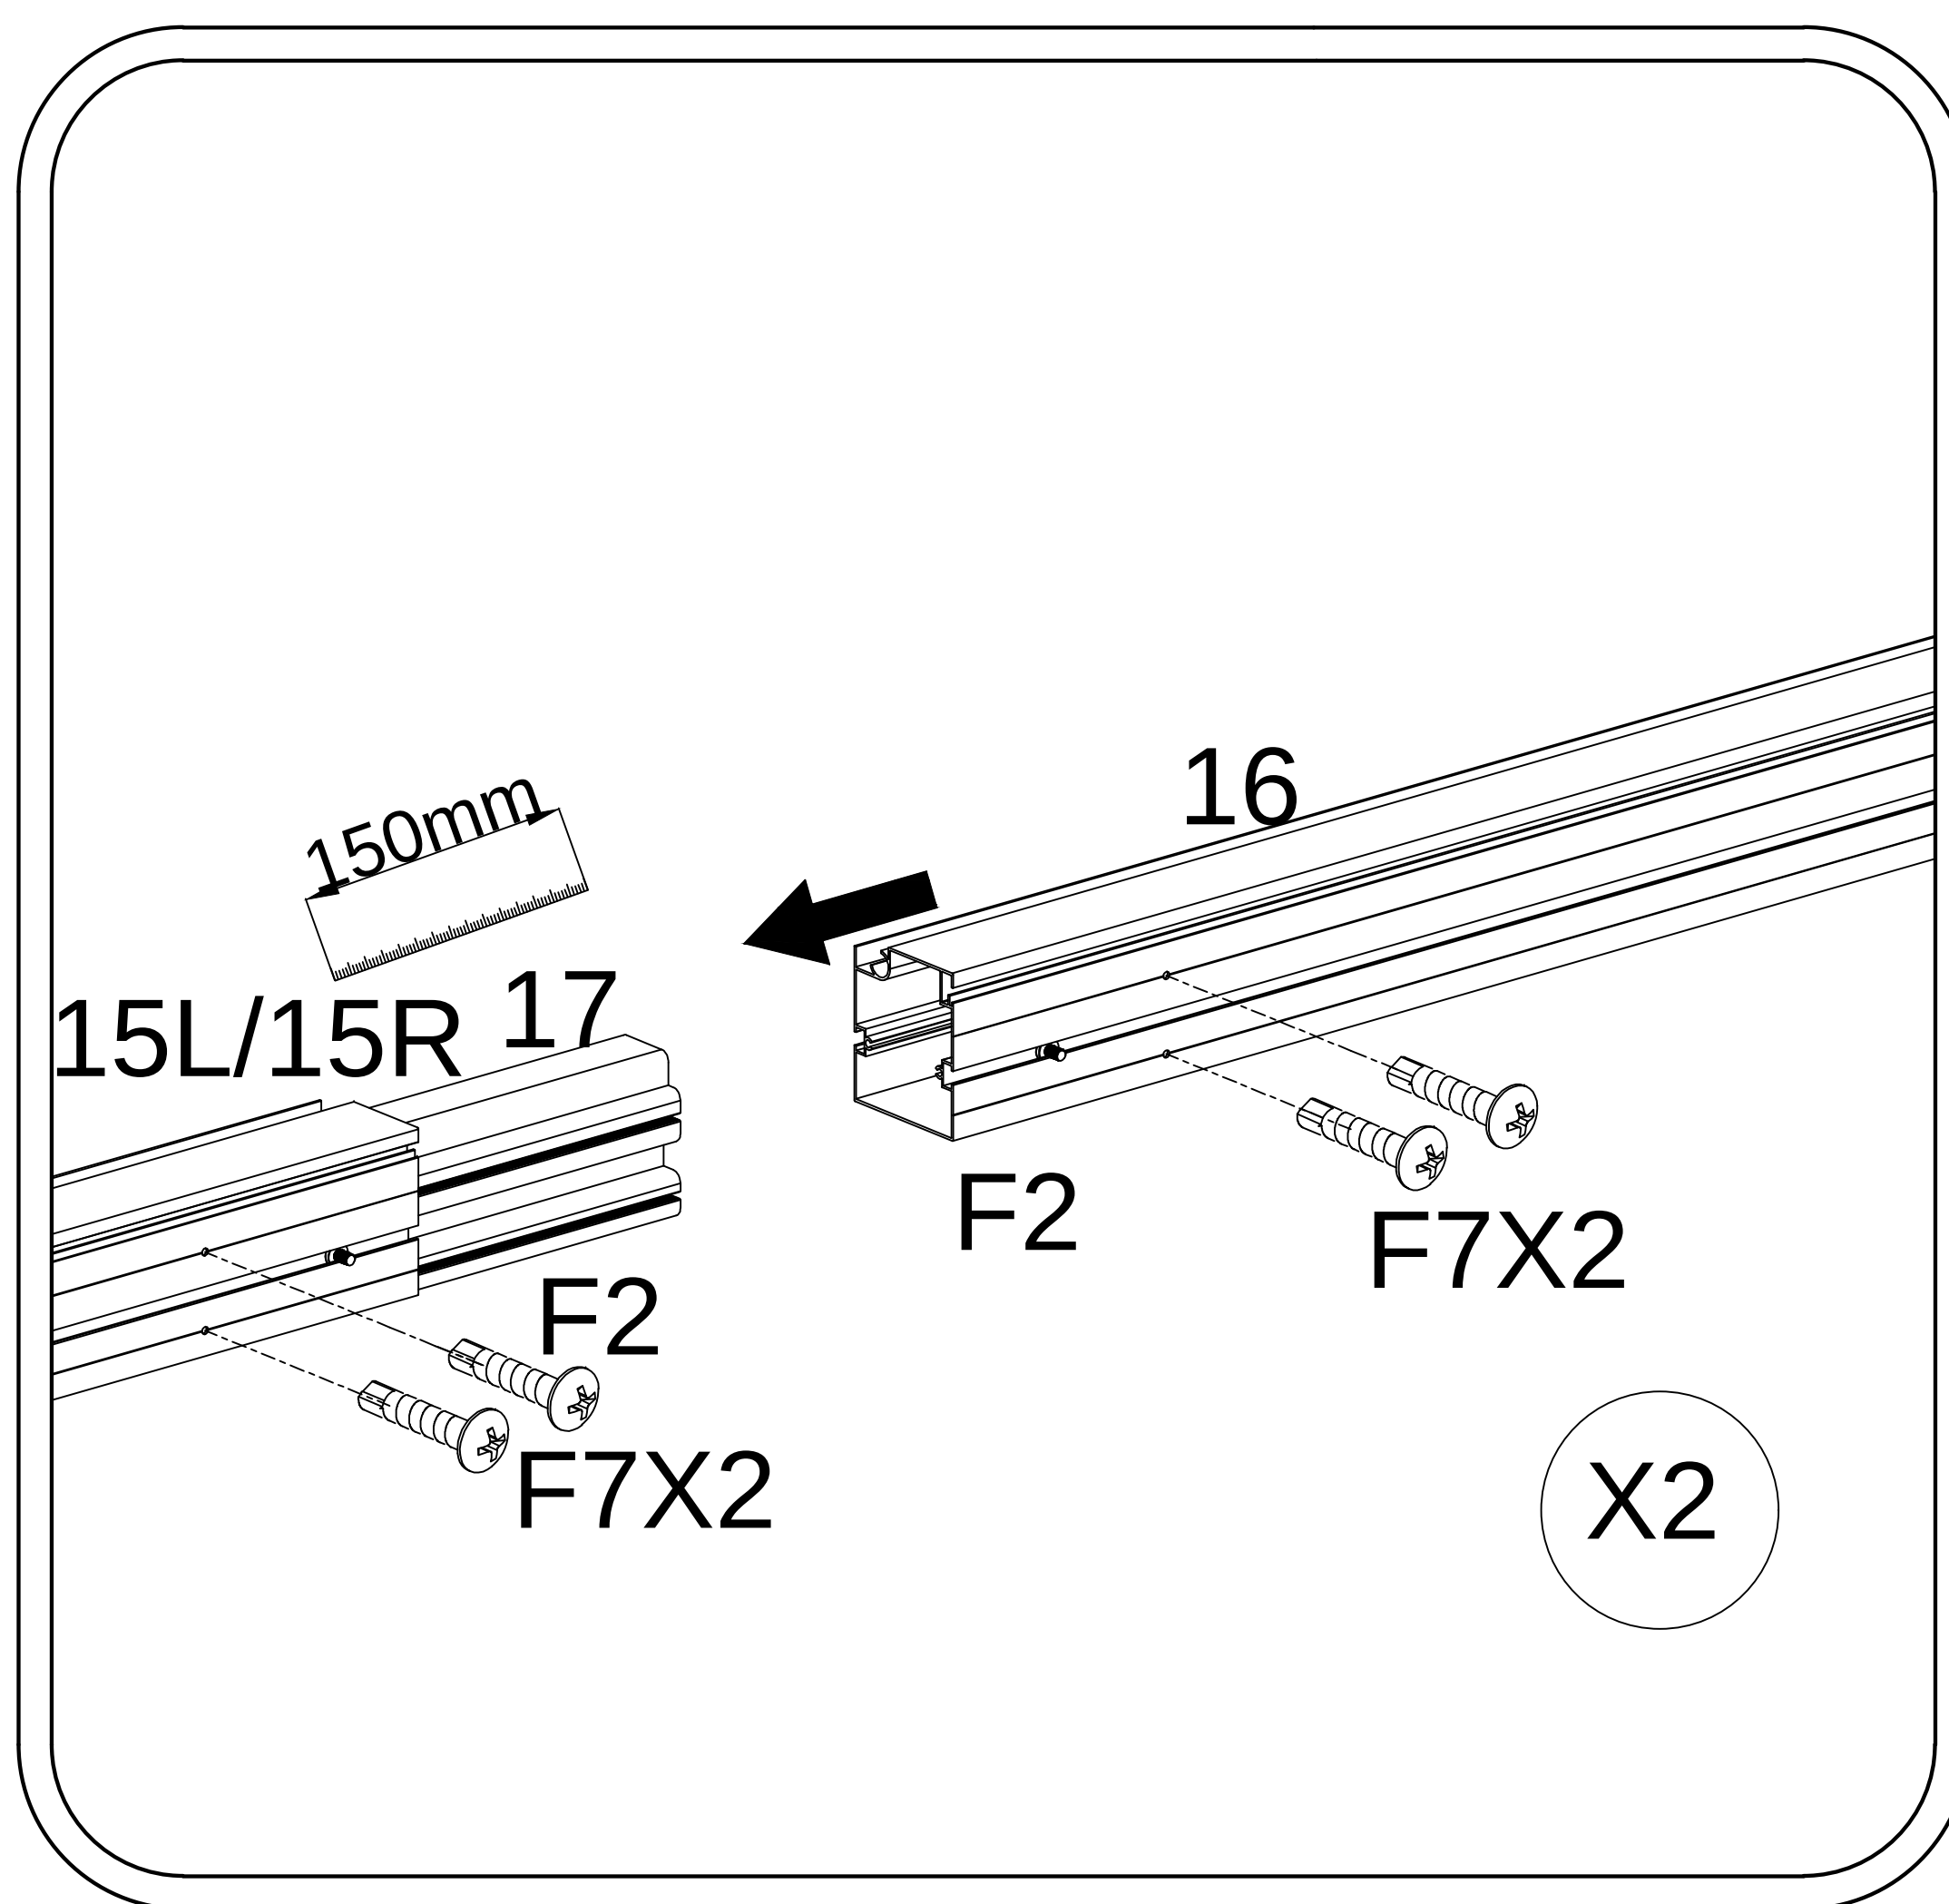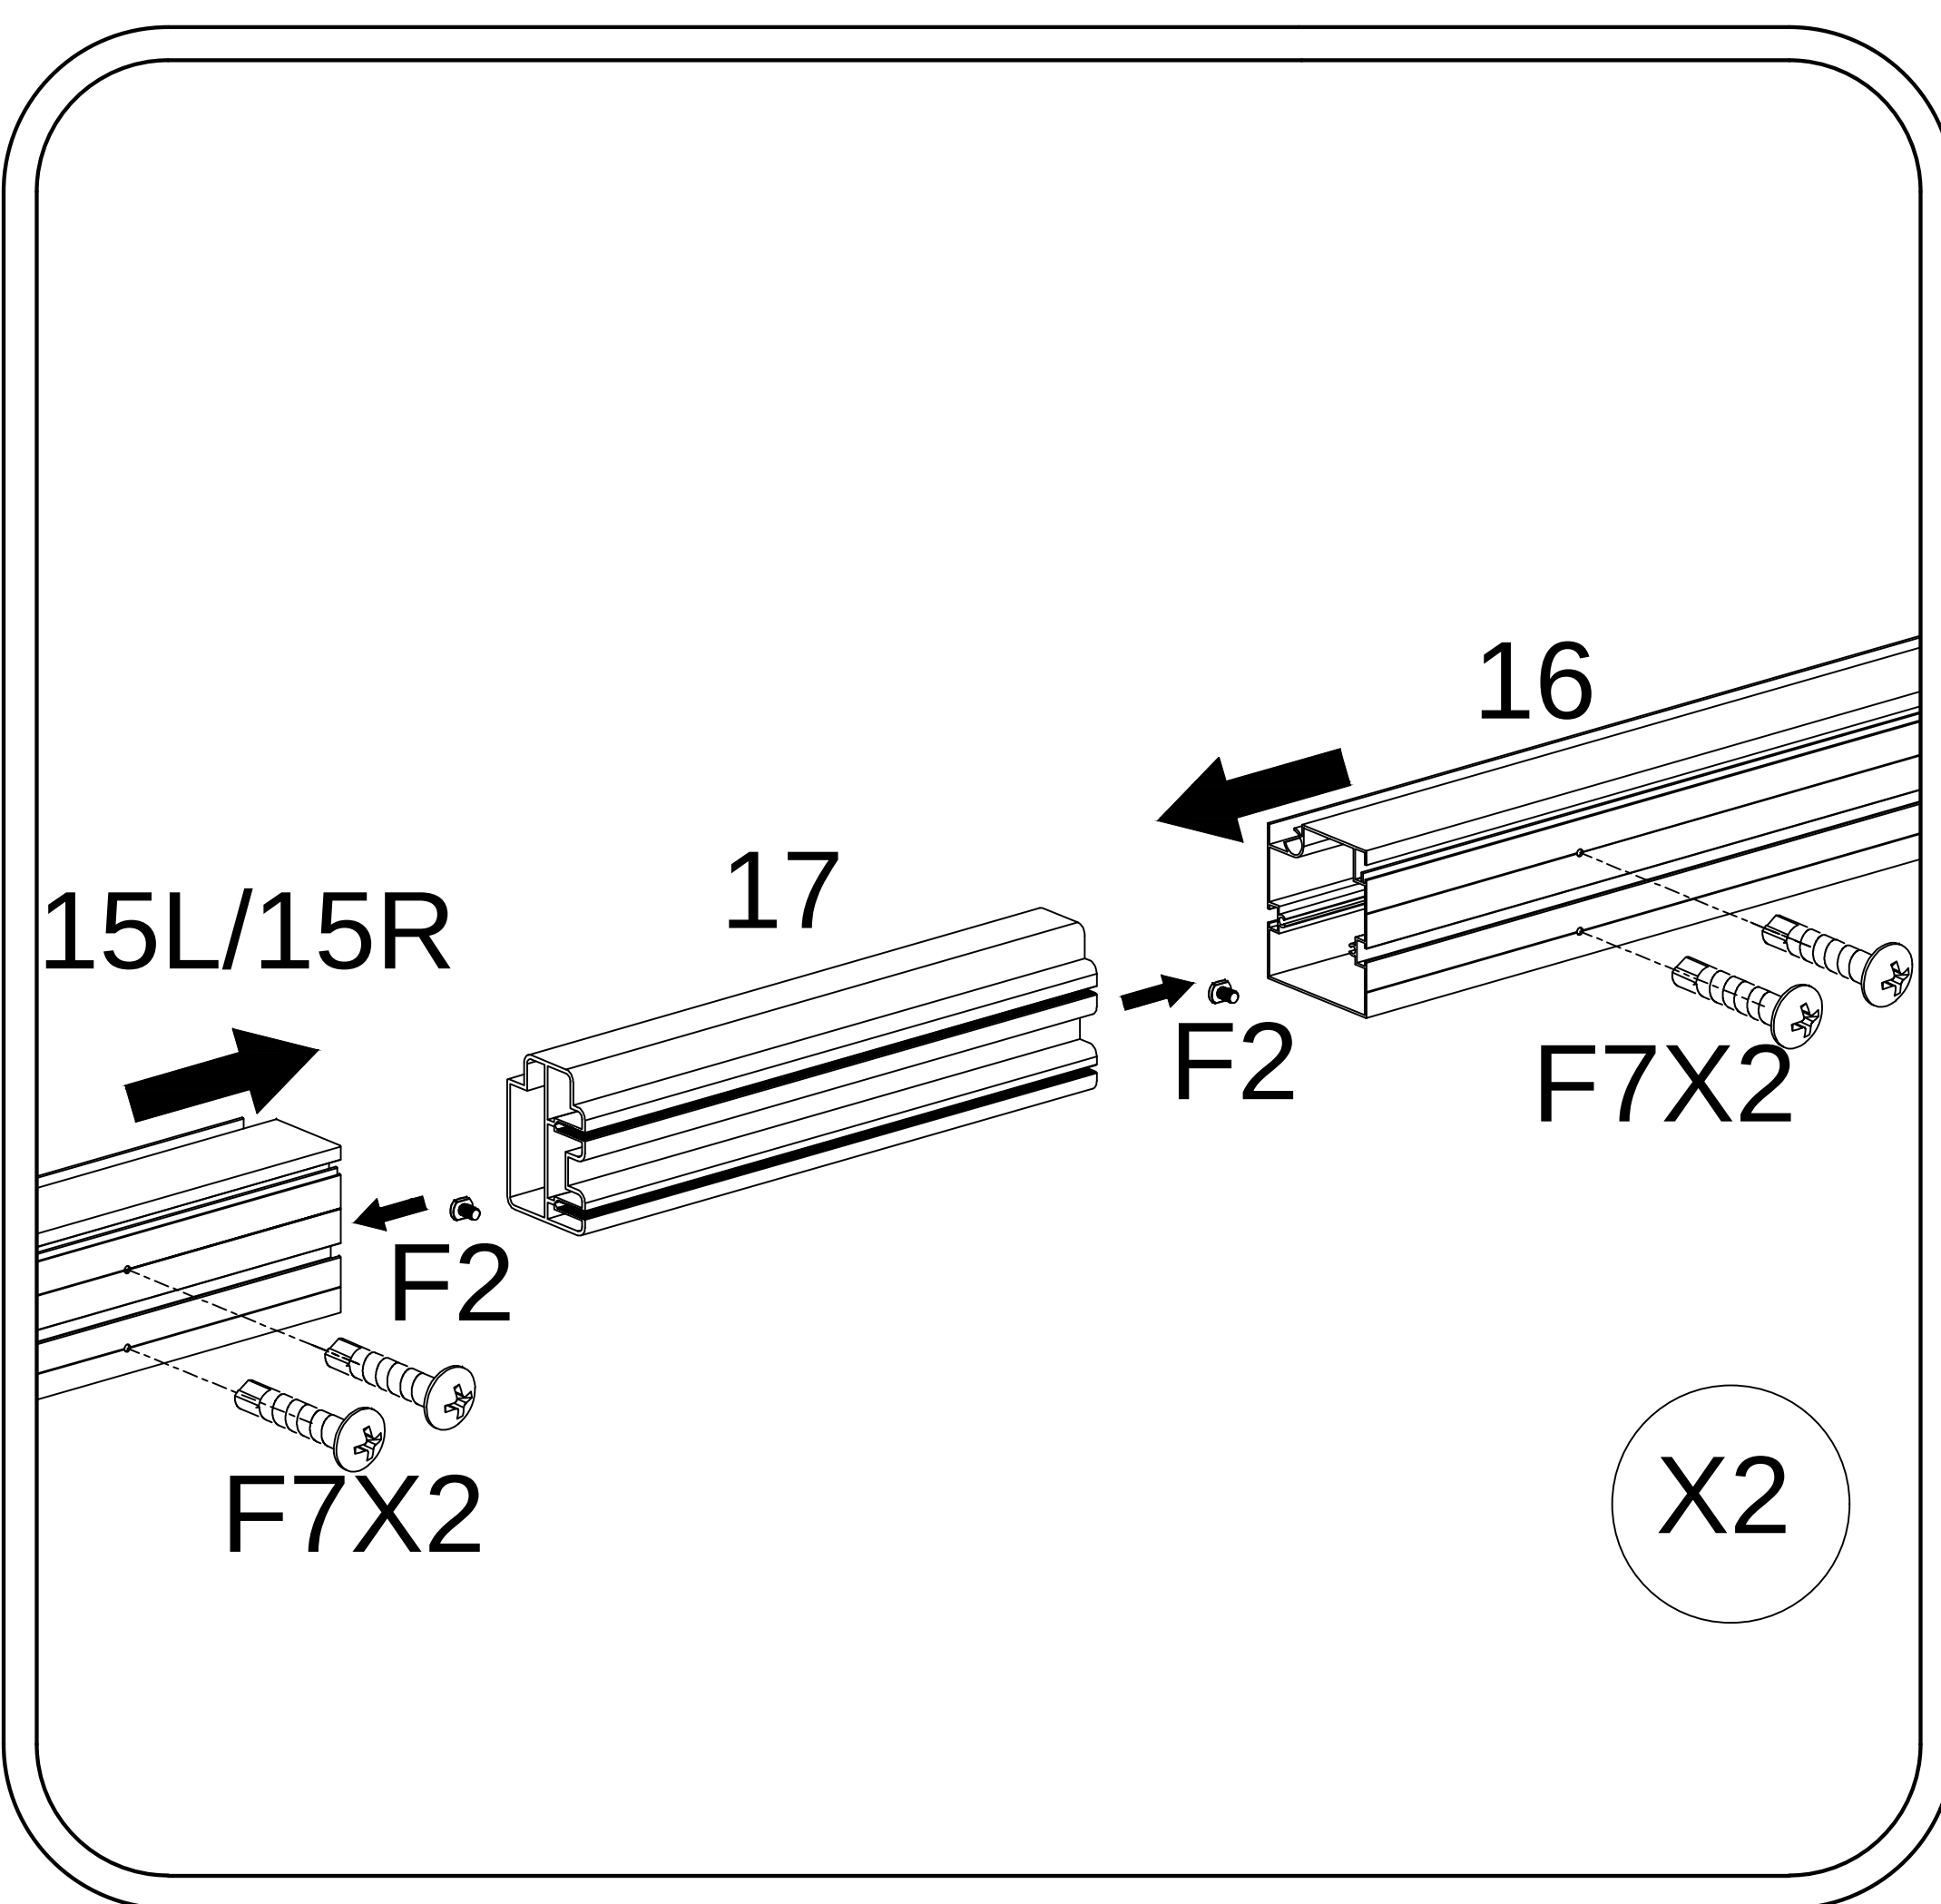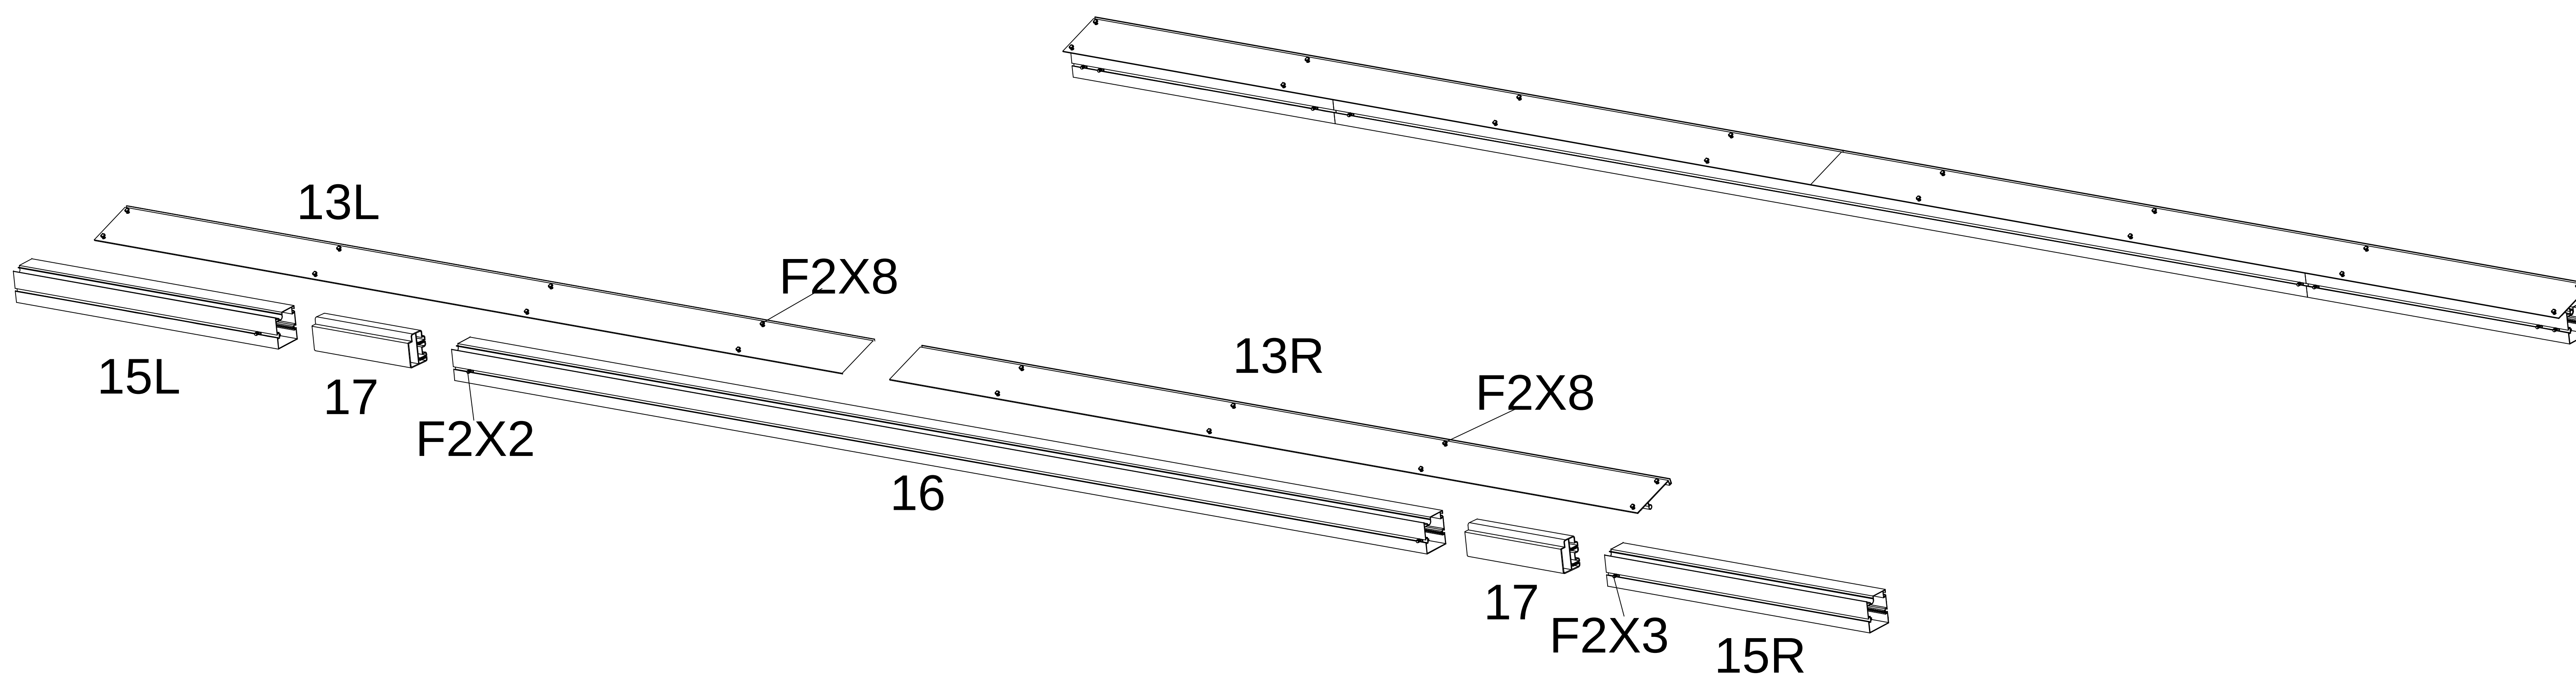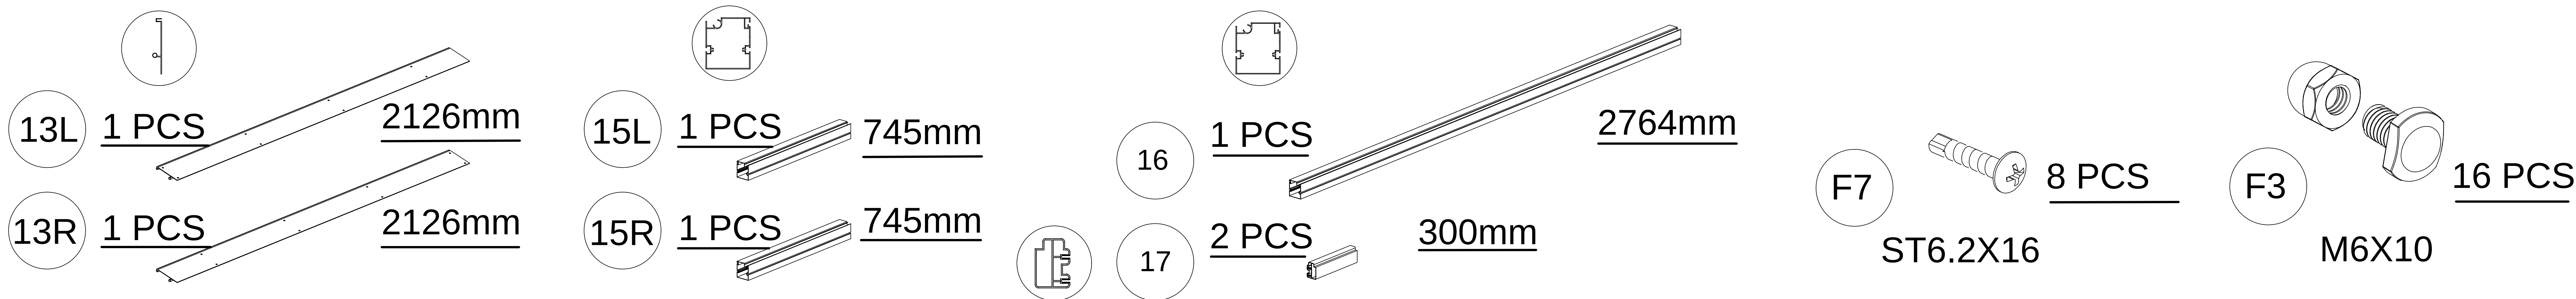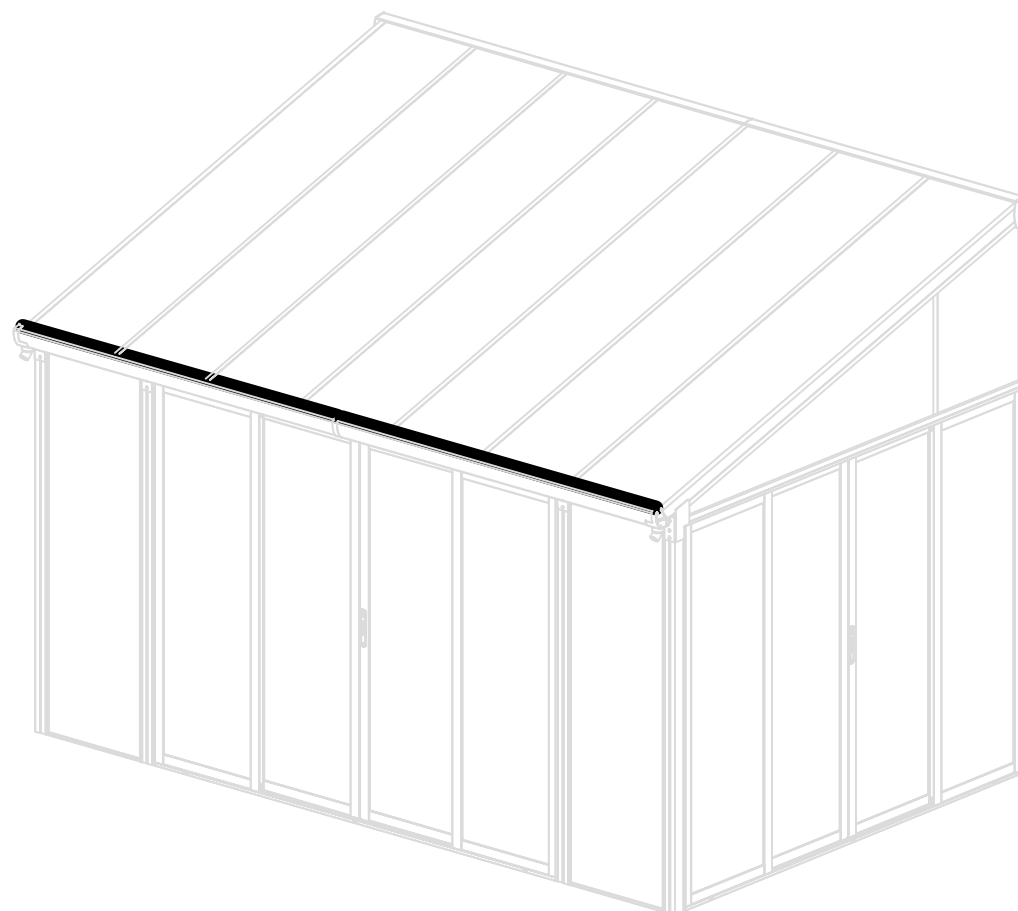


7

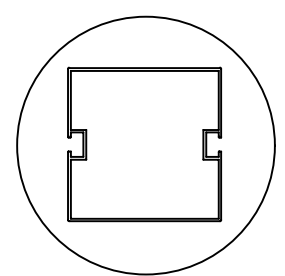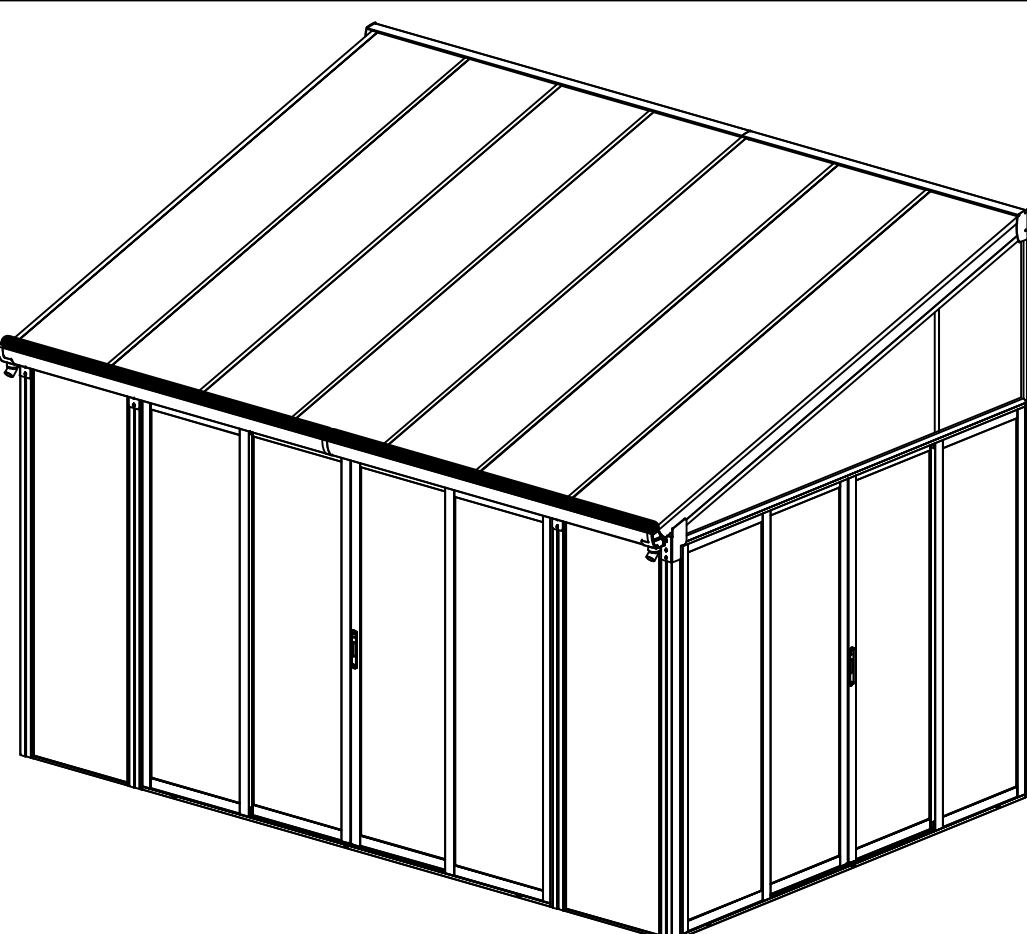

18


2 PCS

2100mm

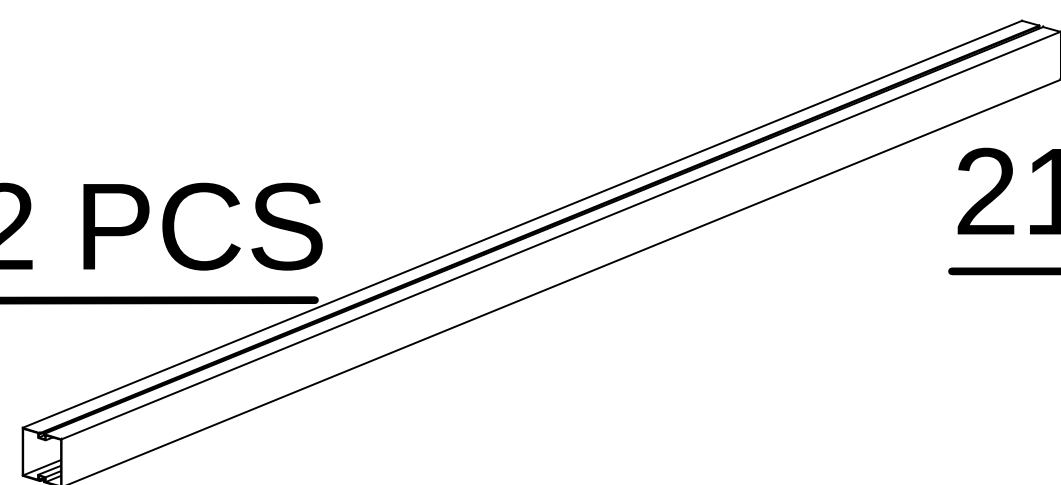


36L

1 PCS

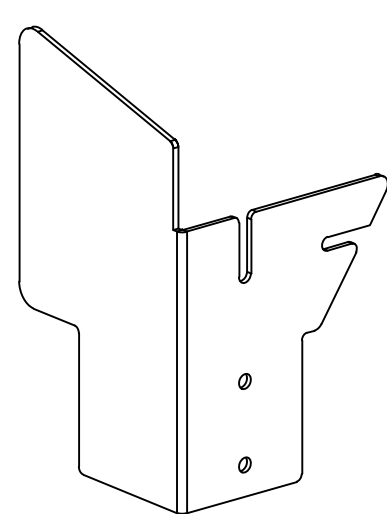


36R

1 PCS

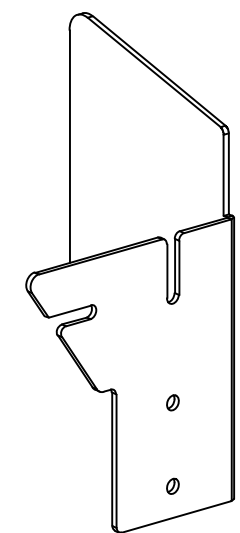


F3

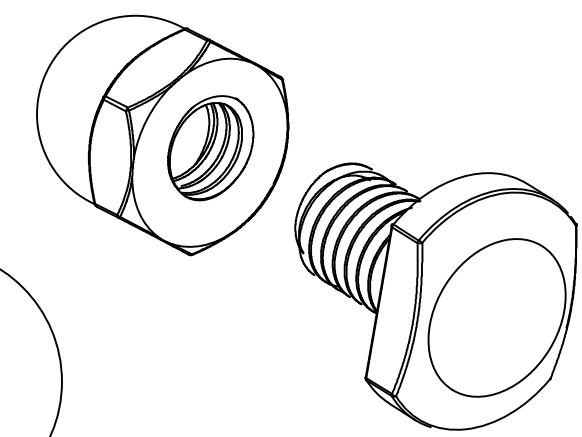

M6X10

16 PCS

F9

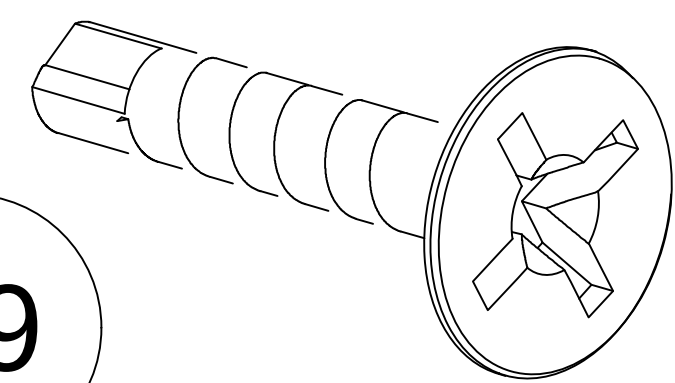

6 PCS

ST4.2X30

X2

36L

13L

15L

F3x8

18

18

18

22

F9x3

21

21

F9x3



X2

1L










1R


F9x3

F9x3

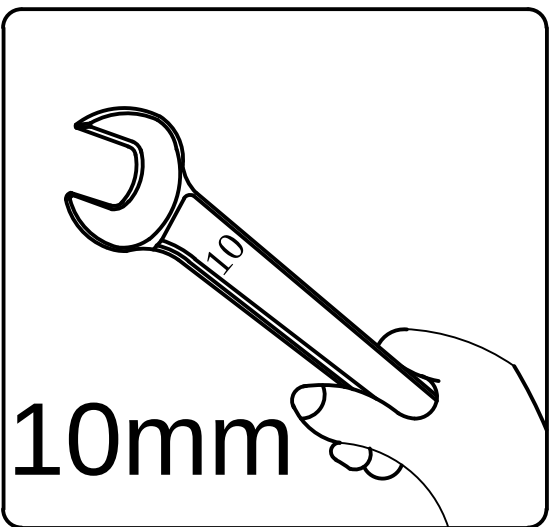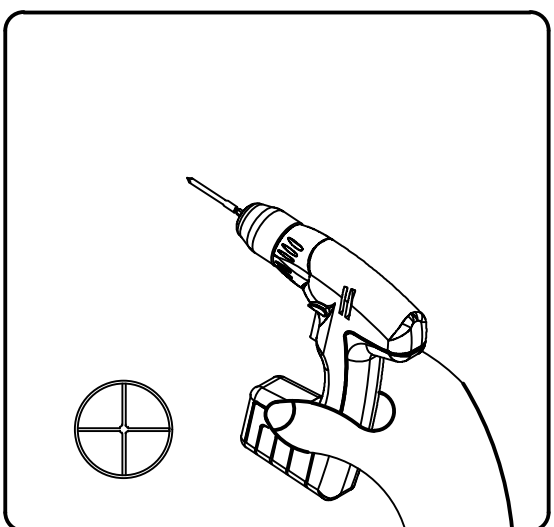

10mm

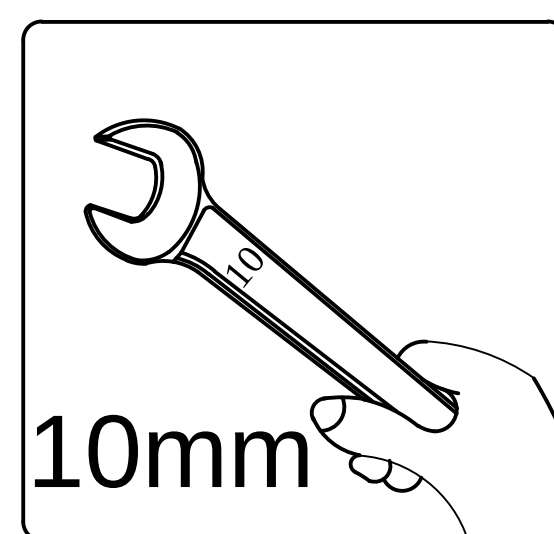
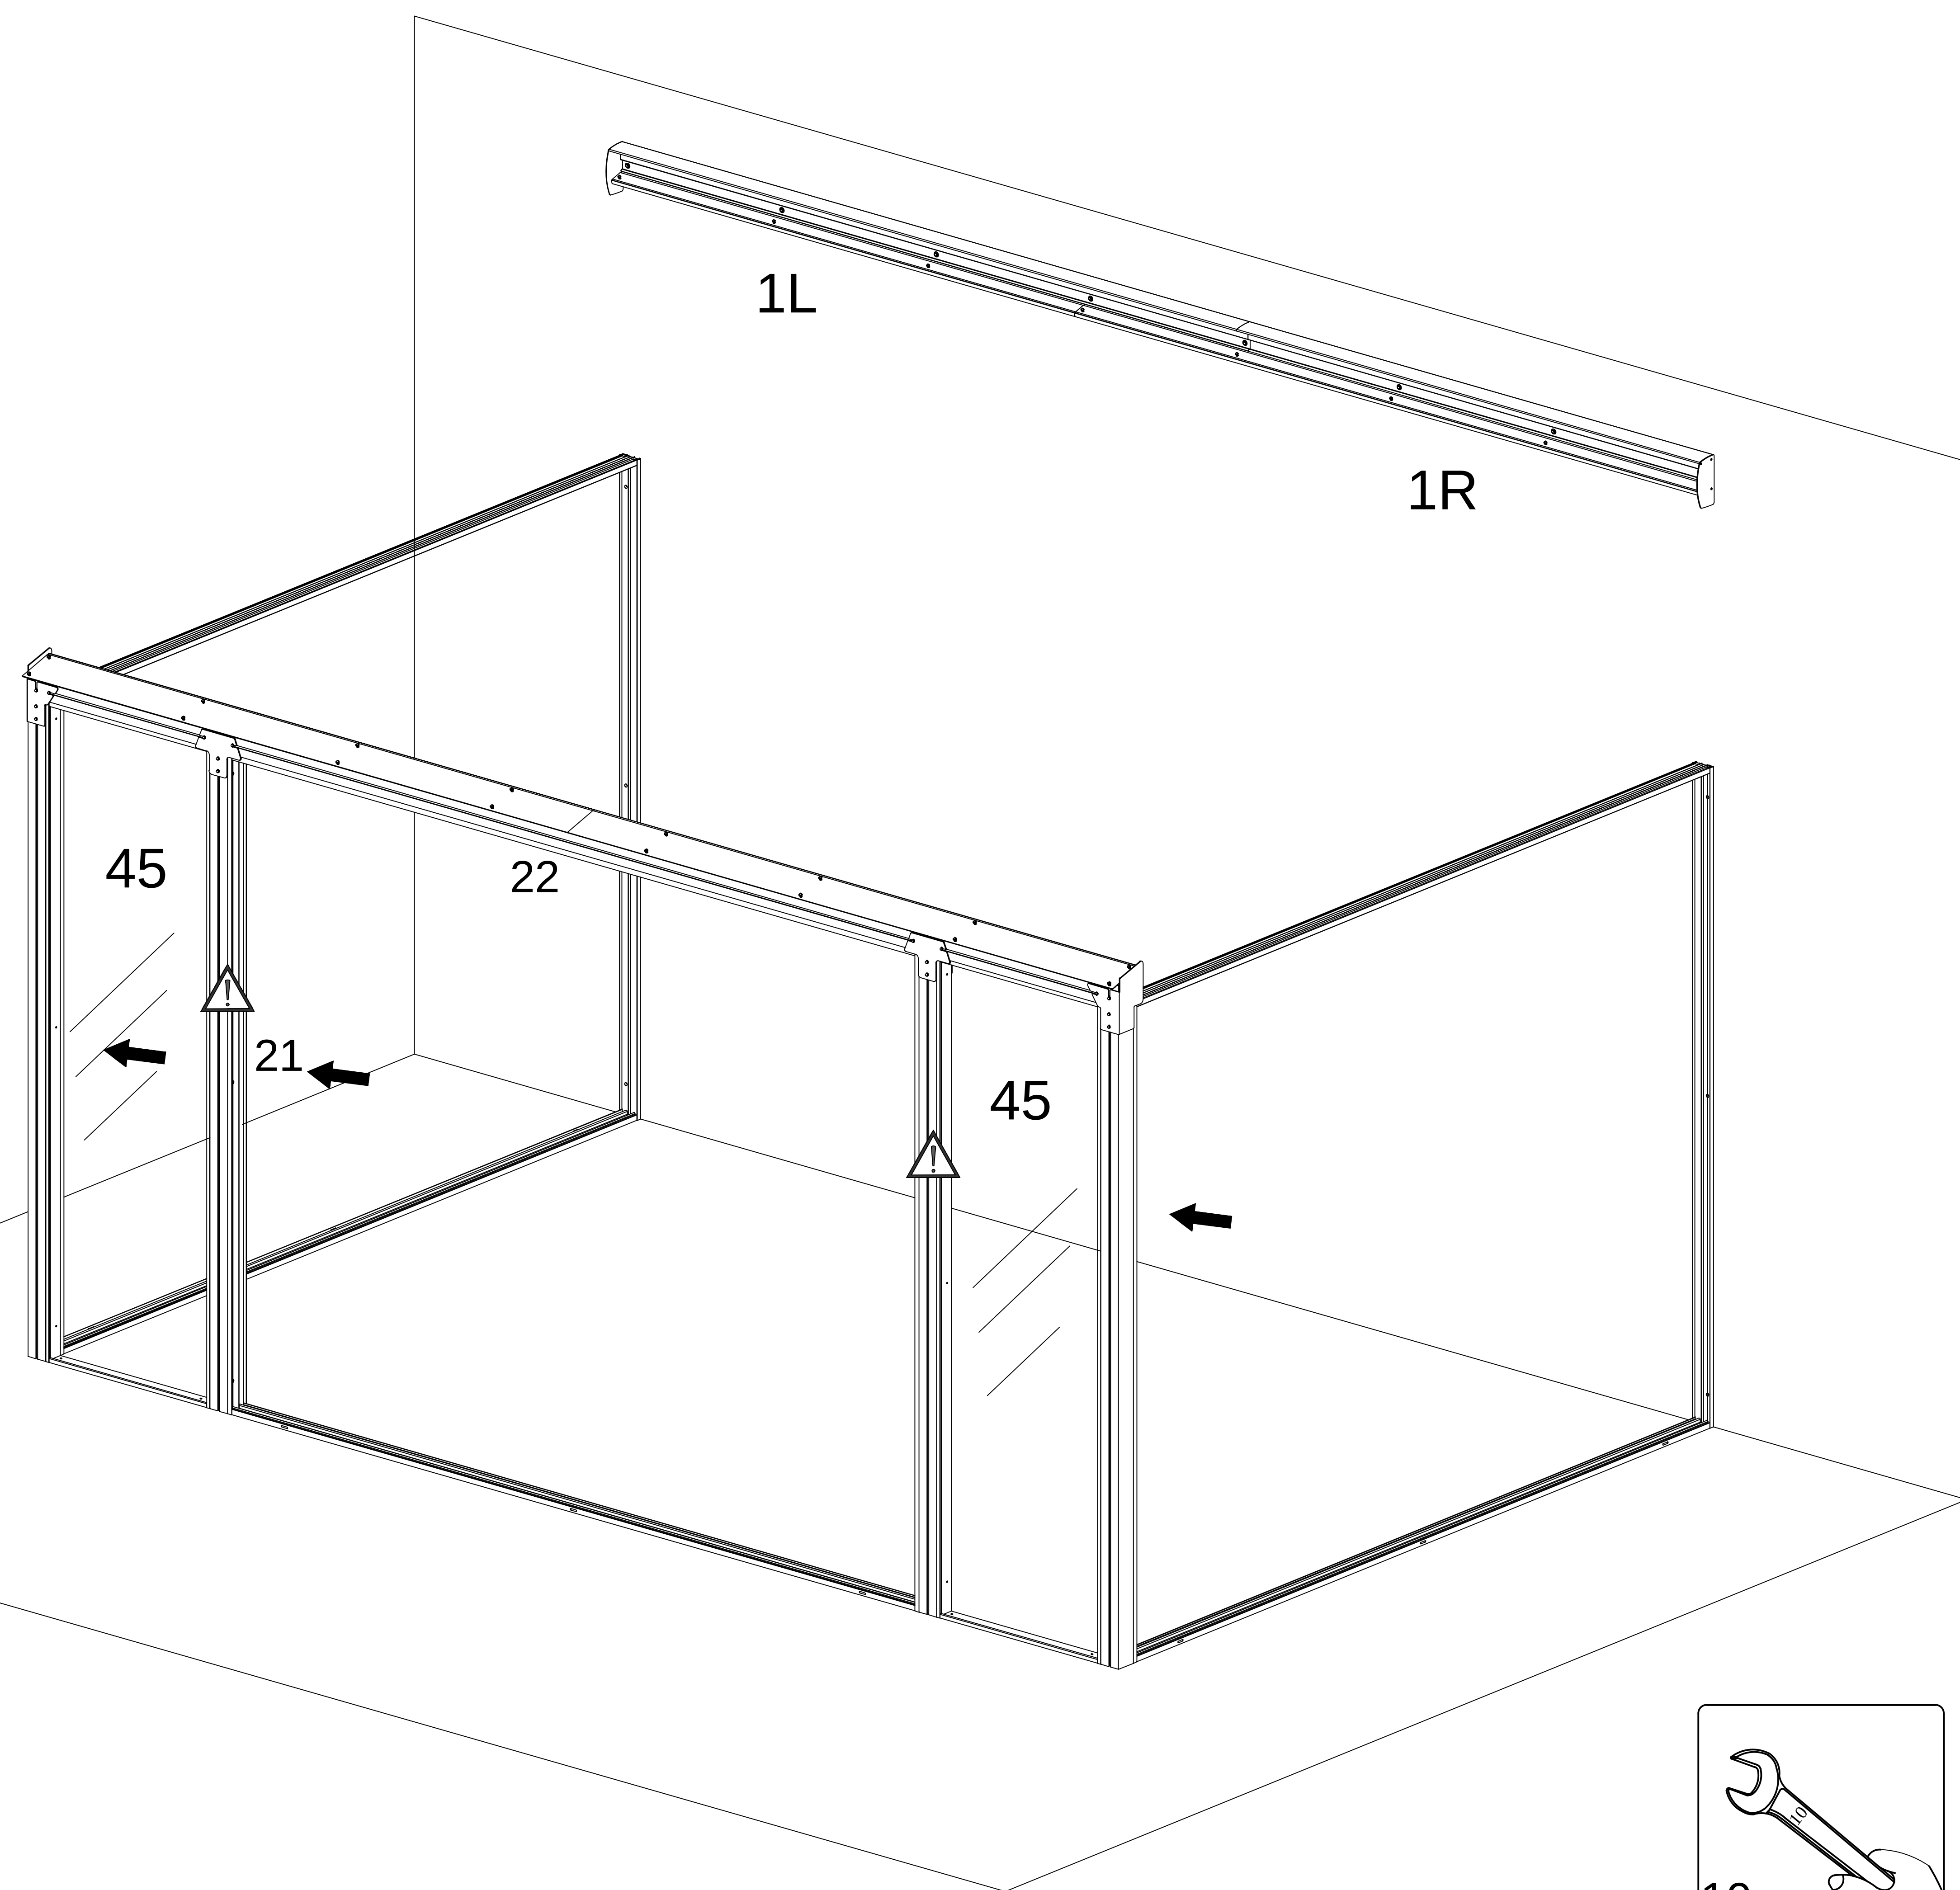
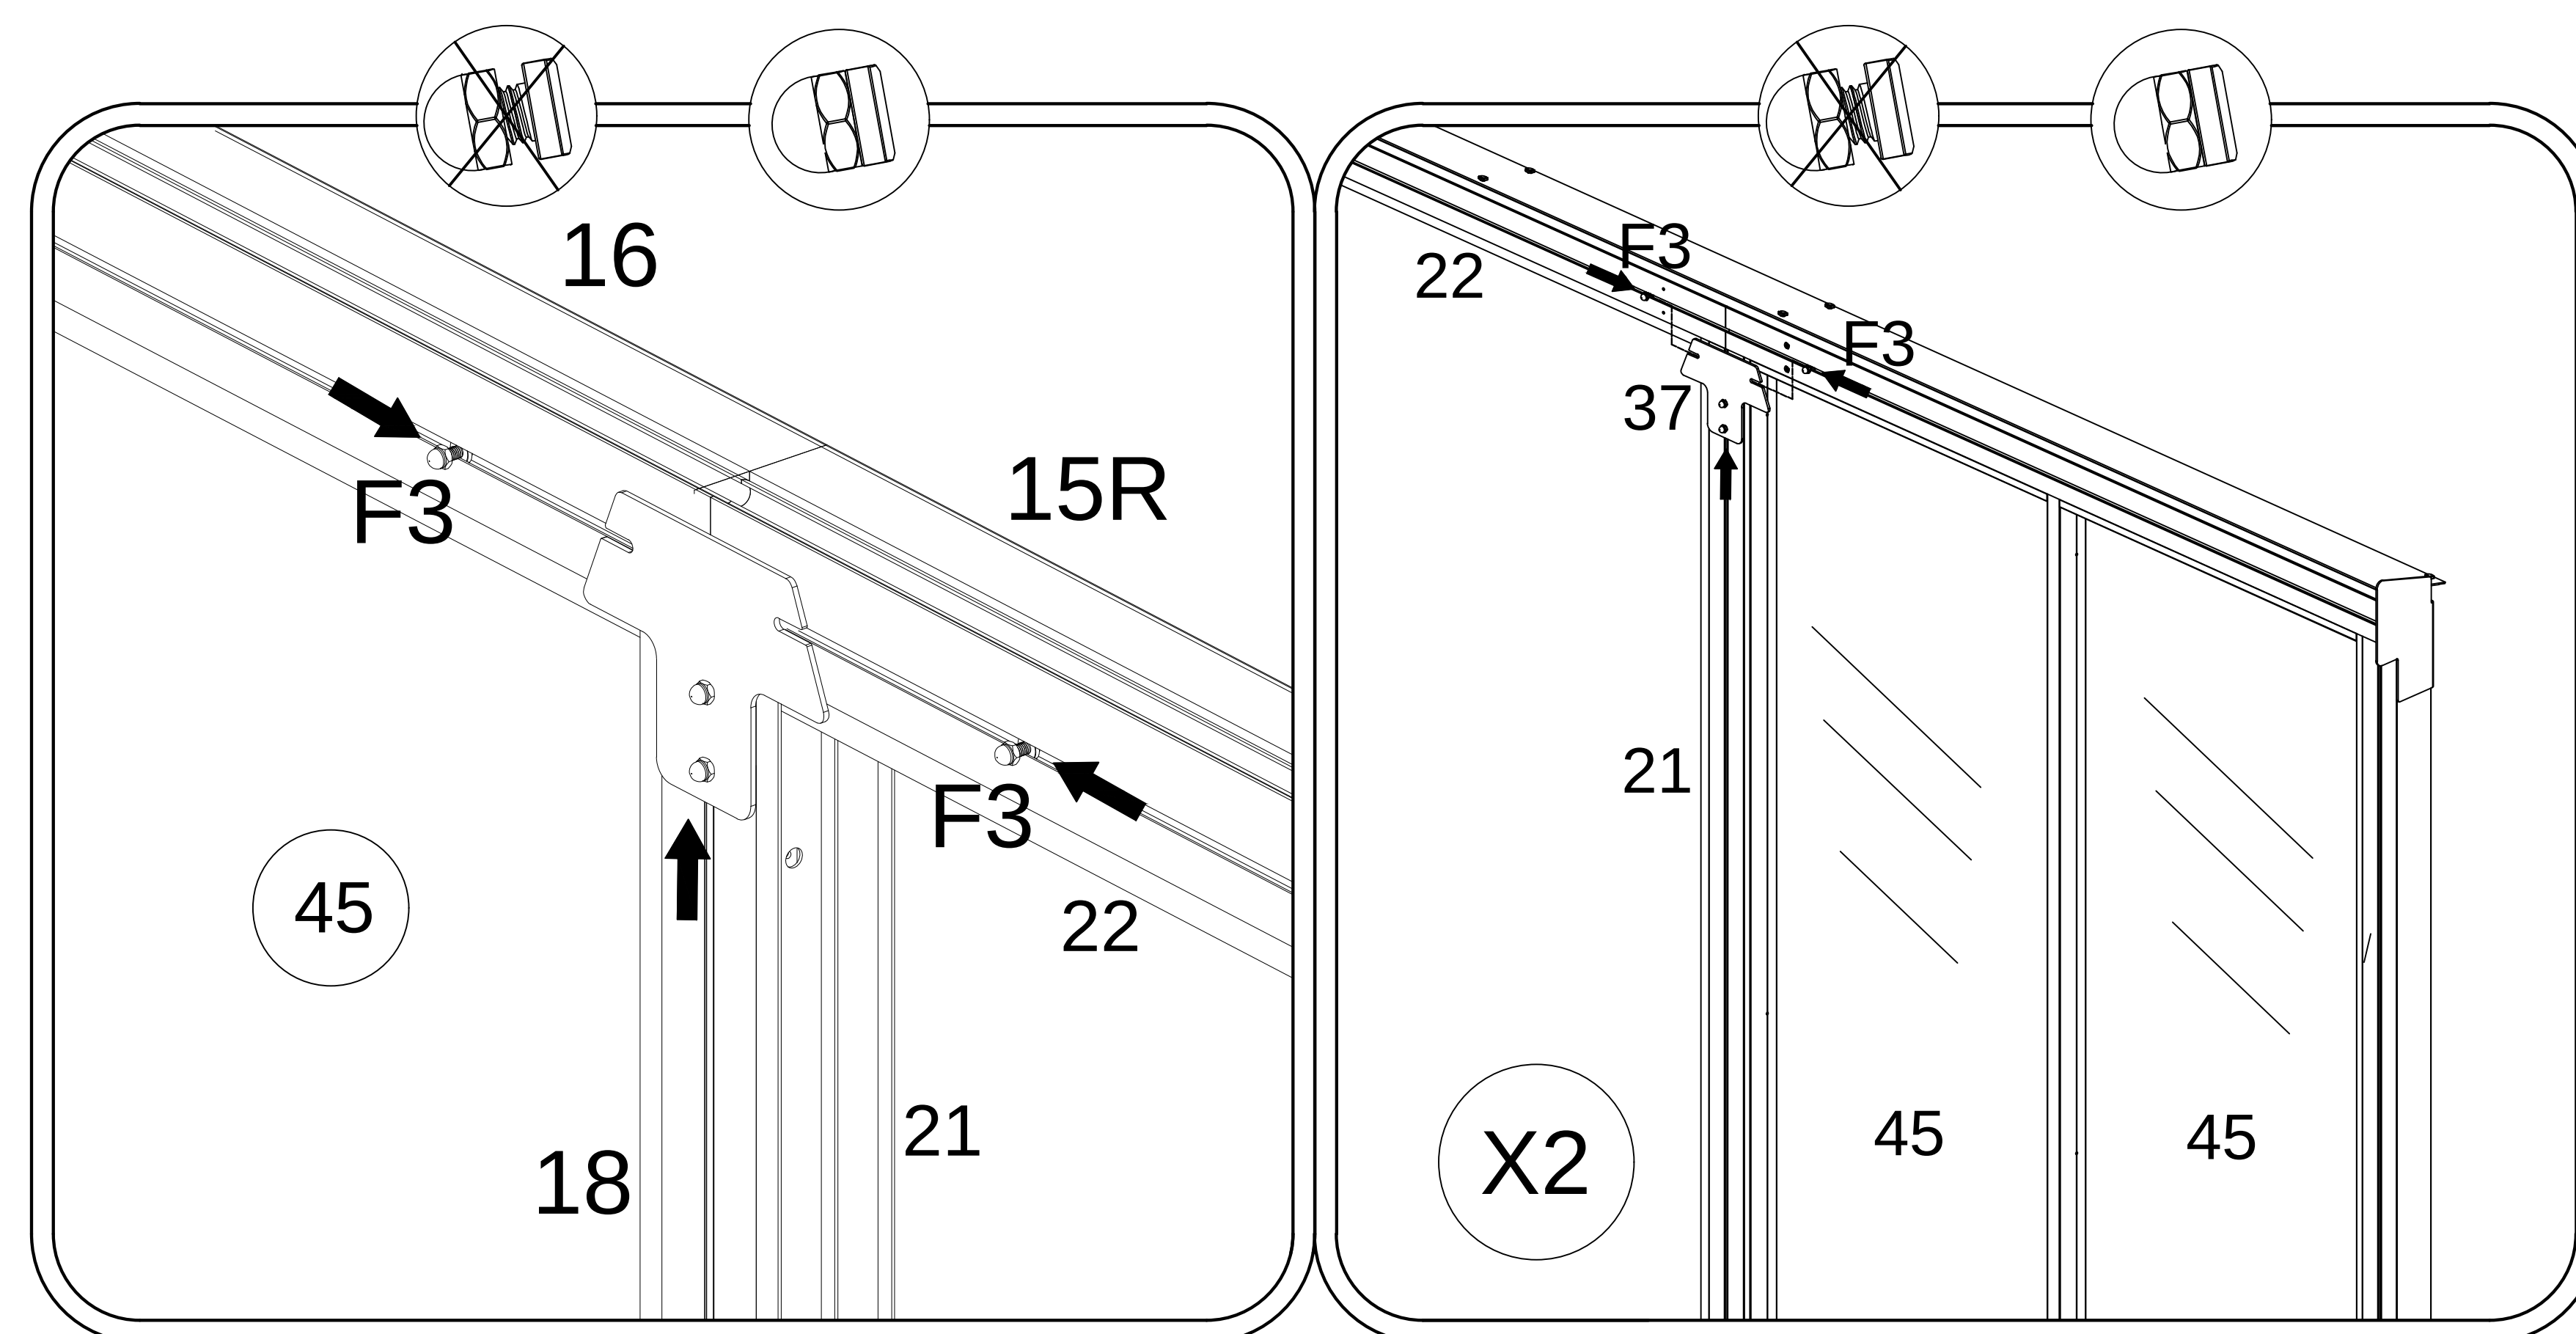
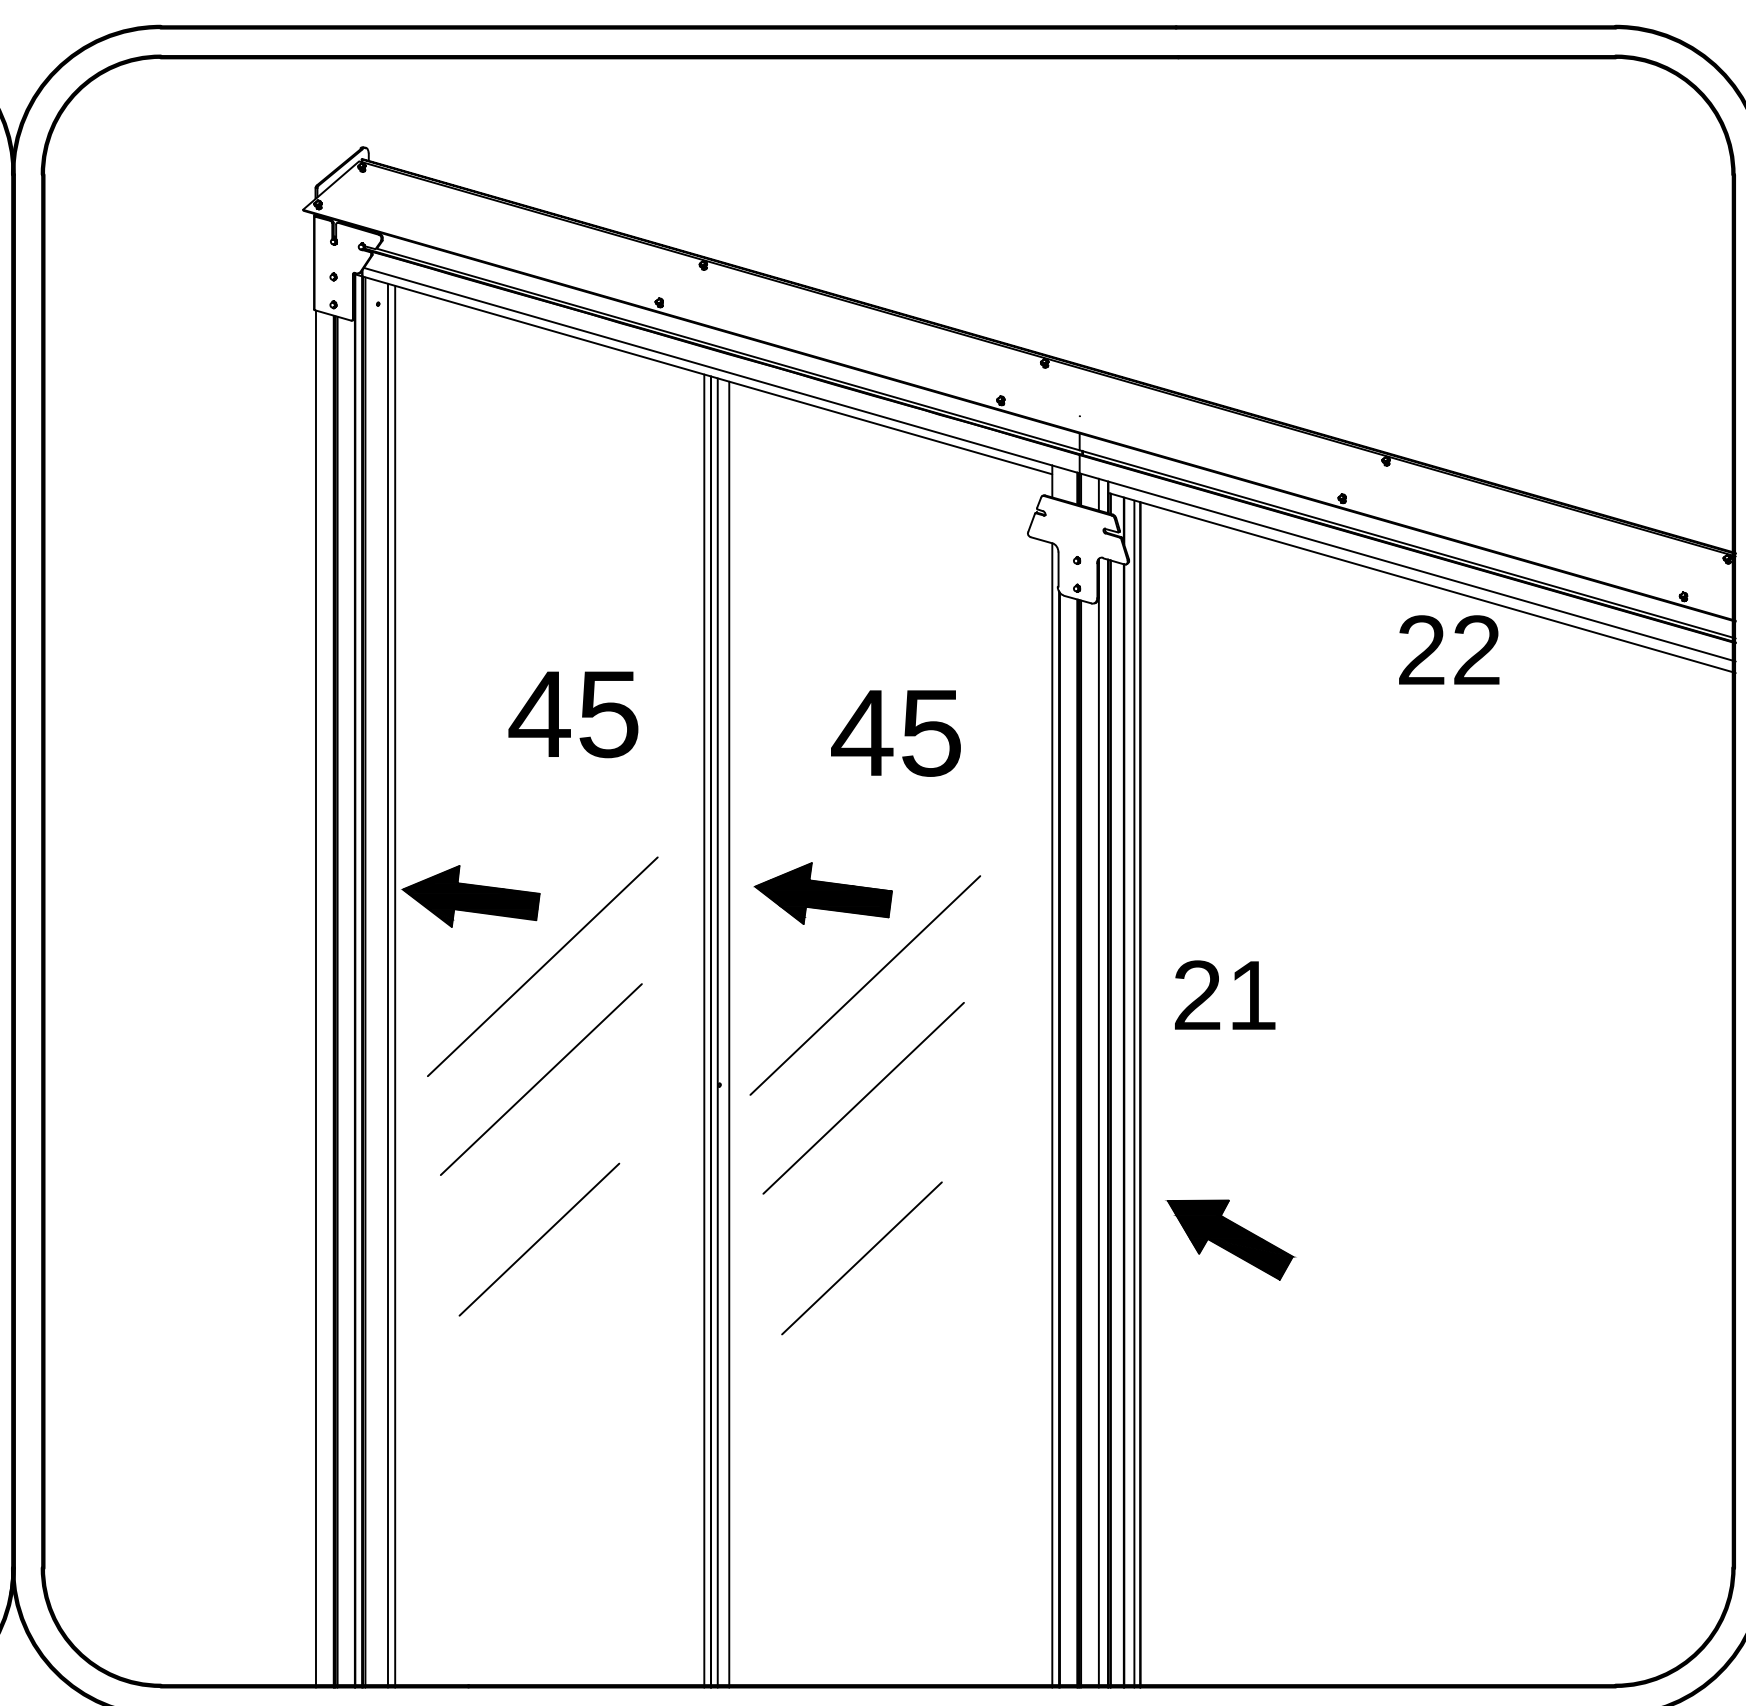
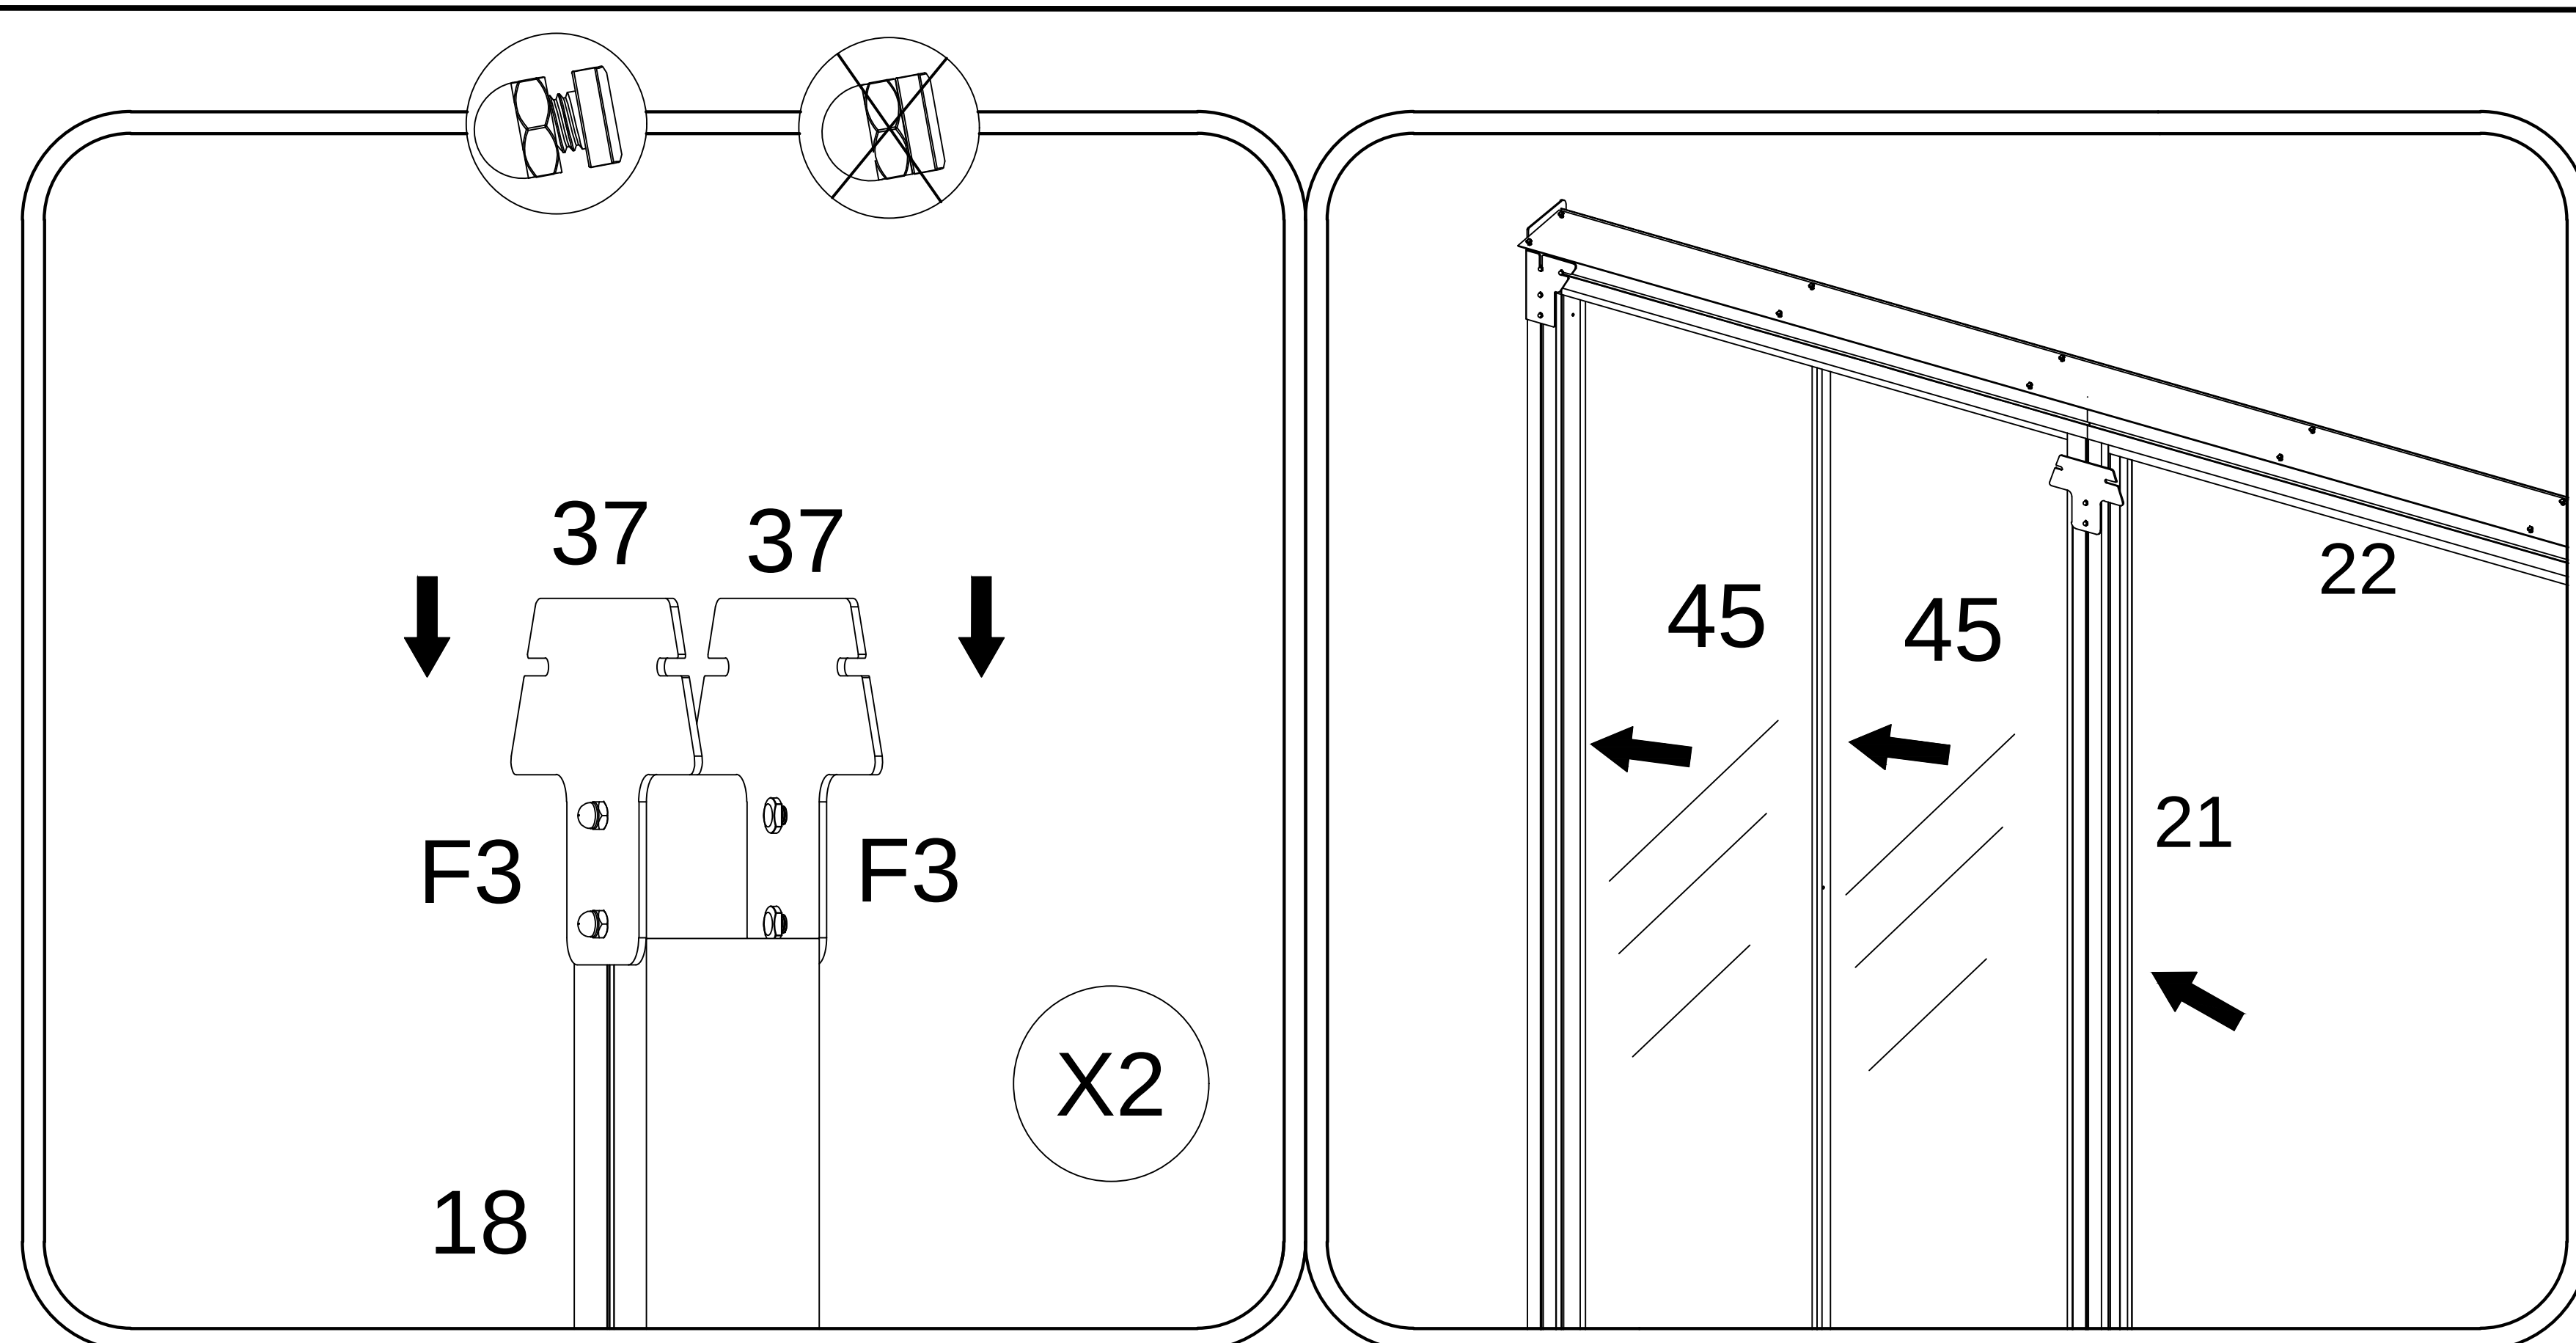
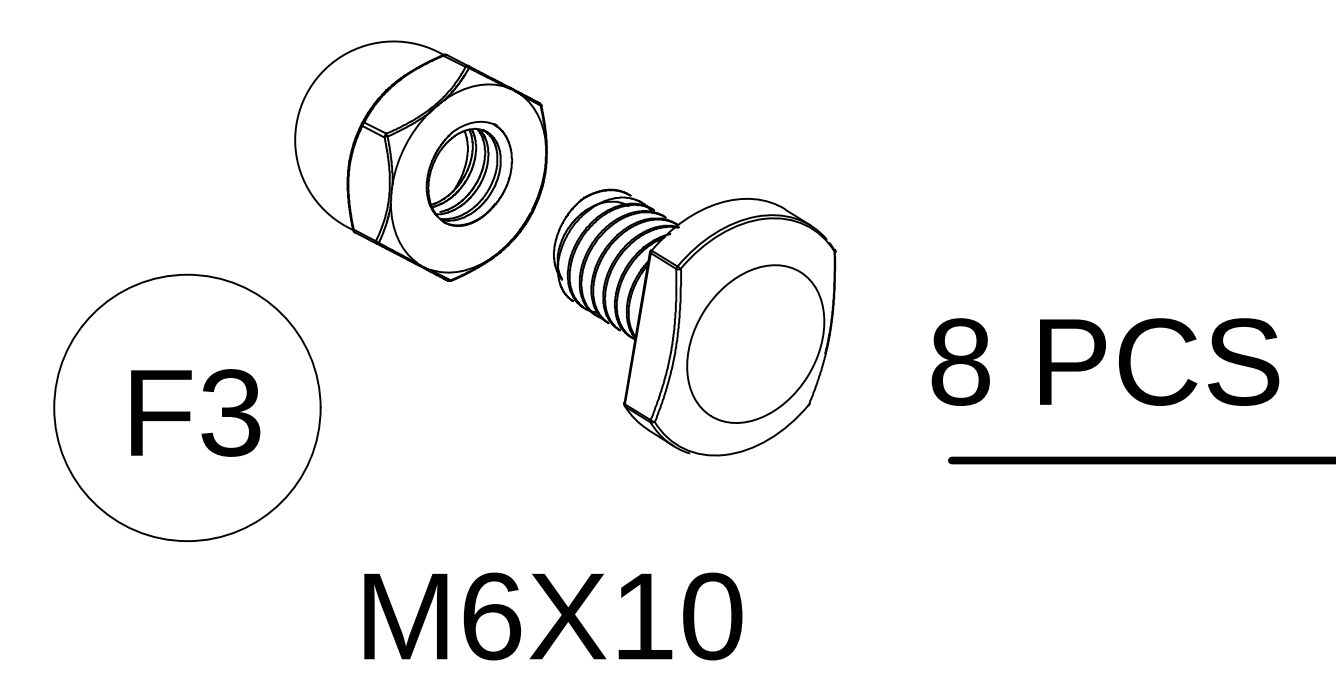
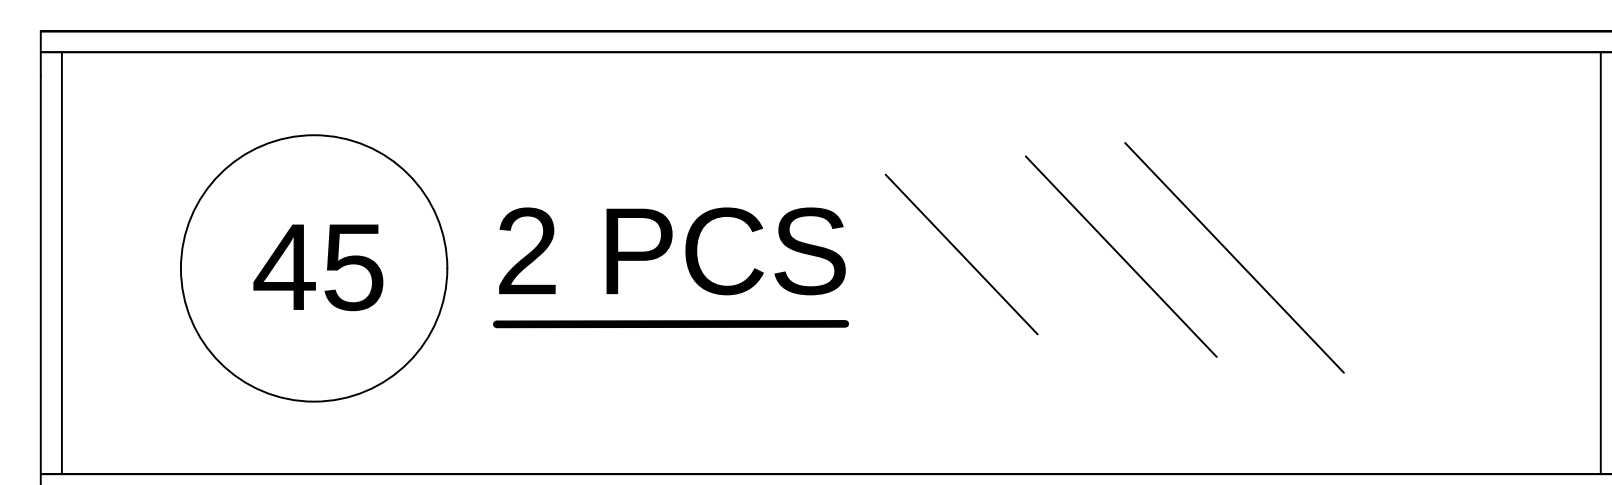
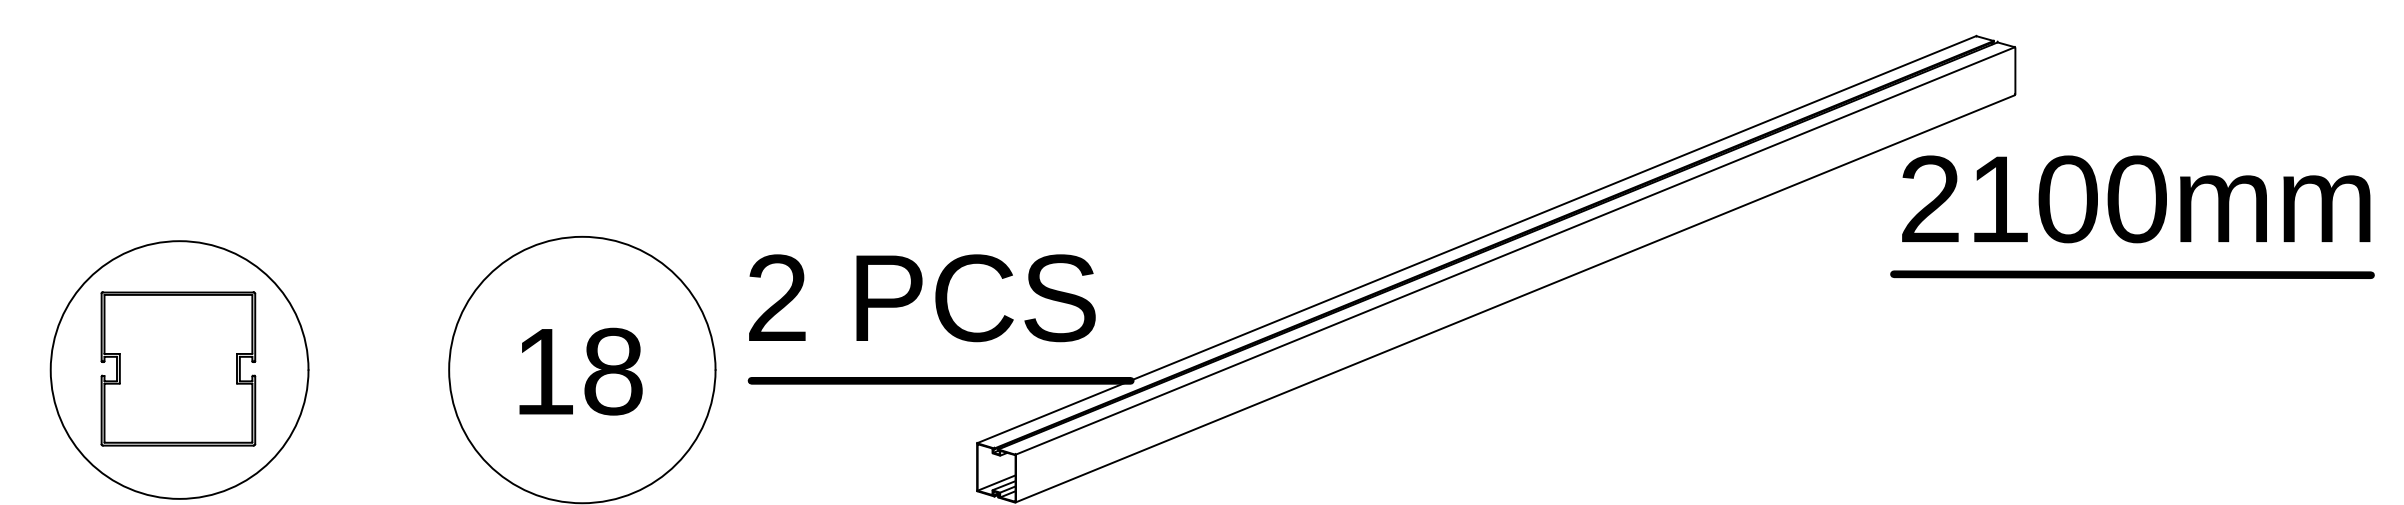
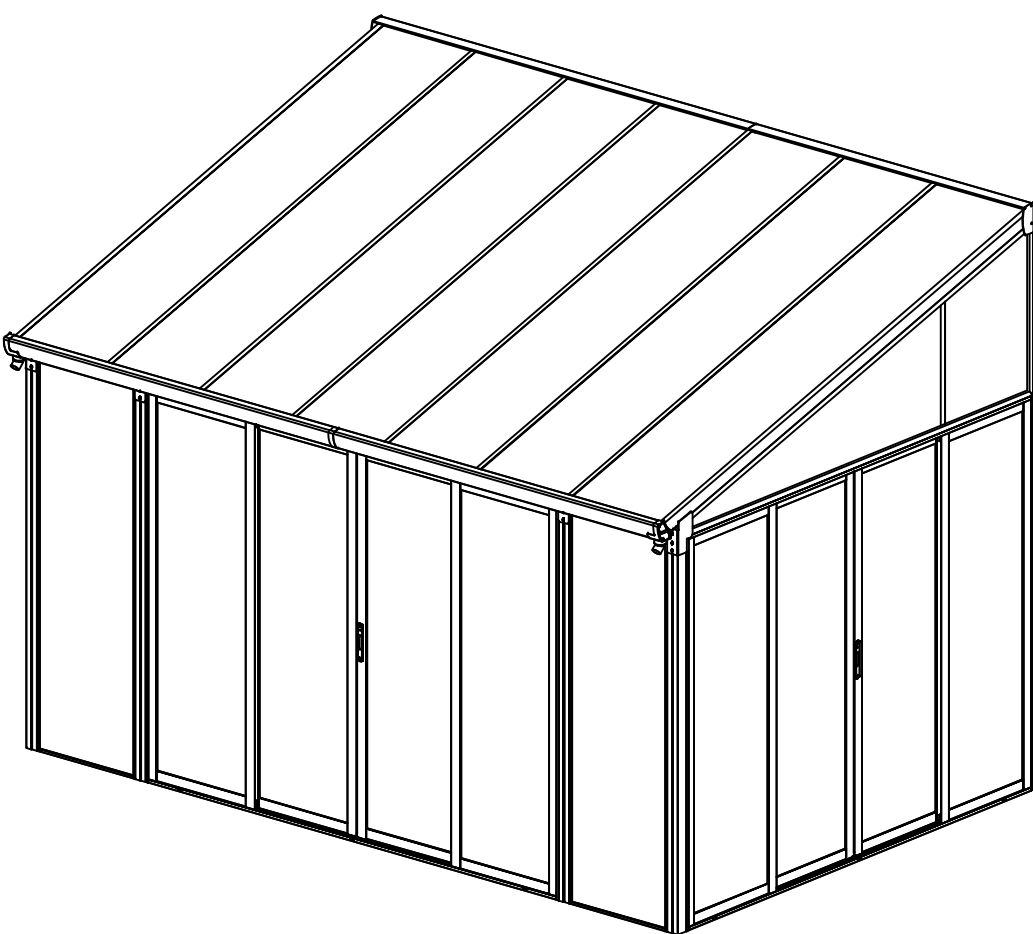








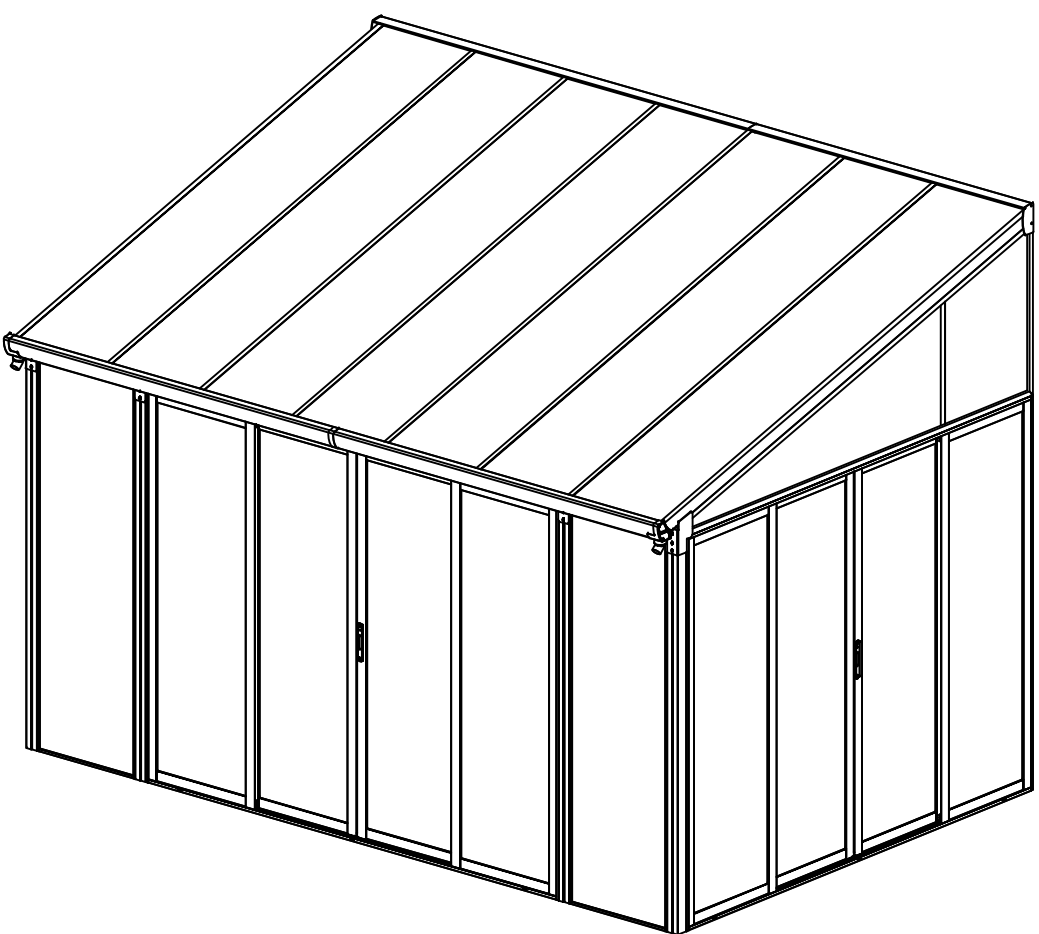




F6
ST6.3X60
9 PCS


F4
ST4.2X20
6 PCS

F8
ST4.2X25
21 PCS

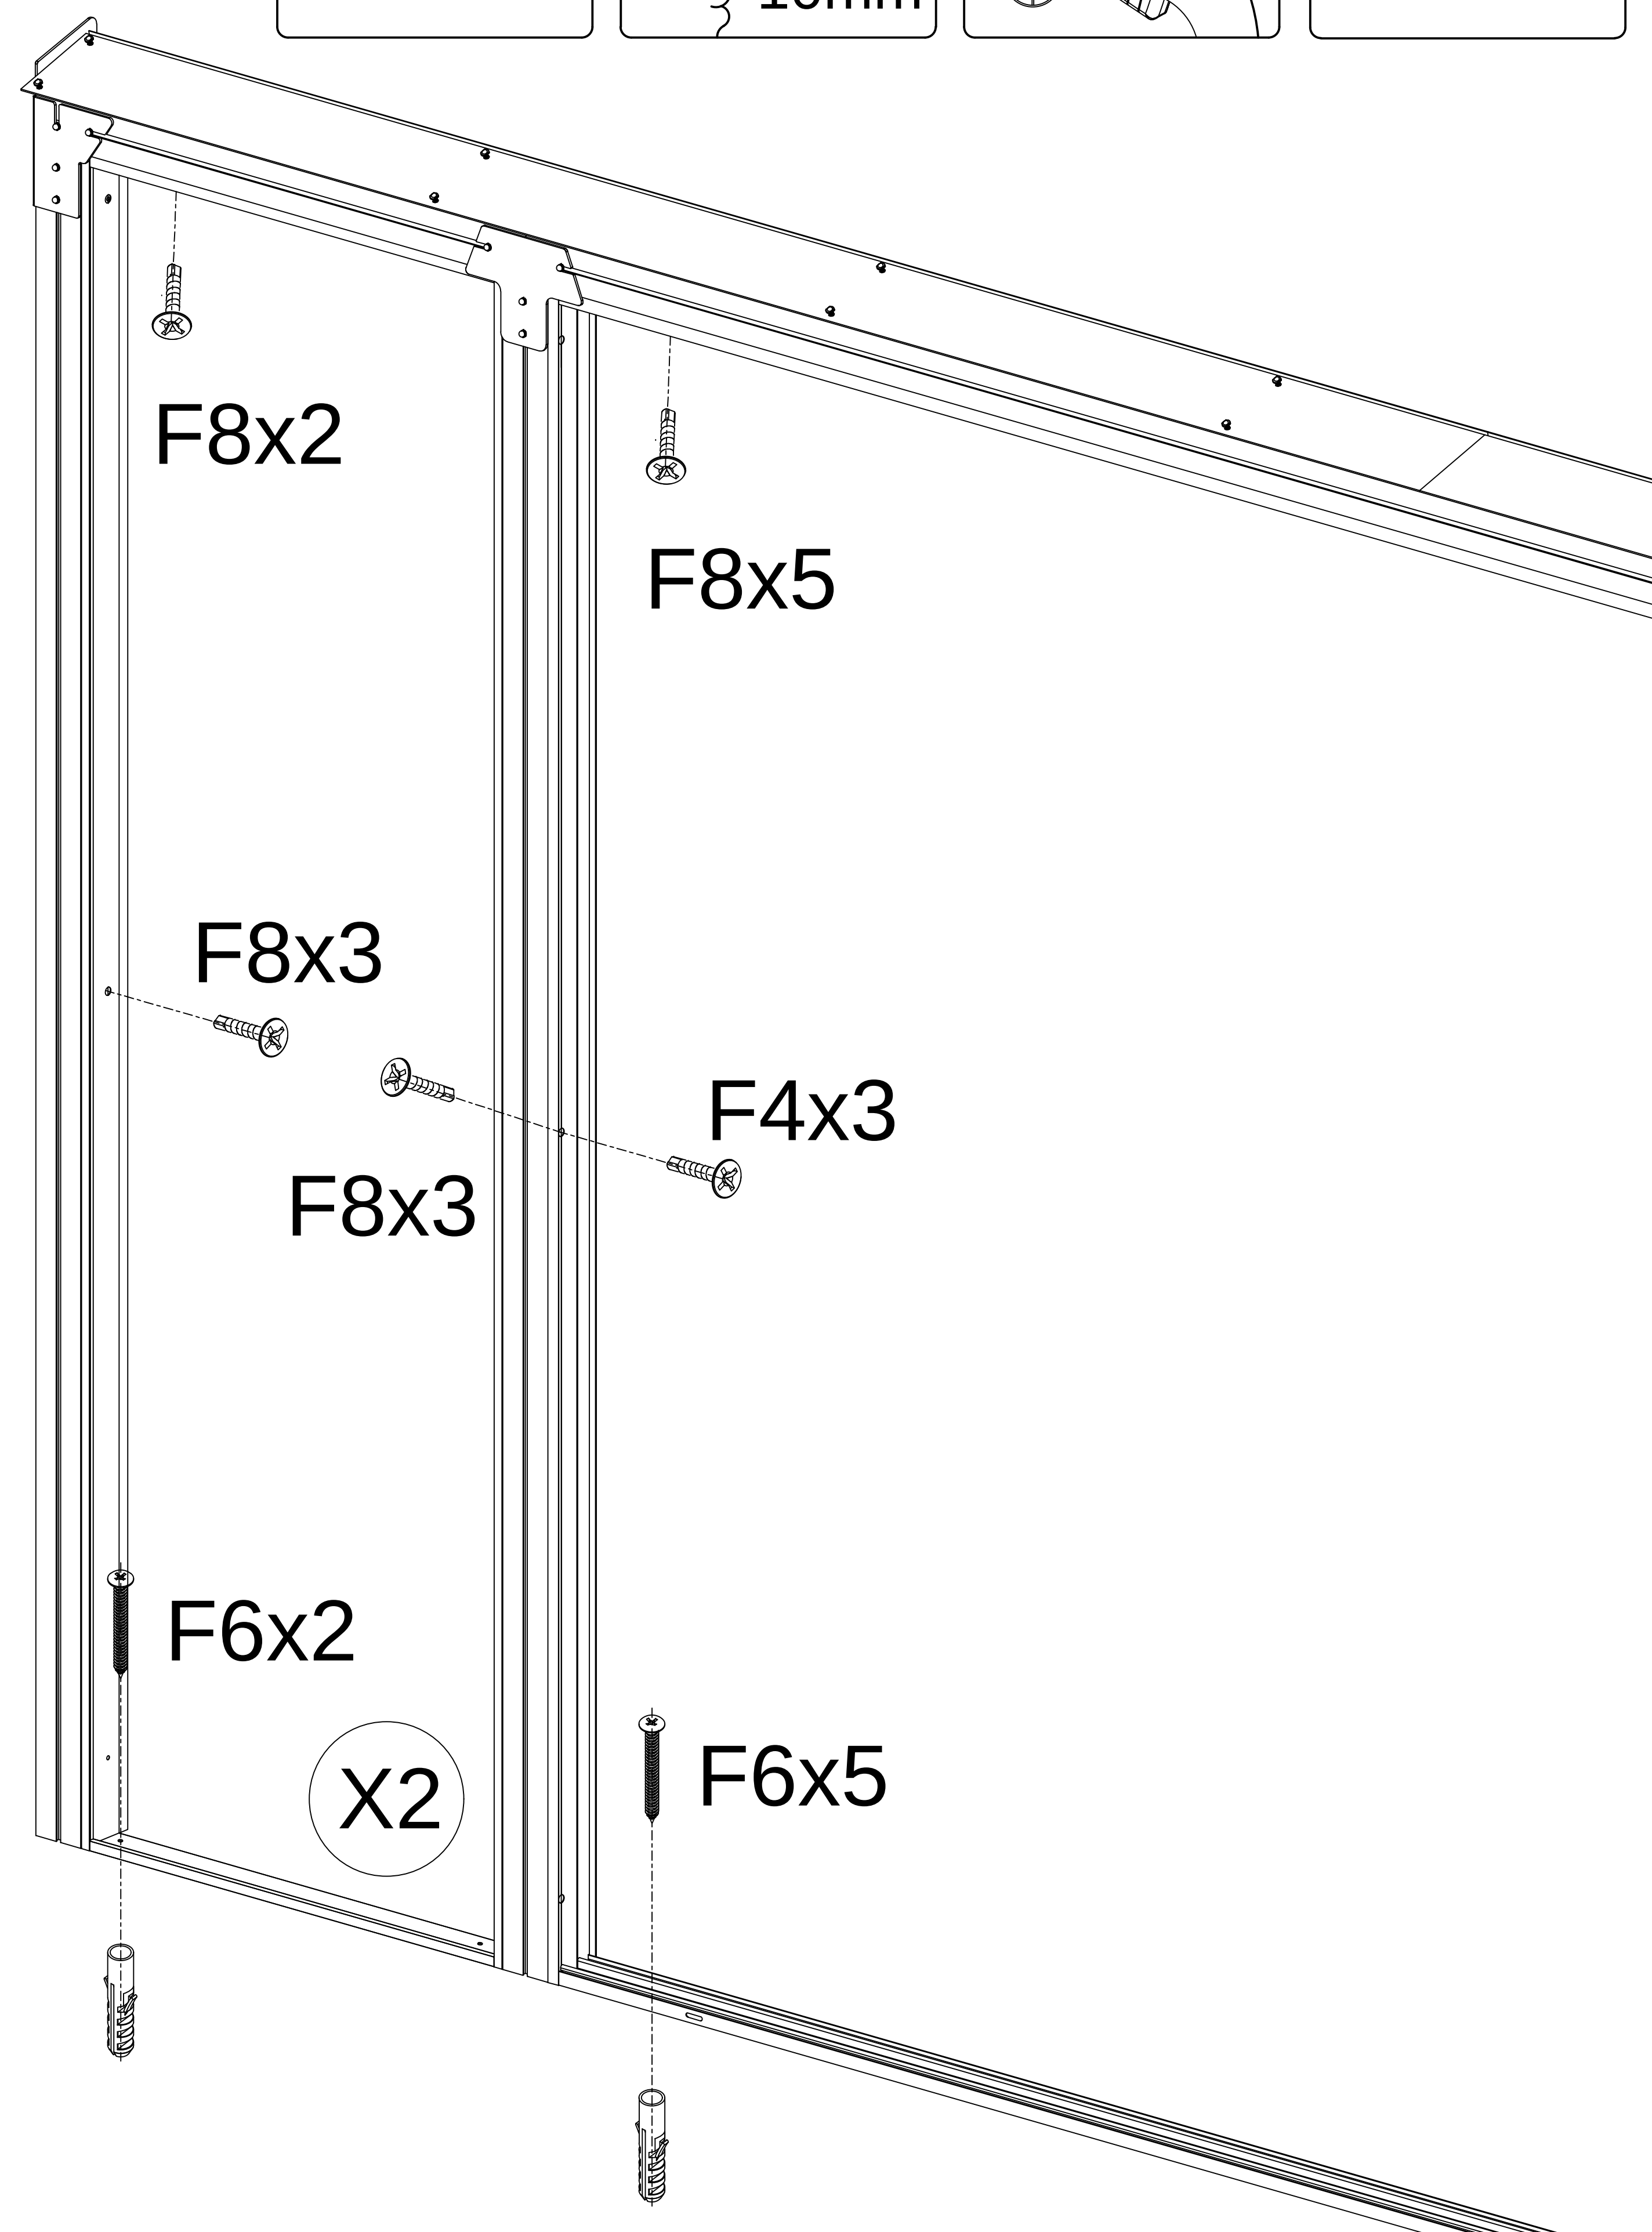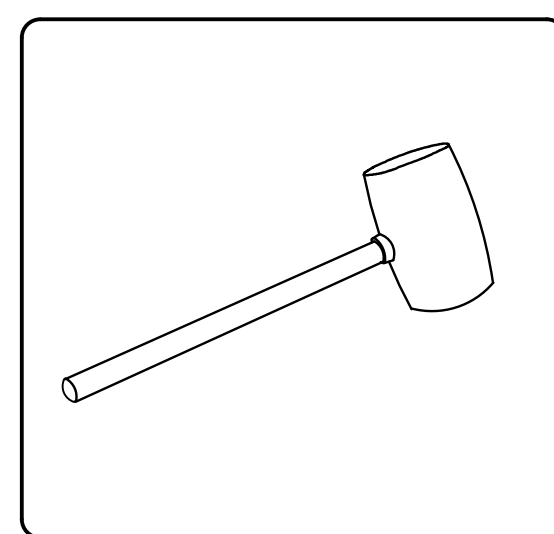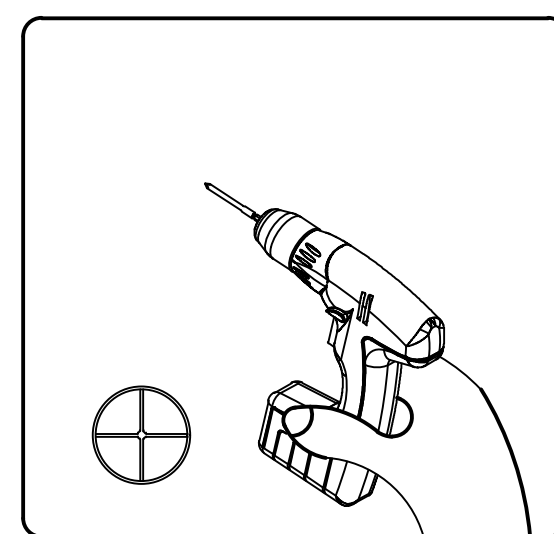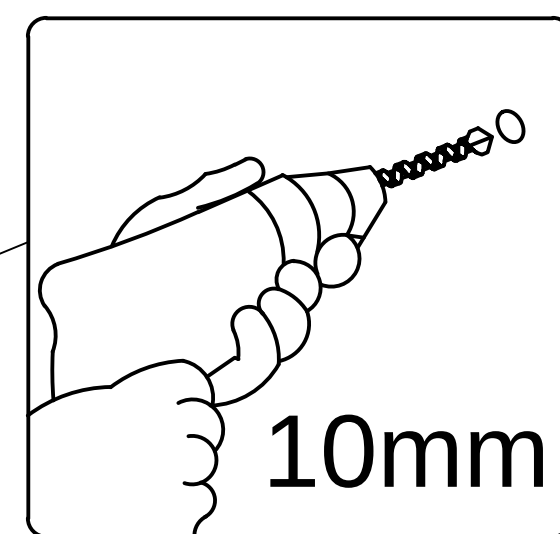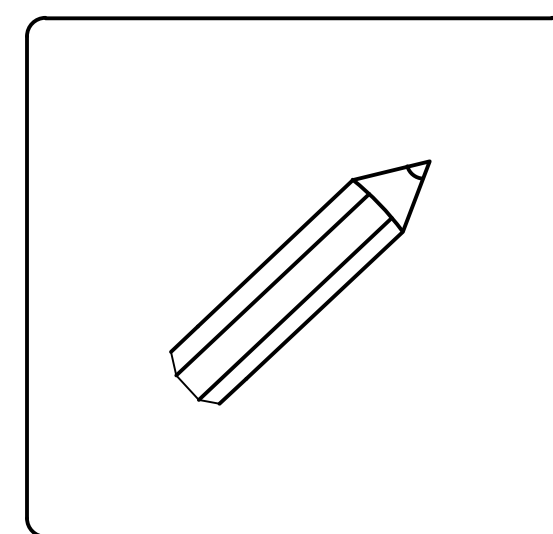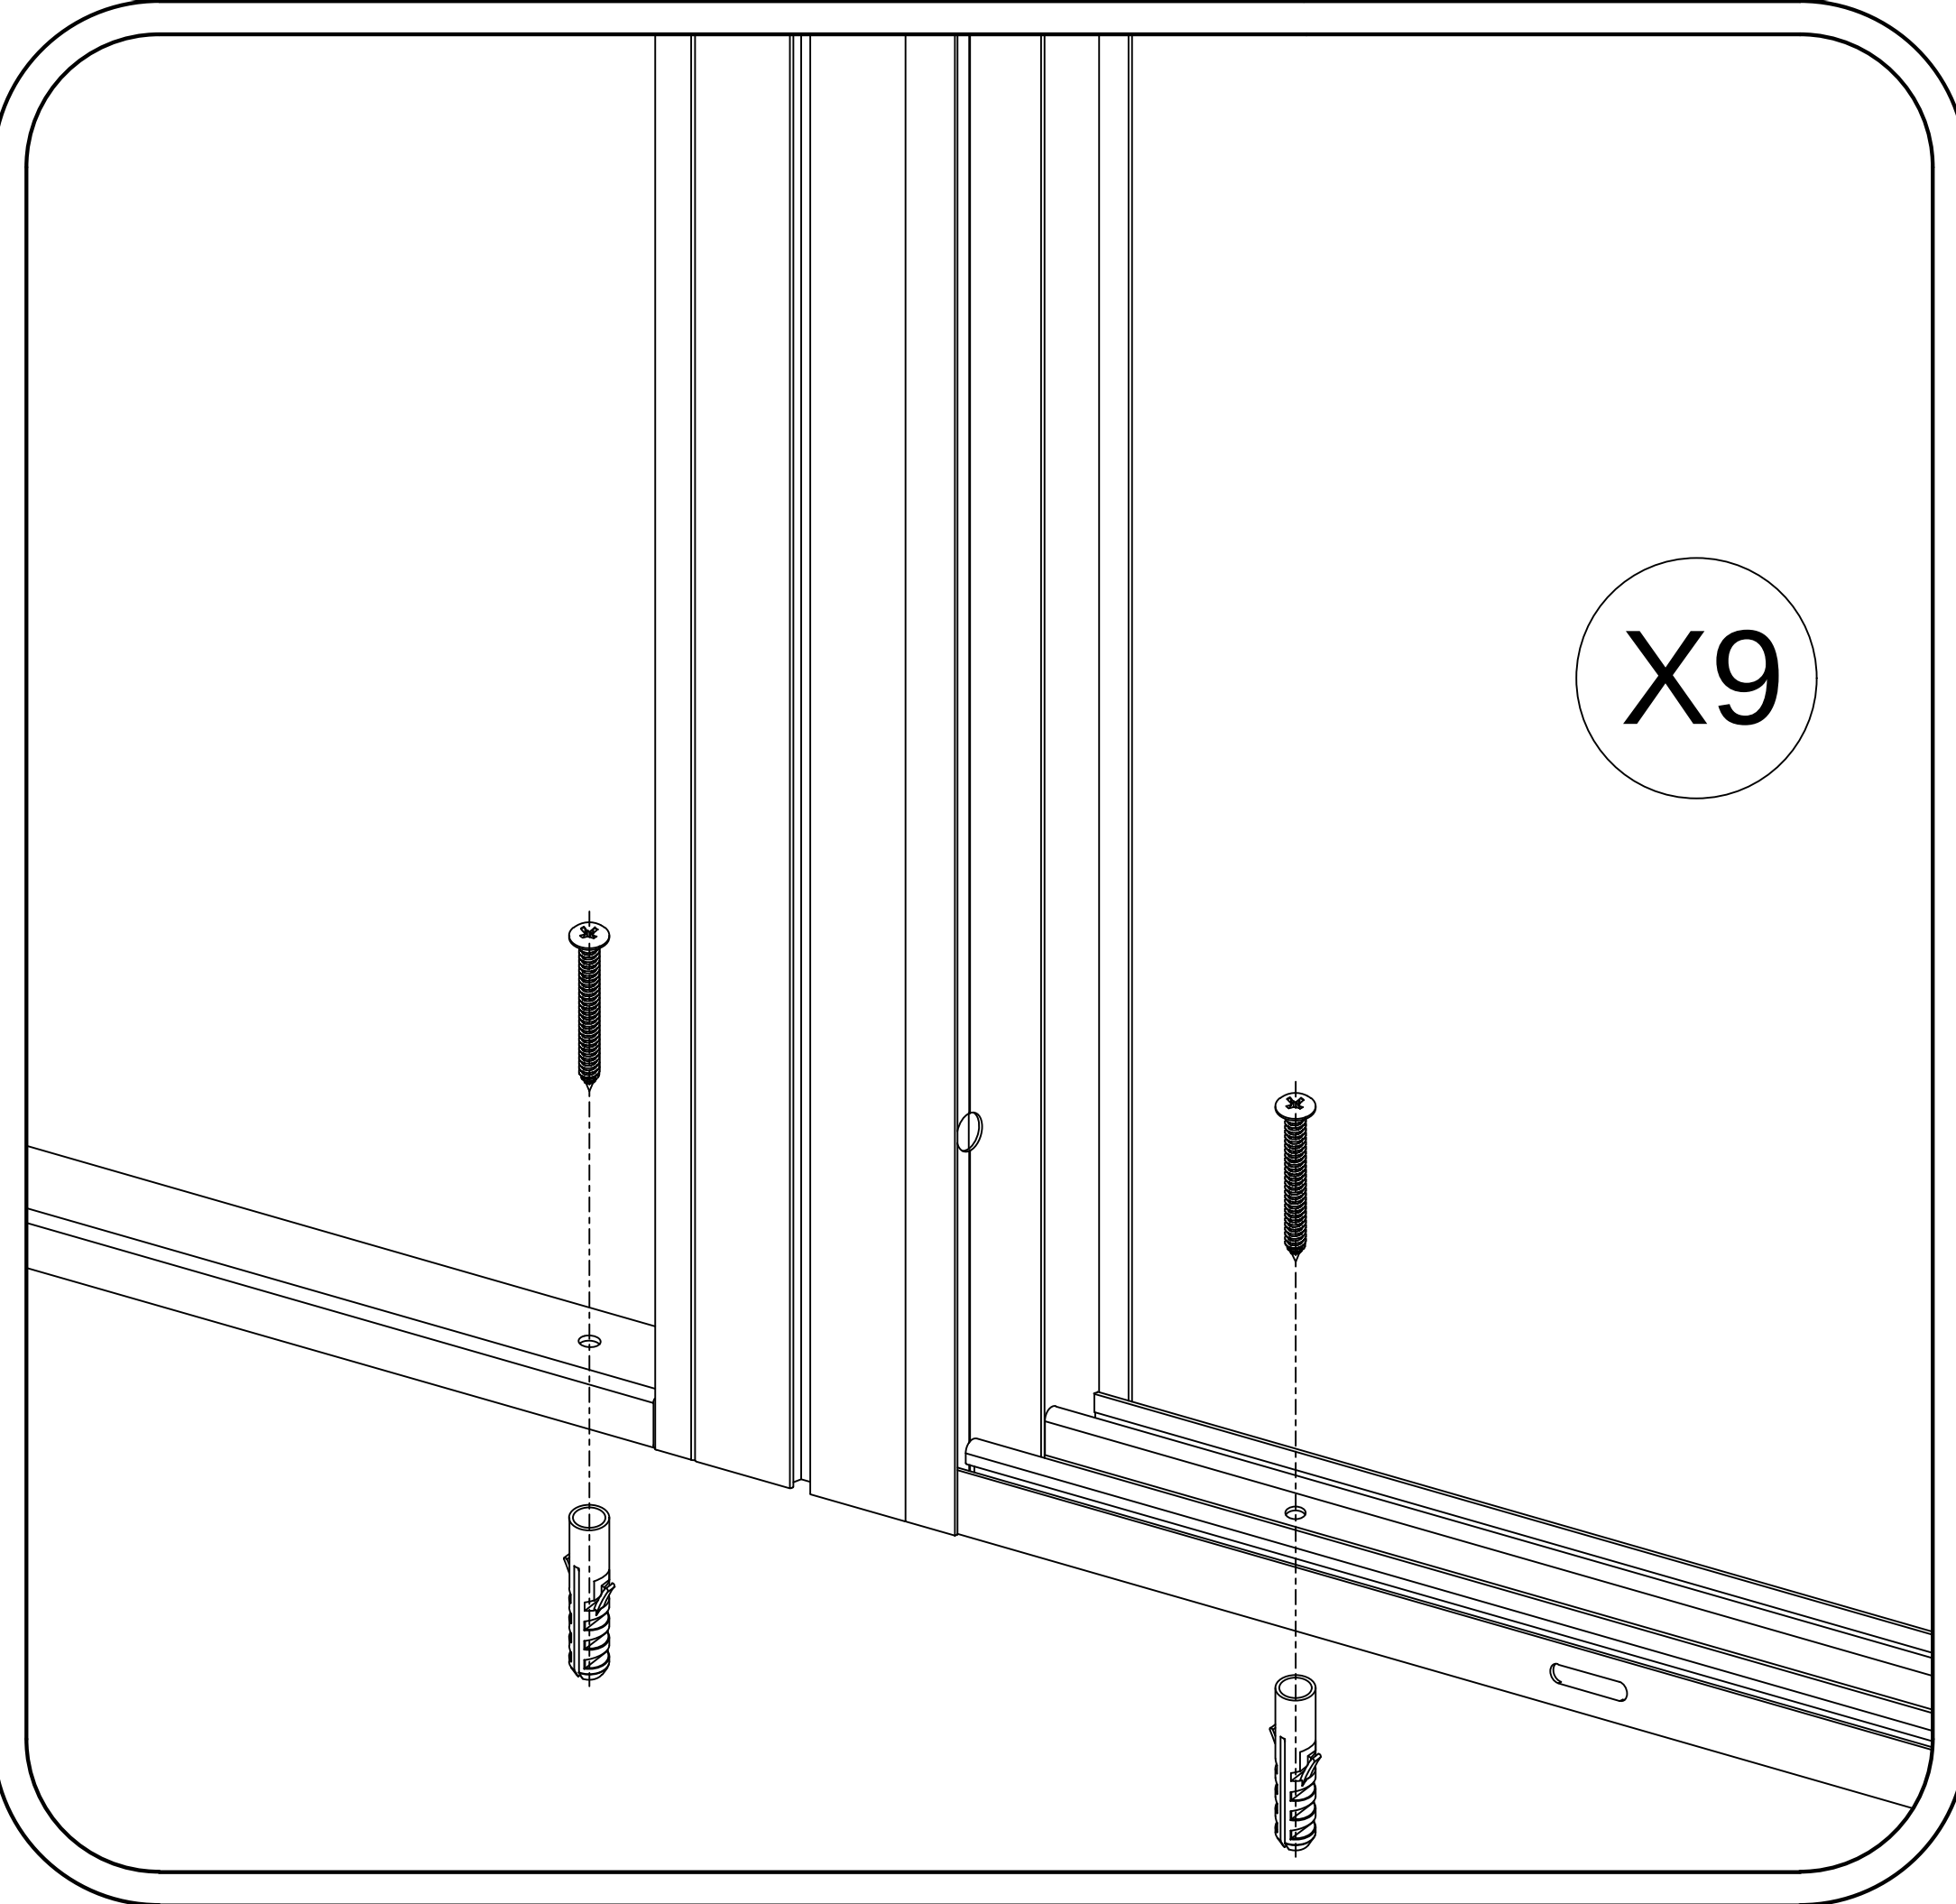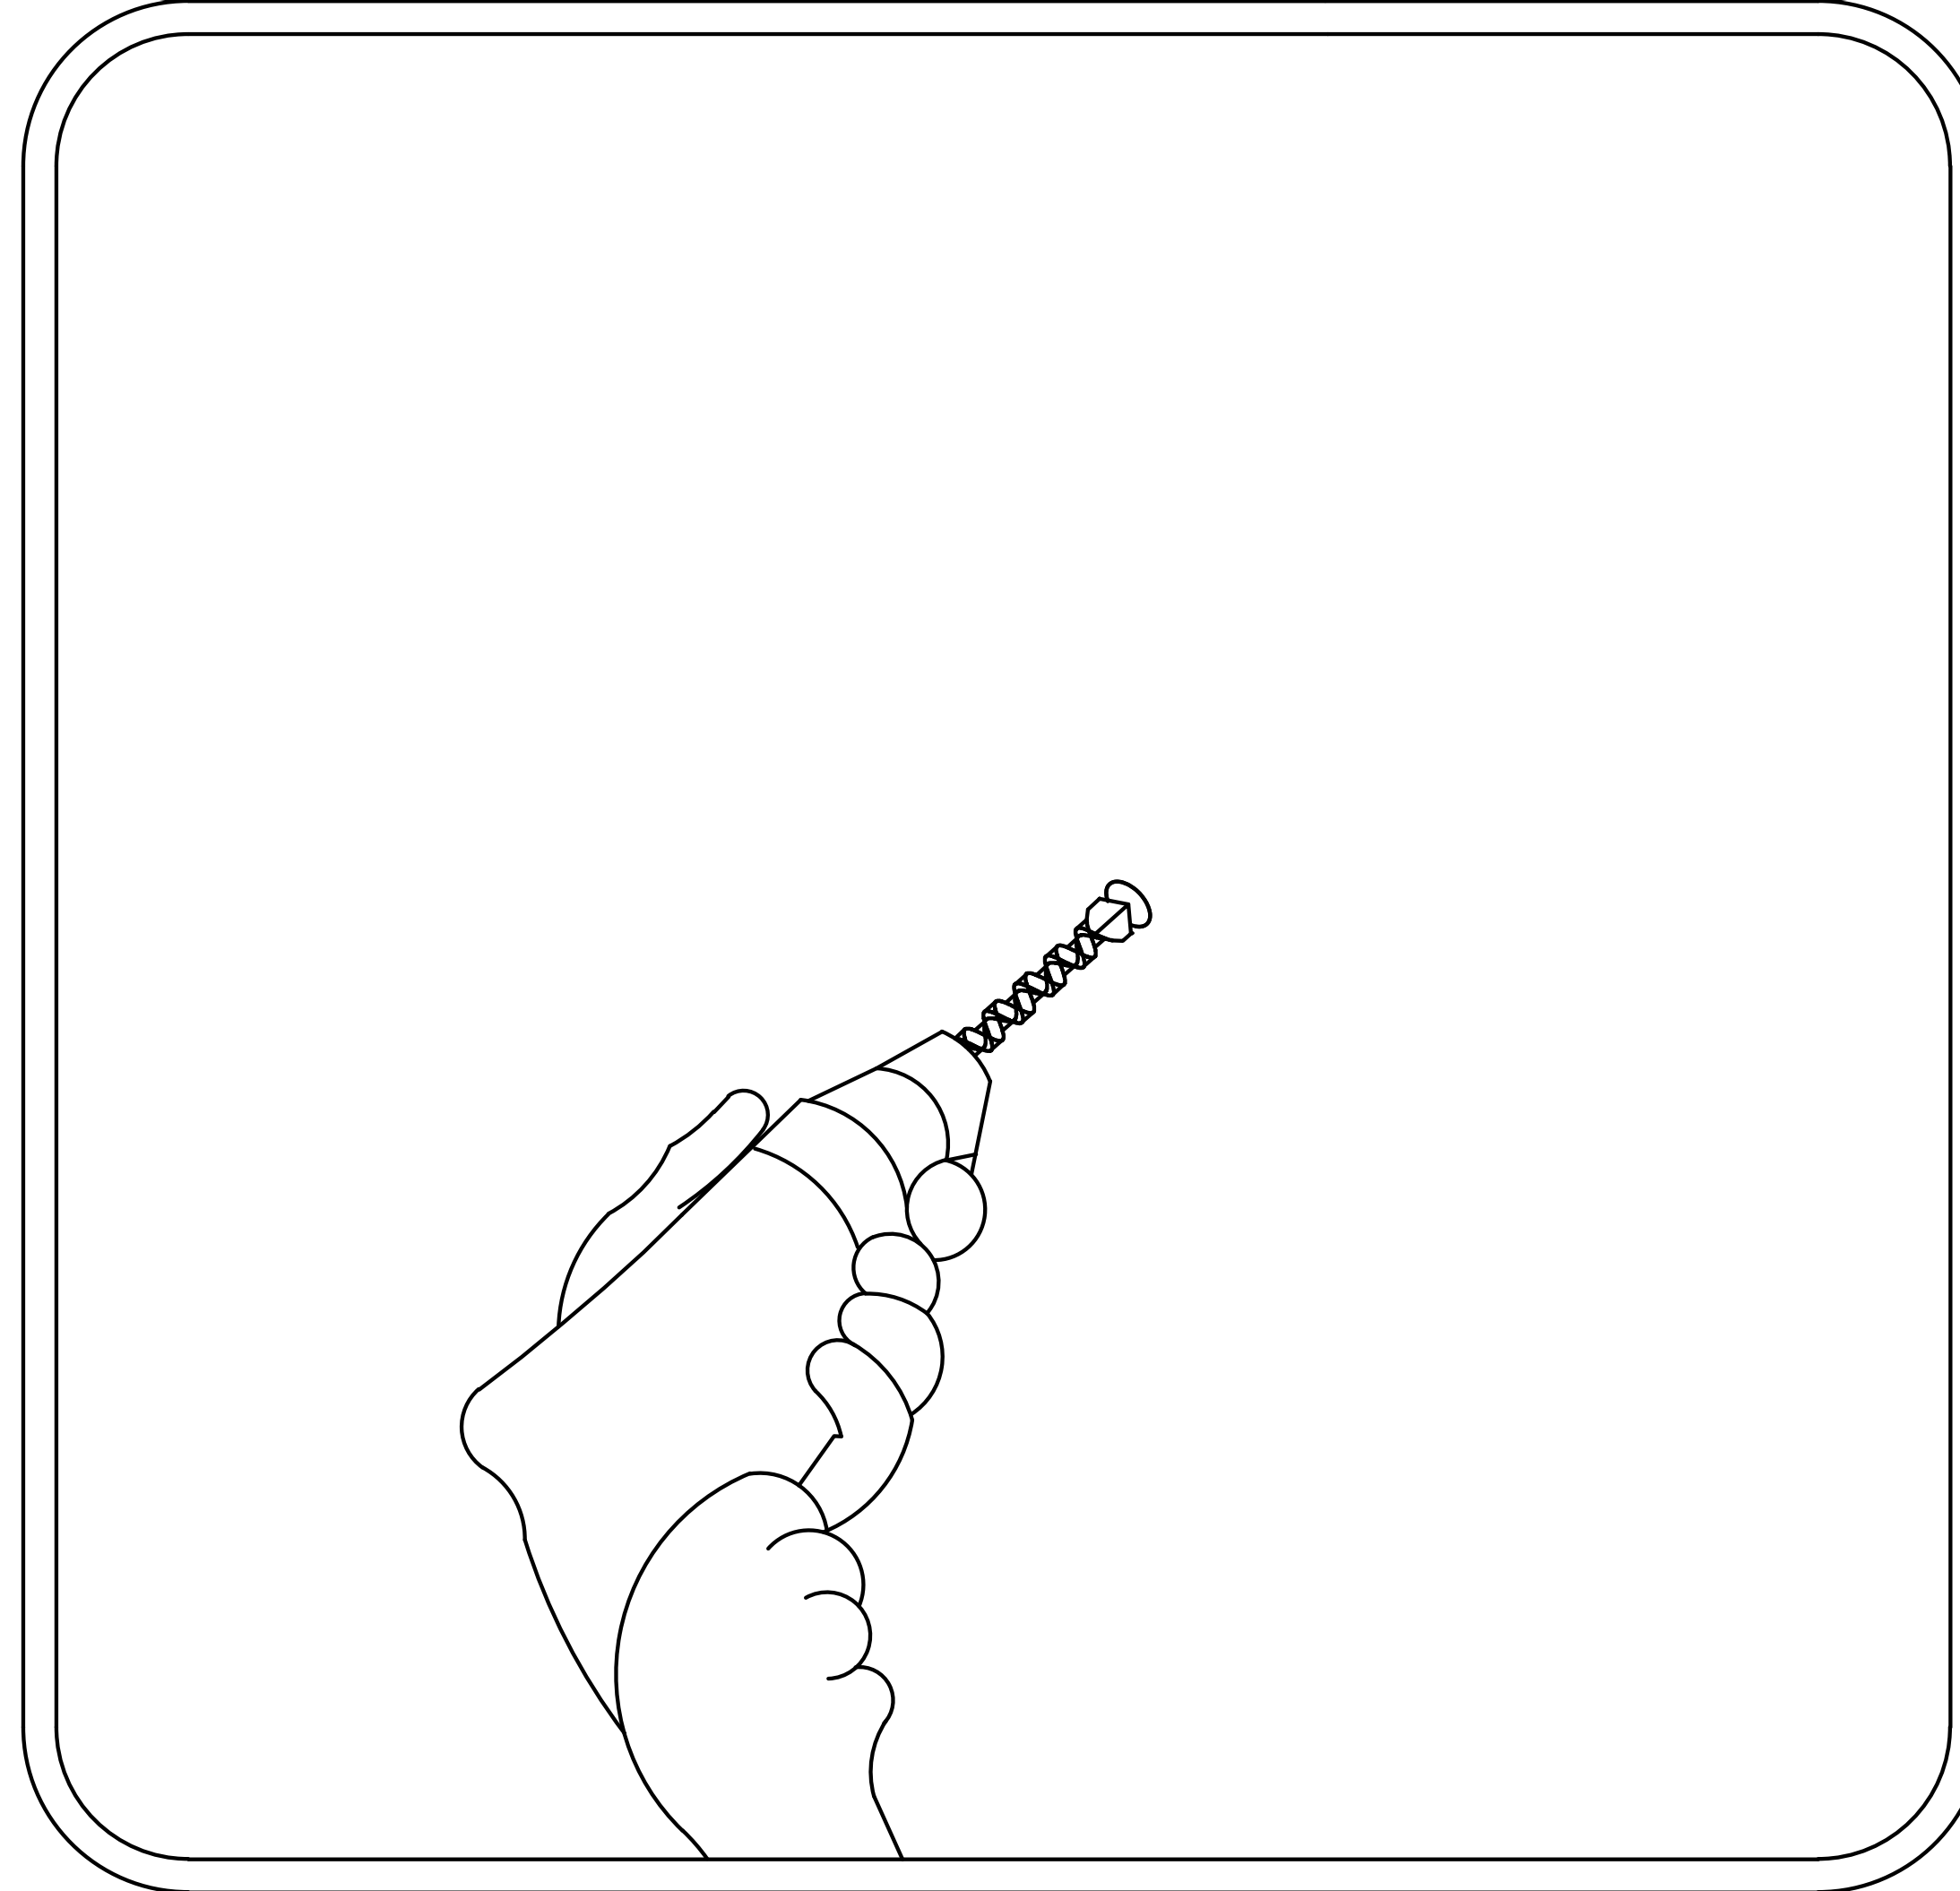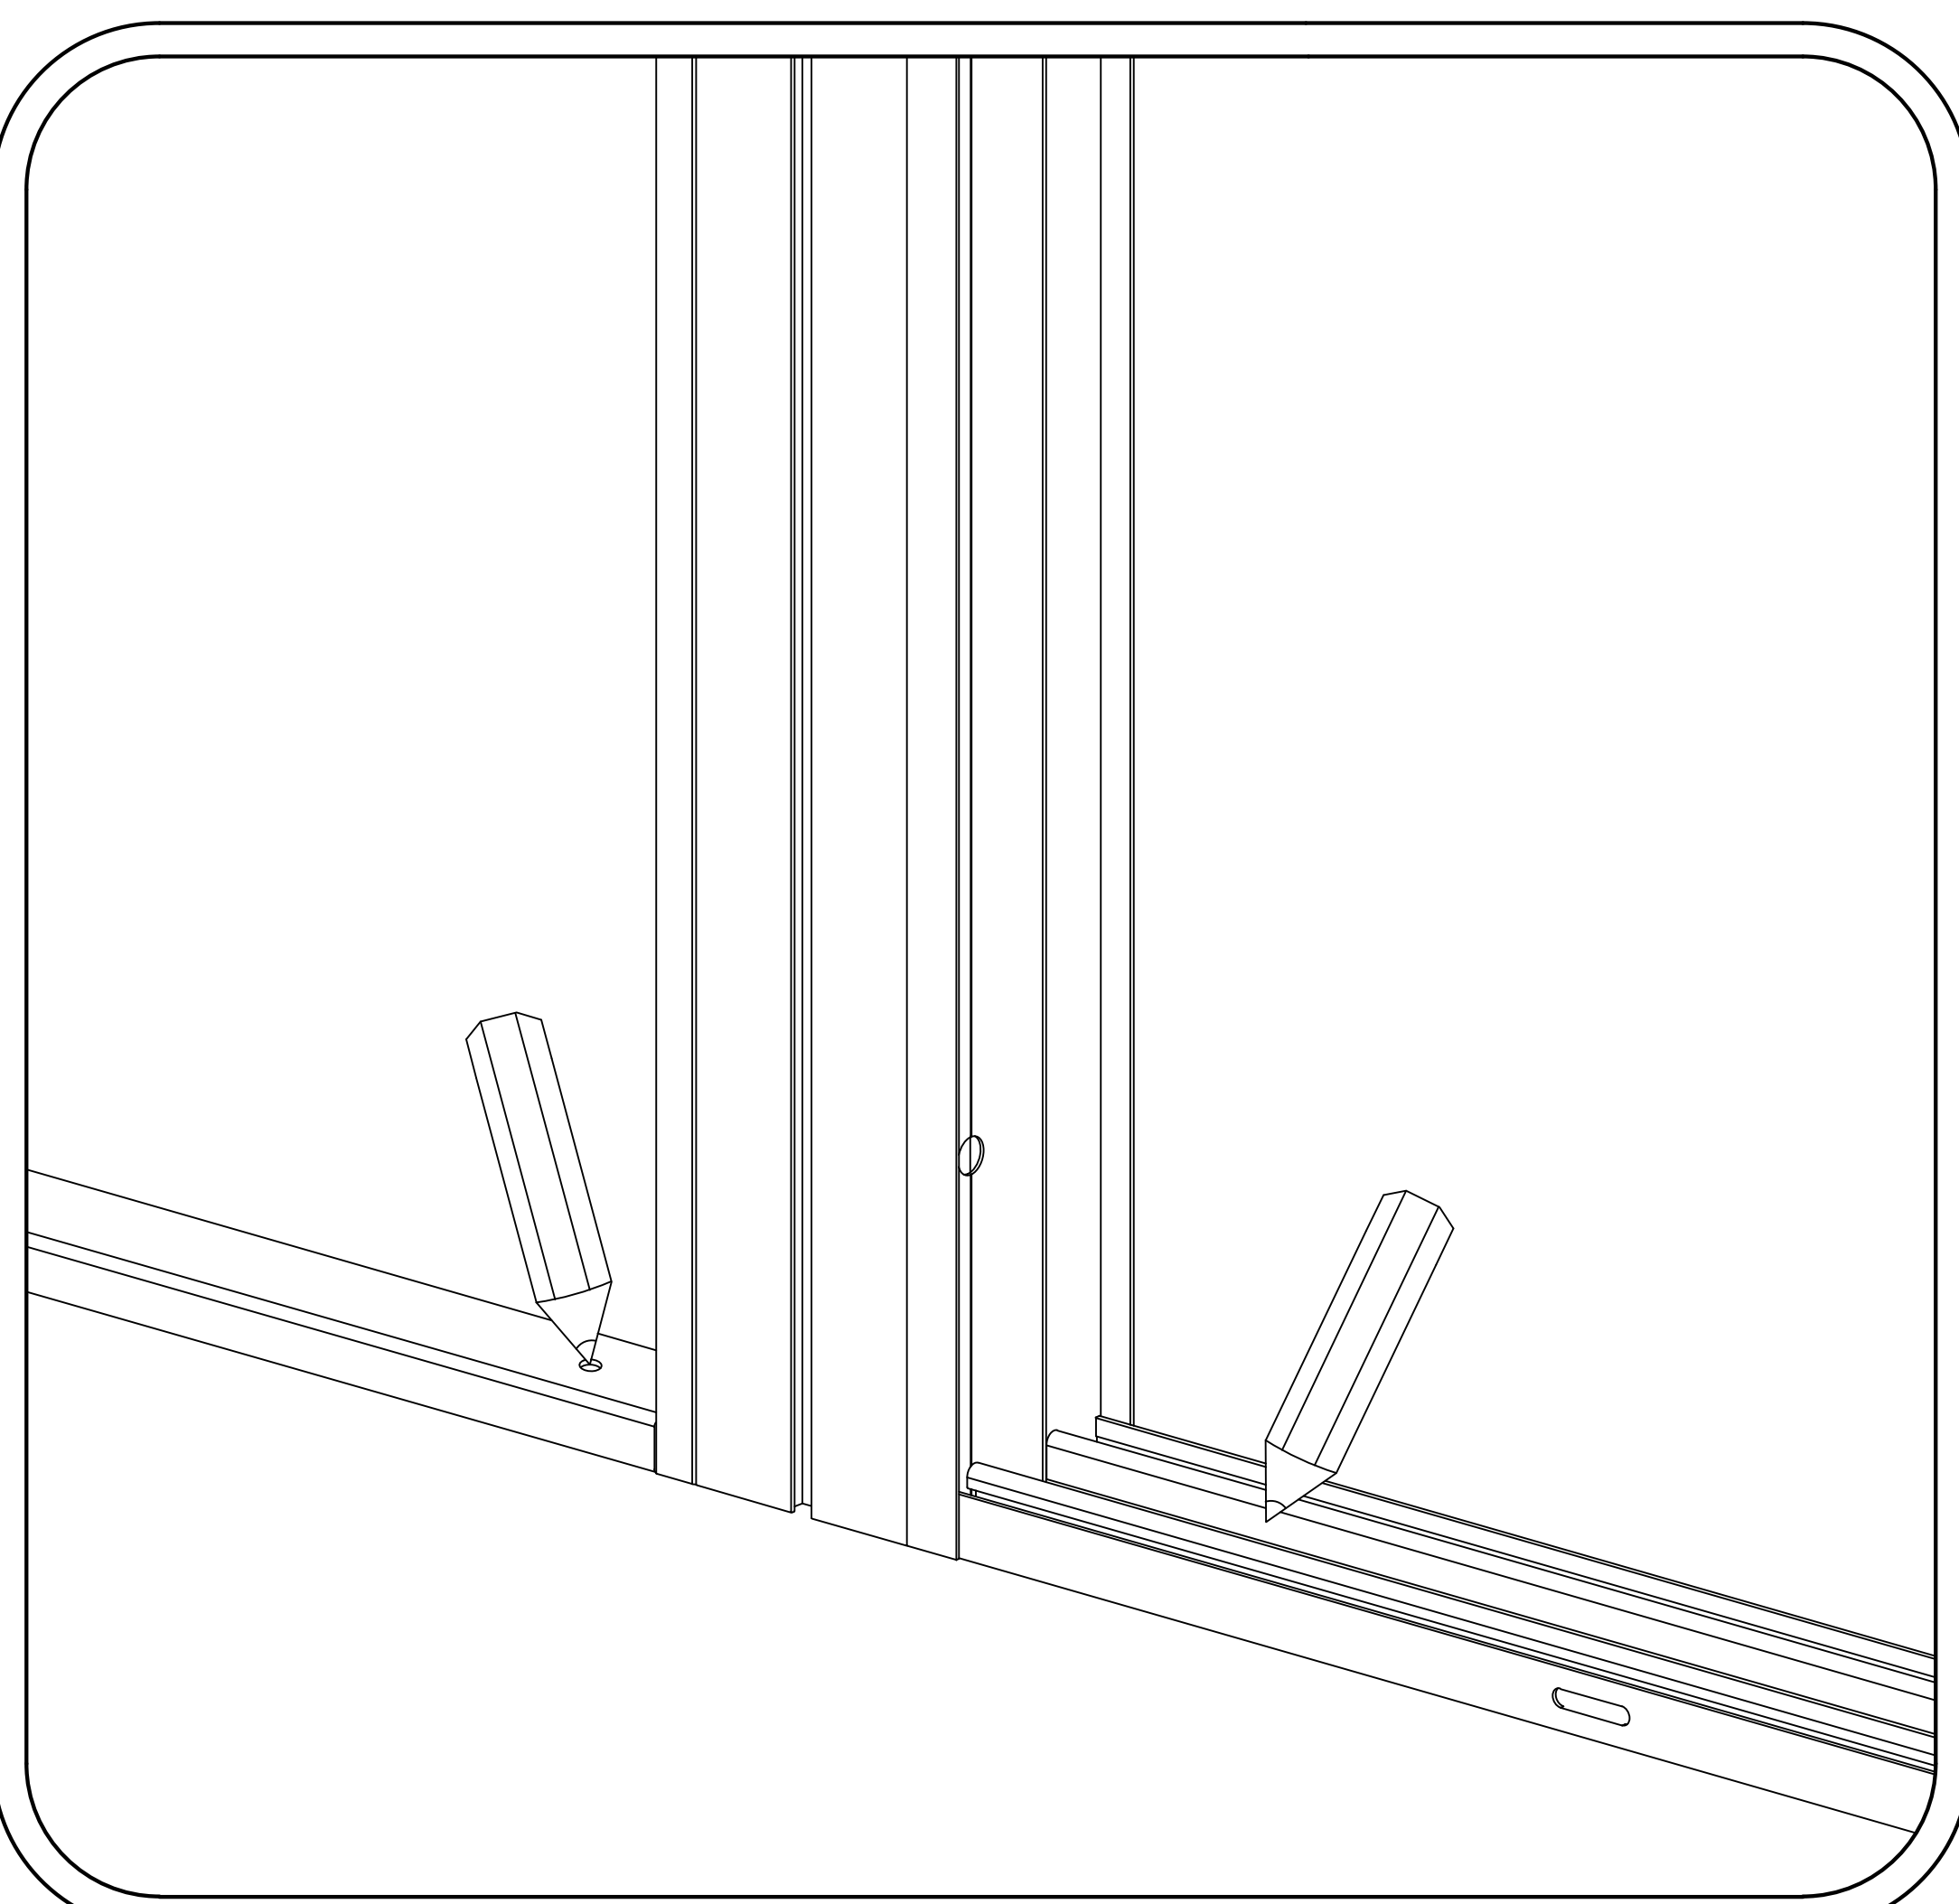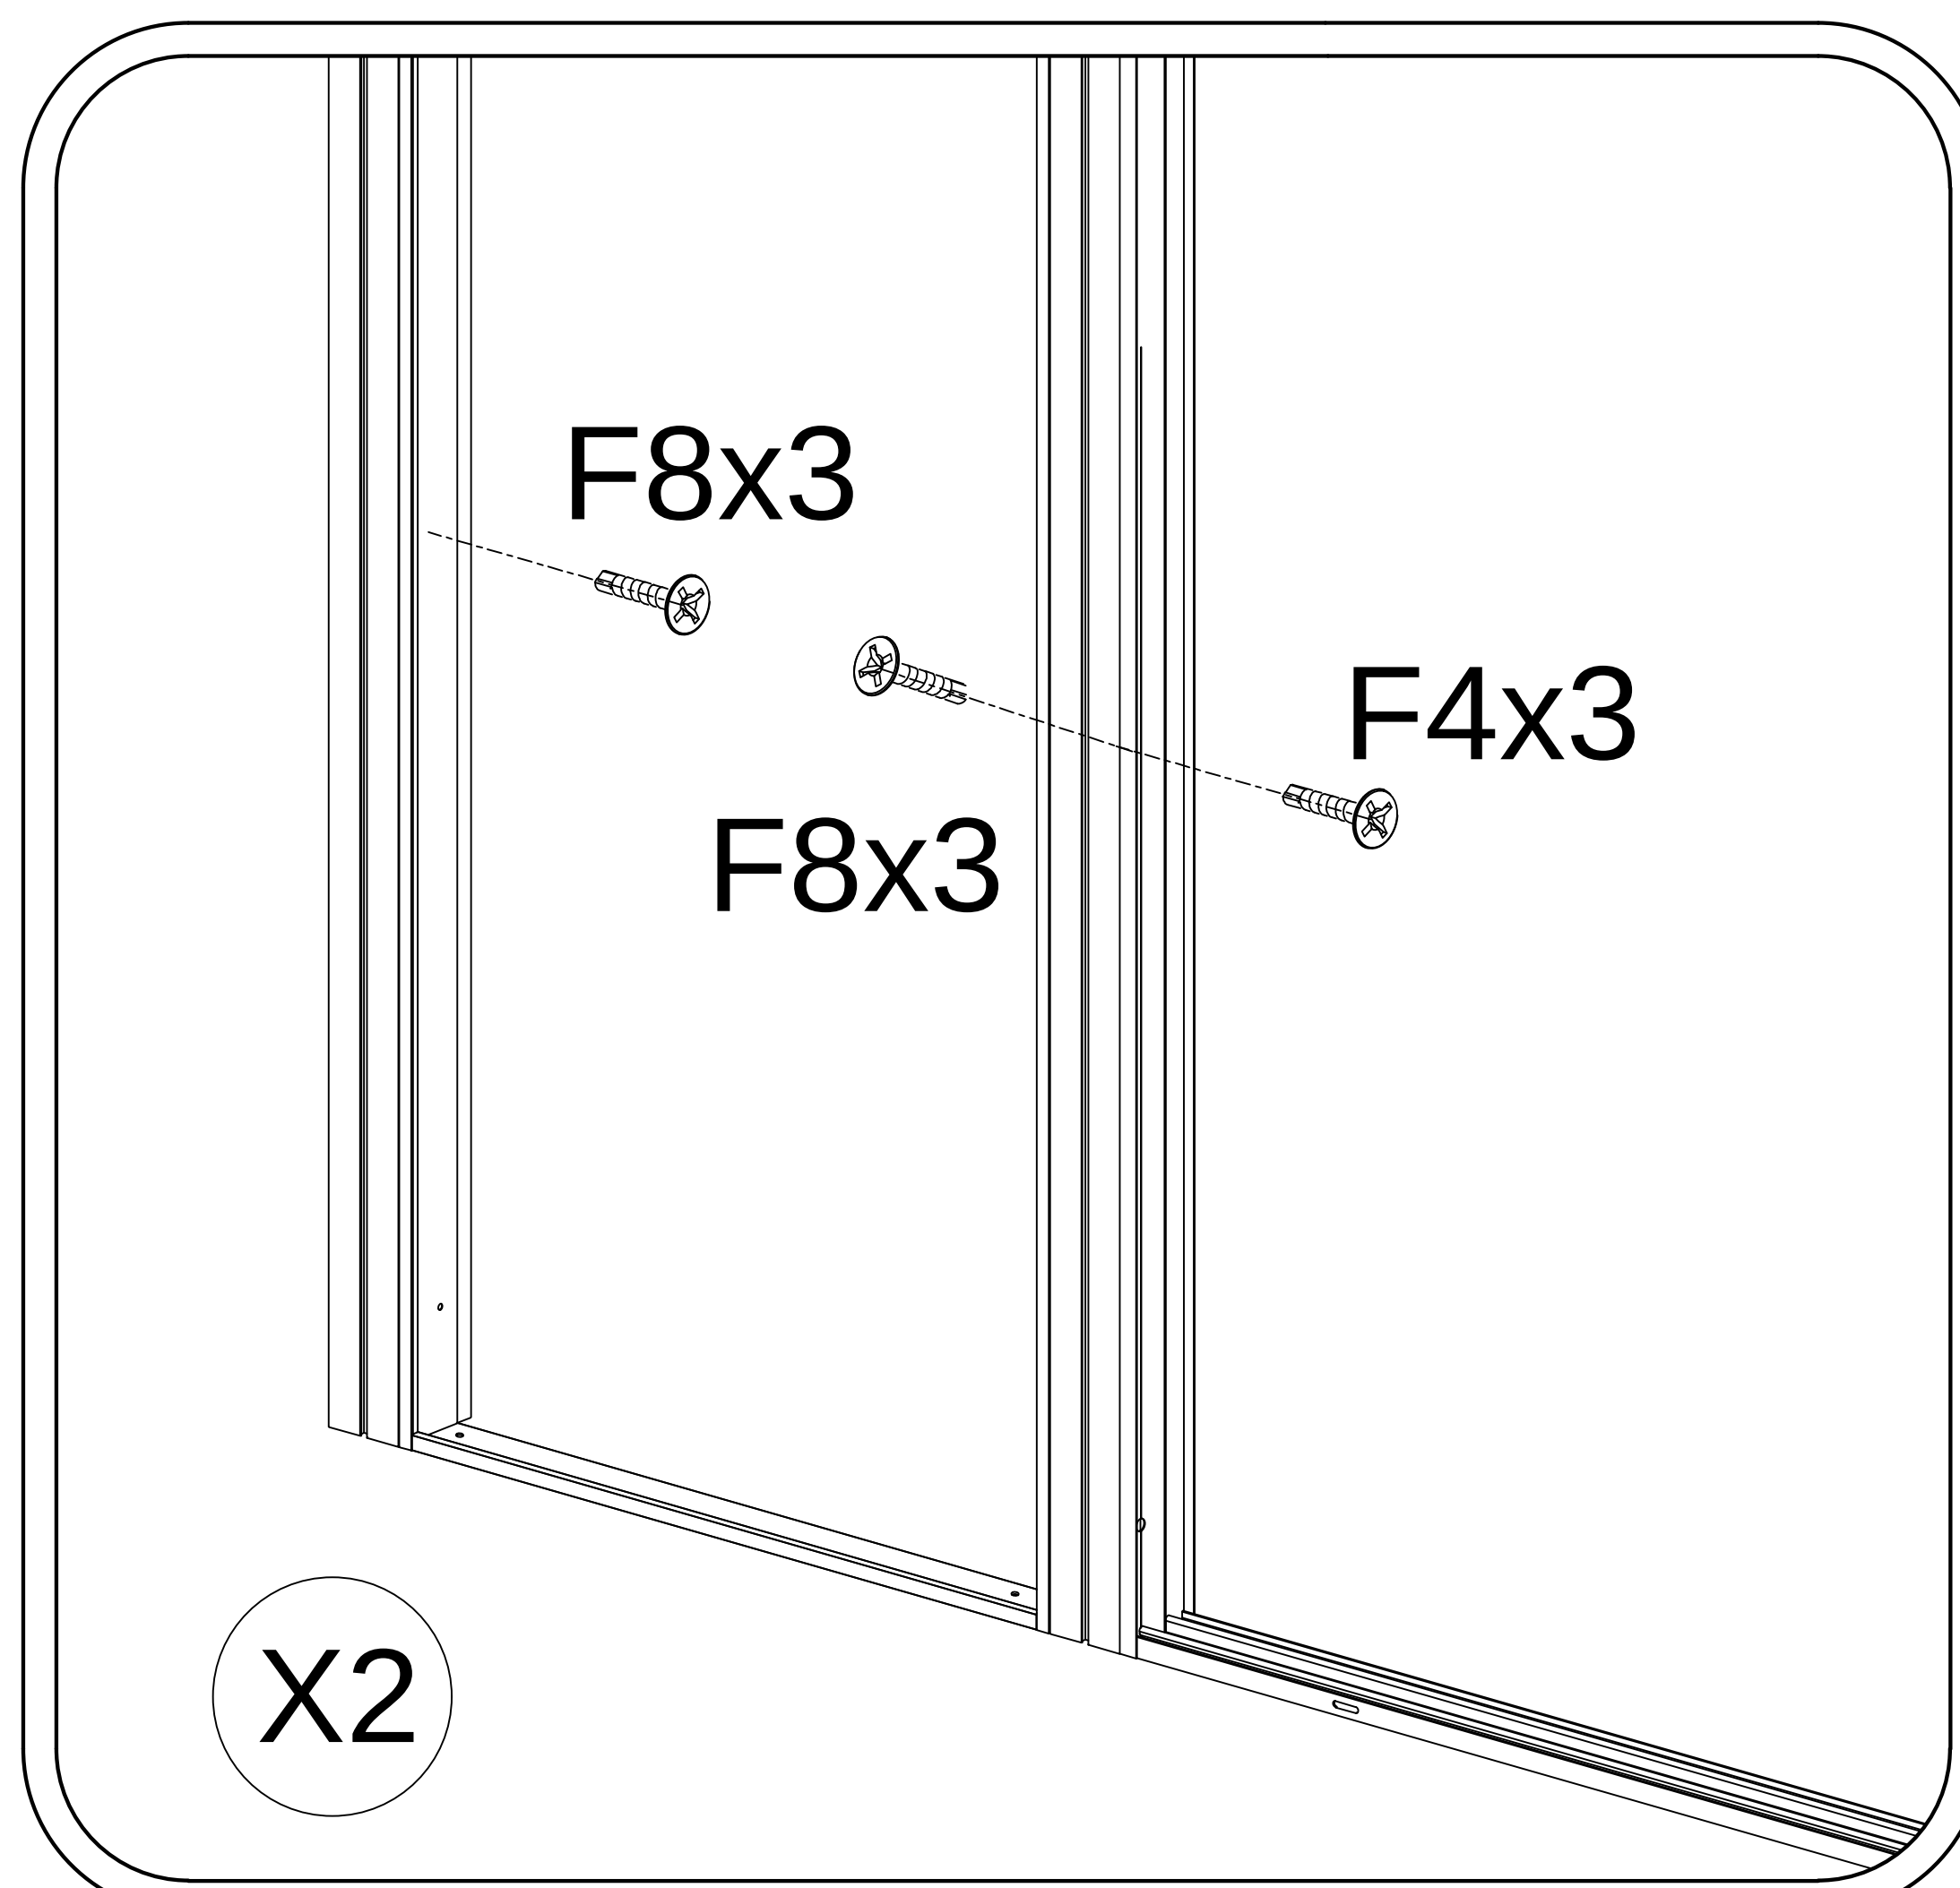

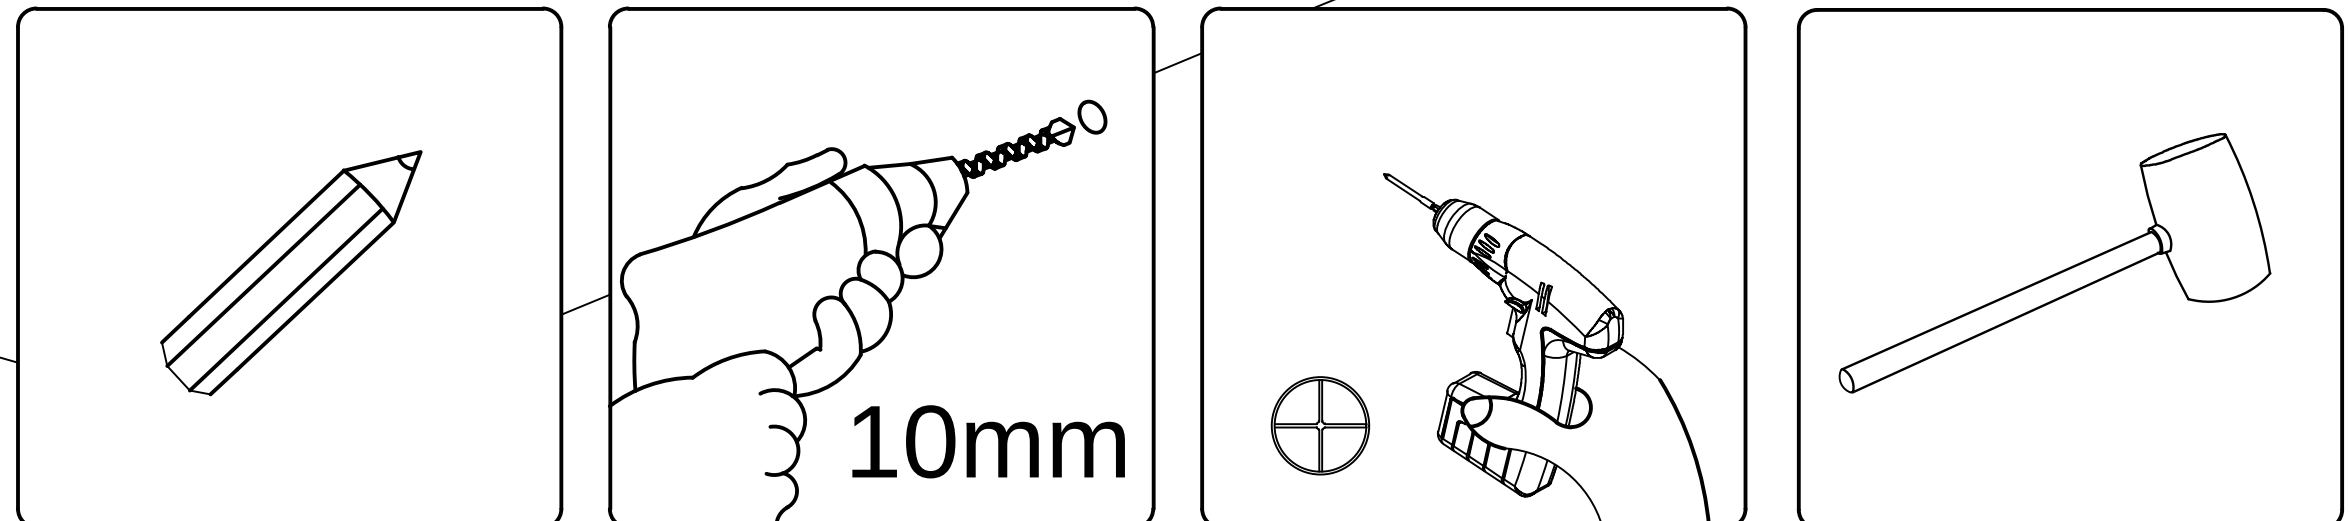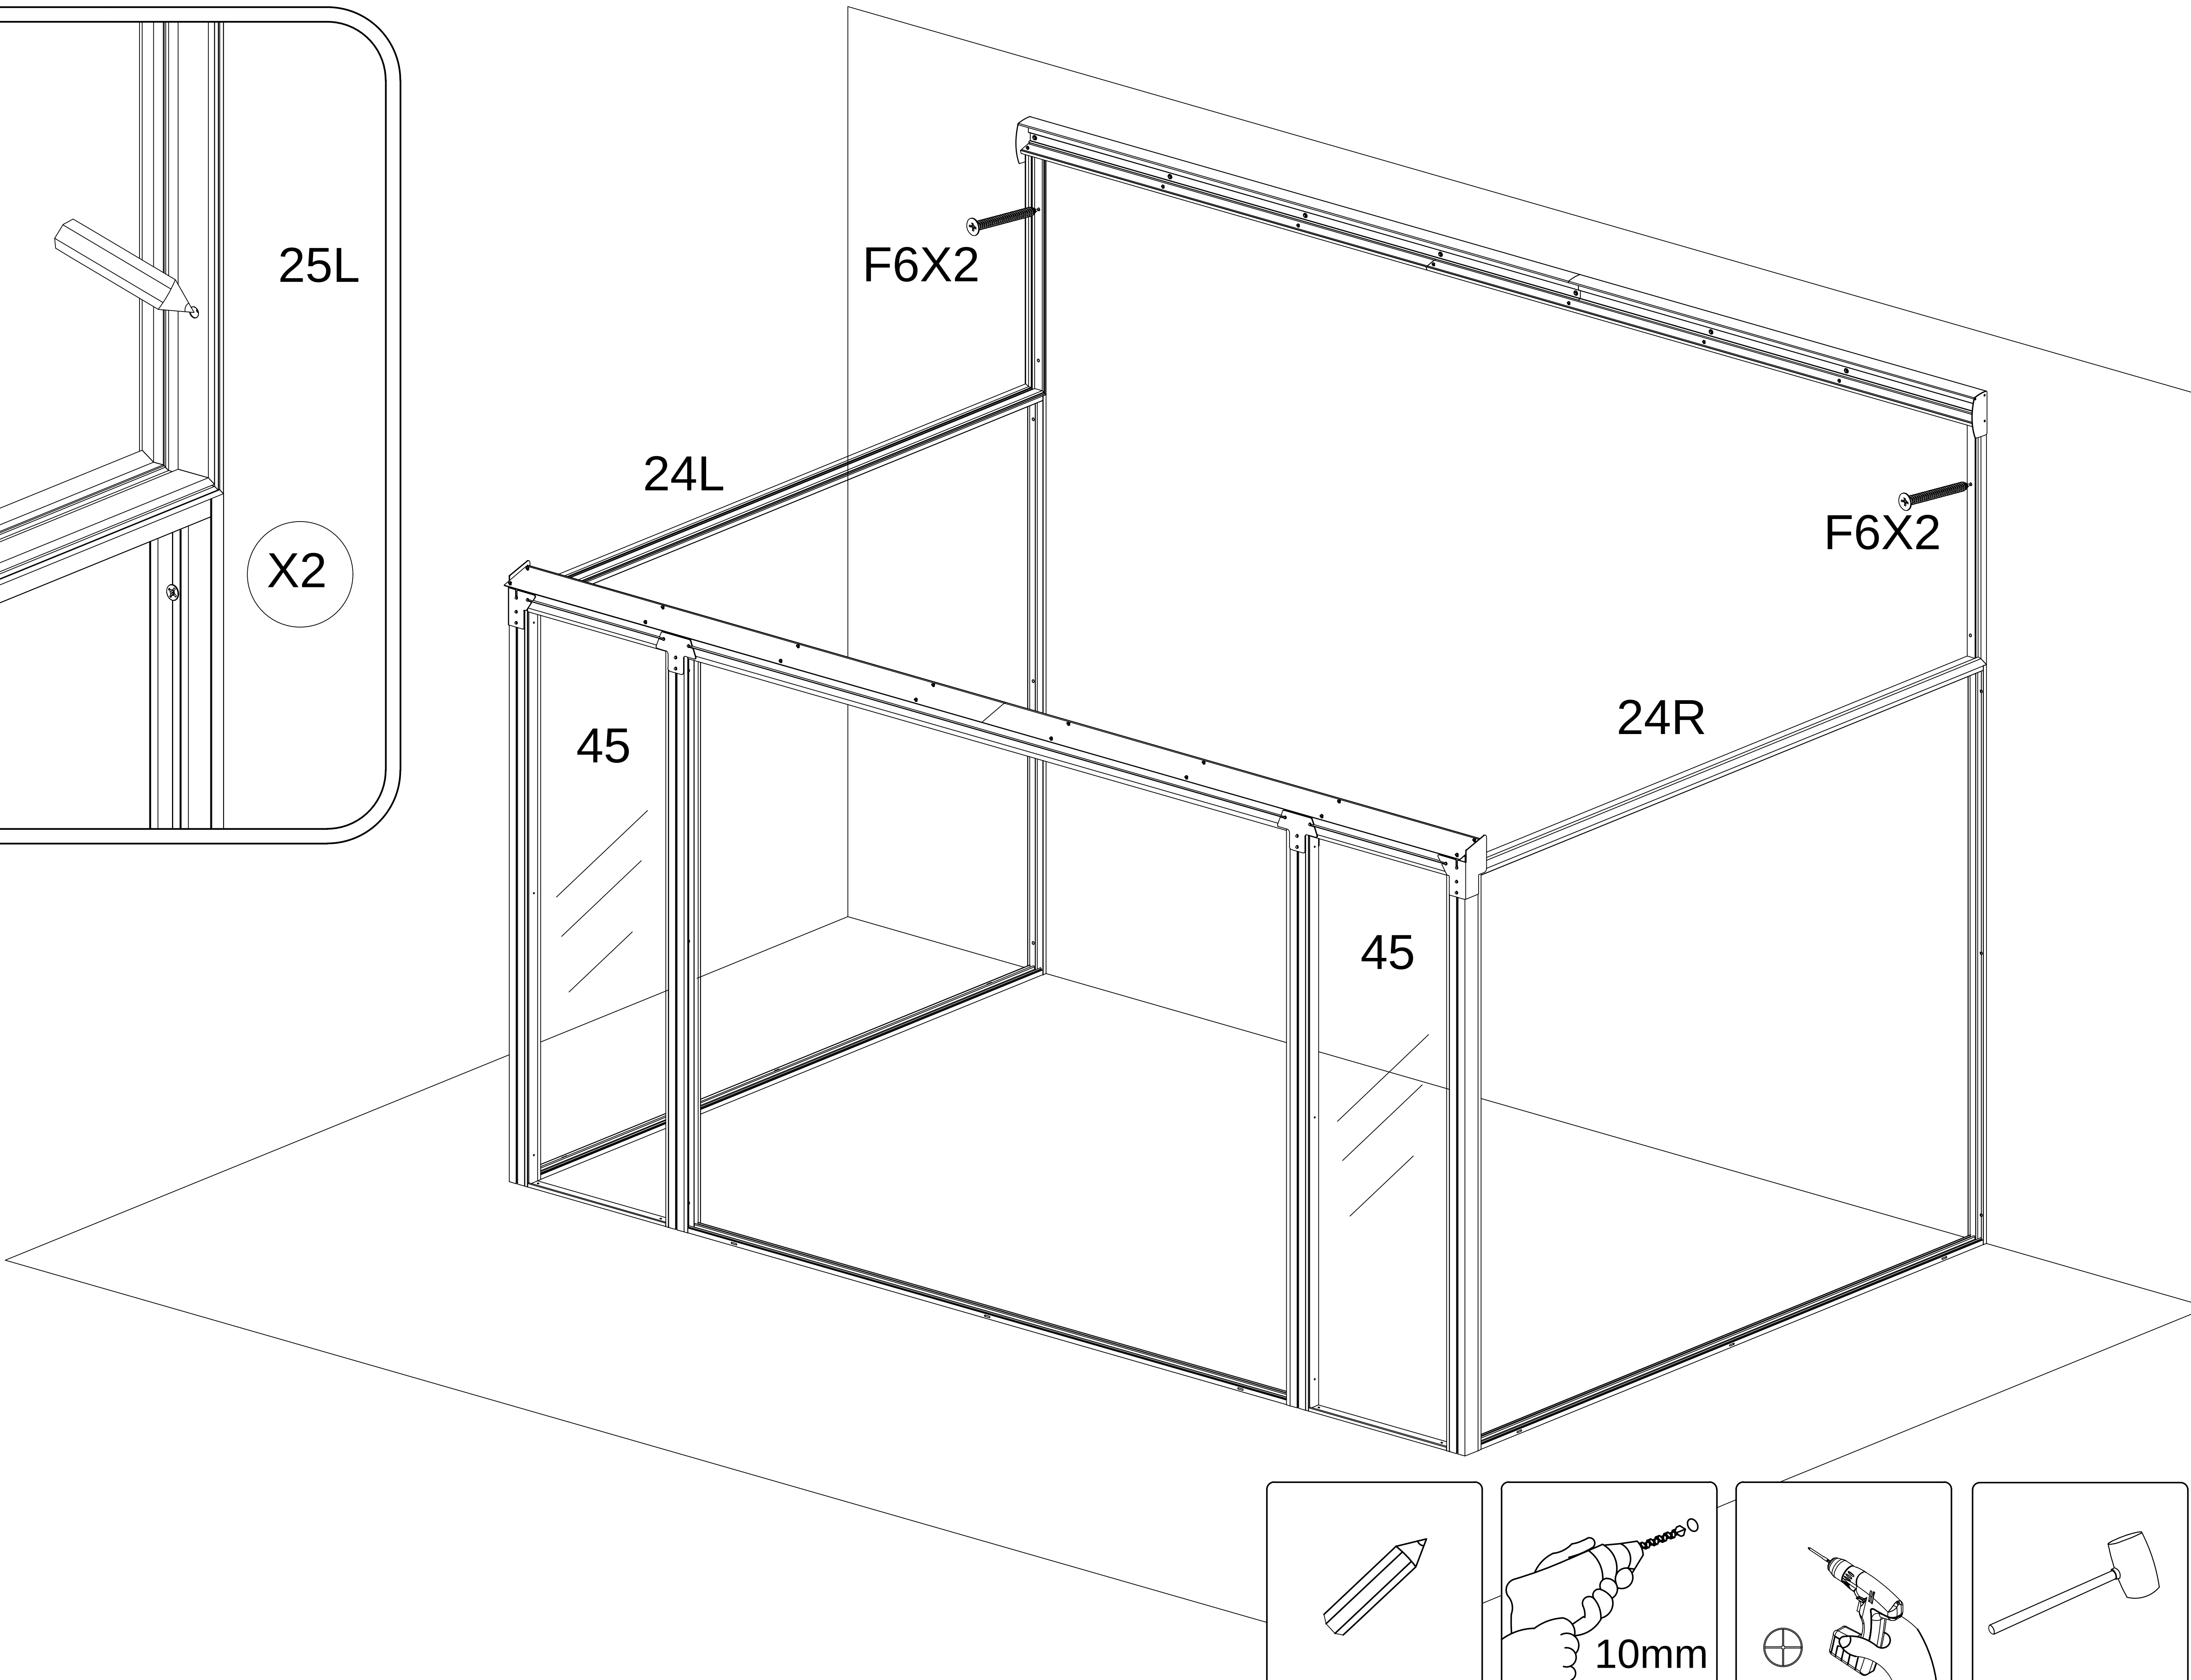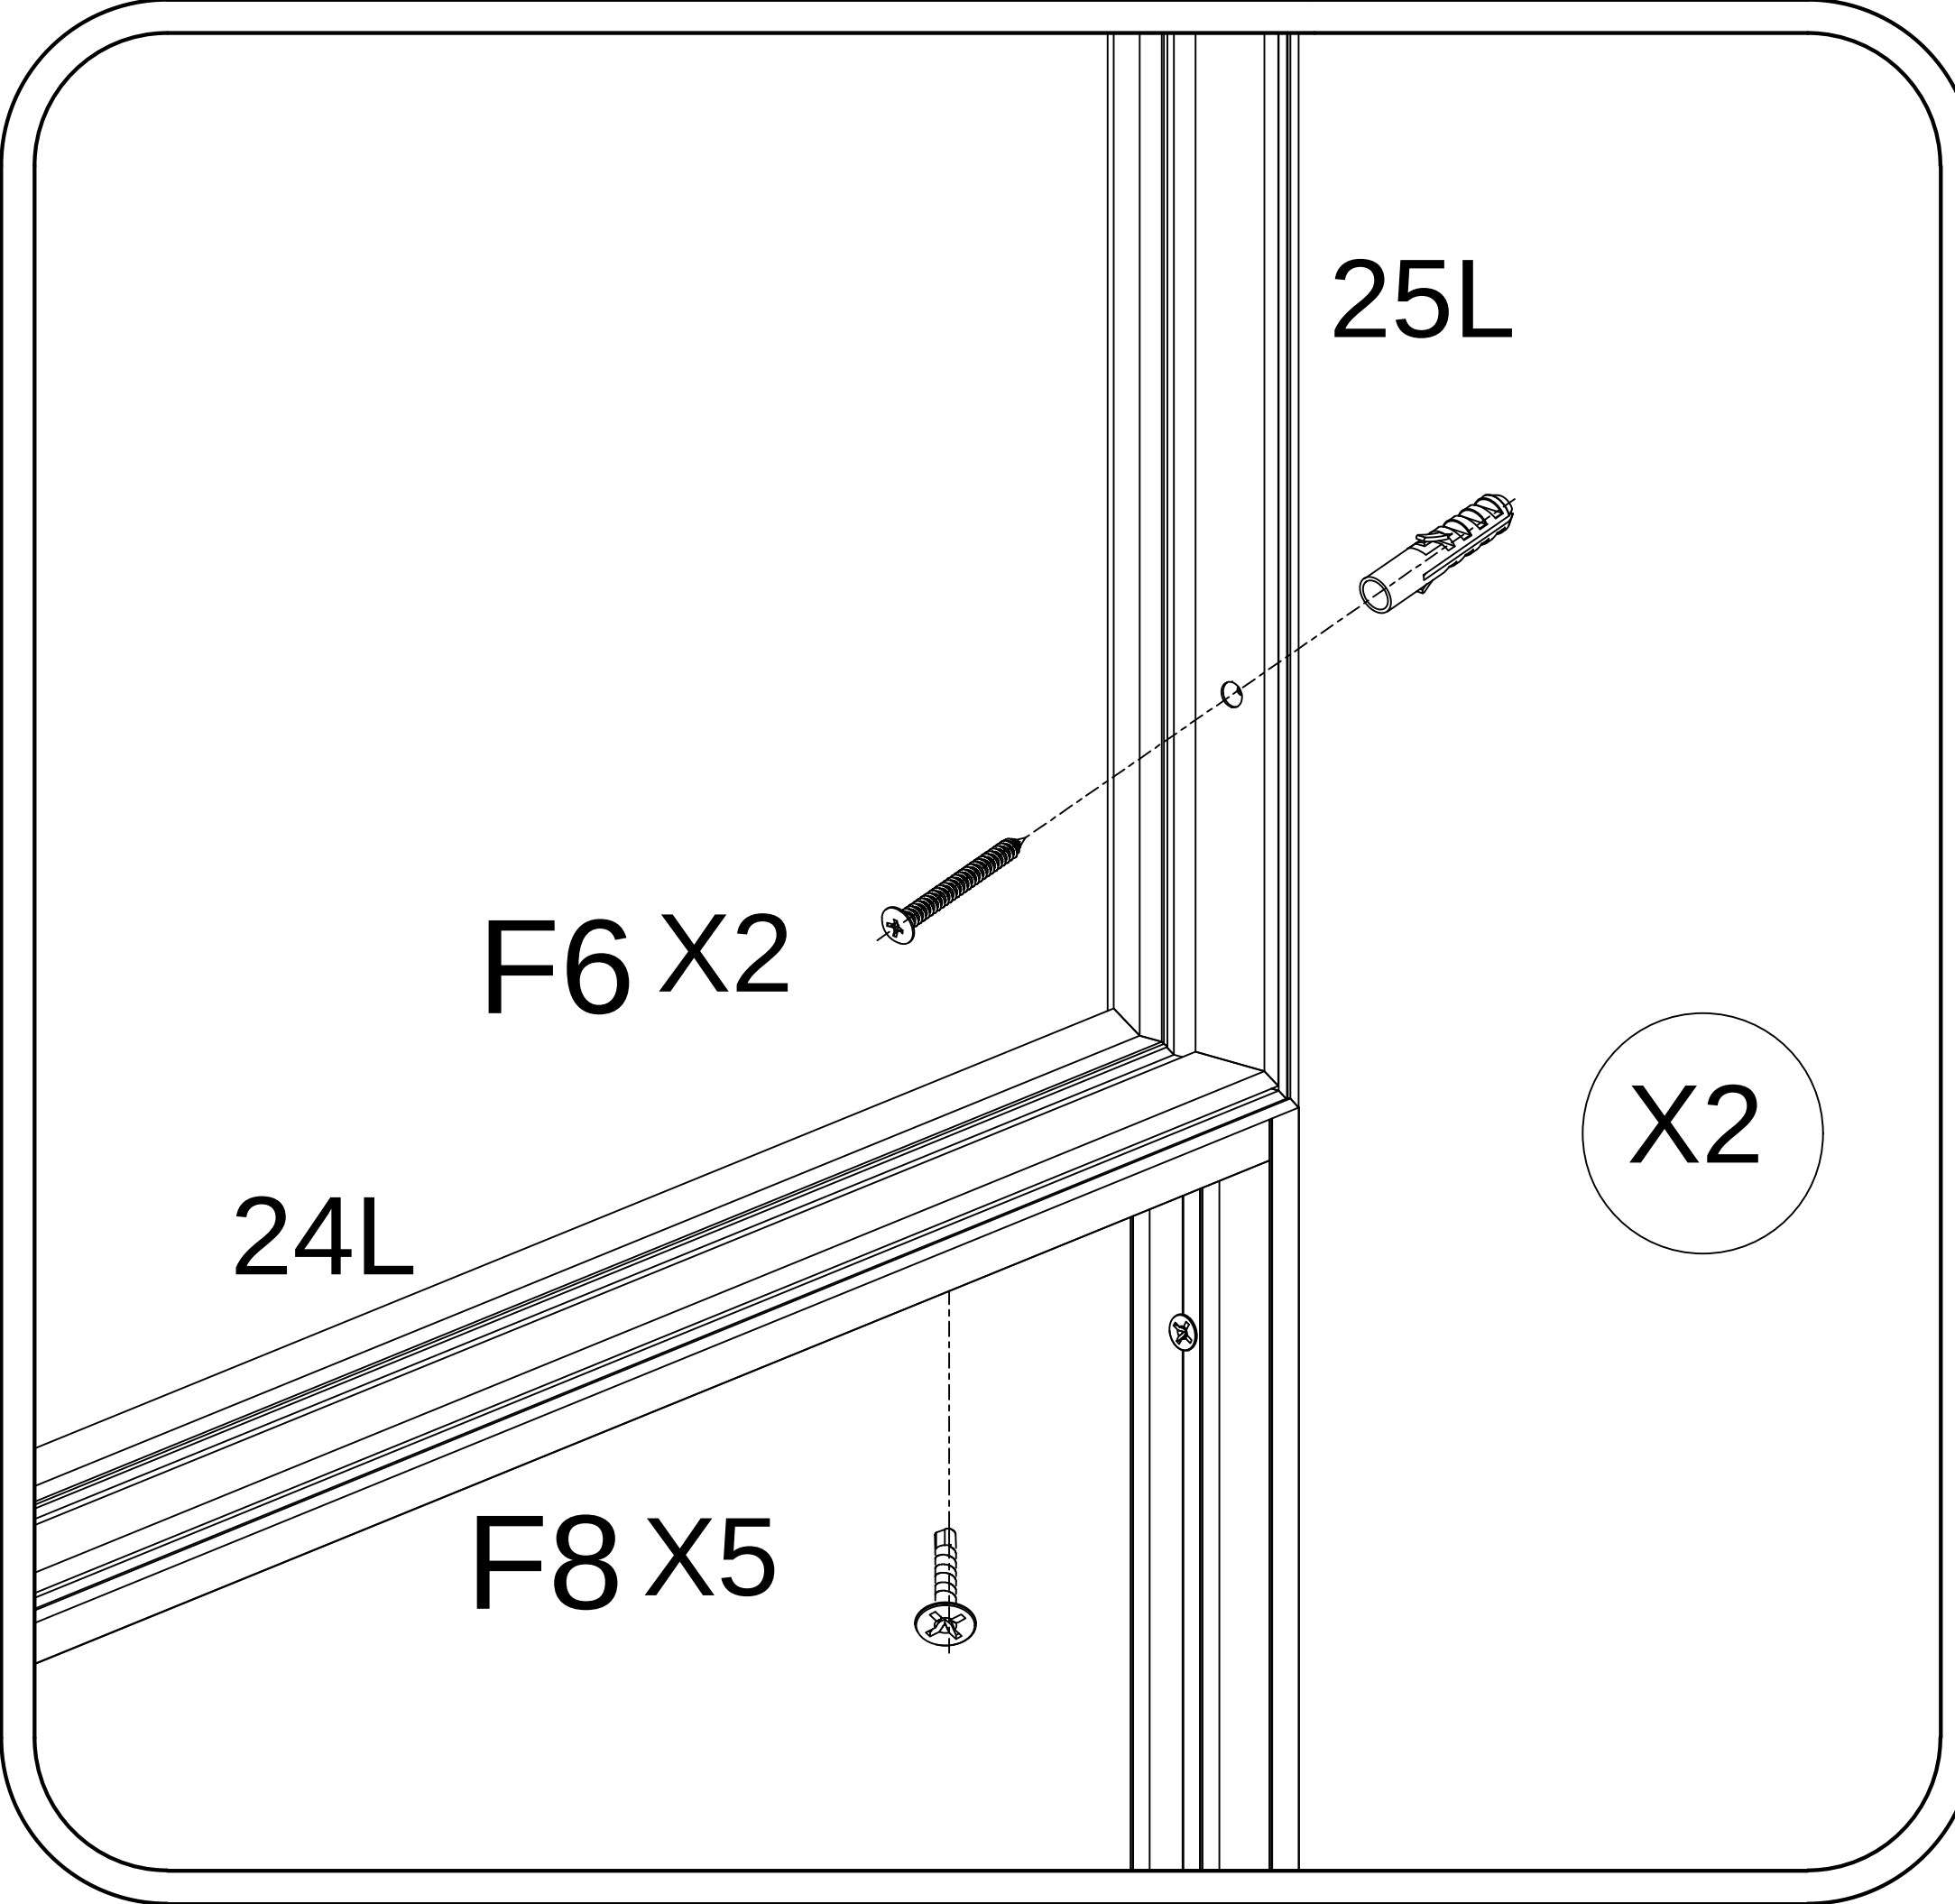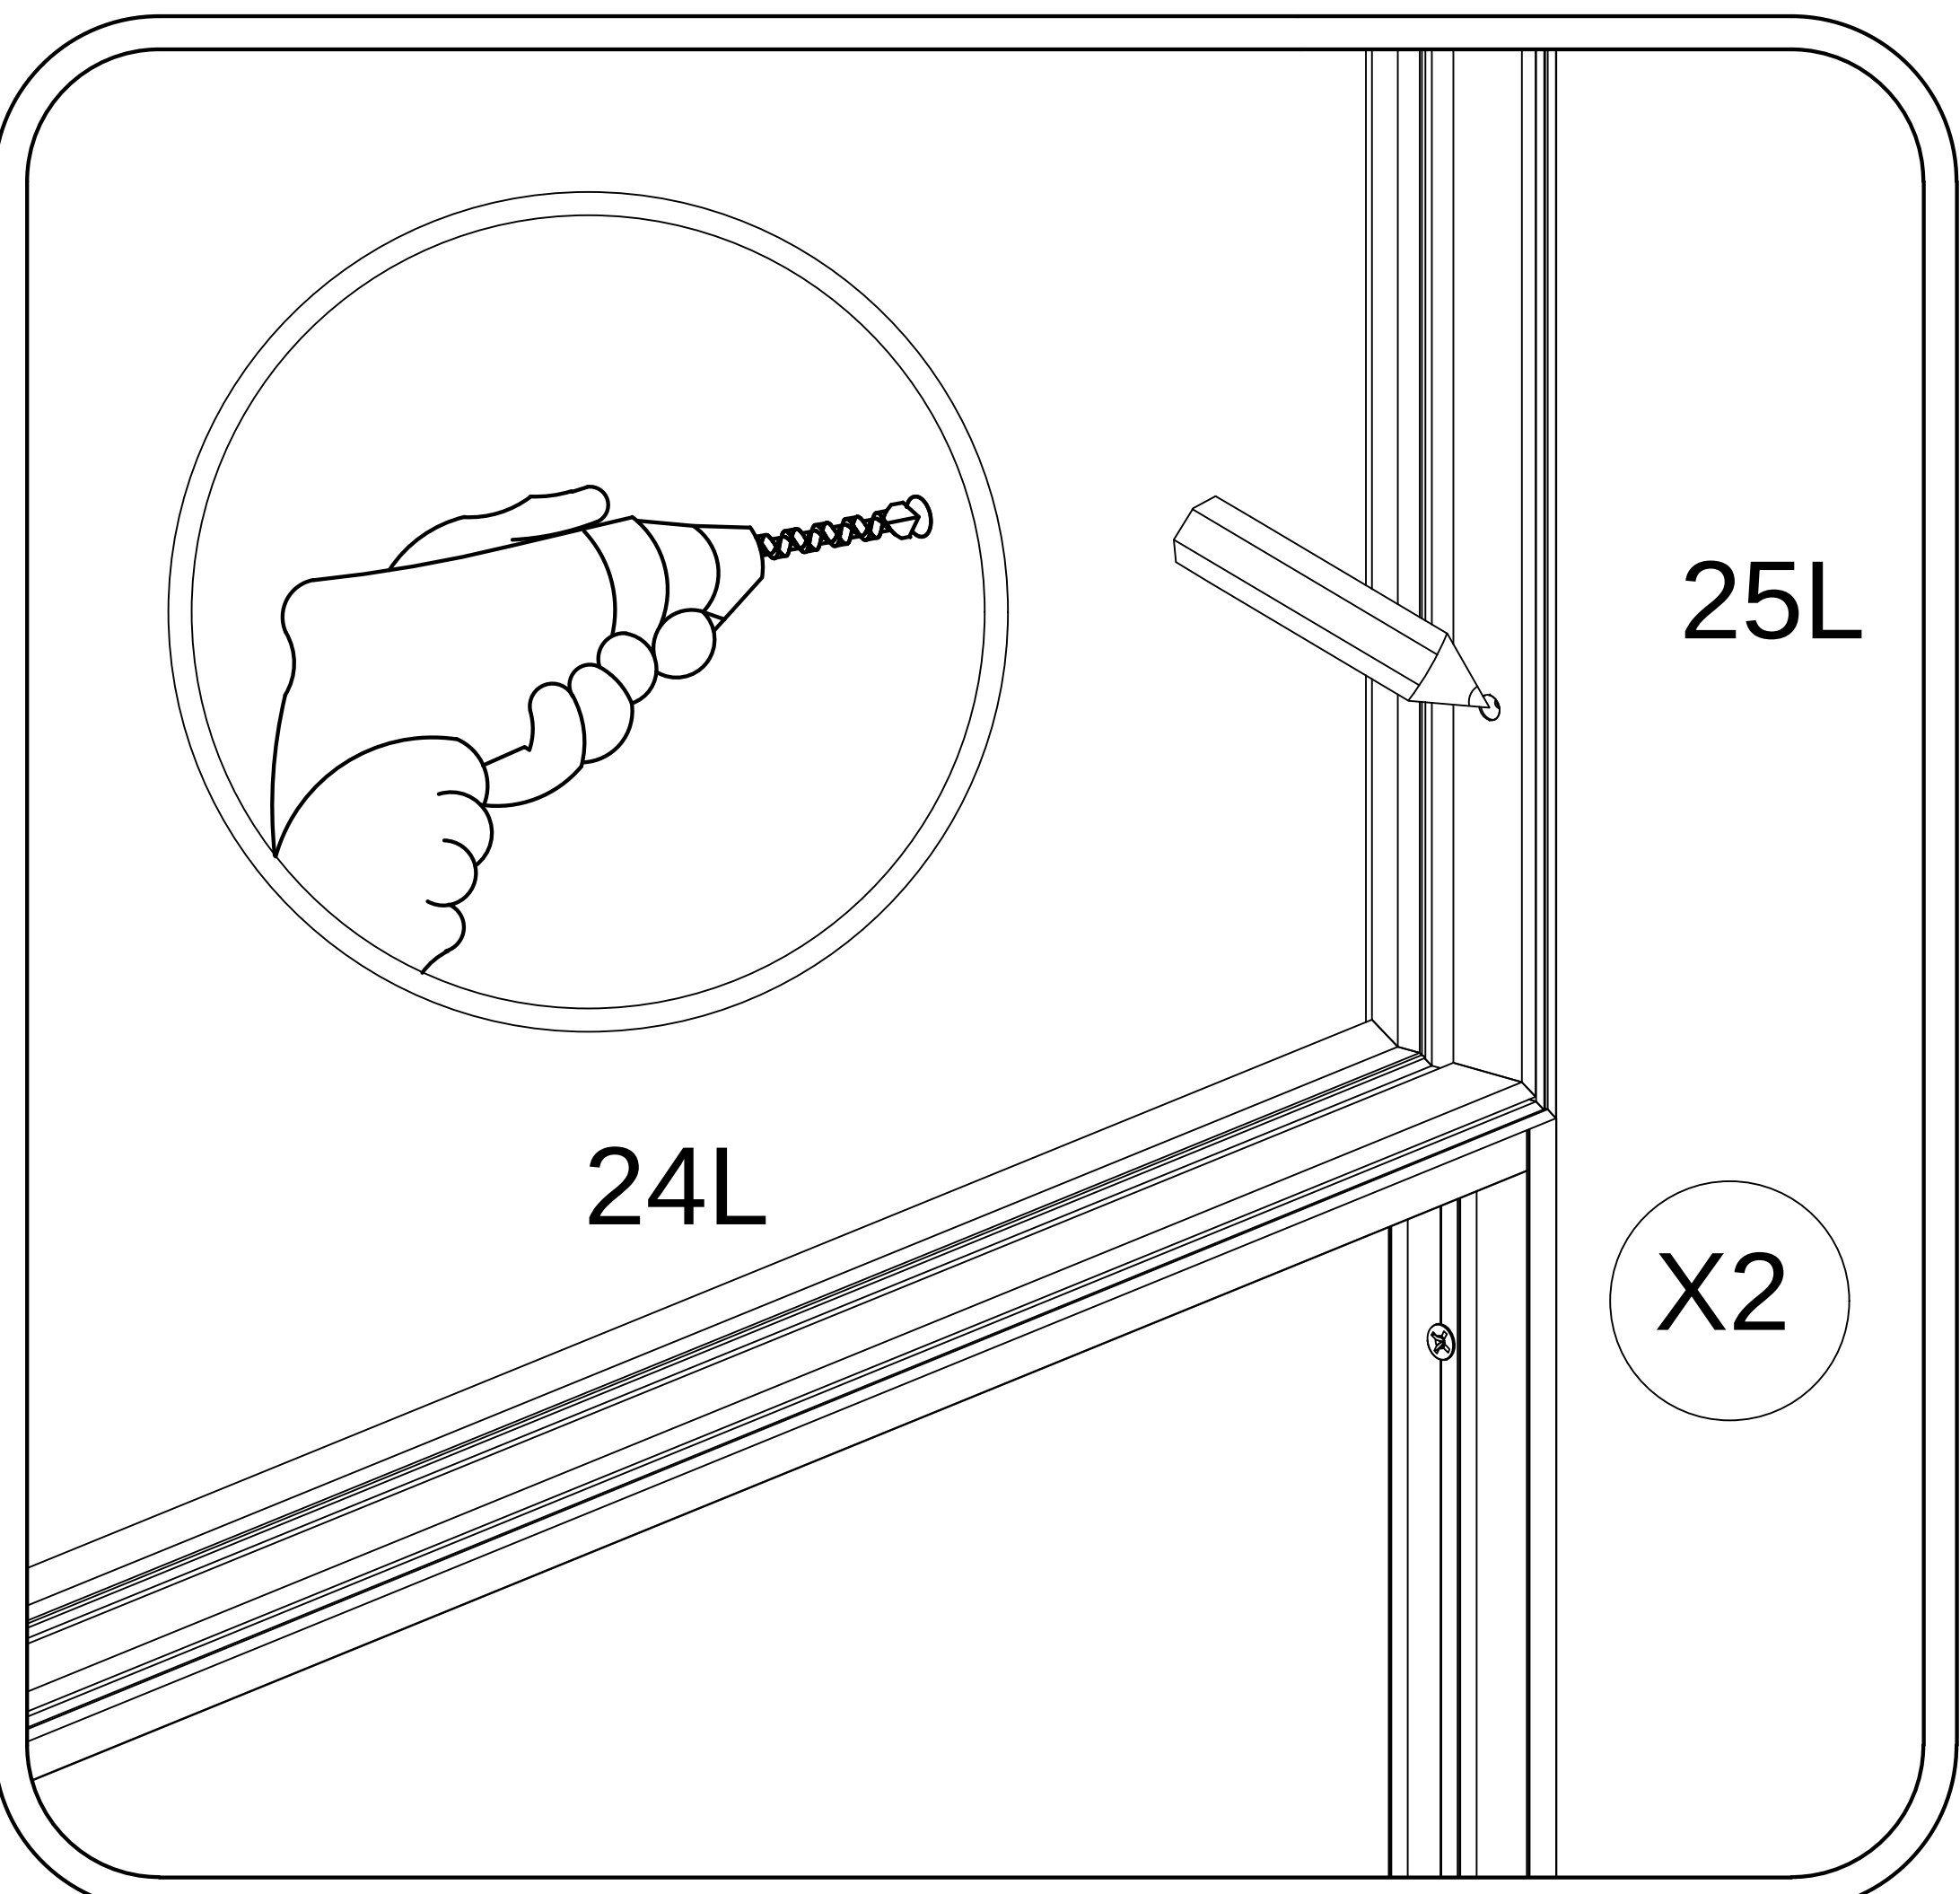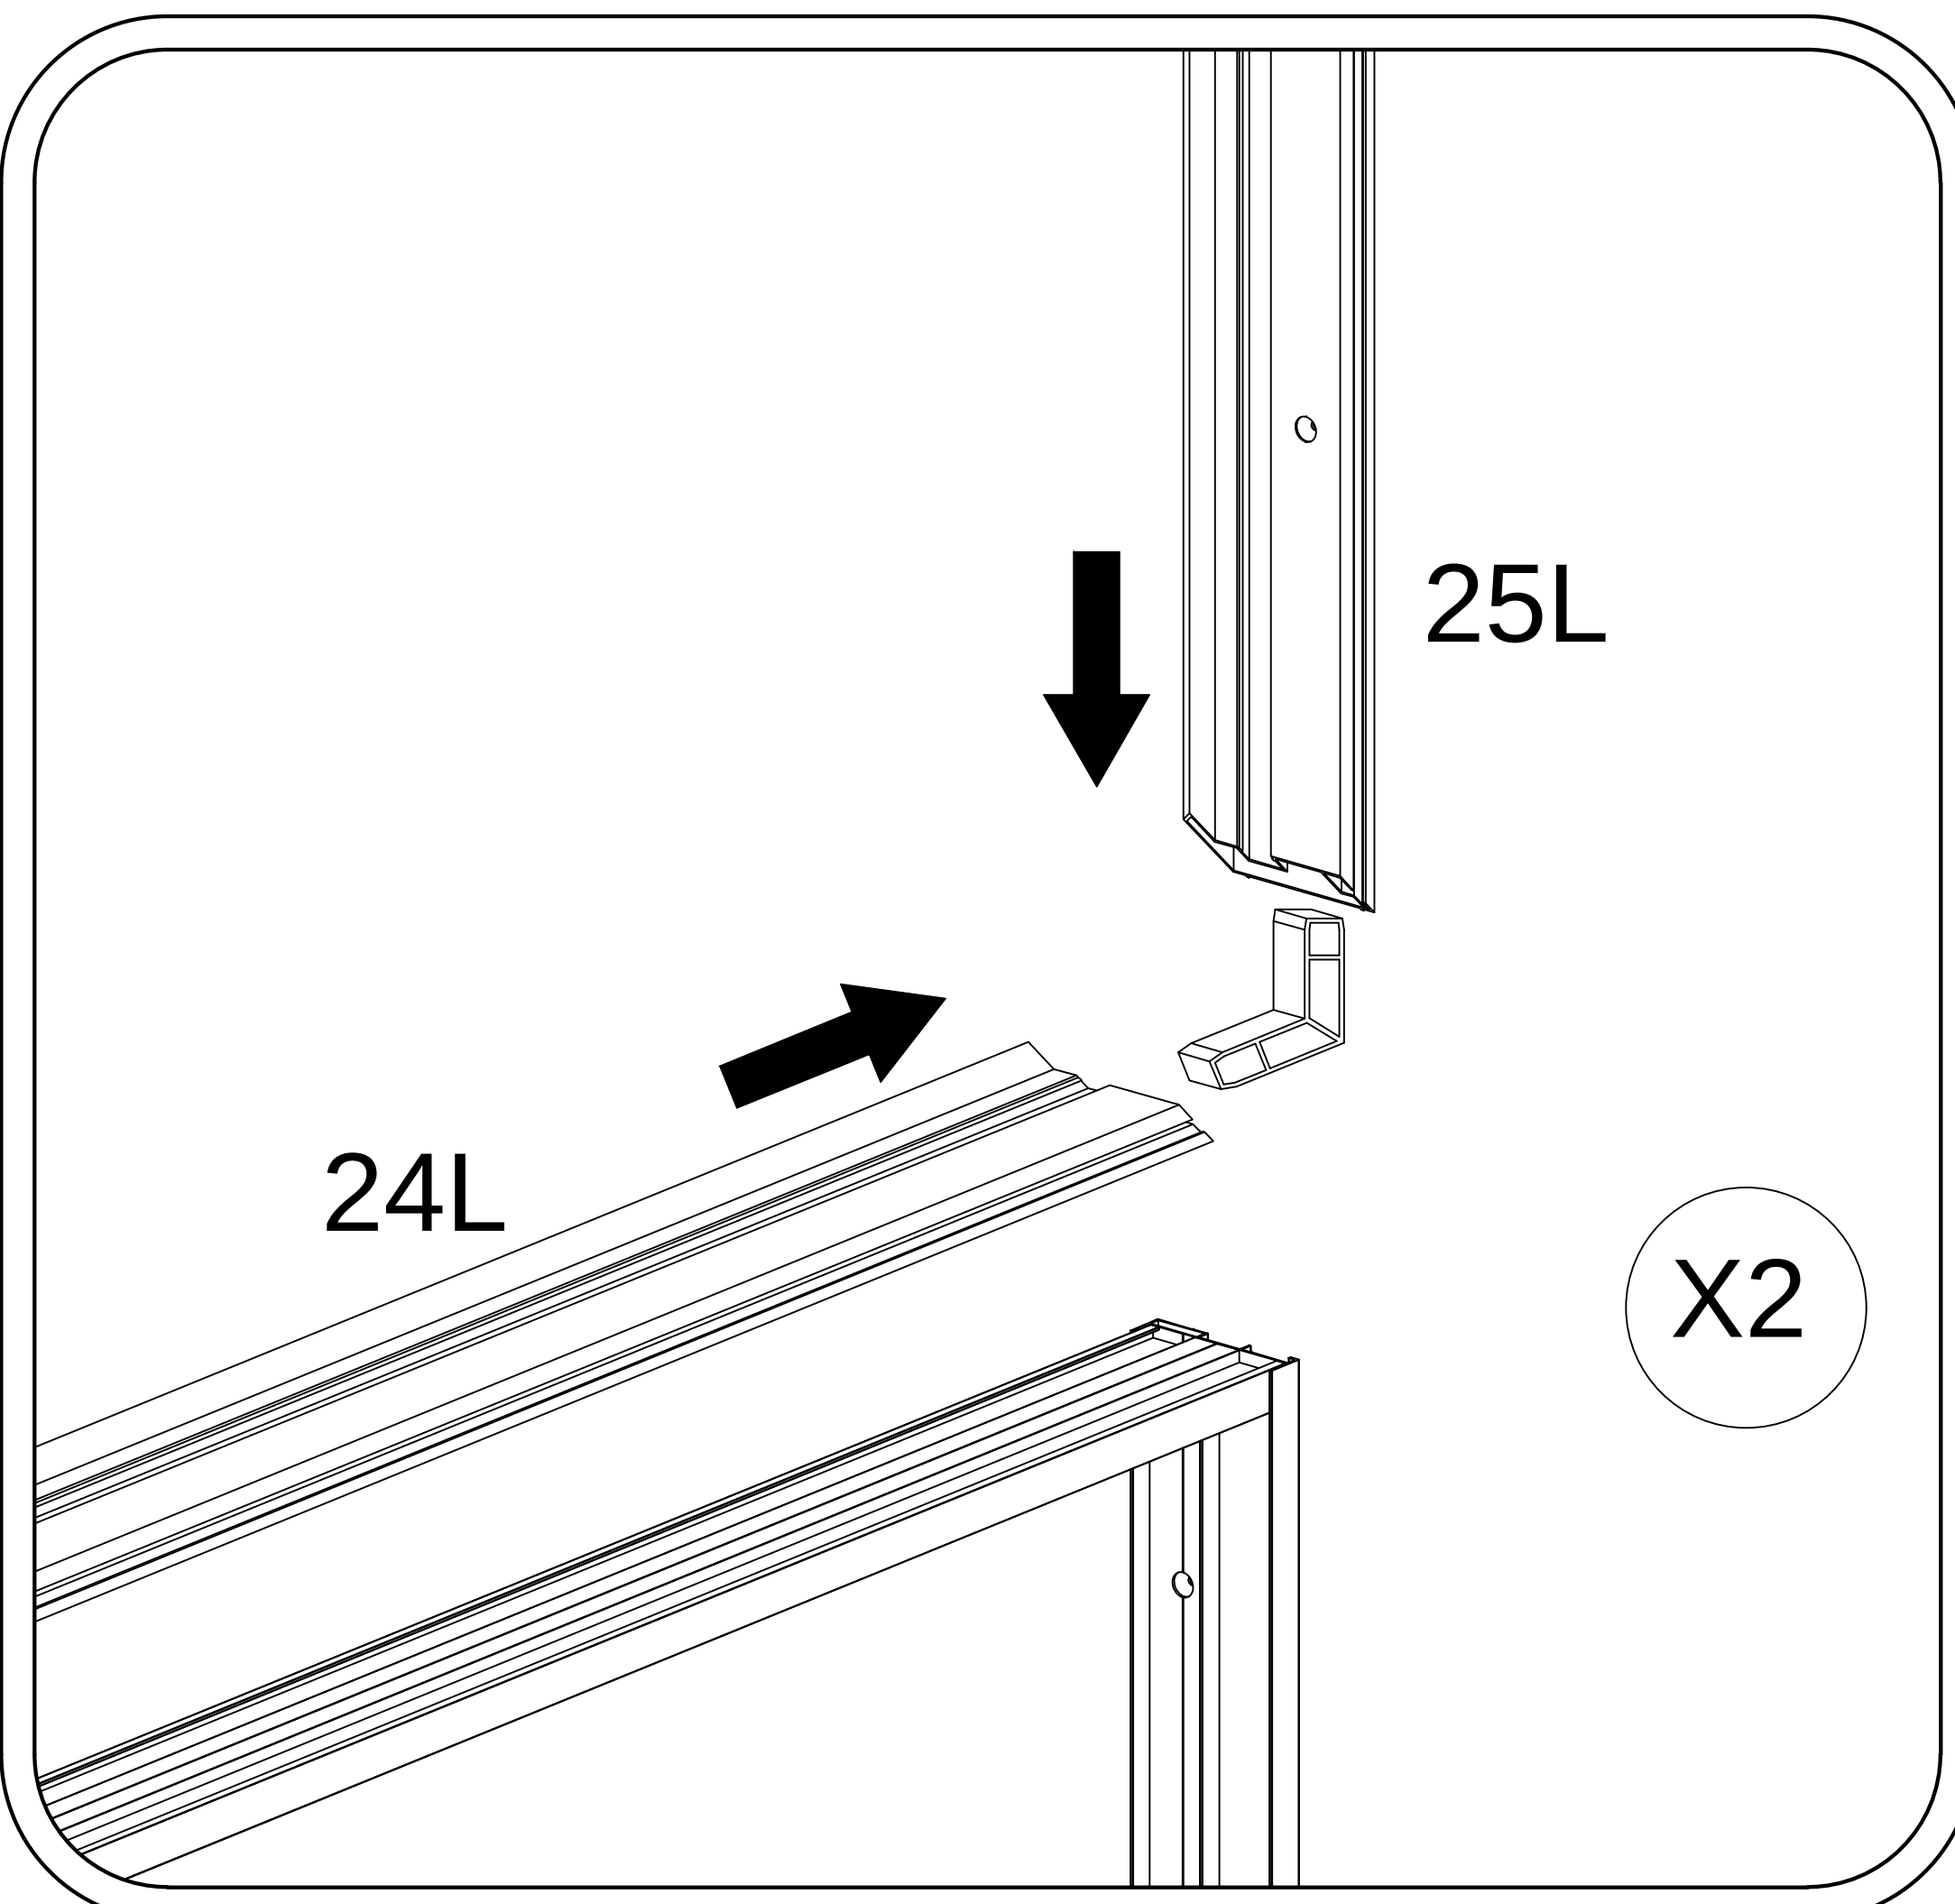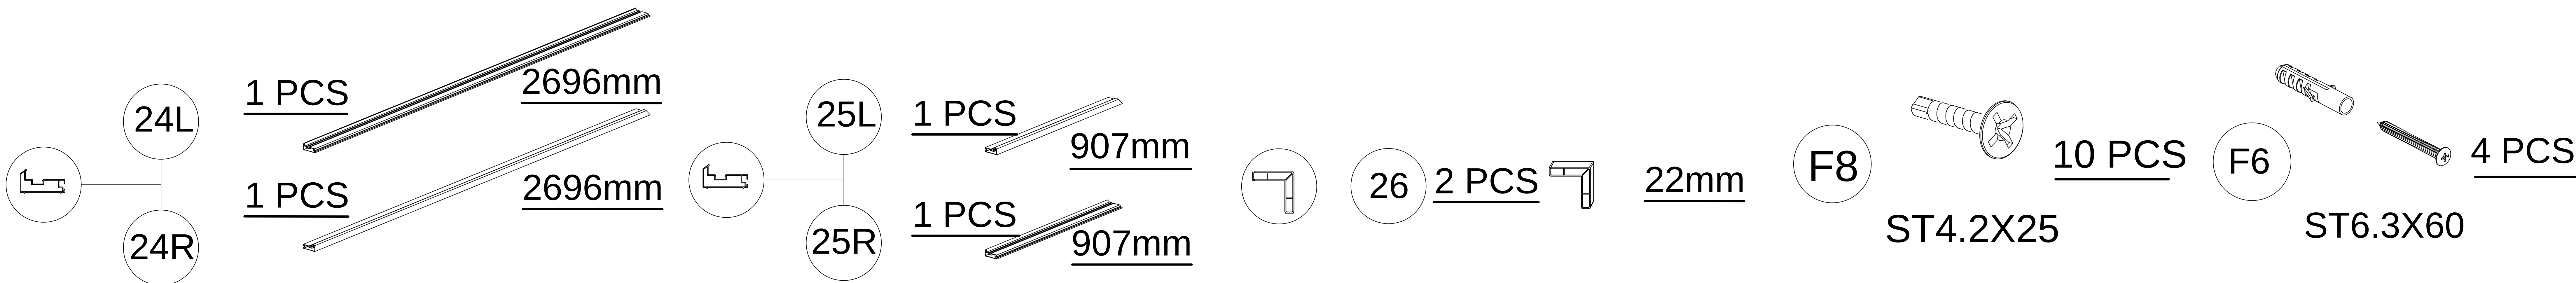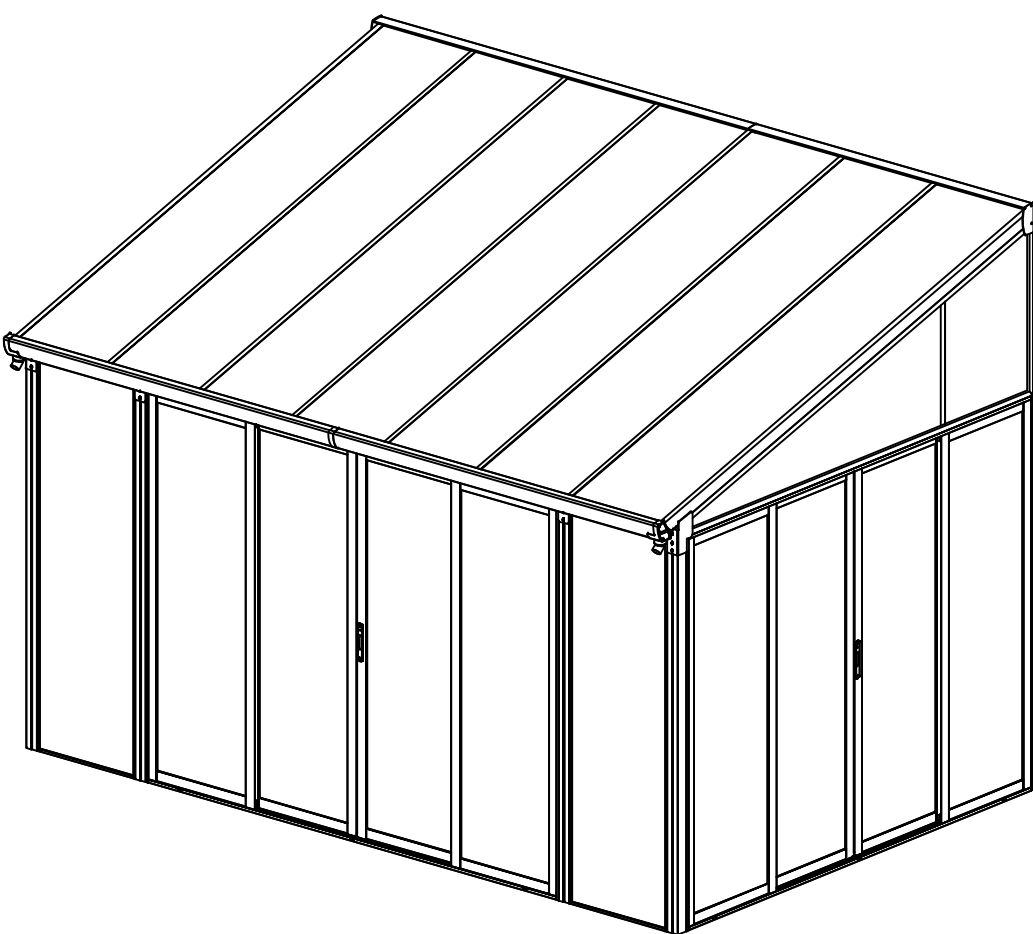

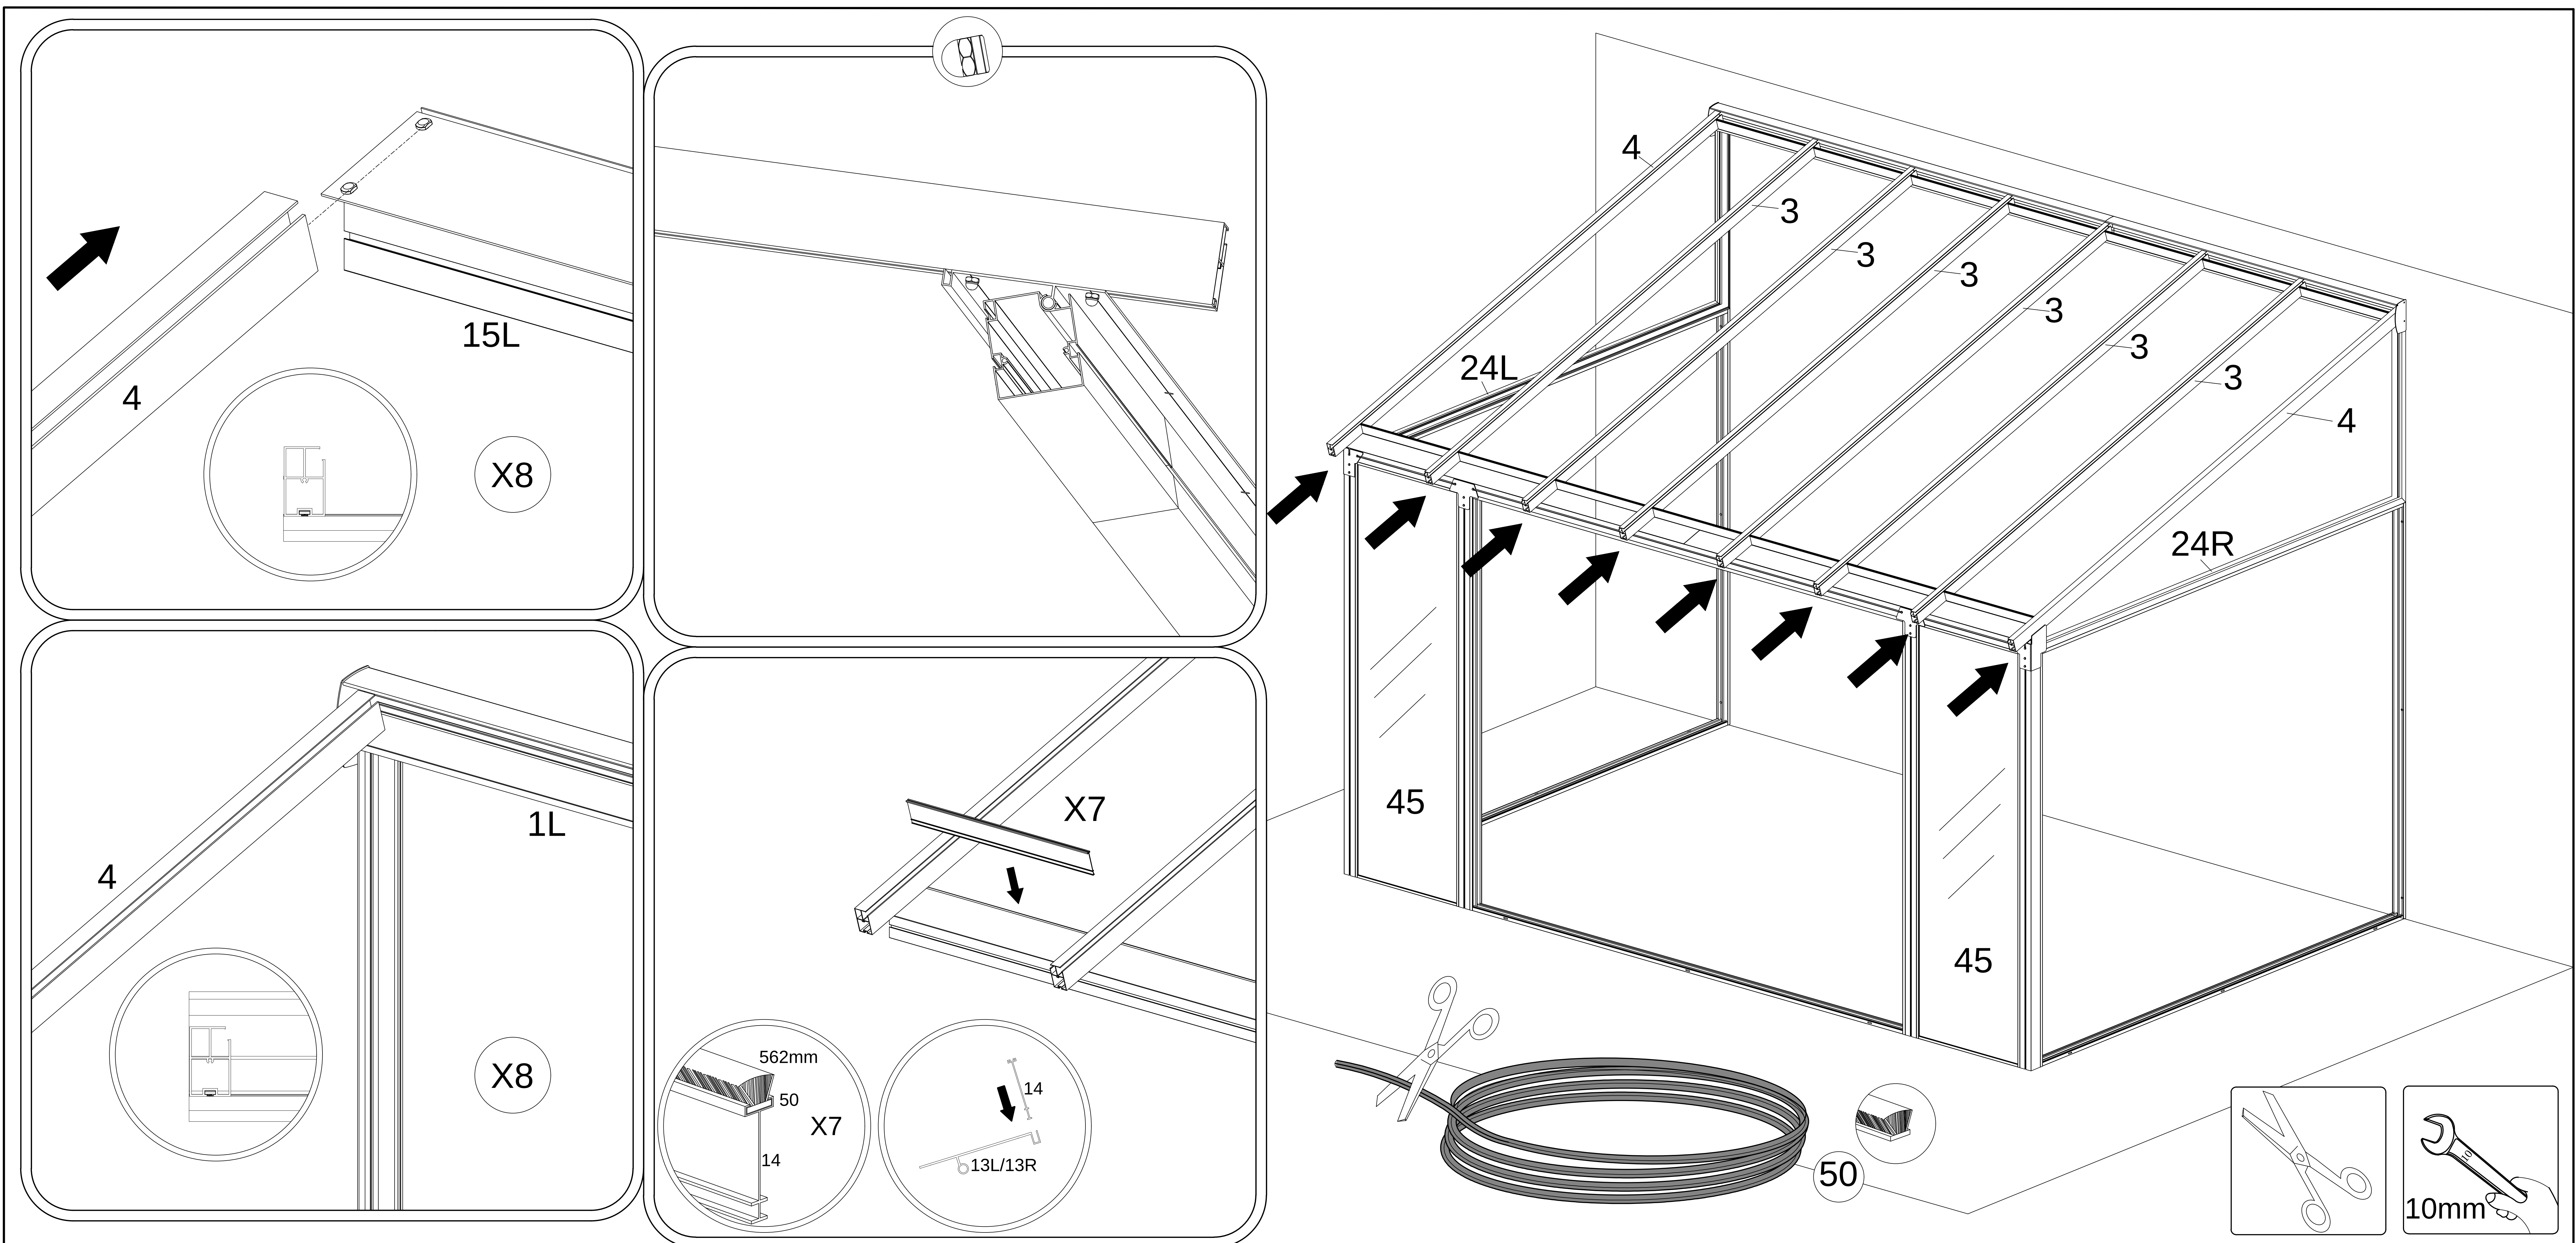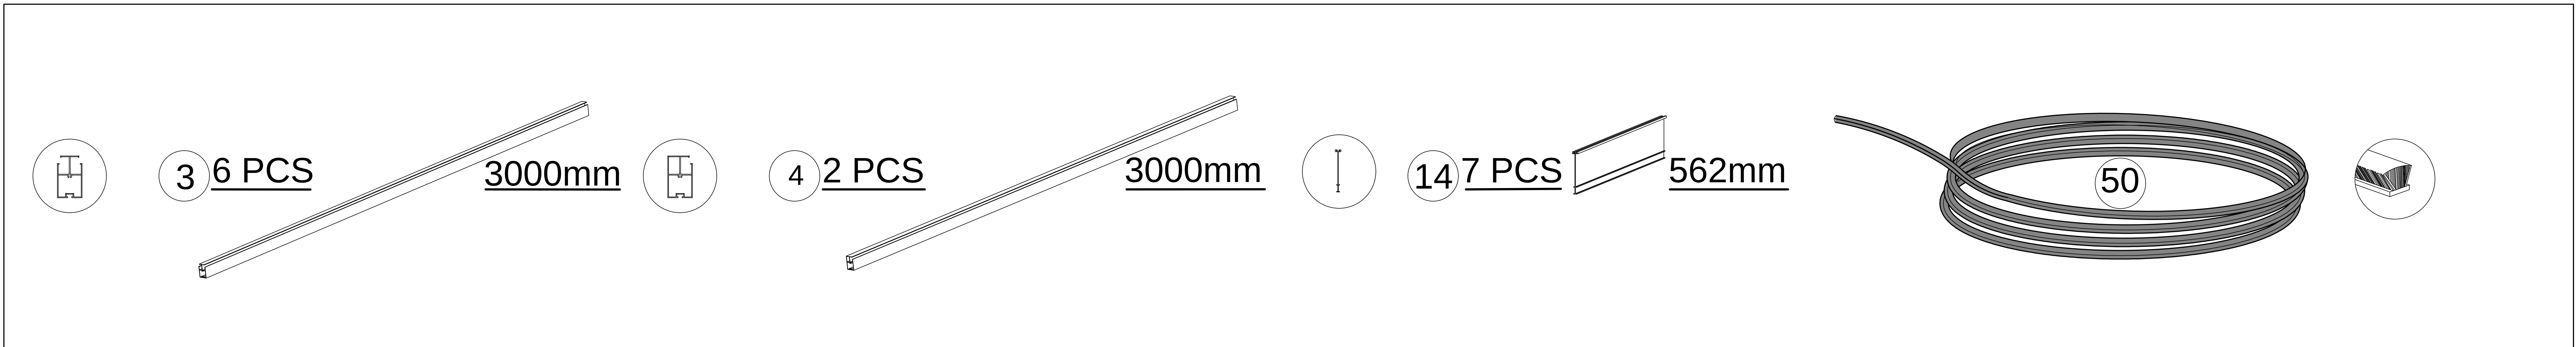

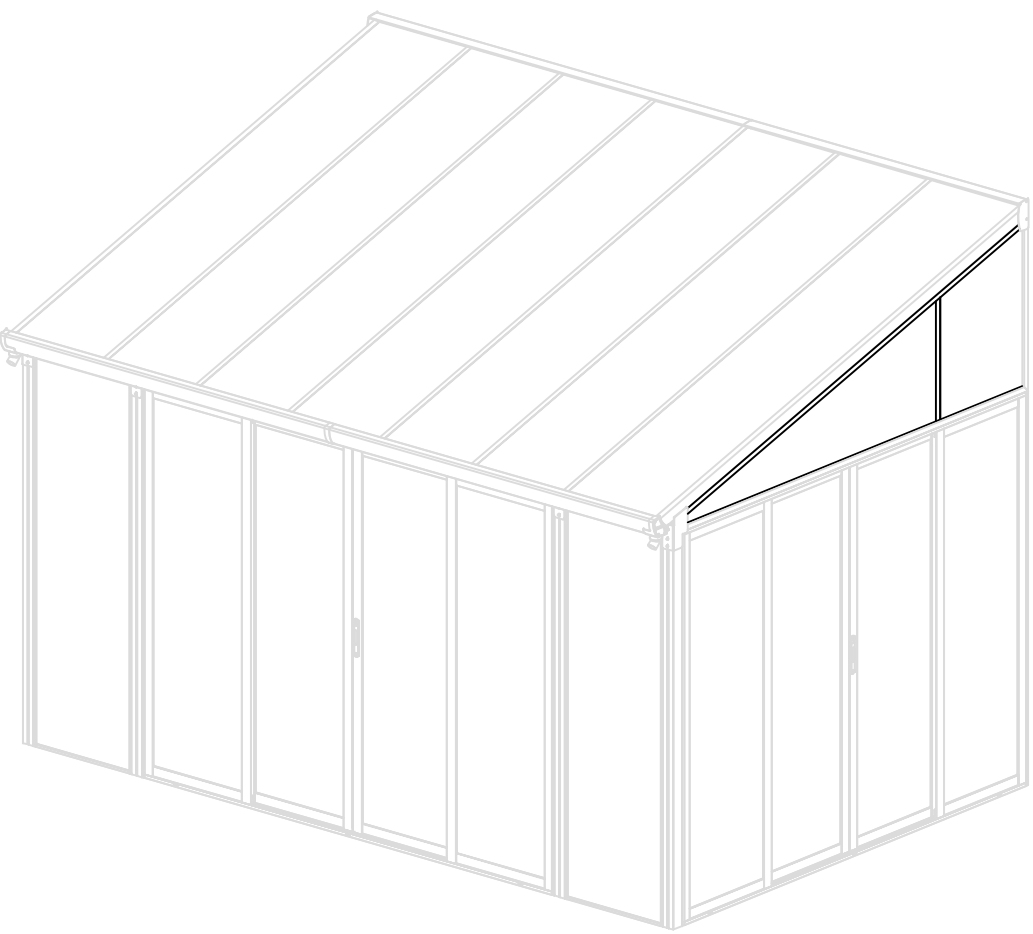

27L 1 PCS

682mm

27R 1 PCS

682mm

28L 1 PCS

682mm

28R 1 PCS

682mm

31 4 PCS

652mm

33 2 PCS

858mm

29 2 PCS

2736mm

30 2 PCS

2038mm

32 2 PCS

1987mm

F4

10 PCS

ST4.2X20









P2 2 PCS




P3 2 PCS


X2

X2


X2

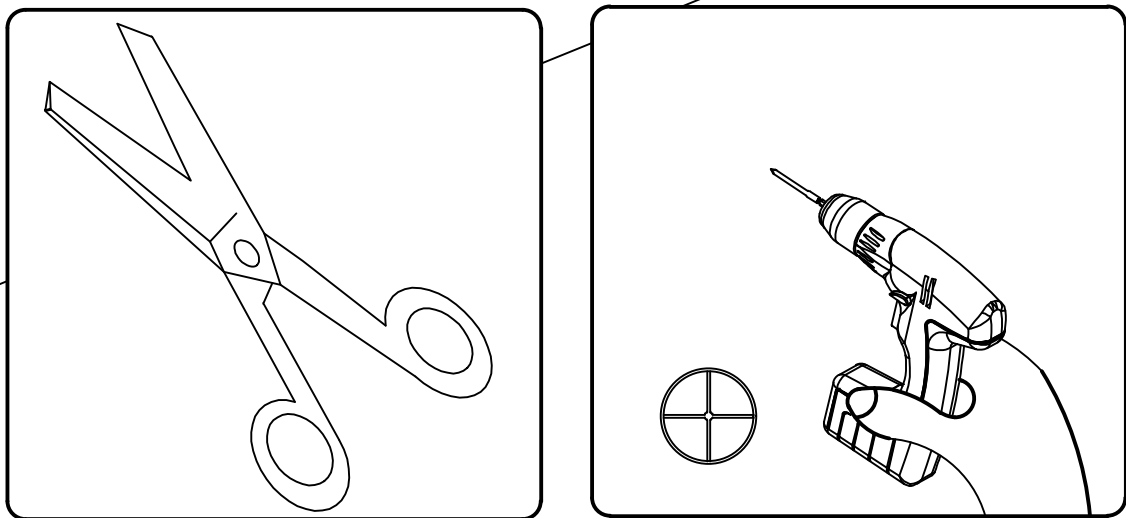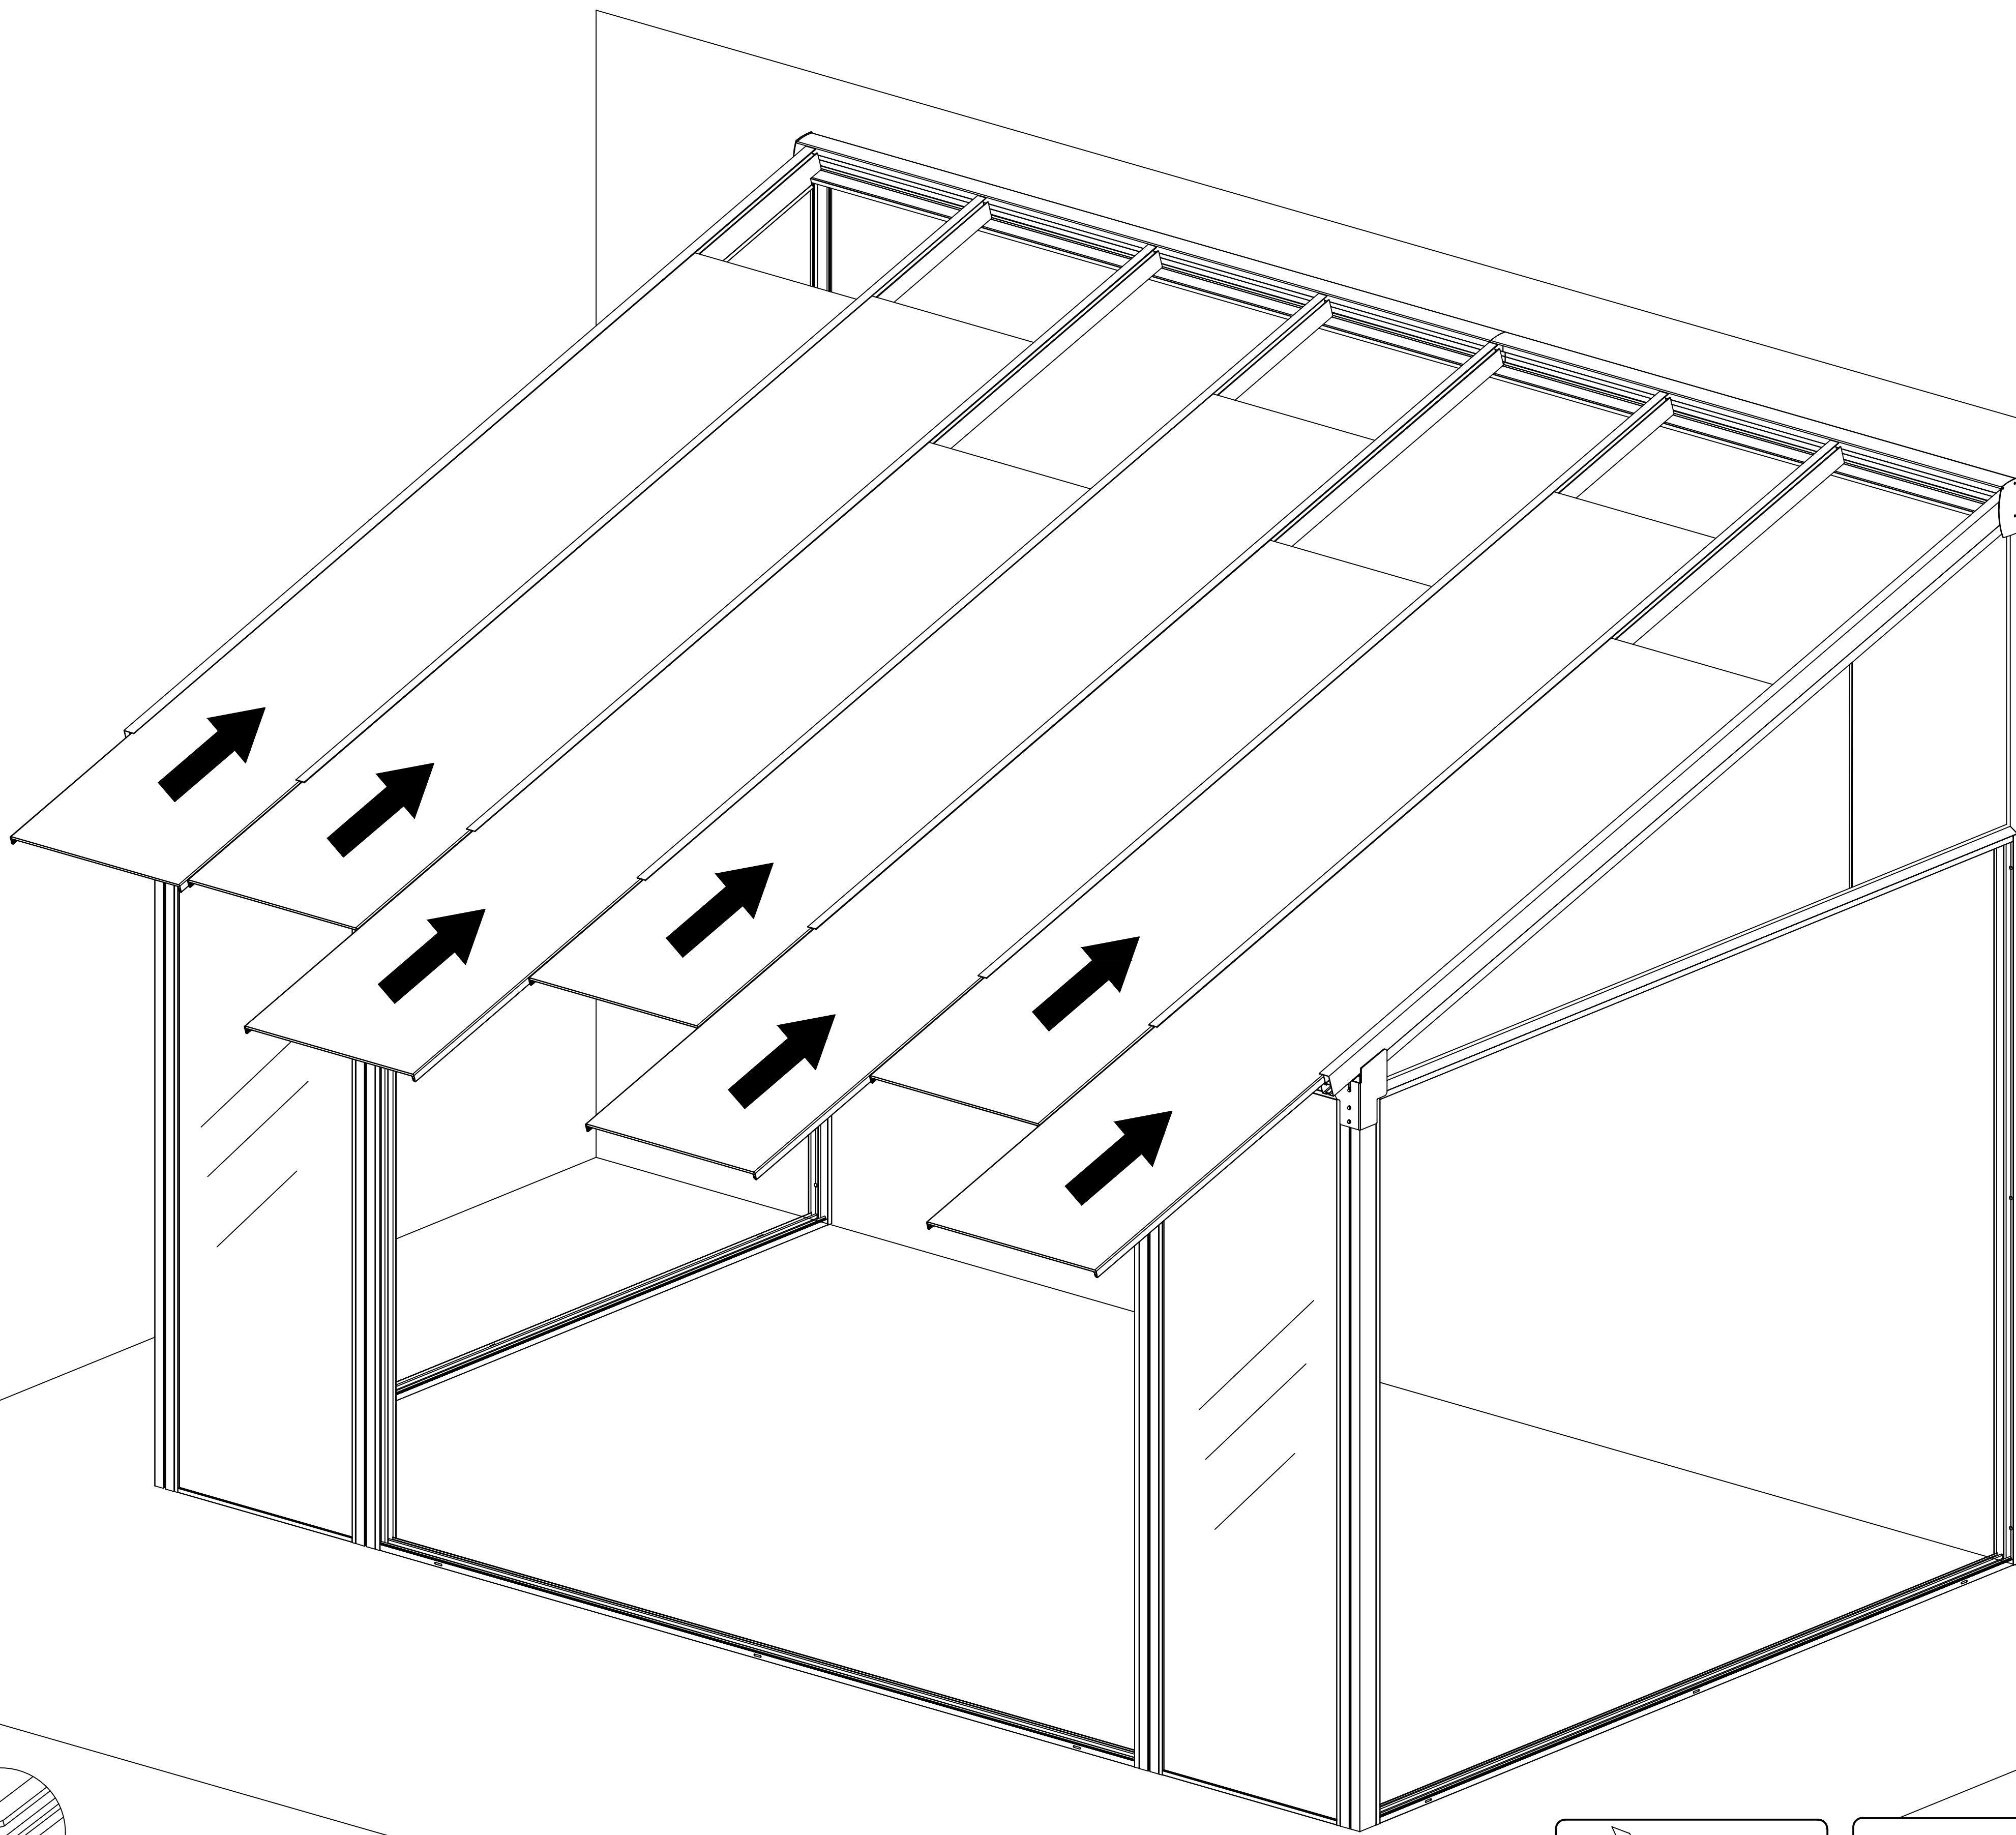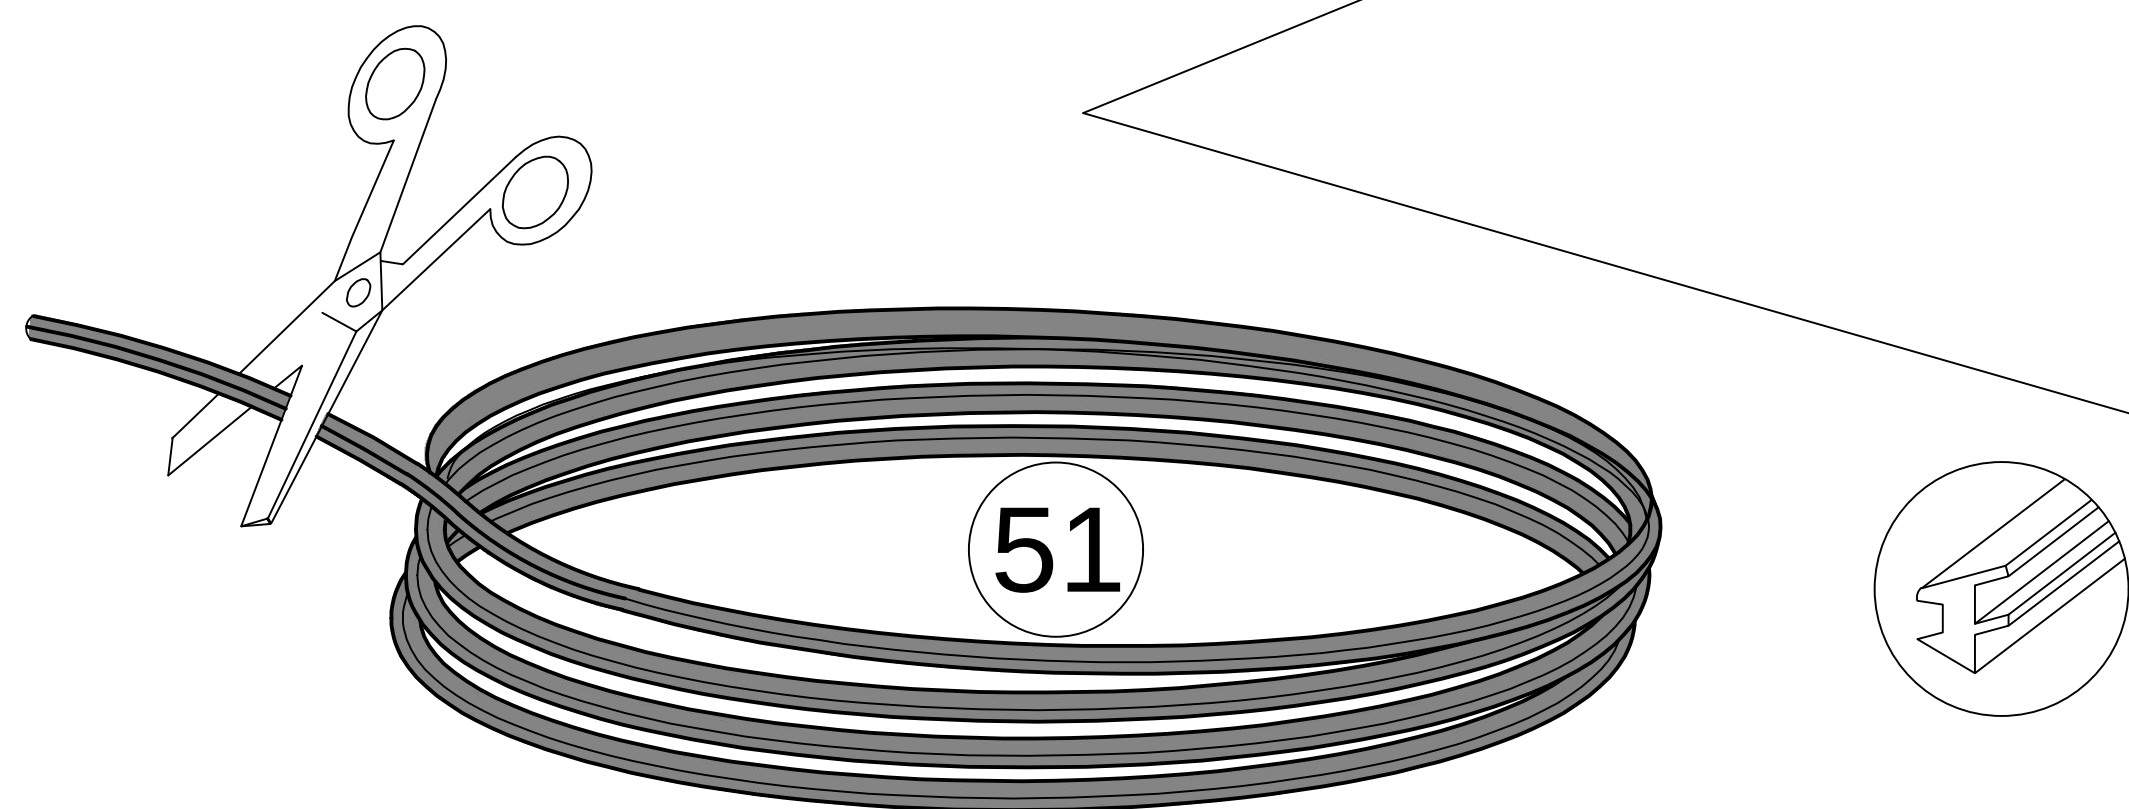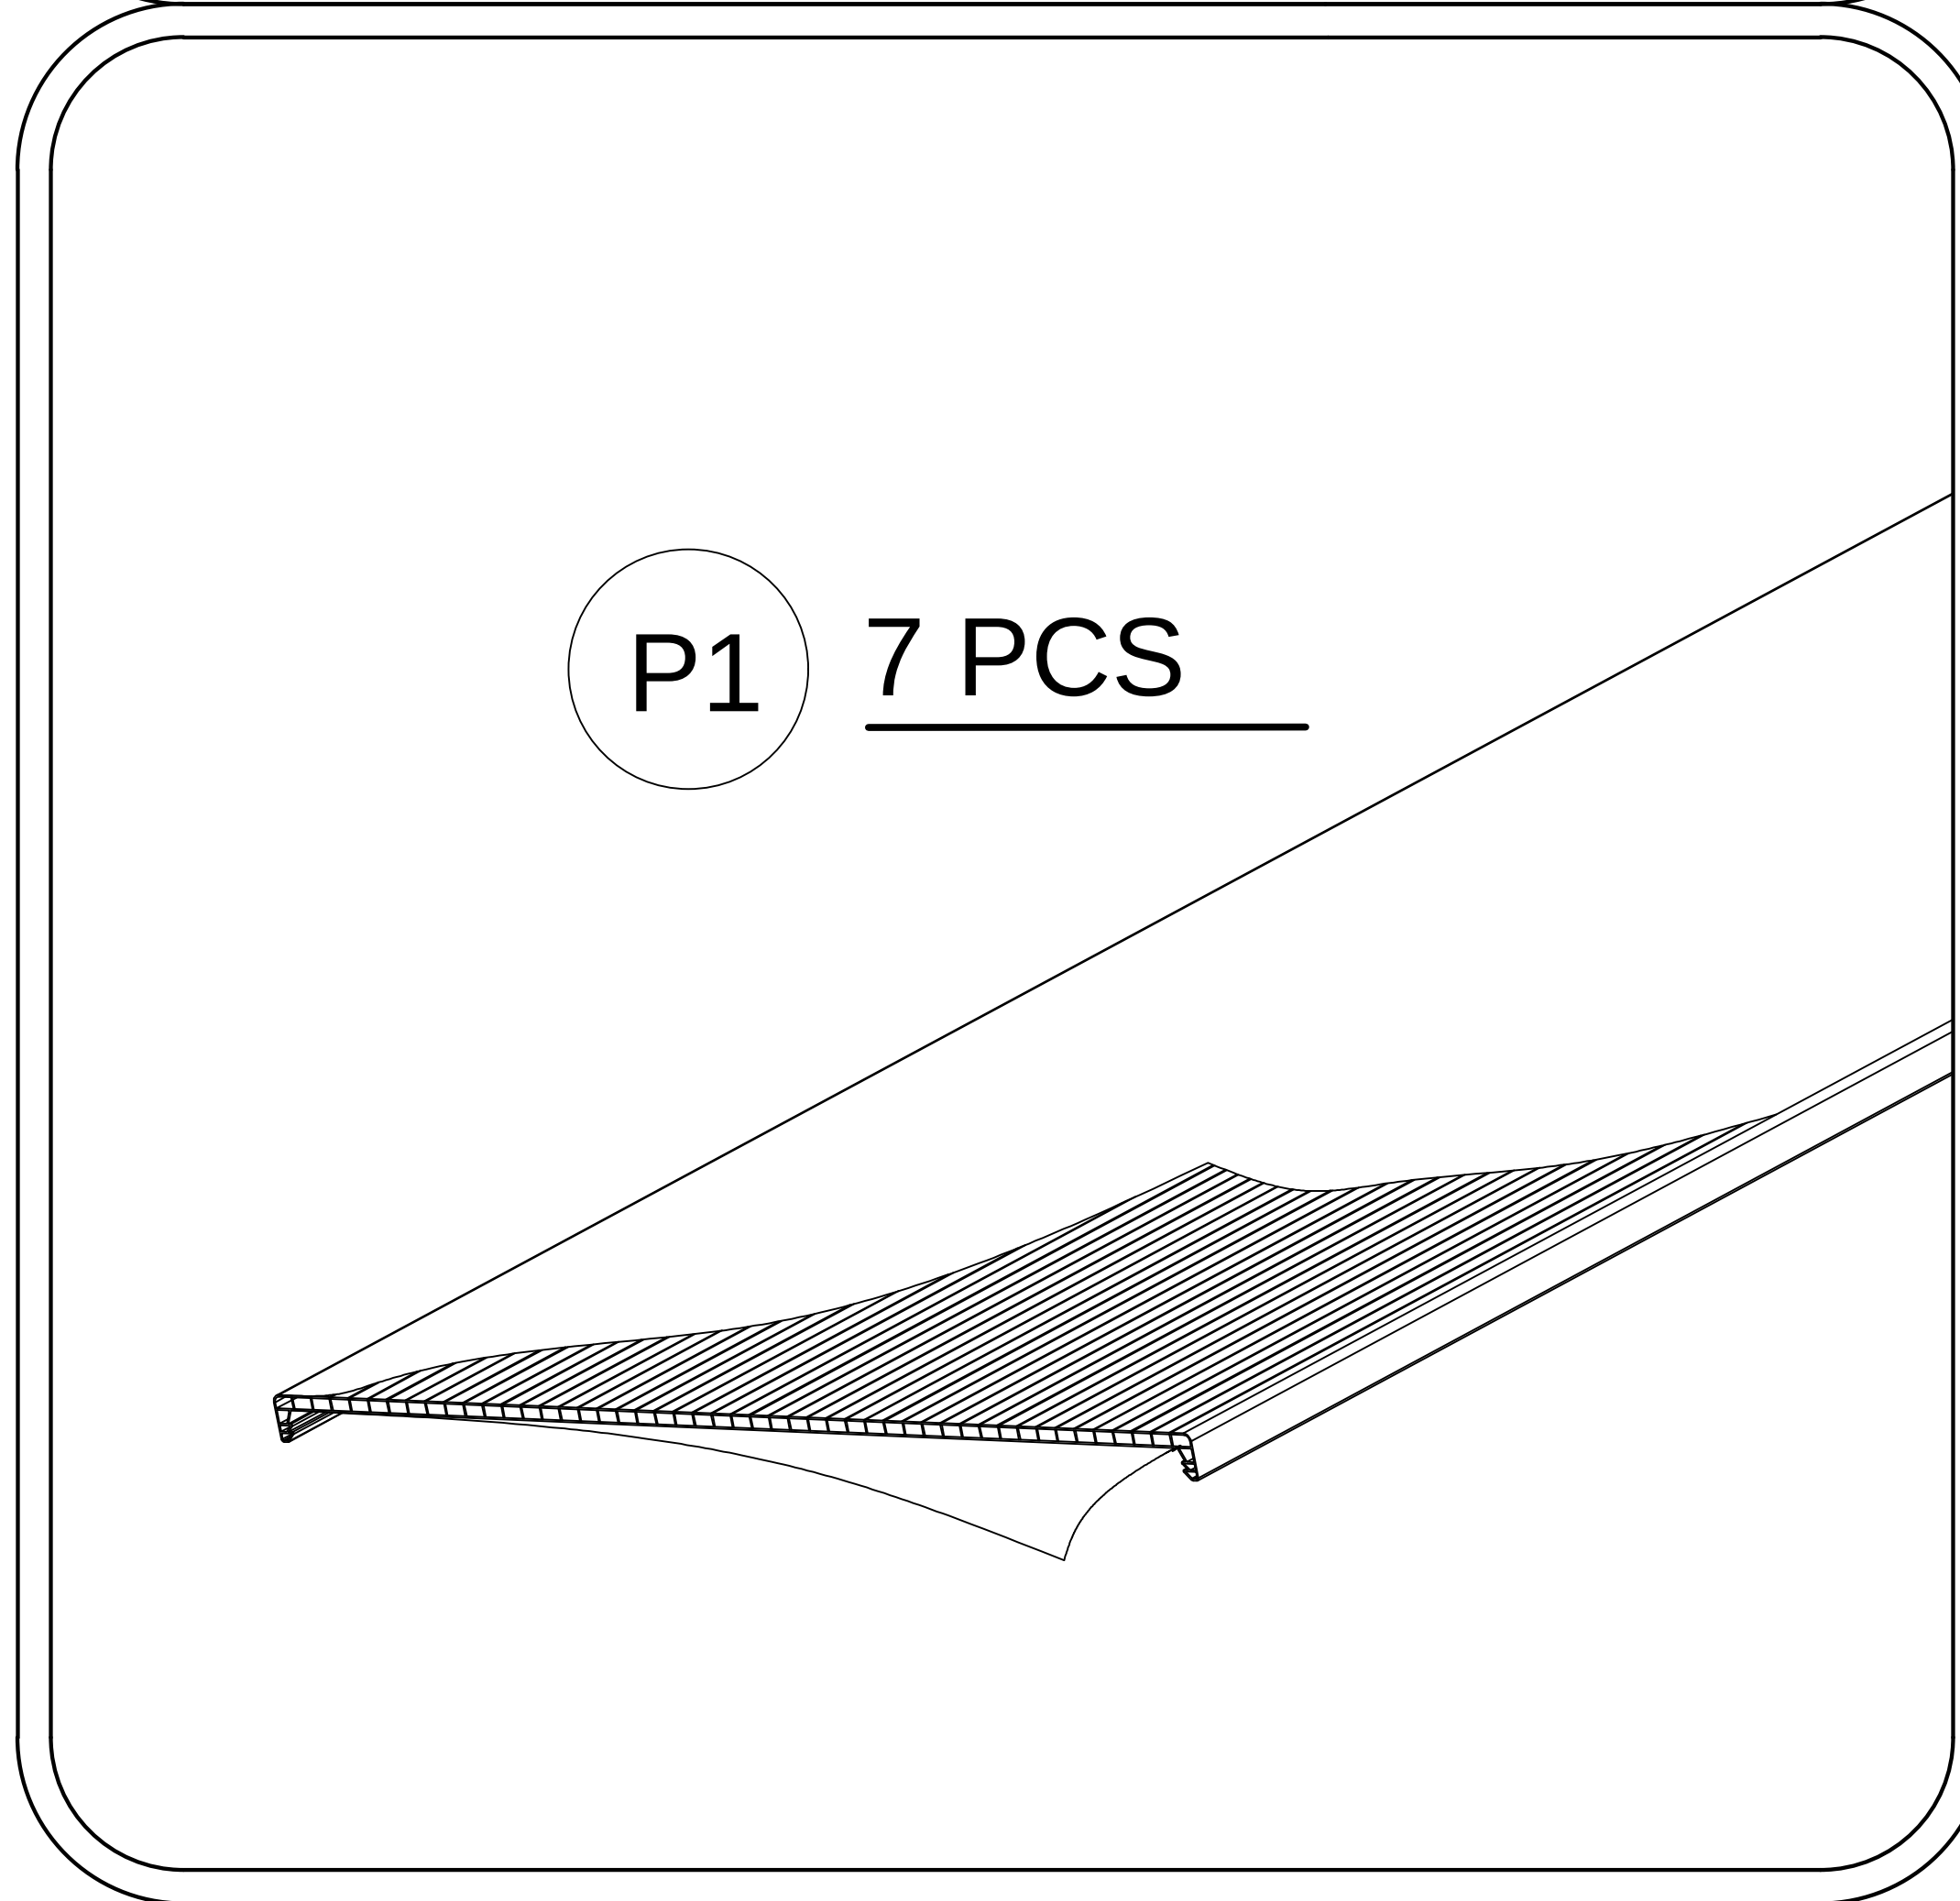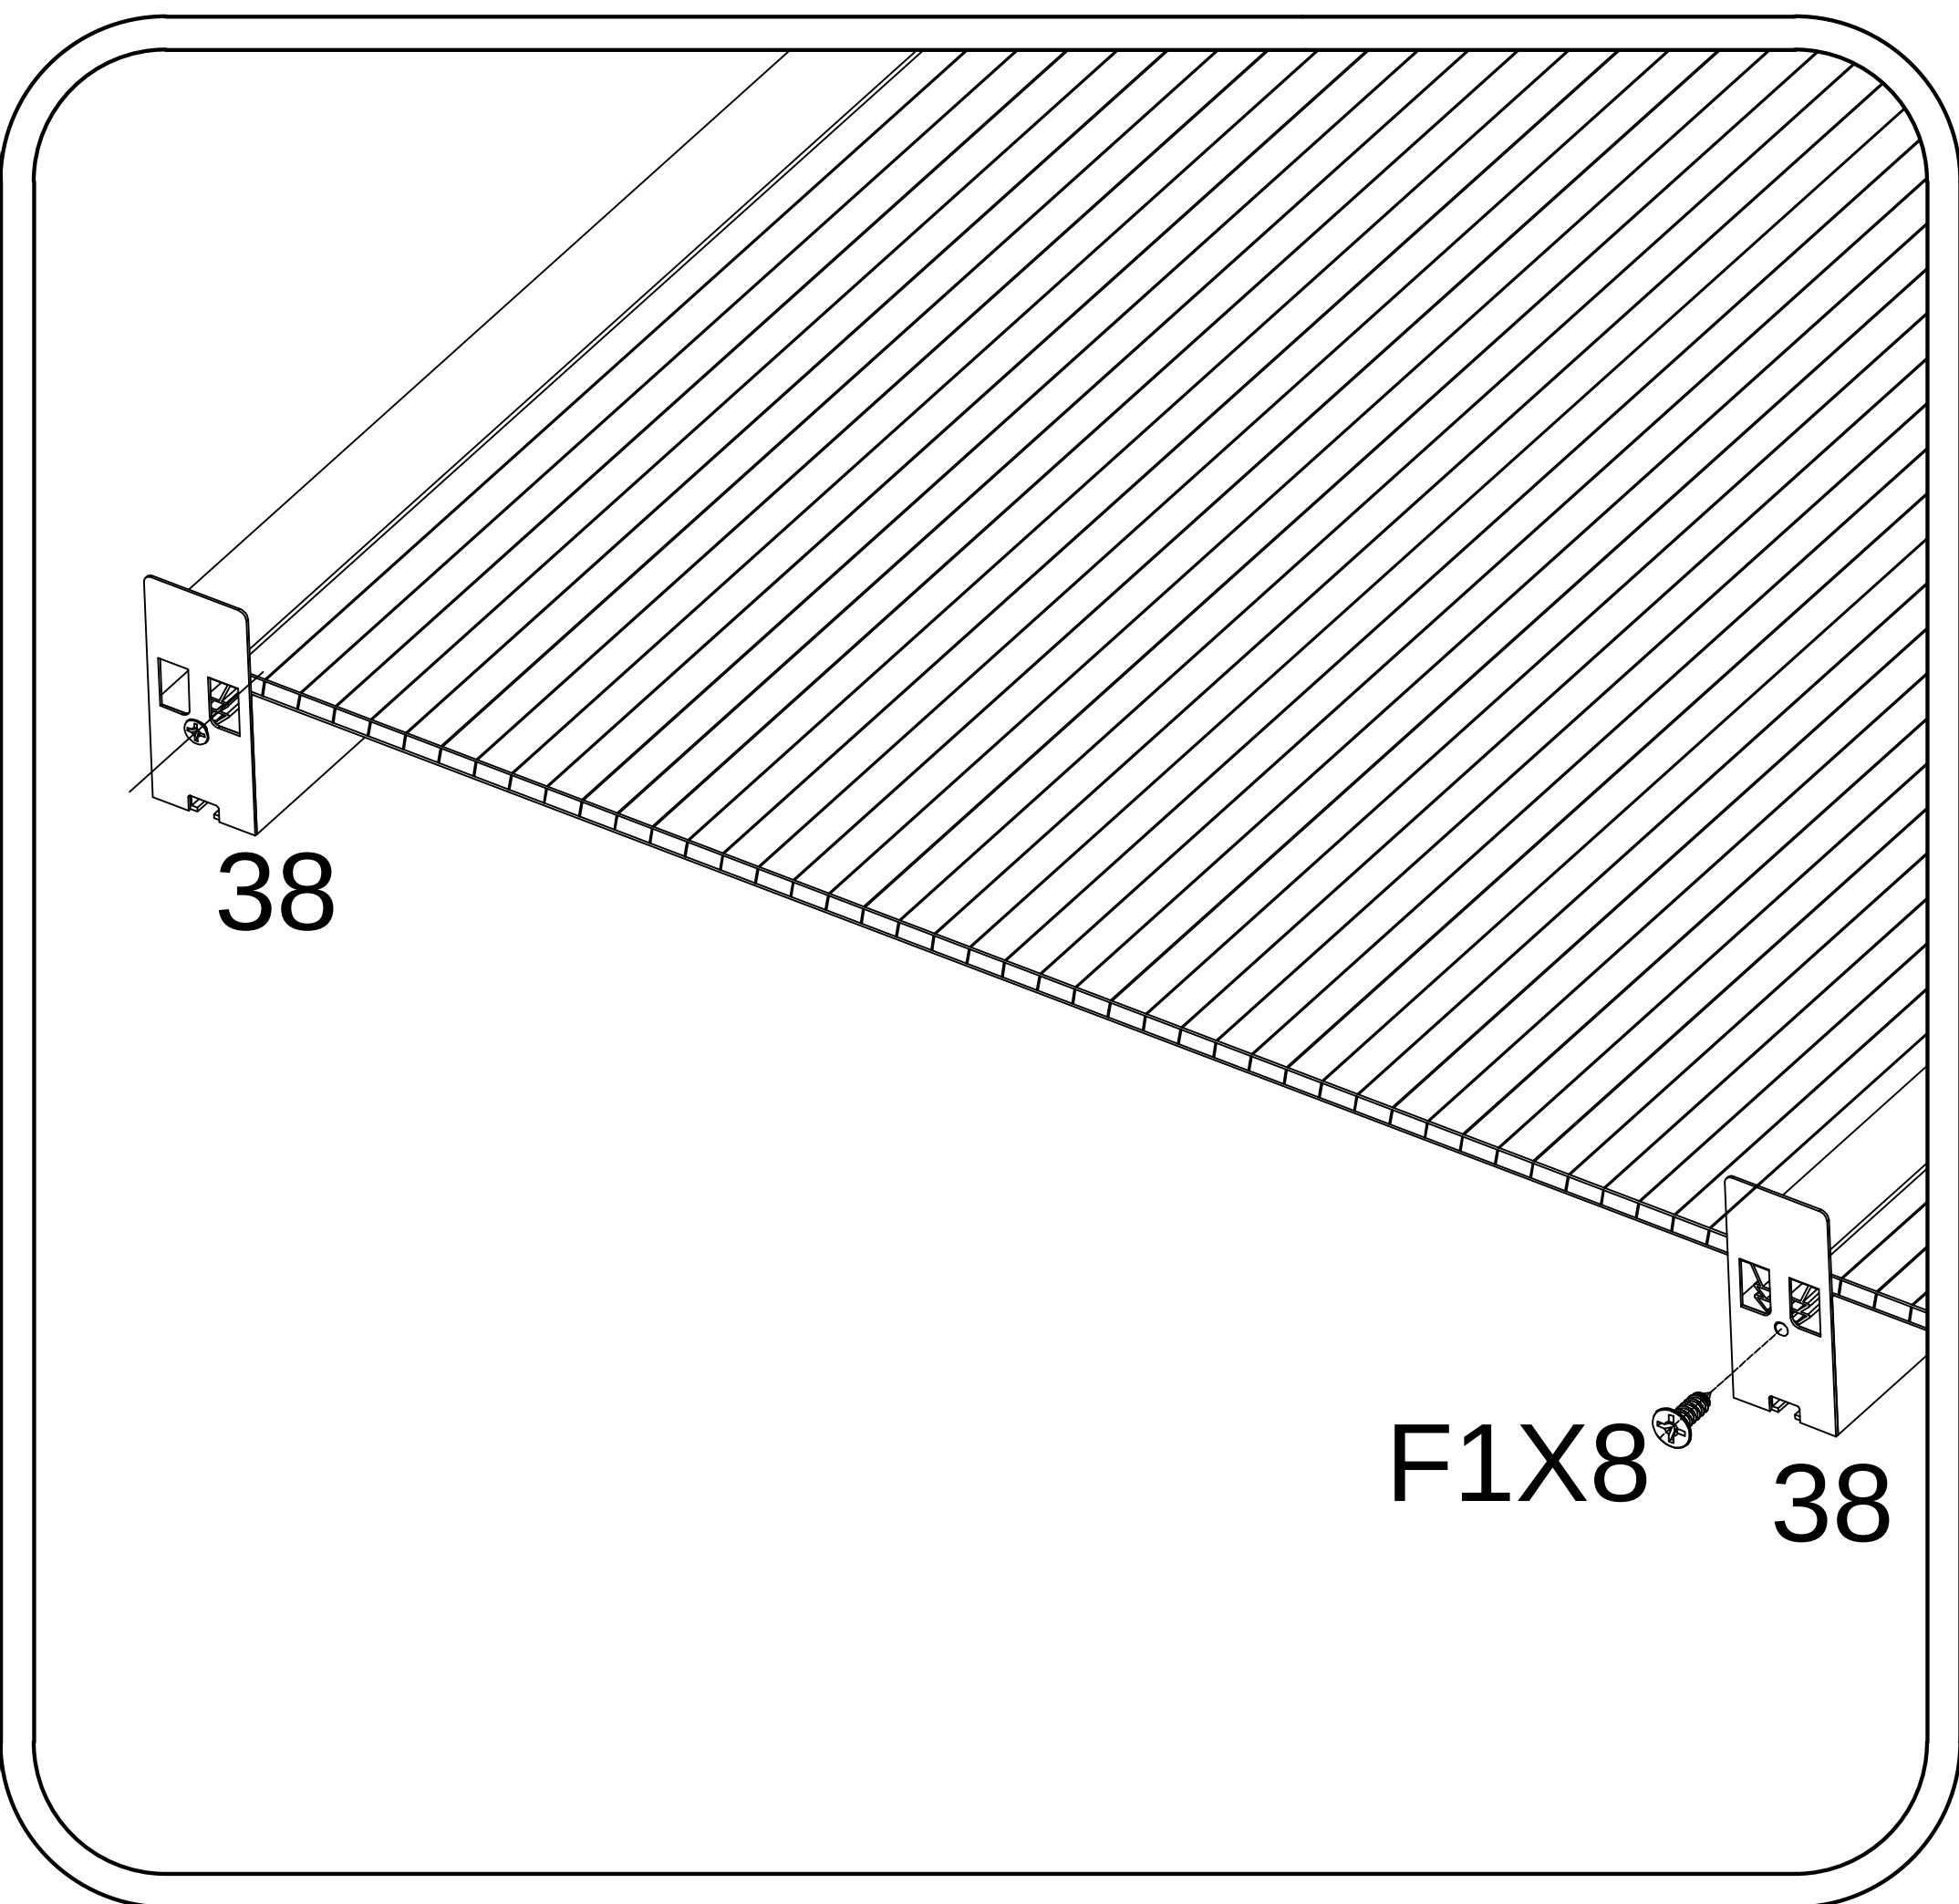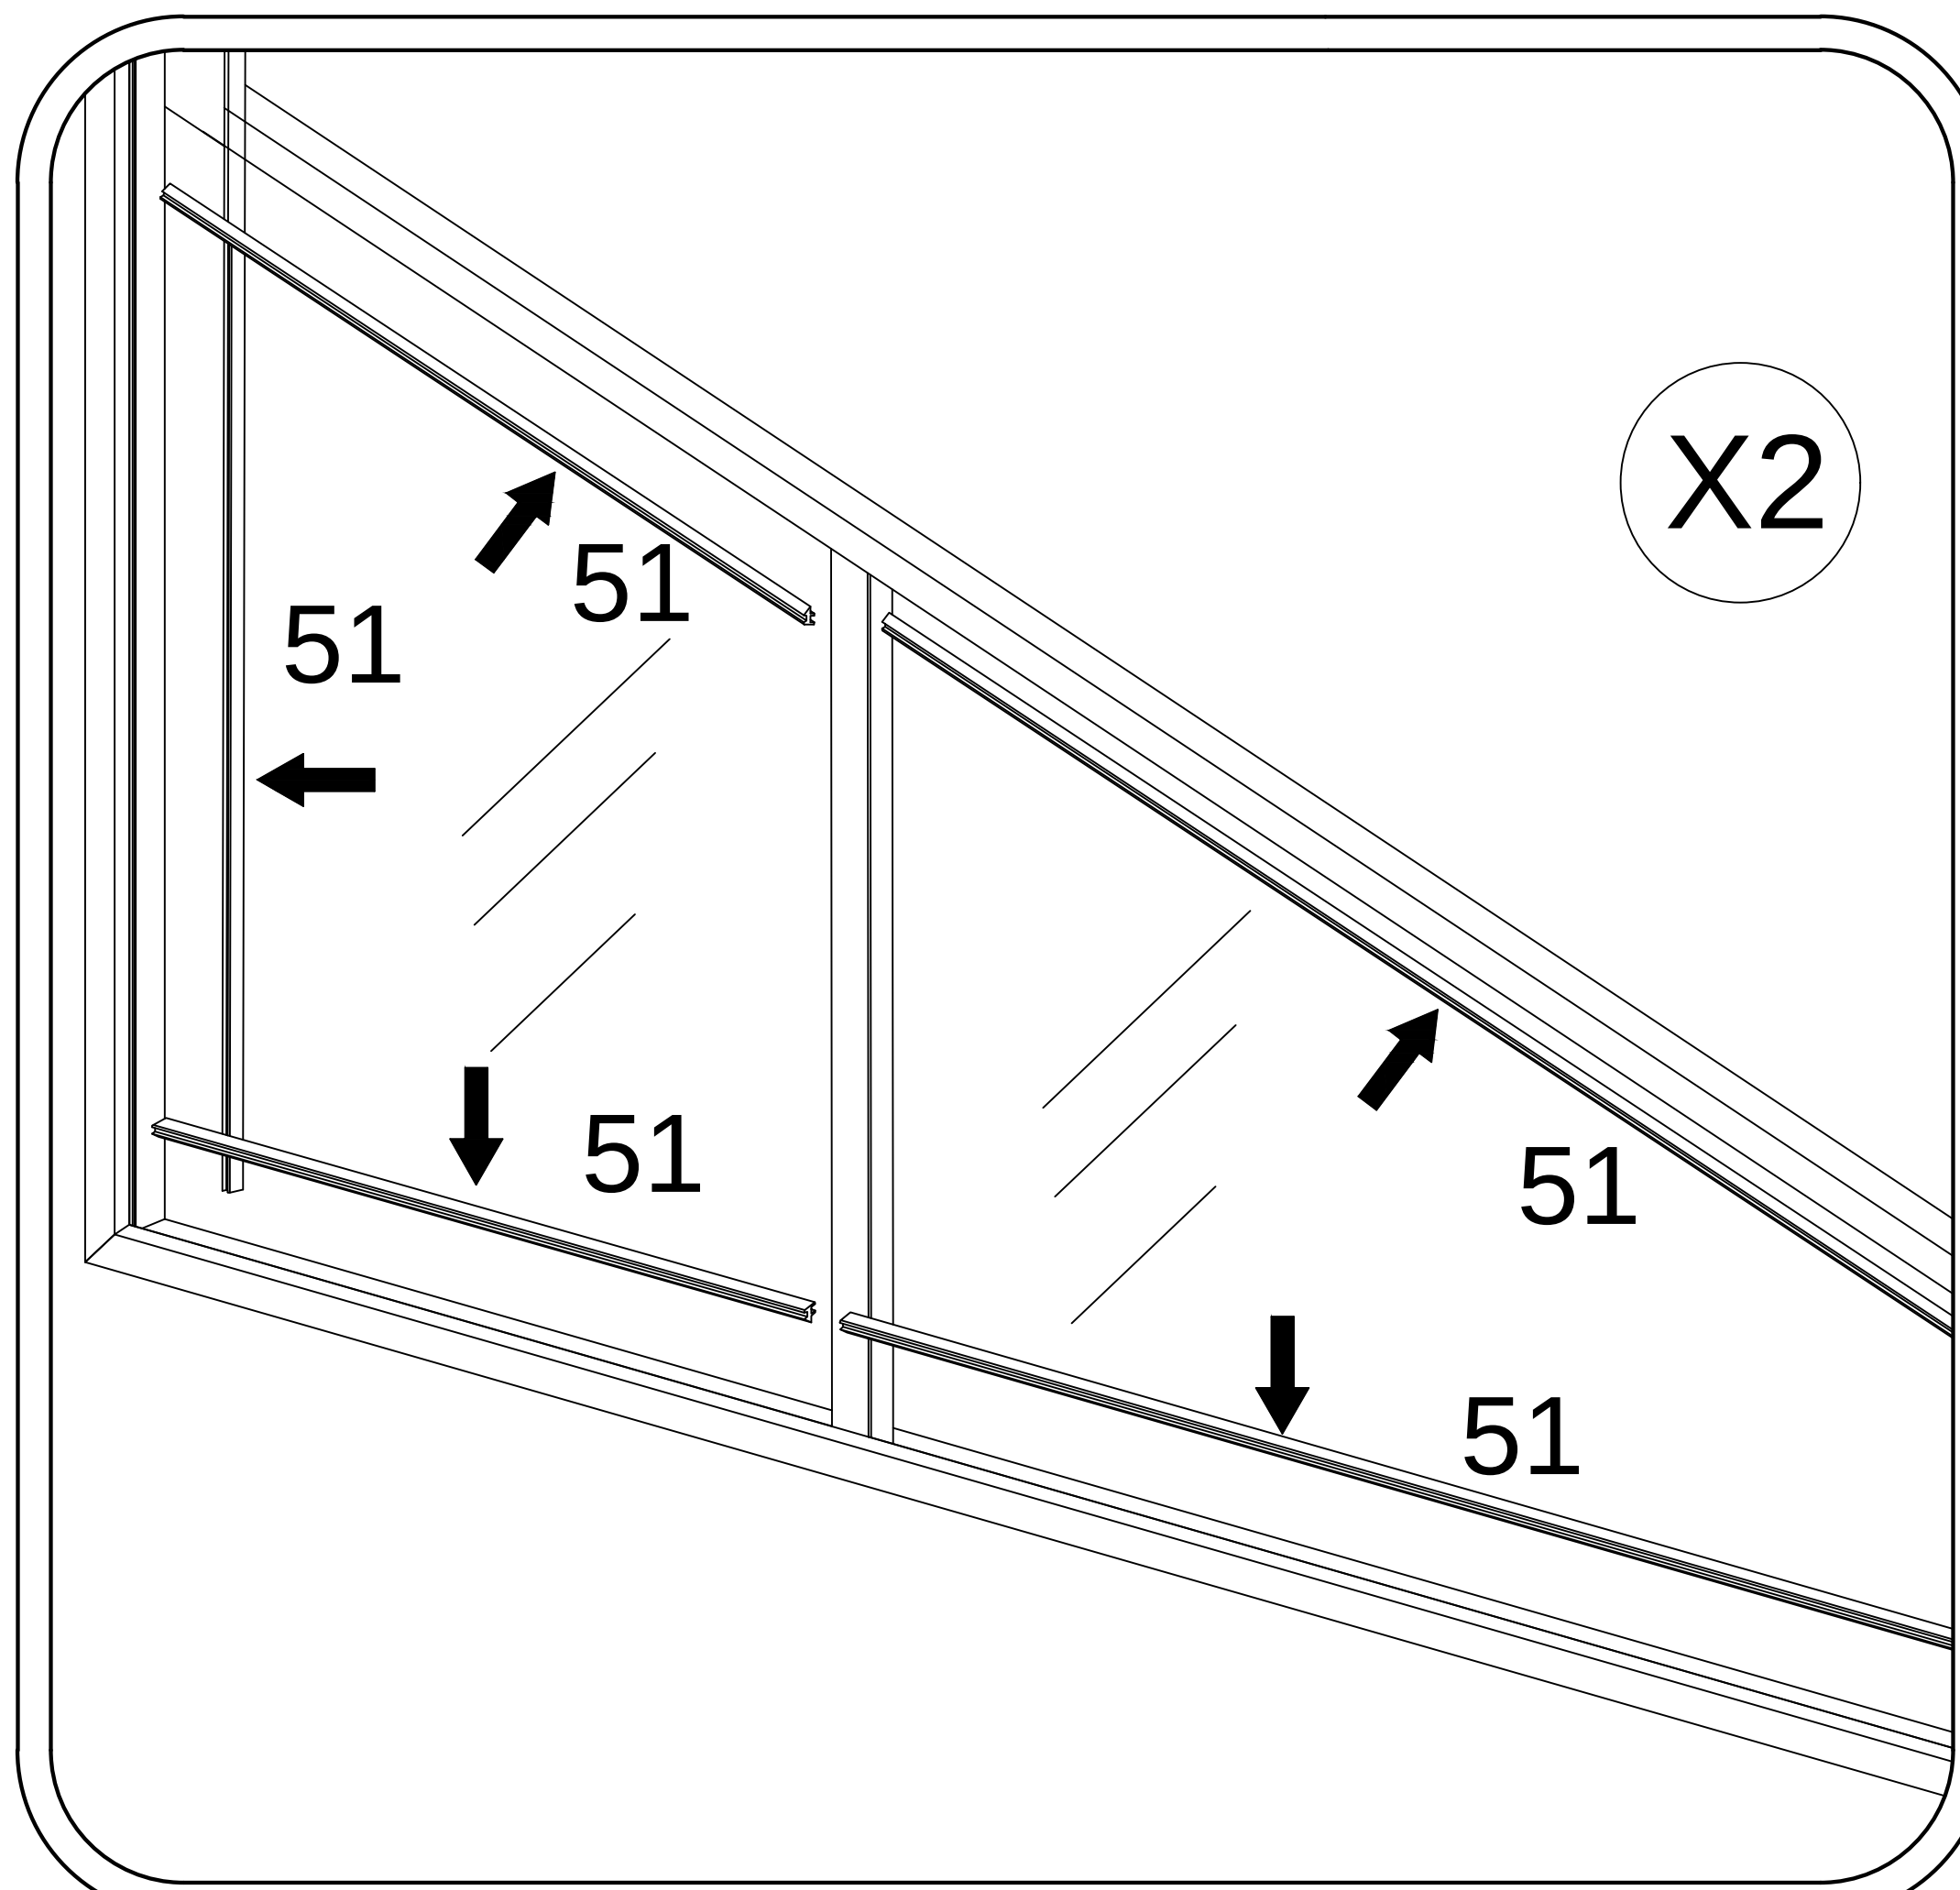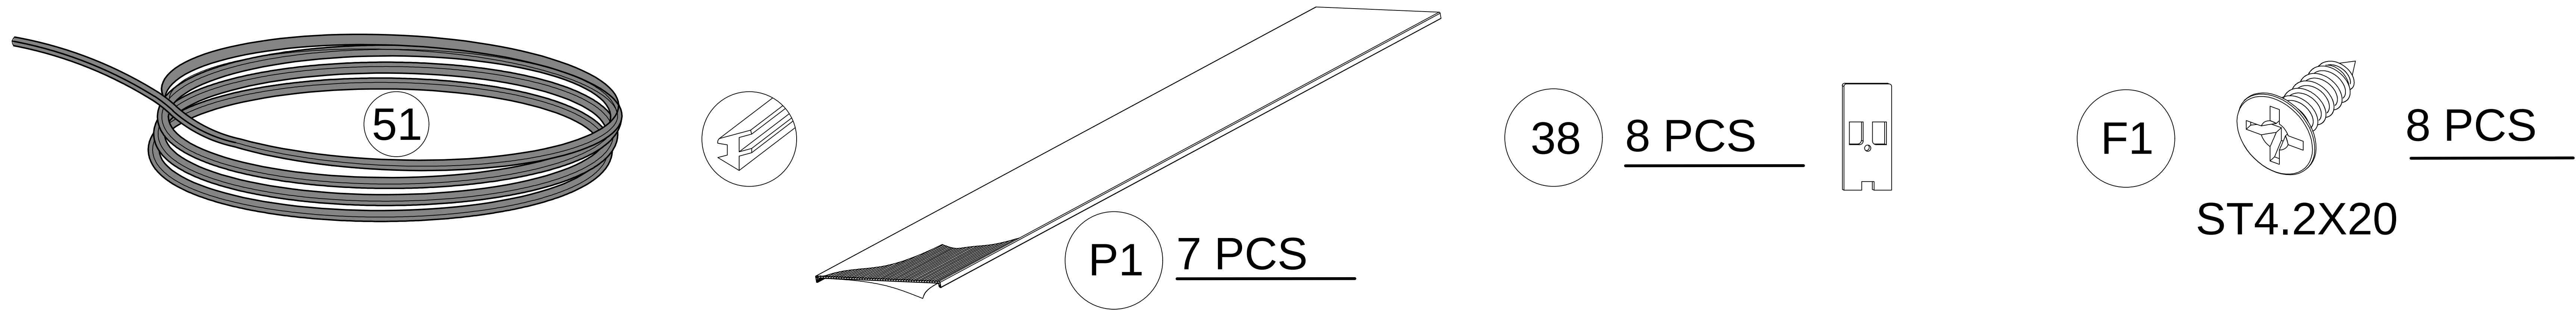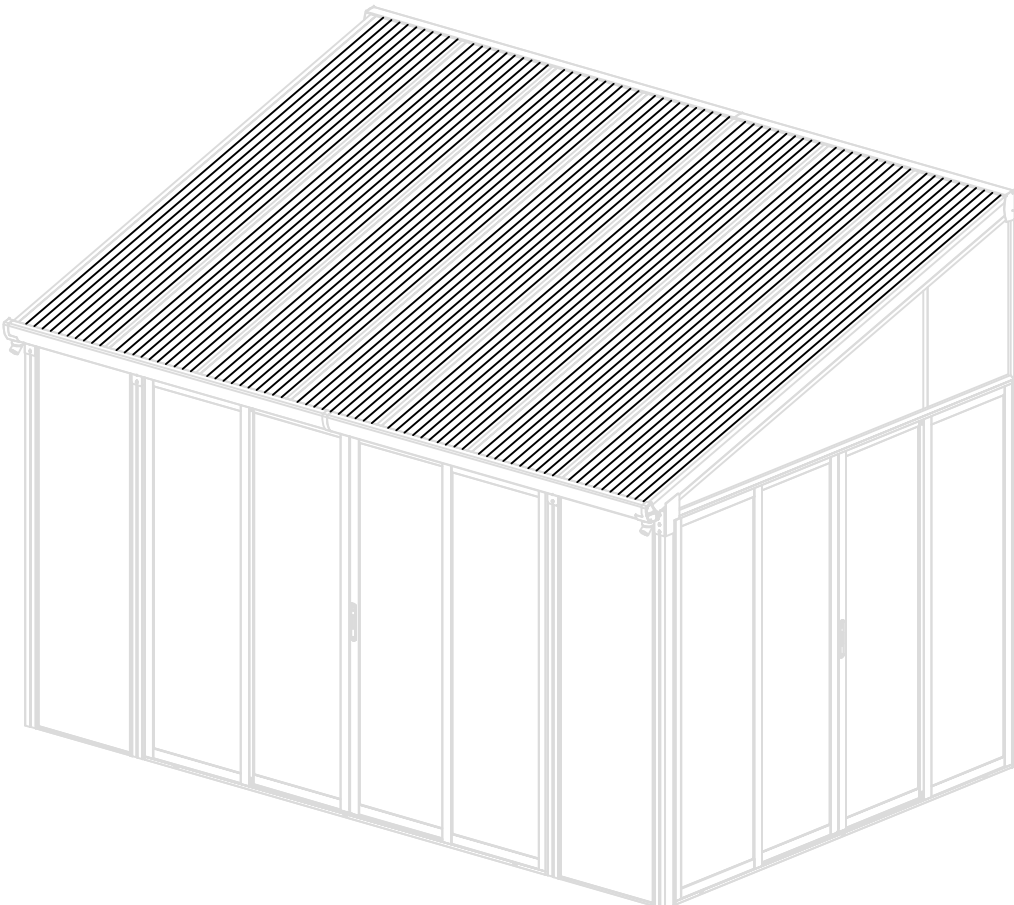

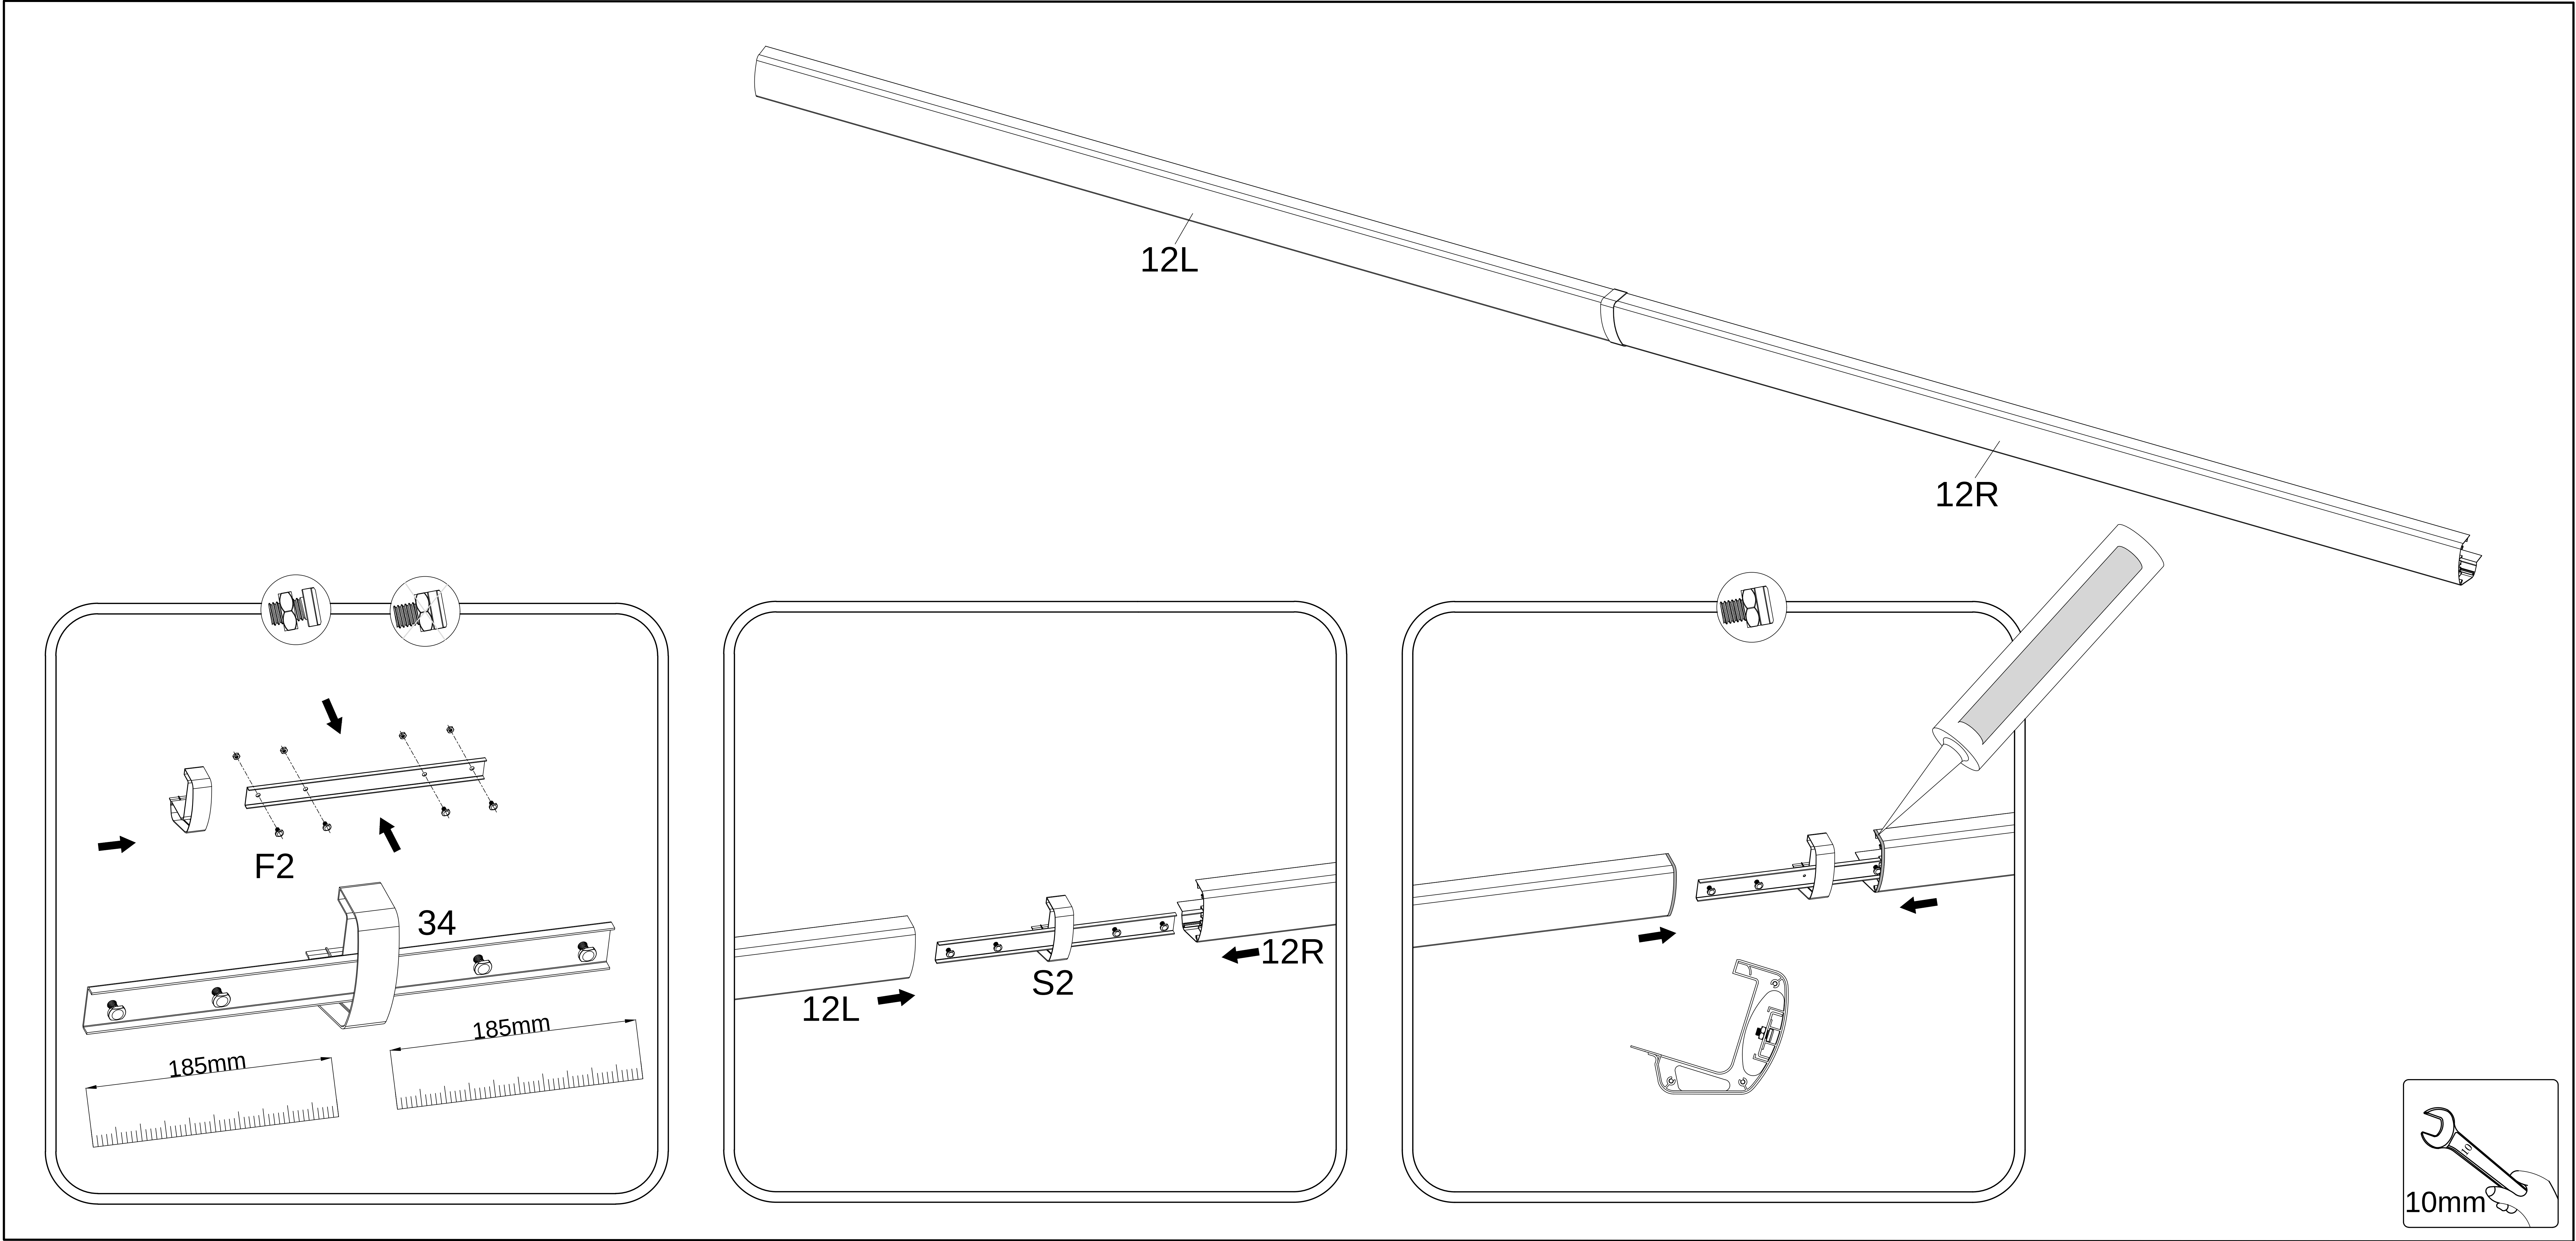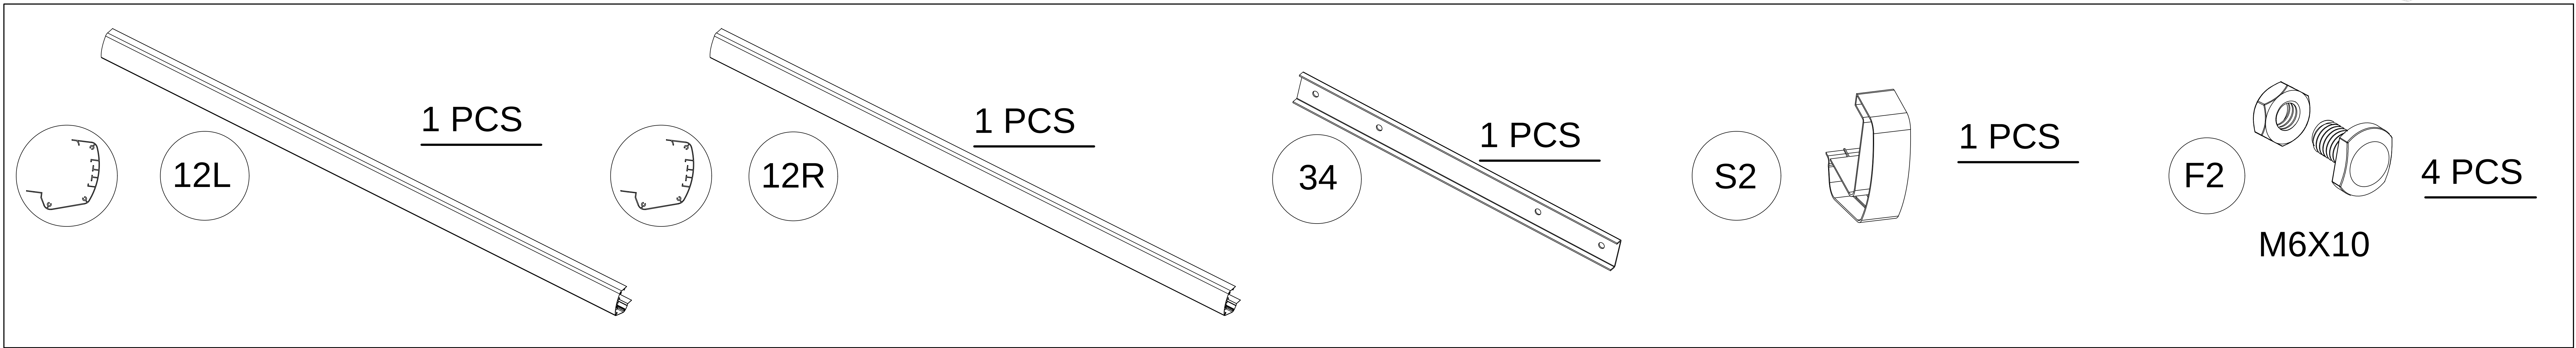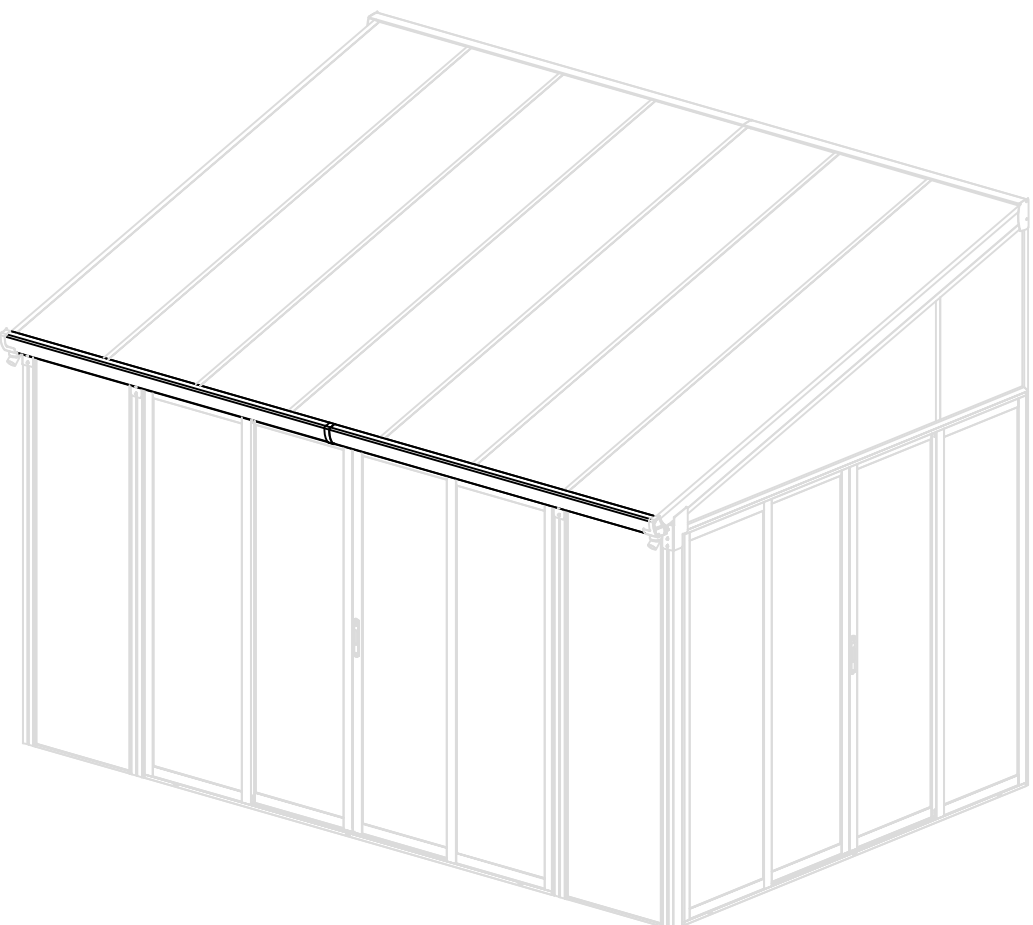


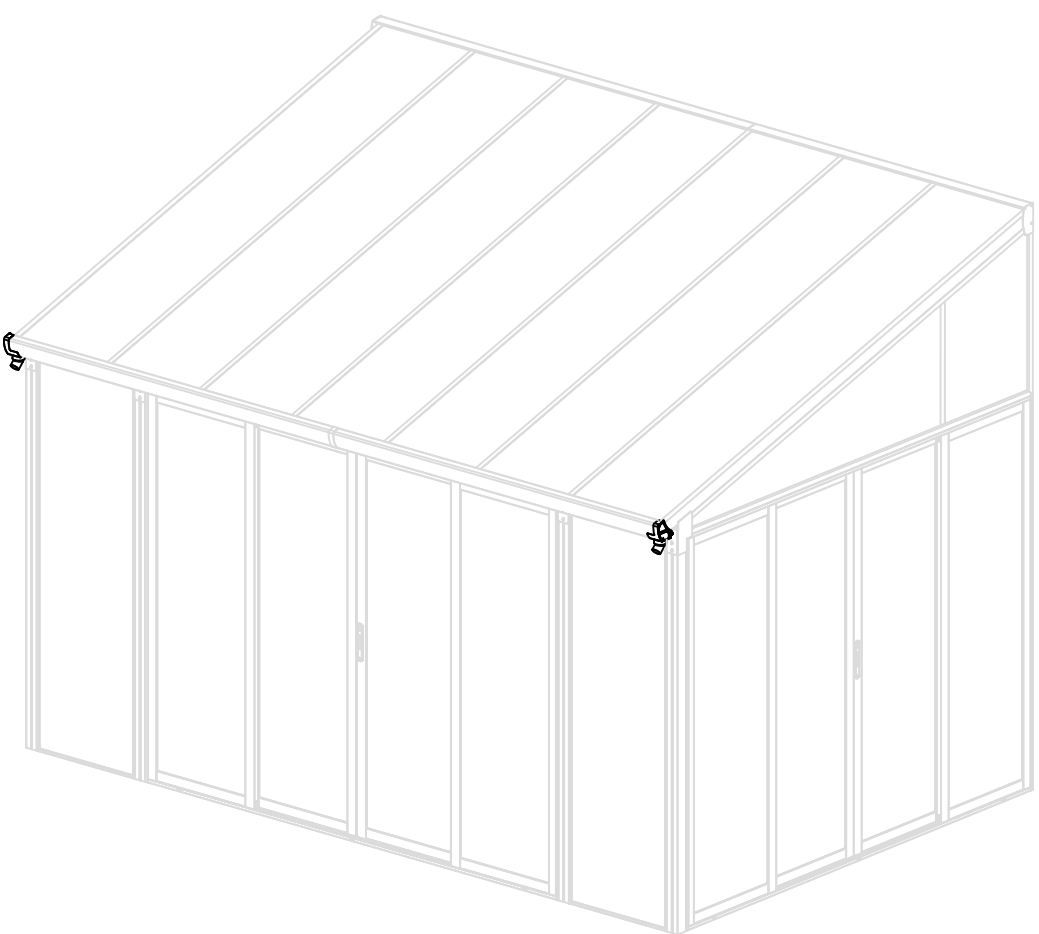


S1L 1 PCS

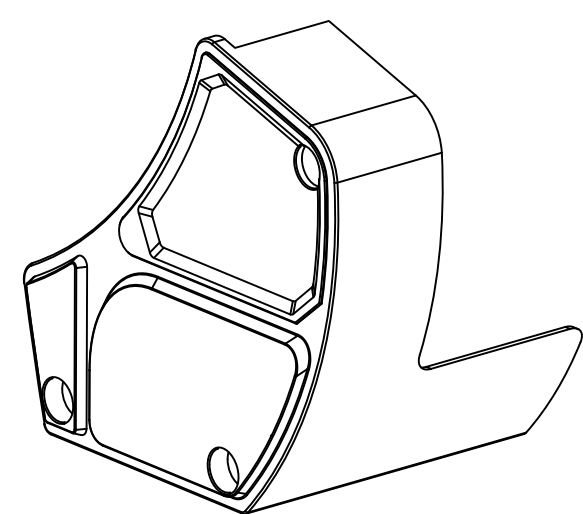


S1R 1 PCS

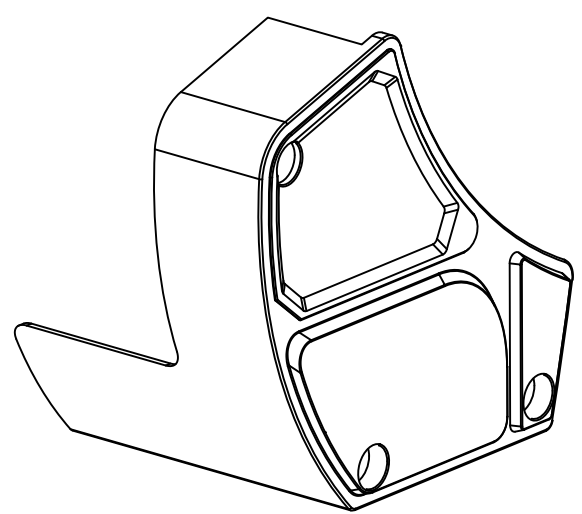

S3 2 PCS

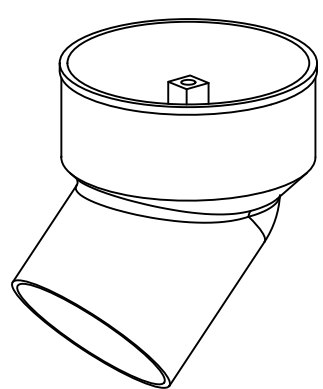


F3

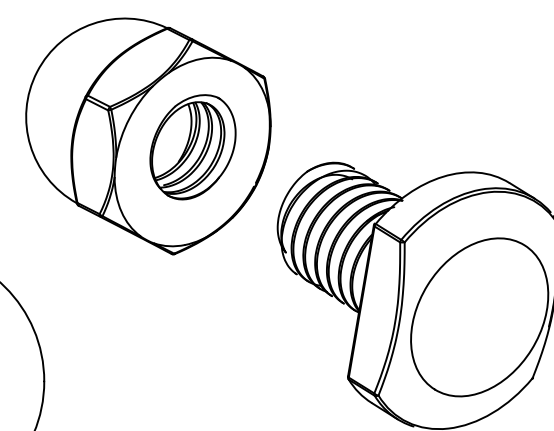

M6X10

8 PCS


F1

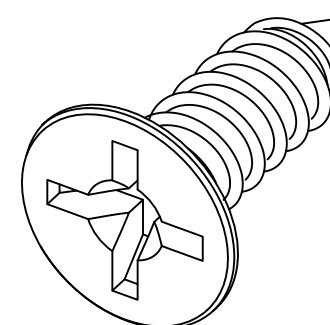

6 PCS



ST4.2X20

F10


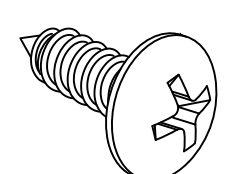


2 PCS


ST4.8X20

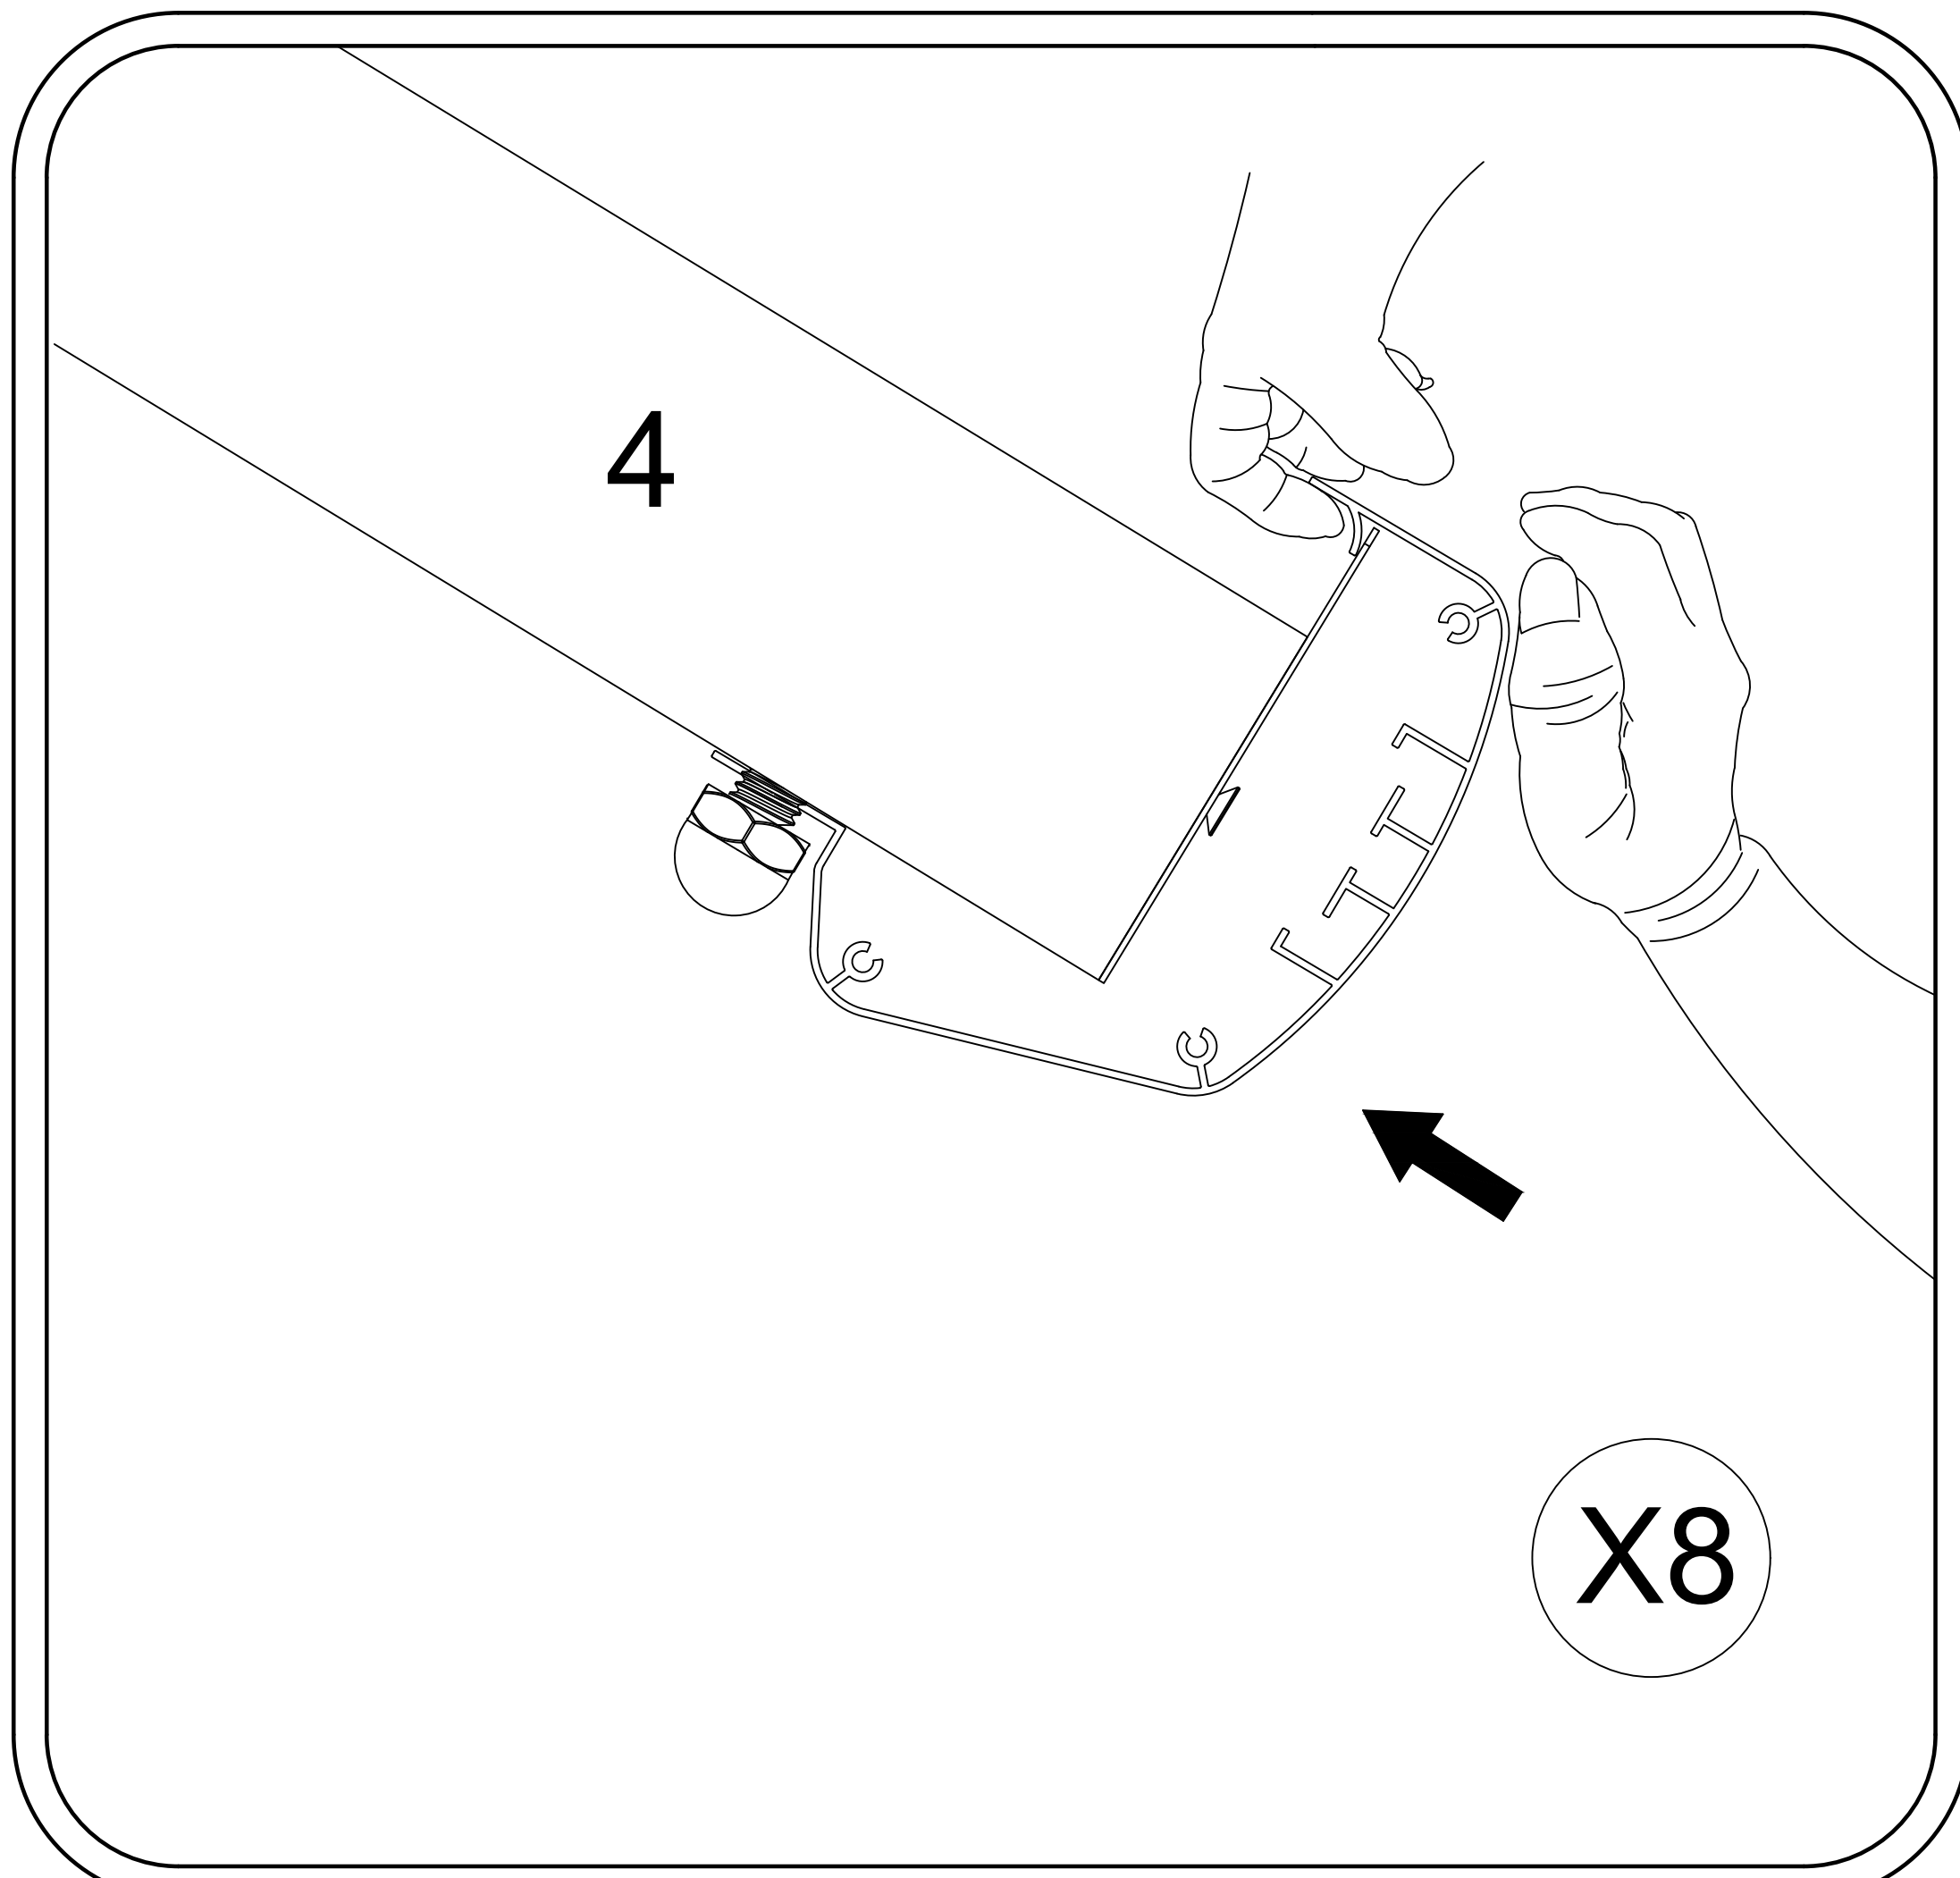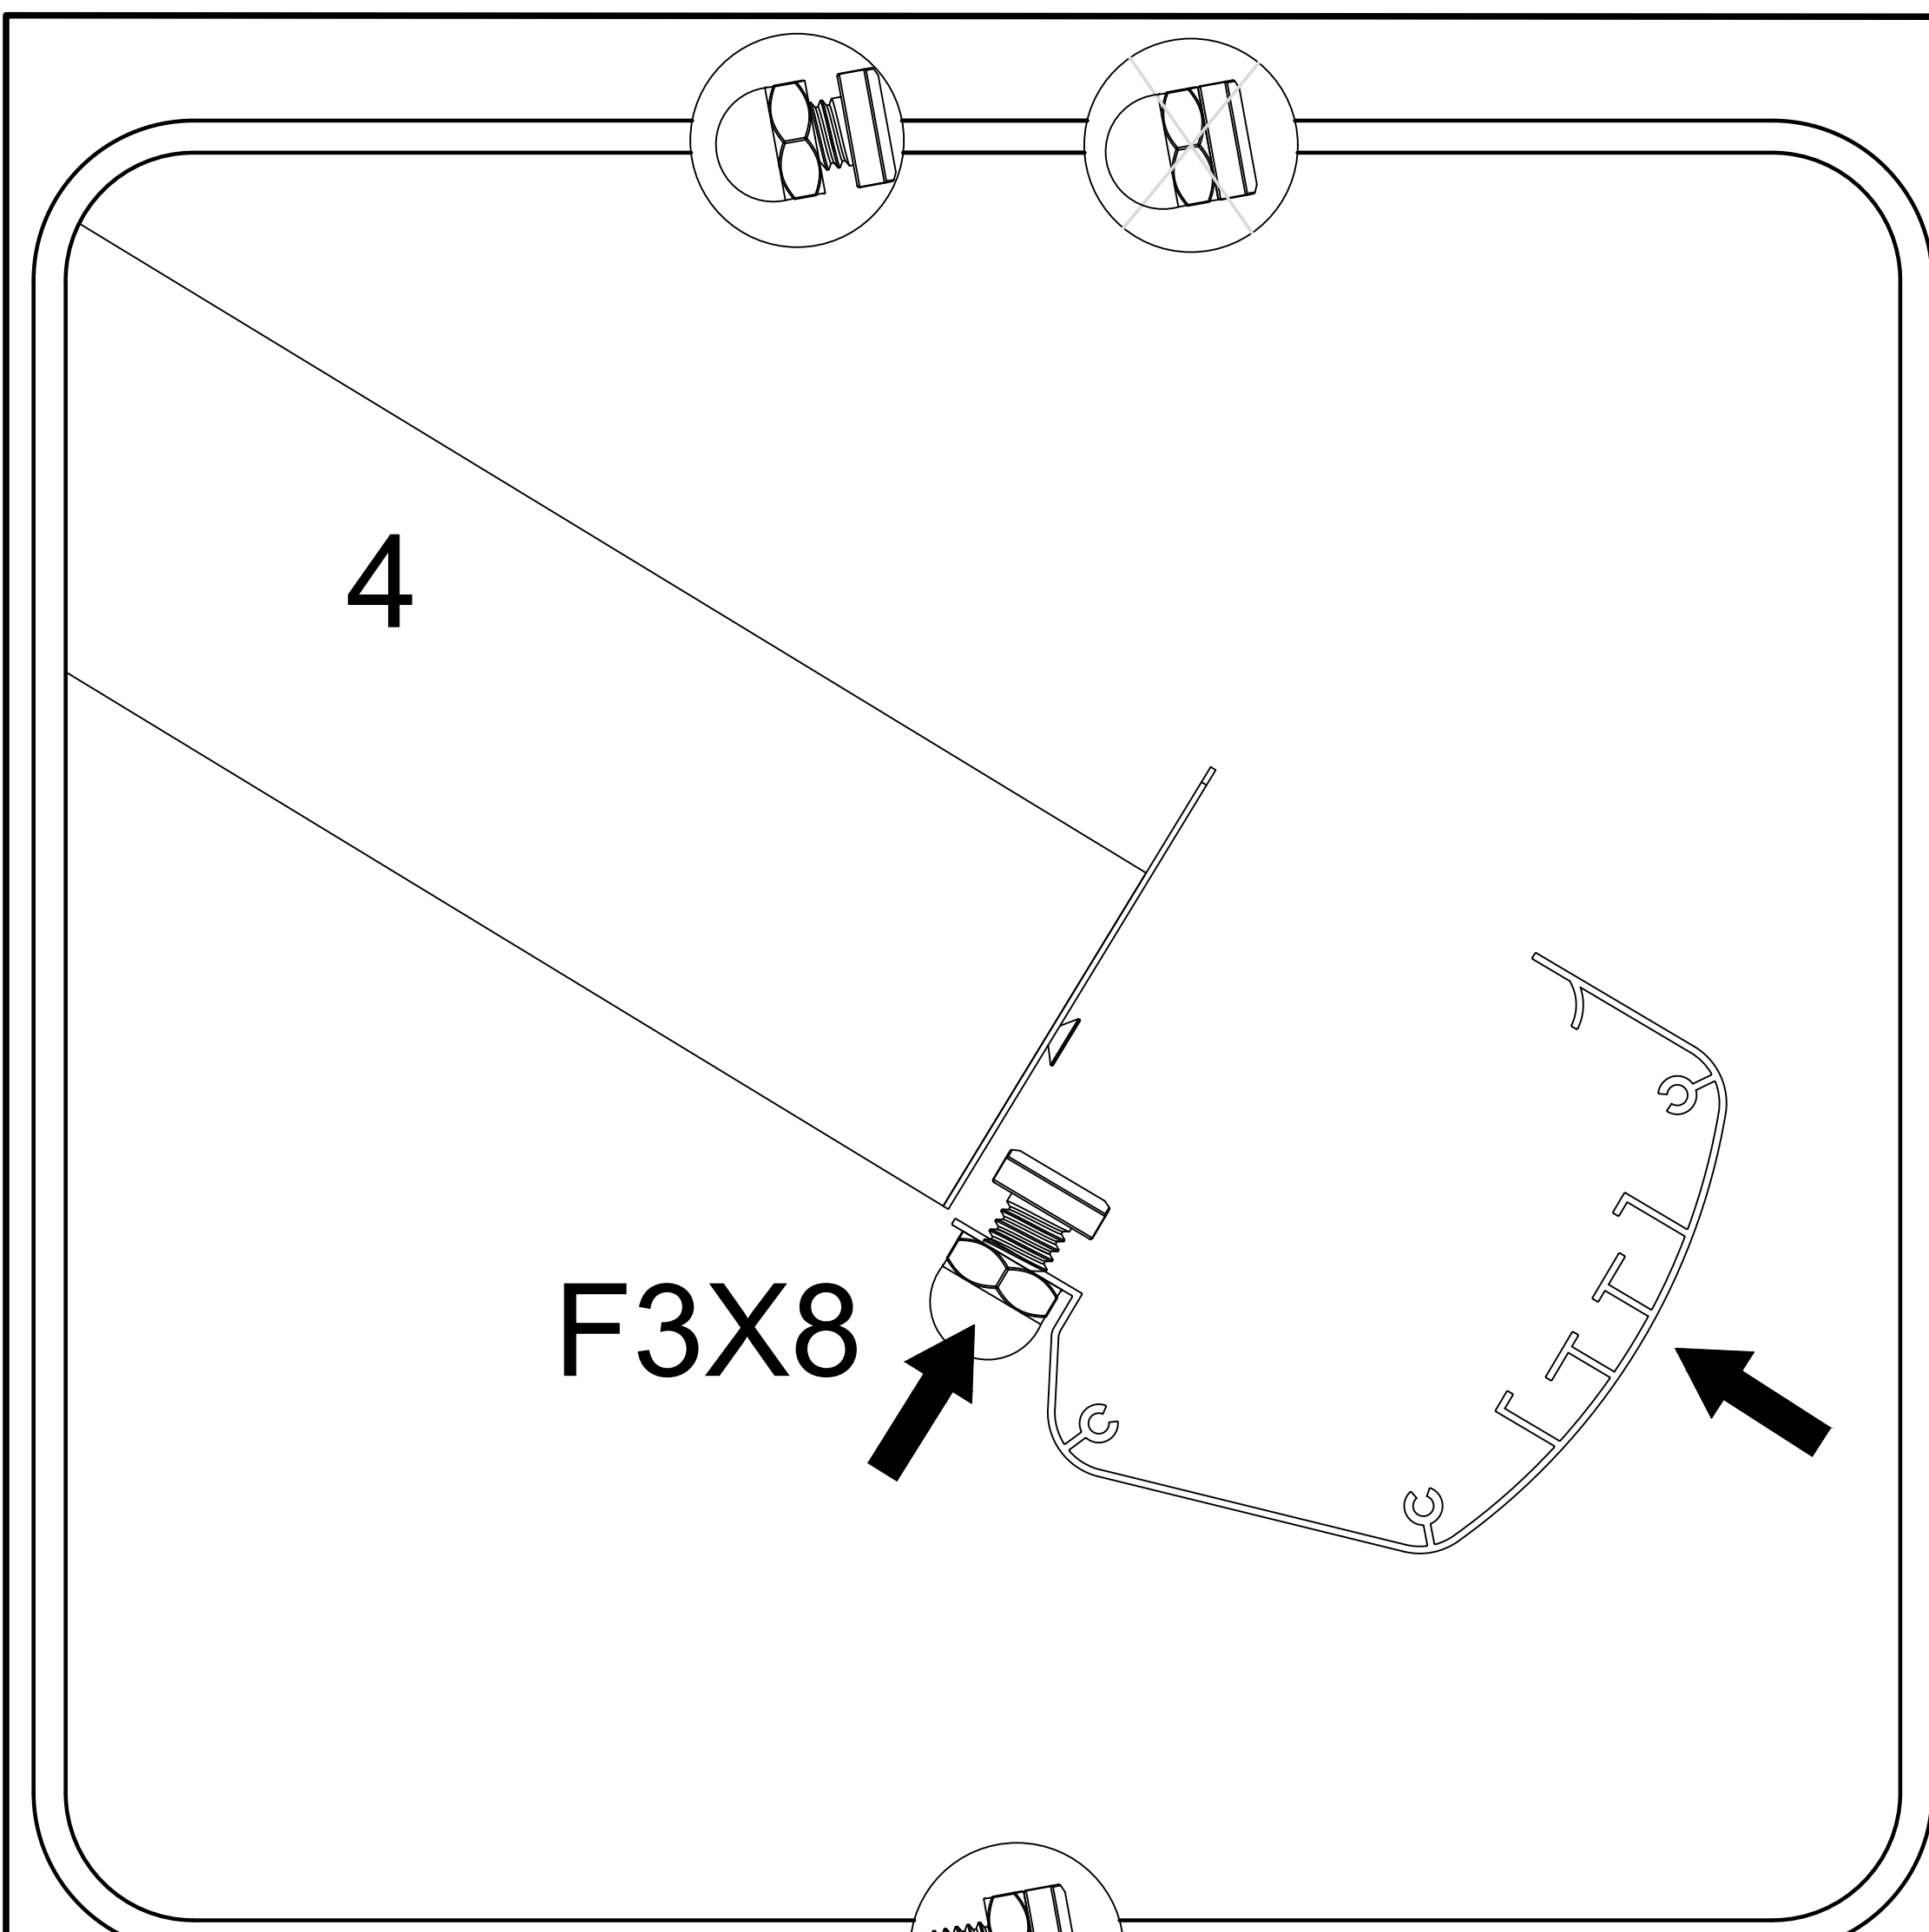




X8

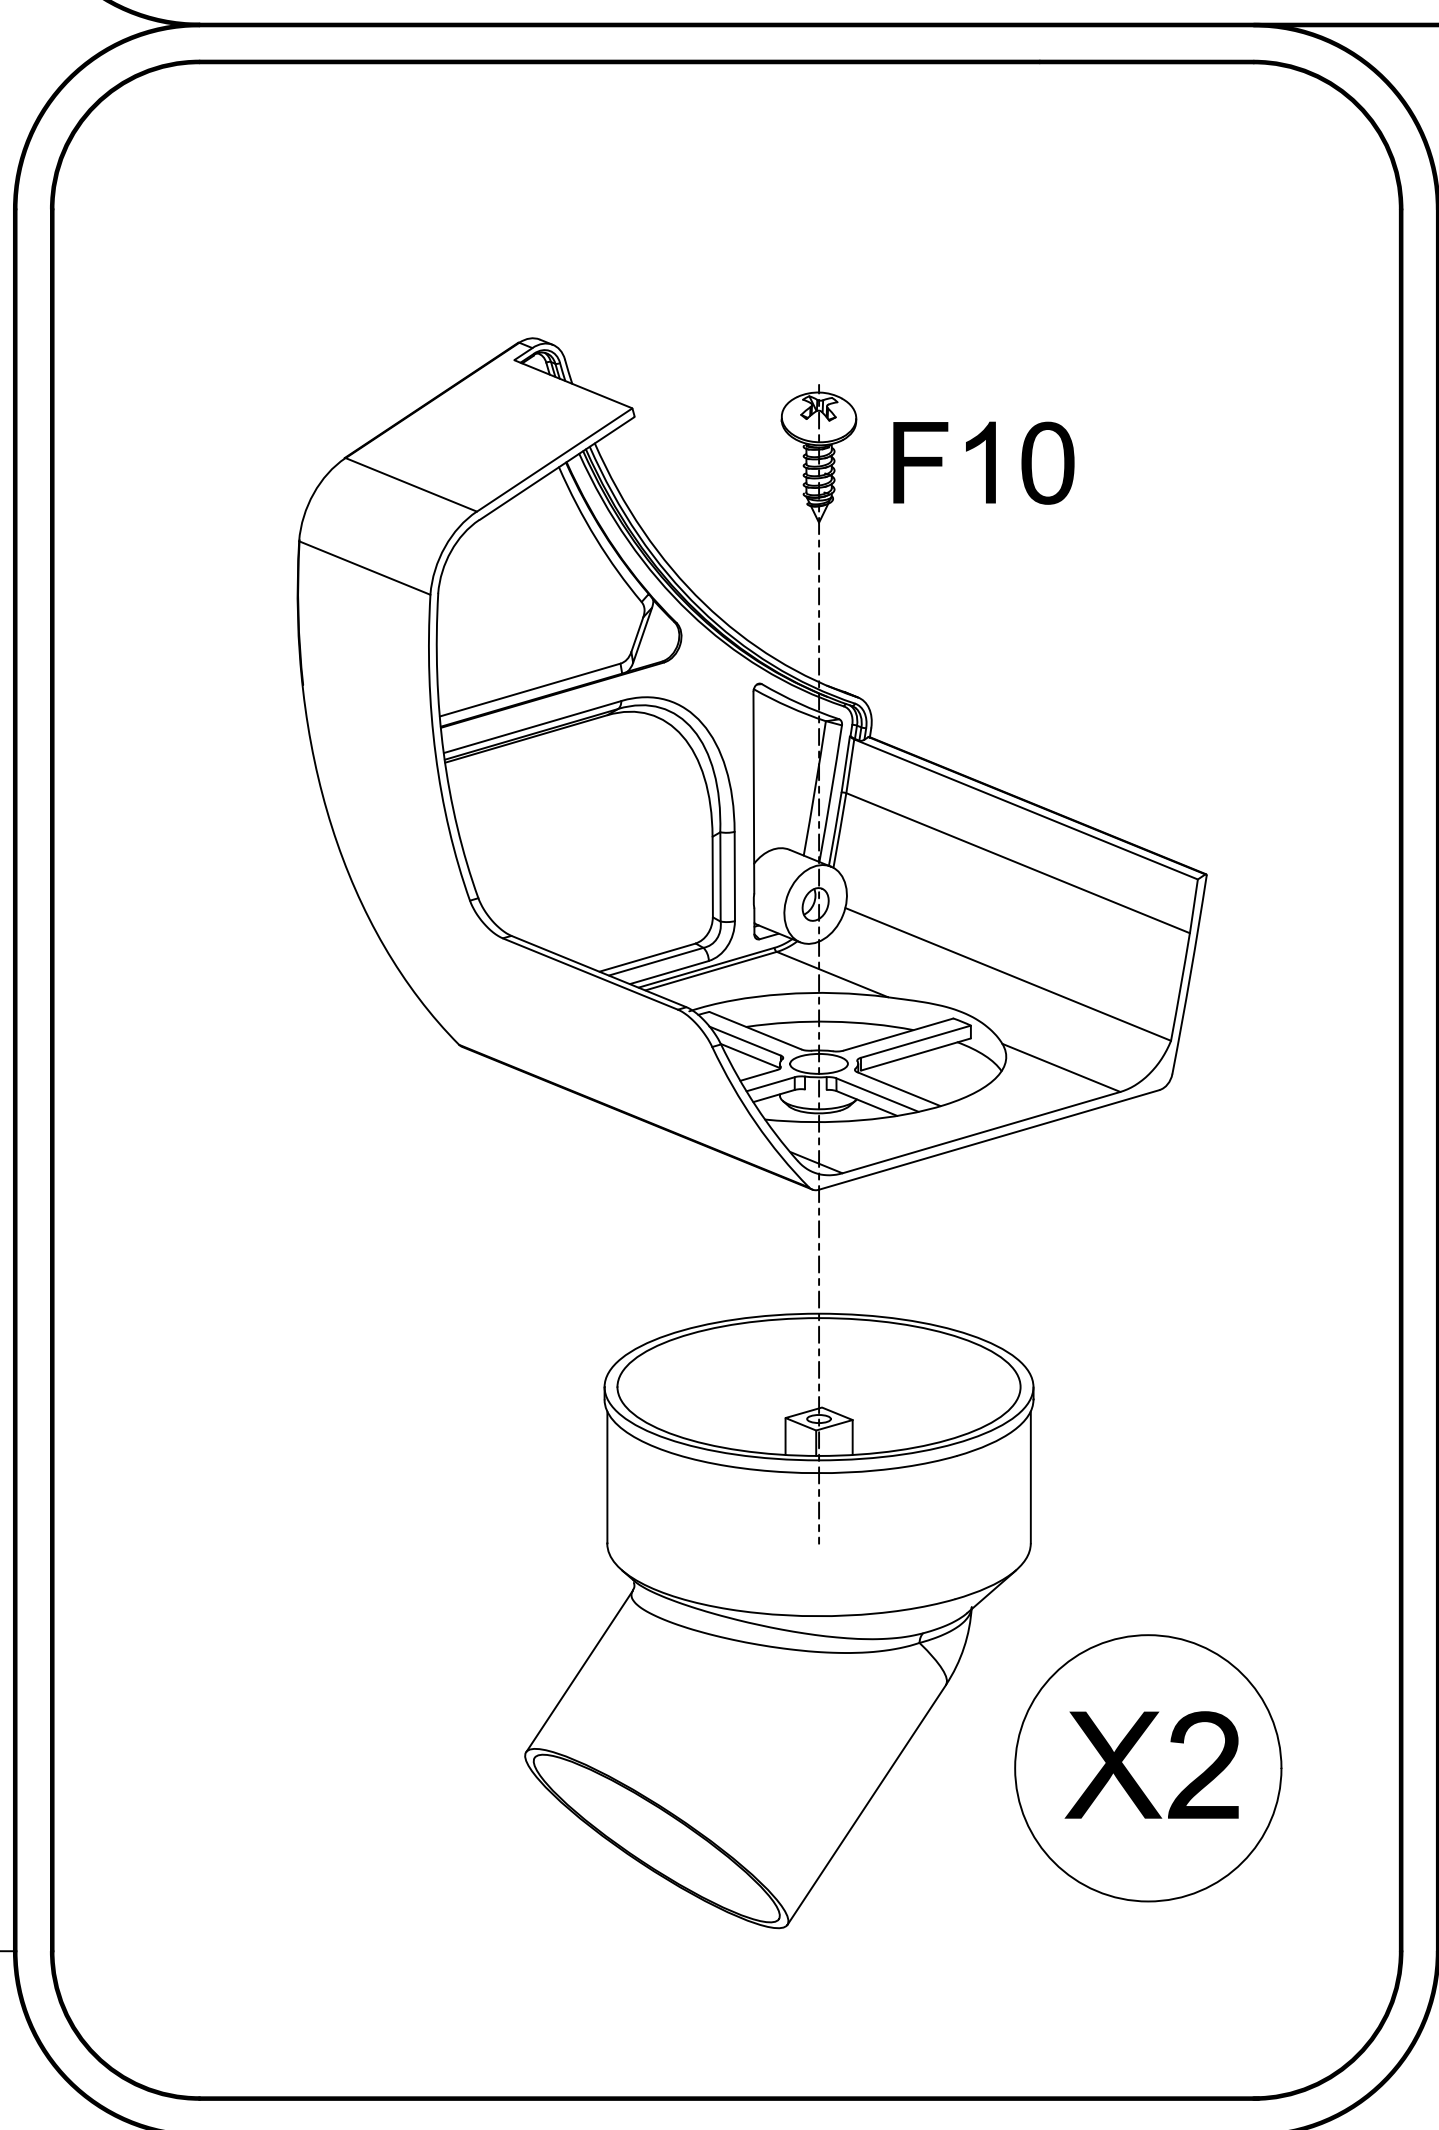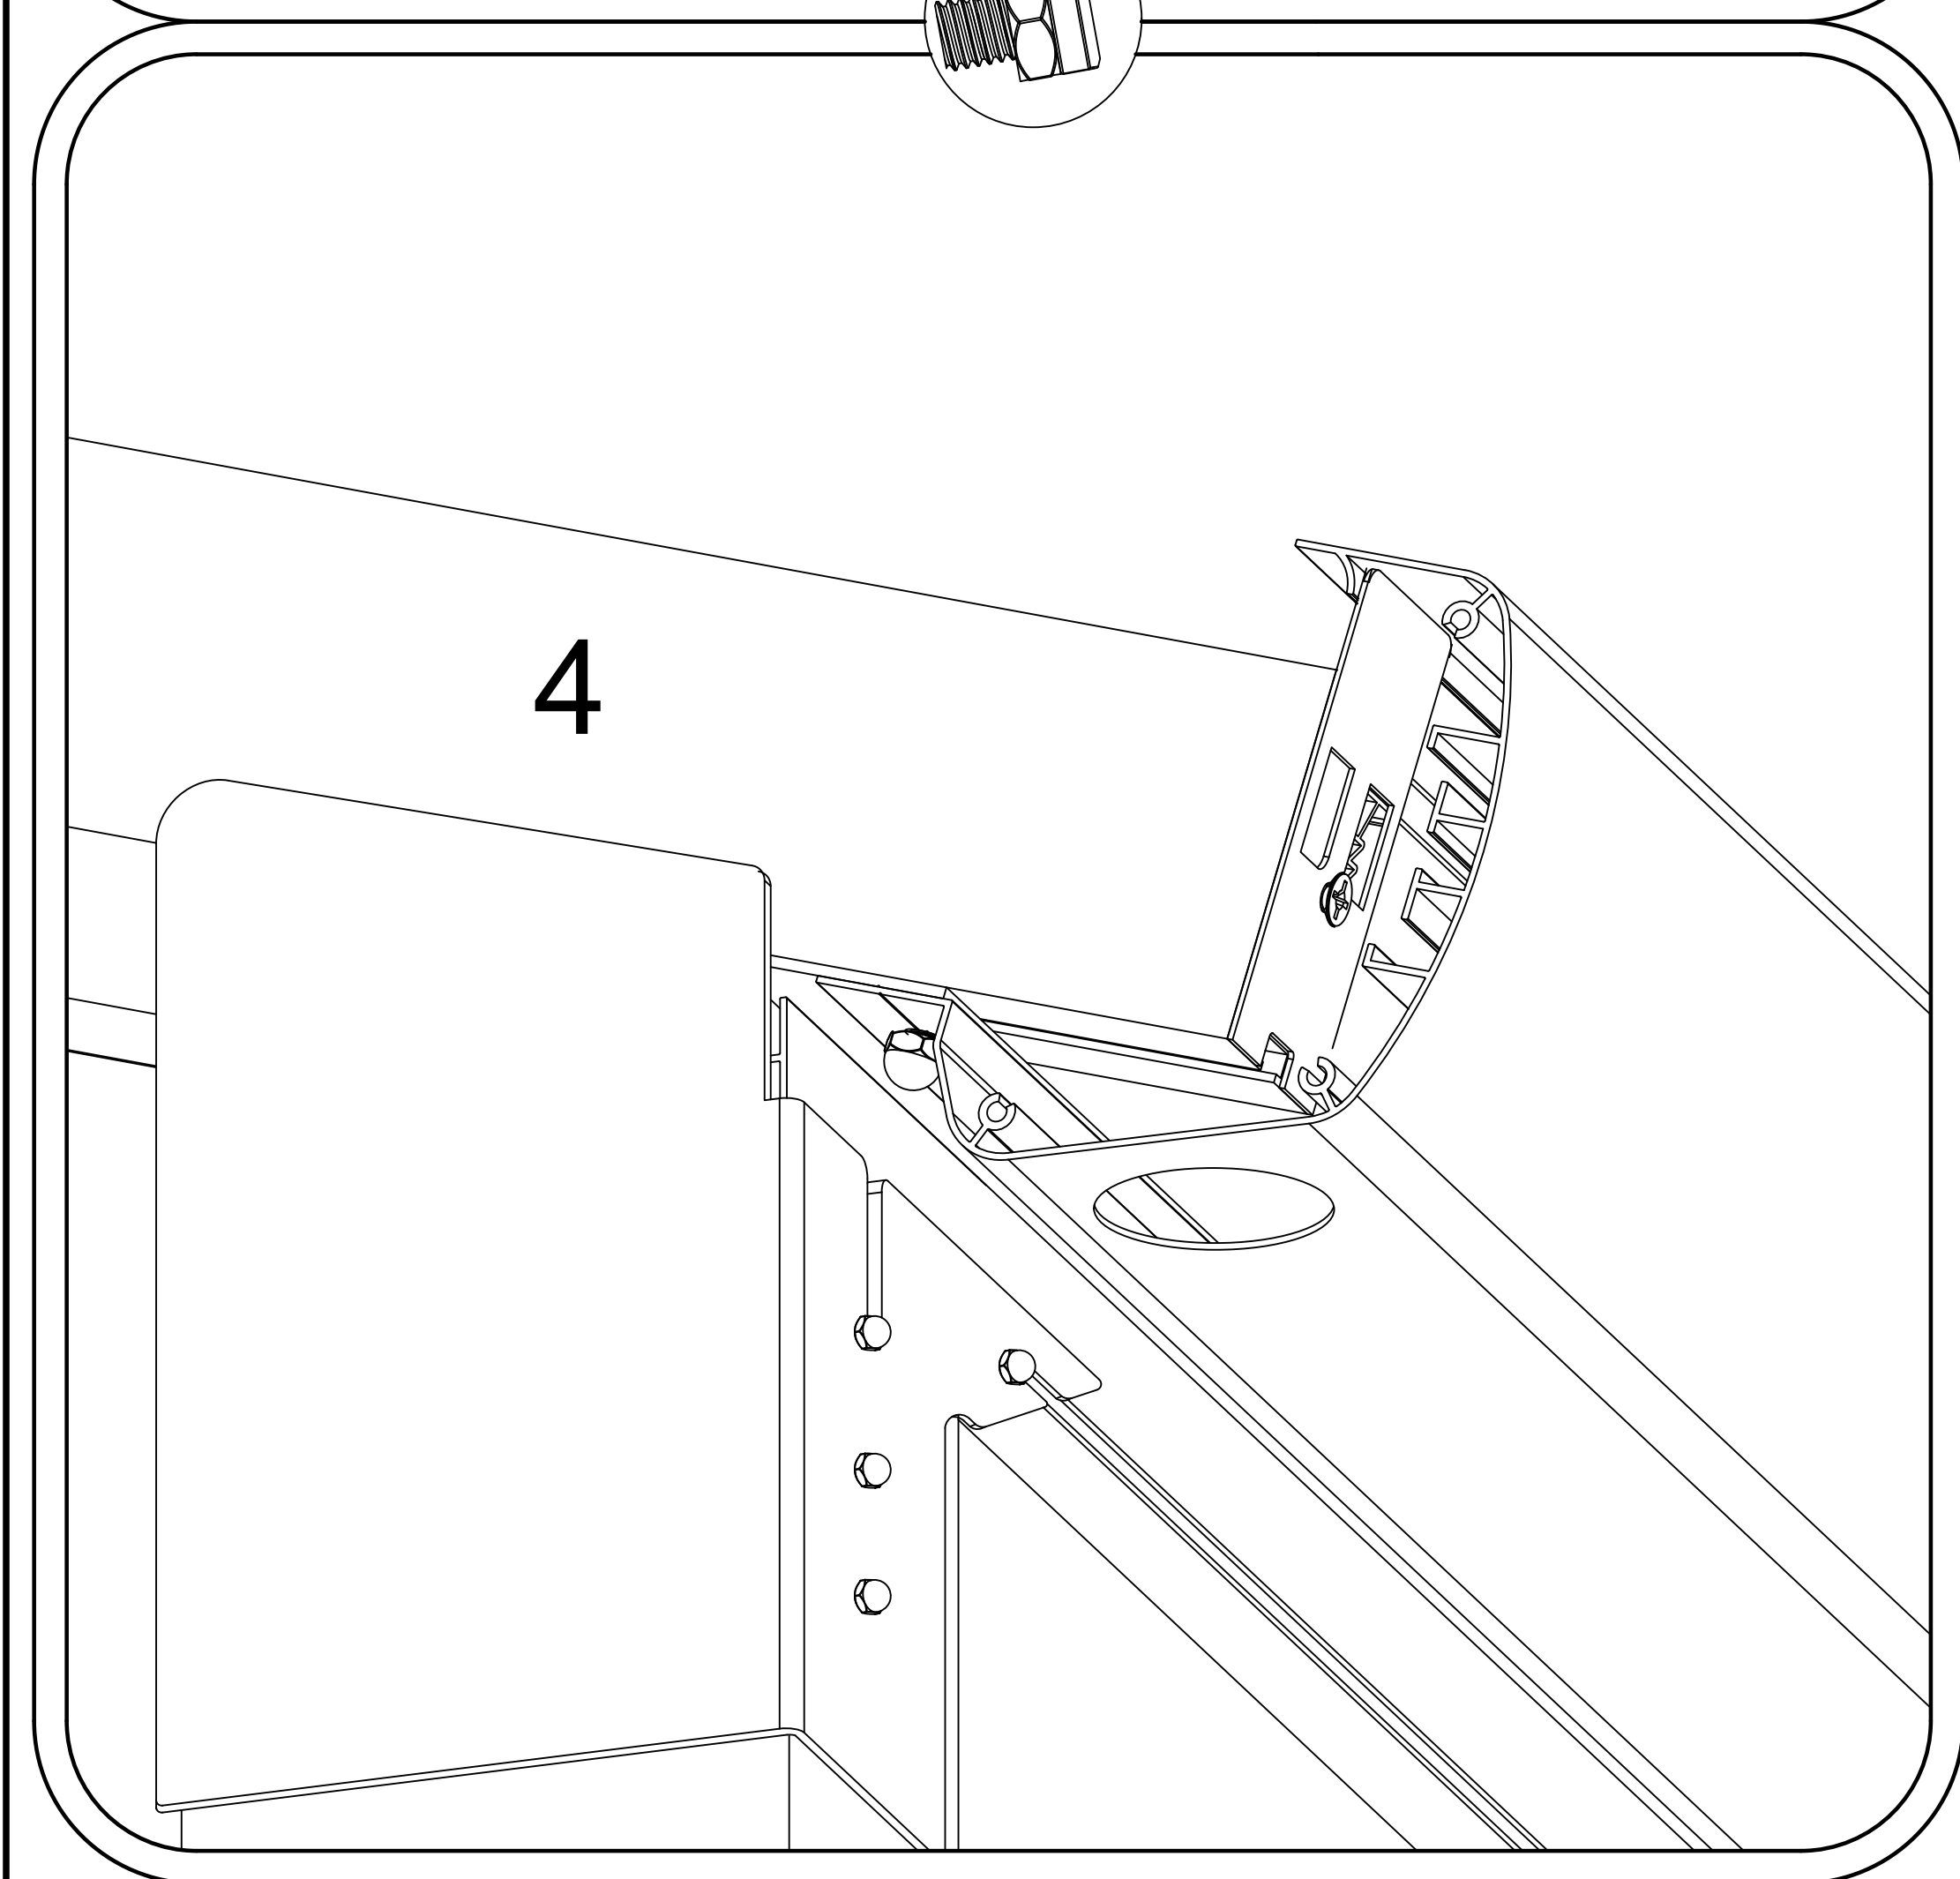


X2

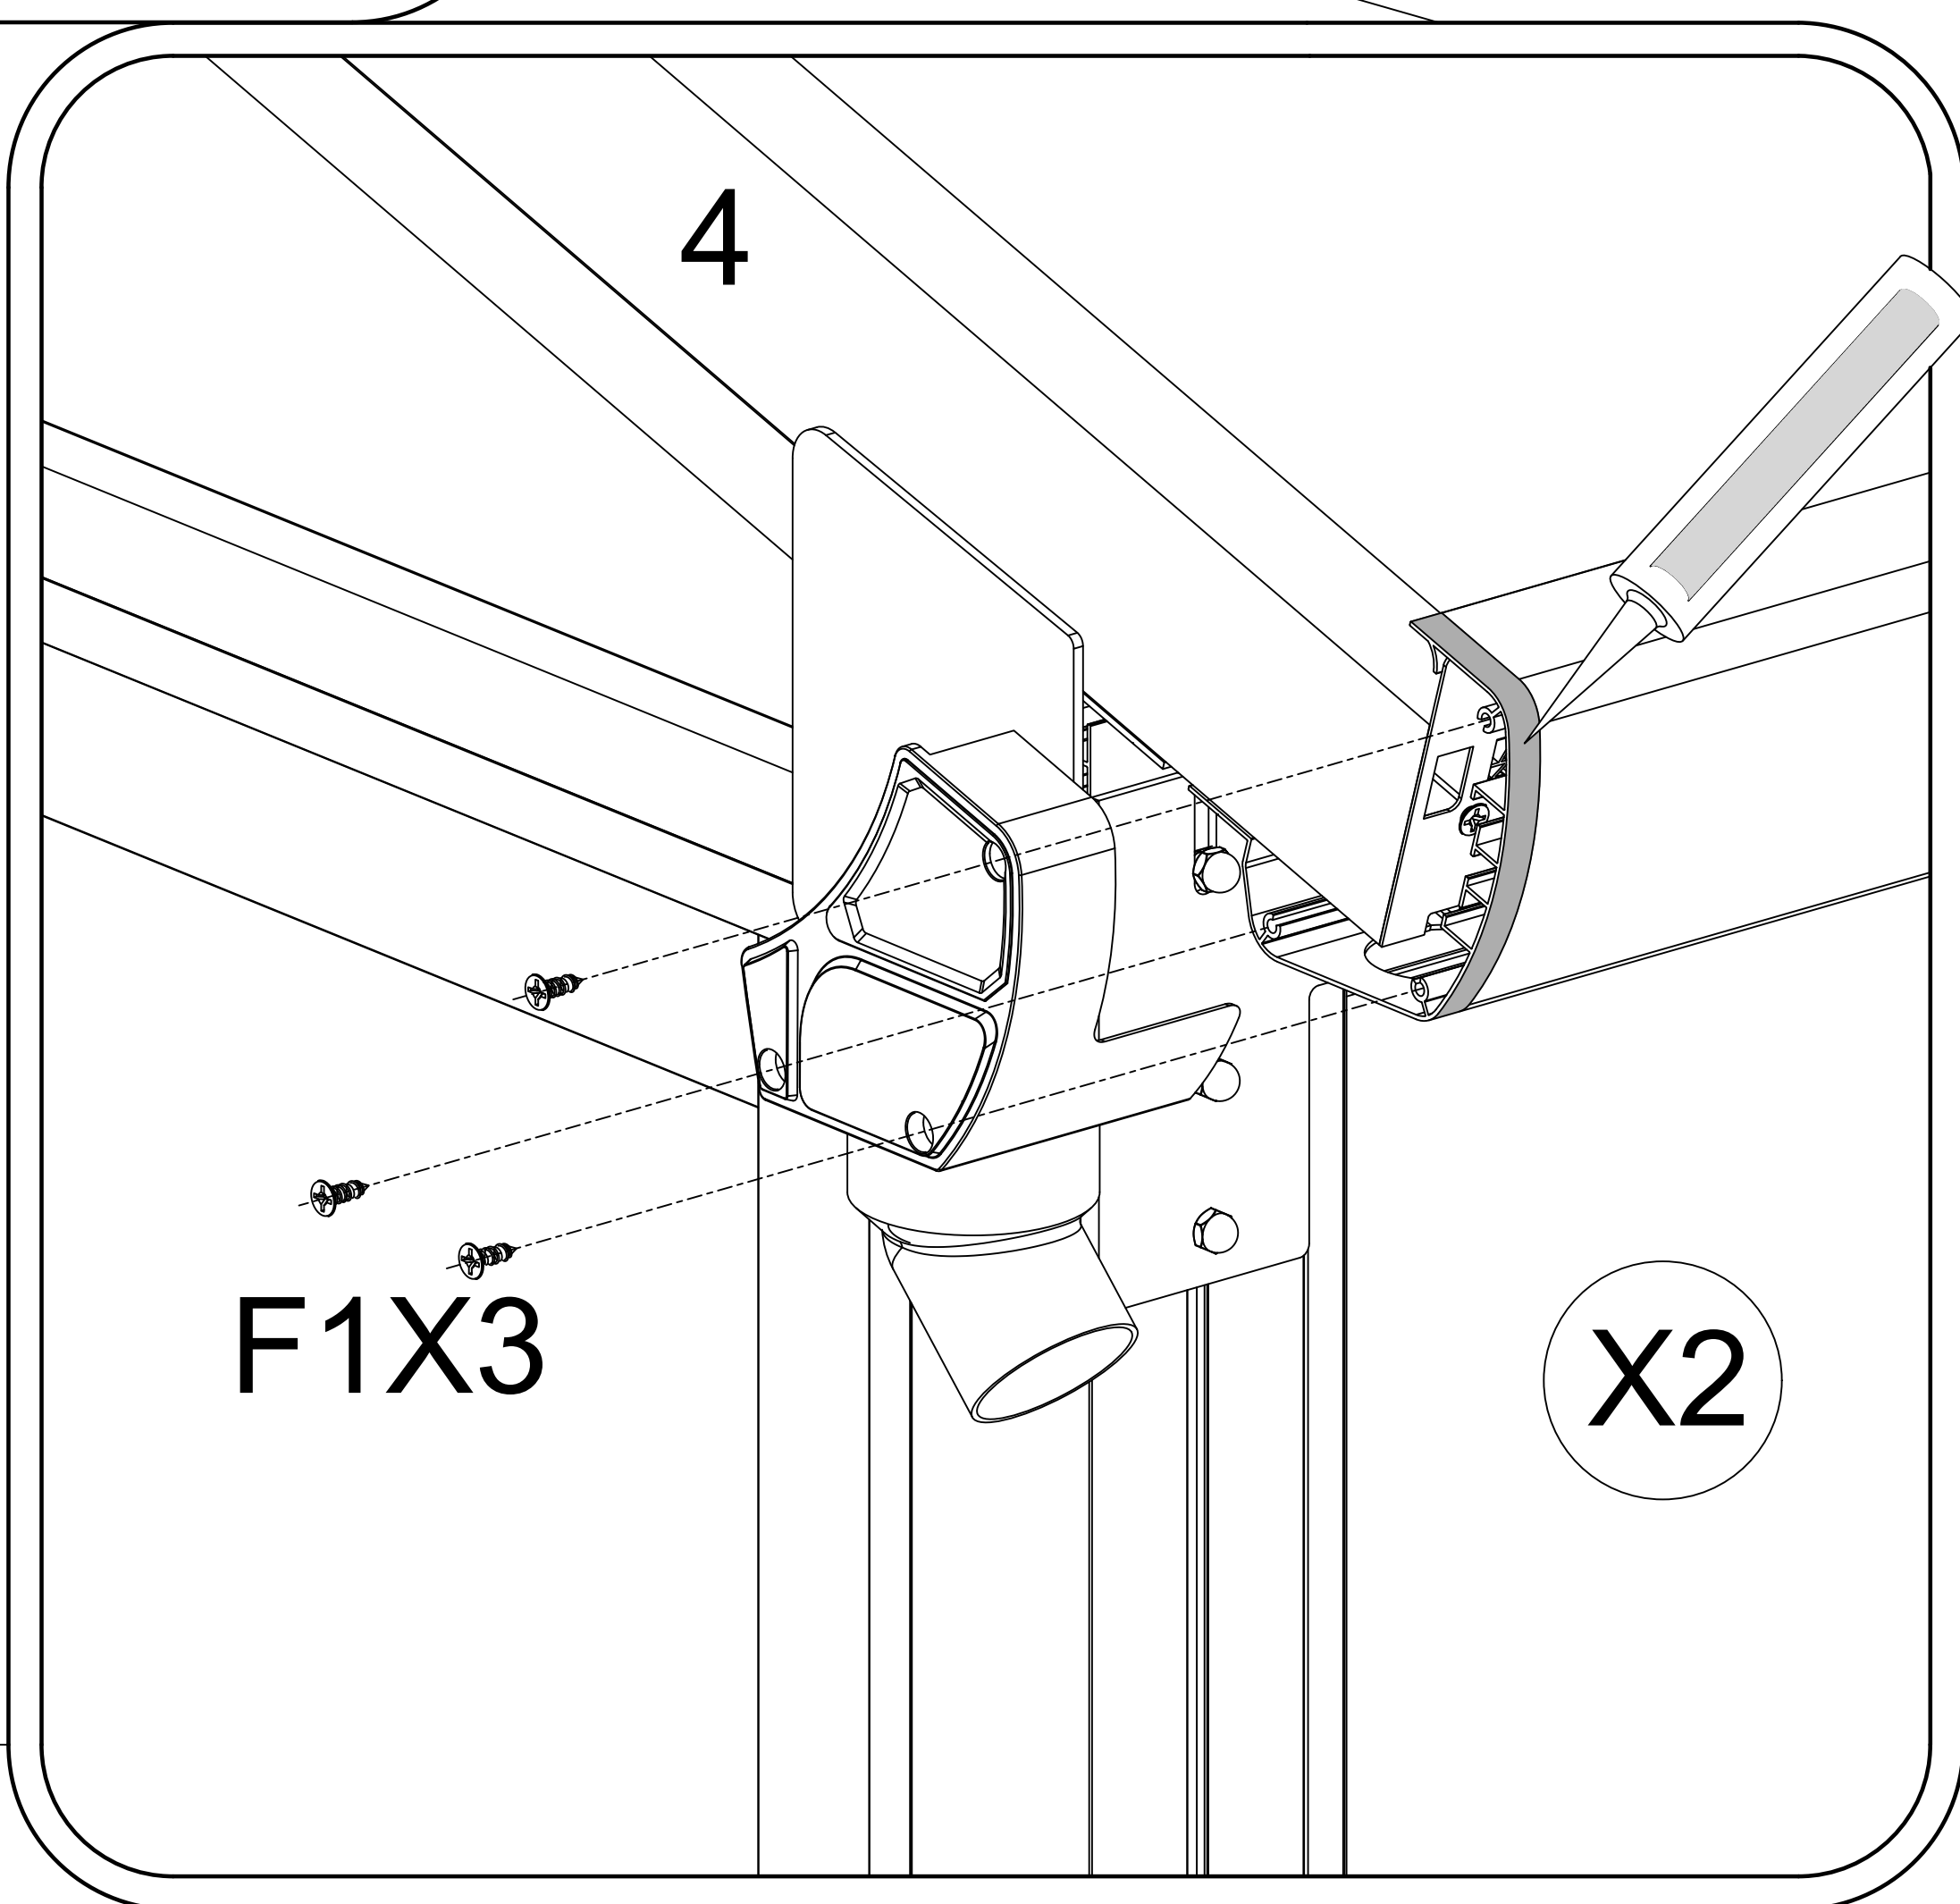


X2




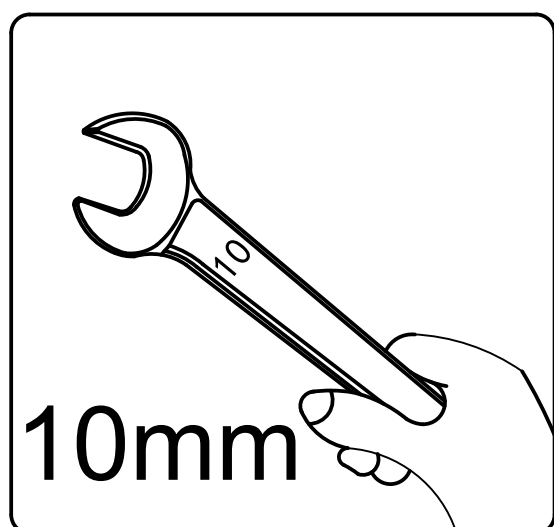
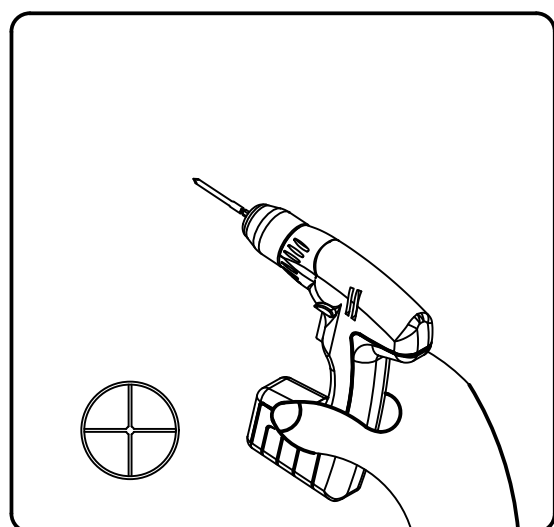
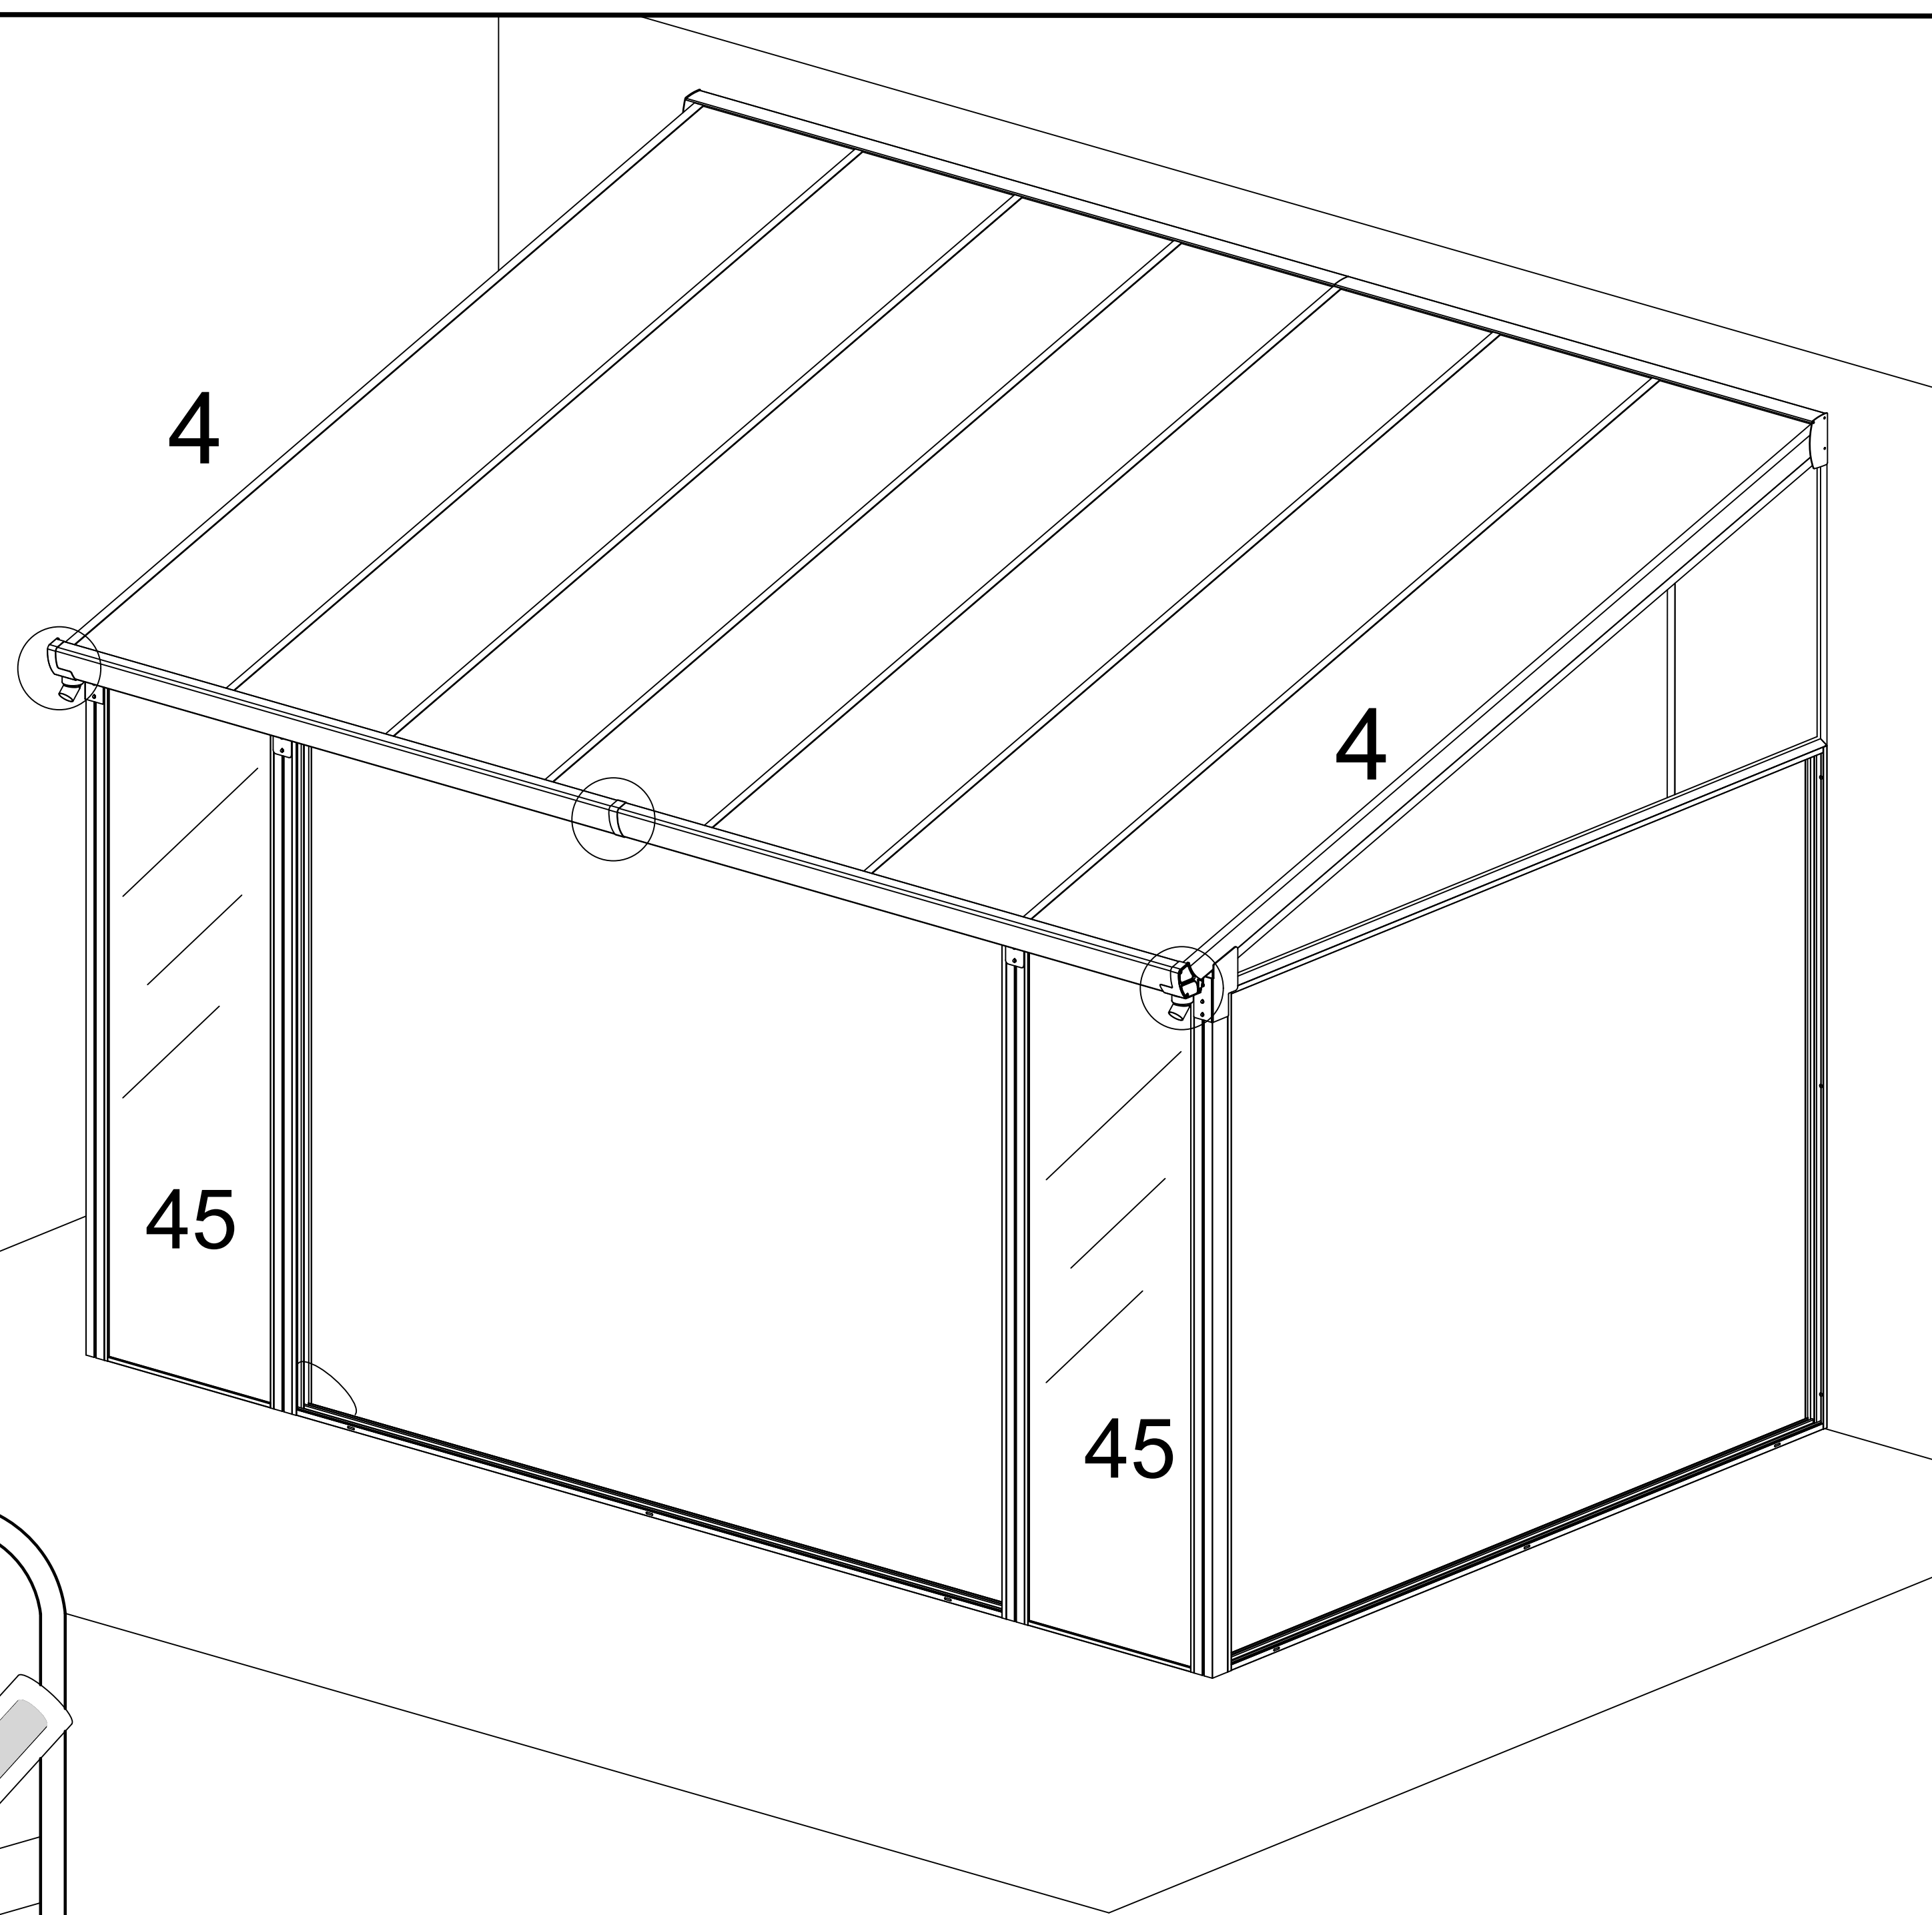



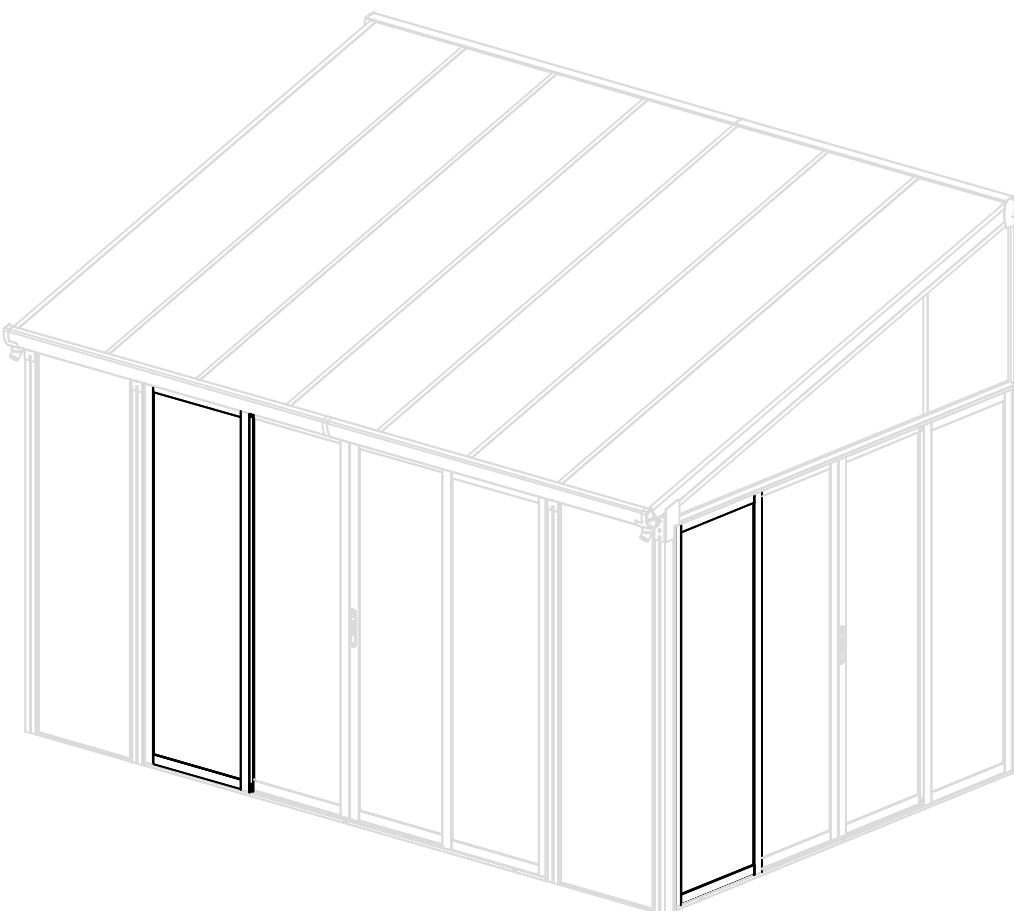


39 6 PCS

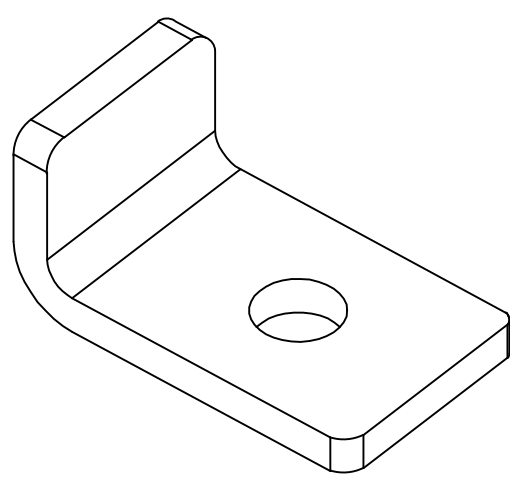



F4 6 PCS
ST4.2X20

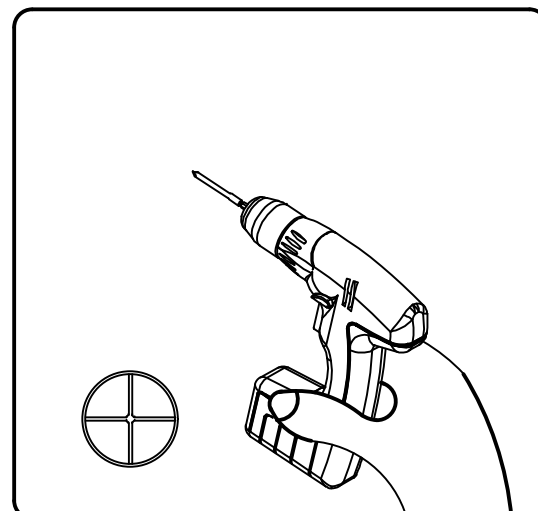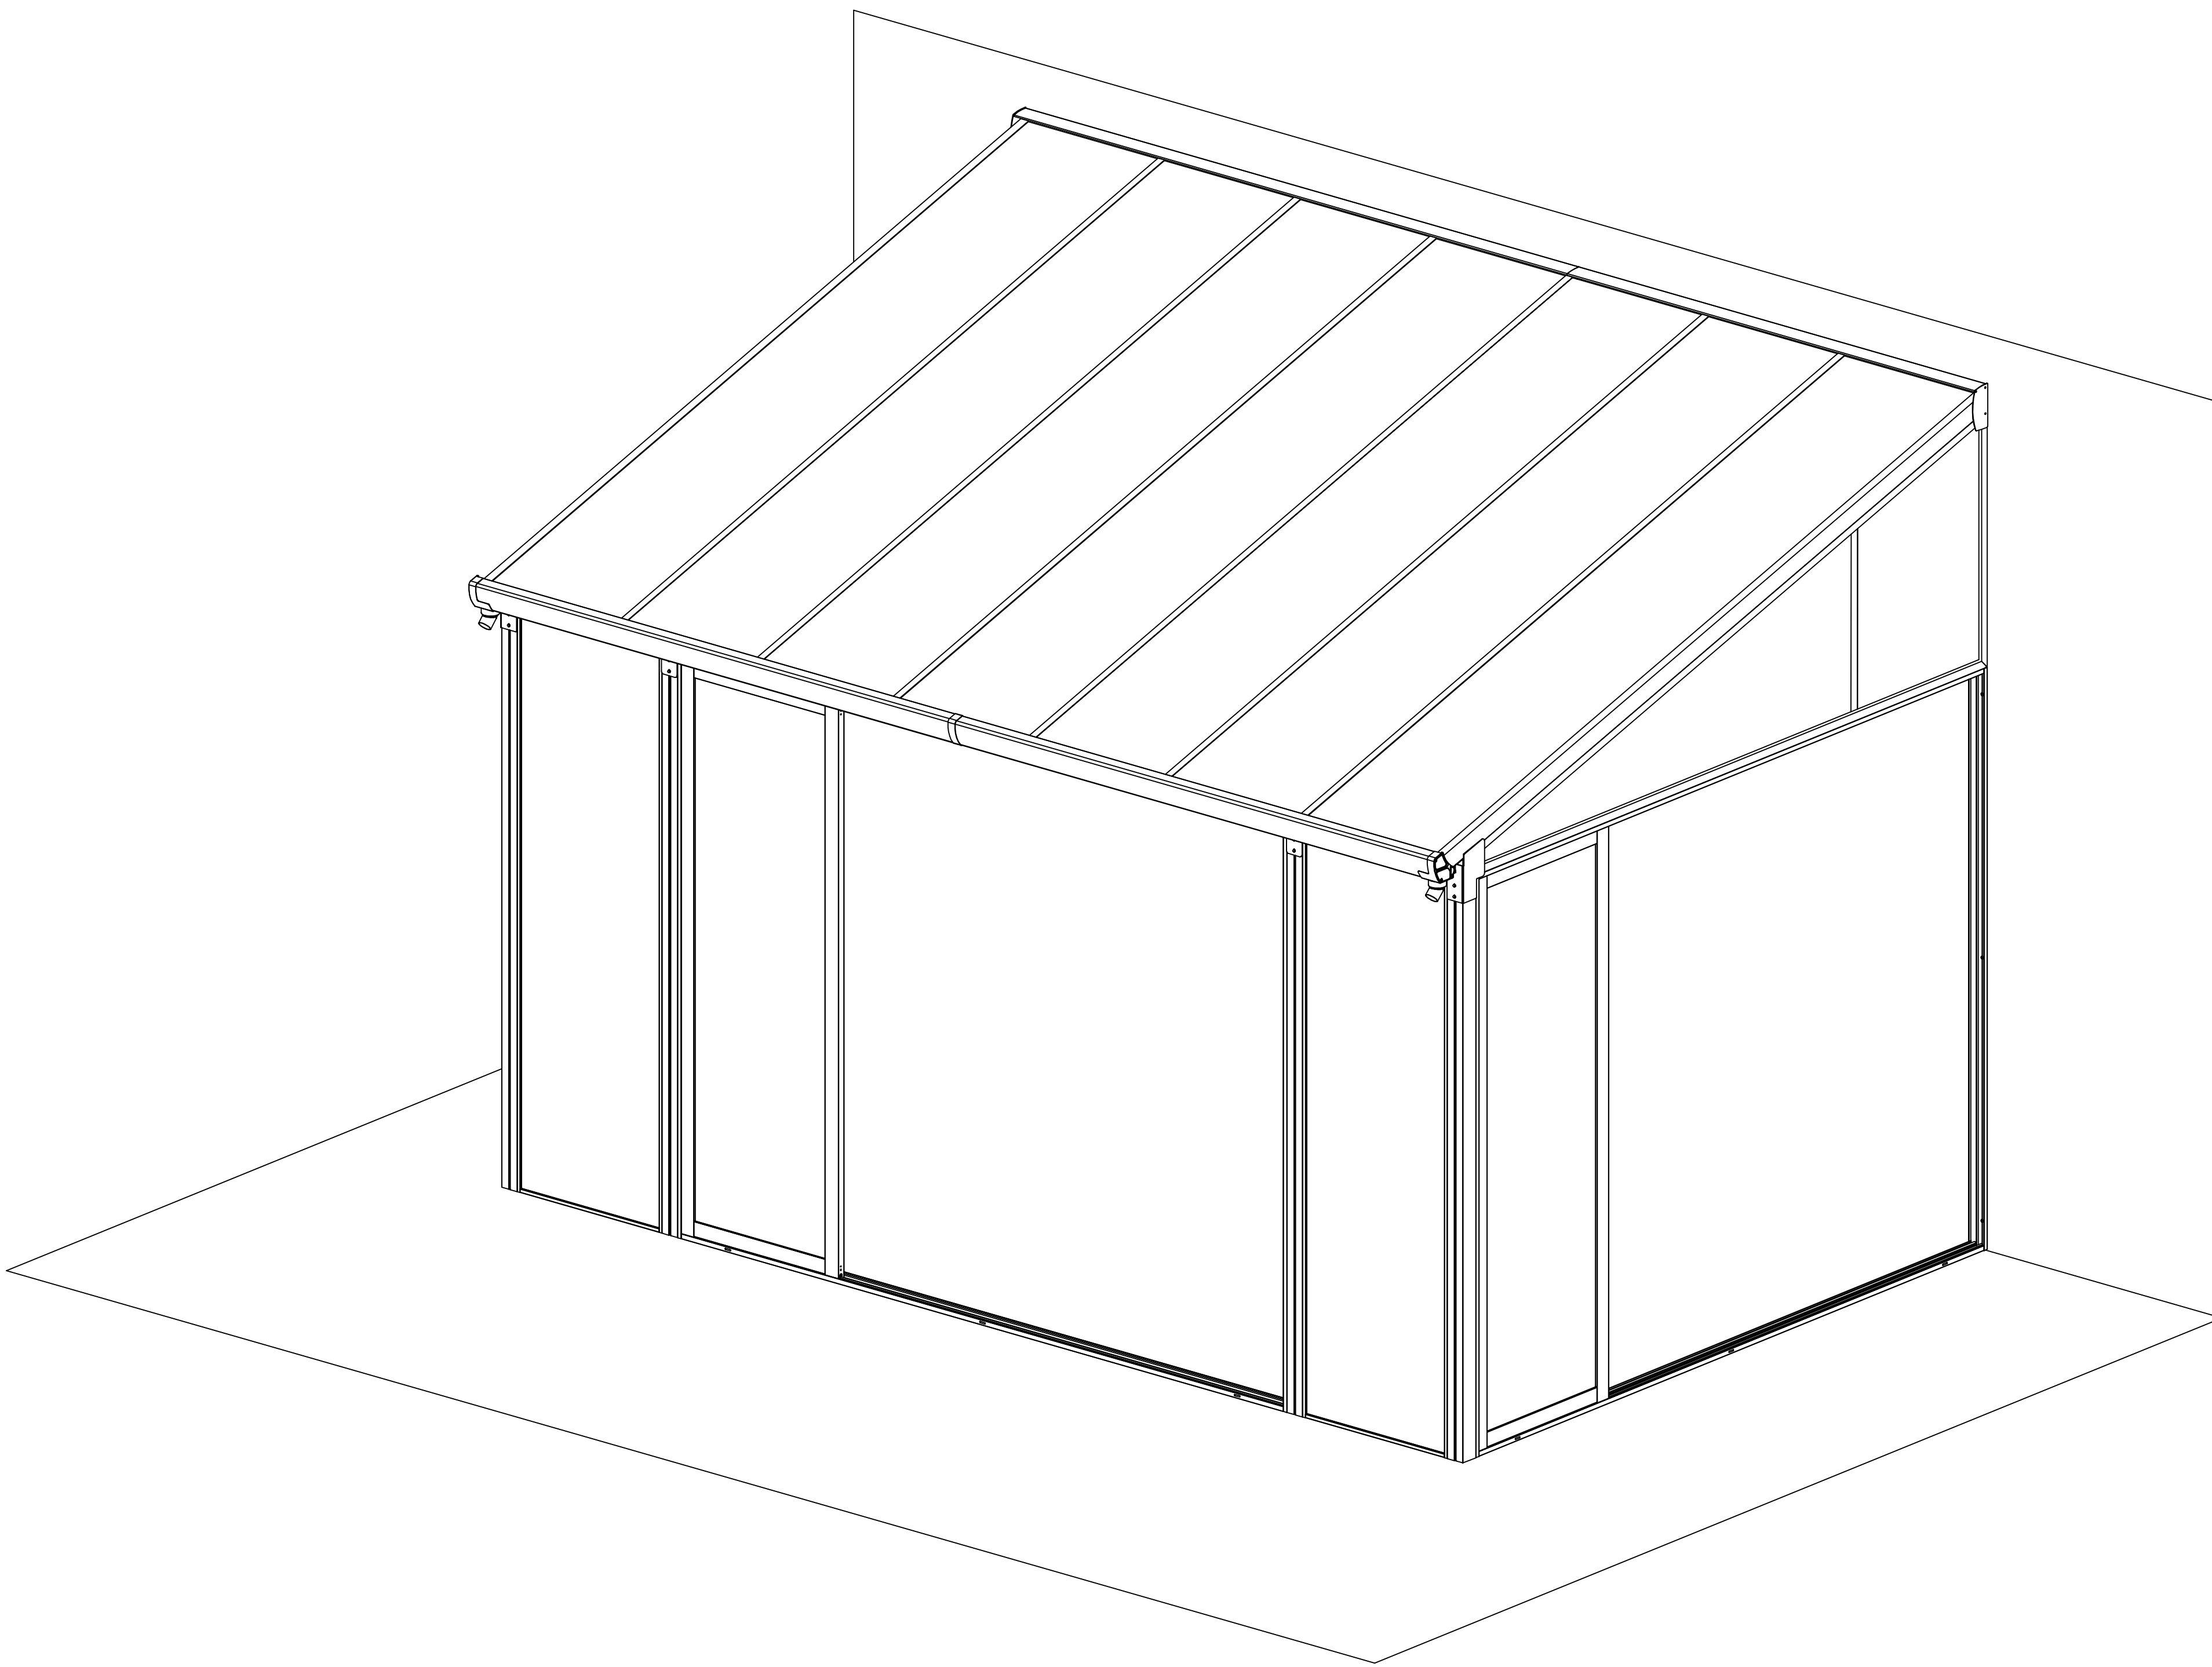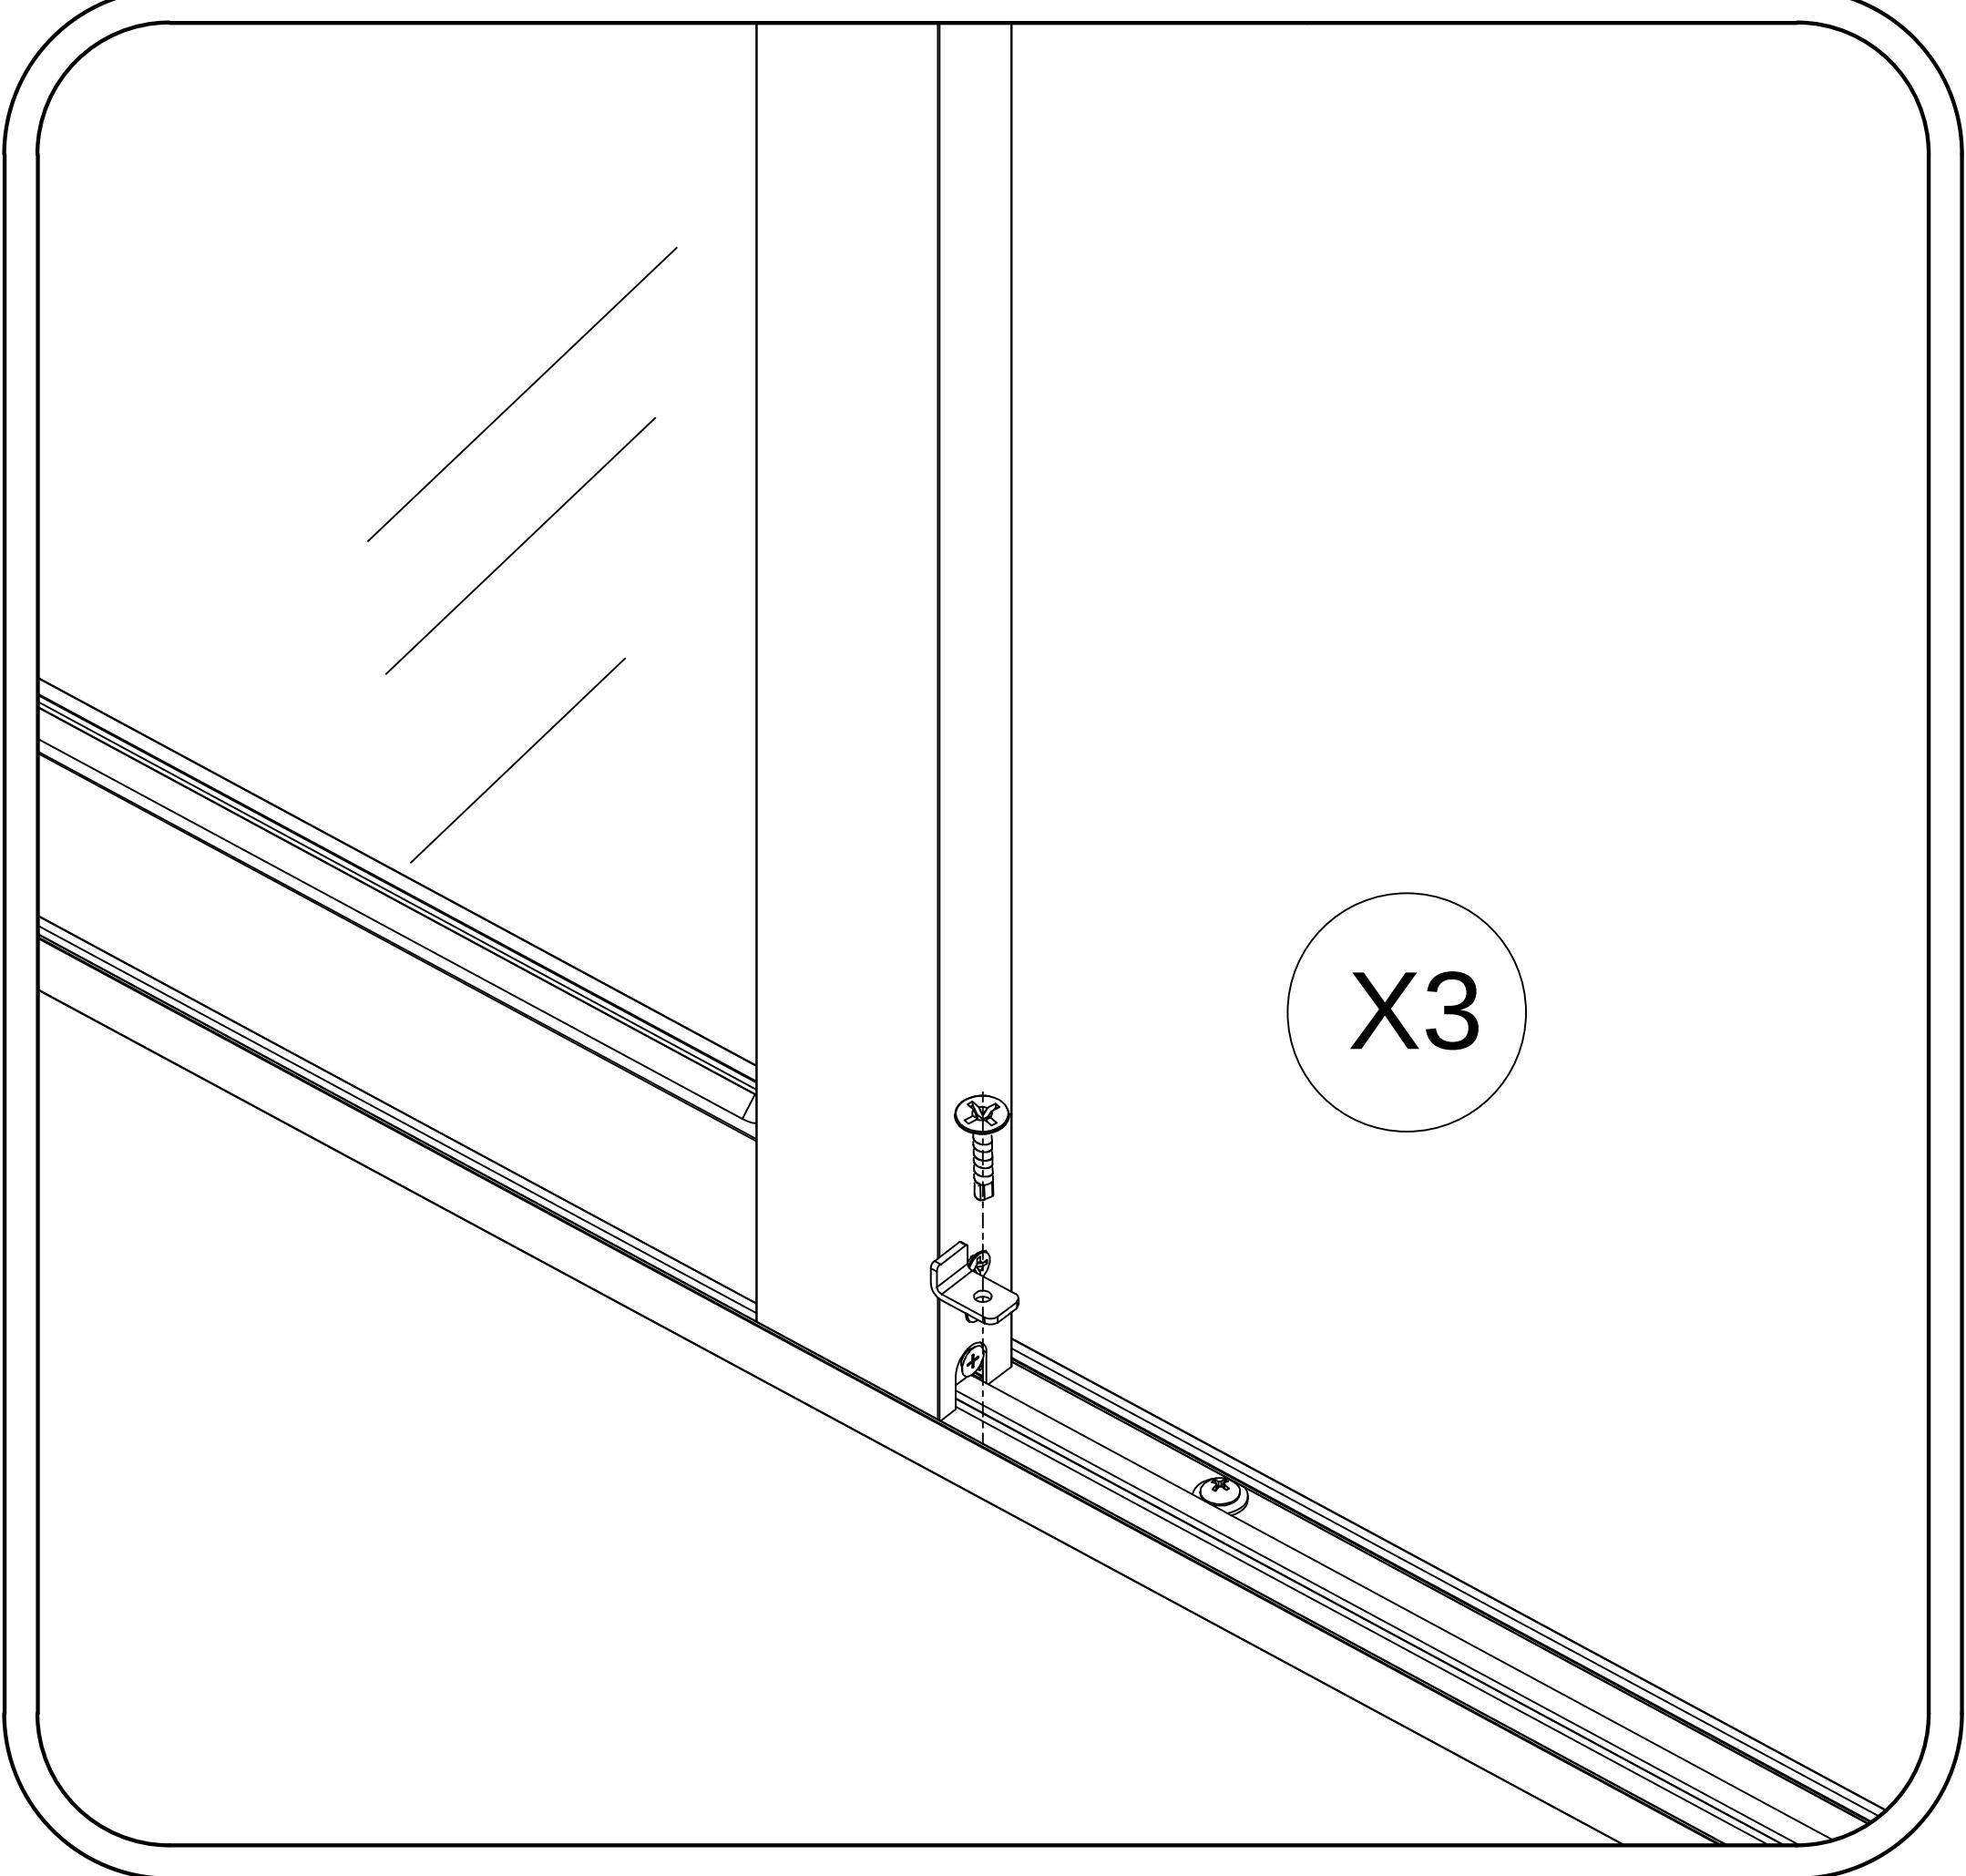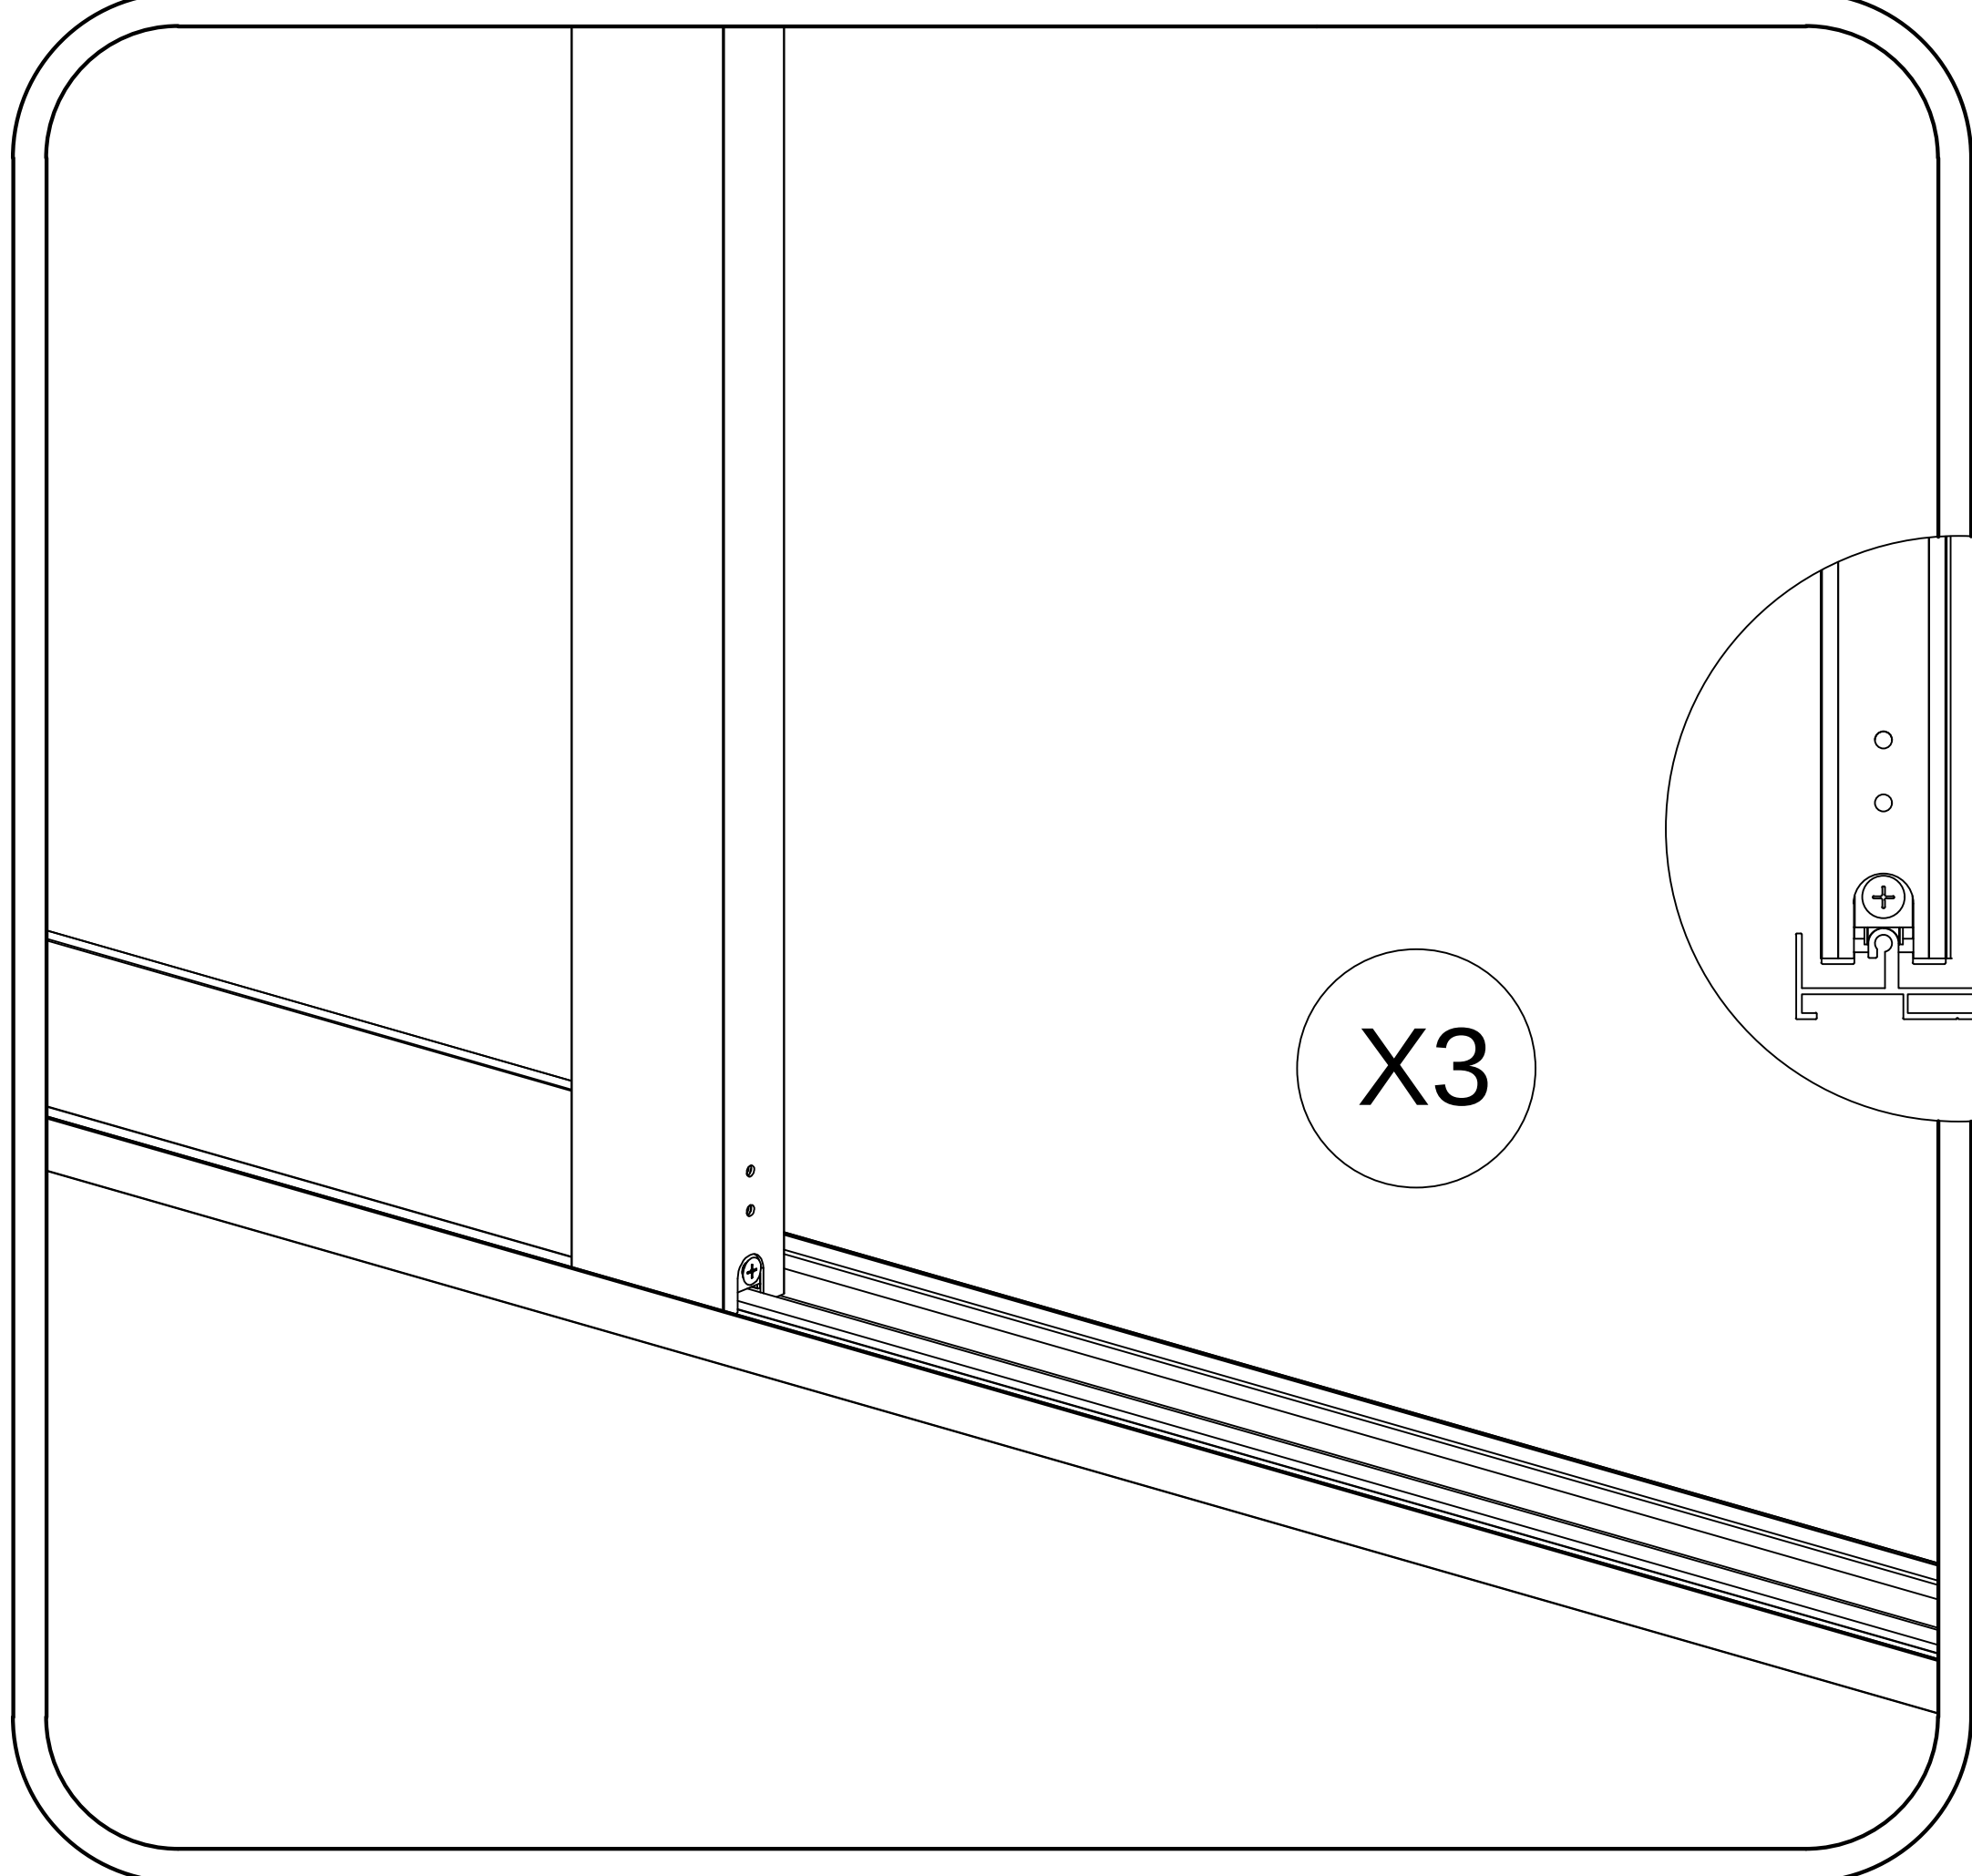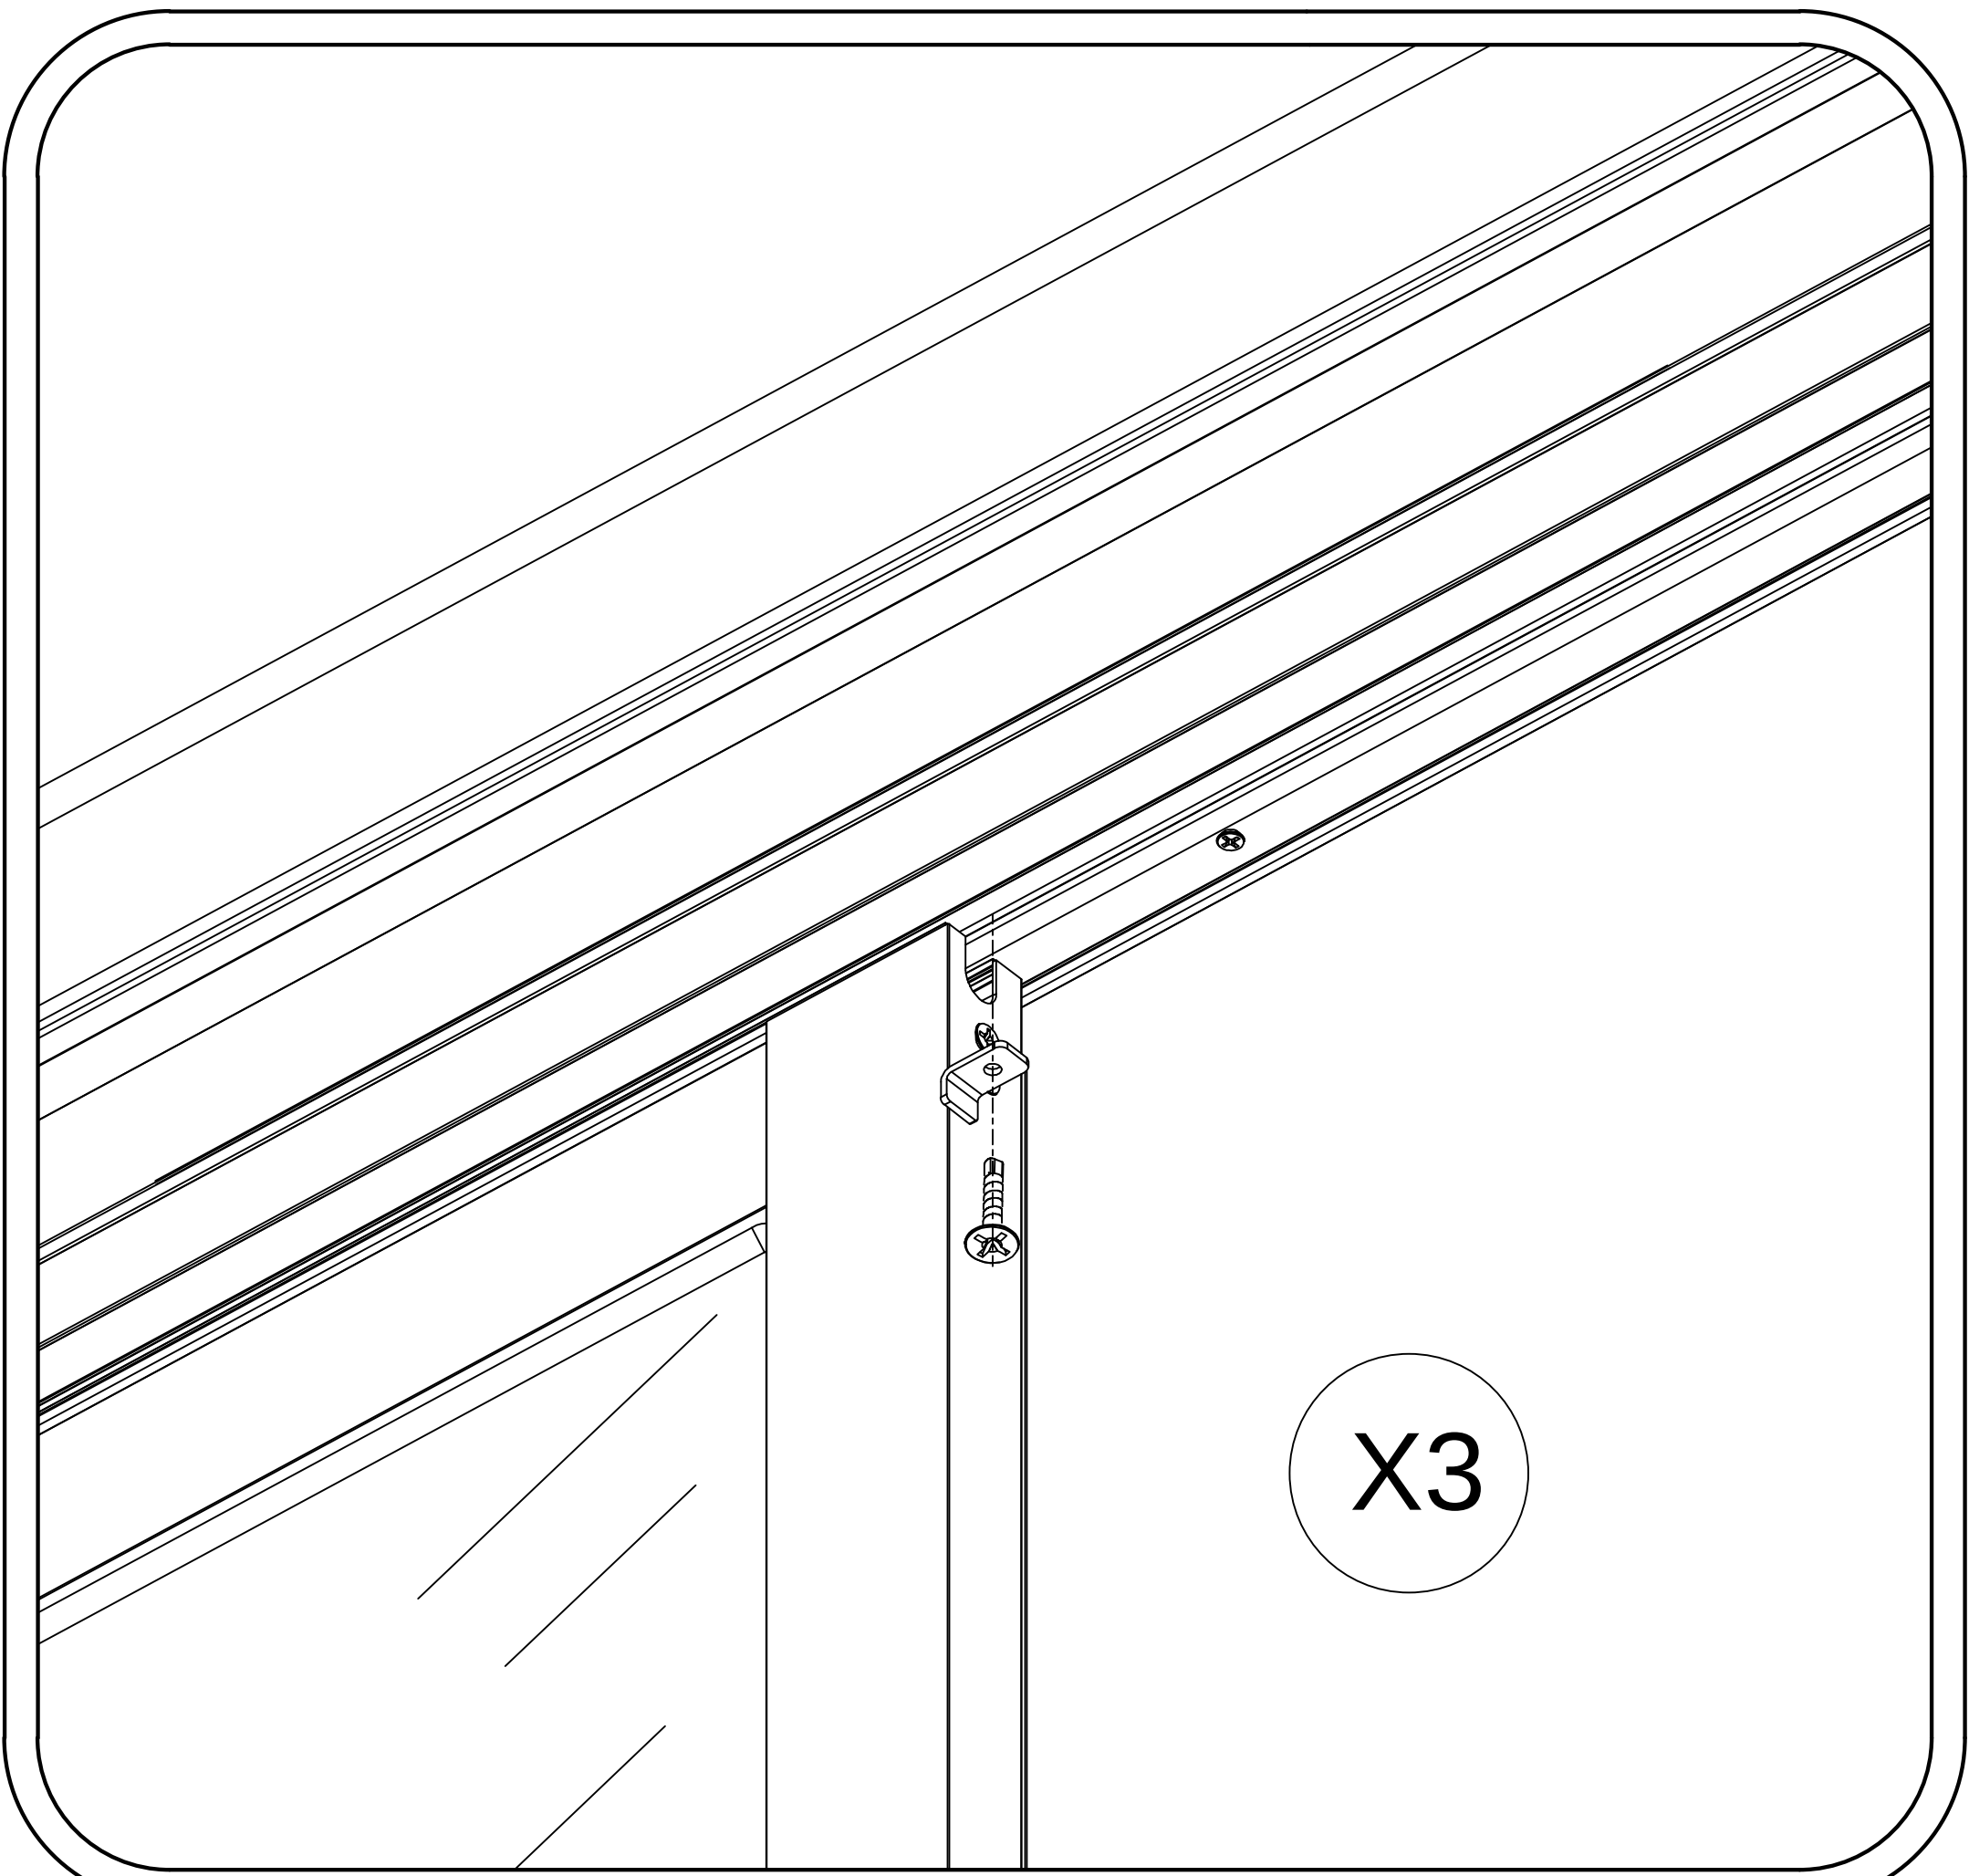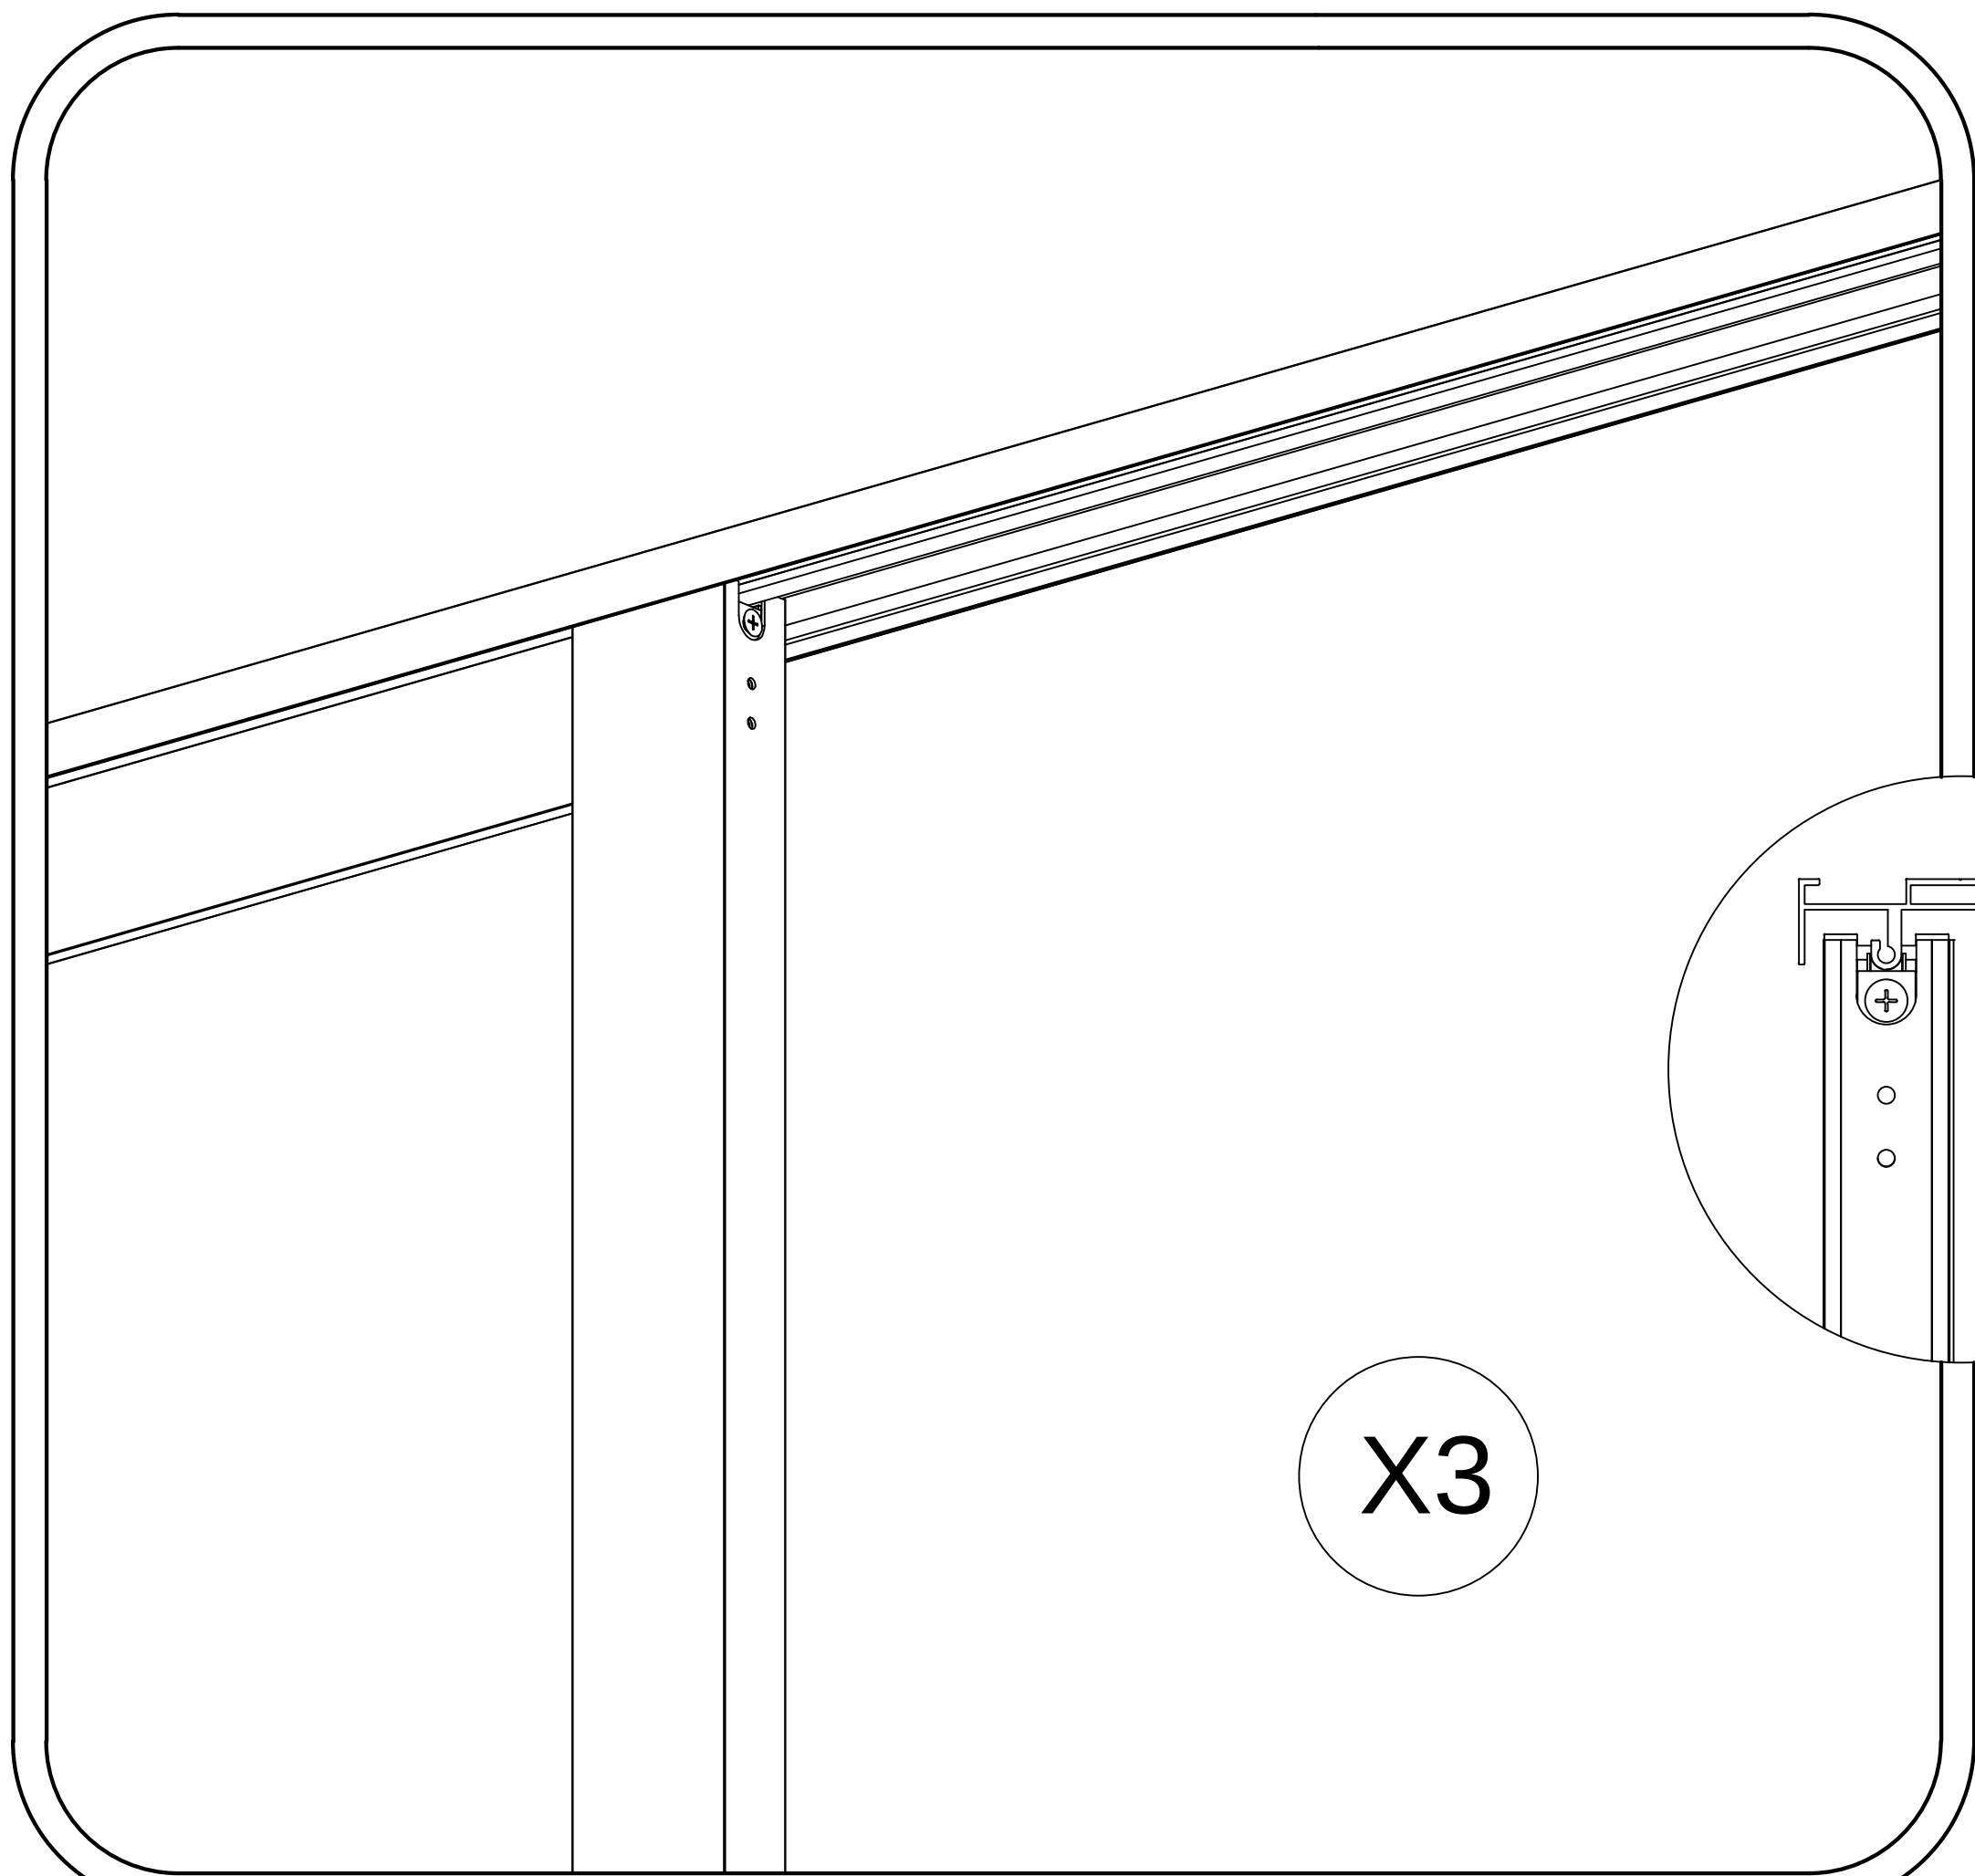

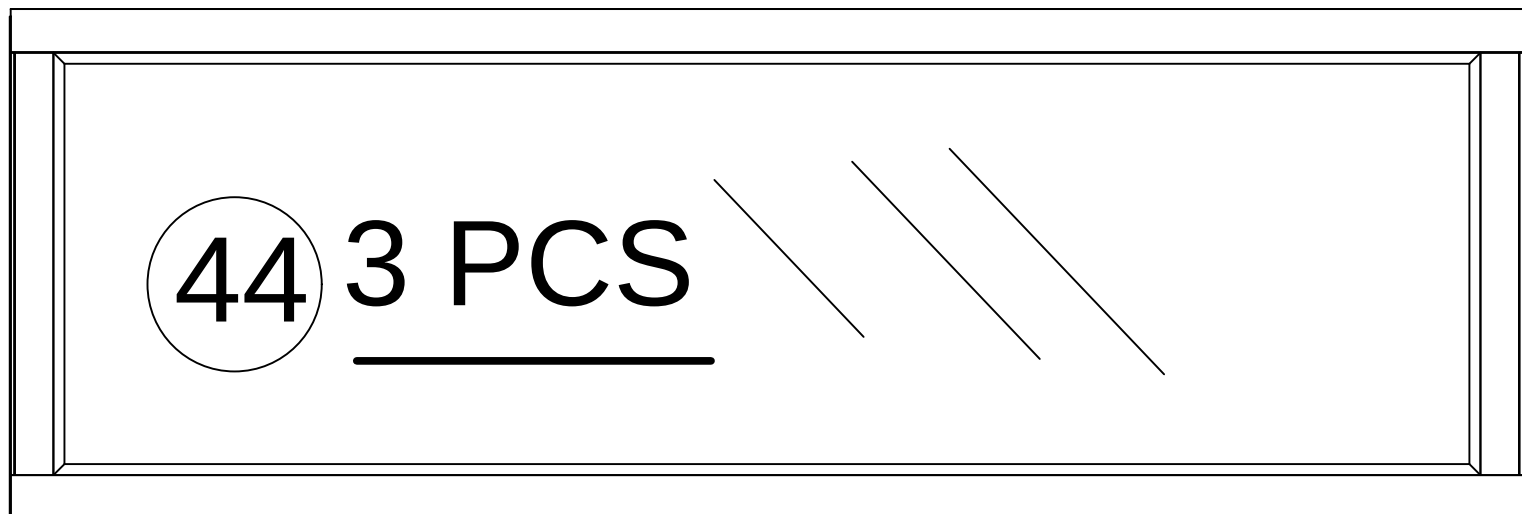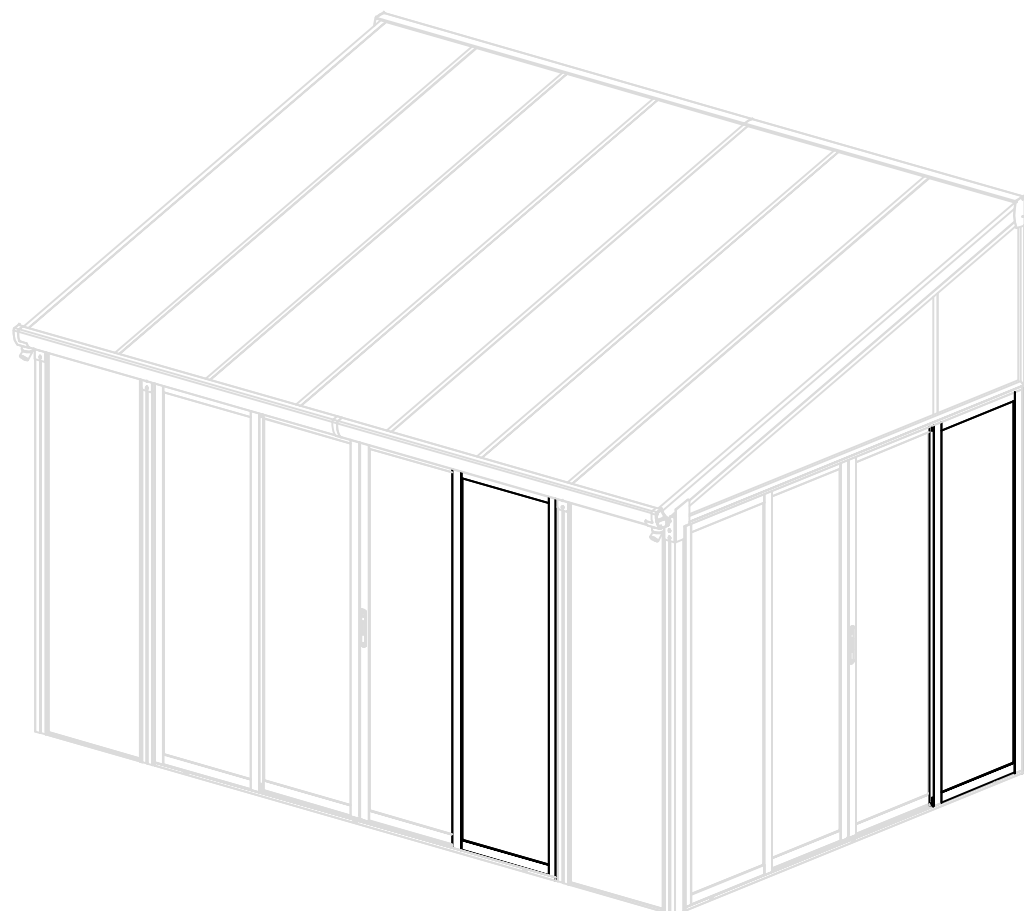




44 3 PCS

39 6 PCS

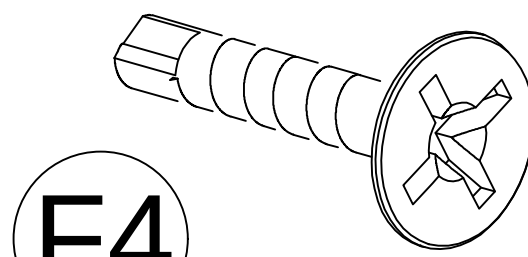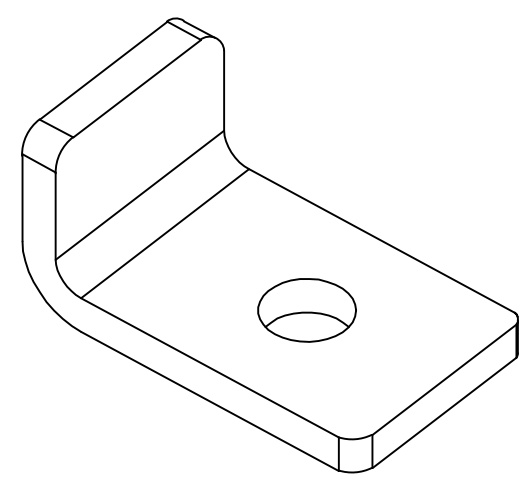


6 PCS


ST4.2X20

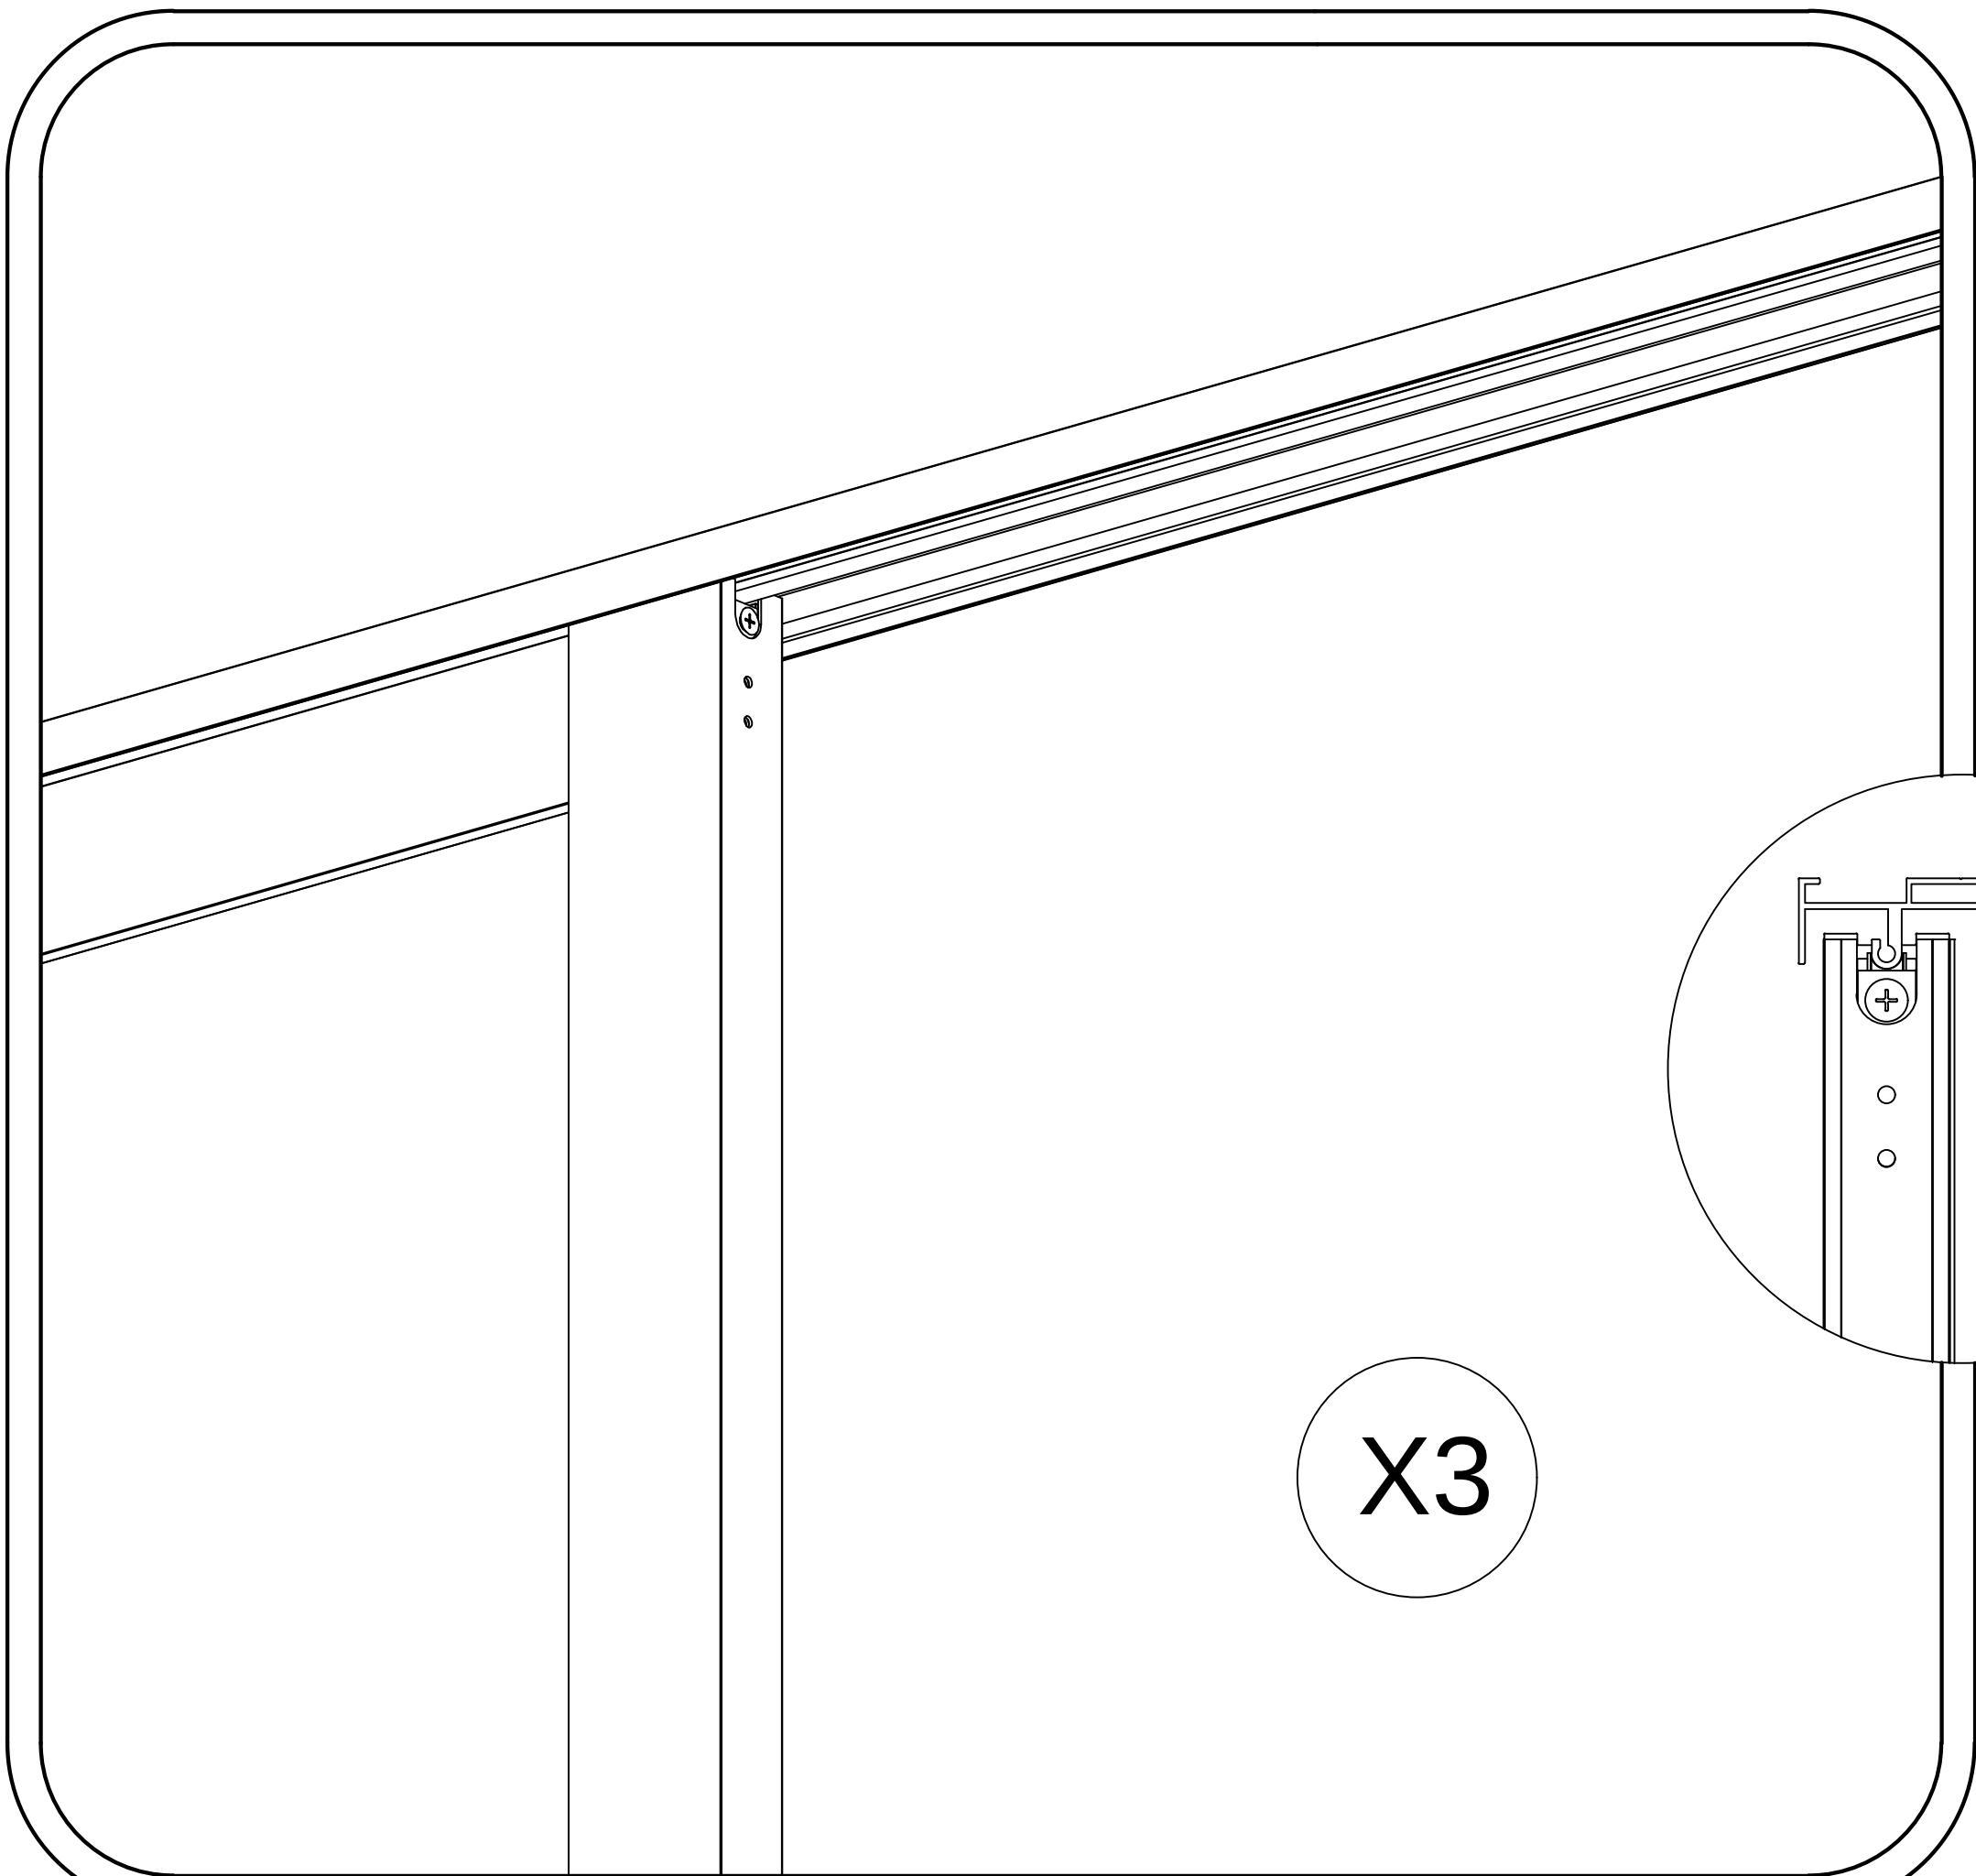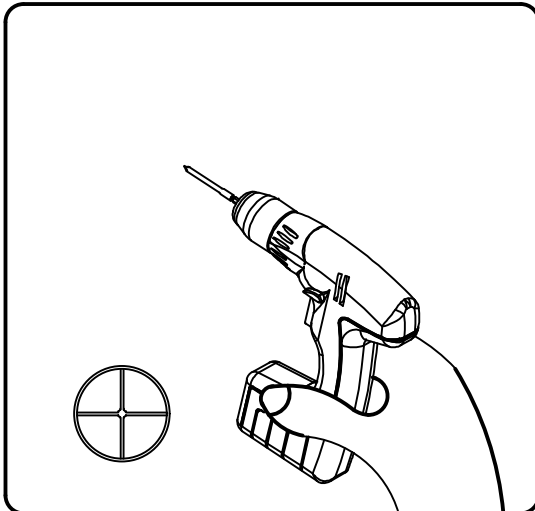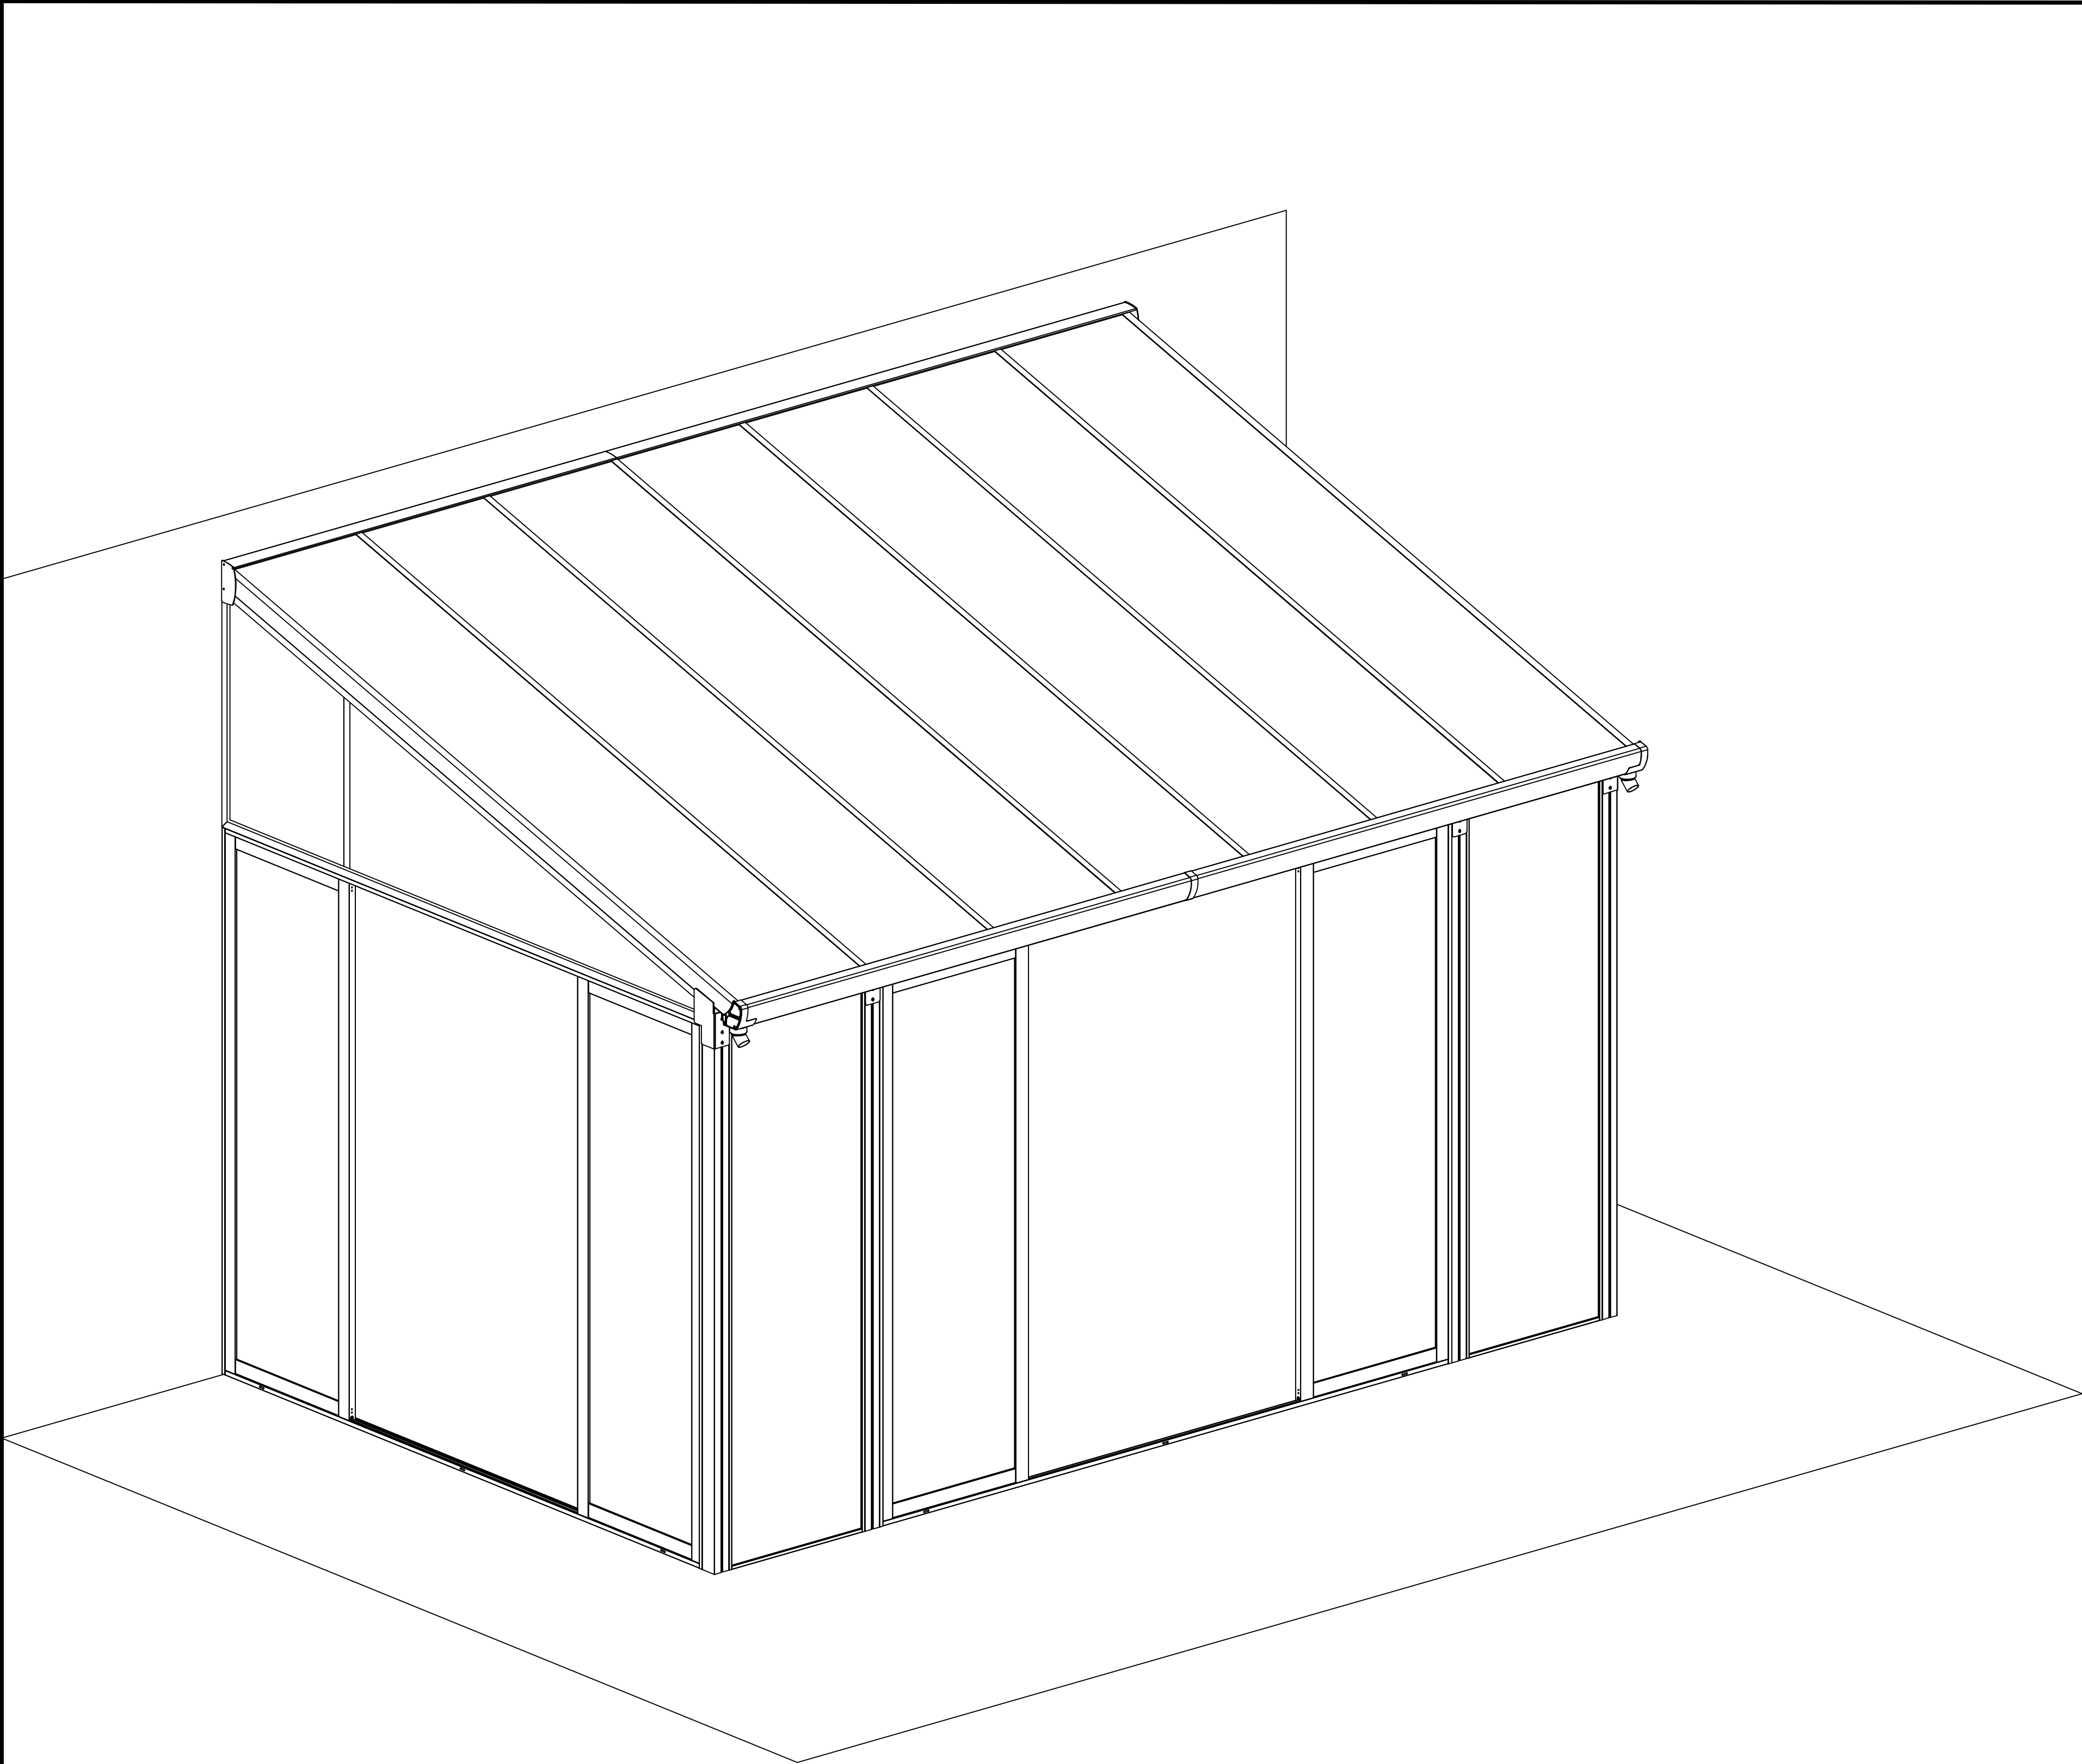

X3

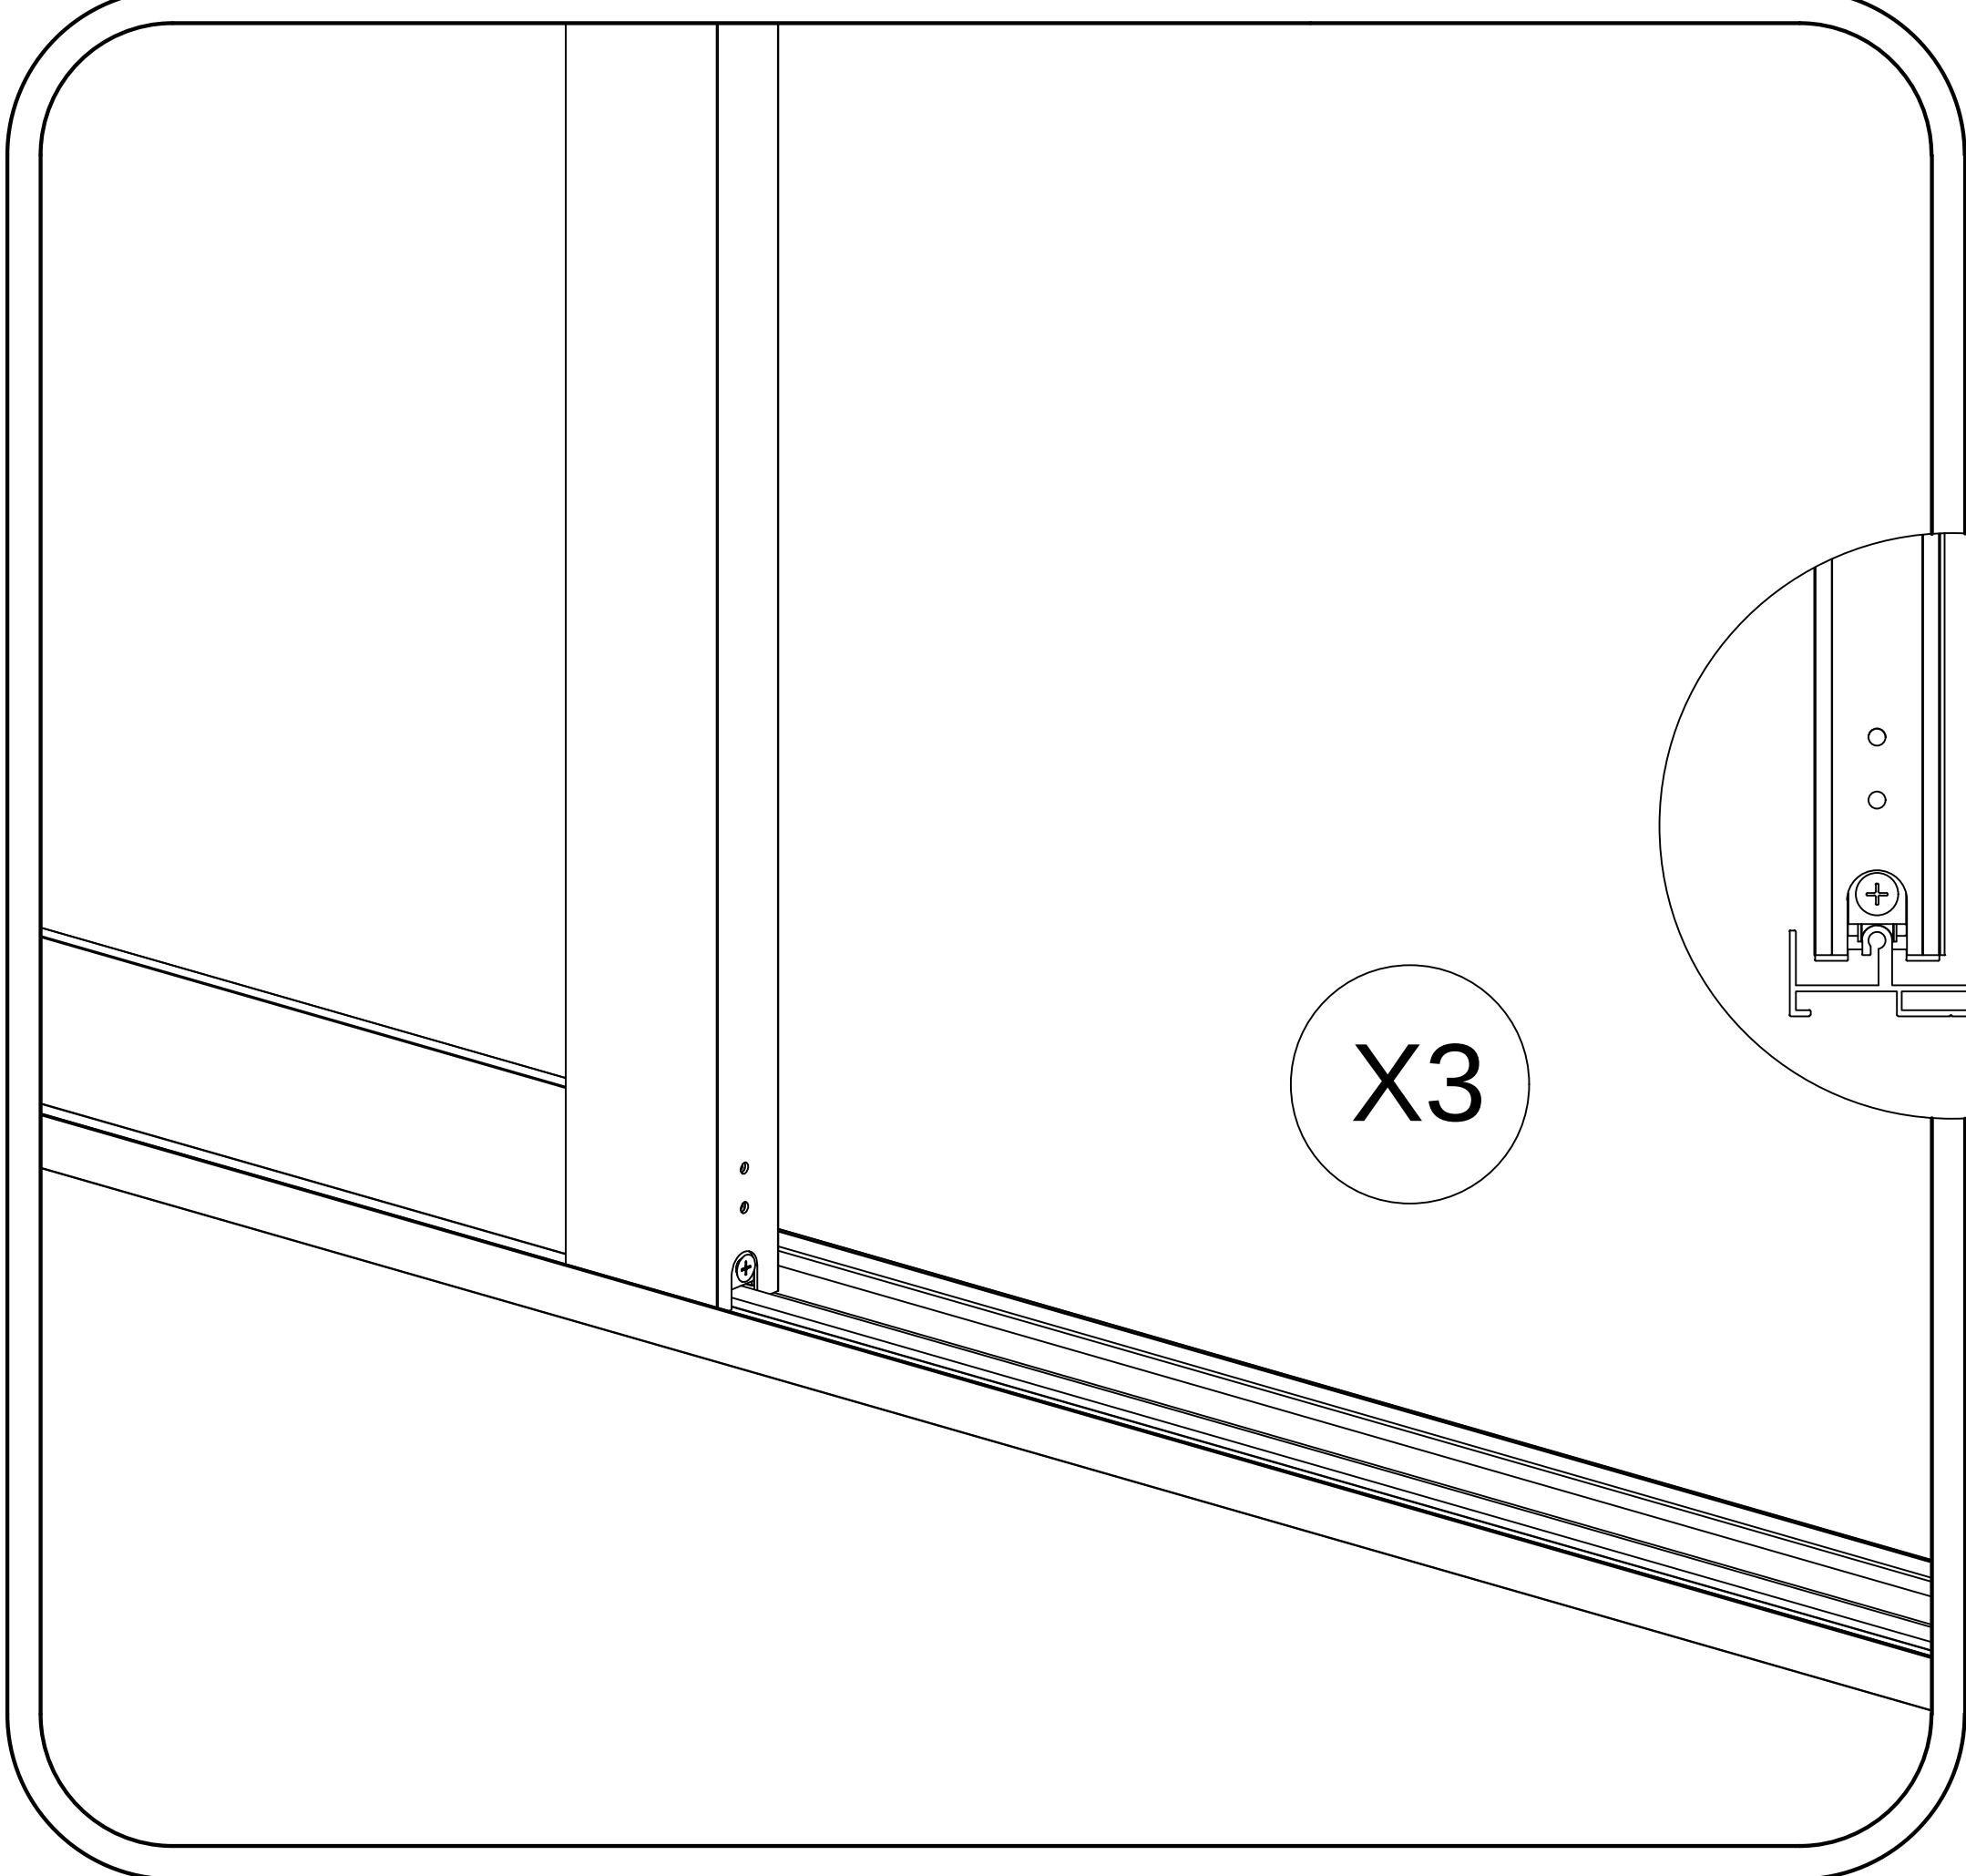


X3

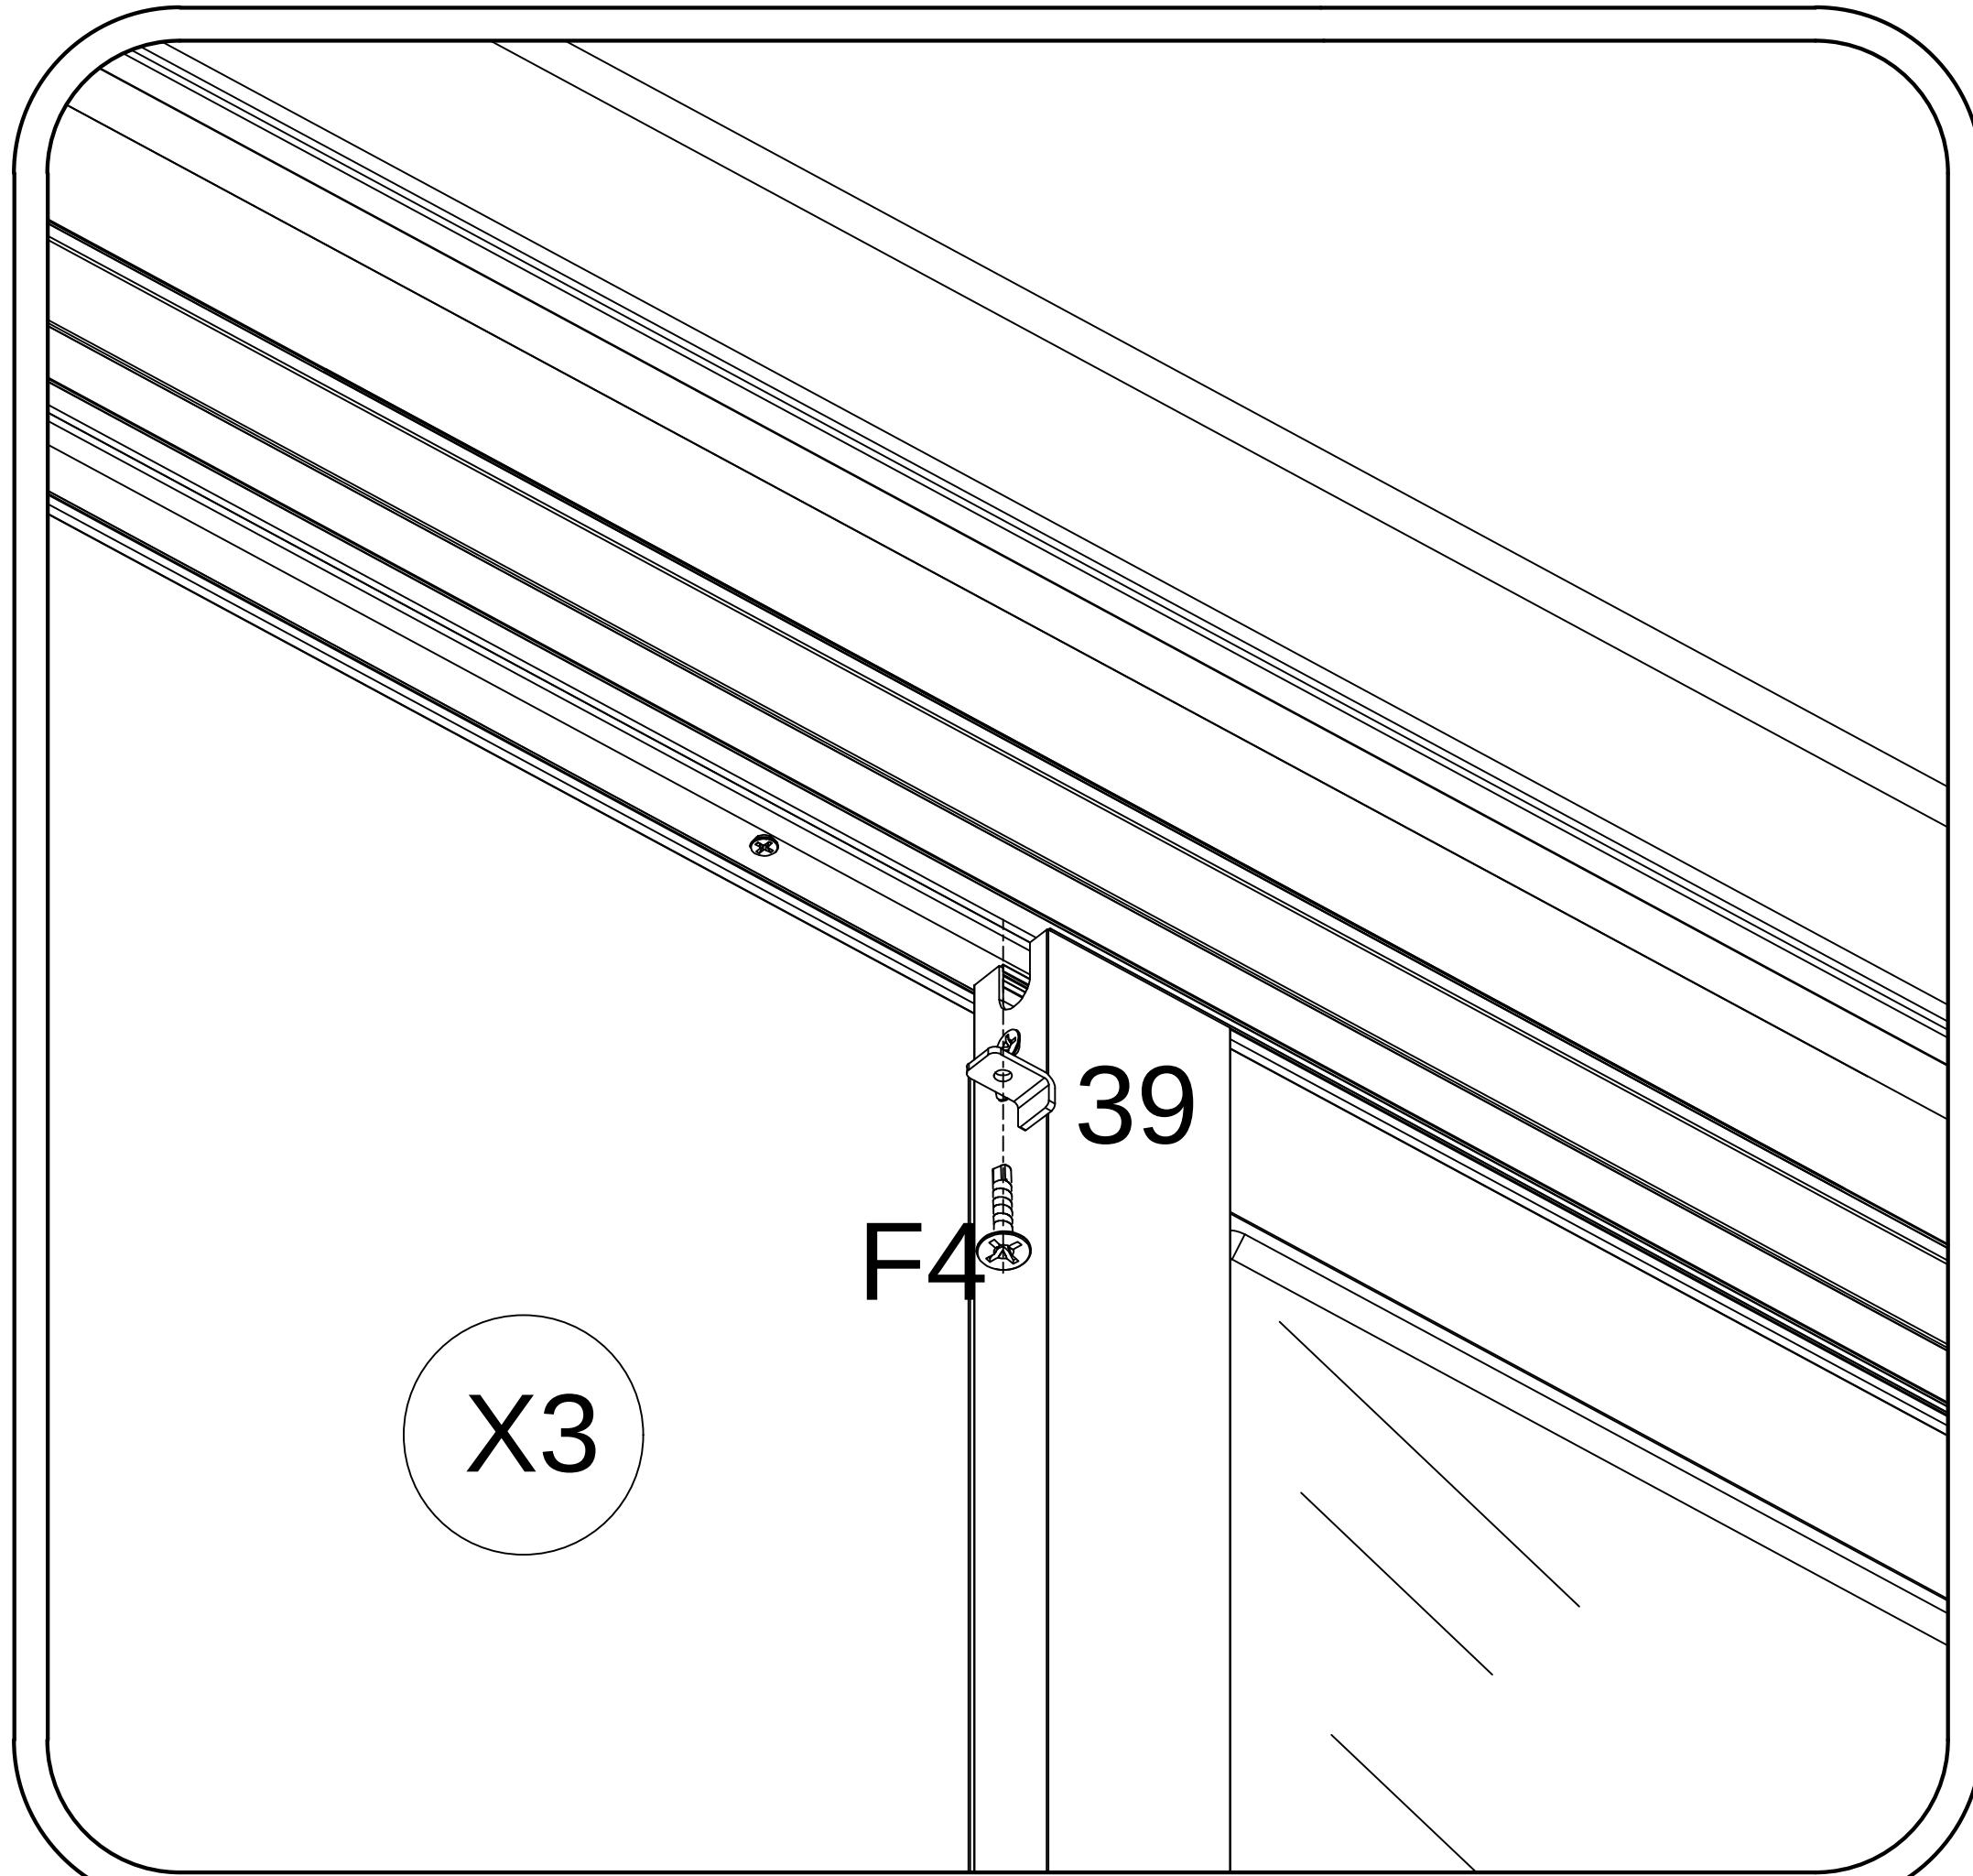

X3

F4 39

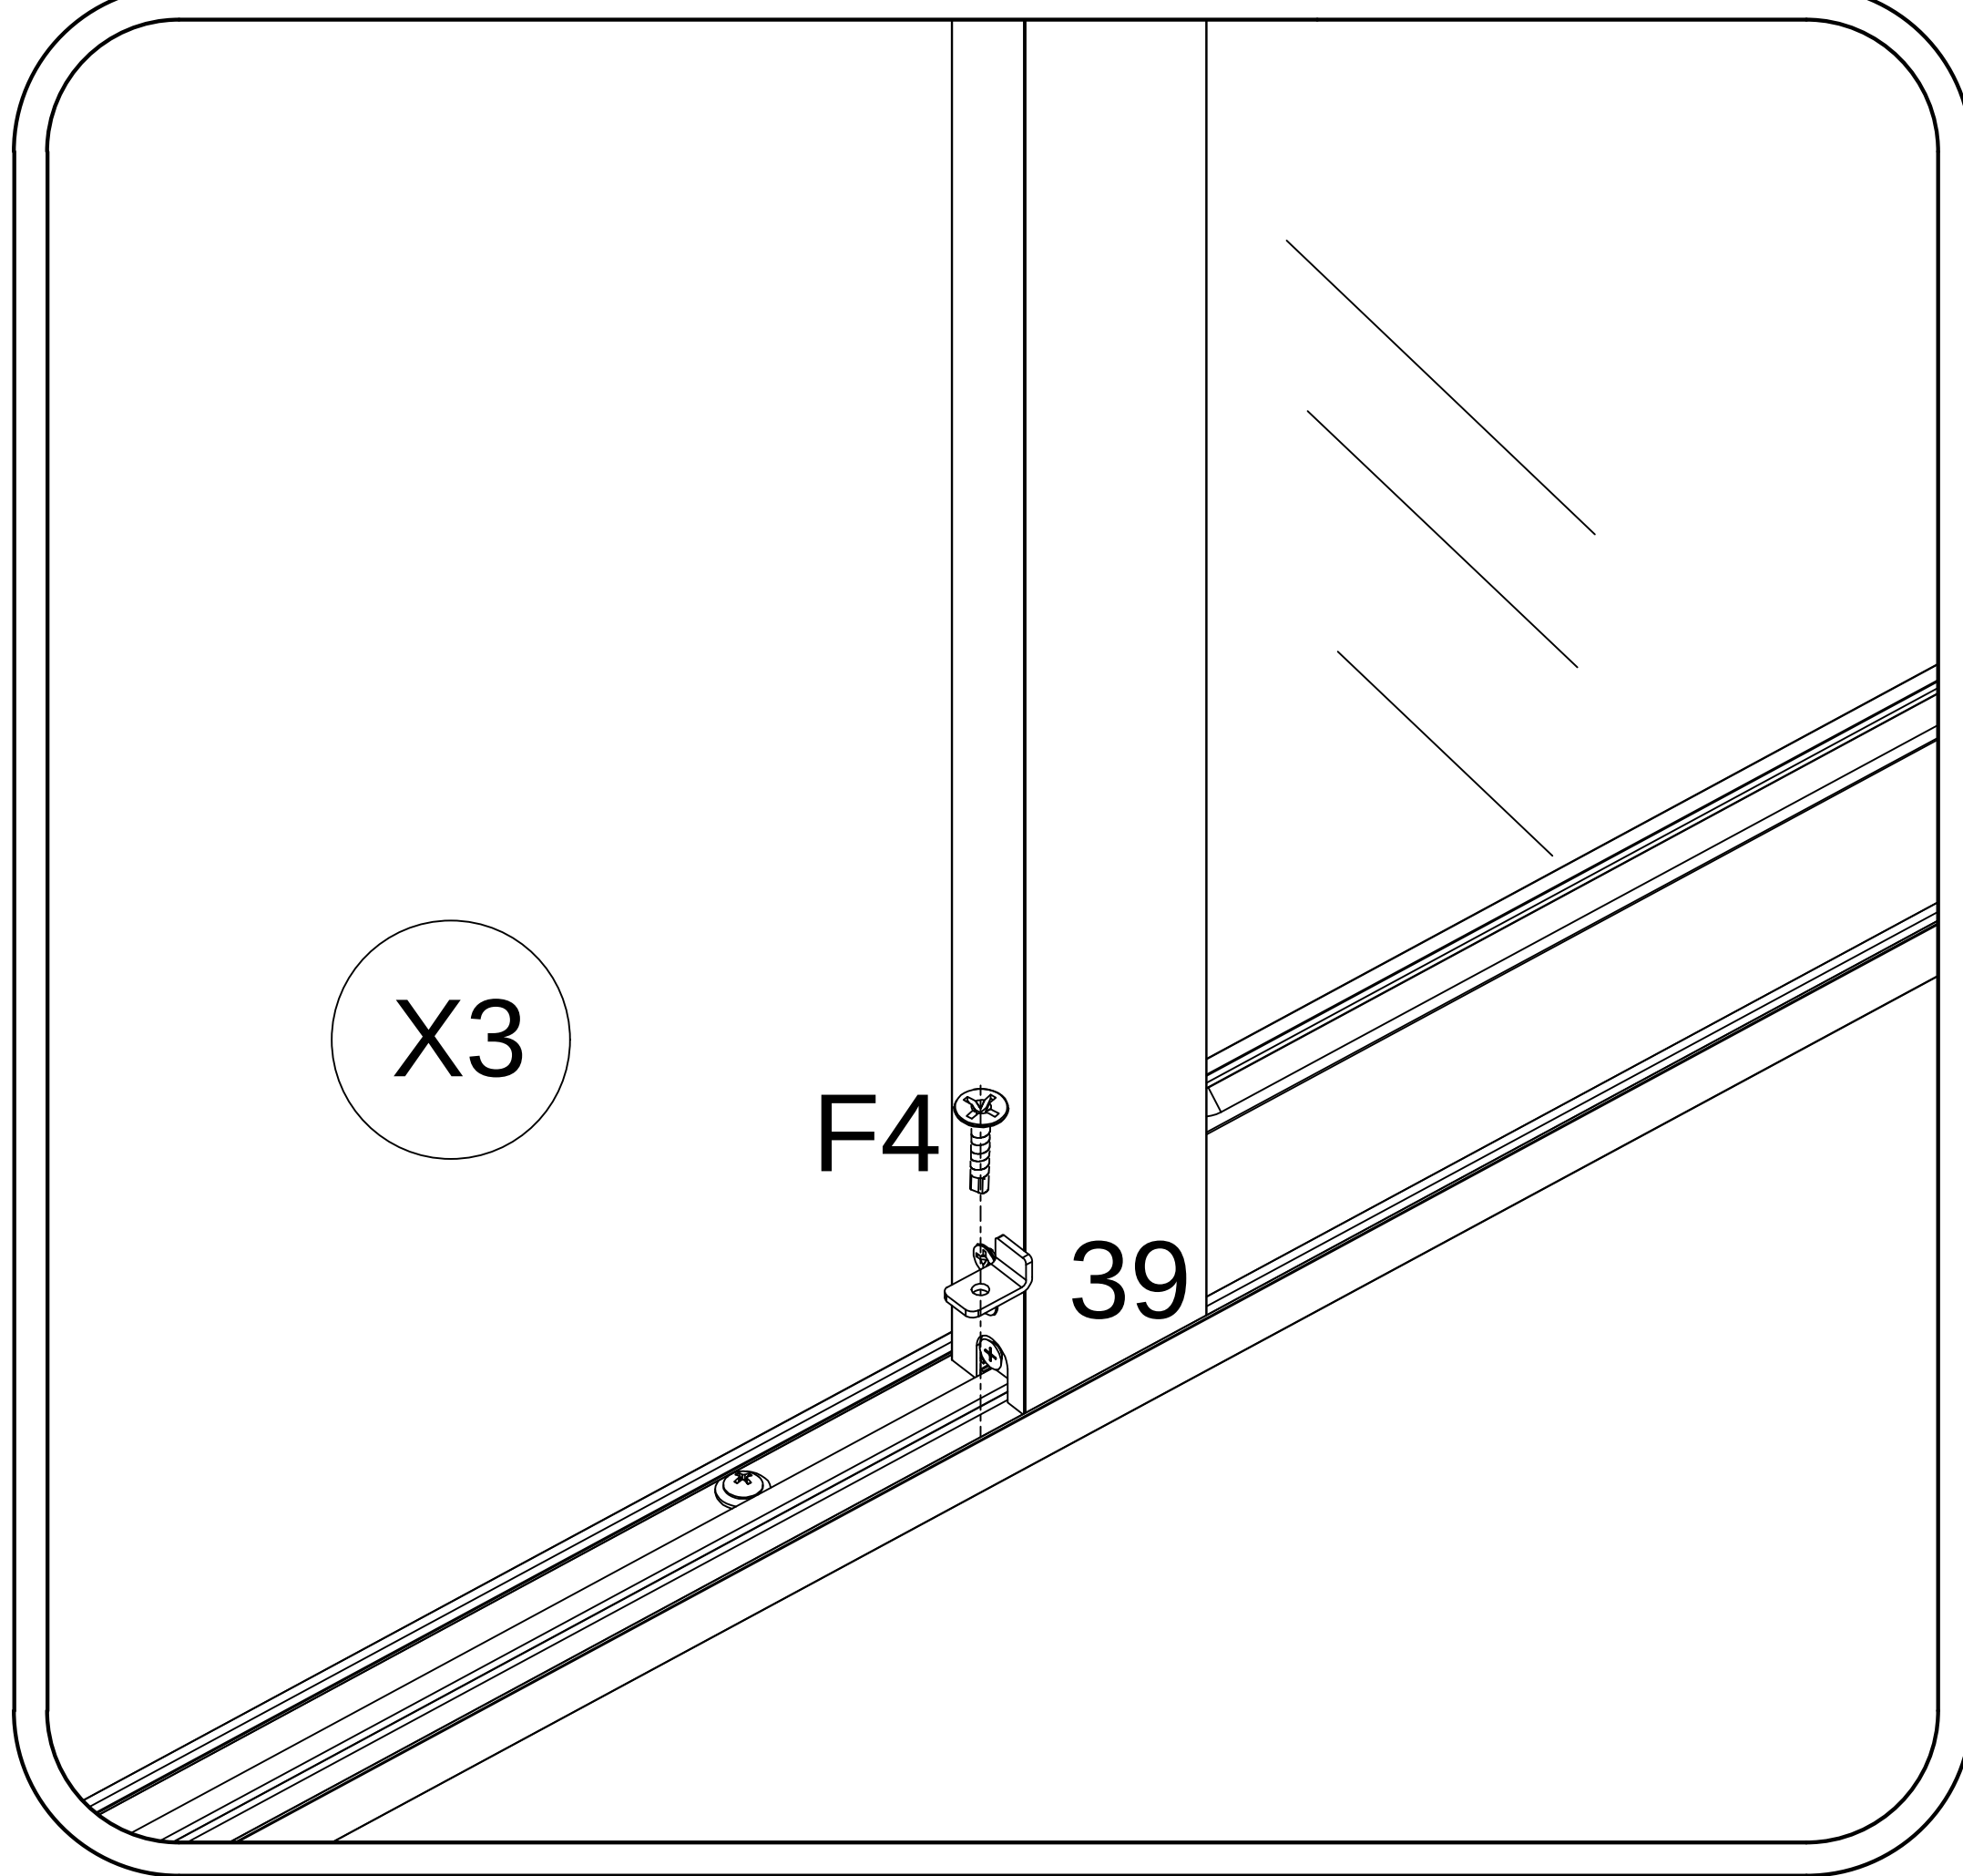

X3

F4 39

