


ALUMINUM CARPORT

Instruction manual

size: 196.5" Lx138.6" Wx82.7"/99.2" H

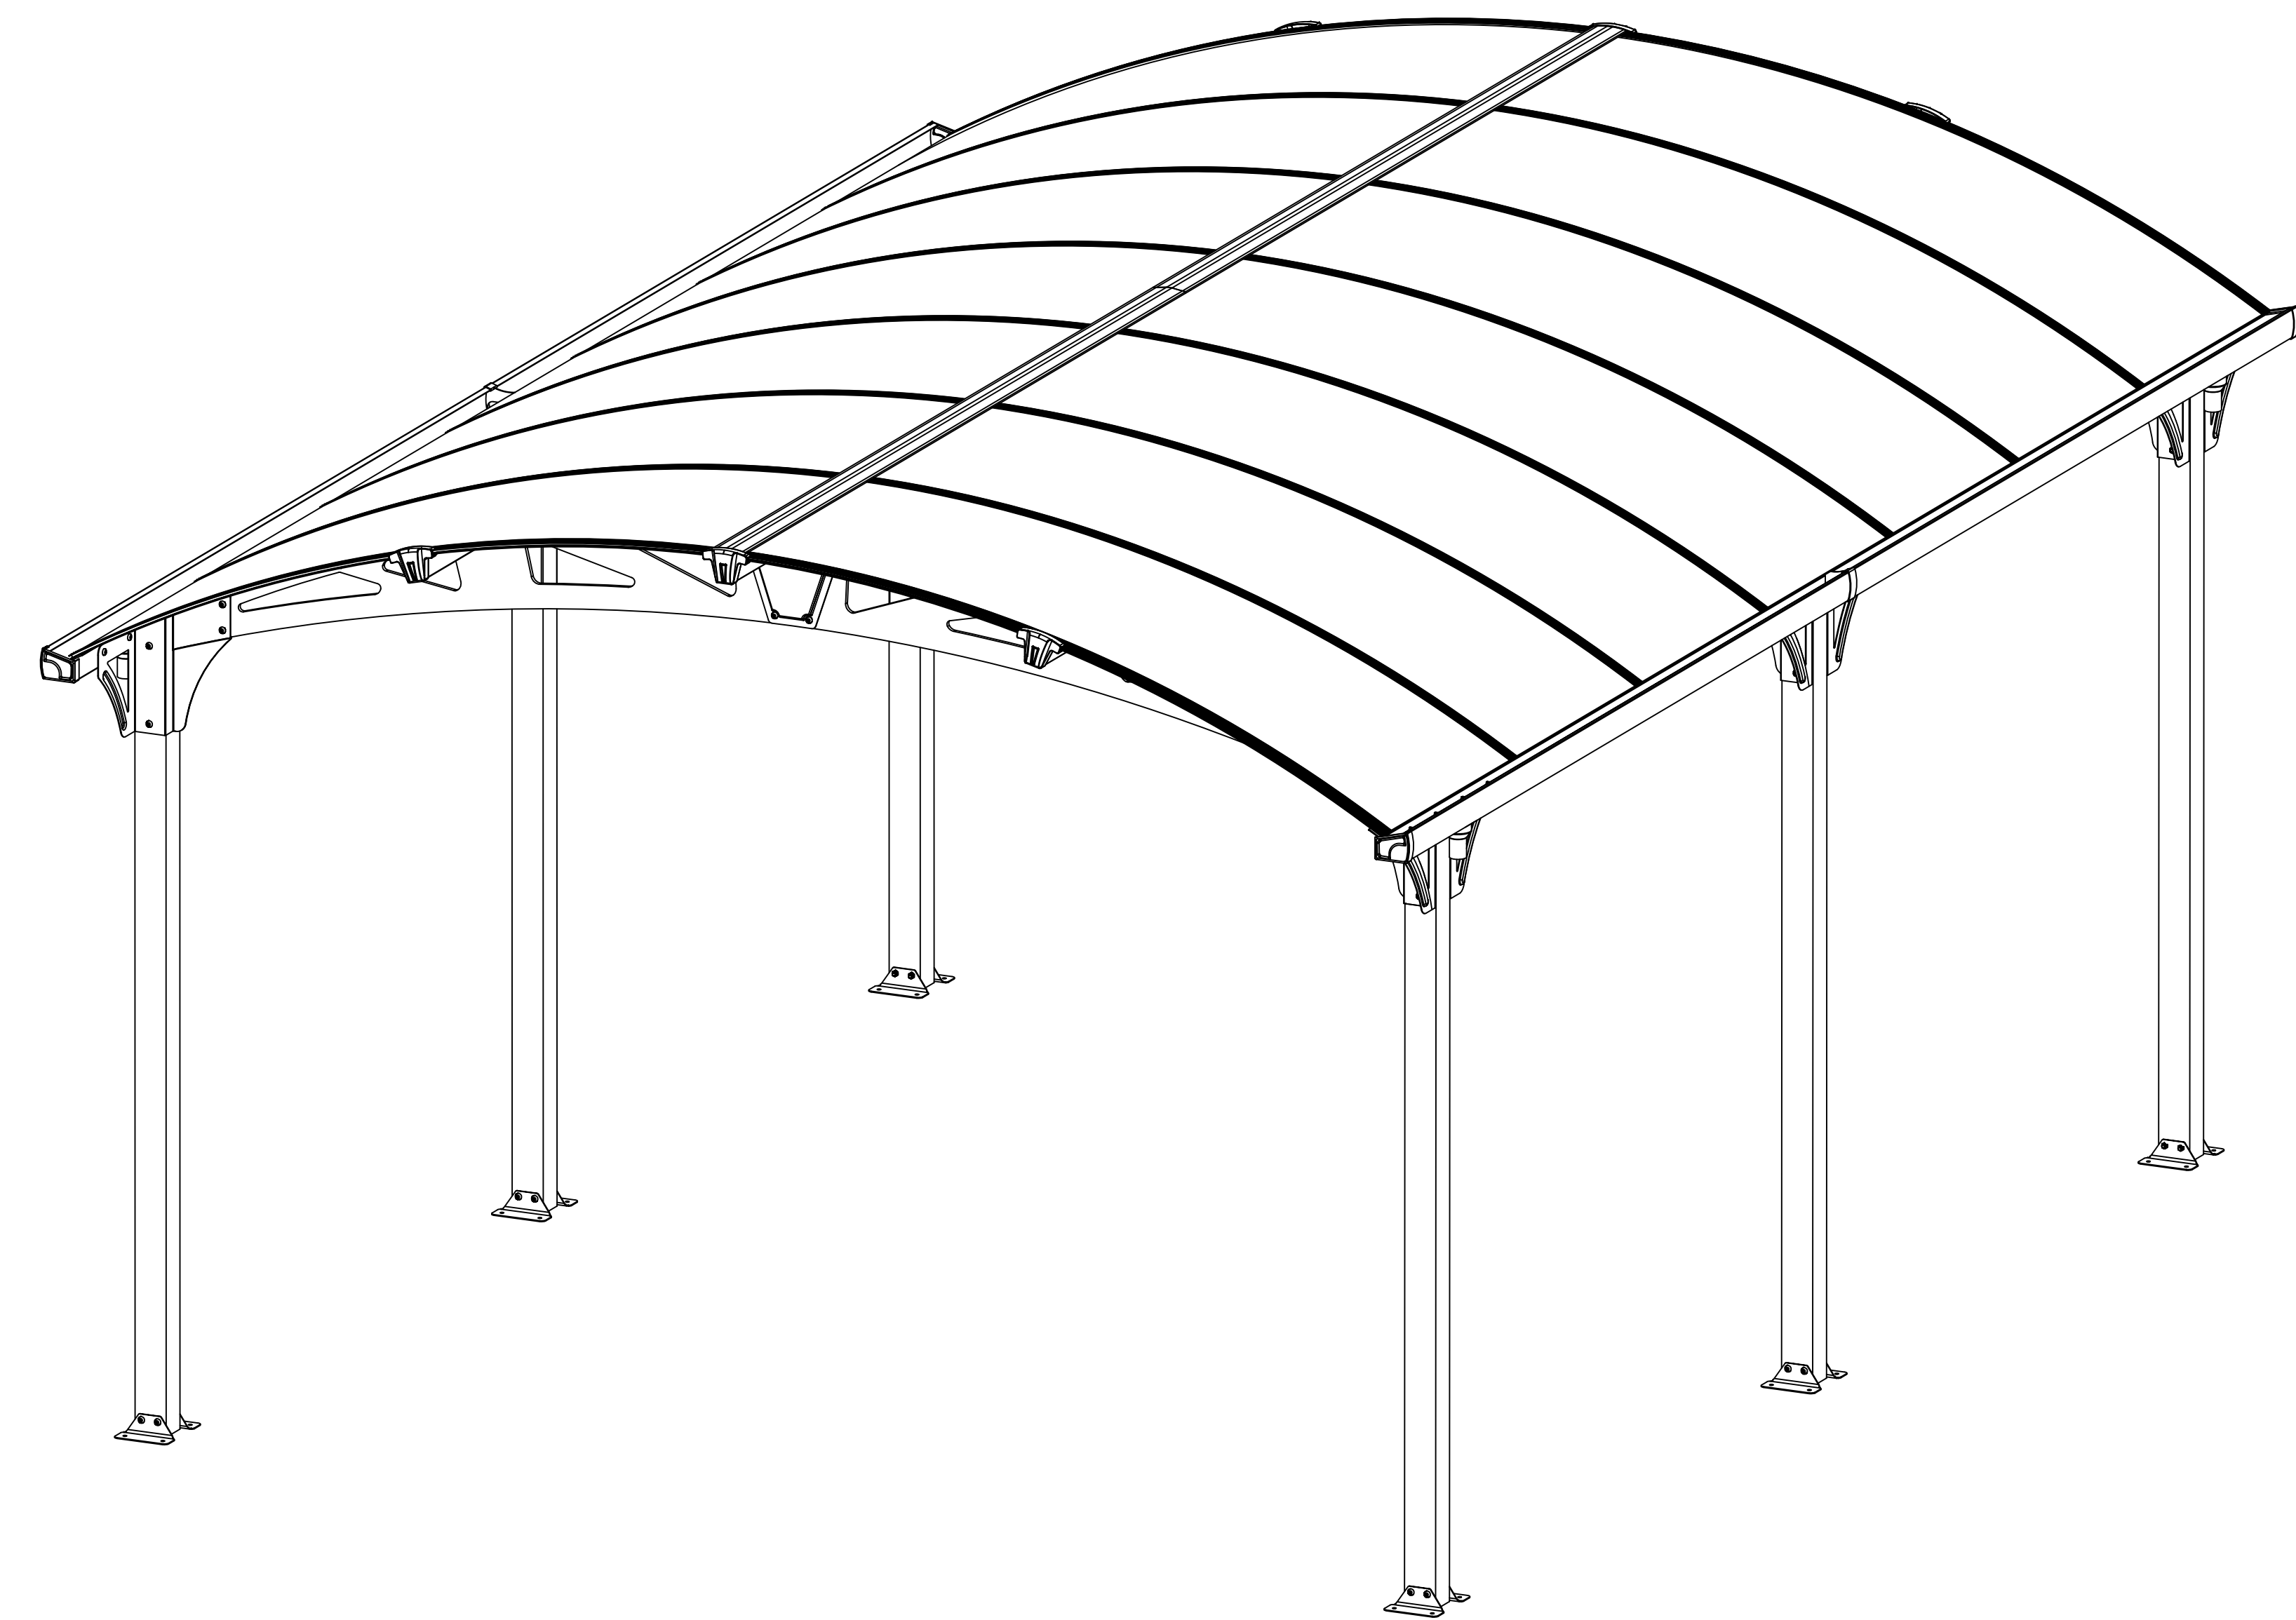

CP-ZB7

IMPORTANT

You must read these instructions carefully before you start to assemble this. Please ensure that you find all parts in the carton box in the correct type and quantity as mentioned in the list illustrated in every page accordingly.

Please carry out the steps in the order set out in these instructions.

Do not tighten the steps in the until completing on the assembly of the polycarbonate panels.

Keep these instructions in a safe place for future reference.

WARRANTY

1. 30-day resend or return on quality problems or logistics damage;
2. 10-year warranty from the original purchase date;
3. Lifetime technical service support;
4. The following circumstances are not covered by the warranty:
 - a. Products without proof of purchase.
 - b. Damages caused by human factors, incorrect usage in disregard of the instructions, or self-disassembly and repair.
 - c. Products that exceed the warranty period.

CONTACT US

If you have any questions about the product after you receive it, please feel free to contact us. Our professional after-sales team will respond to your inquiry within 24 hours.

1. E-mail: servicevip02@hotmail.com
2. Amazon Message: Click on the seller's name located under the "Buy Box" and select "Ask a question" (Amazon Buyer).

SAFETY ADVICE

We strongly recommend the use of work gloves during assembly.

Do not attempt to assemble the aluminum carport in windy or wet conditions,

Do not touch overhead power cables with the aluminum profiles.

Always wear shoes and safety goggles when working with extruded aluminum.

Dispose of all plastic bags safety-keep them out of reach of small children.

The aluminum carport must be positioned and fixed on a flat level surface.

Do not lean against or push the aluminum carport during construction.

Keep children away from the assemble area.

Do not position your aluminum carport in an area exposed to excessive wind.

Do not attempt to assemble this aluminum carport if you are tired, have taken drugs or alcohol or if you are prone to dizzy spells.

If using a step ladder or power tools ensure that you follow the manufacturer's safety advice.

Hot items such as recently used grills, blowtorches etc.must not be stored in the aluminum carport.

Ensure there are no hidden pipes or cables in the ground before inserting the pegs.

GENERAL ADVICE

This is a multi-part assembly, allow at least 90 minutes for assembly.

Selecting a site-choose a sunny level position away from overhanging trees.

If you are fixing your aluminum carport directly to a solid concrete foundation use the predrilled holes in the metal base supplied.

The component parts should be checked and laid out close to hand.

Keep all small parts(screws etc)in a bowl so they do not get lost.

Keep roof clear from snow and leaves.

CARE & MAINTENANCE


When your aluminum carport needs cleaning, use a mild detergent solution and risen with cool clean water.

Do NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

TOOLS & EQUIPMENT REQUIRED


Protective Equipment:

- 1.Helmet
- 2.Glove
- 3.Long Sleeve Cotton Overalls
- 4.Emergency Medicine Cabinet
- 5.Eye Shield

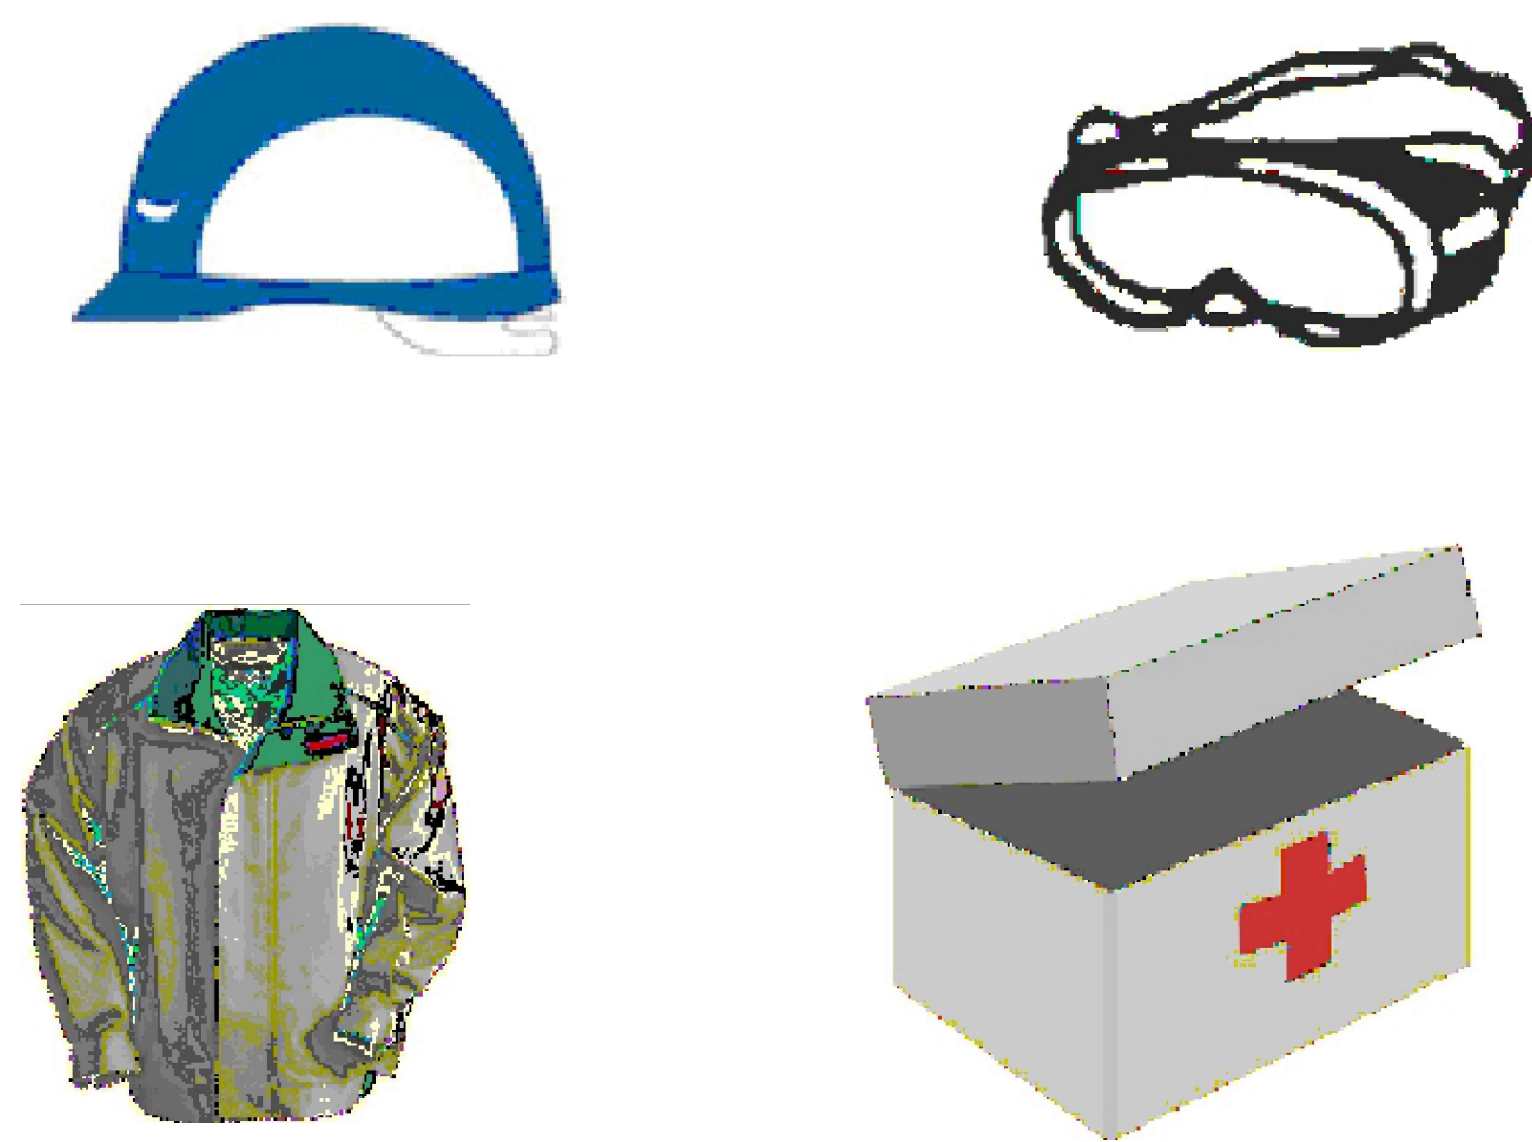

Measure (metric):

- 1.The Tape (5 m)
- 2.Angle Square
- 3.Level Meter

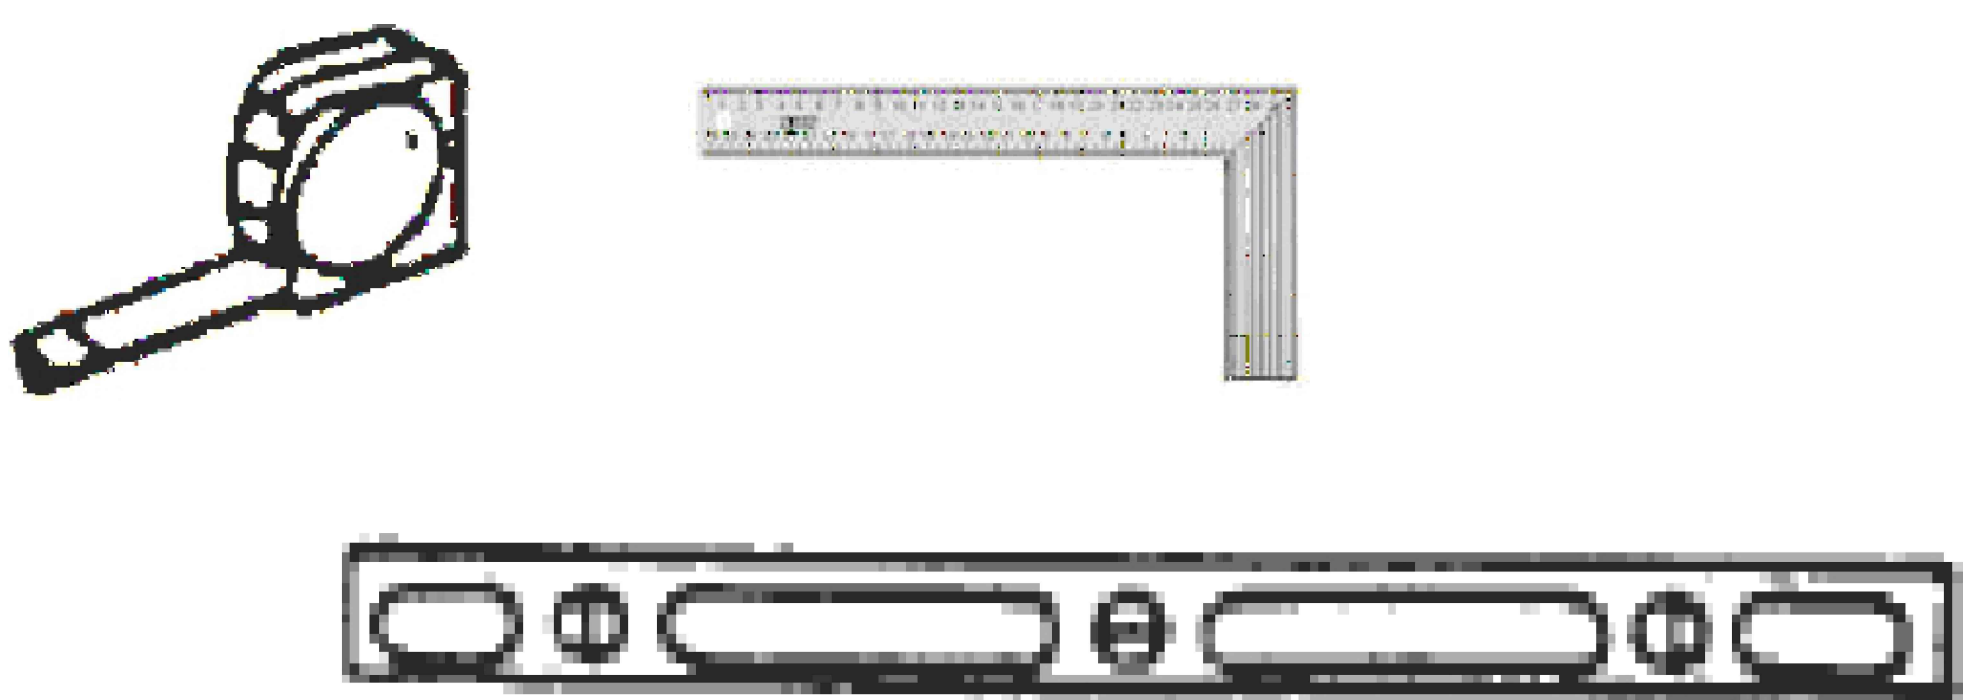

Installation Tool:

- 1.Triangle Stairs≈1.5m Height
- 2.Spanner 10mm (Ratchet Wrench is better)
- 3.Spanner 14mm (Install the expansion screw)
- 4.Hexagon wrench 5mm
- 5.Electric screwdriver+5mm Hexagon wrench (suggest)
- 6.Wooden Mallet
- 7.Marking Pen
- 8.Silicon
- 9.Percussion bit(8mm and 10mm)
- 10.Knife
- 11.Phillips screwdriver





PRODUCT SIZE

Make sure a good installation location


OTHER CAUTIONS

1. 4-5 people required, one is for measuring & taking marks to ensure the installation dimension ,the second person is responsible for the installation and the last one do as assistant and assure the safety.
2. Firstly, make sure the carport is strong enough for installation. A brick concrete structures is the best choice.
3. High-power electric tools are required, ensure the normal work of them and highly pay attention to electric safety.
4. Be careful when using the kind of blunt tools, like hammer.
5. Wearing long sleeve cotton overalls,gloves and helmet during installation and wear safety glasses when using power tools.
6. Don't look up when Working in high position, or the drop screws may hurt your eyes and suffocation causing accidentally when falling into your mouth.
7. No climbing, No standing on the carport to avoid falling down.
8. If injuries immediately, using the first-aid kit to stop bleeding, bind up, In case of emergency, taken immediately to a nearby medical institutions

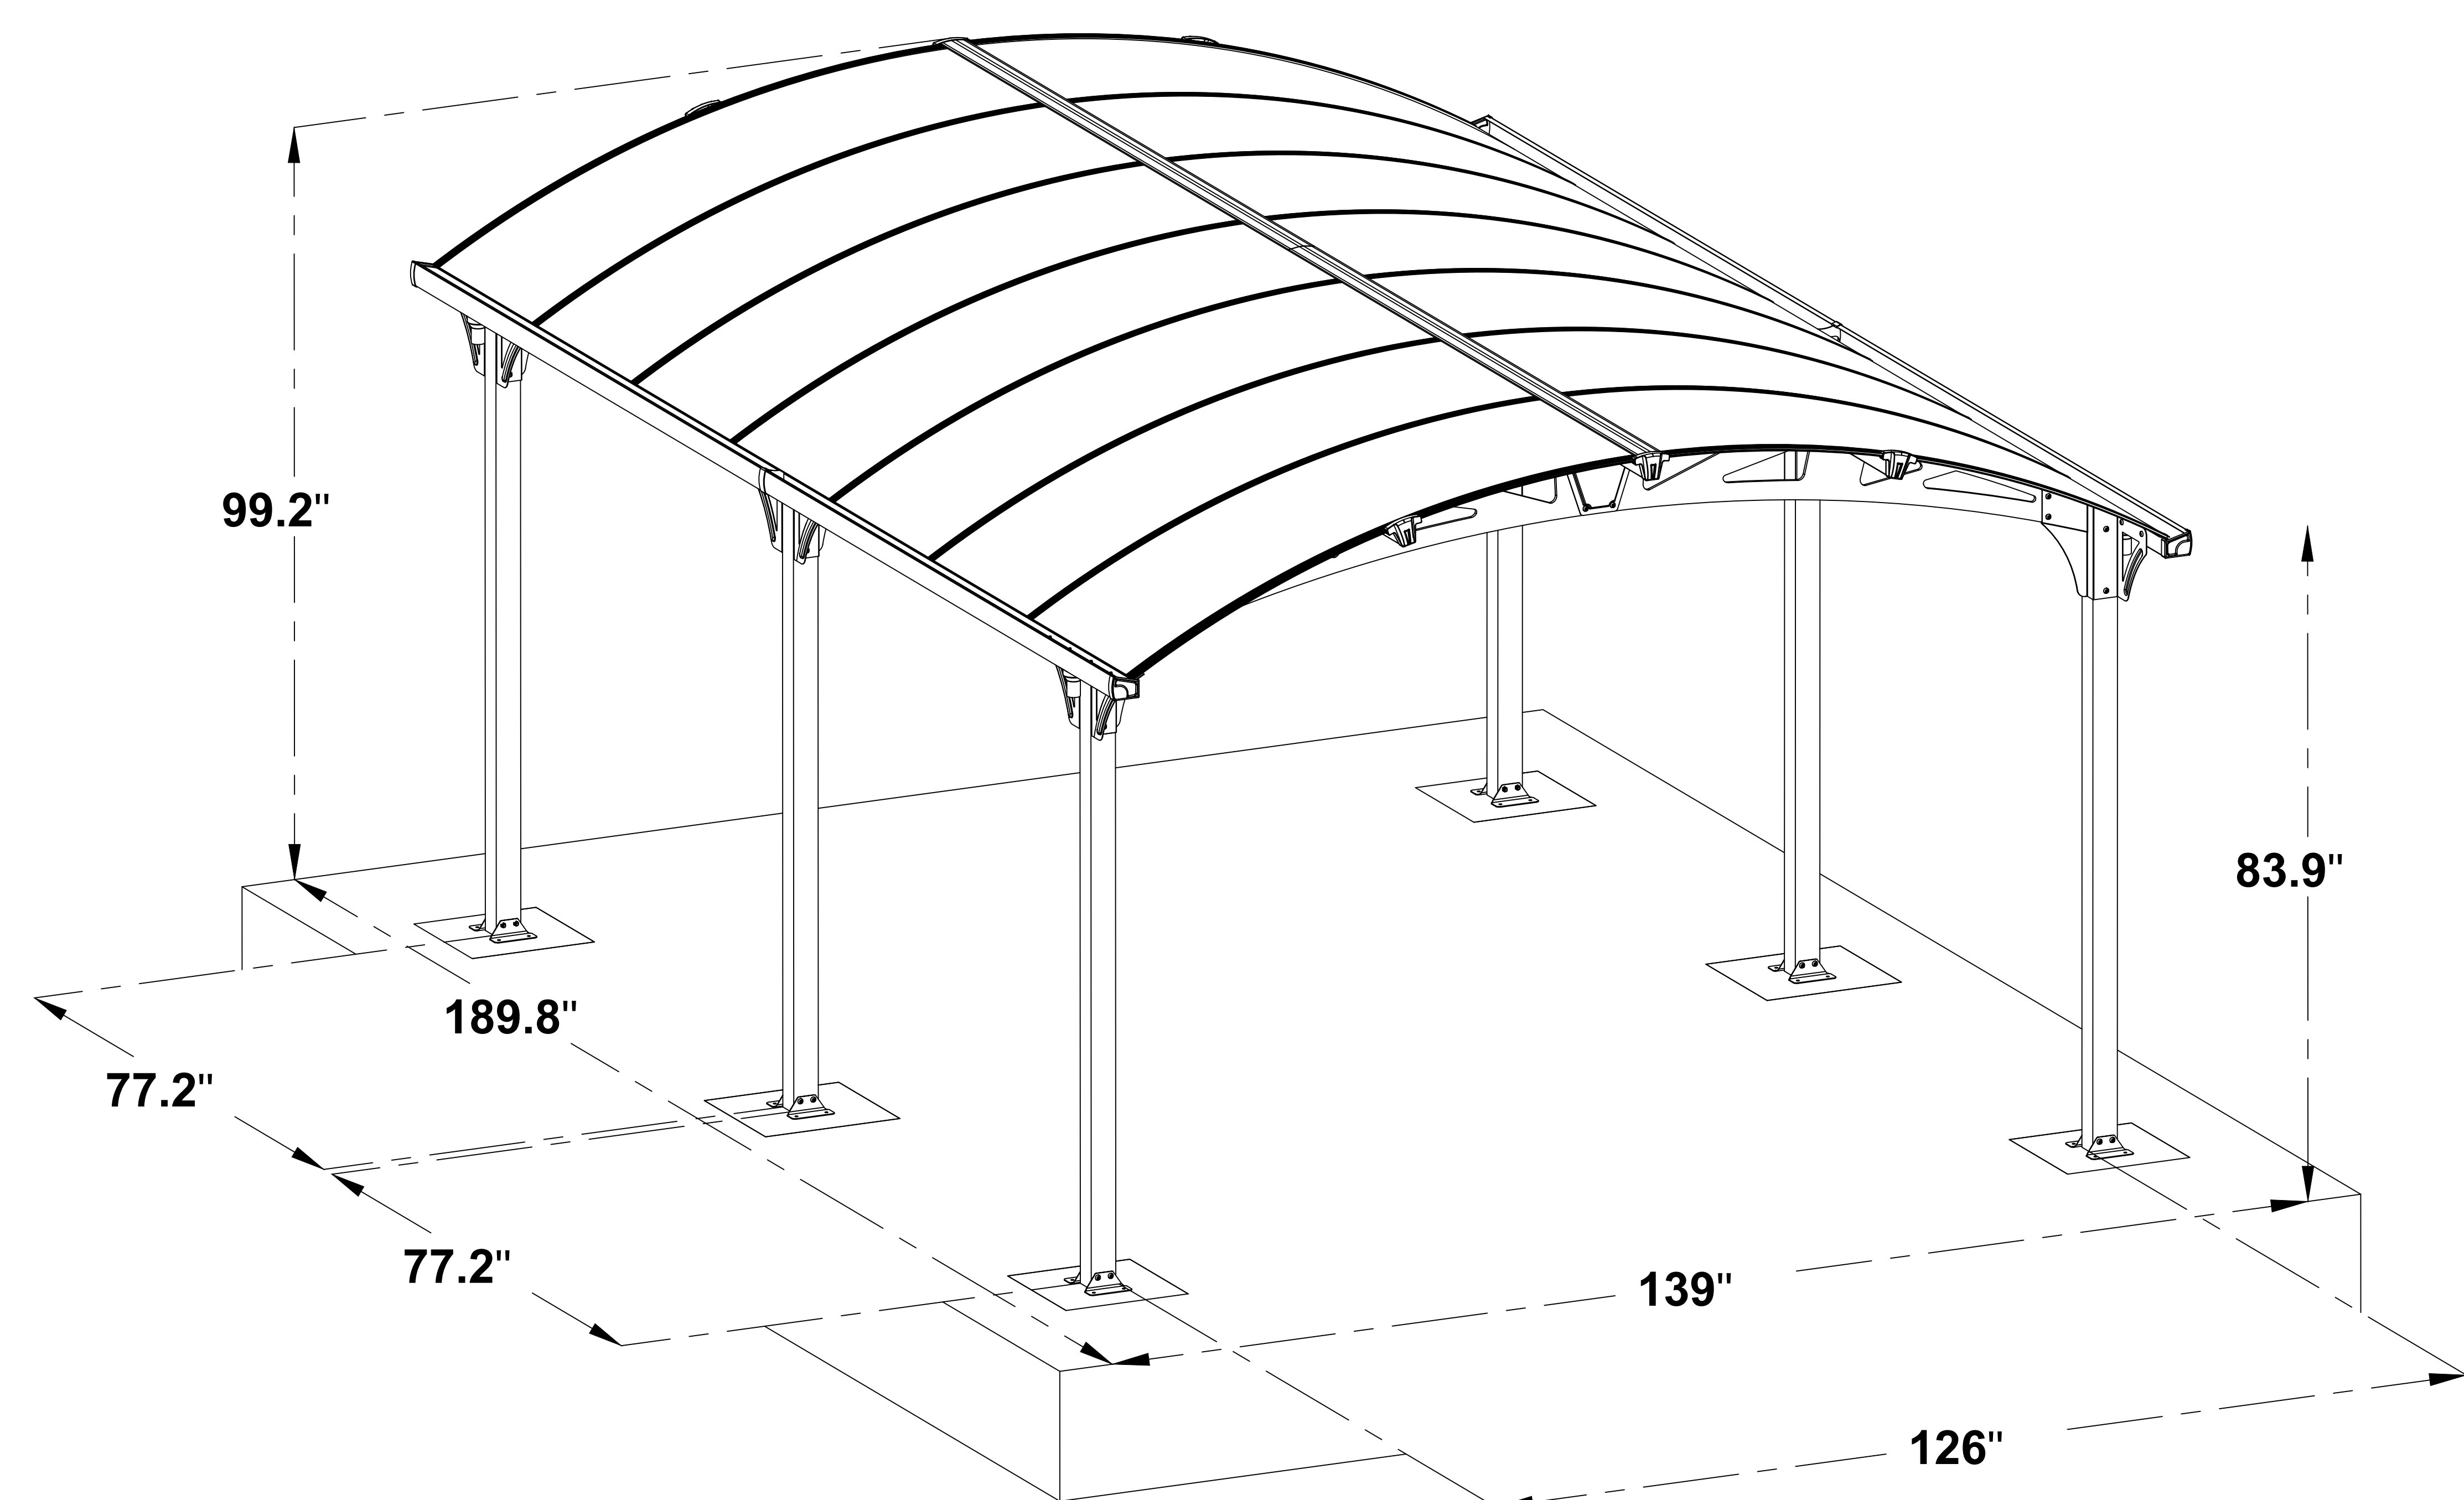


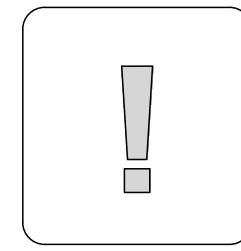


be careful!
Before installing this product, first select a piece of land larger than 16ftx12ft

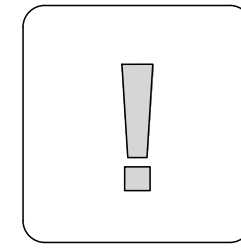


be careful!
The ground must be very flat. The installation position of column shall be reinforced by deep excavation.

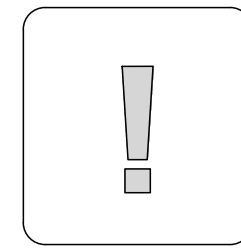

be careful!
The bottom is fixed with expansion screws to ensure the bearing capacity of the product and the invasion of strong wind.

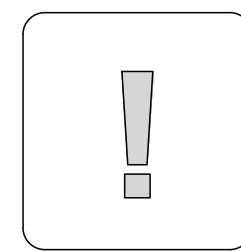


Attention!
A pit larger than 13.8X13.8X13.8in should be excavated at the column installation position

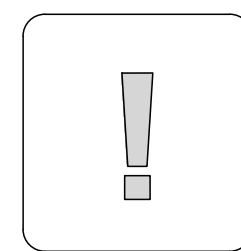


be careful!
Each pit is reinforced with 6 steel bars. After pouring 13.8X13.8X13.8in concrete, it can be installed after it is completely dry


































a

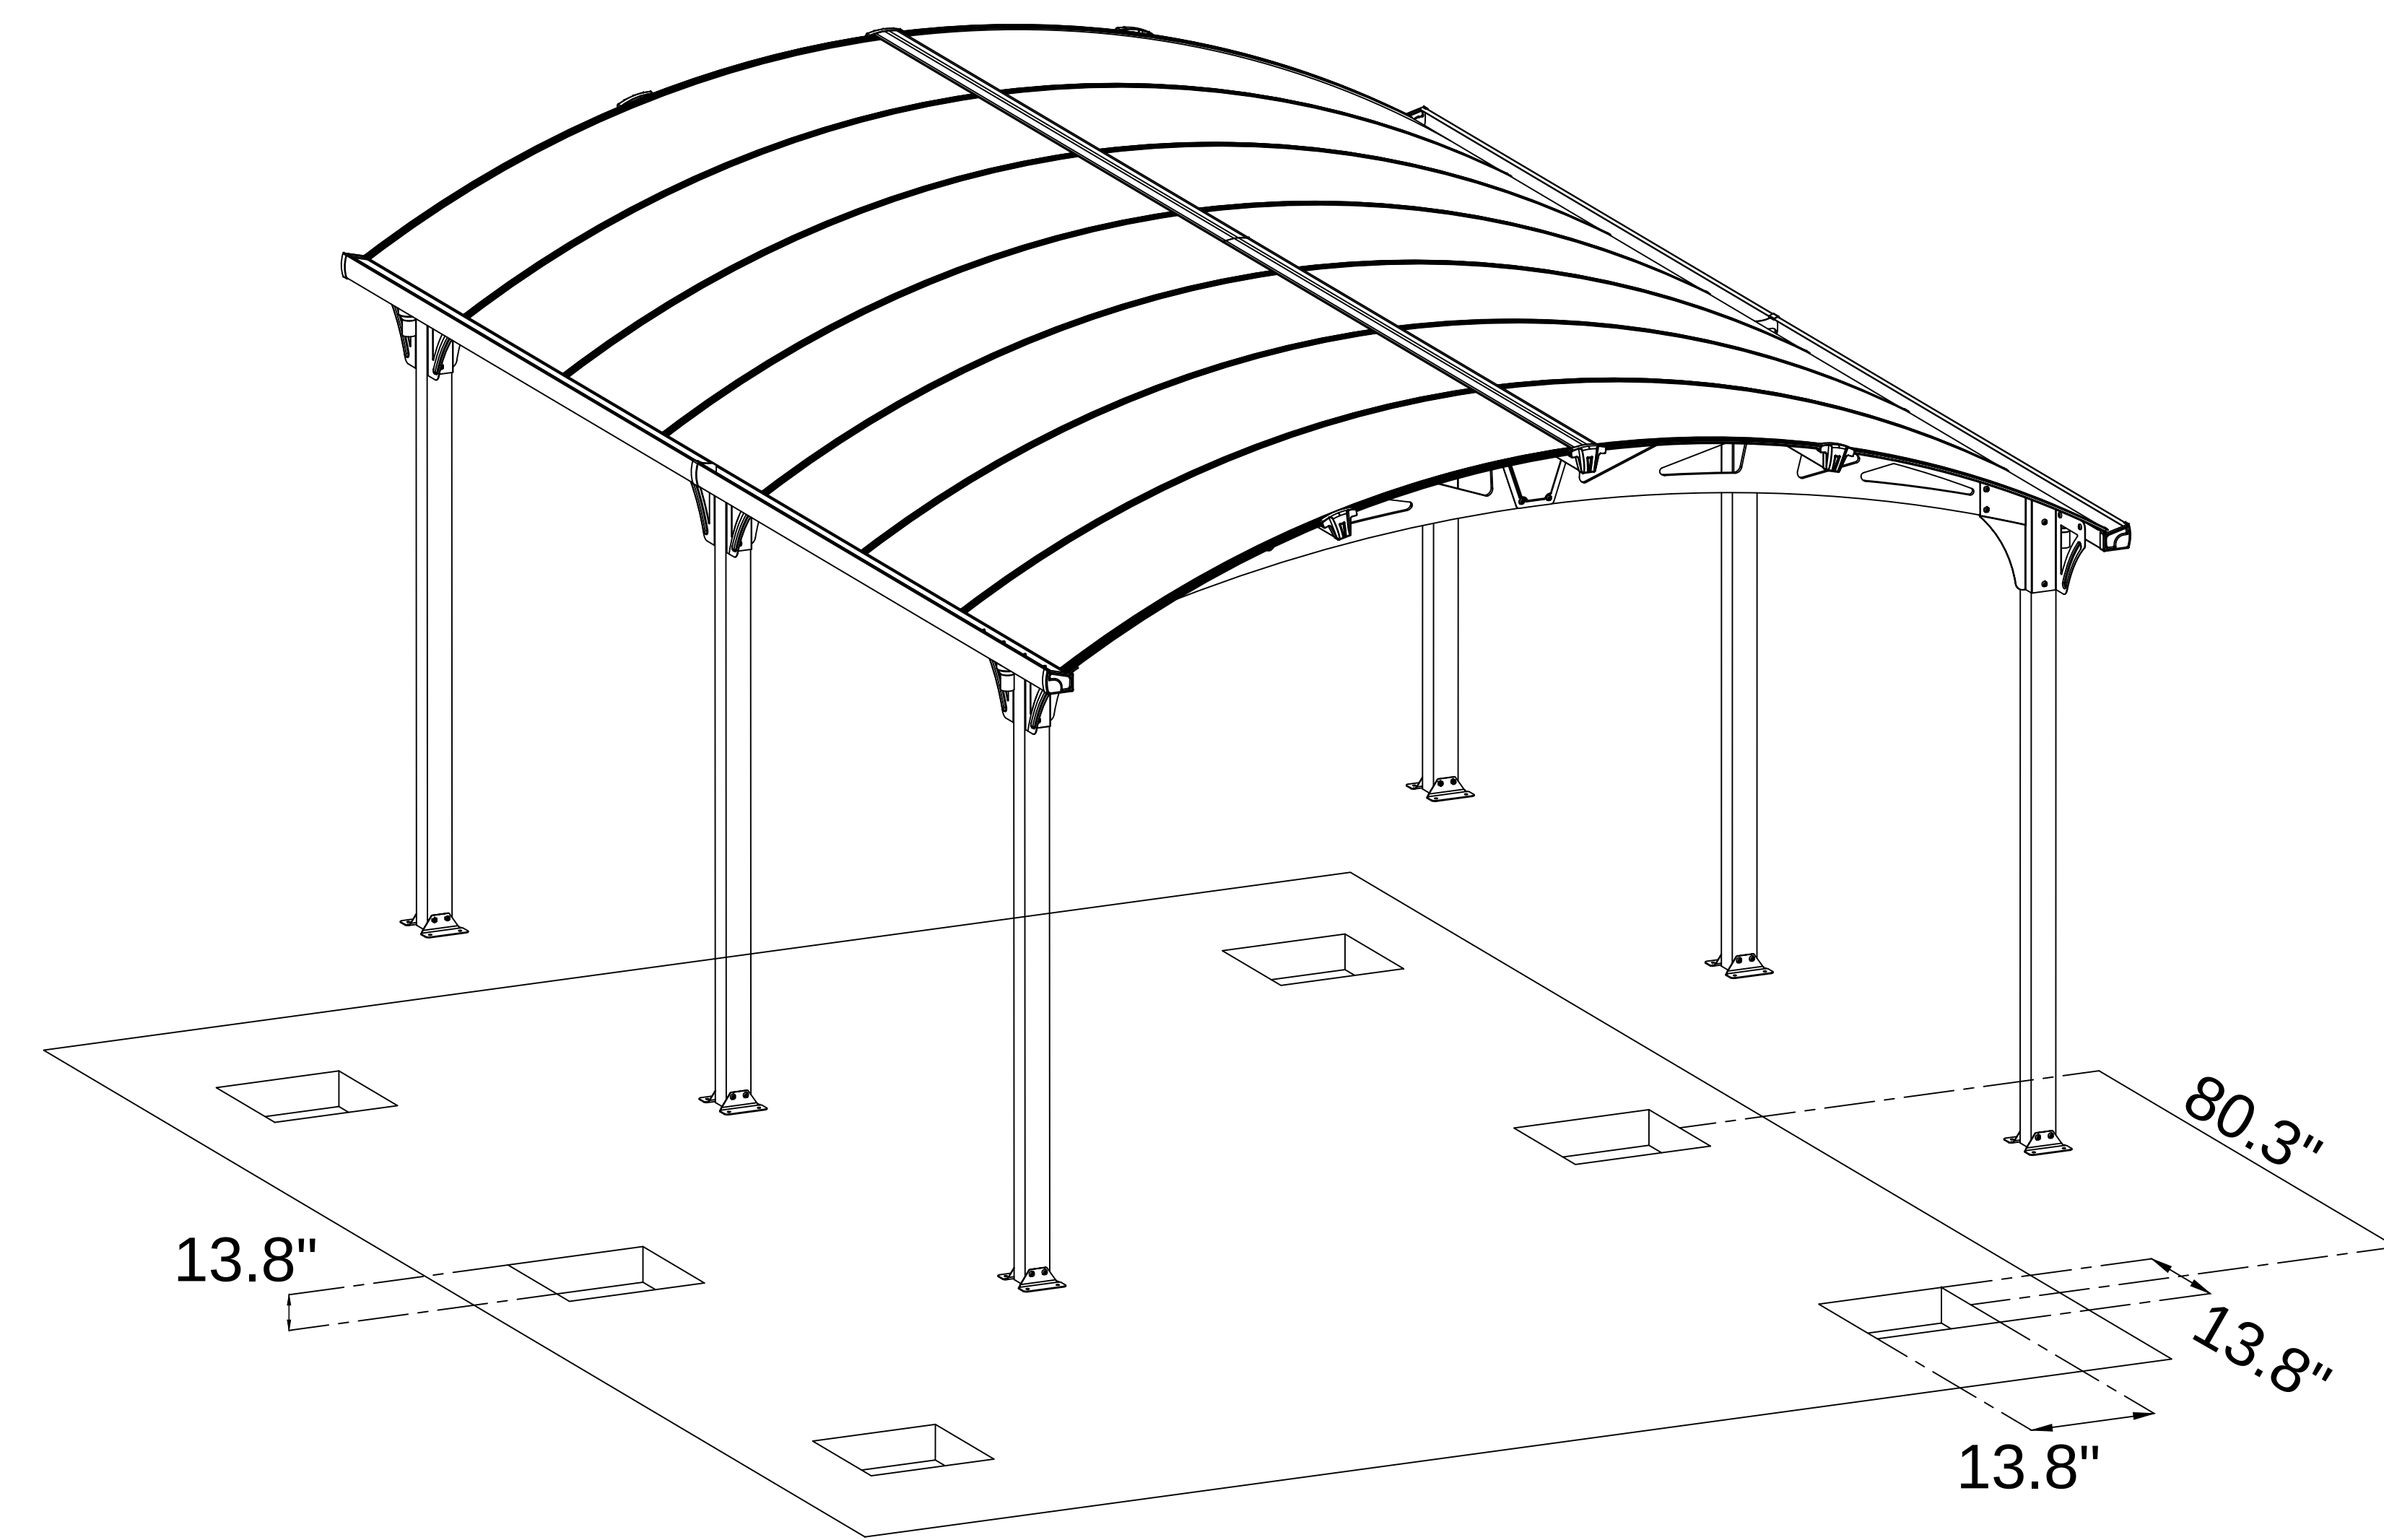



b

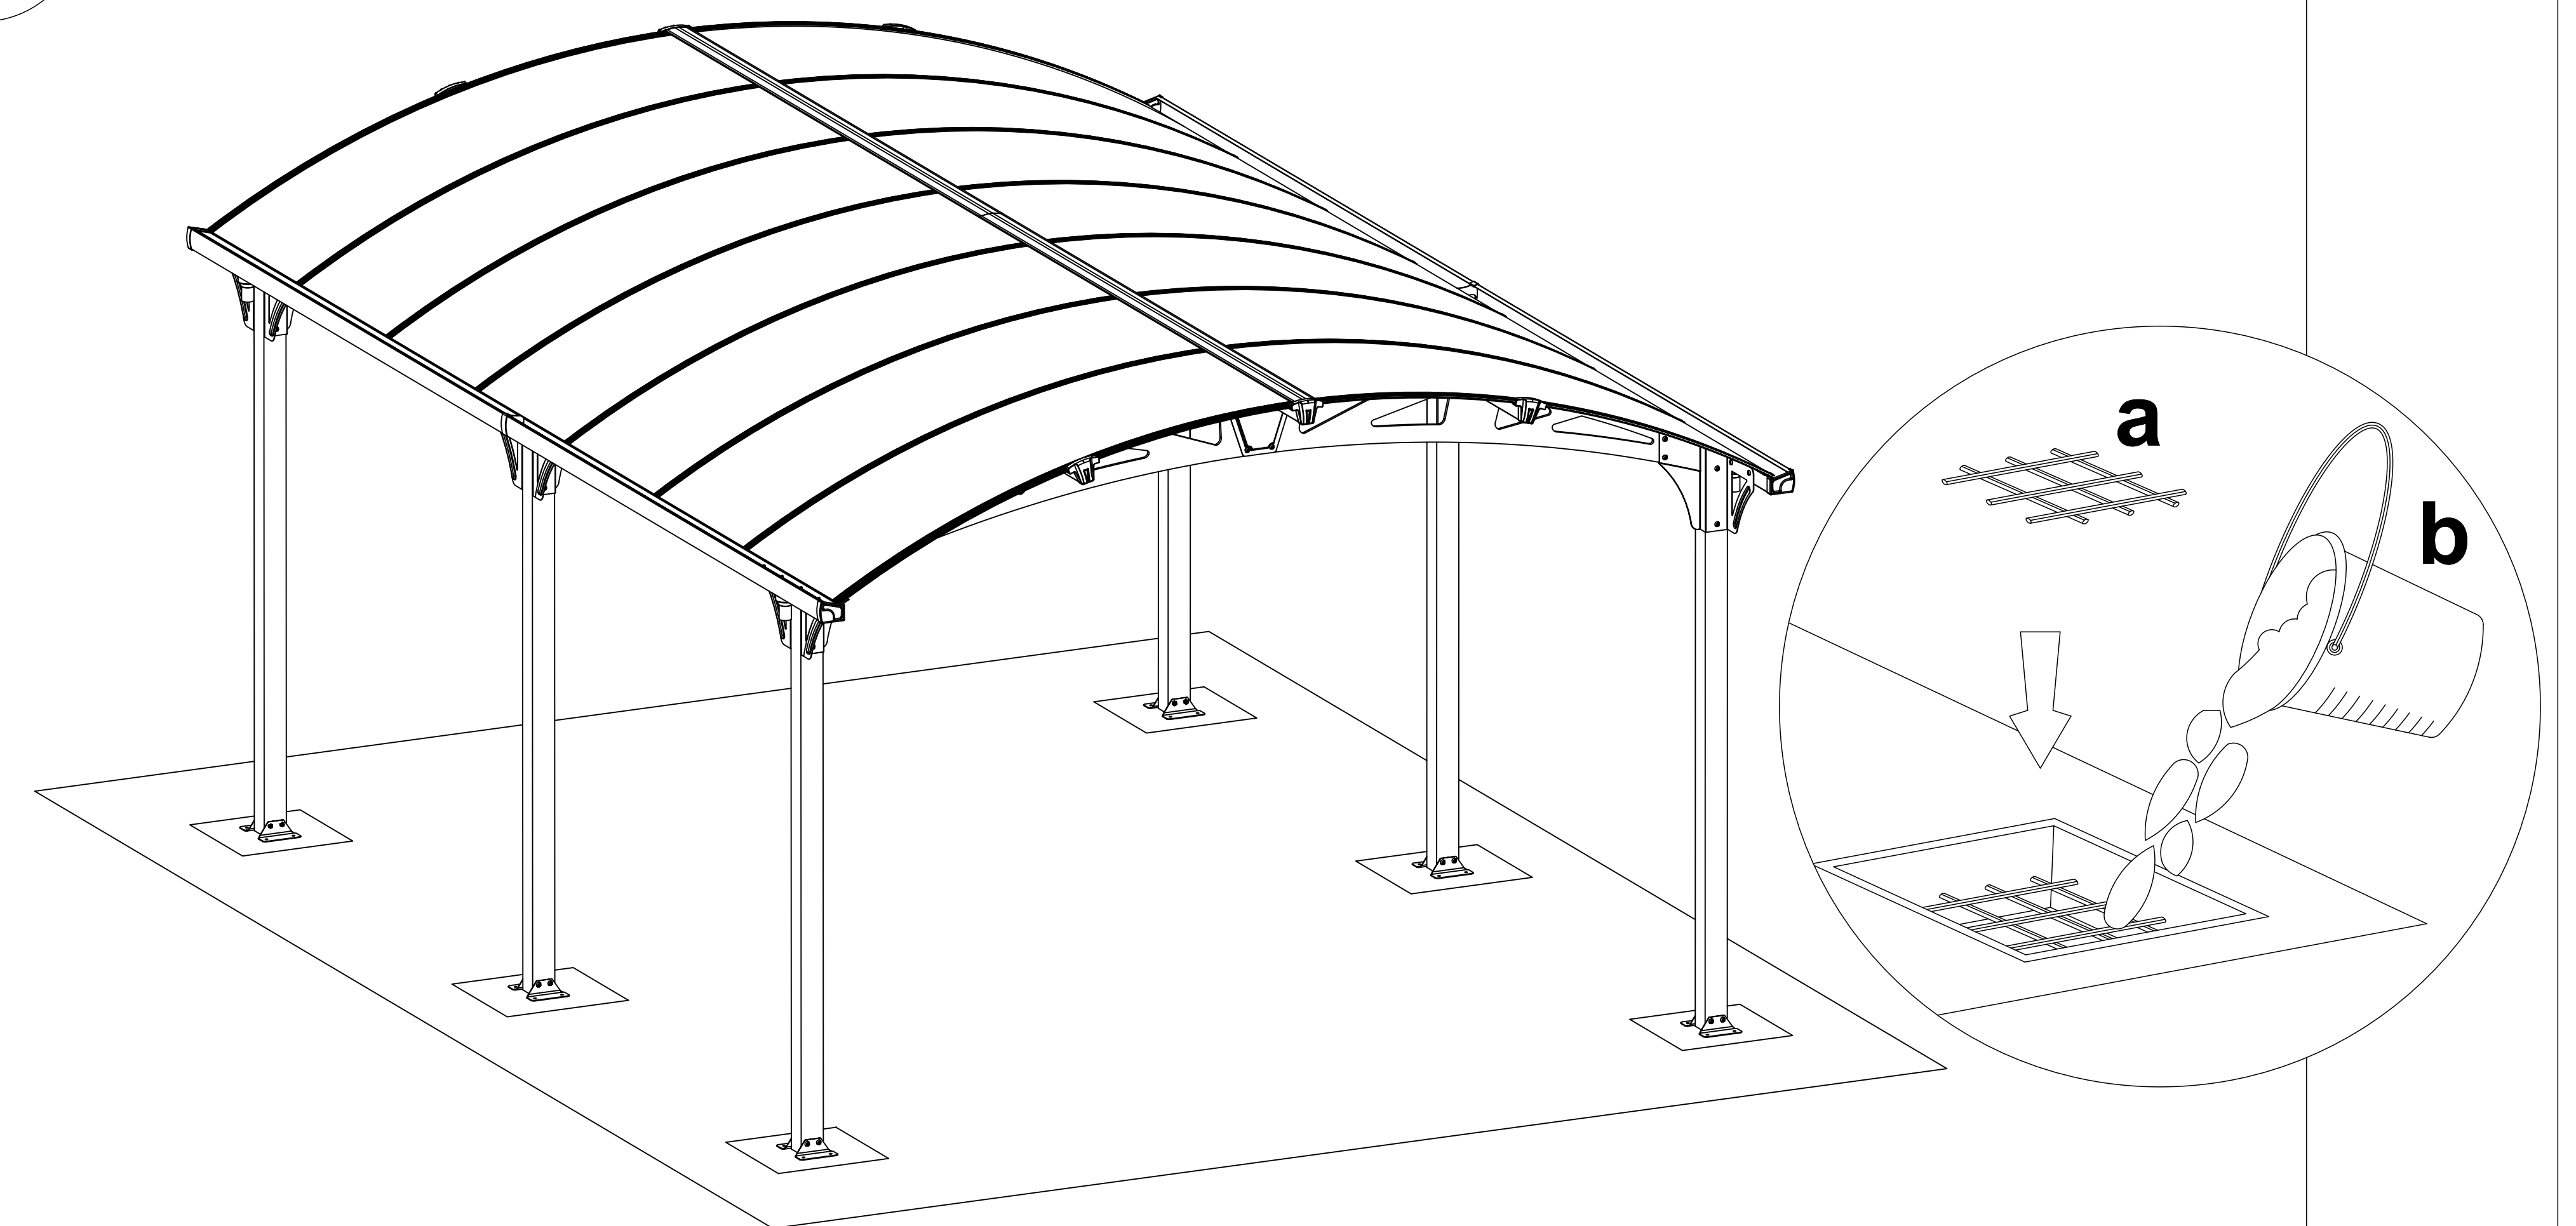



Contents

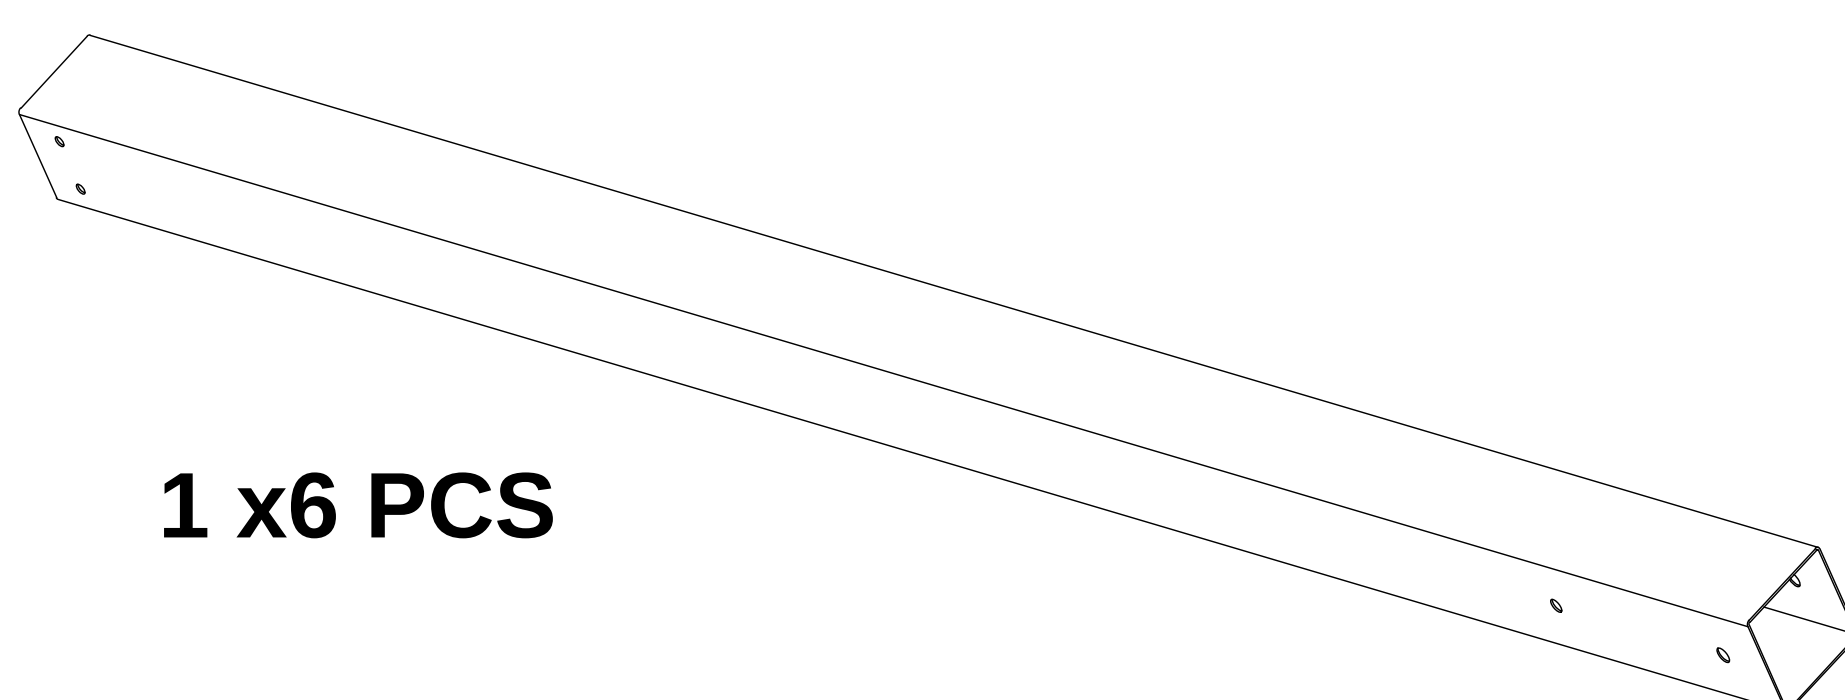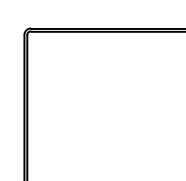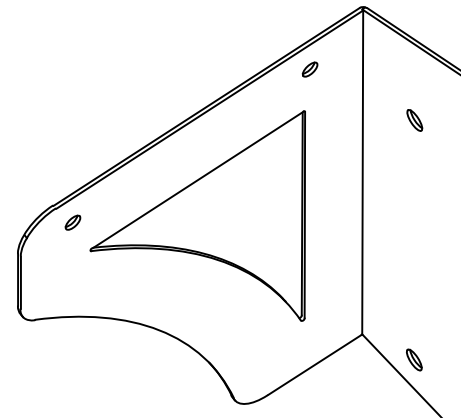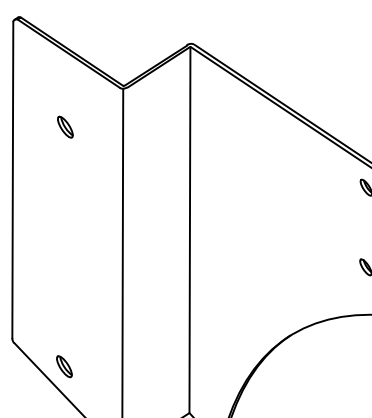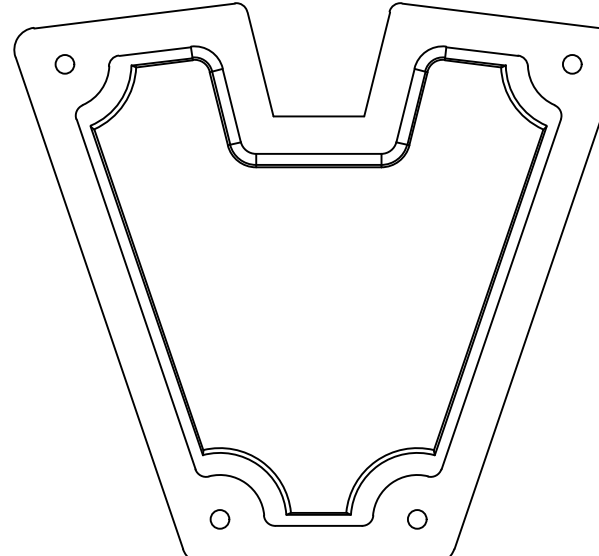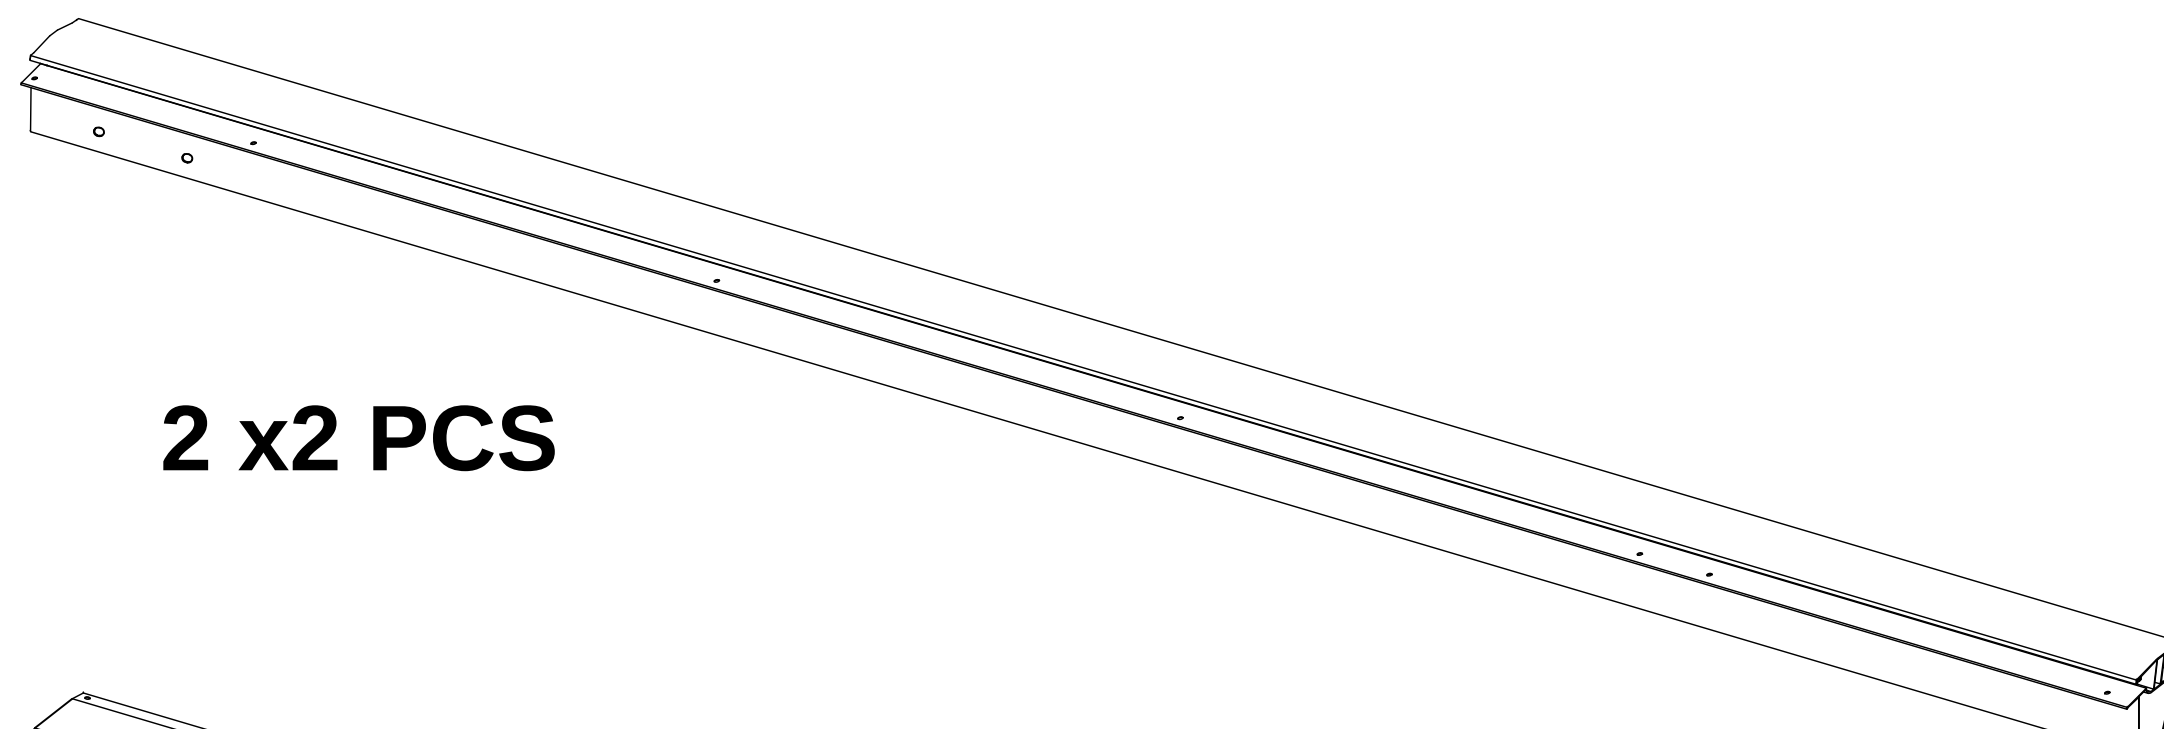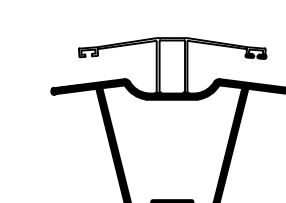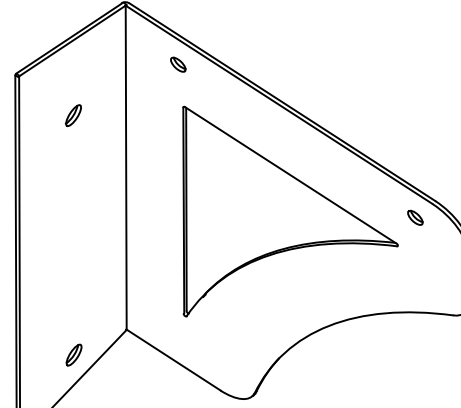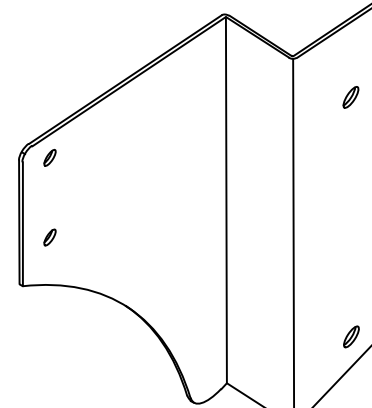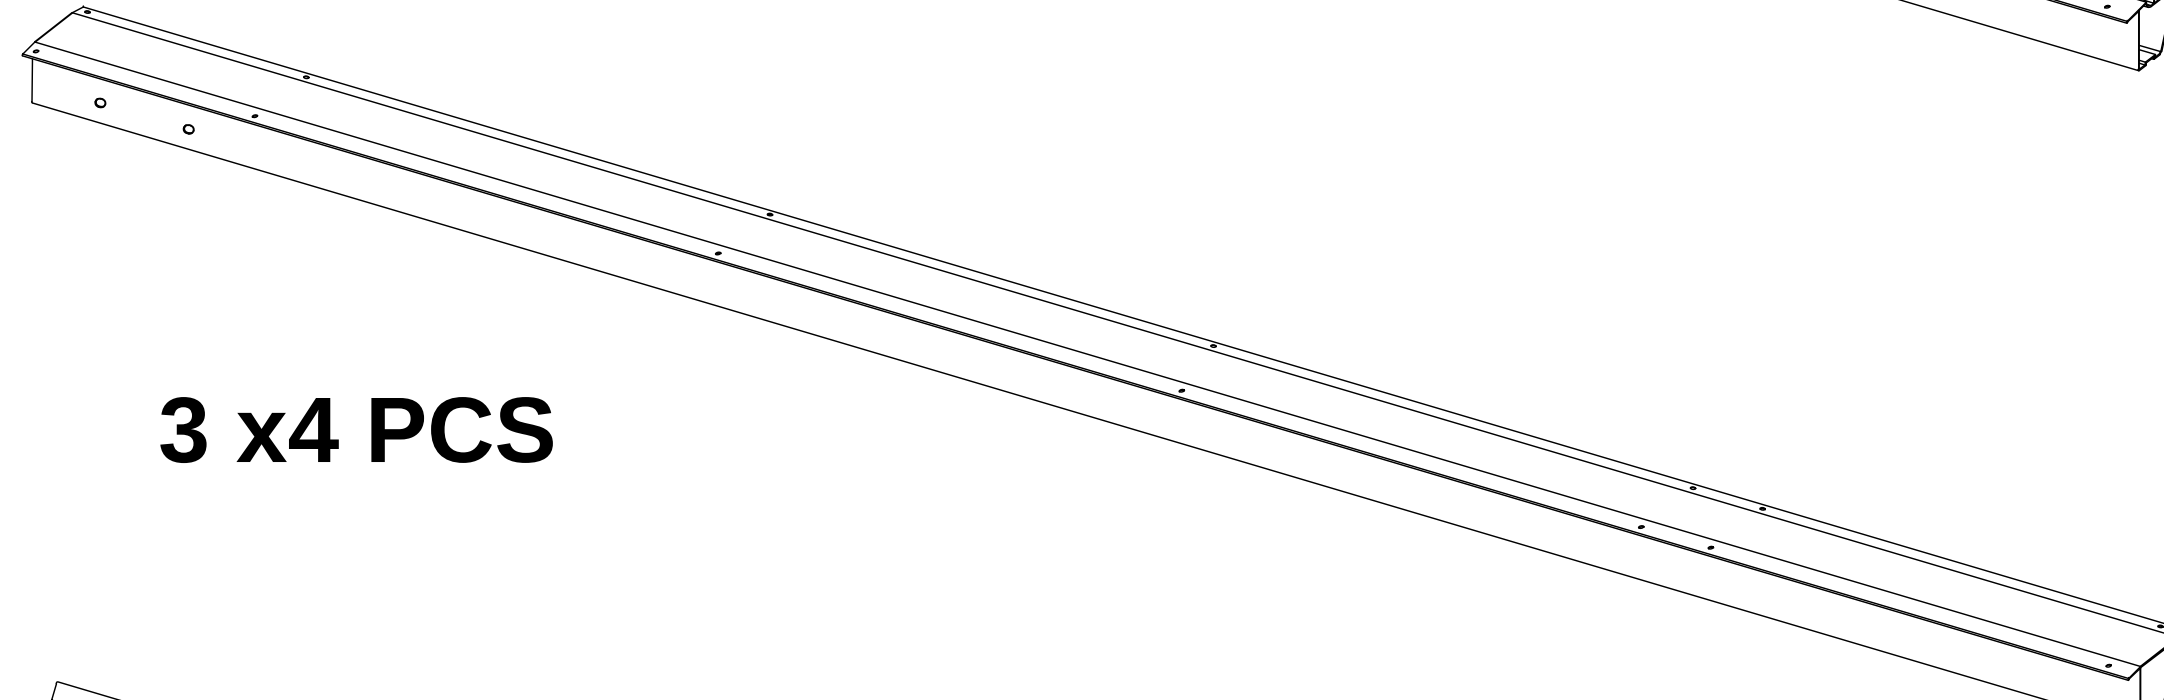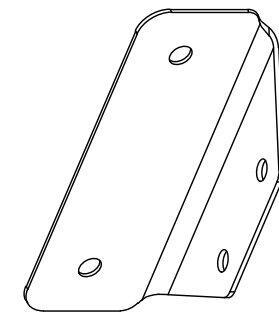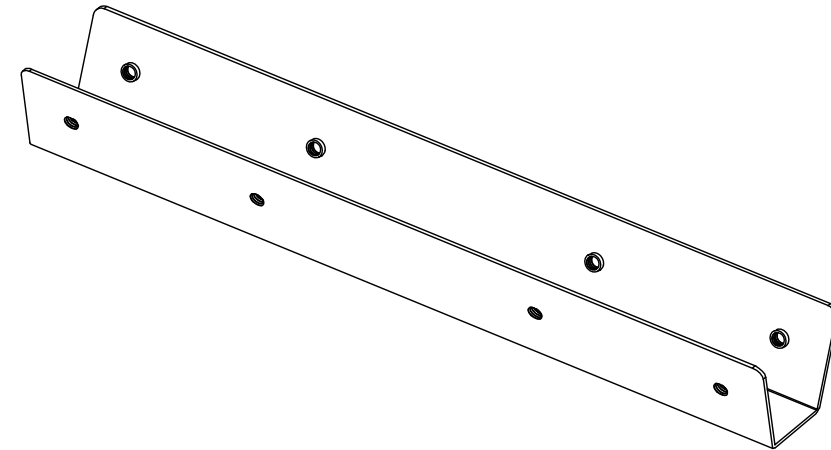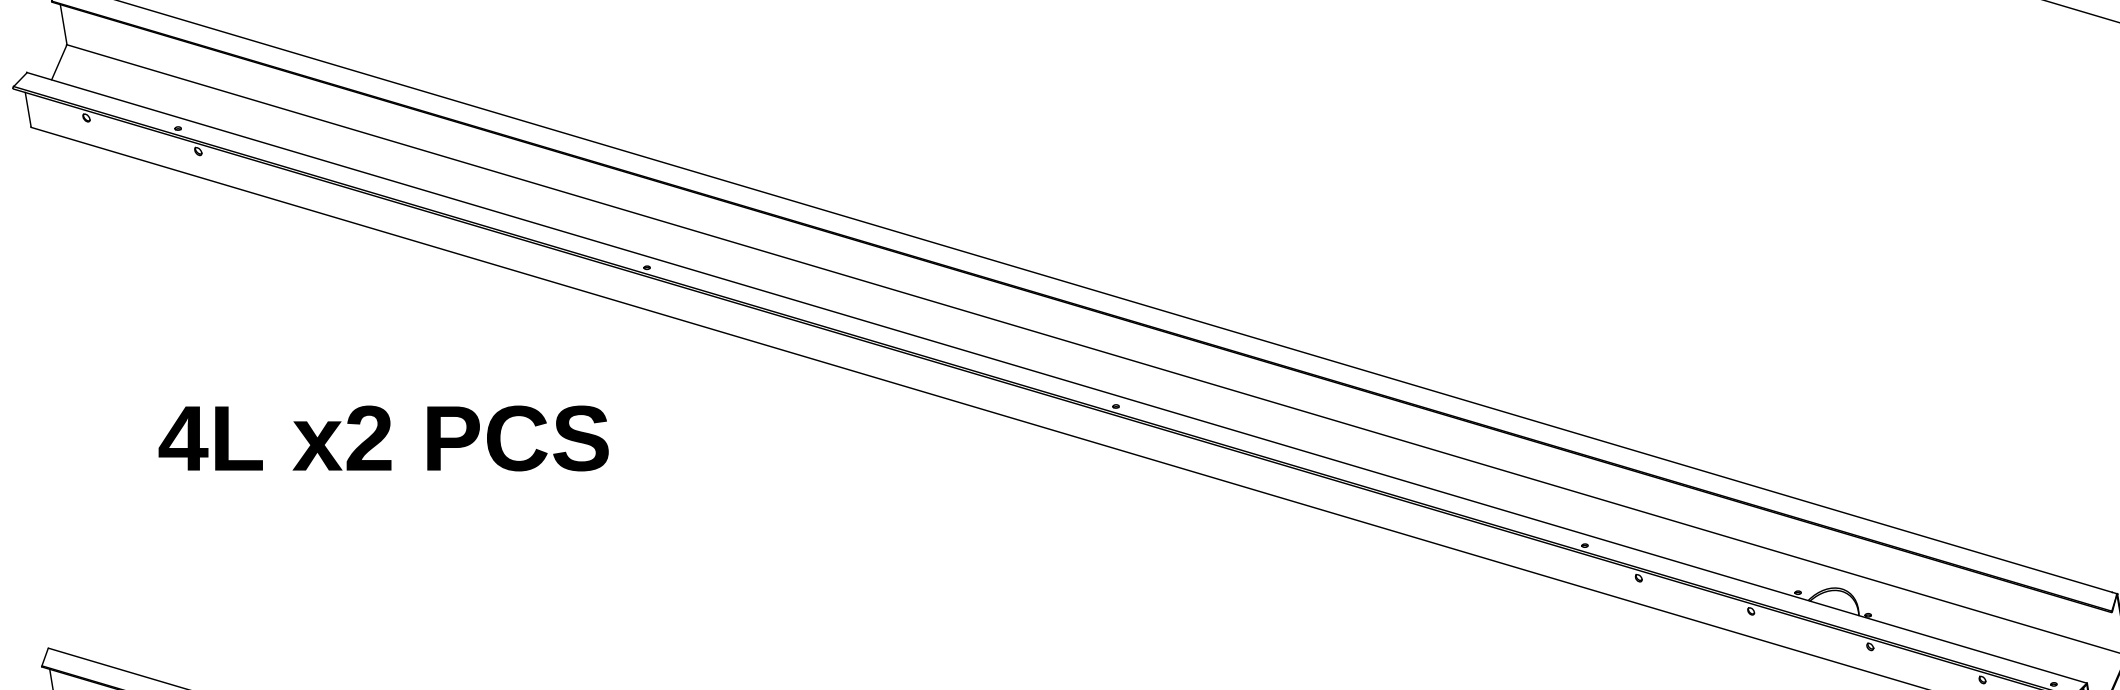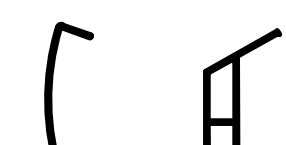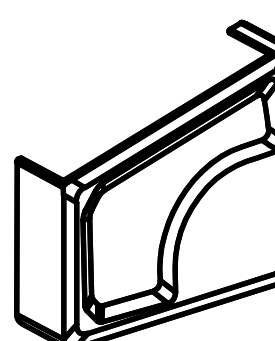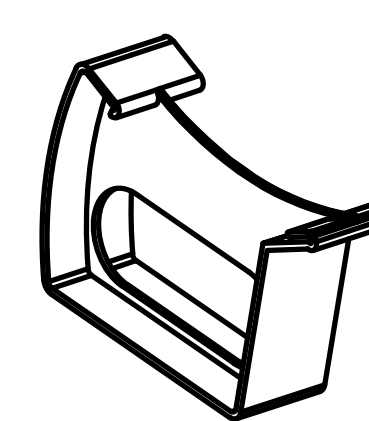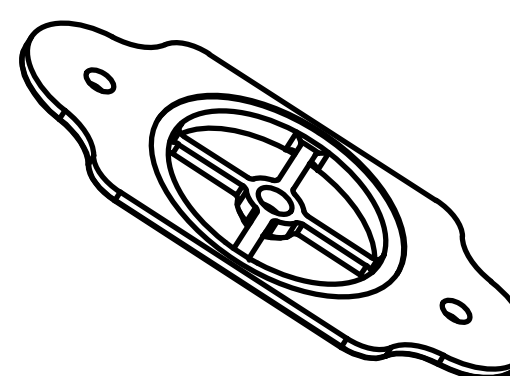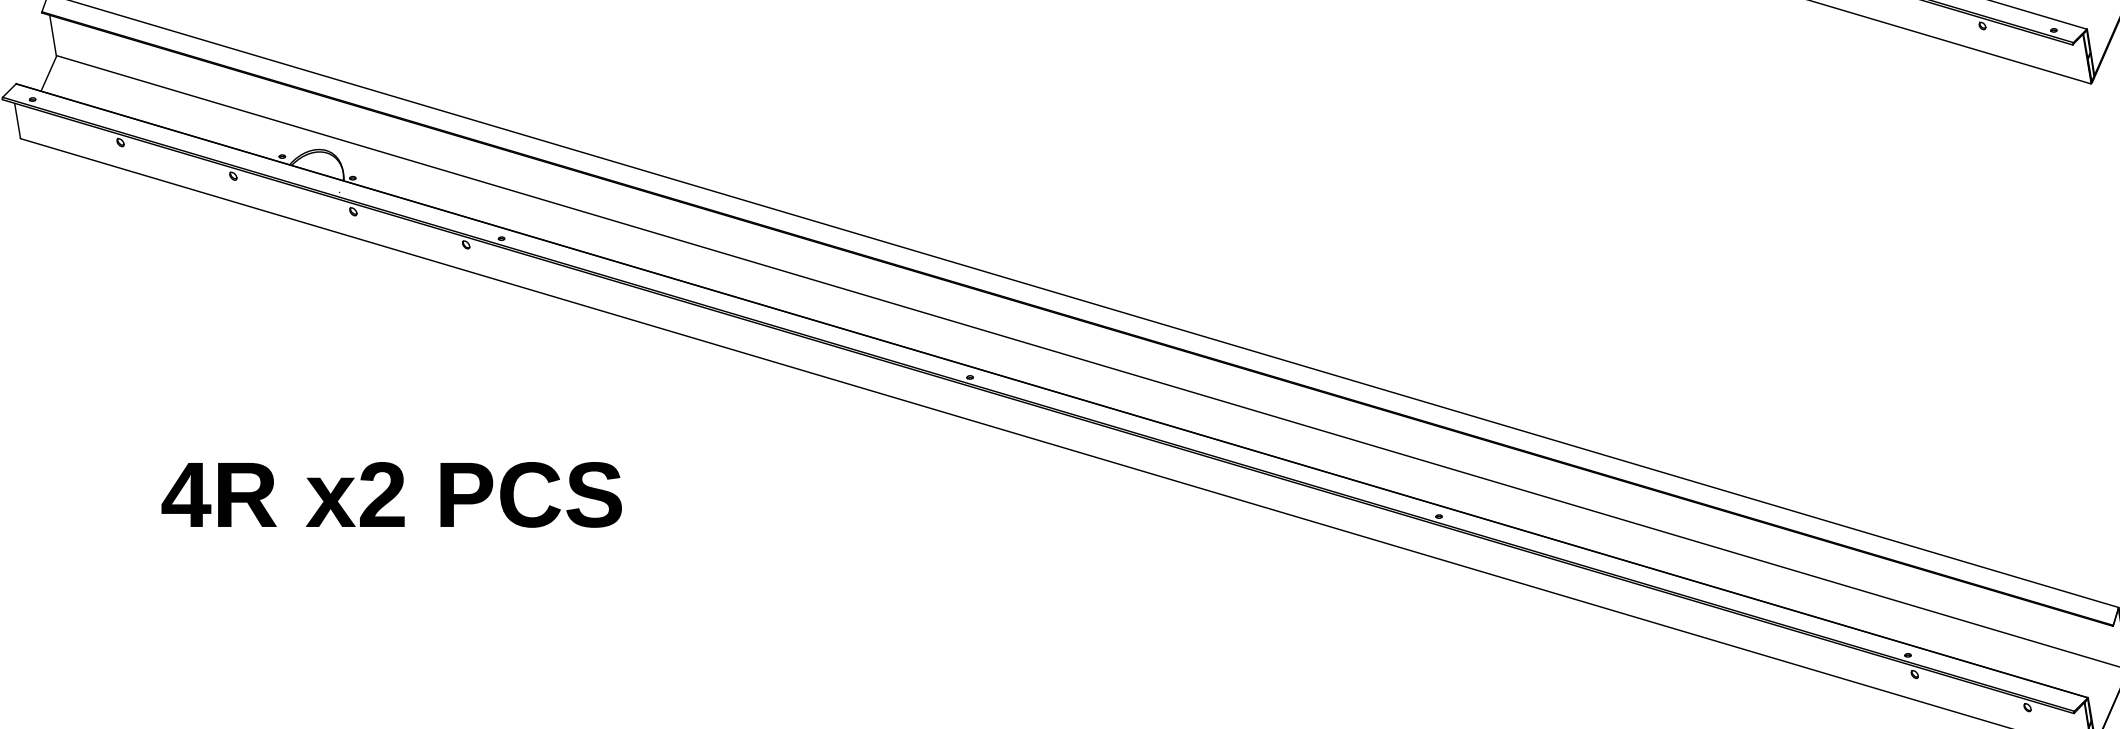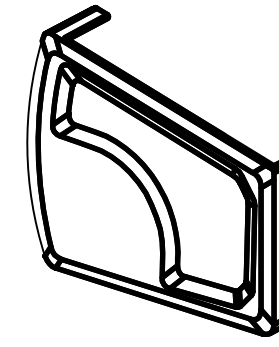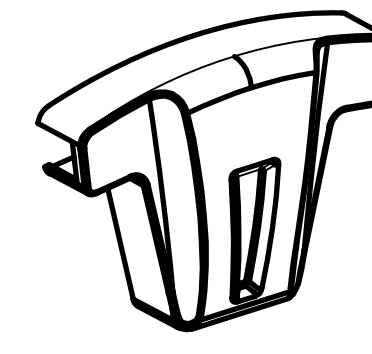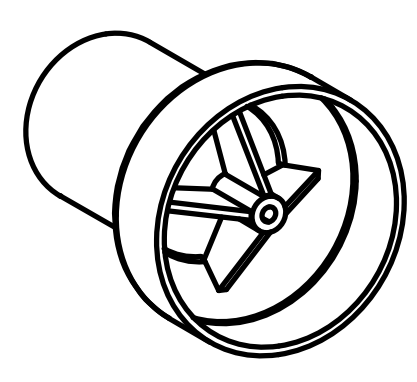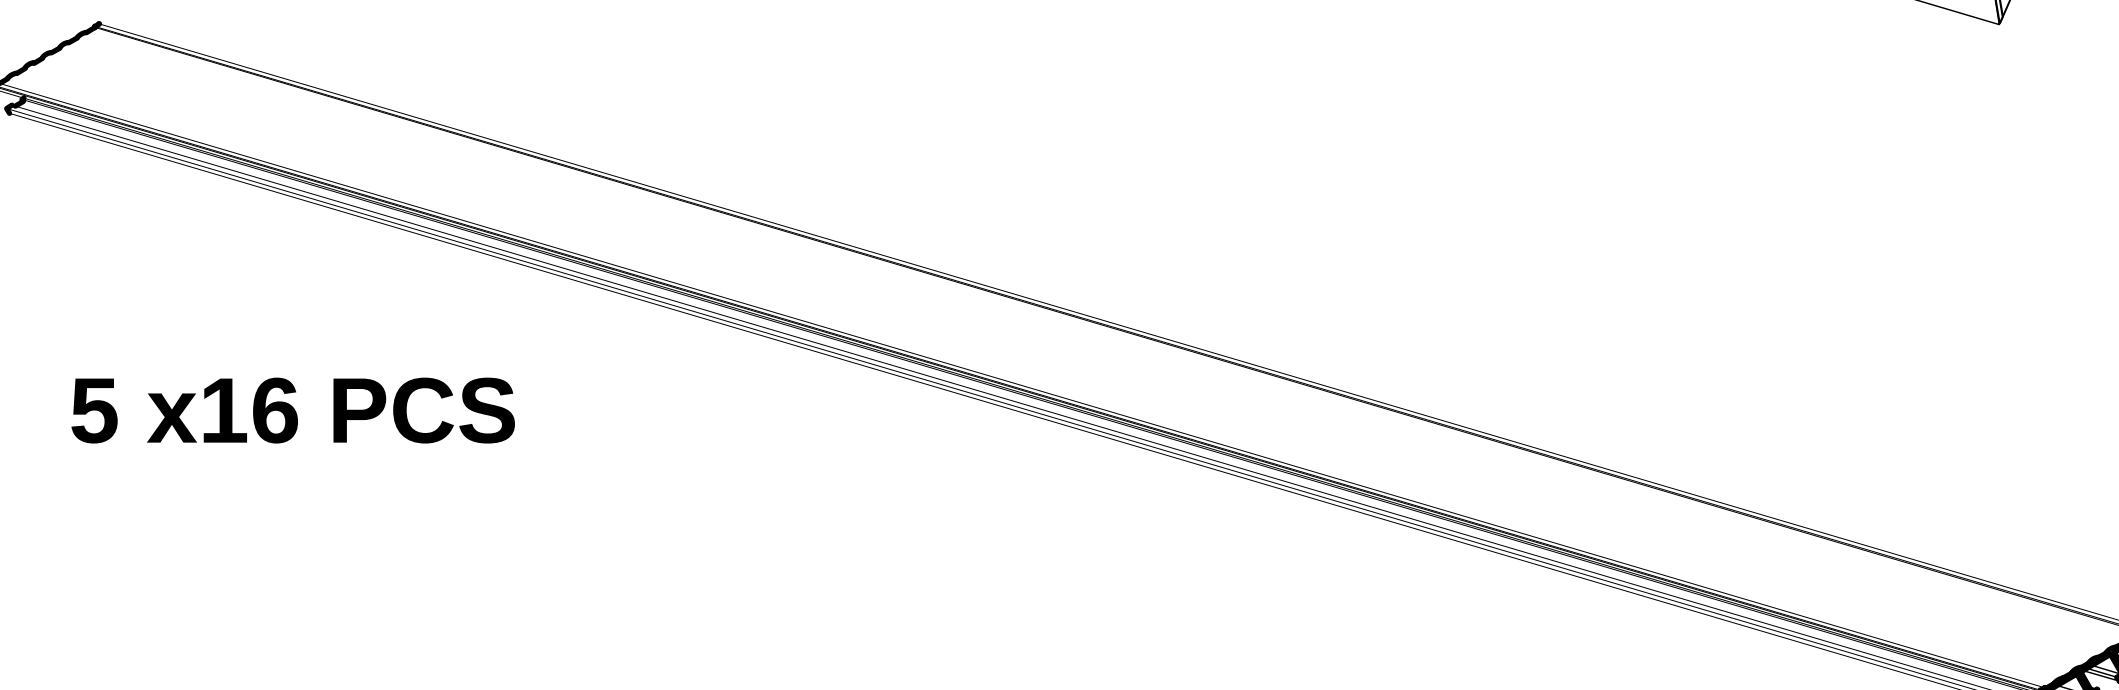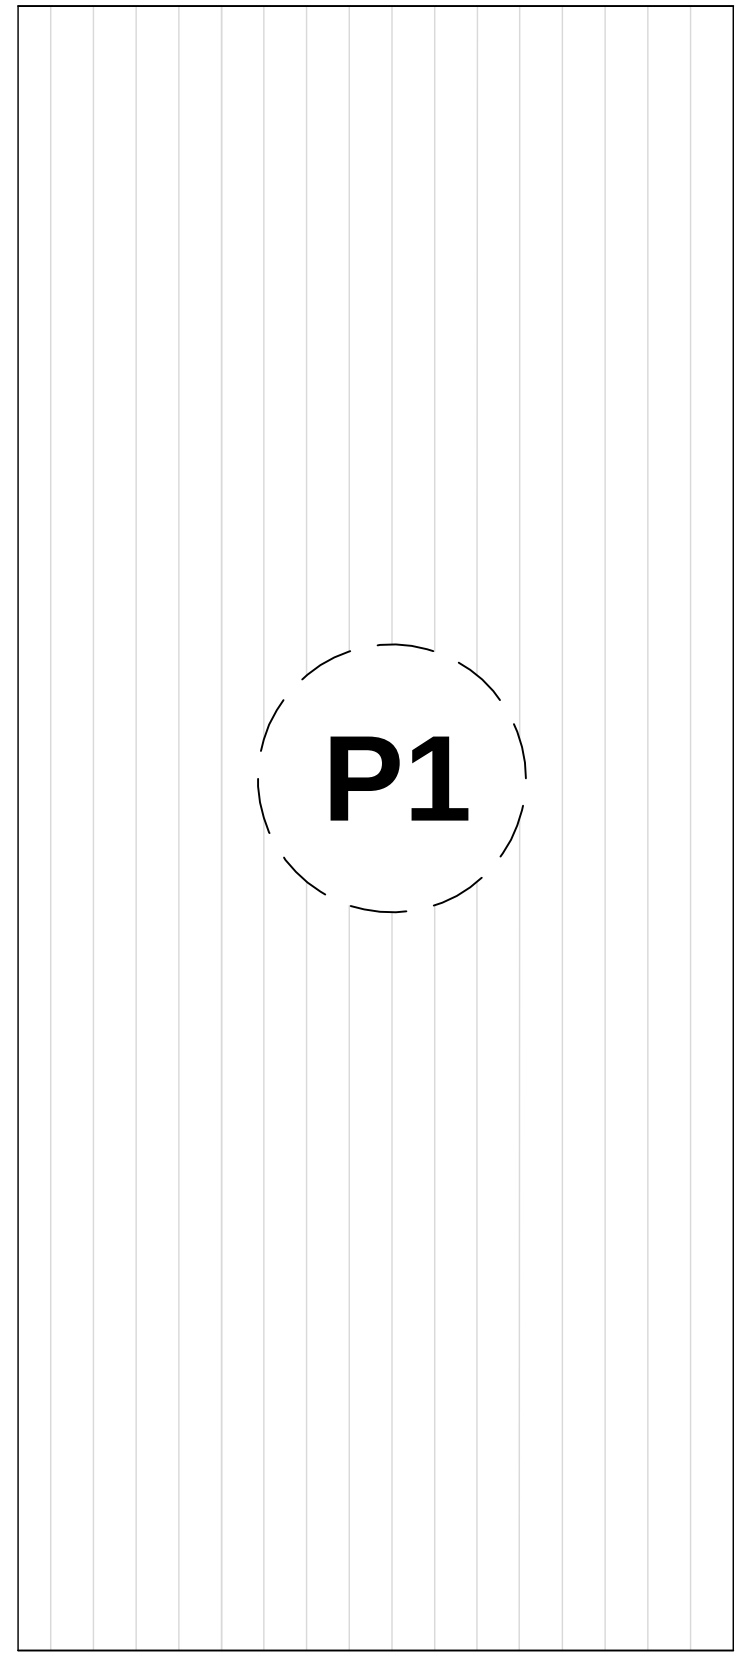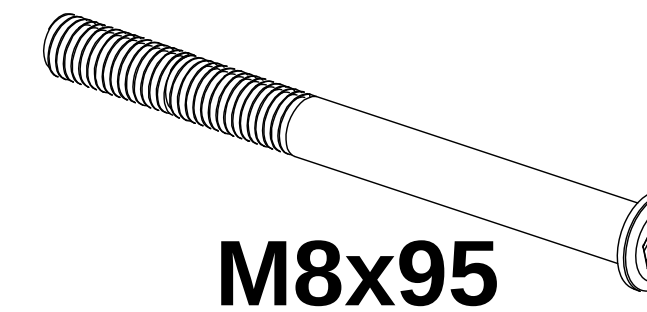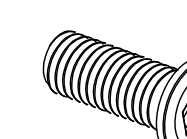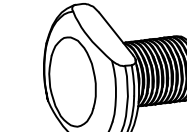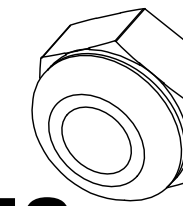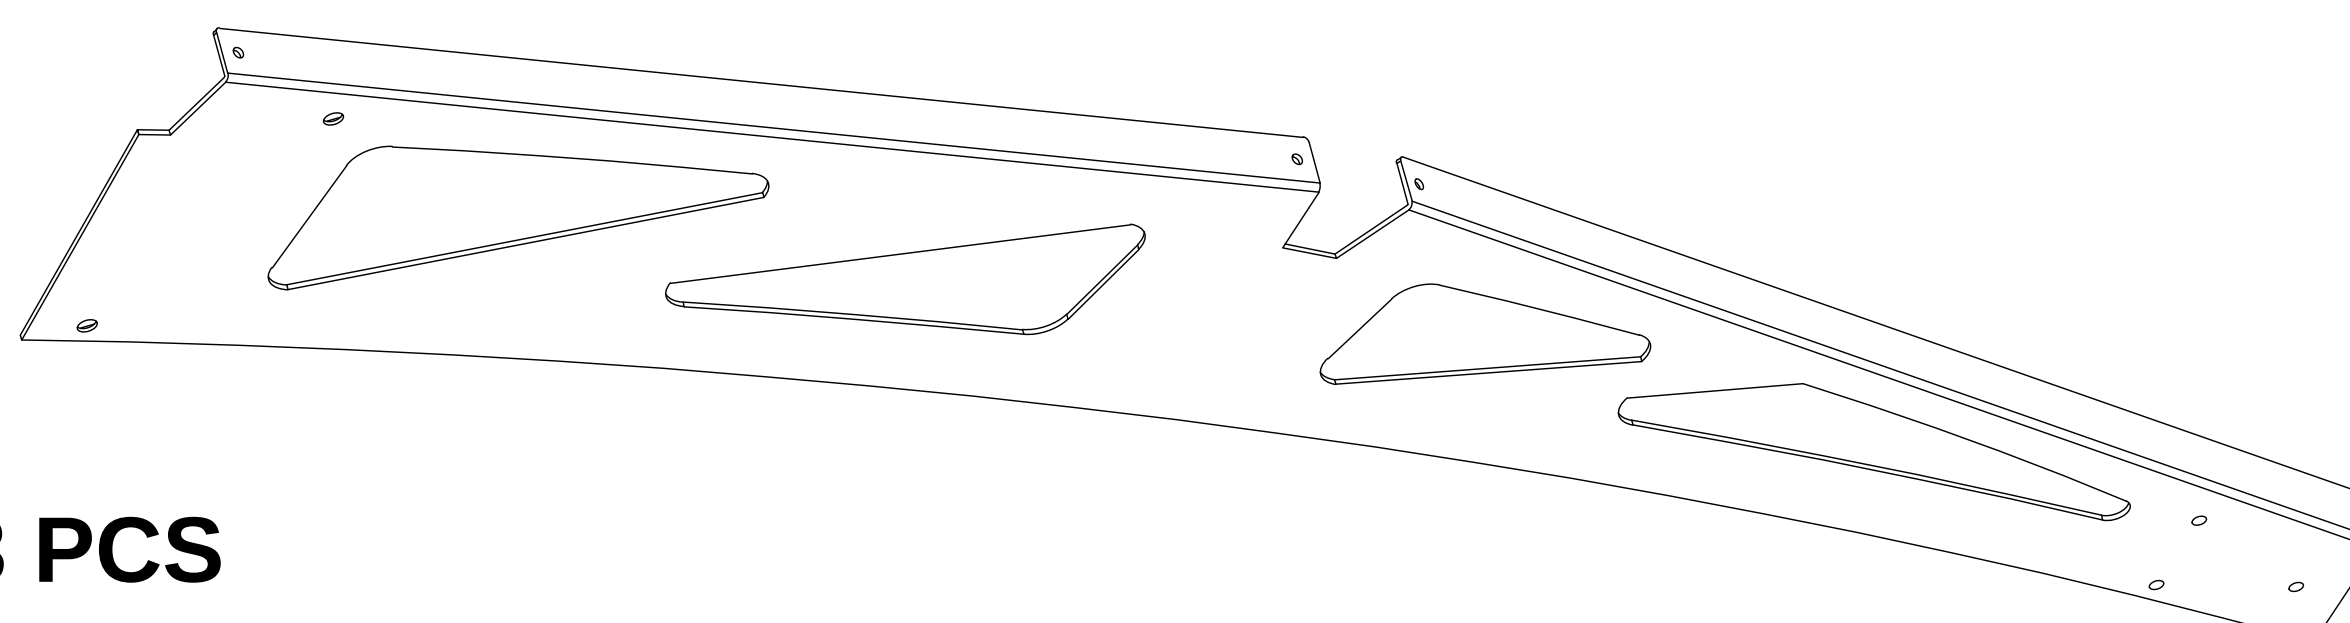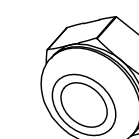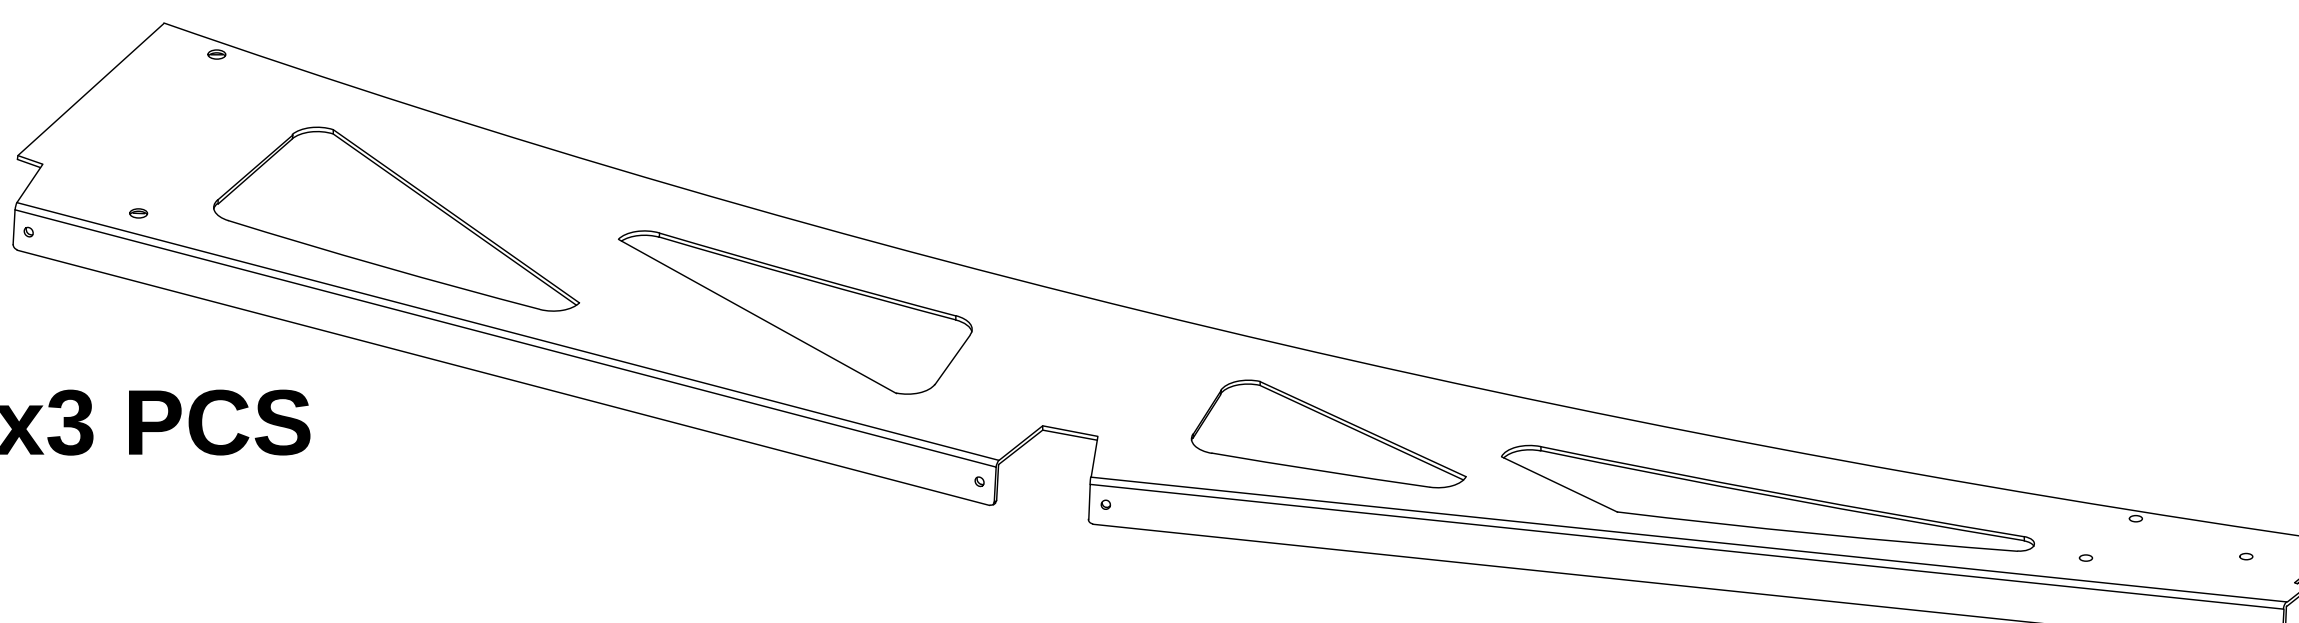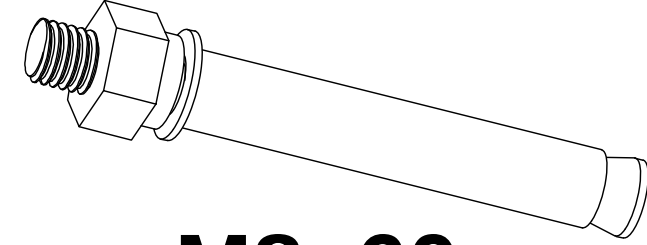Item	Qty		MM	Item	Qty	Item	Qty	Item	Qty
	1 x6 PCS		2100		B3L x6 PCS		B4L x6 PCS		B6 x6 PCS
	2 x2 PCS		2400		B3R x6 PCS		B4R x6 PCS	Customer should prepare Electric screwdriver,Hexagon wrench (suggest)	
	3 x4 PCS		2400		B1 x12 PCS		B5 x3 PCS		
	4L x2 PCS		2399		S1L x2 PCS		S2 x2 PCS		S4 x4 PCS
	4R x2 PCS		2399		S1R x2 PCS		S3 x6 PCS		S5 x4 PCS
	5 x16 PCS		1775	 P1 14 PCS		 M8x95  M8x25  M8x15  M6x15  M6x12  M8		S6 x24PCS M8	
	B2L x3 PCS							F7 x74PCS	 M6
	B2R x3 PCS							F9 x24PCS	 M8x60
						F10 x4PCS	 ST4.8X16		

1

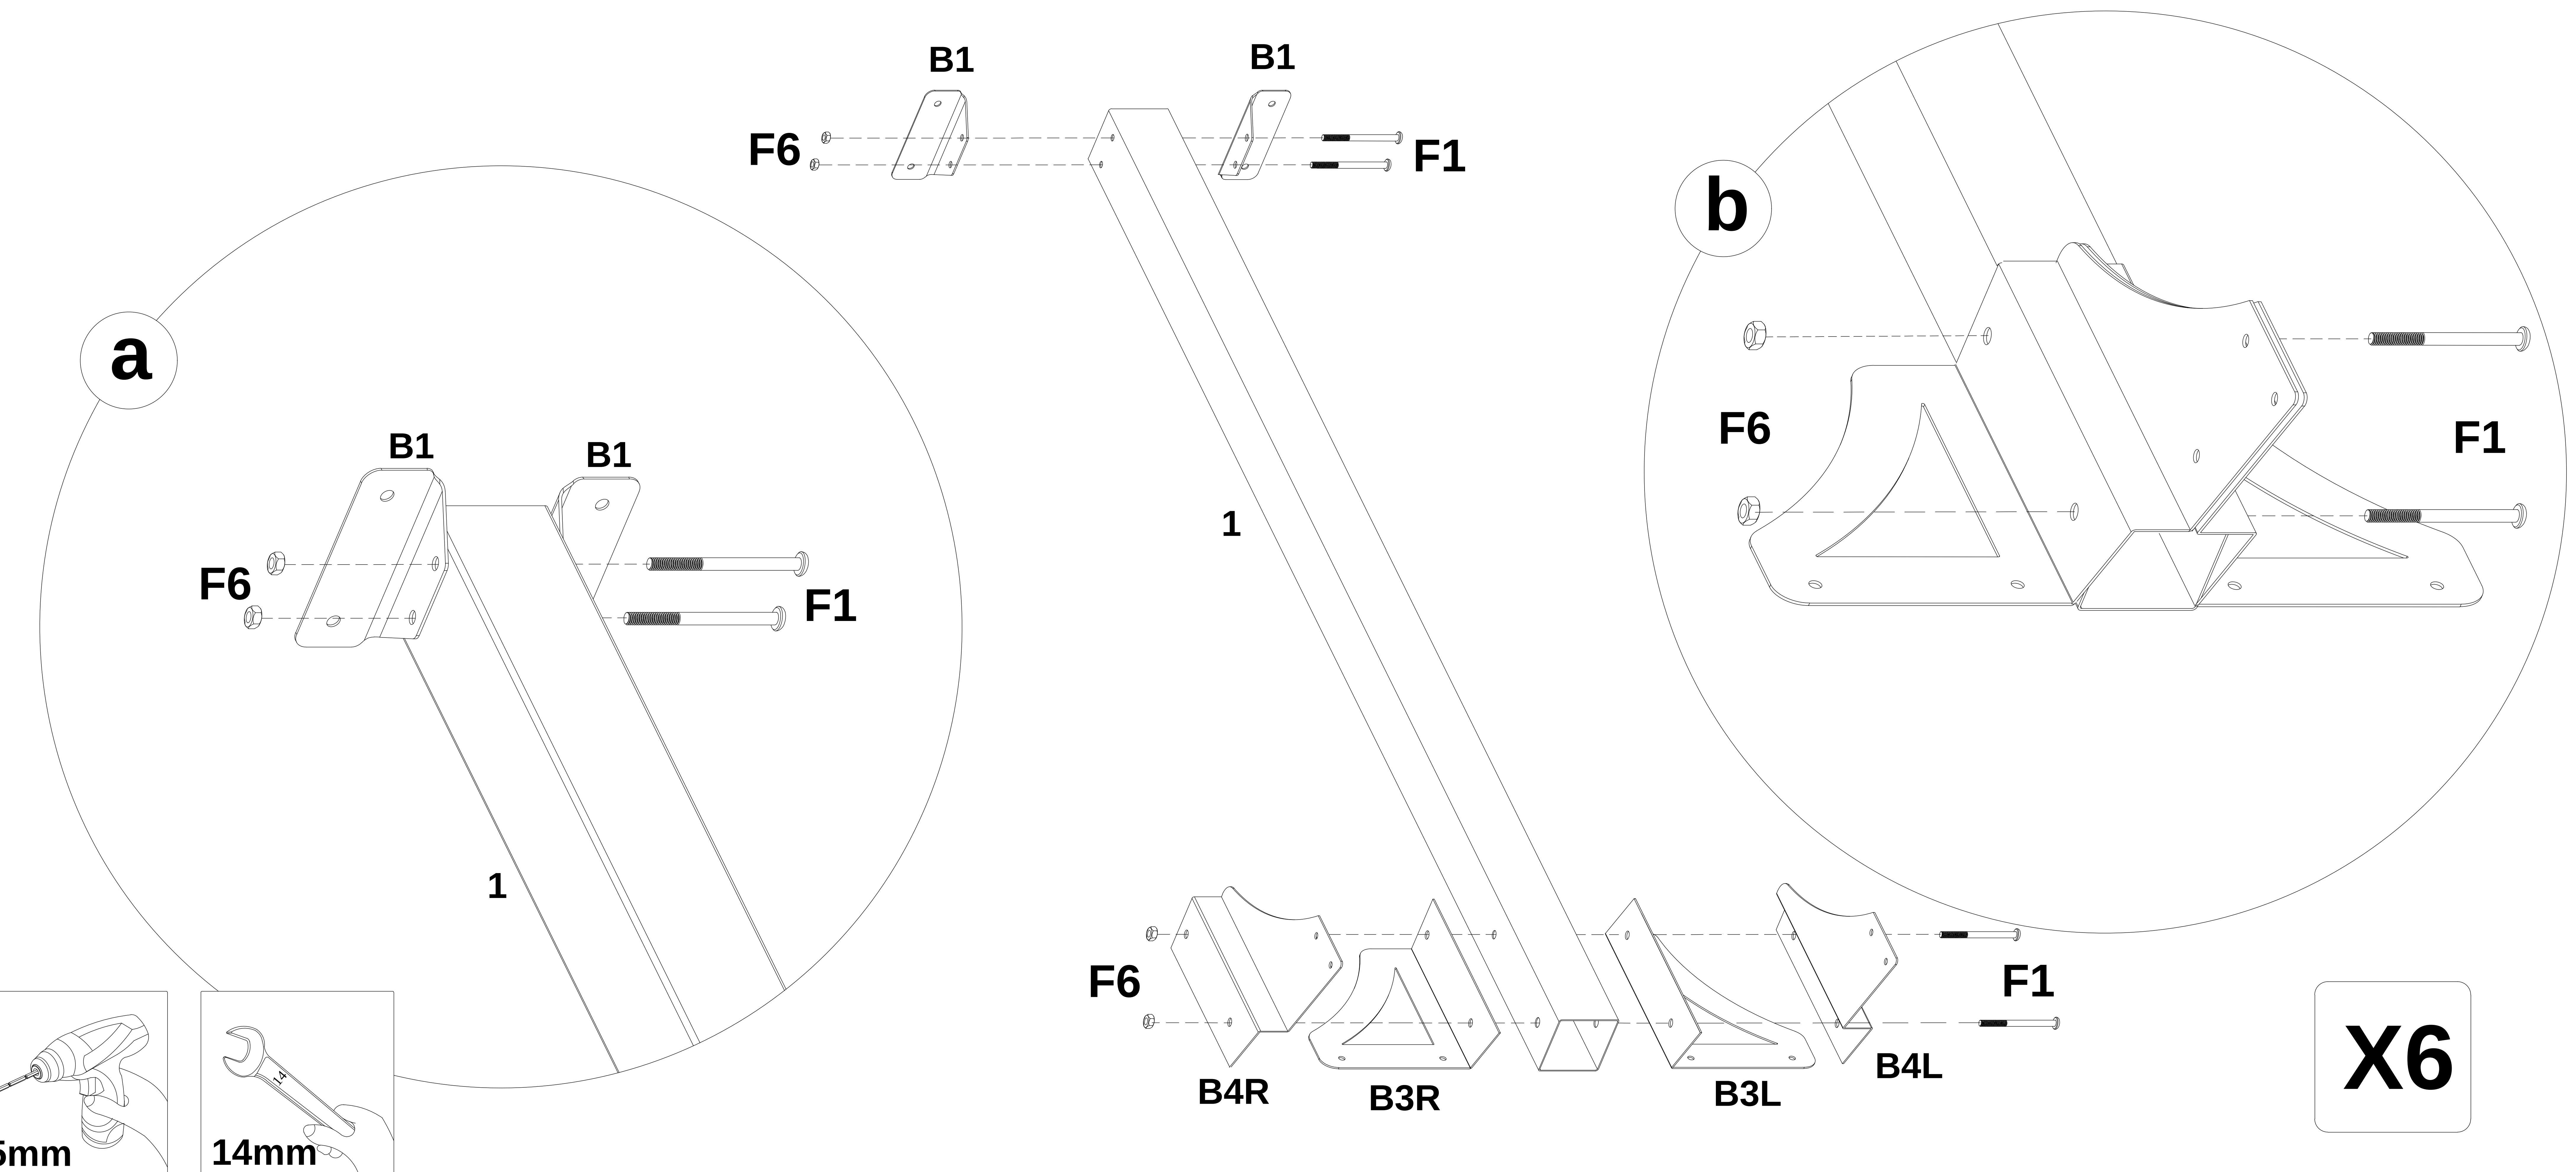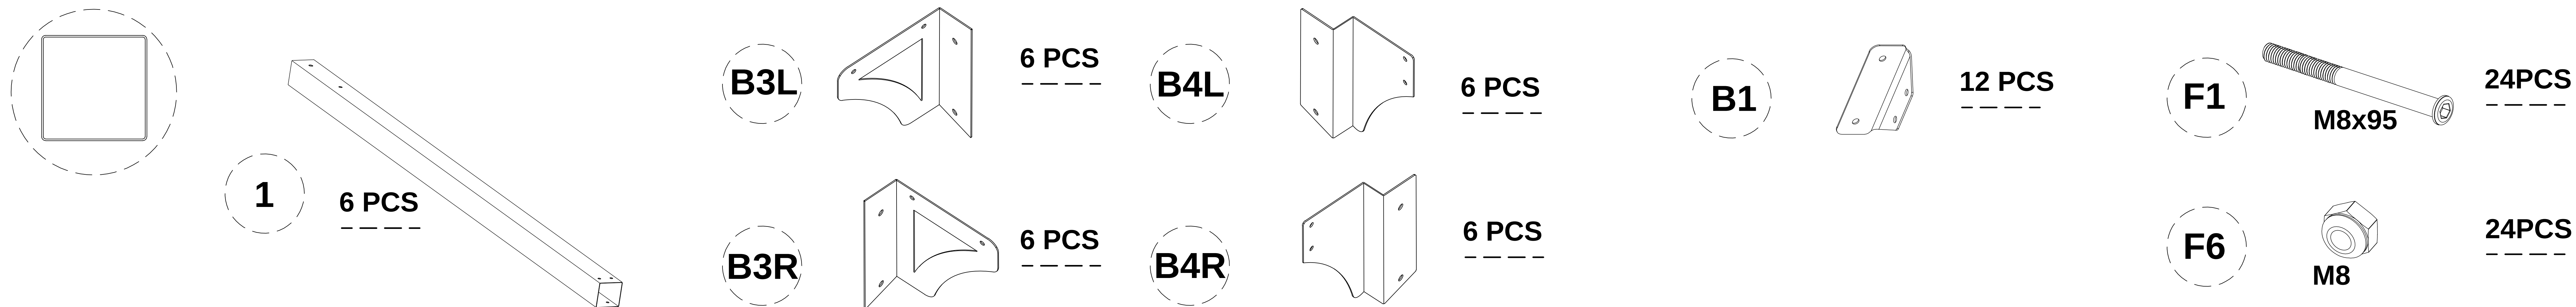


2









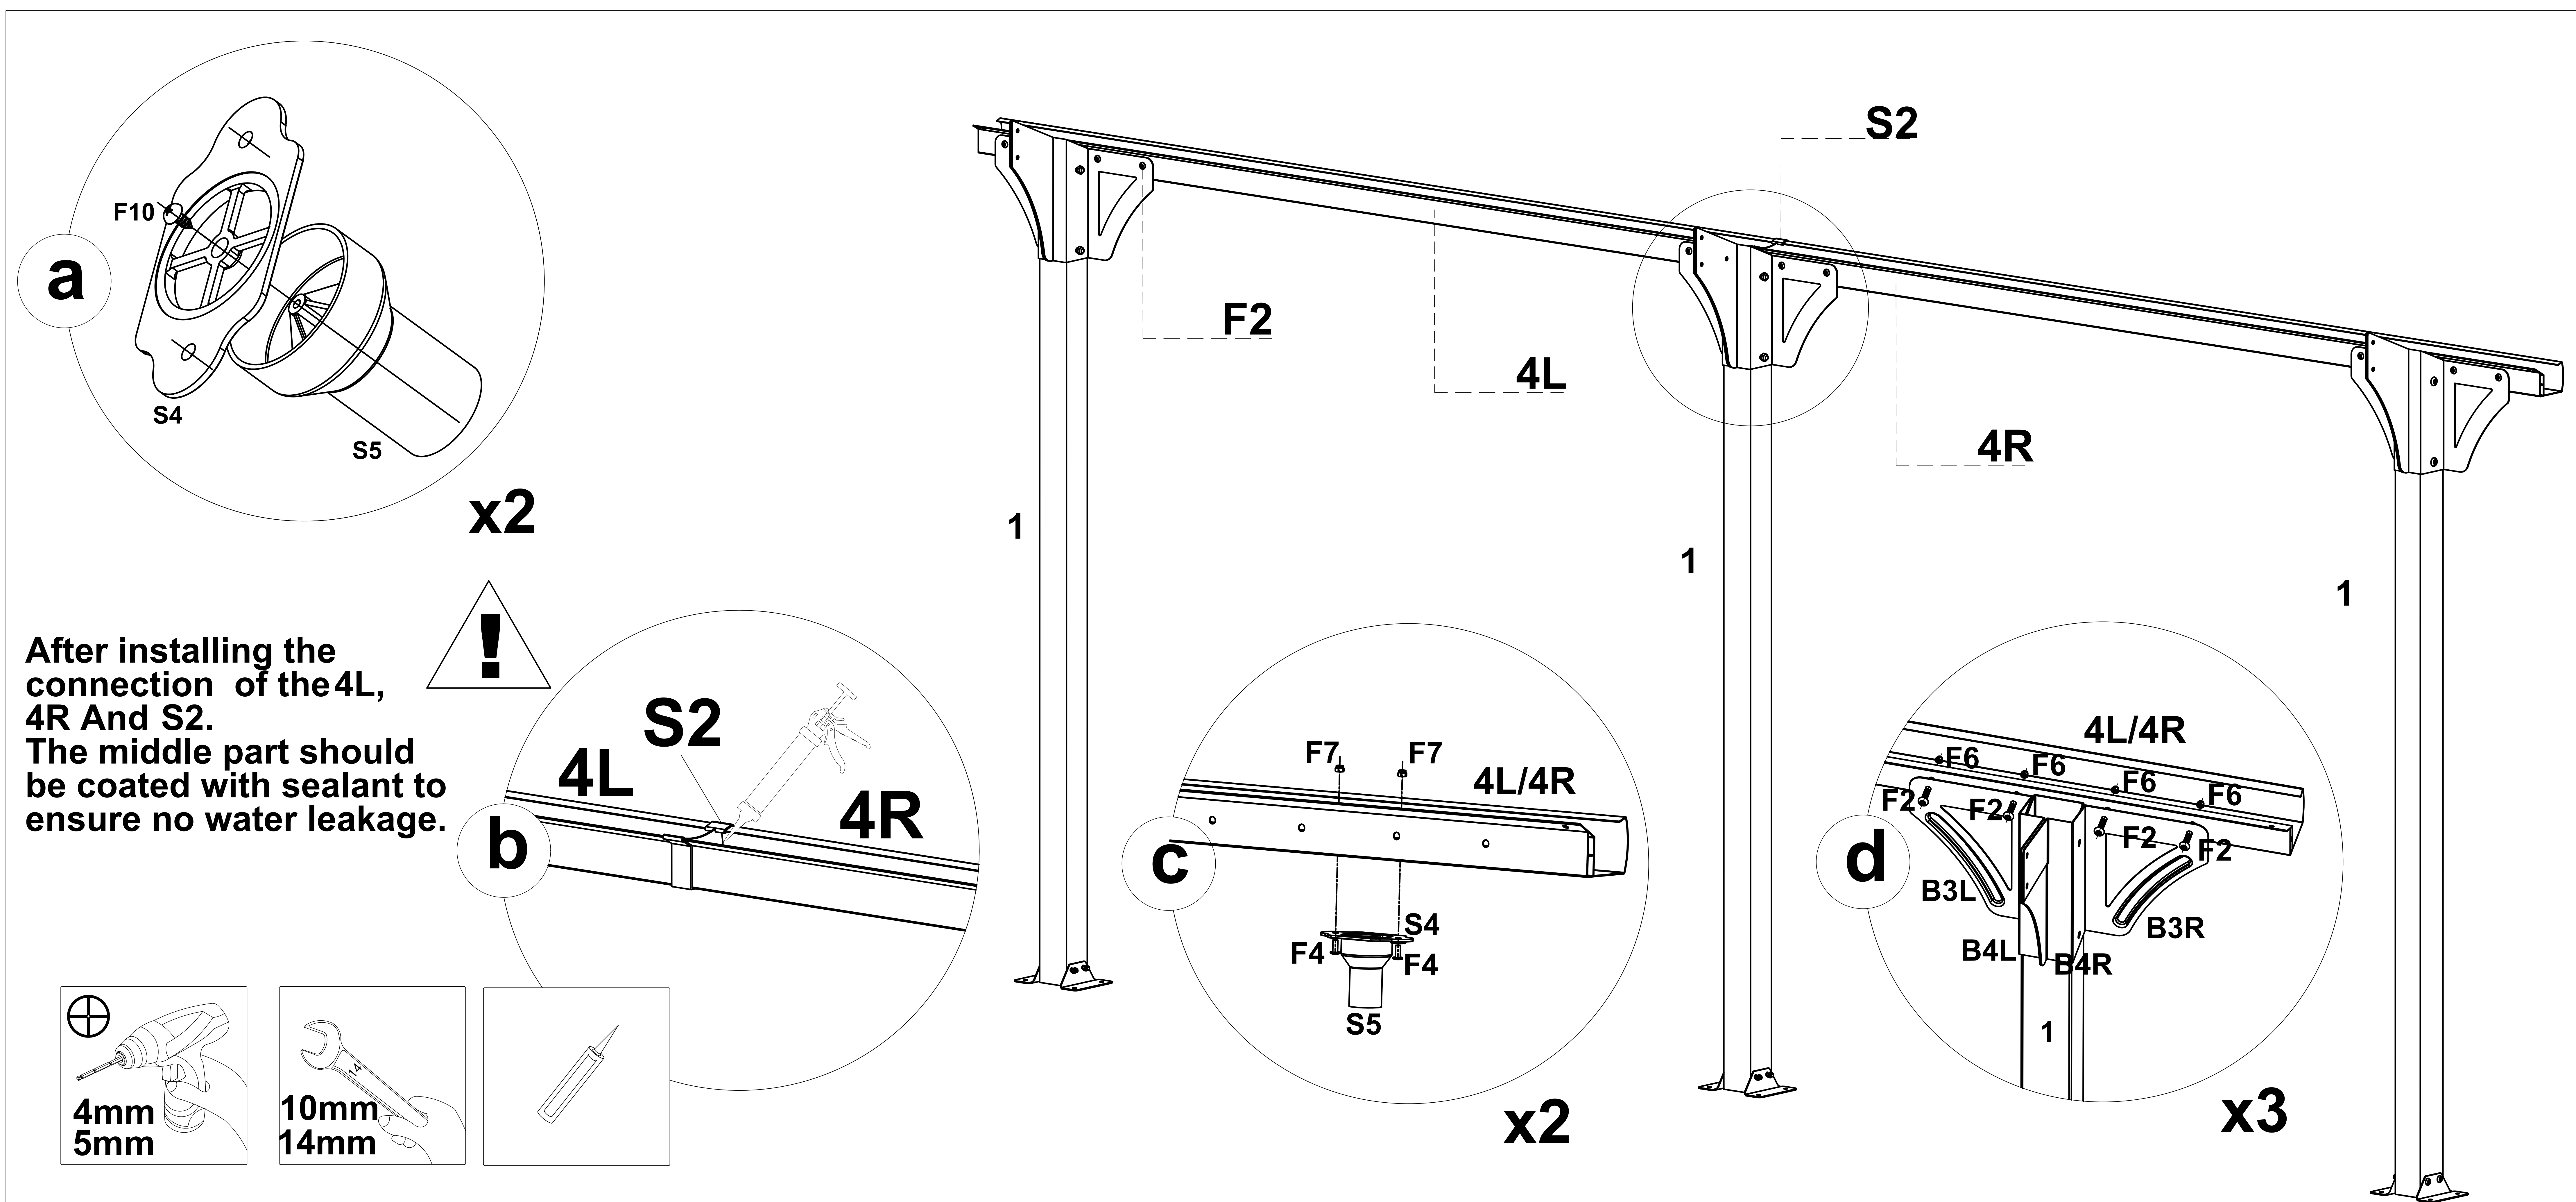
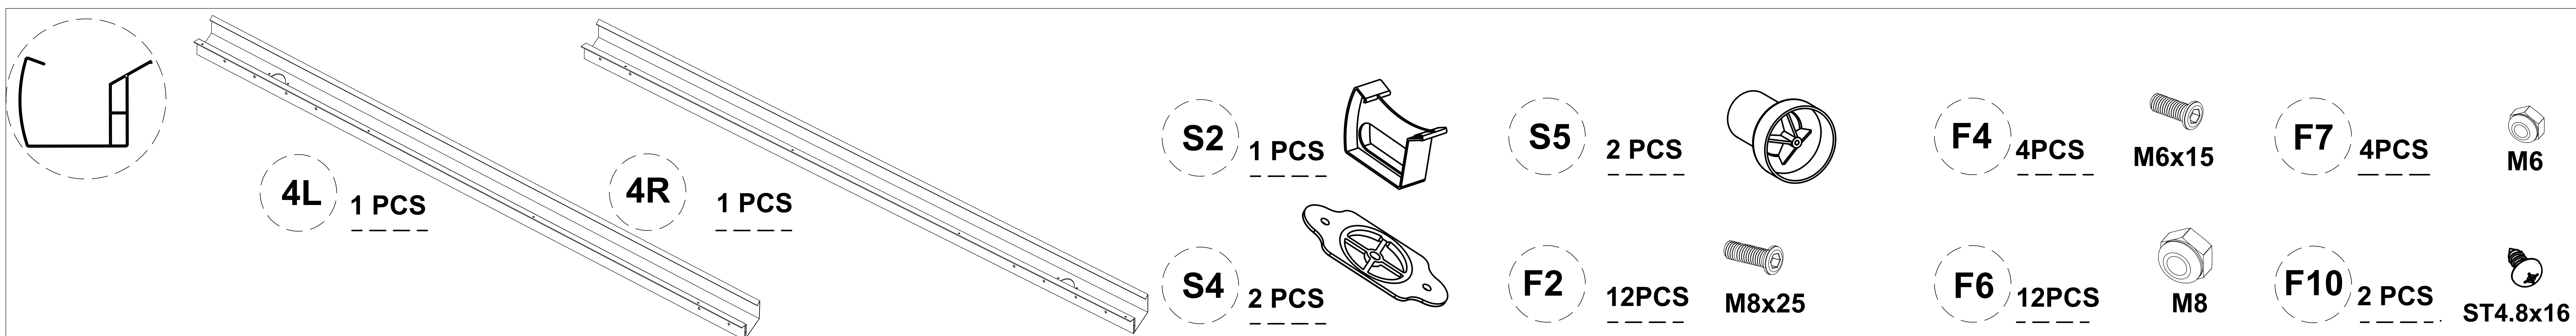


3



F9 12PCS

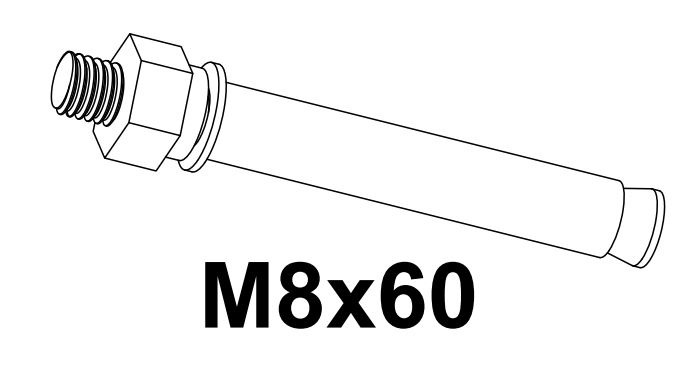


S6 12PCS

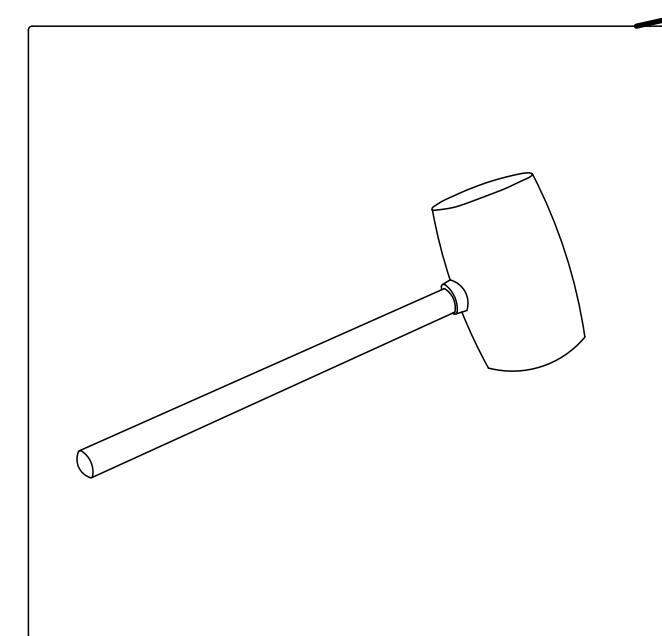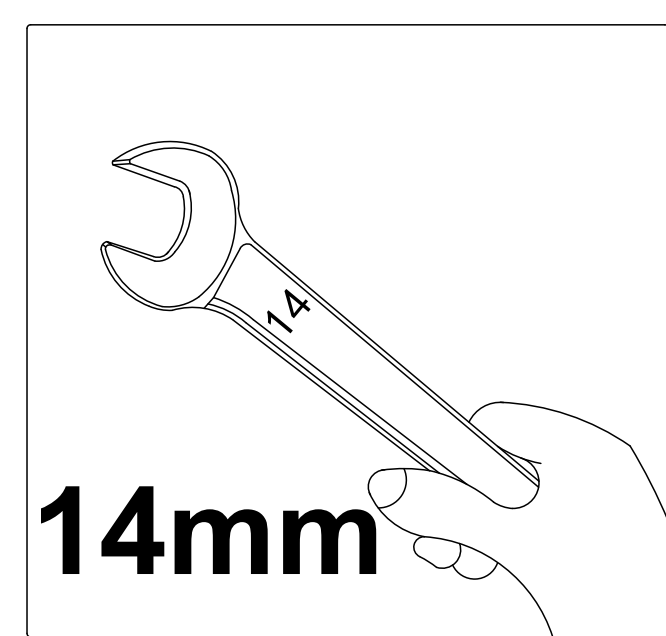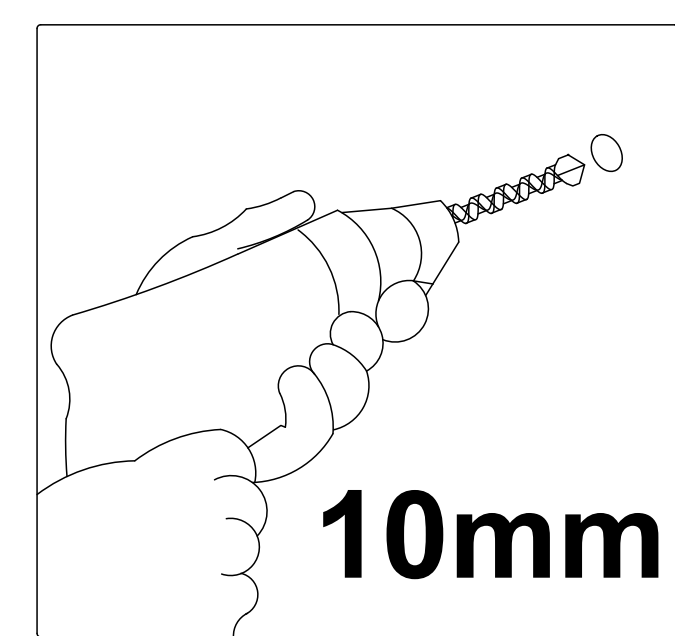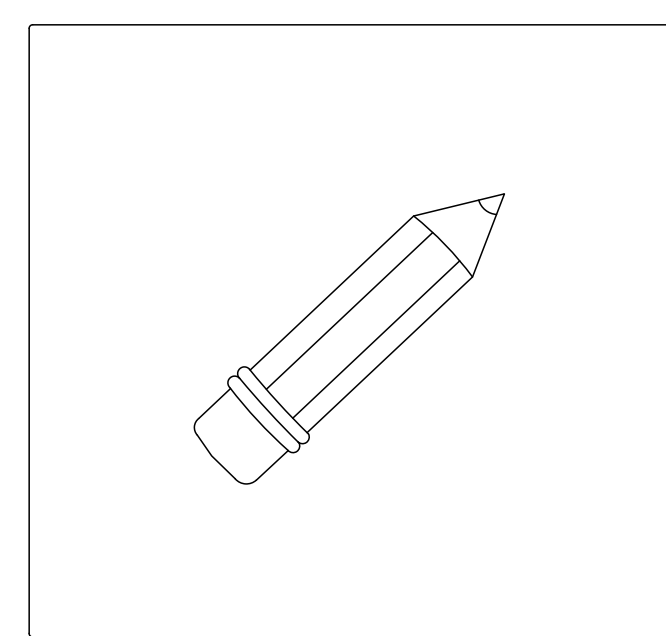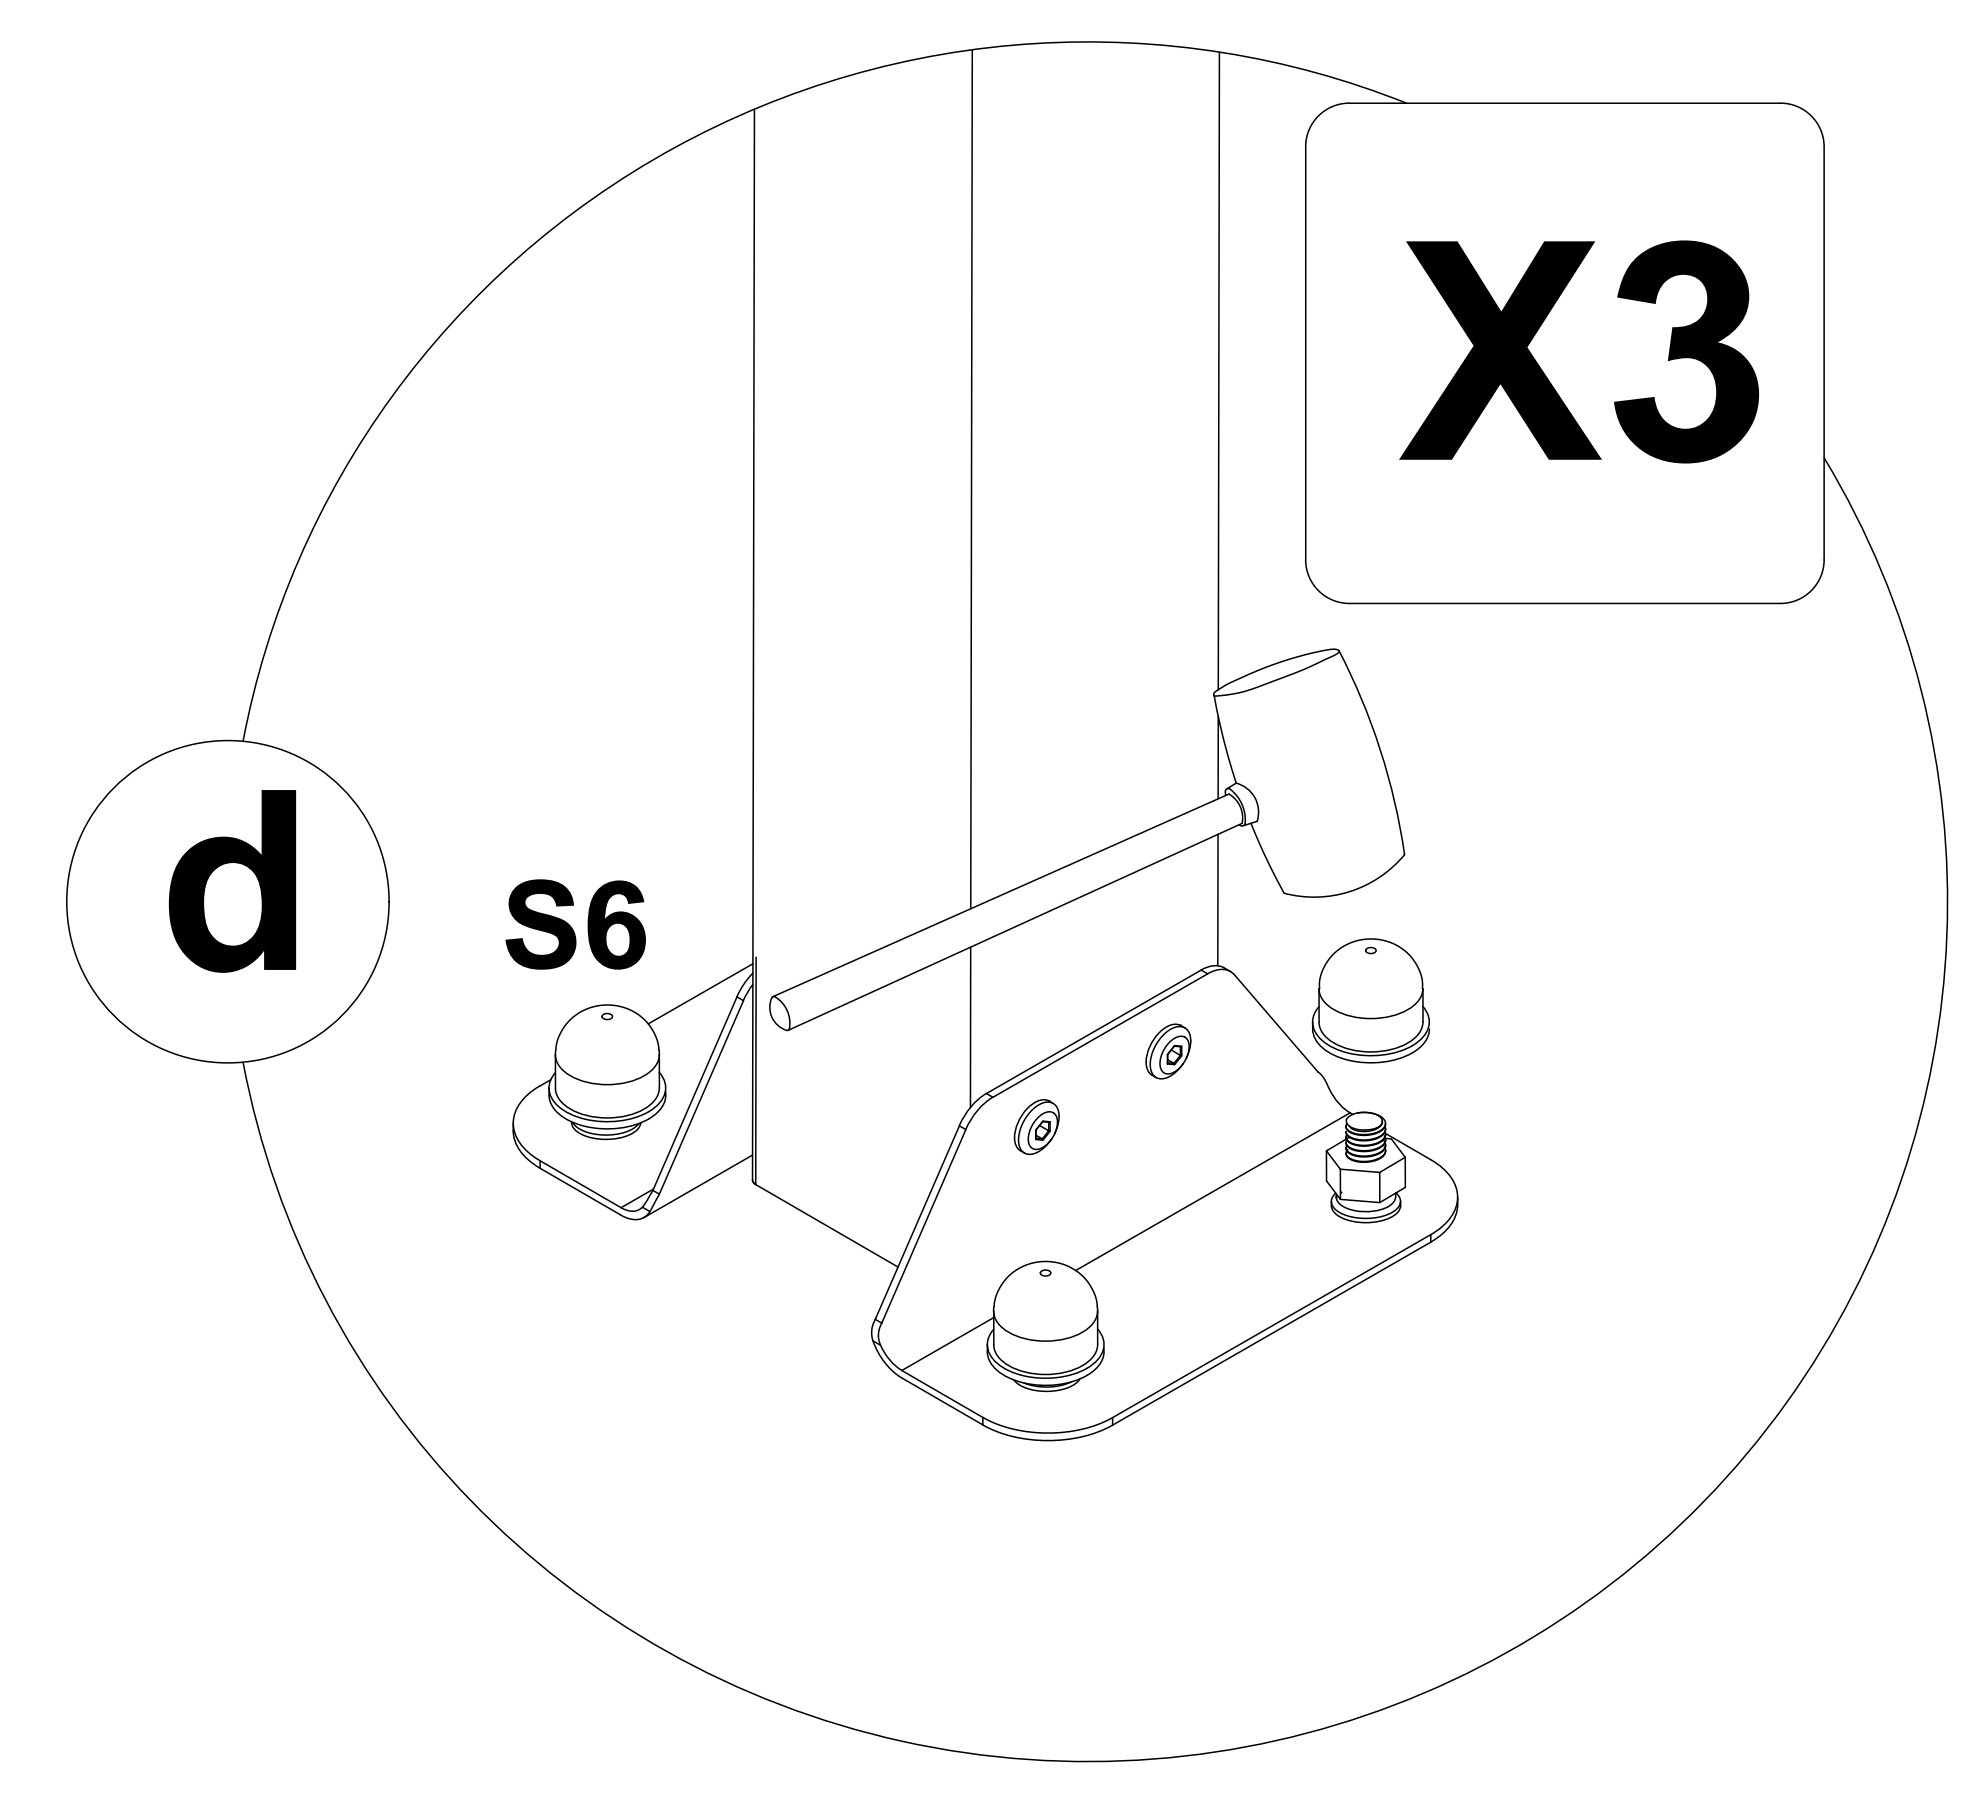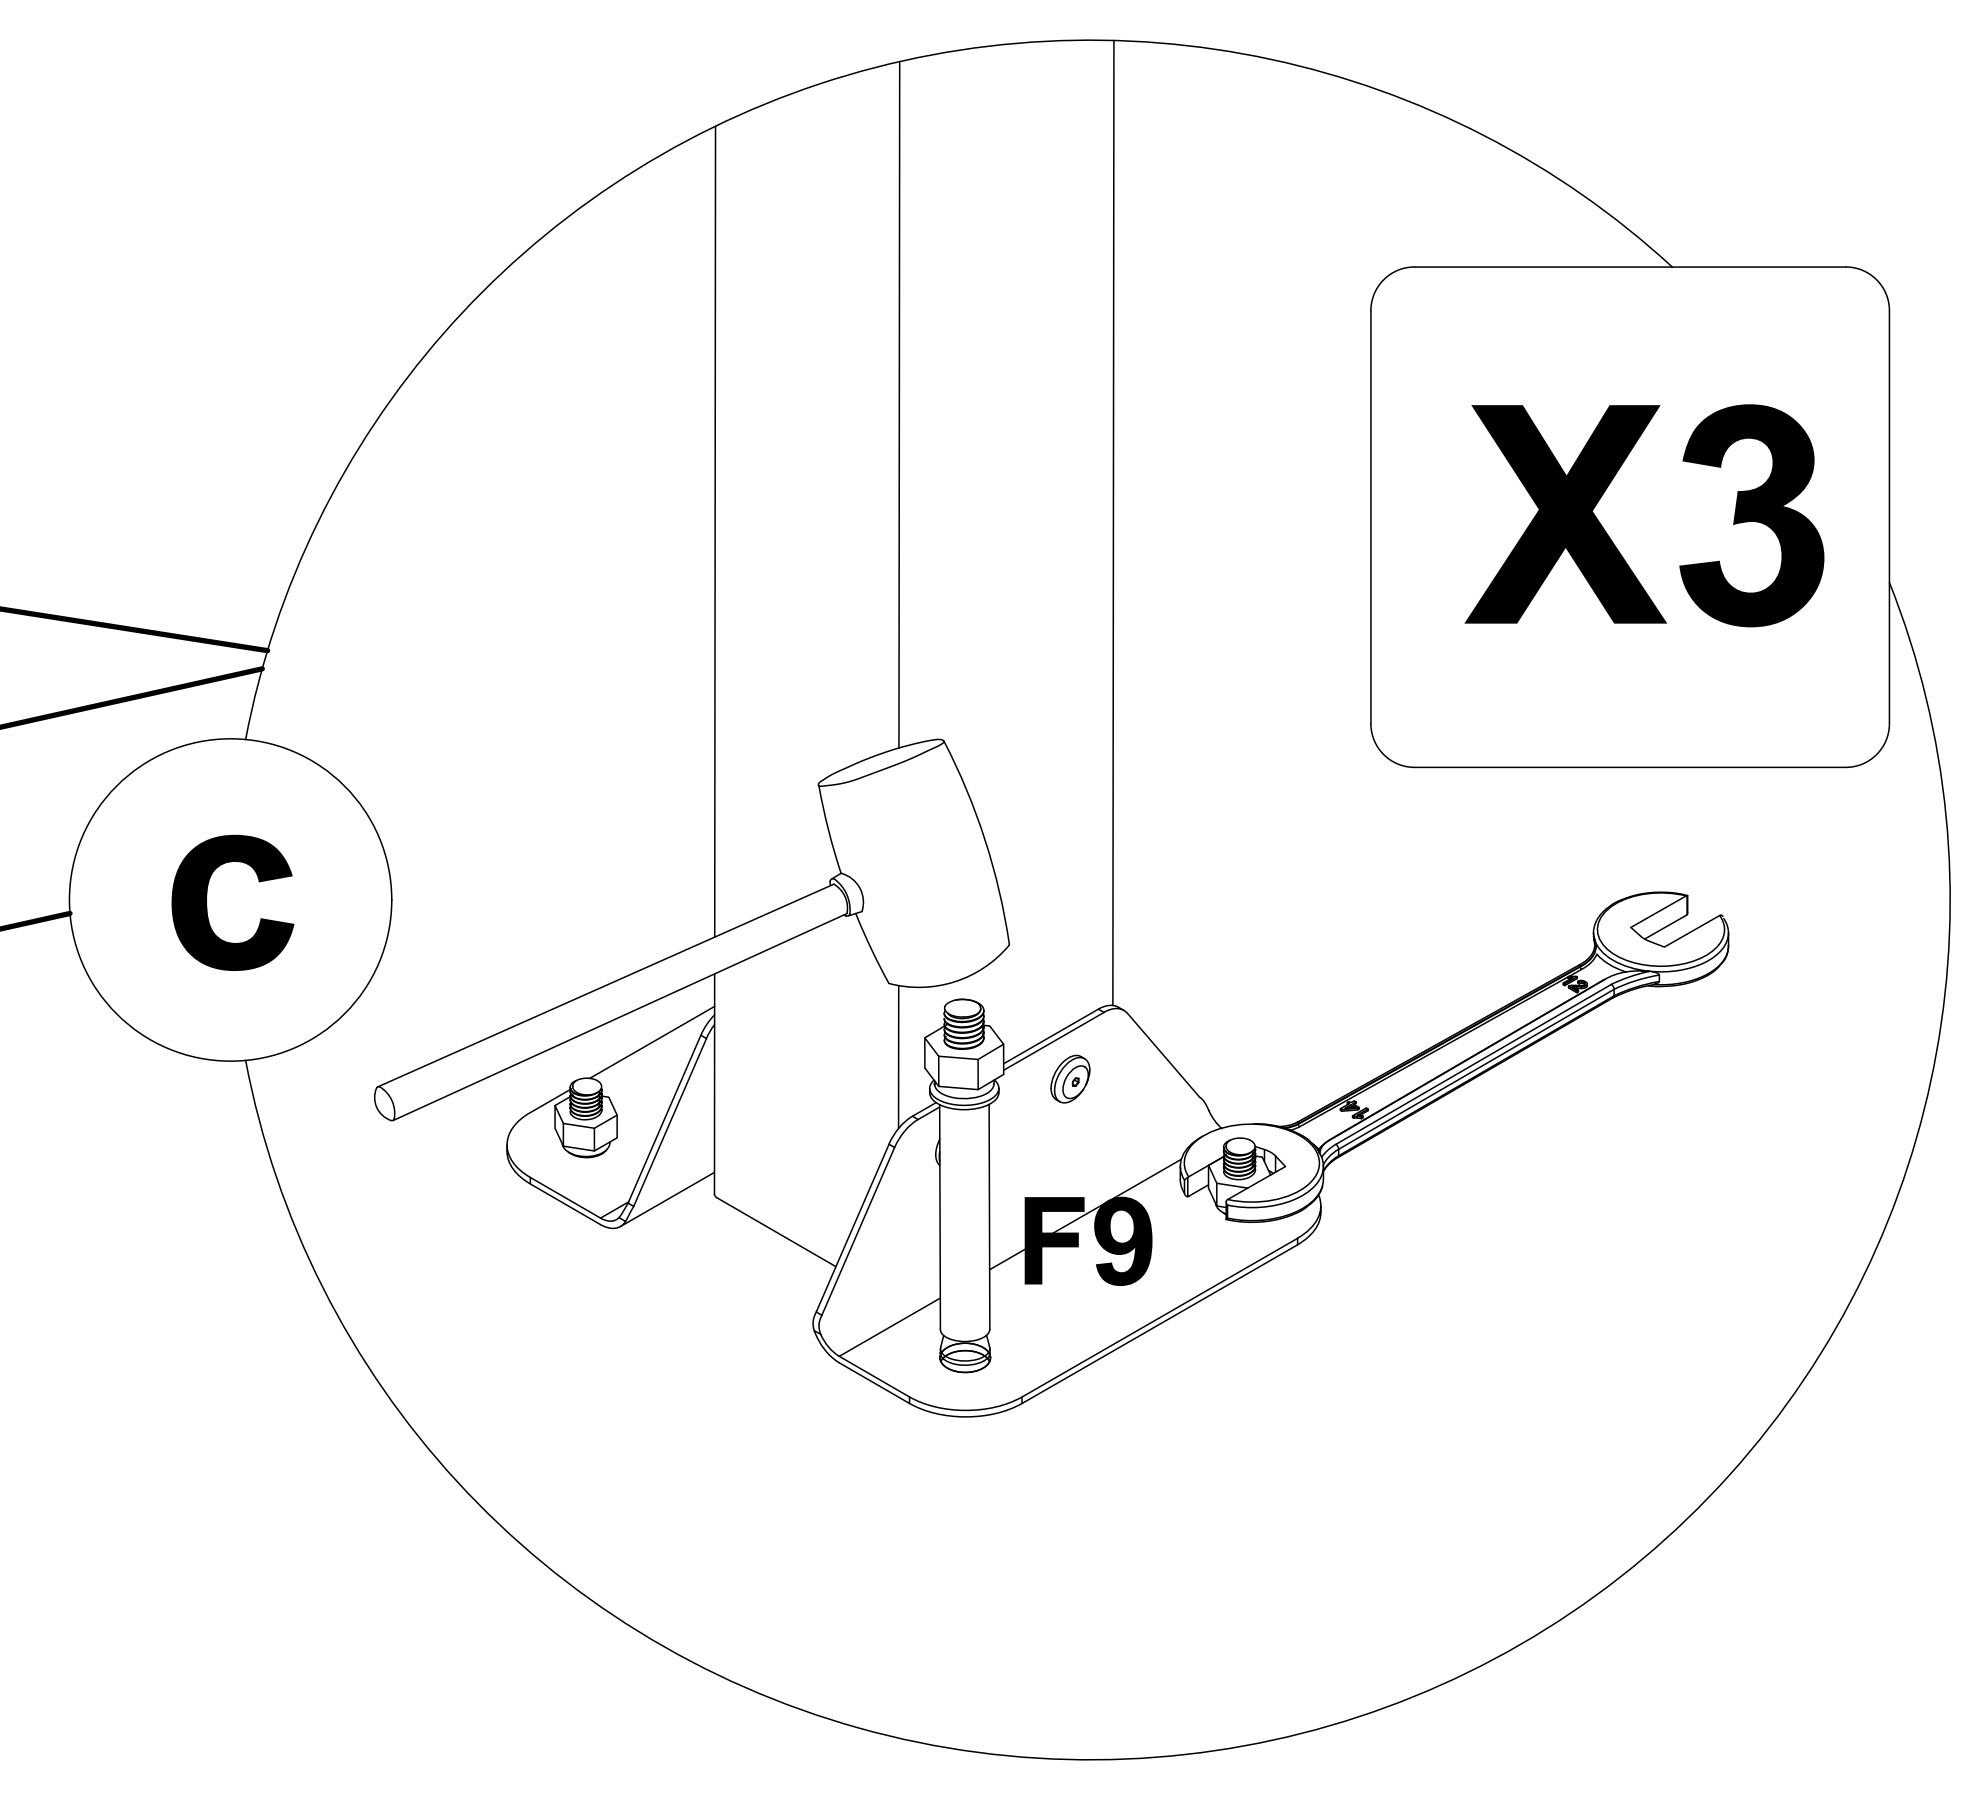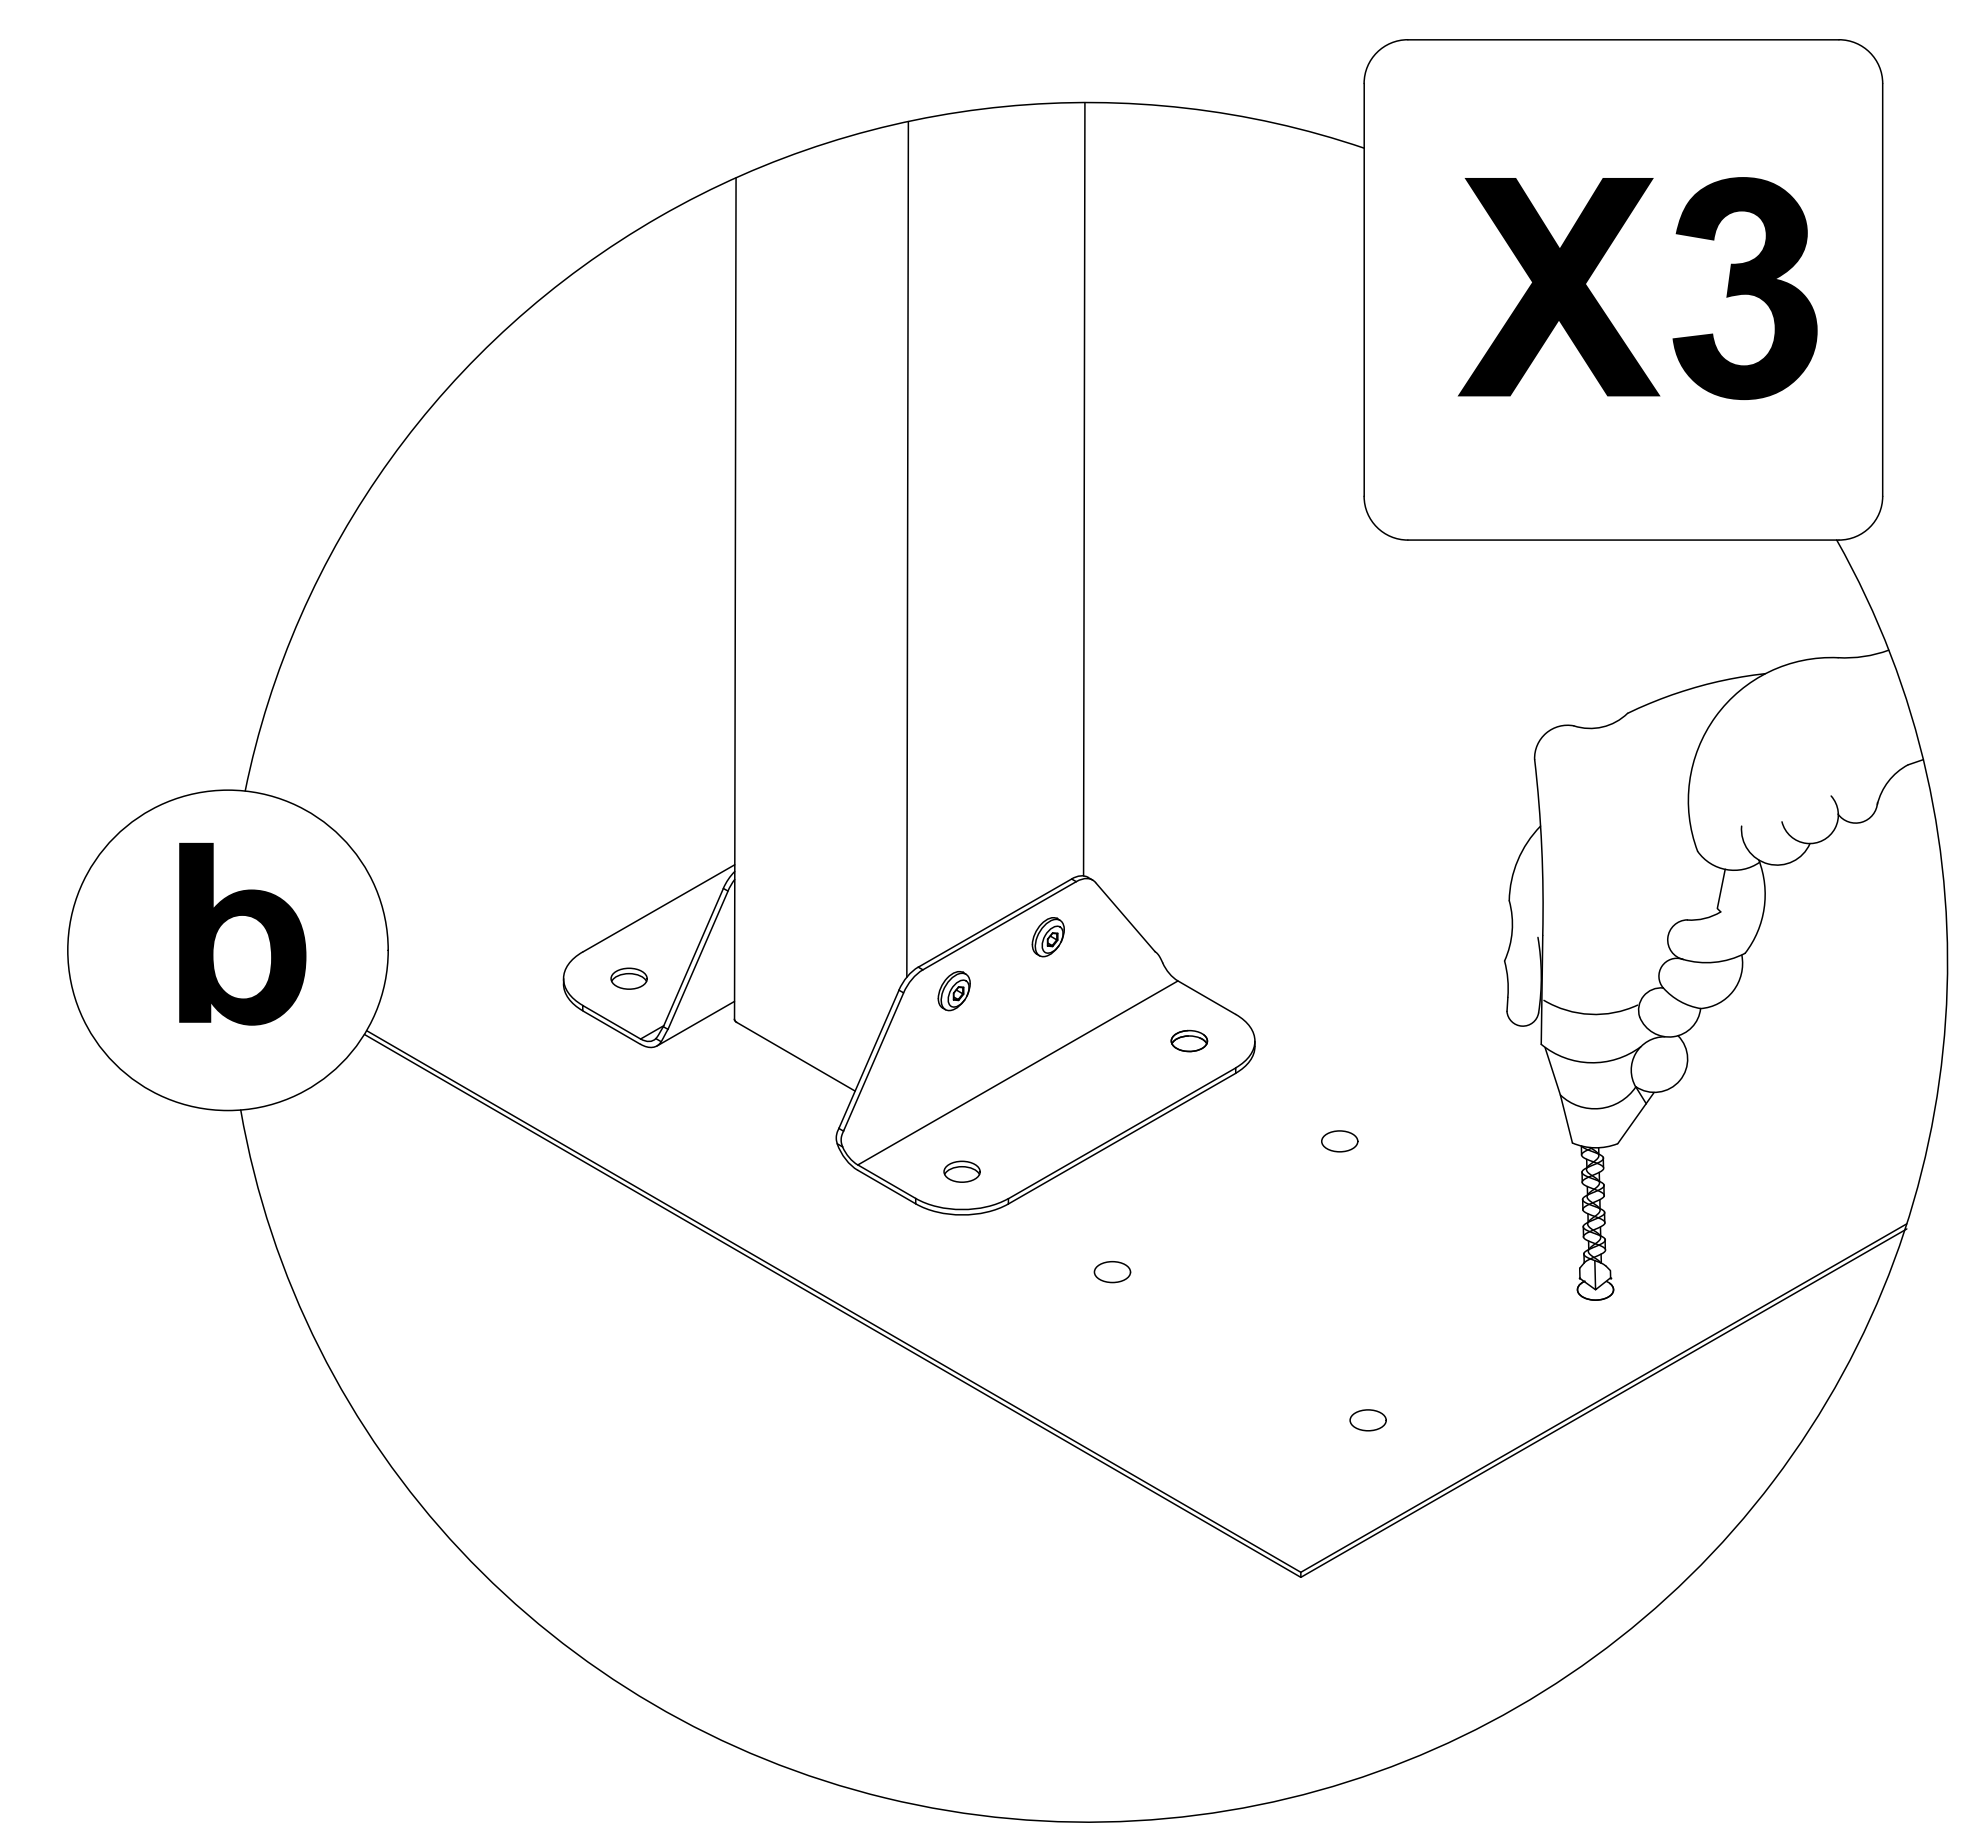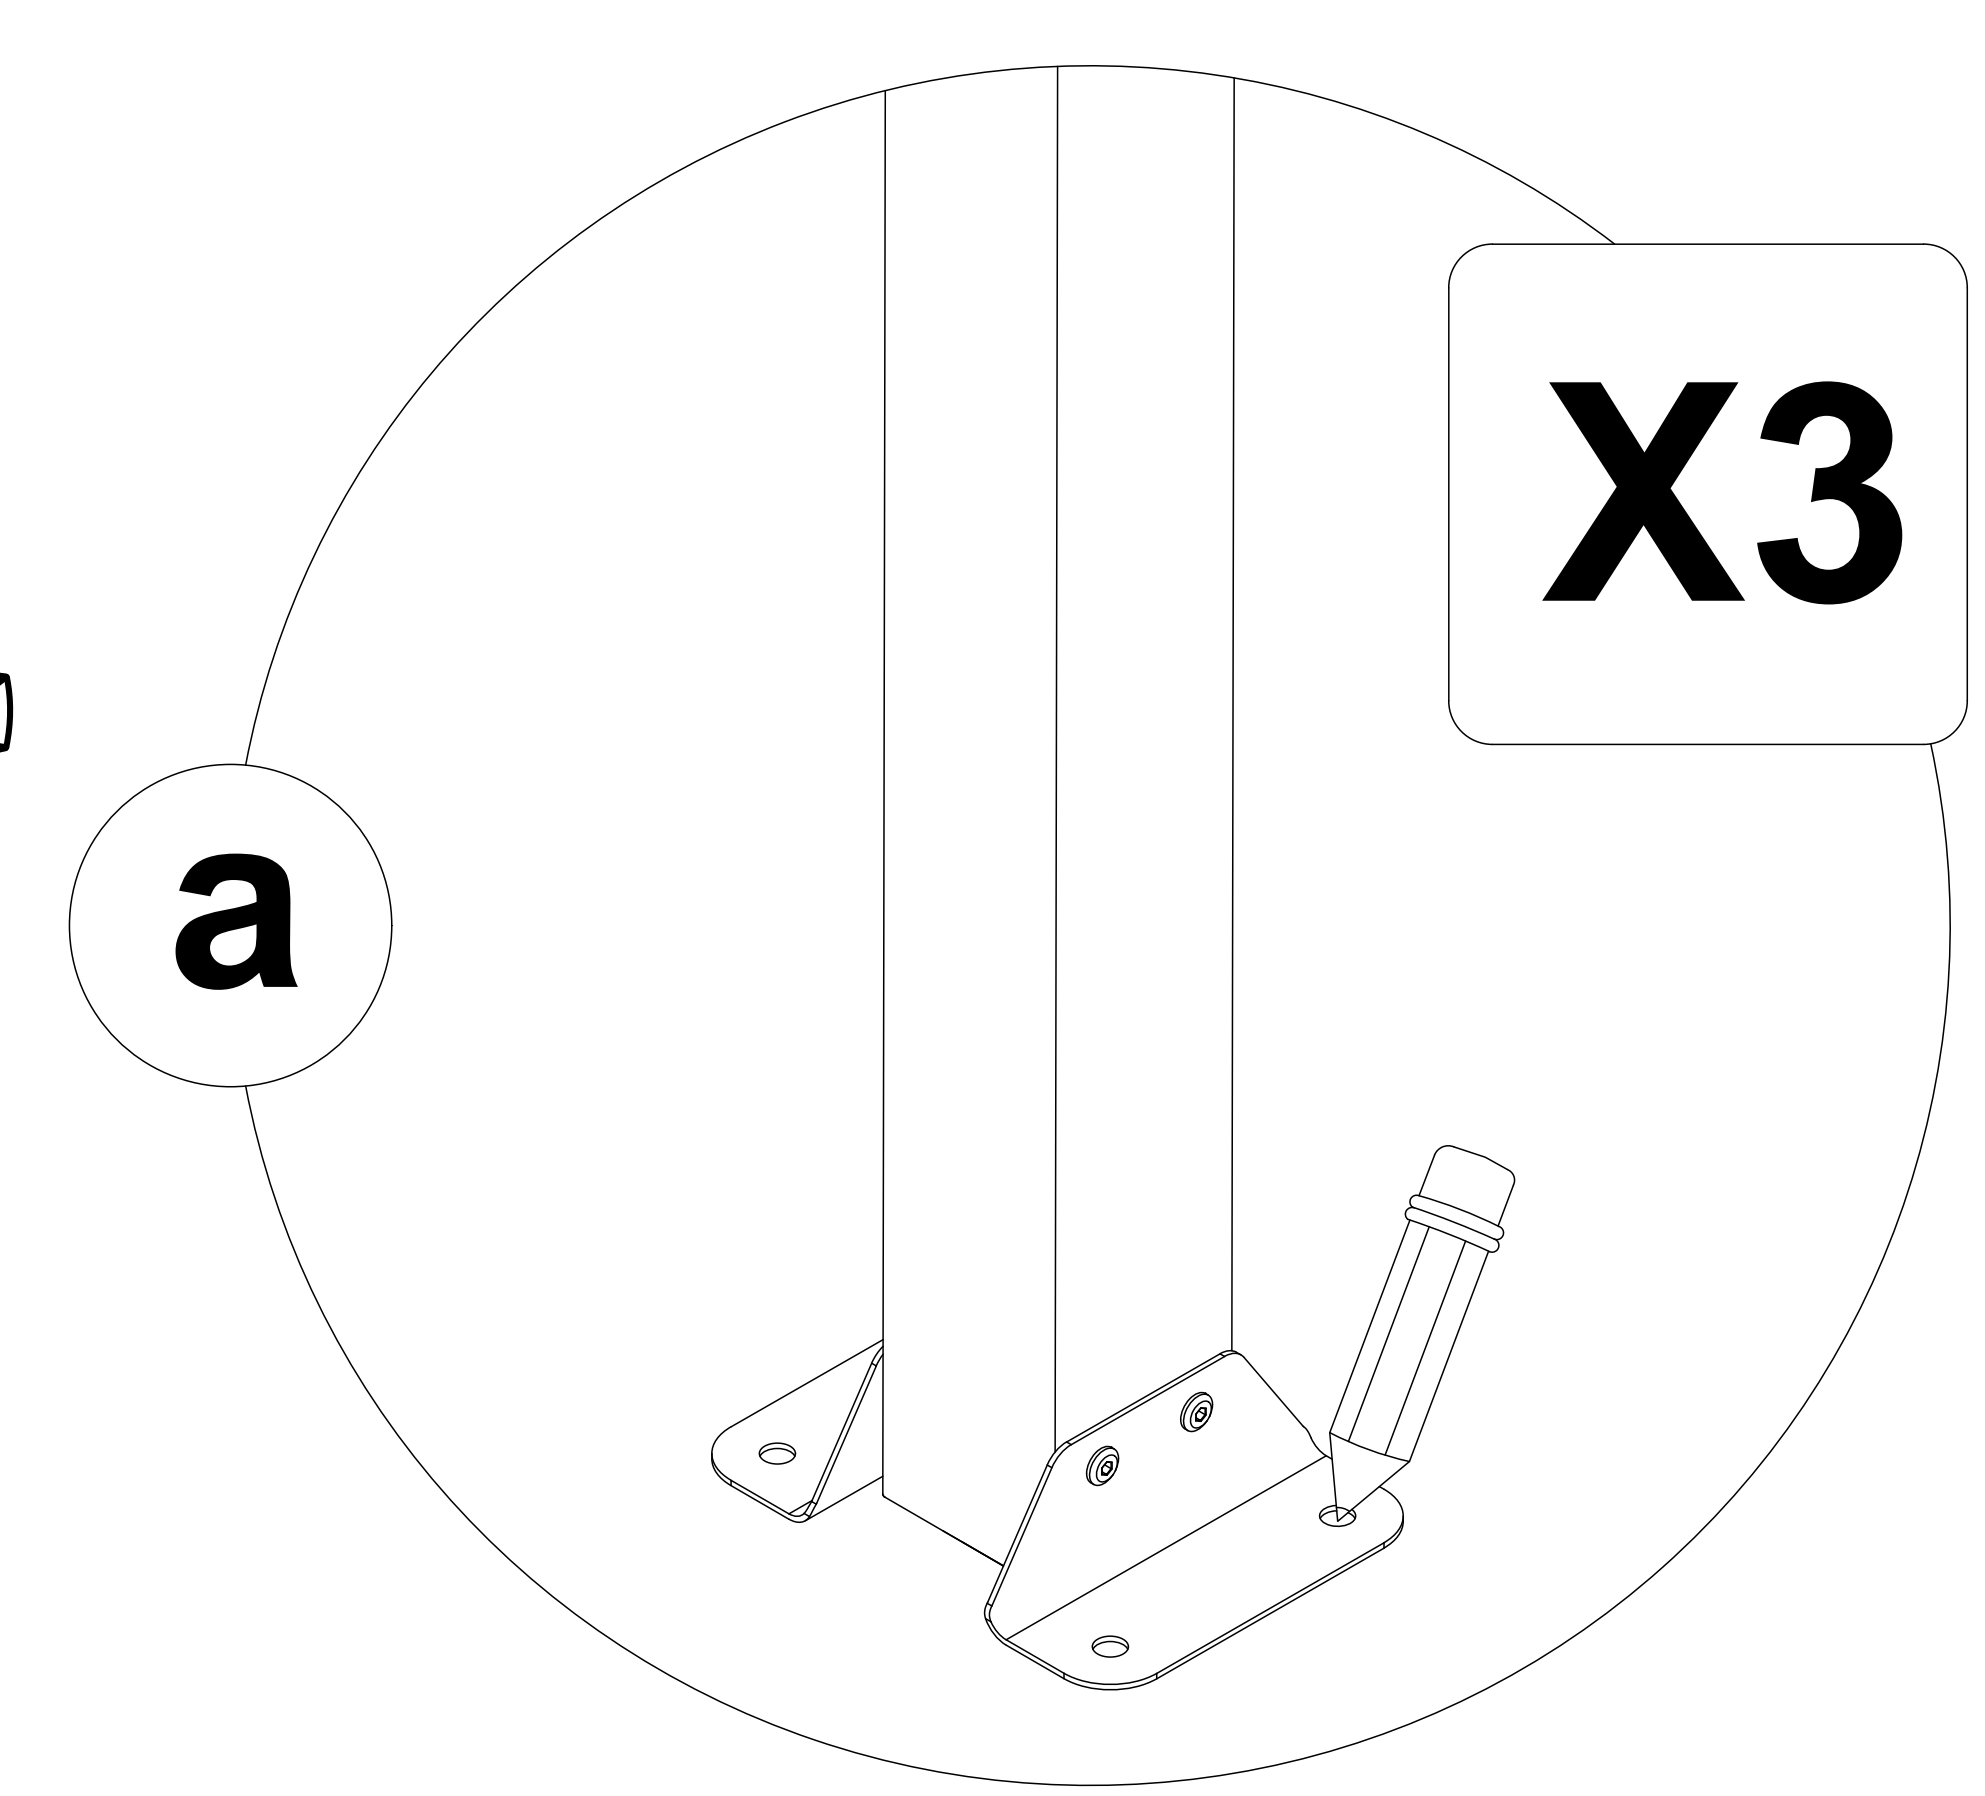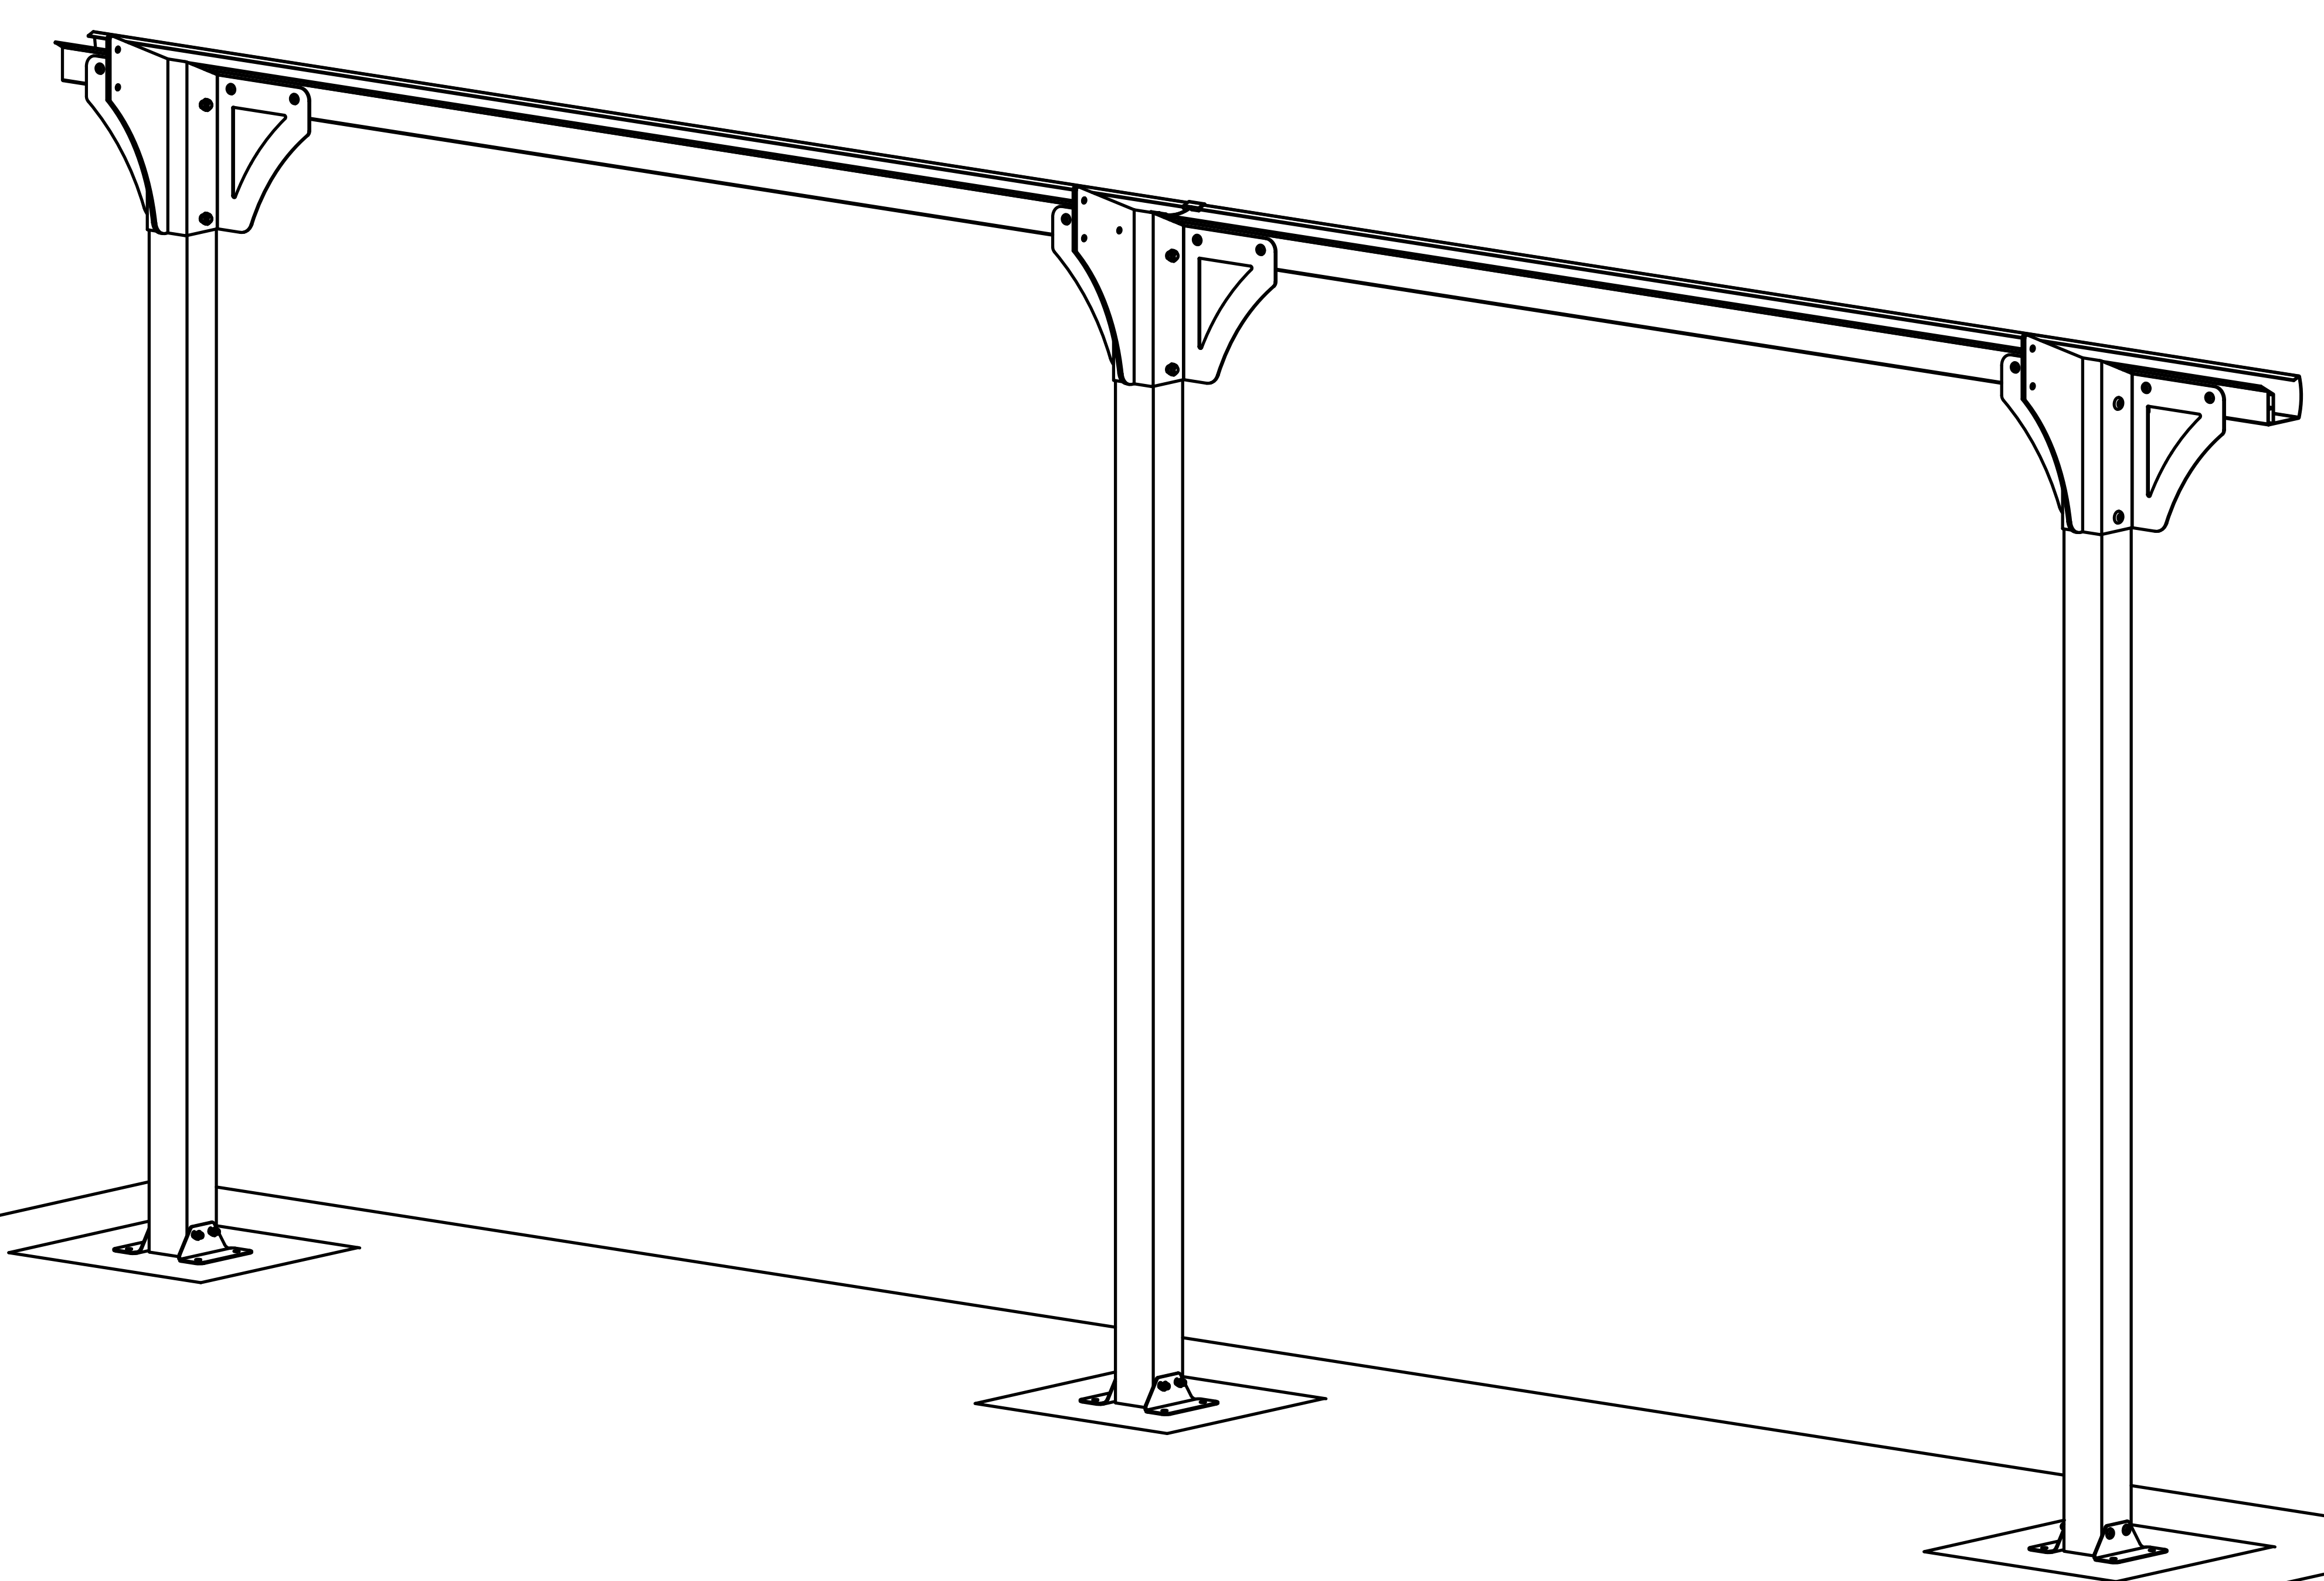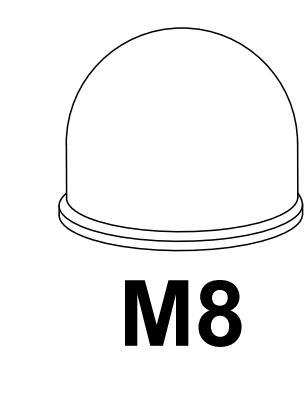

4

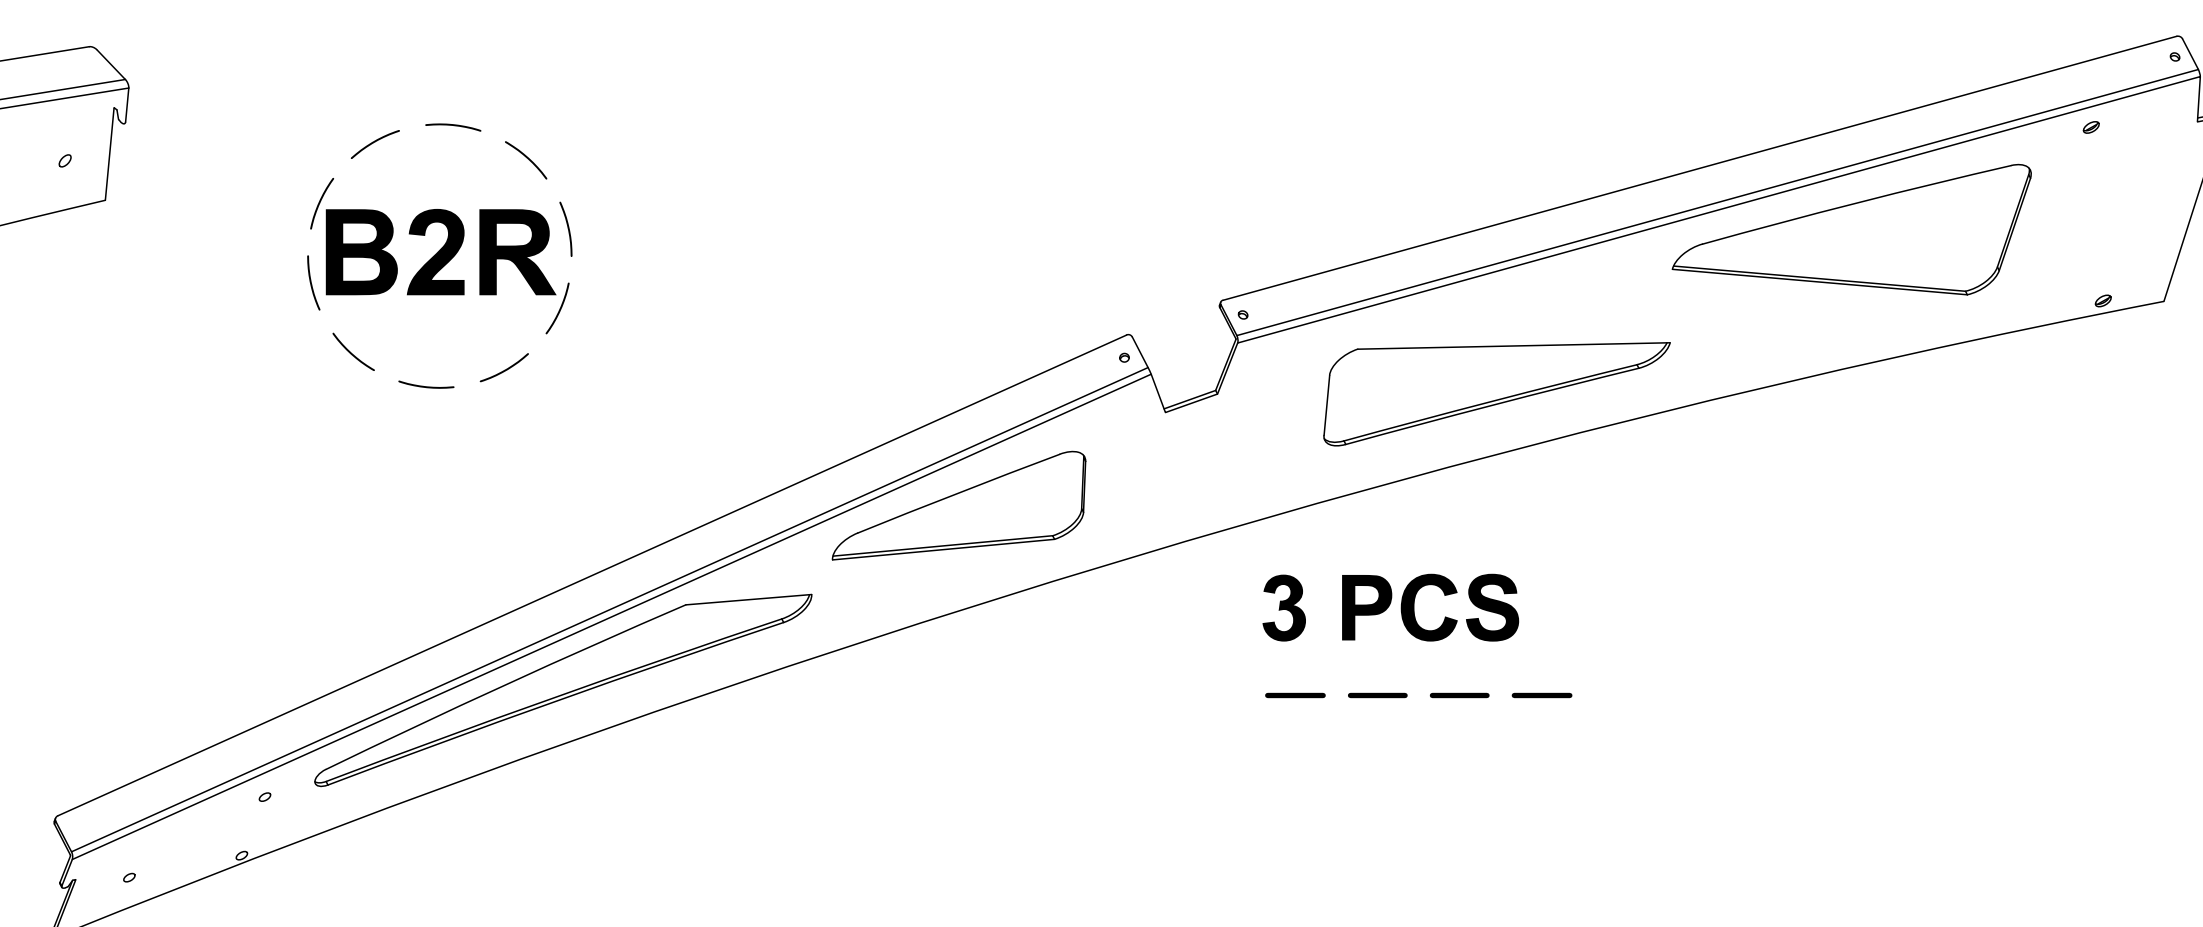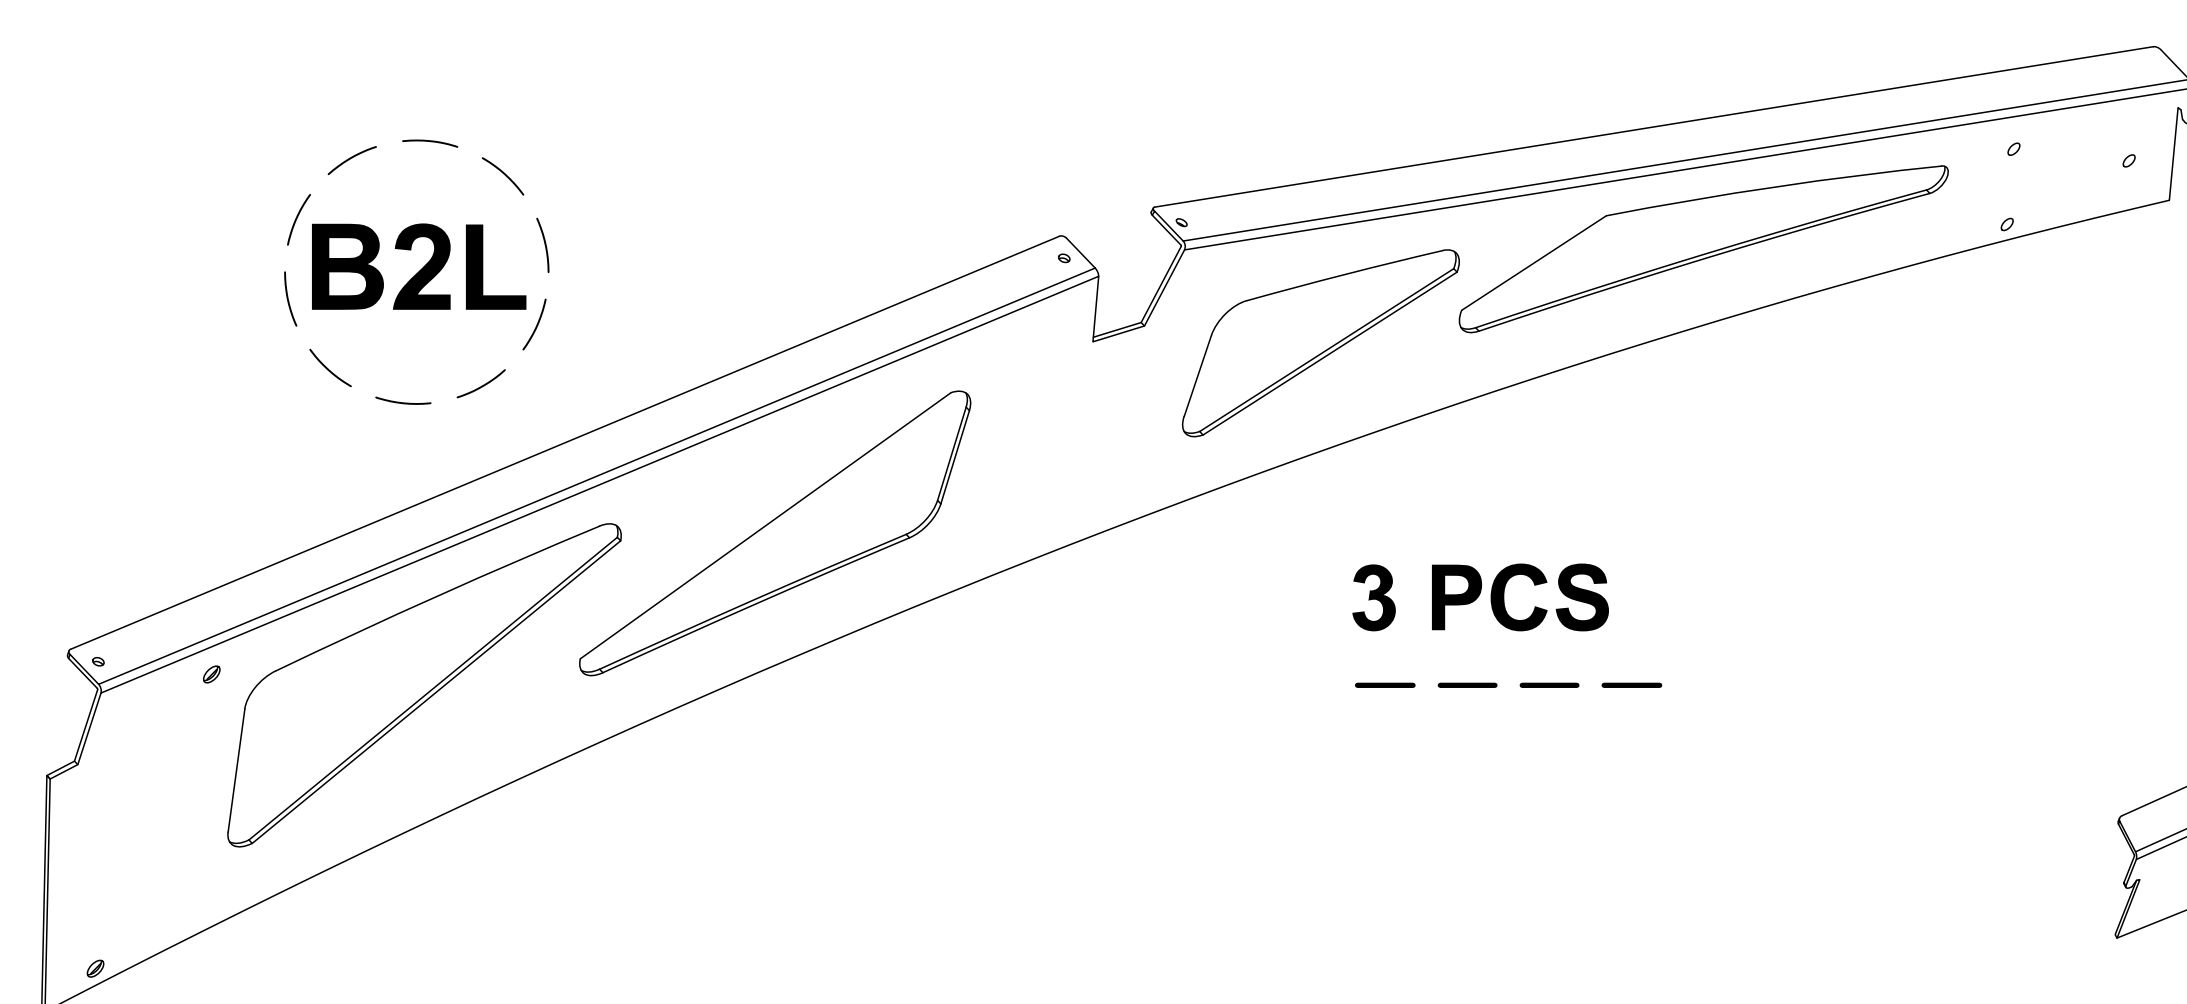

12 6 PCS

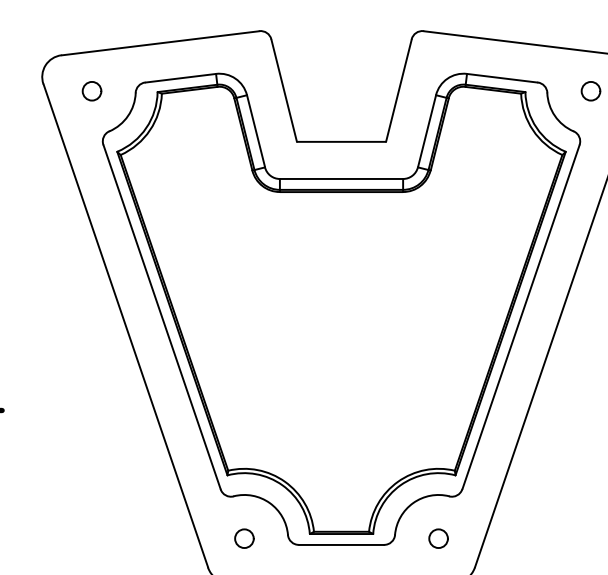


F3 12PCS






M8x15


F6 12PCS

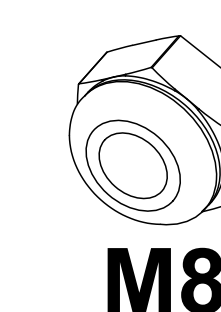

M8

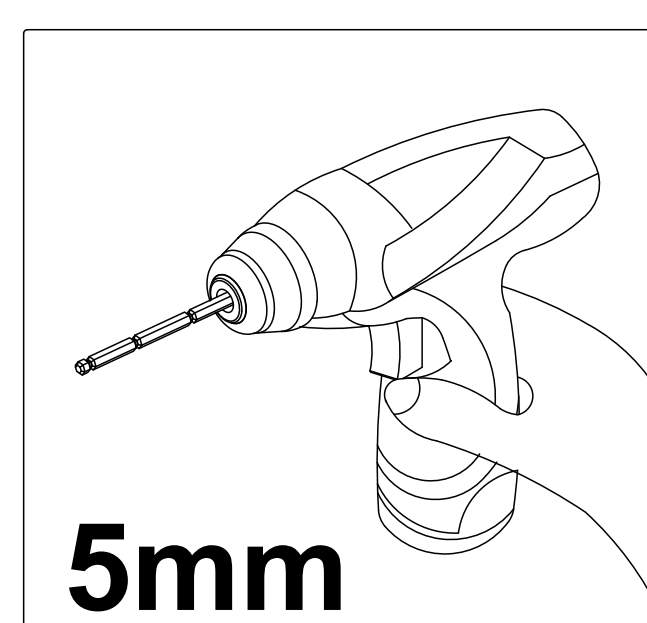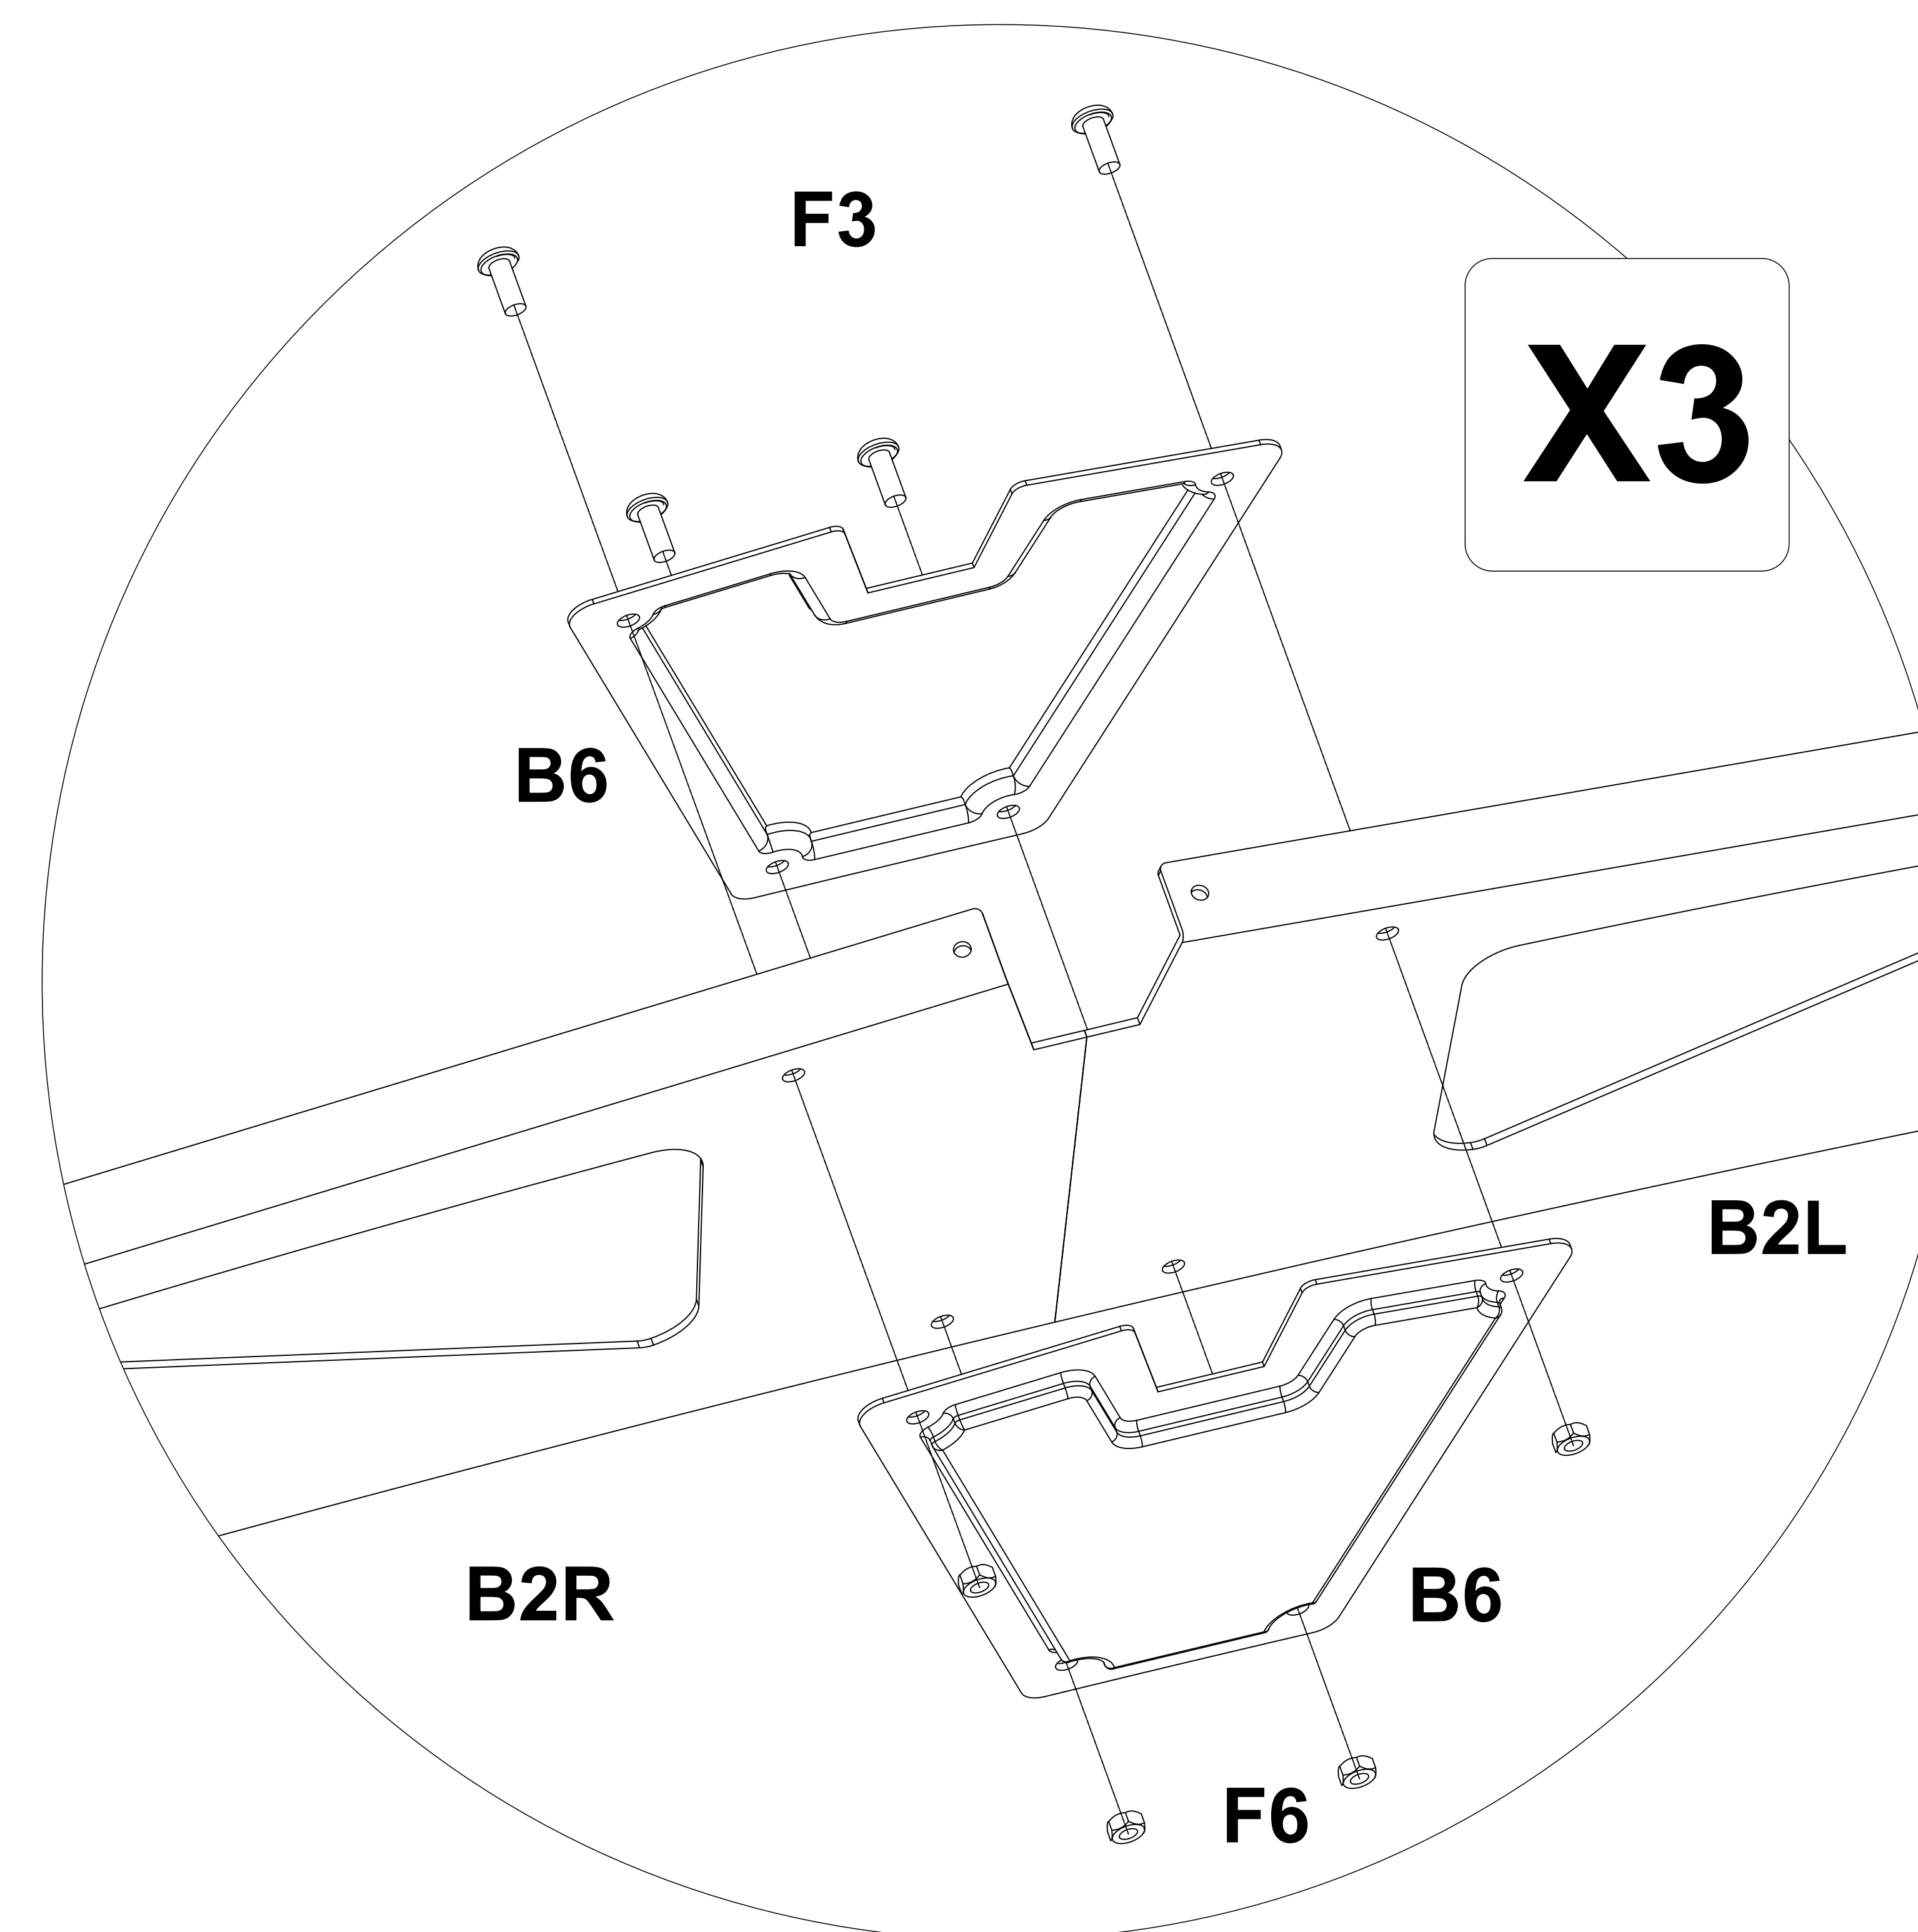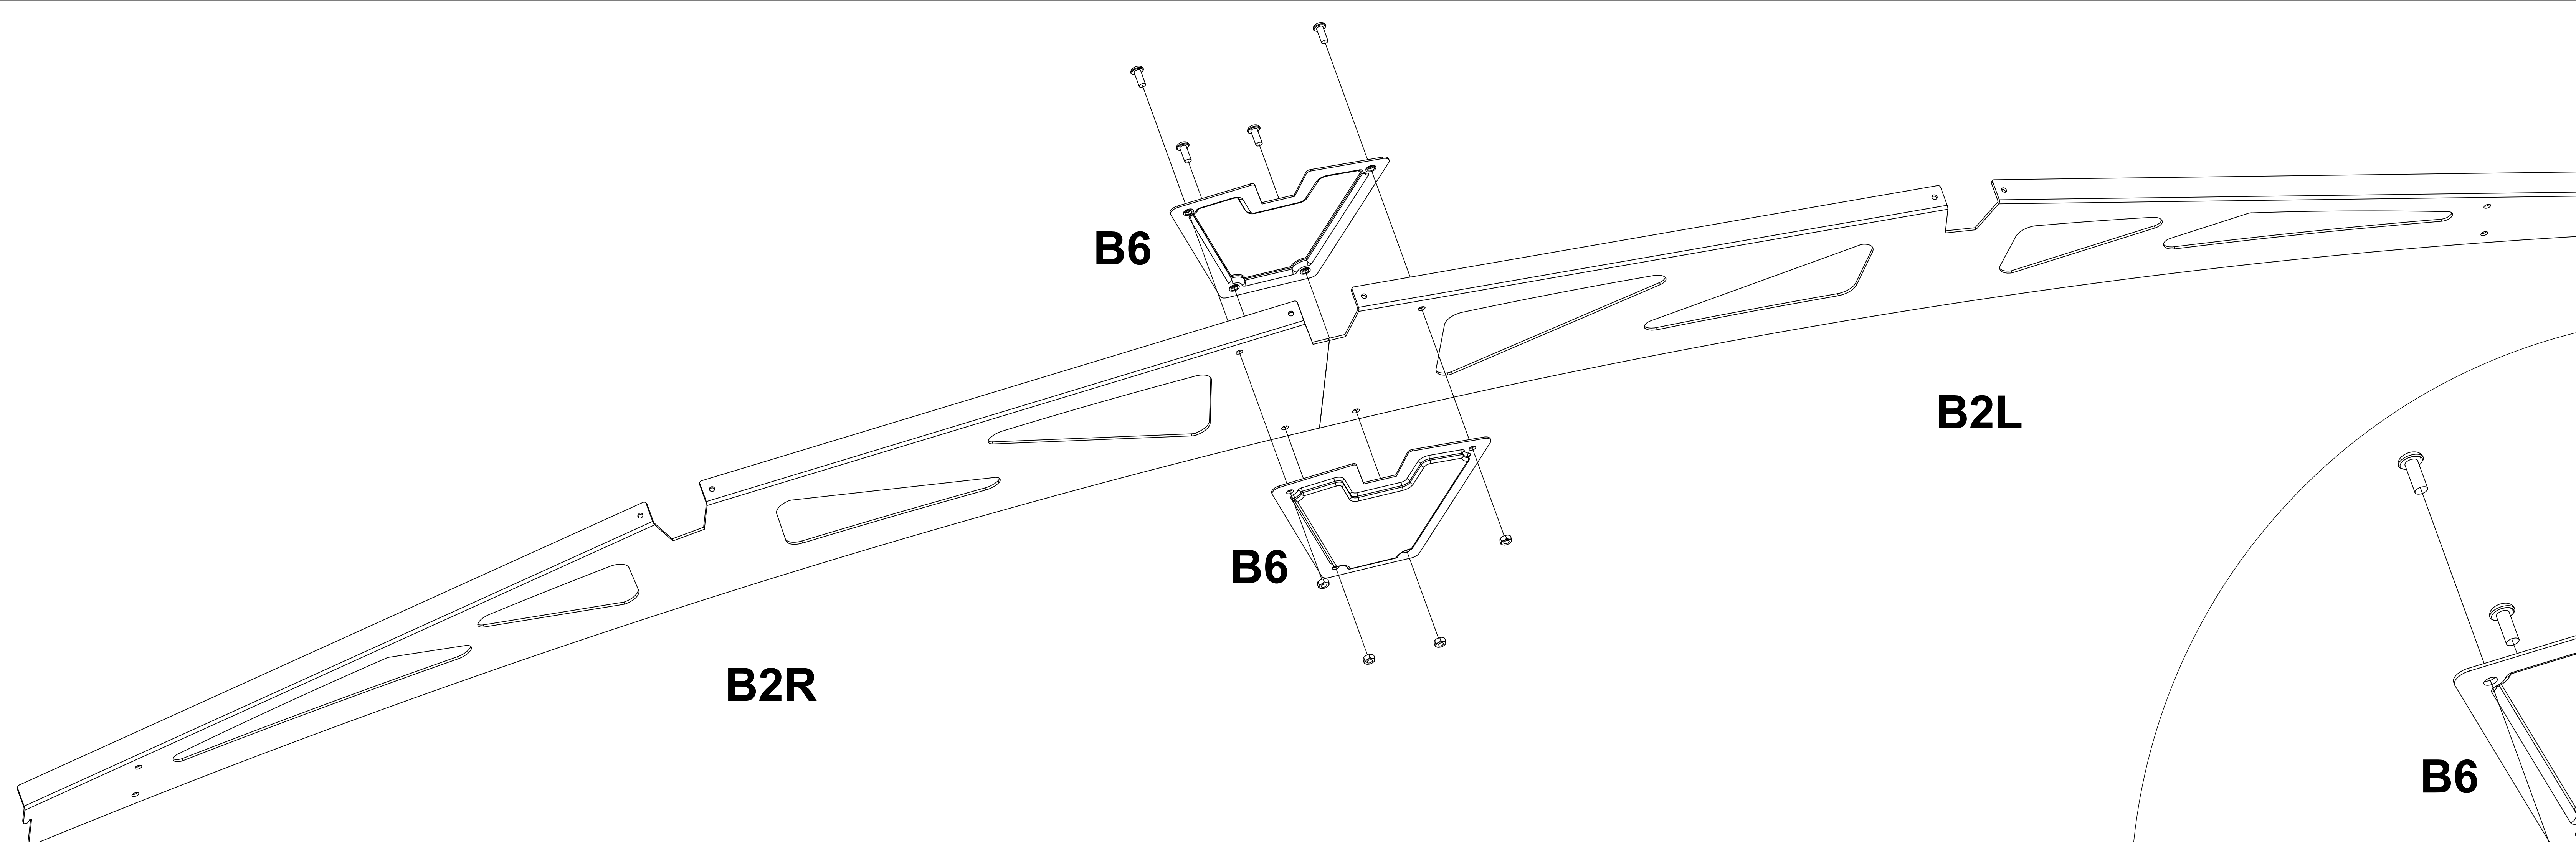

5mm

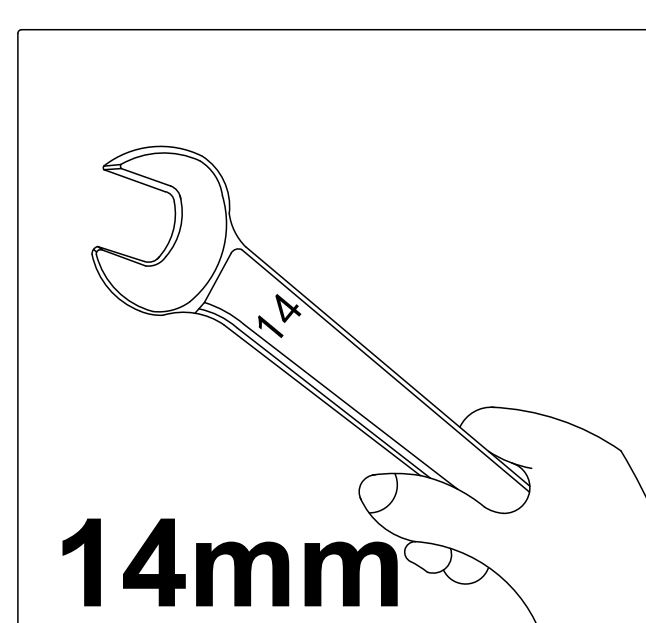


14mm

5

F3


M8x15

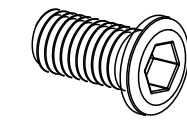






6PCS

F6


M8

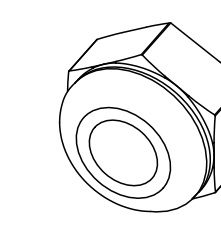

6PCS

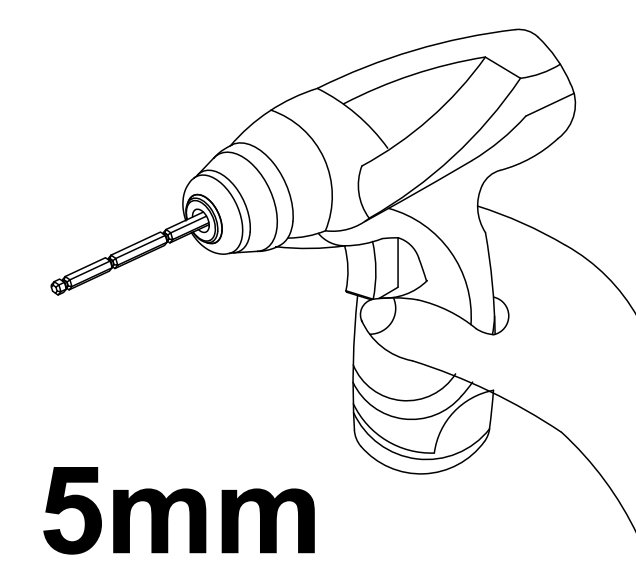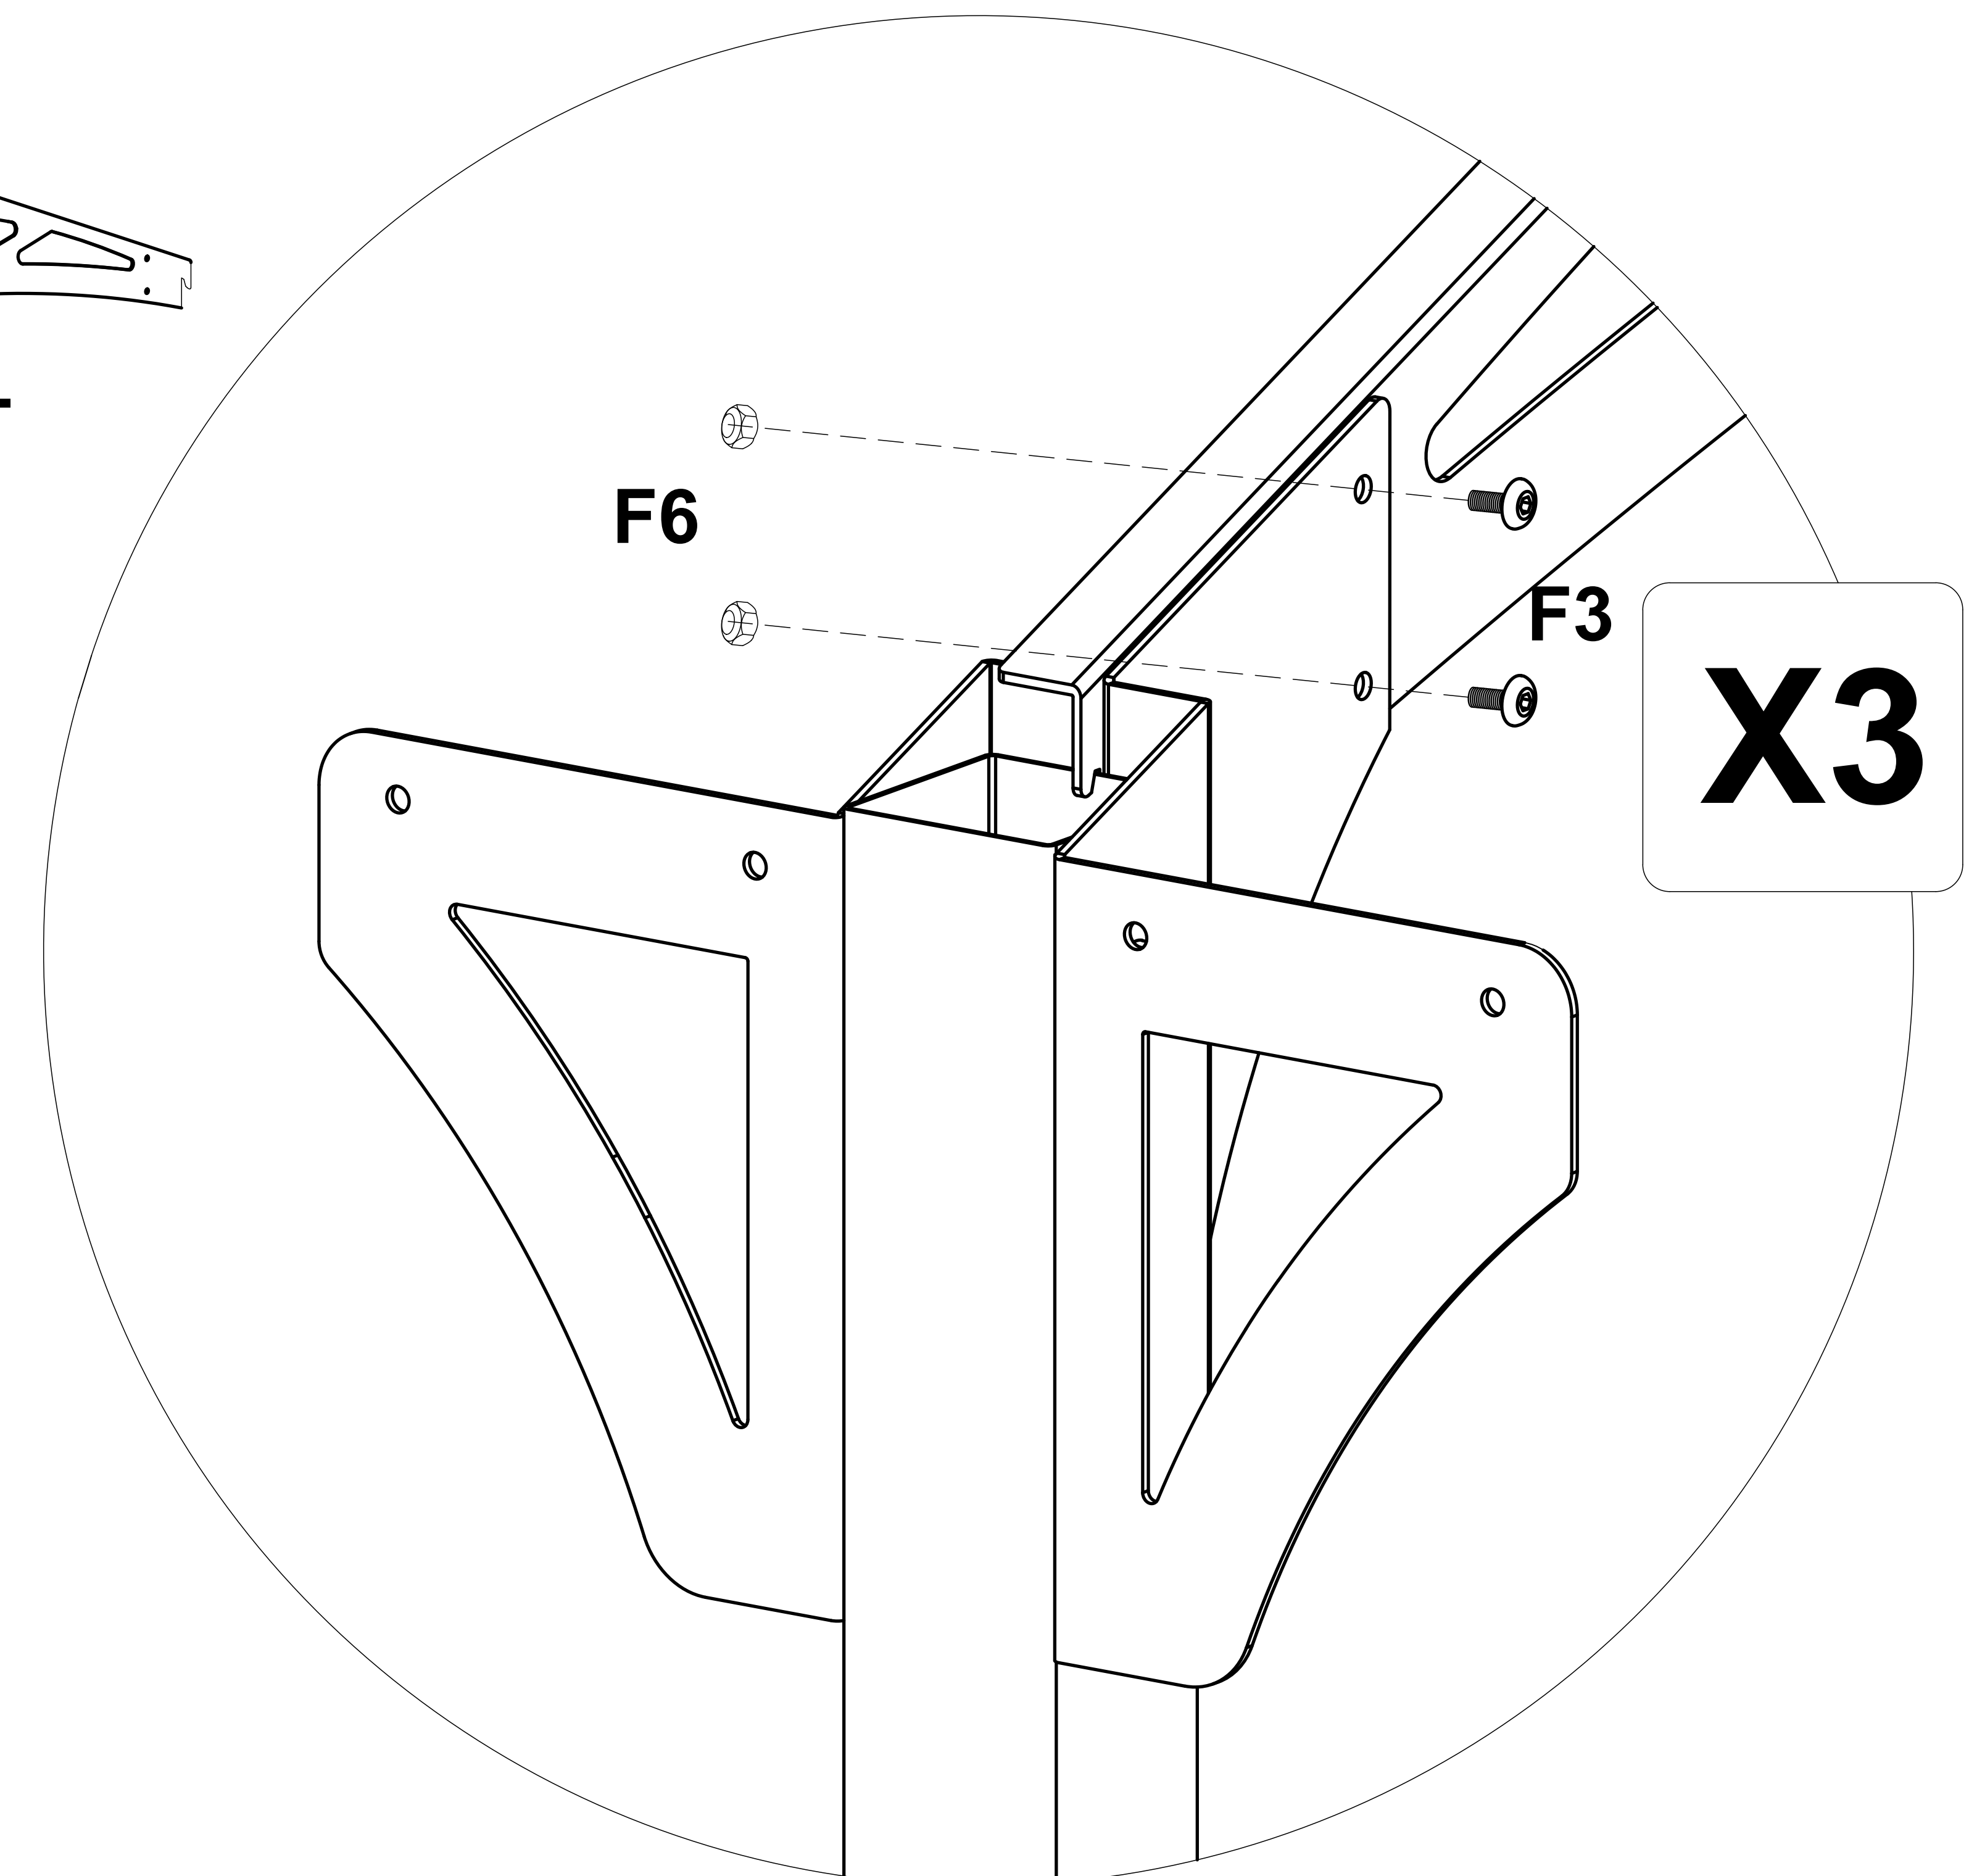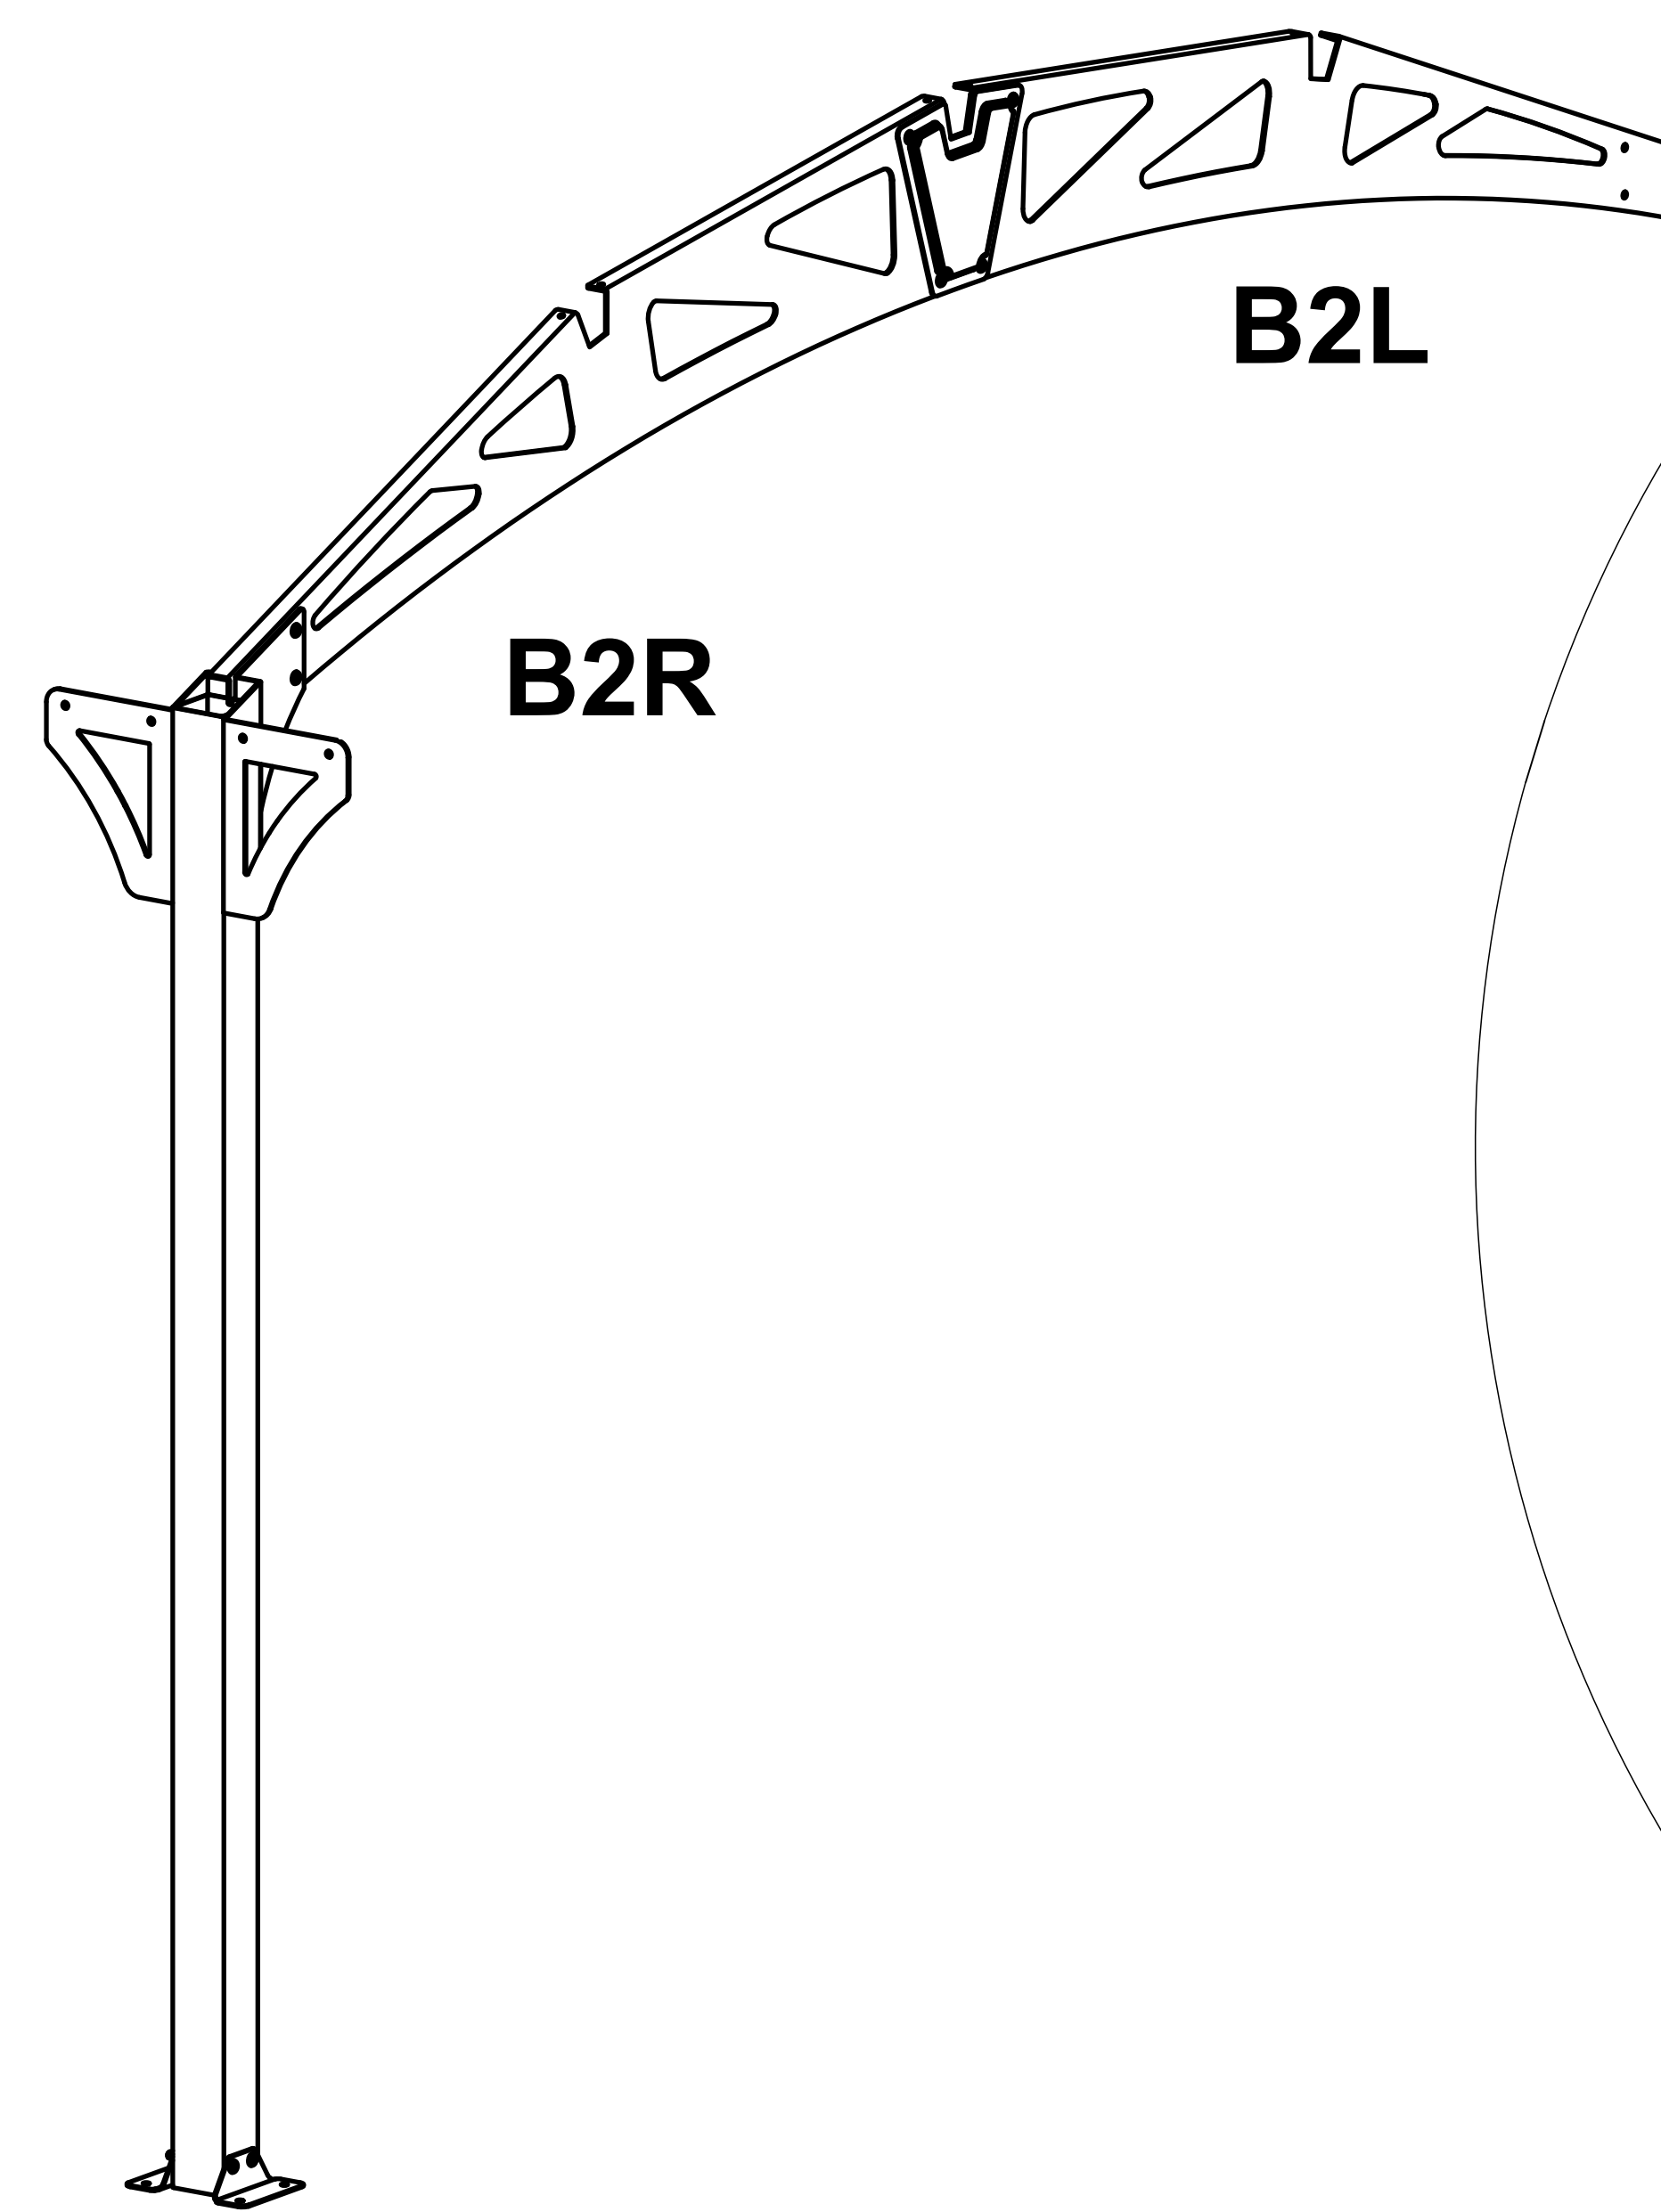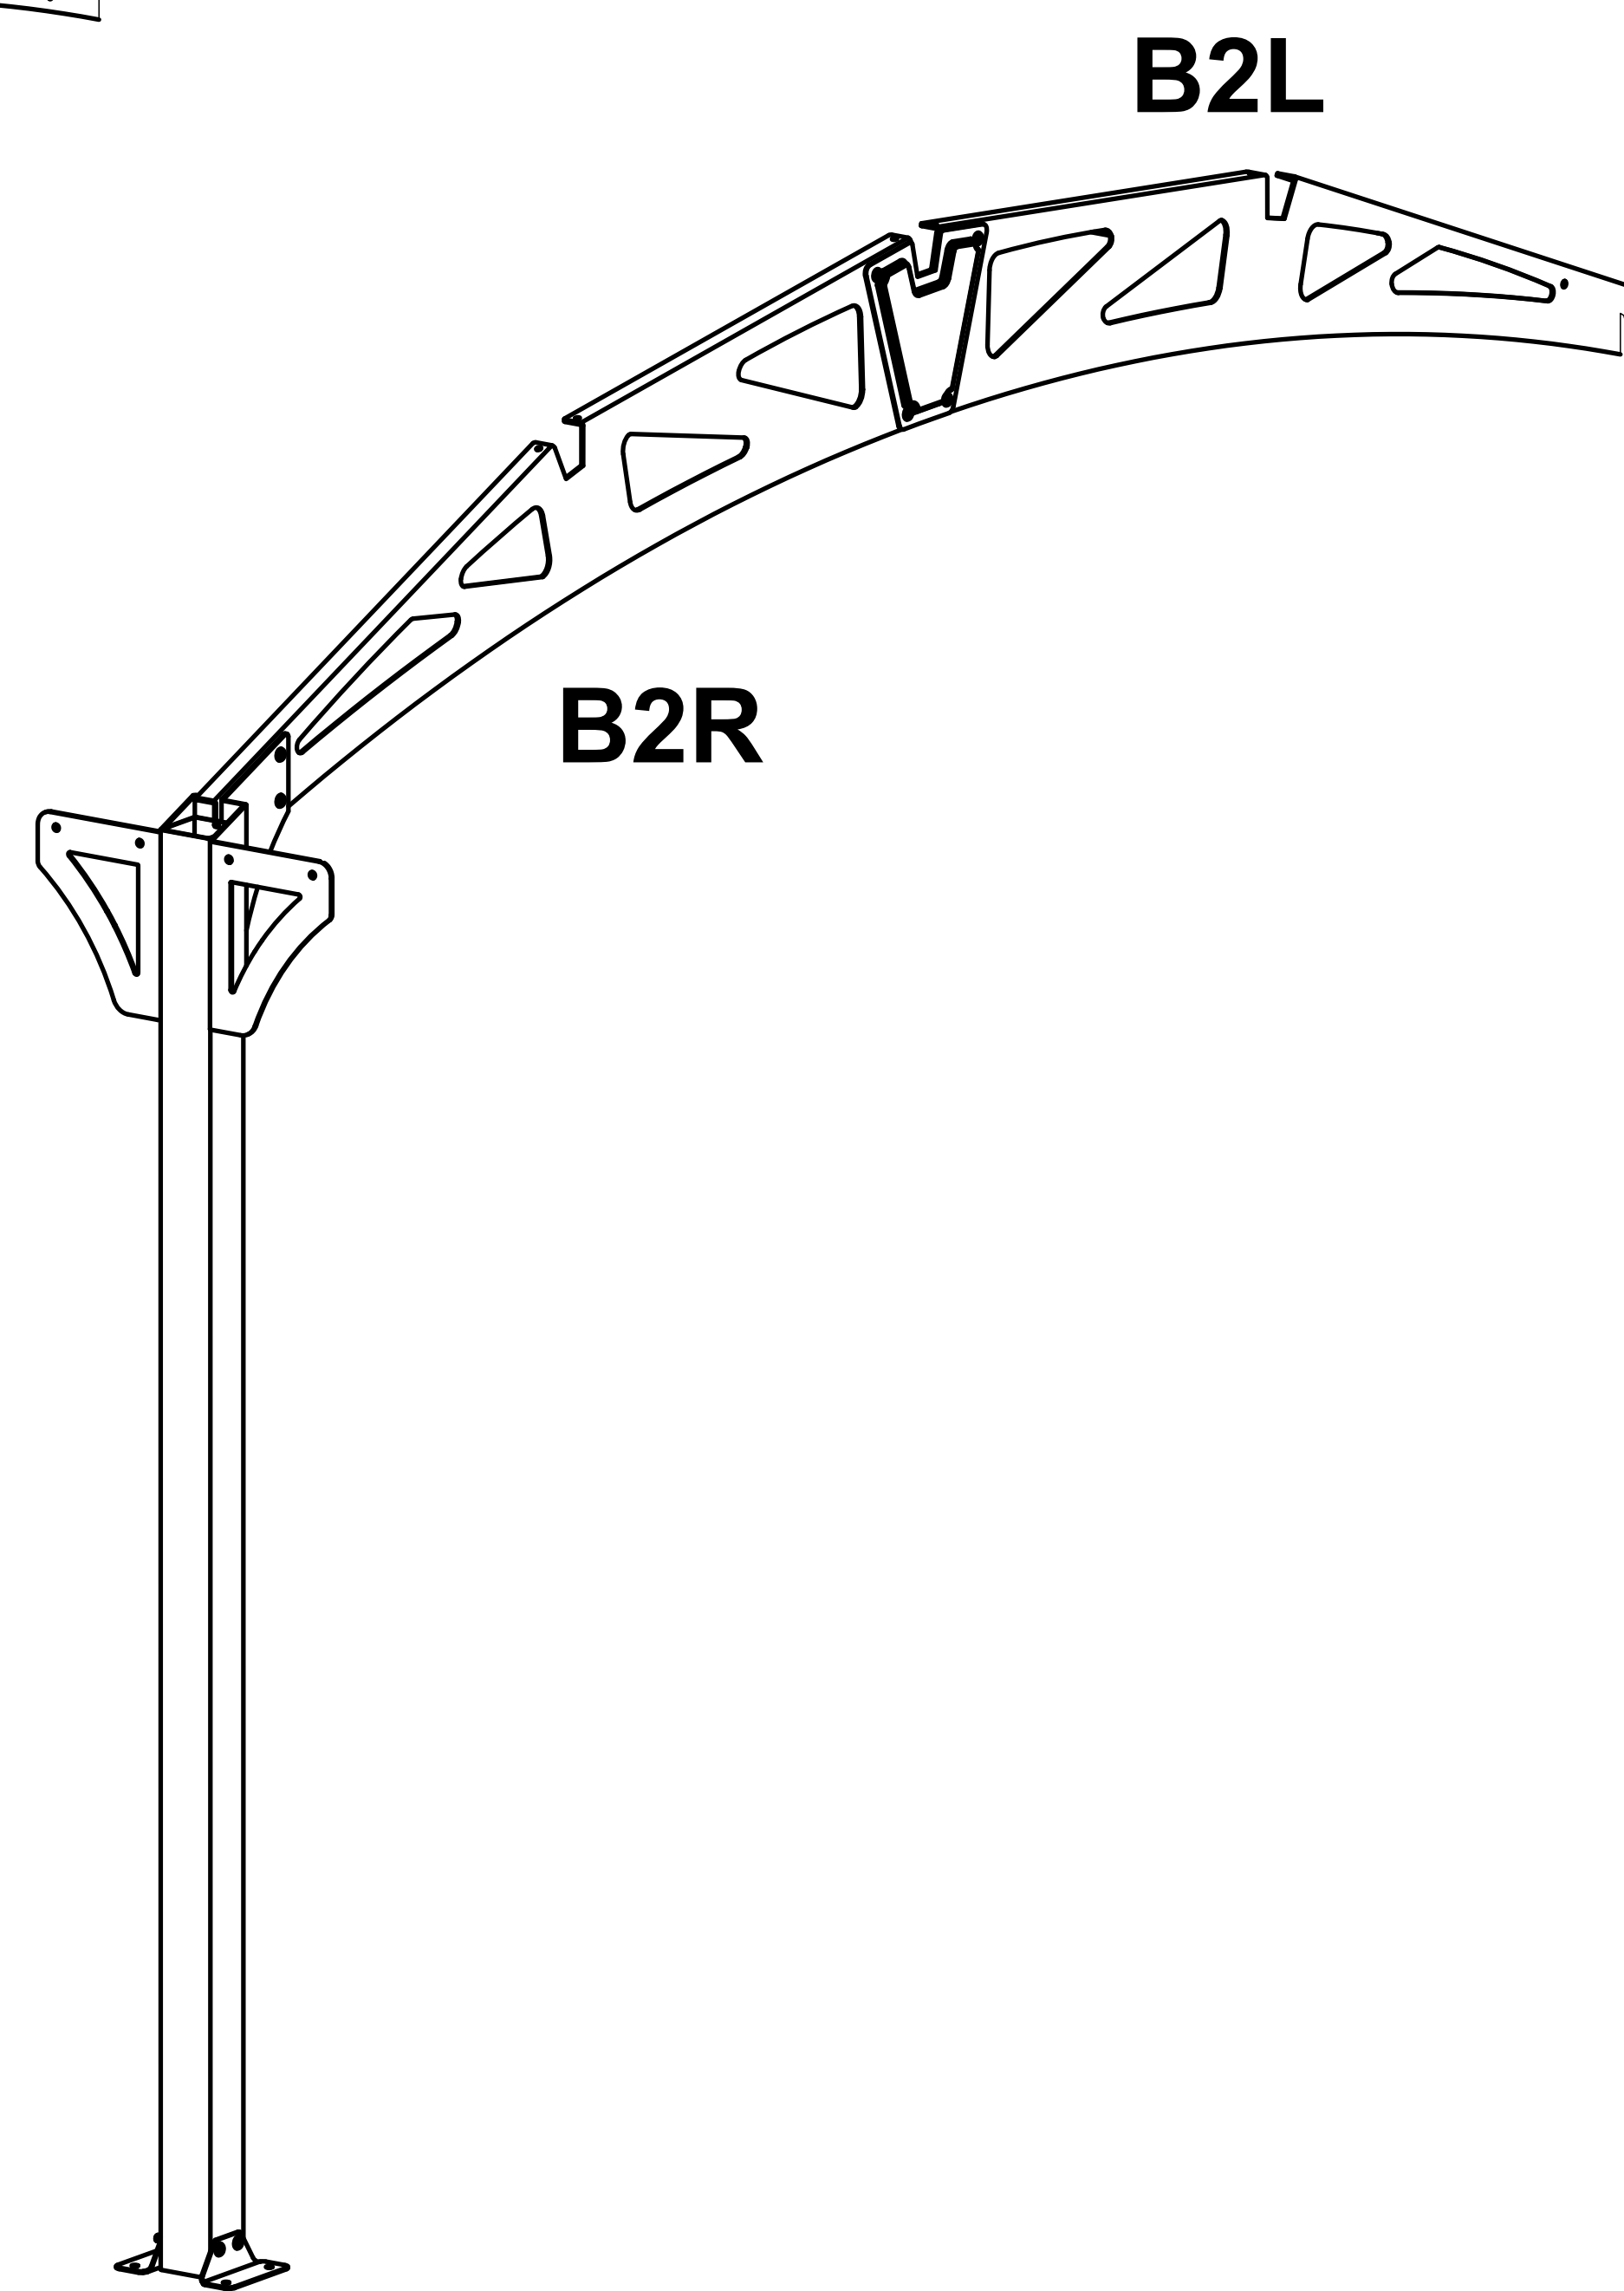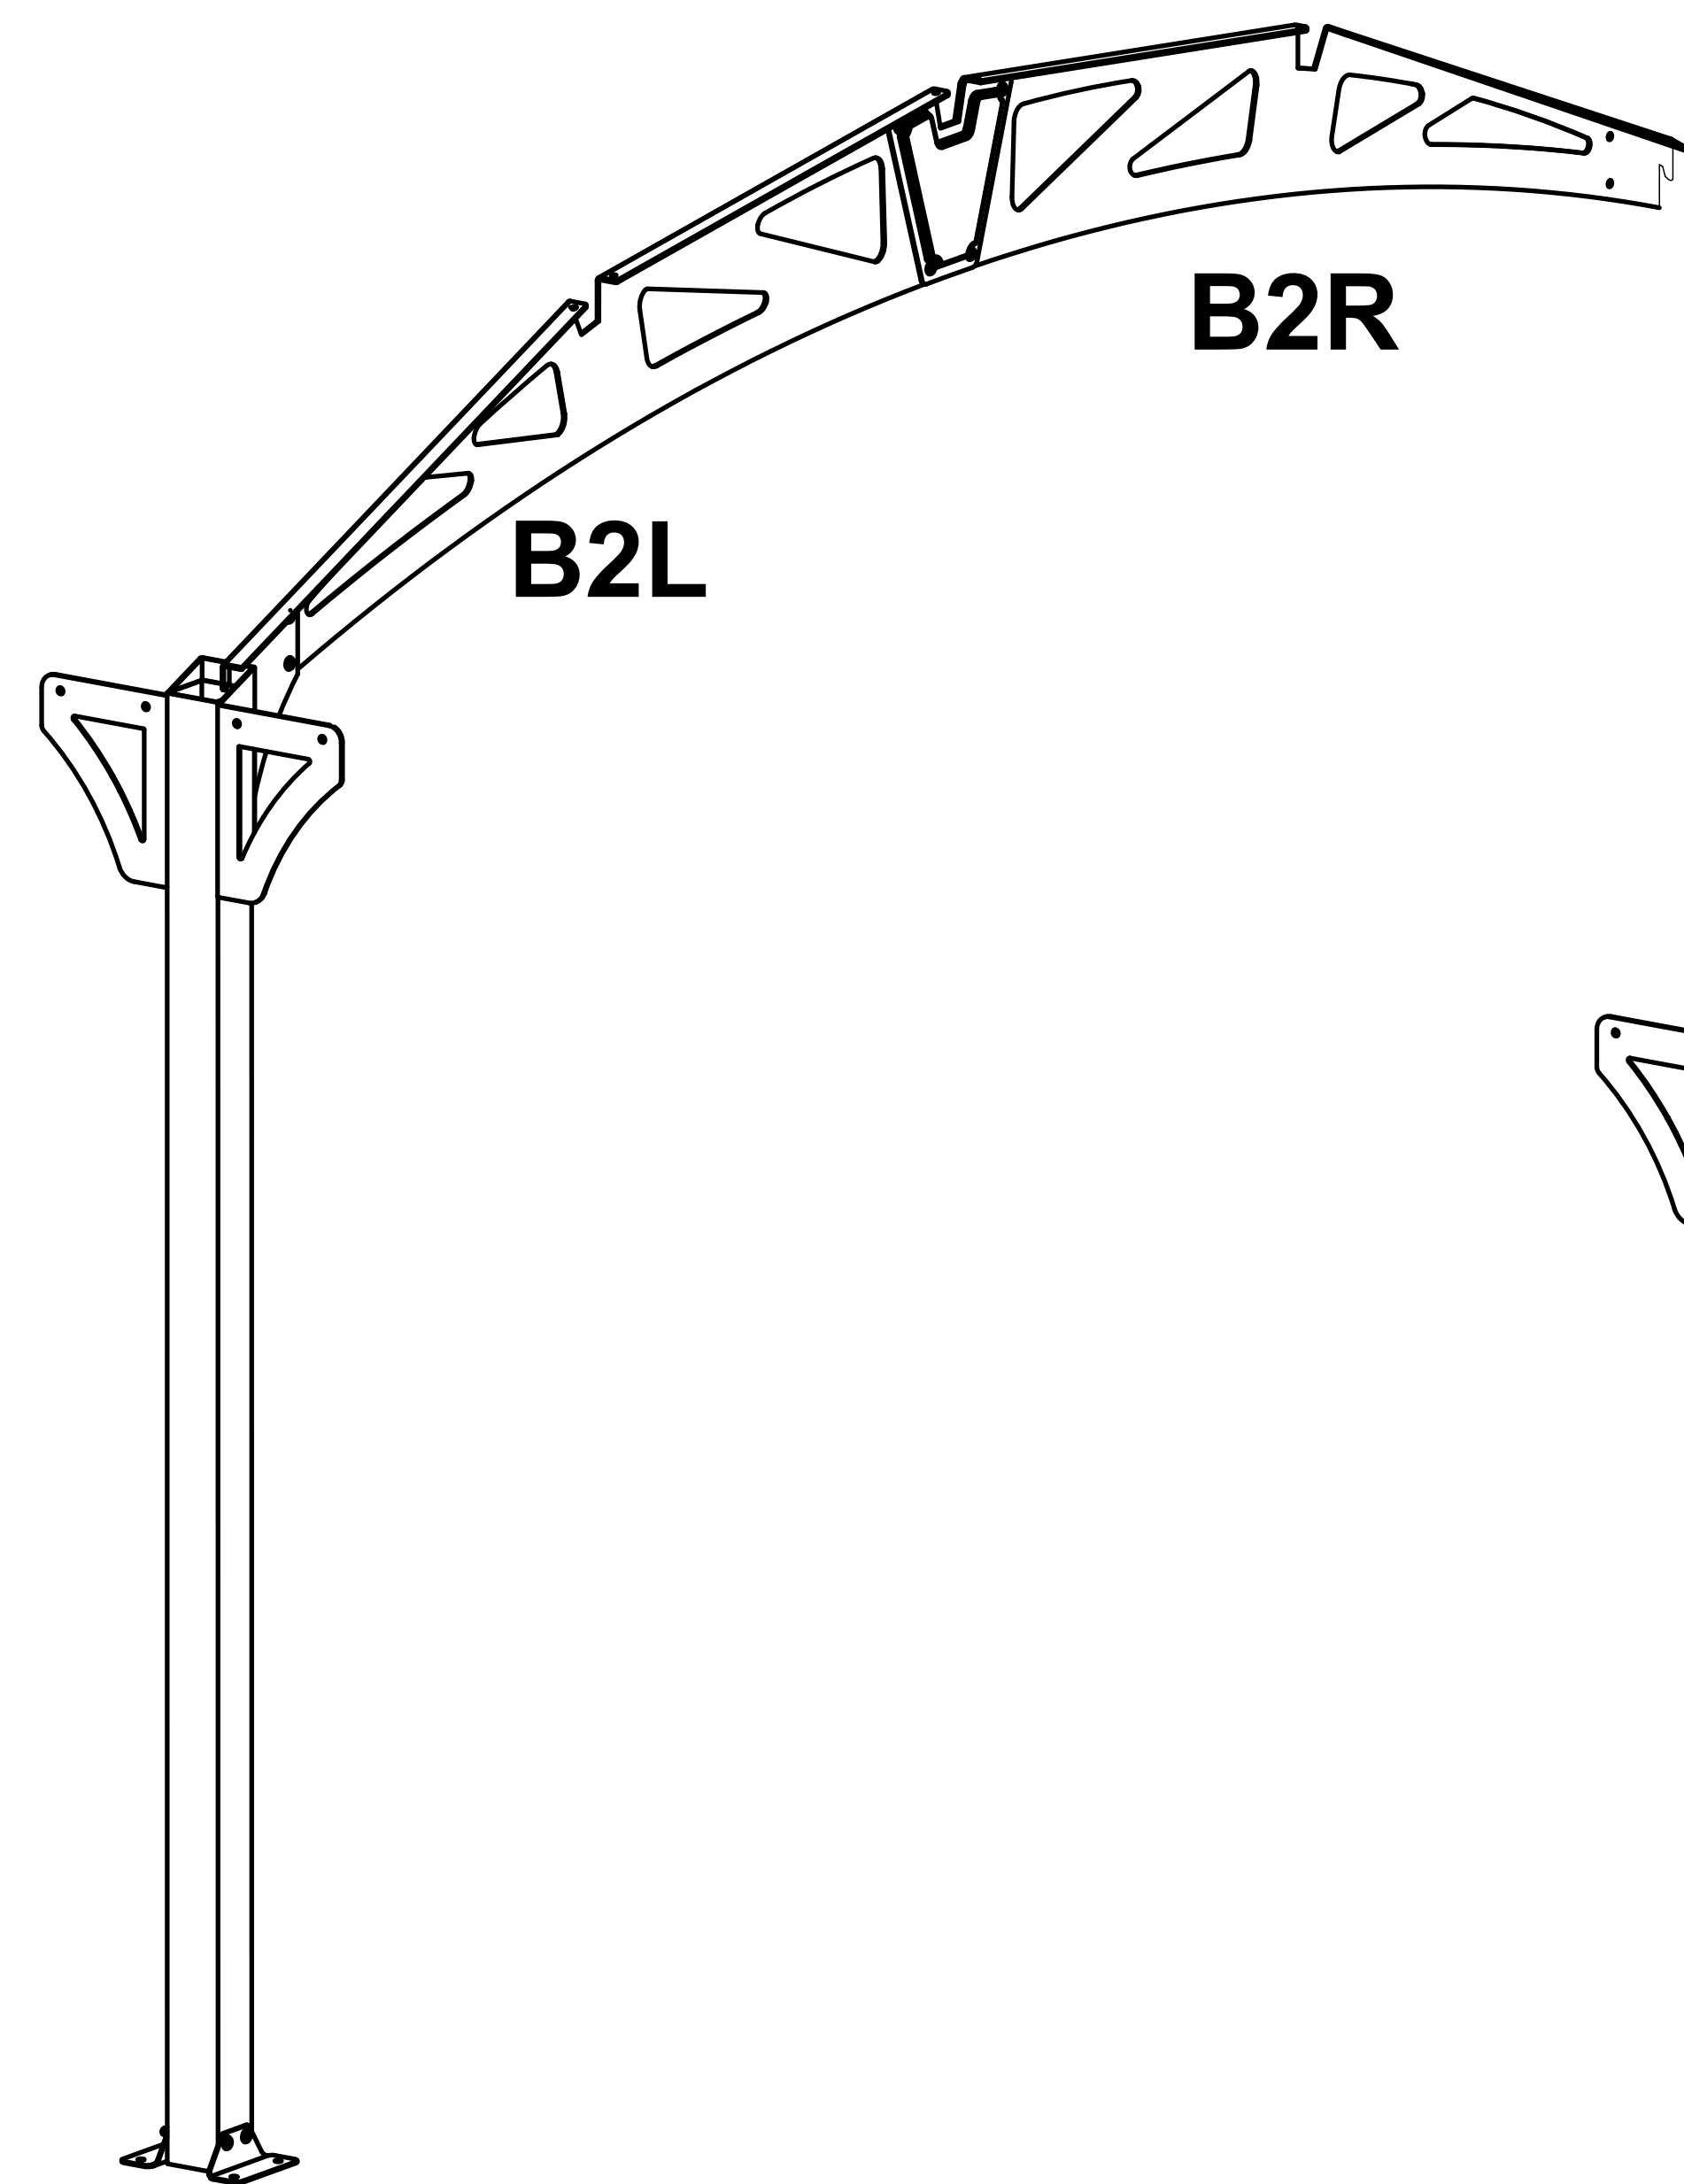

5mm

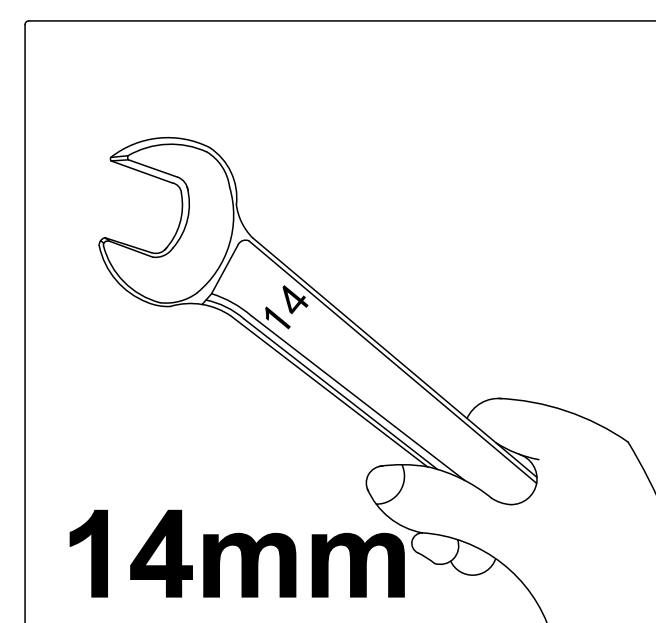


14mm

X3

6

F3


M8x15

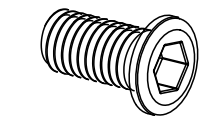




6PCS

F6


M8

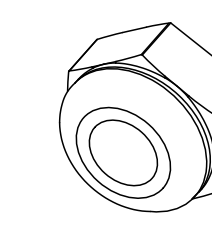

6PCS



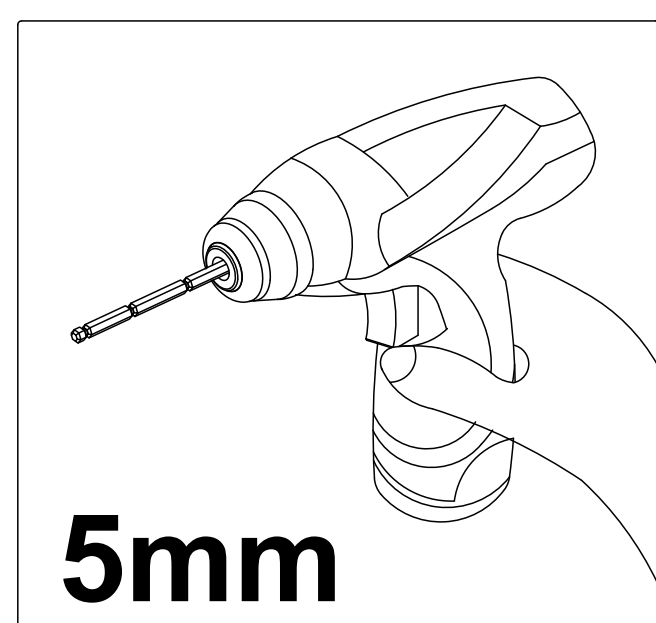
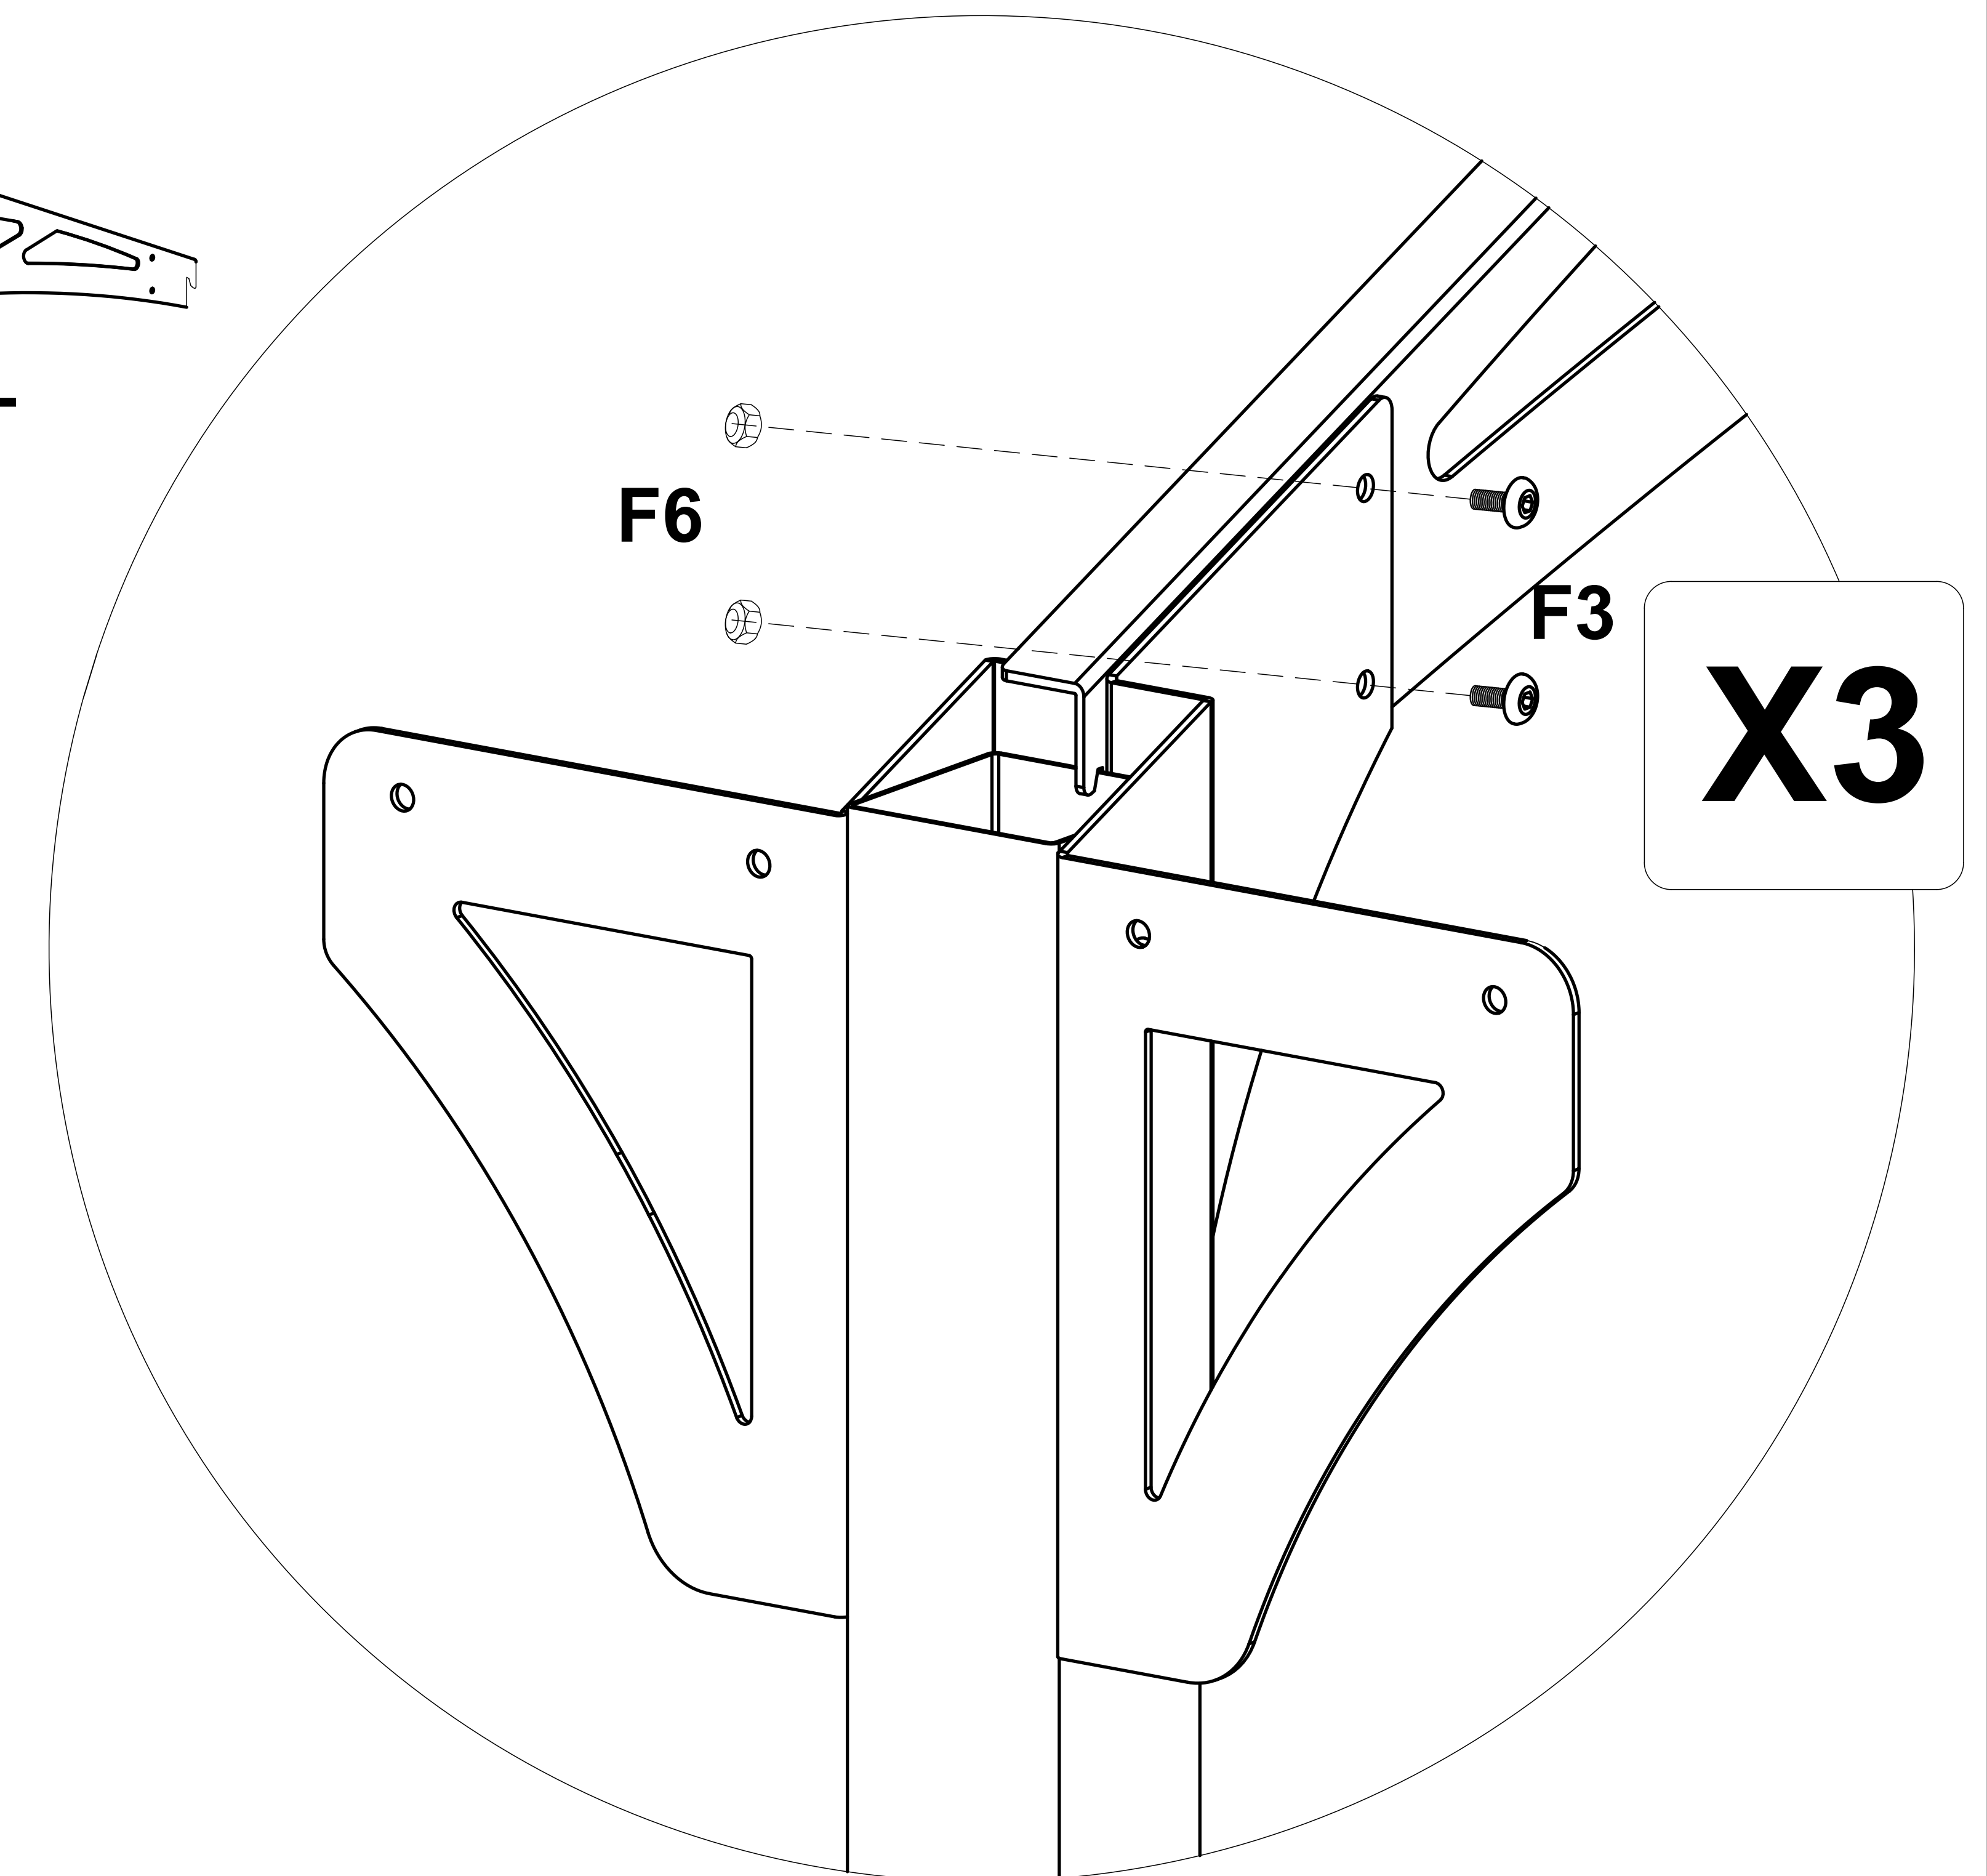
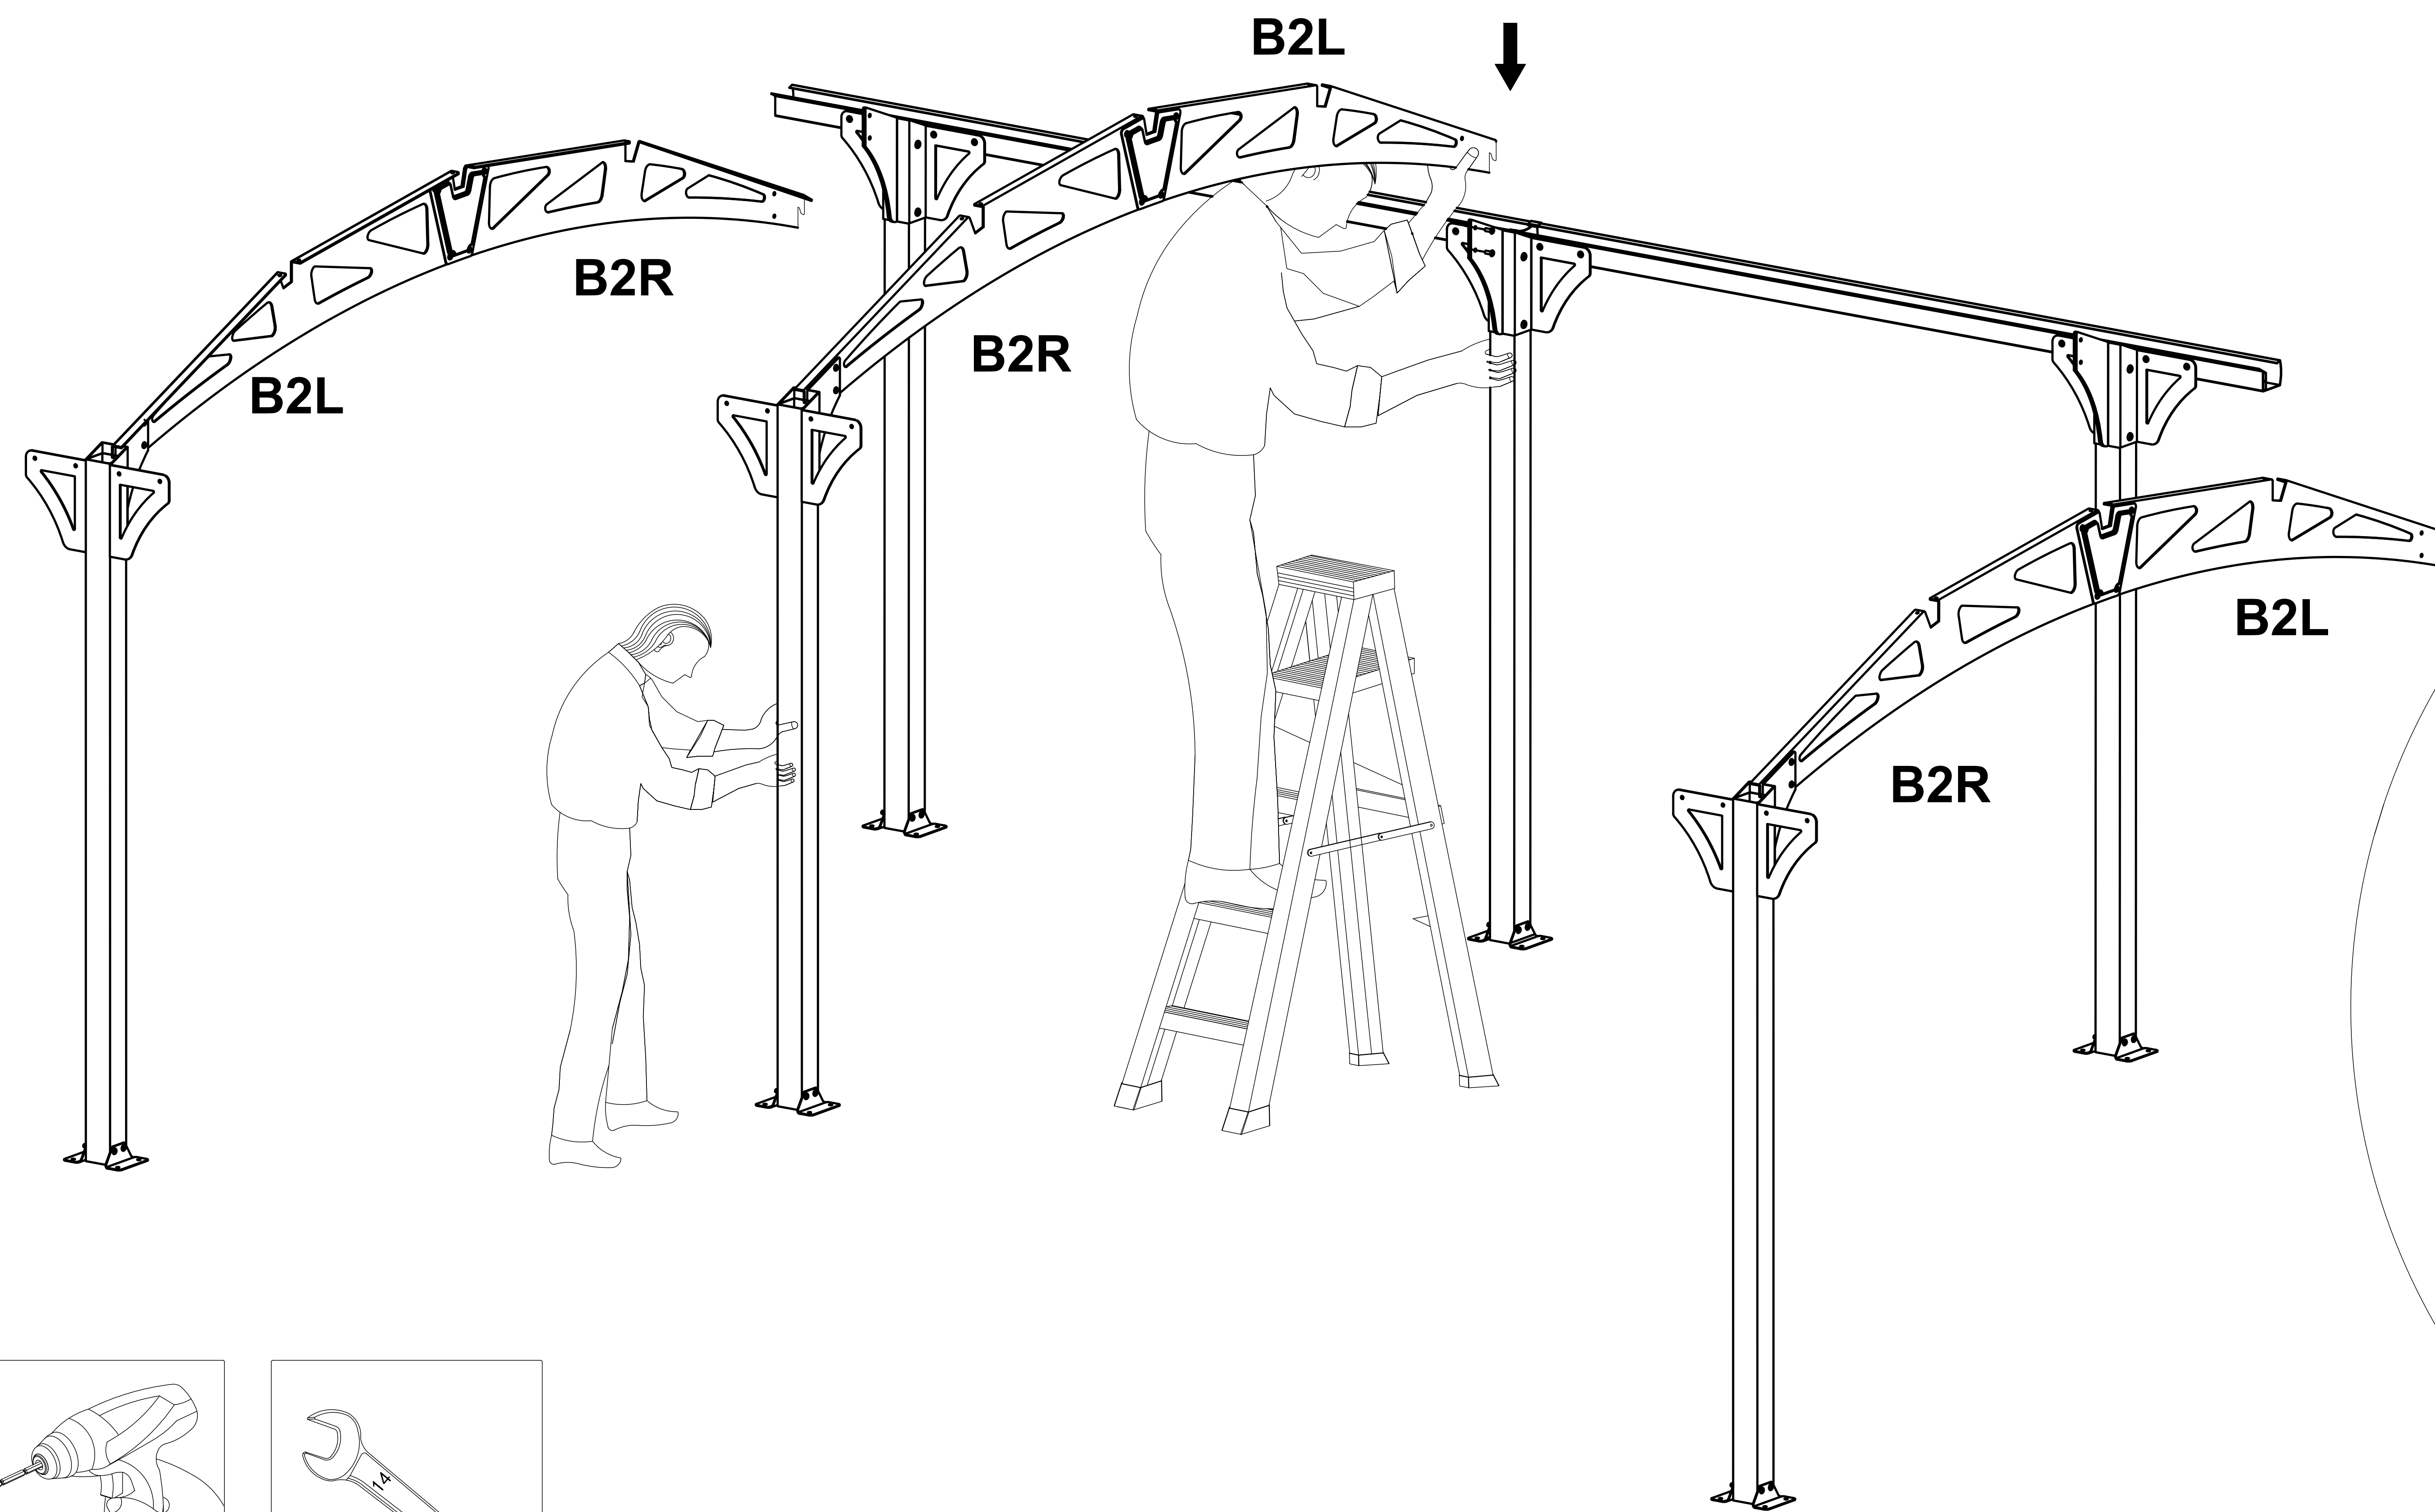


5mm

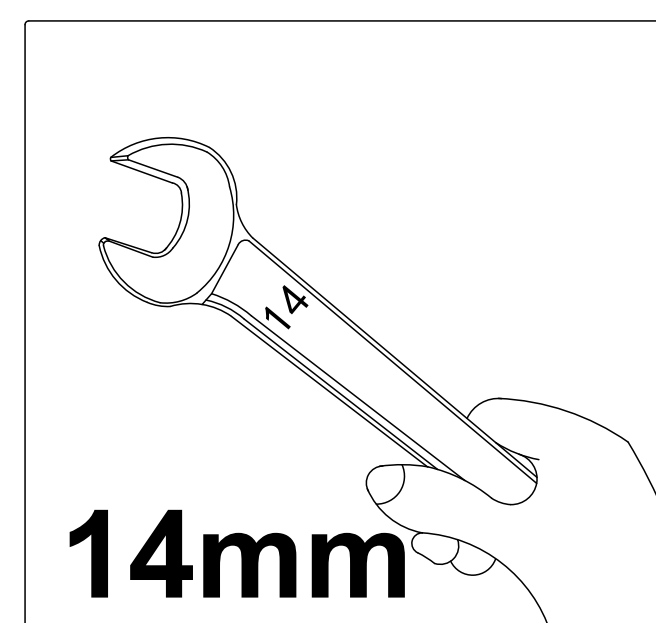





14mm

7

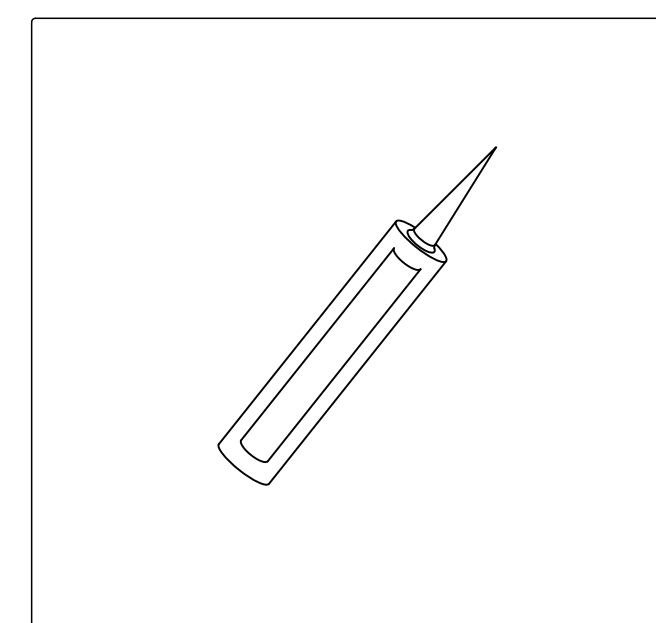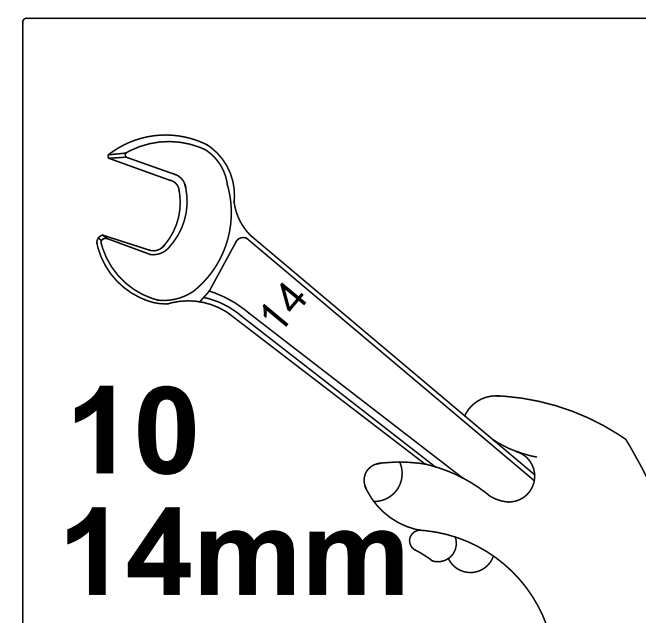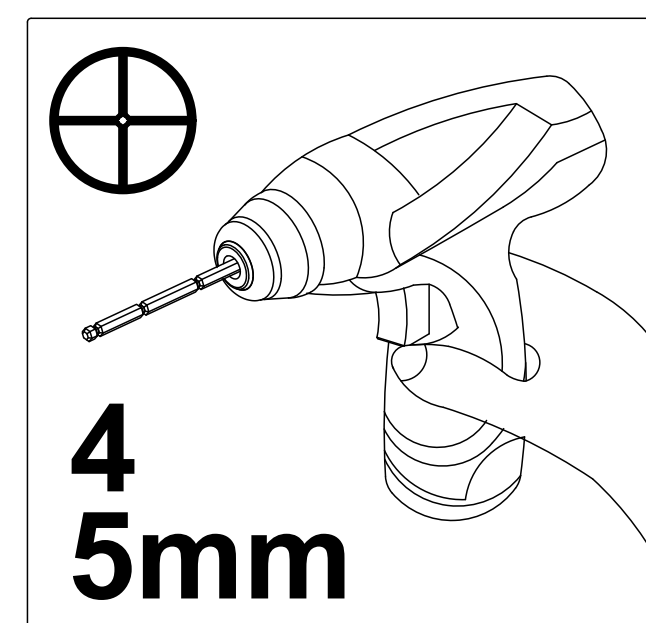
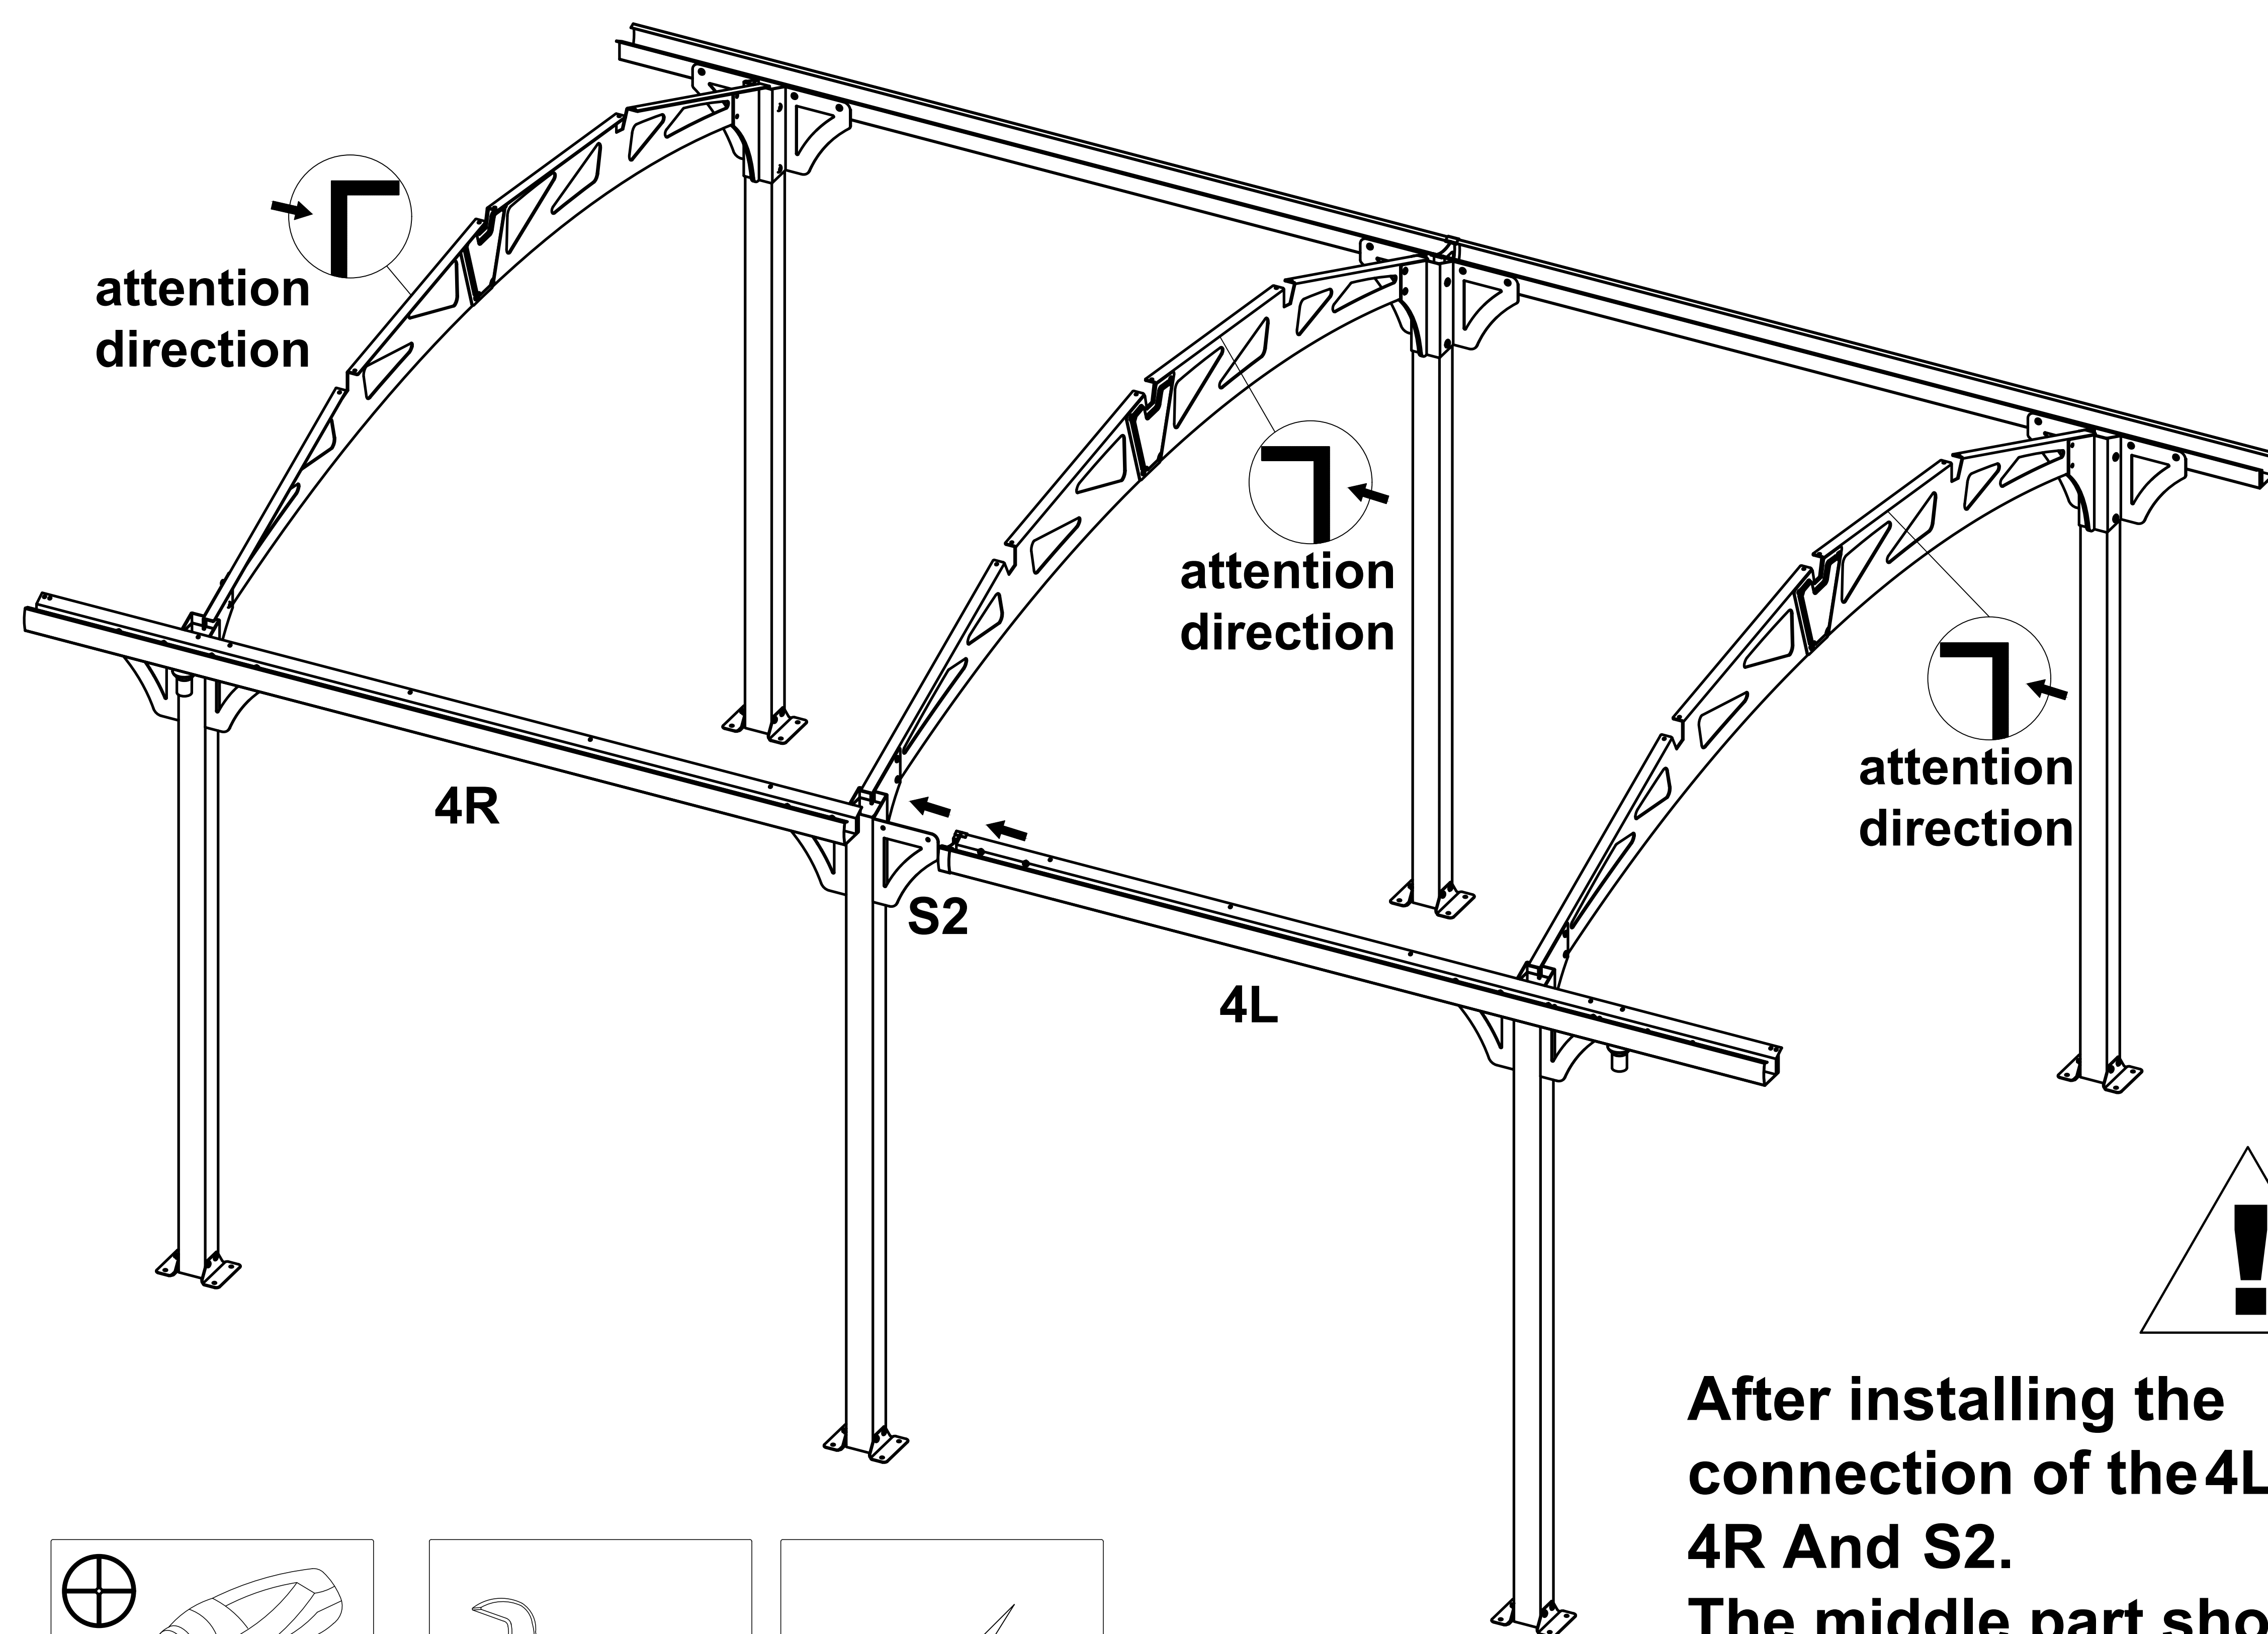
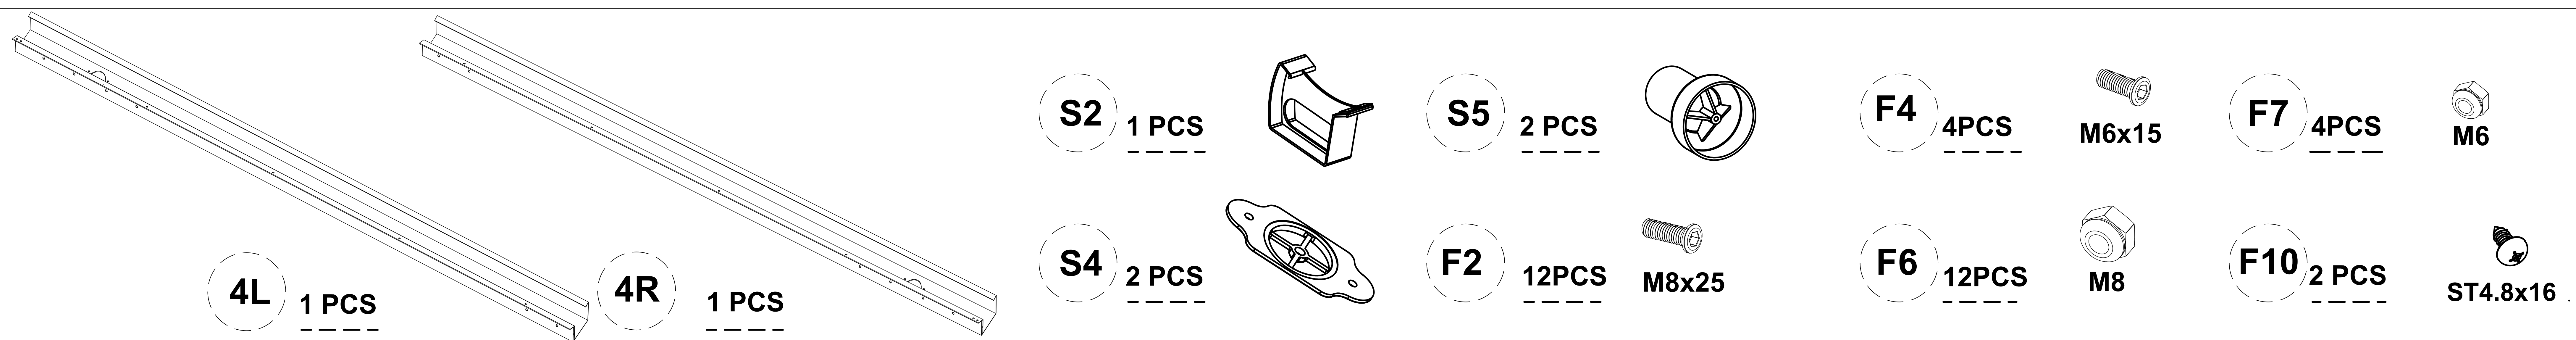


!

After installing the connection of the 4L, 4R And S2. The middle part should be coated with sealant to ensure no water leakage.

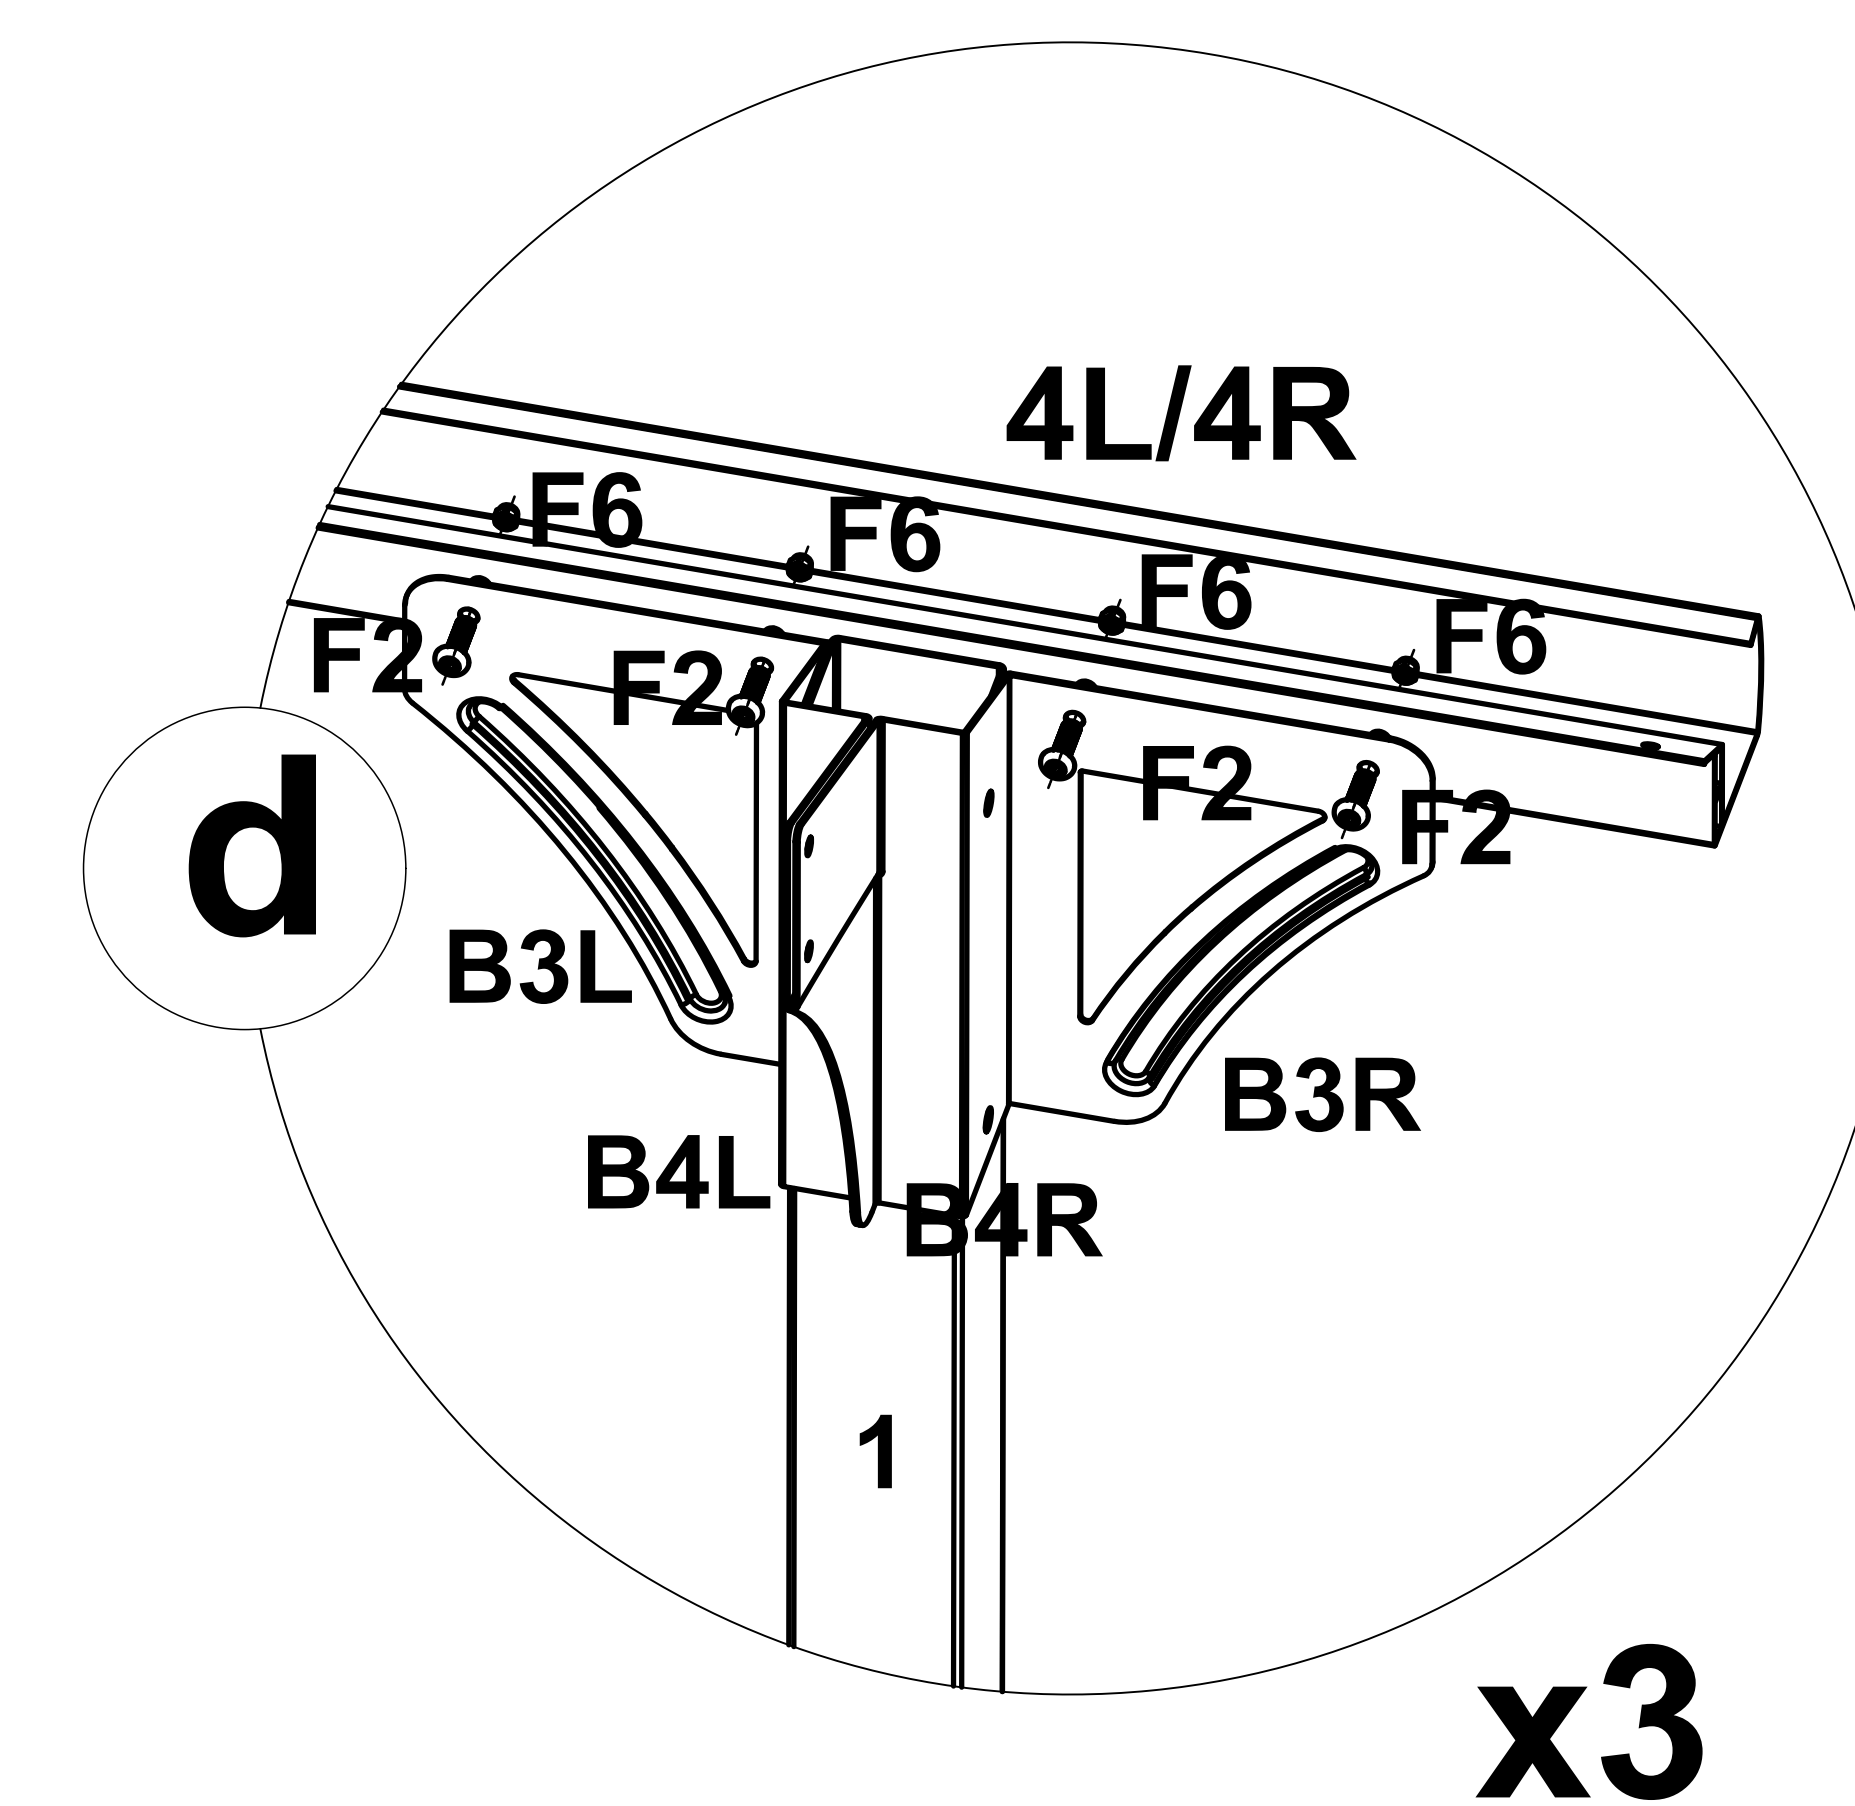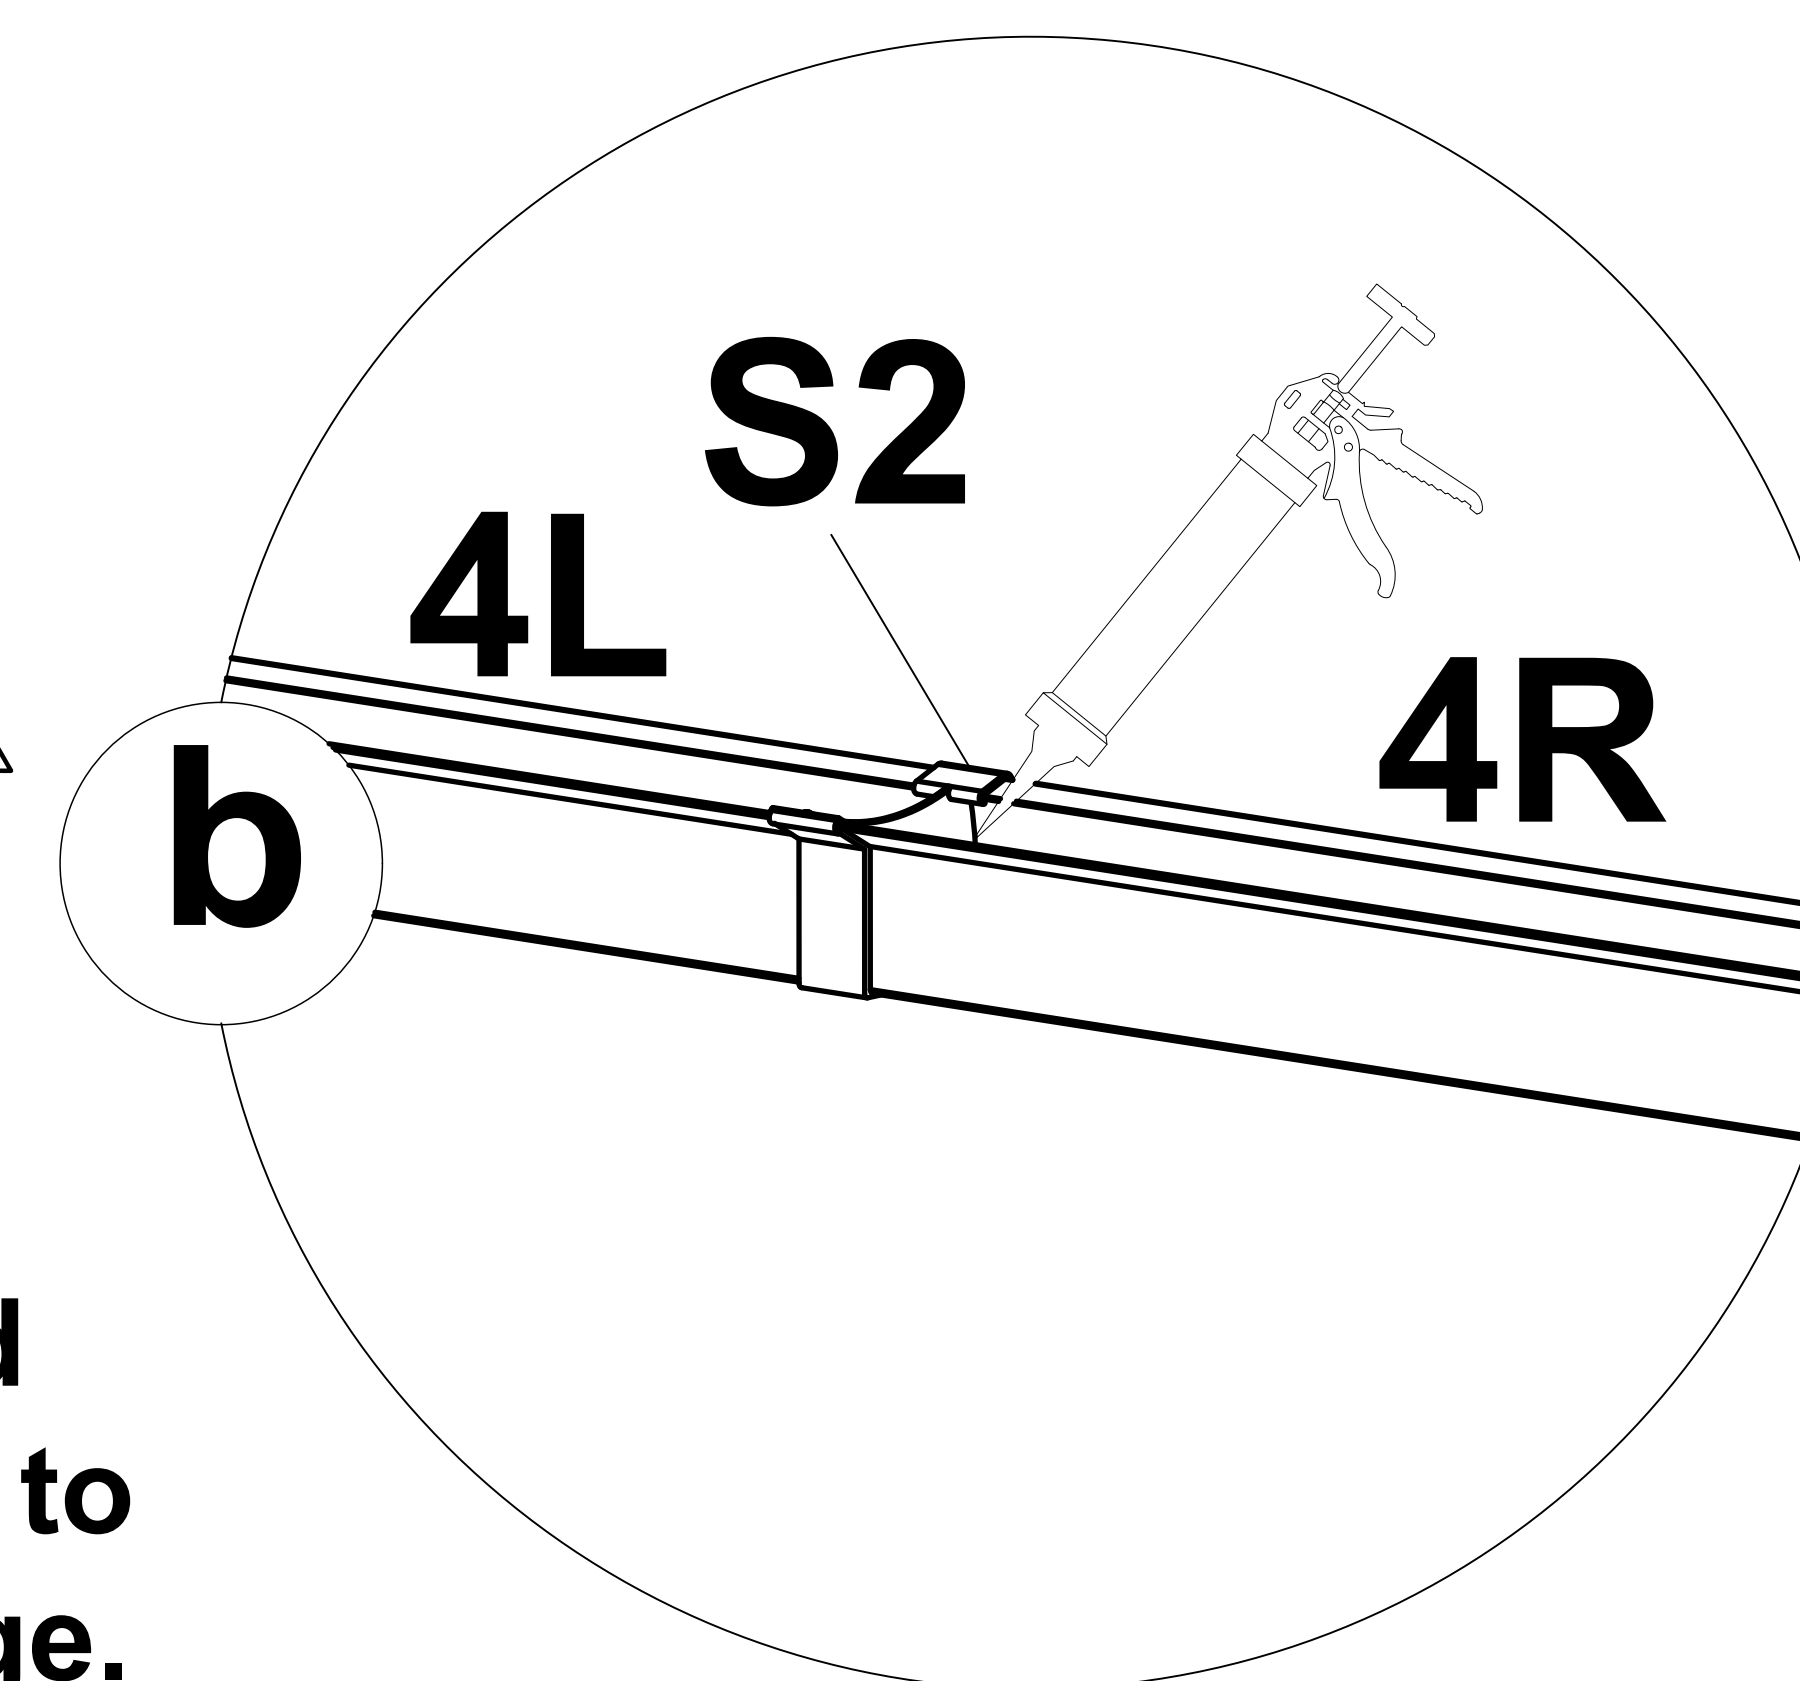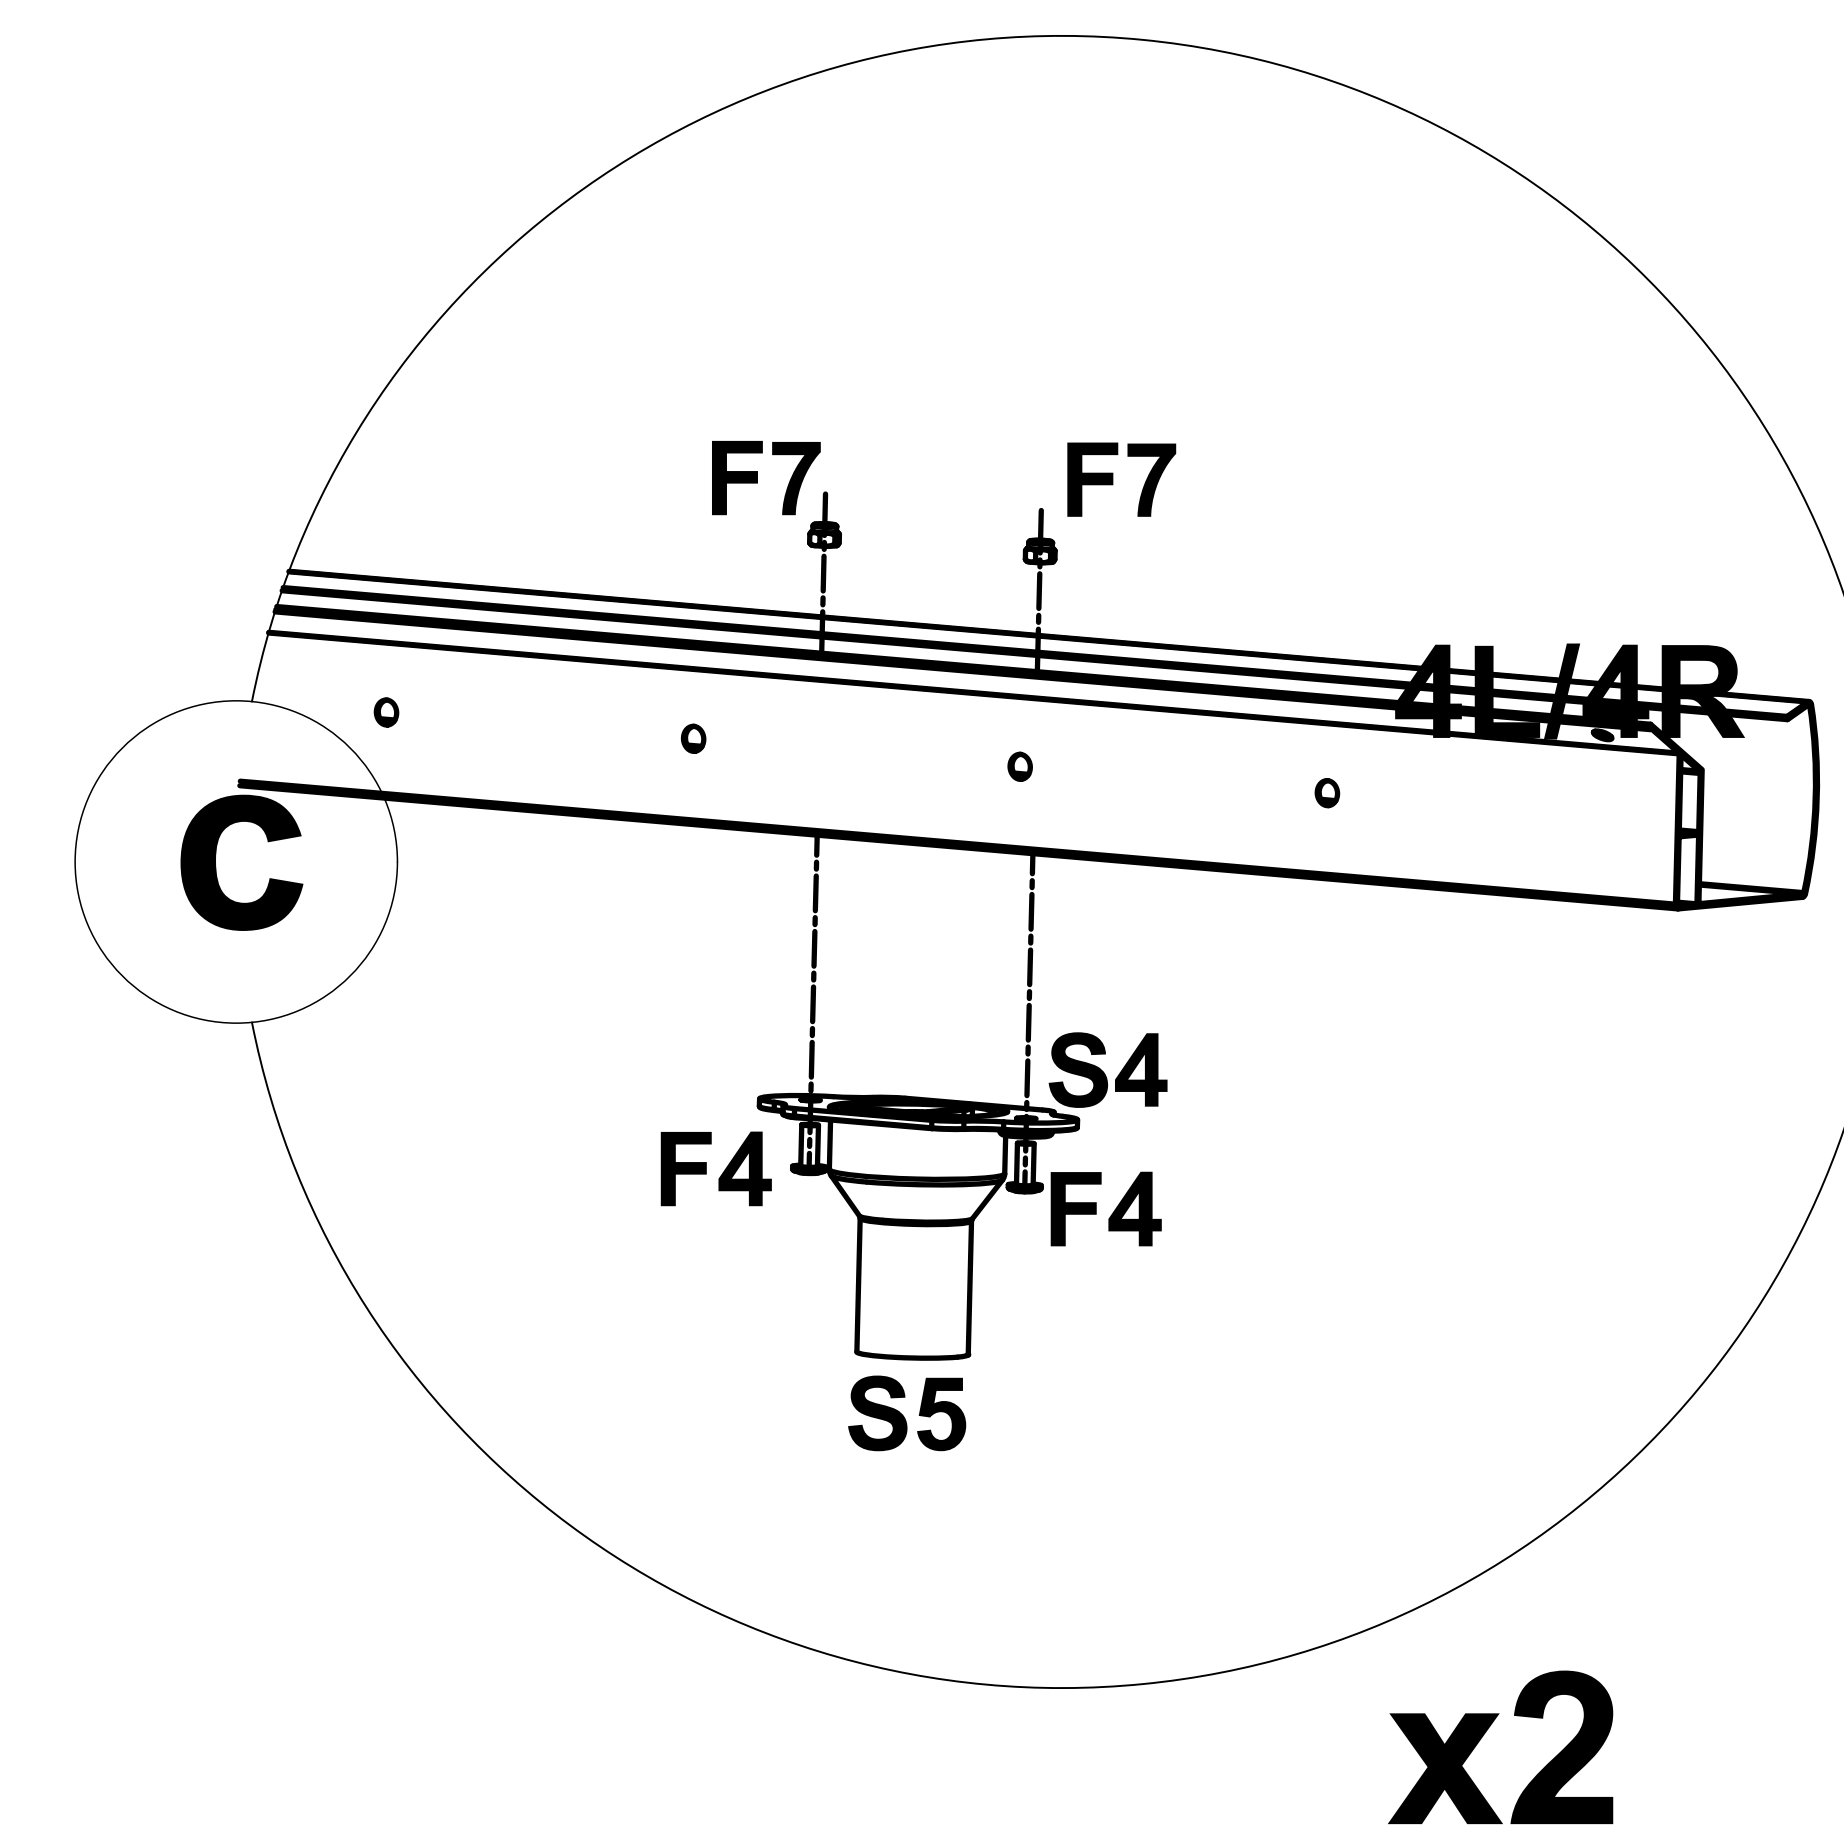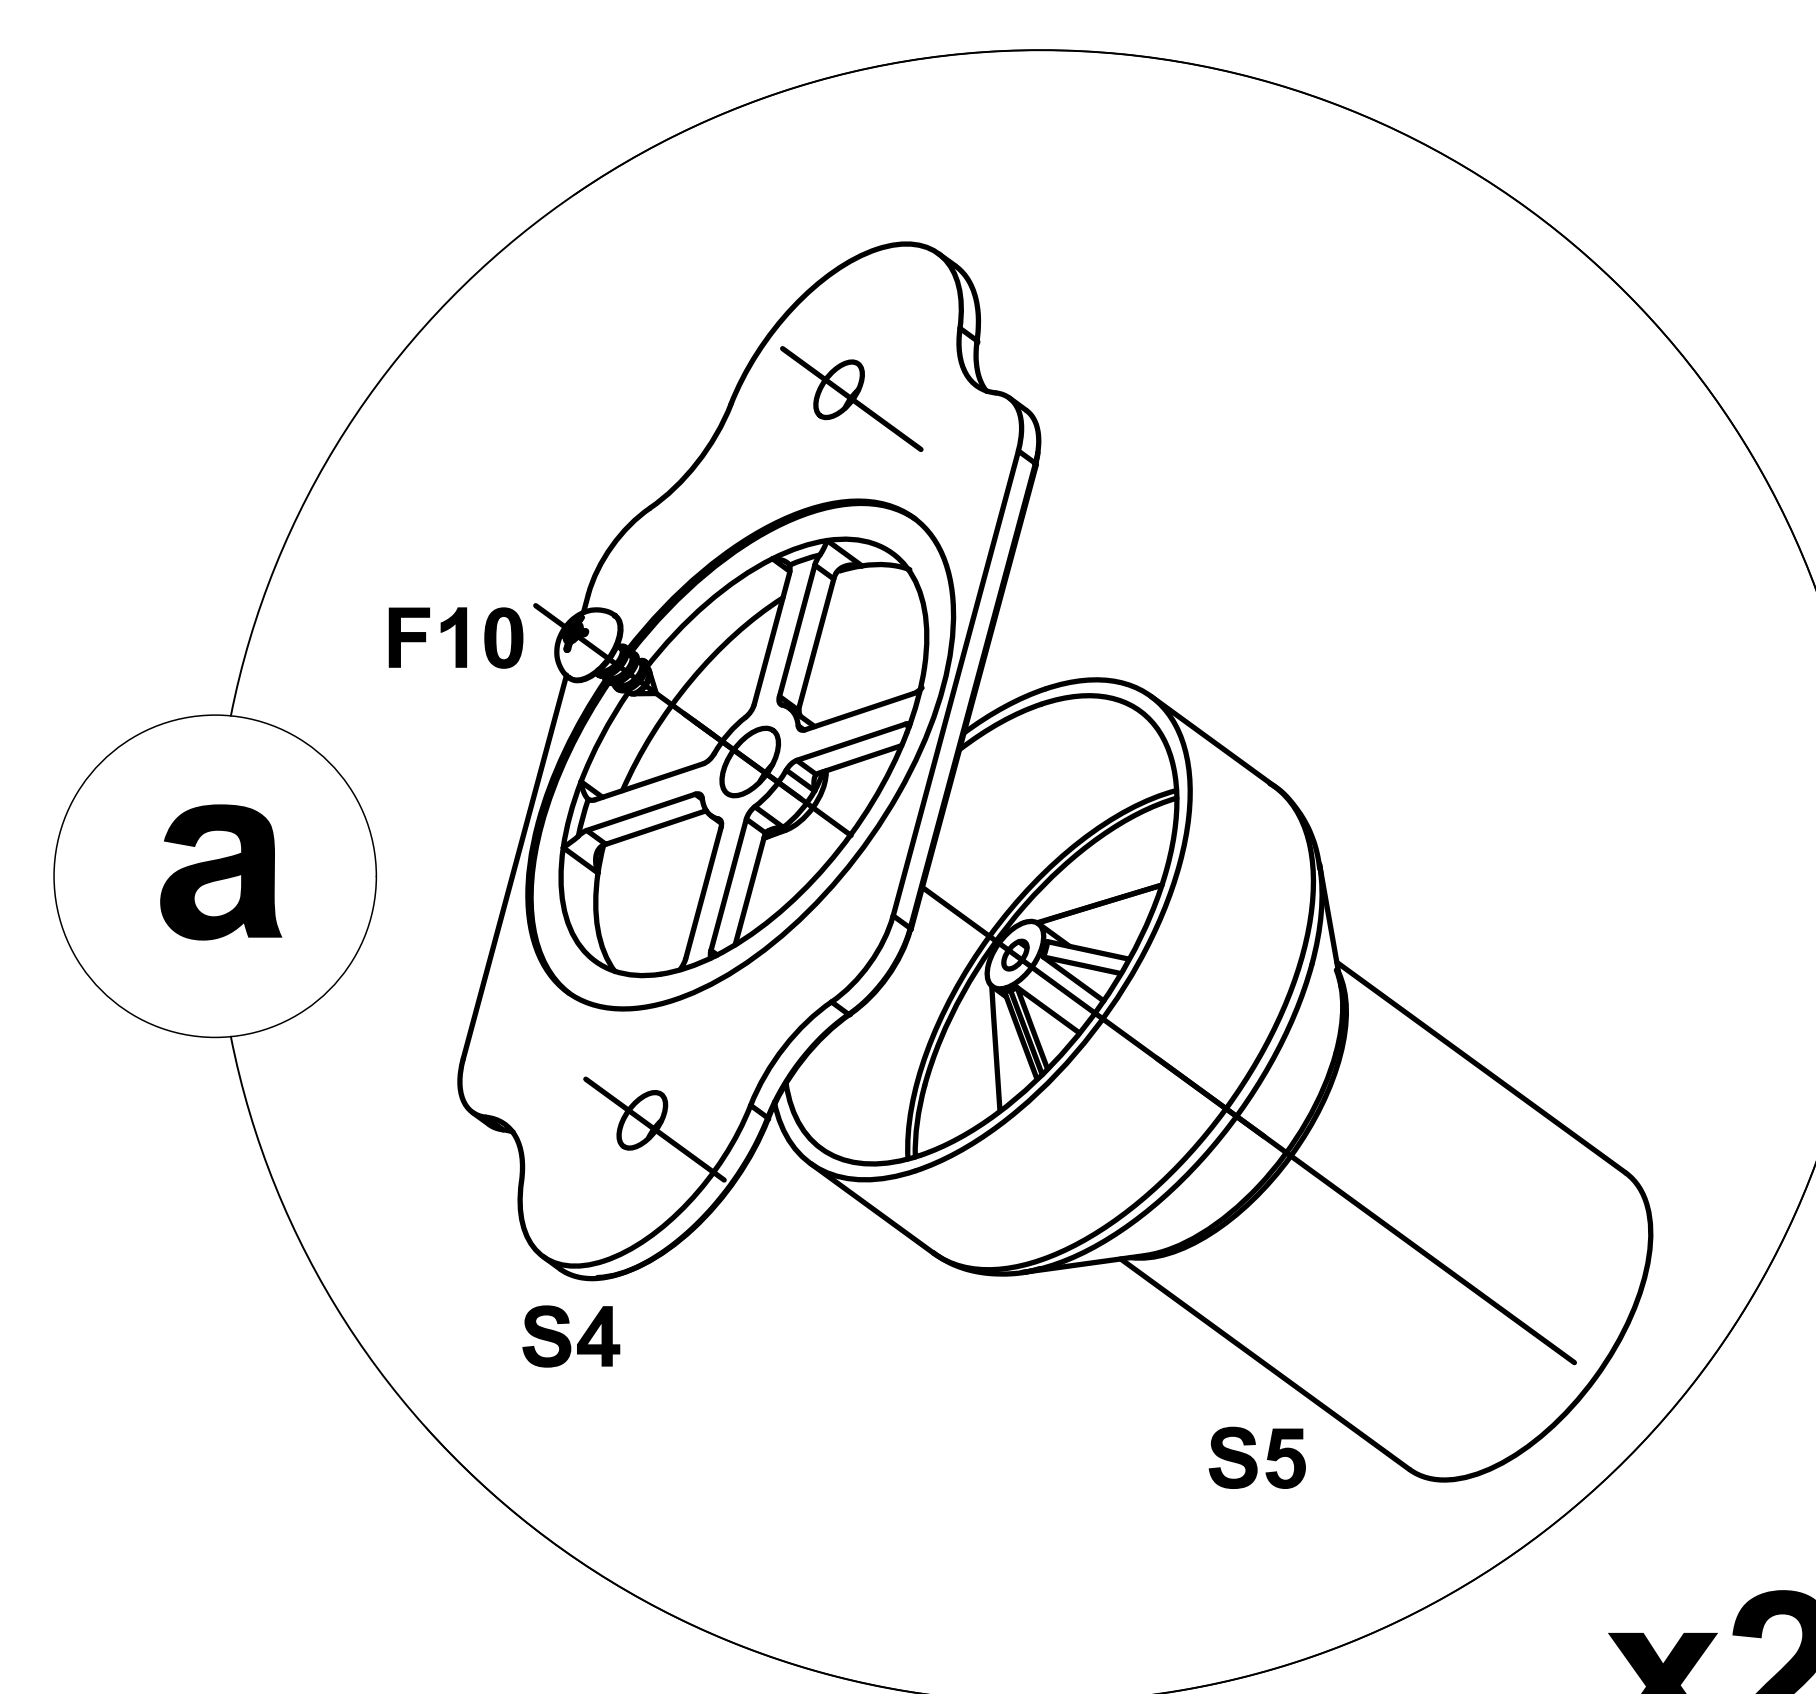

8

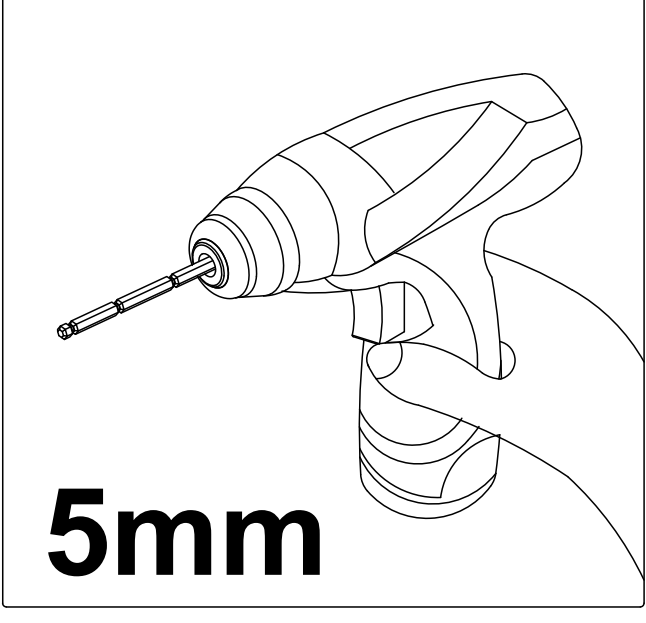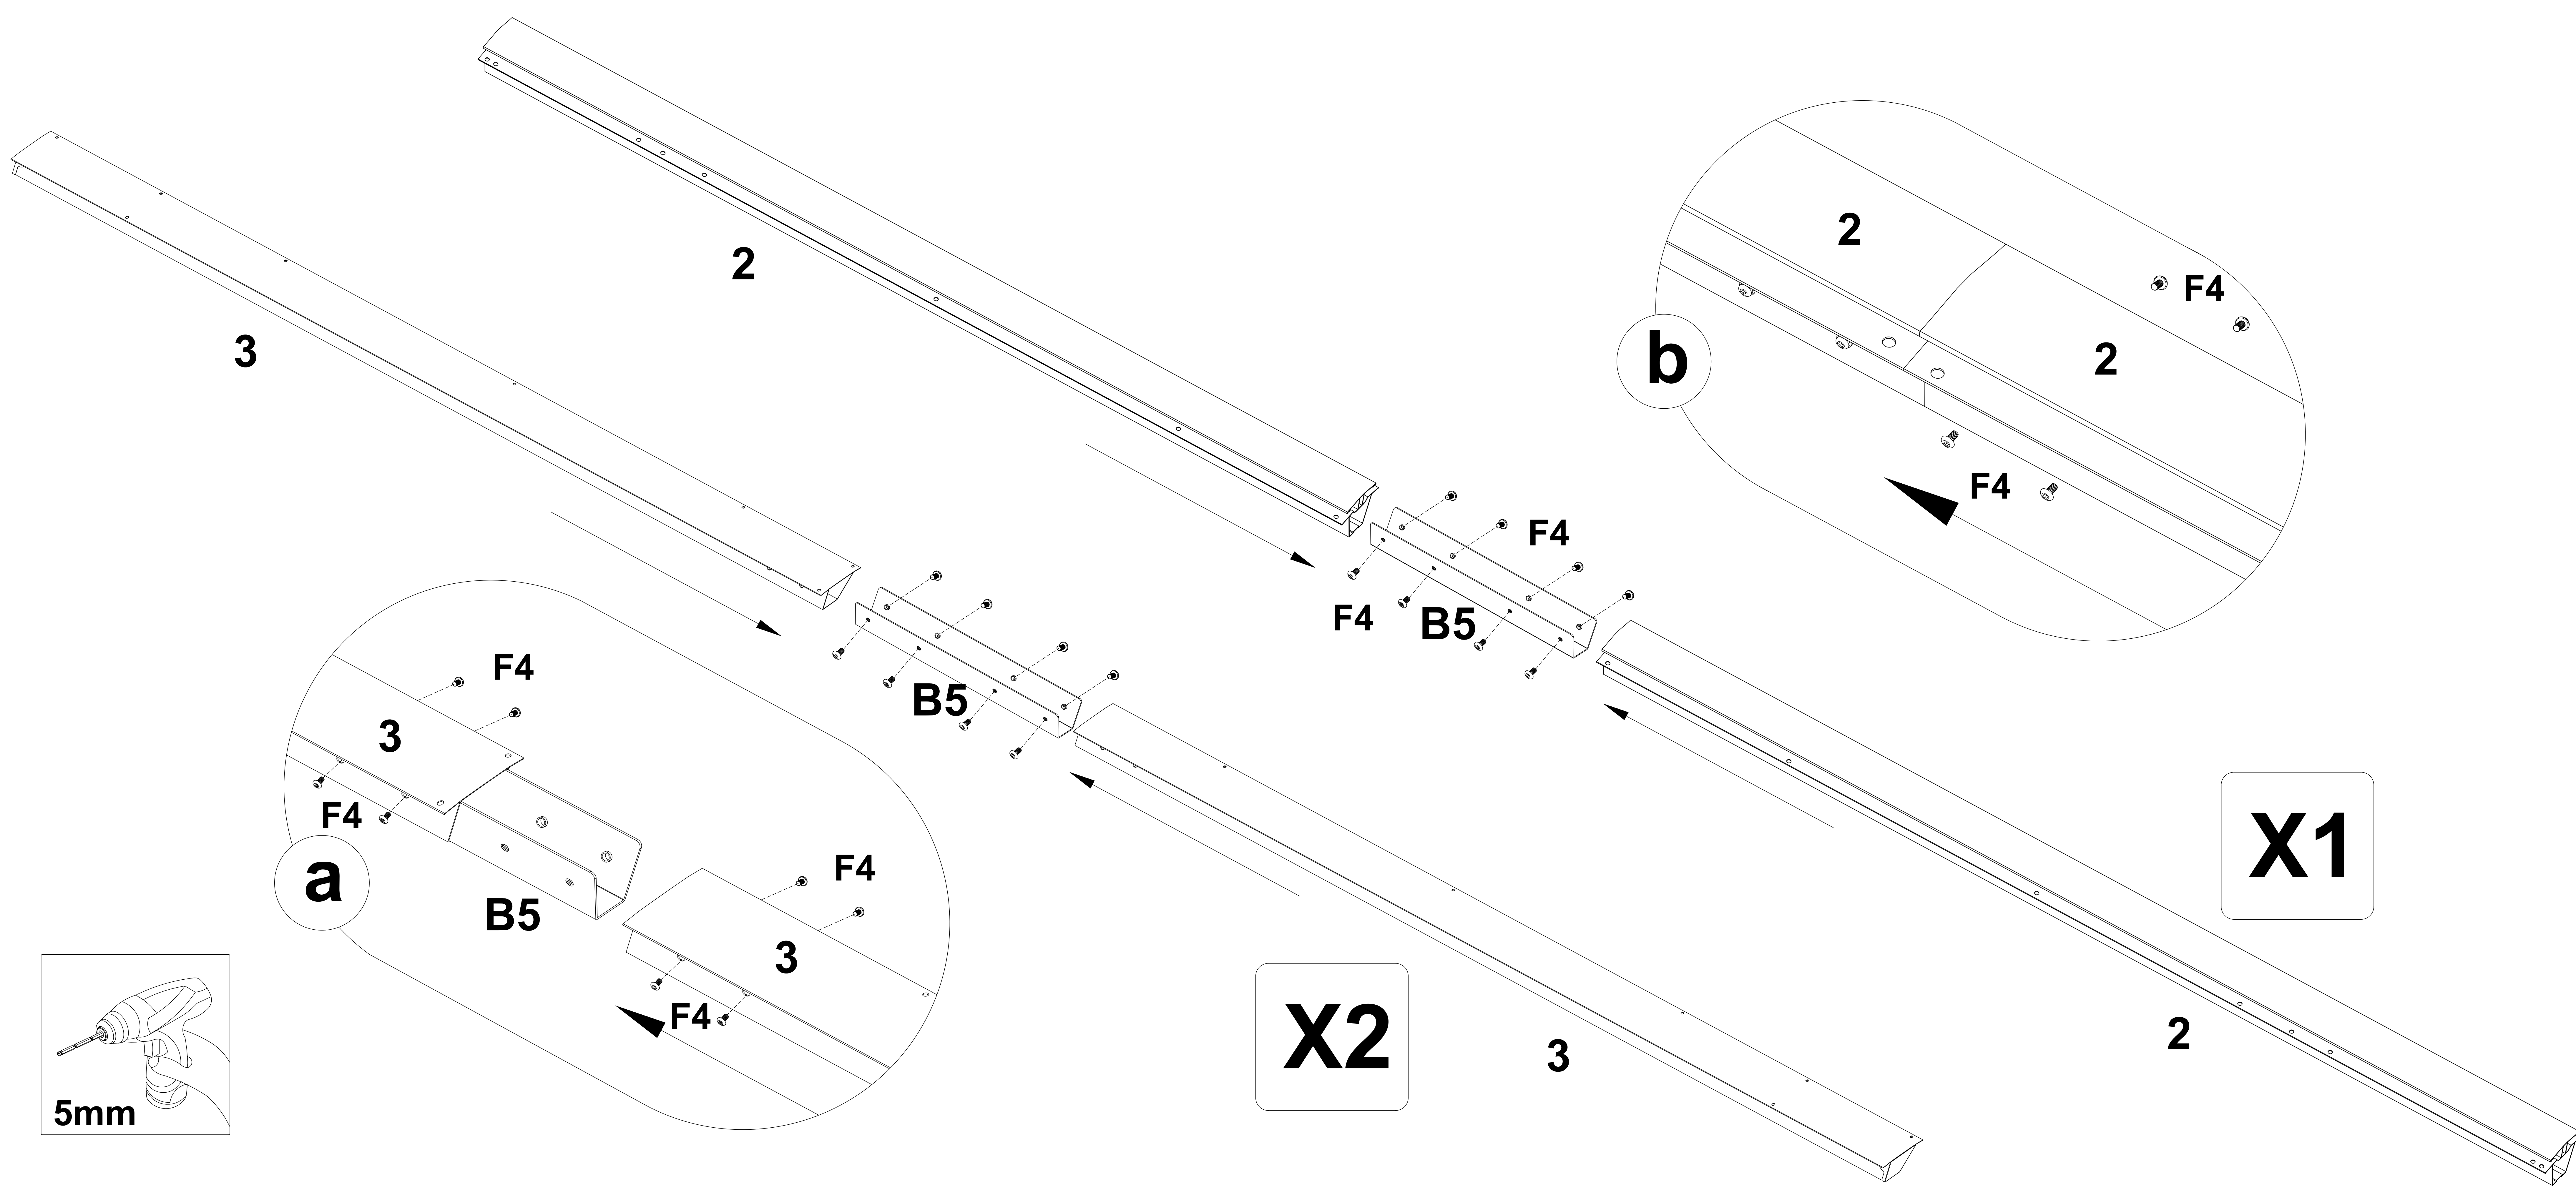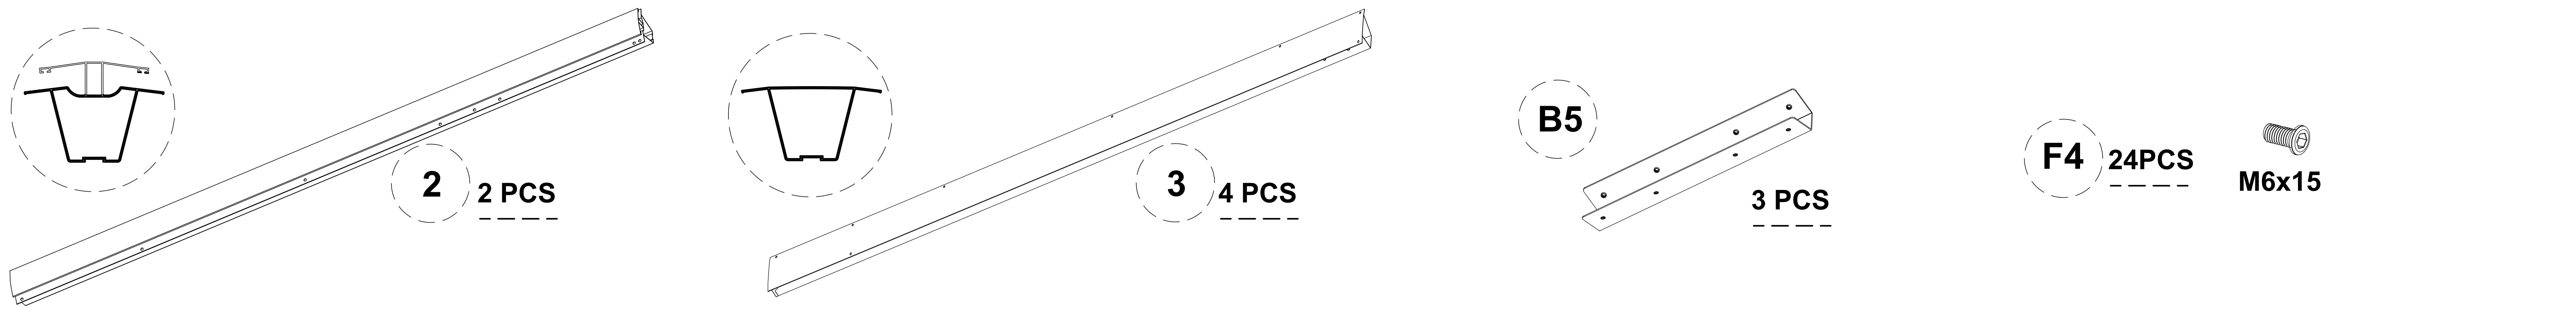




9

F4 18PCS


M6x15

F7 18PCS




M6

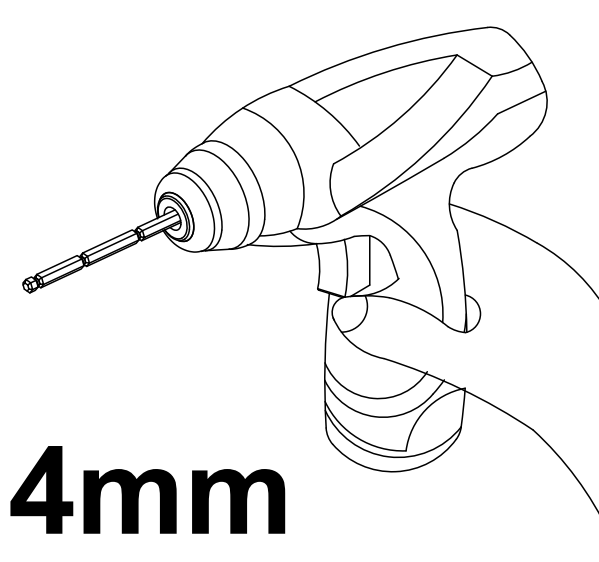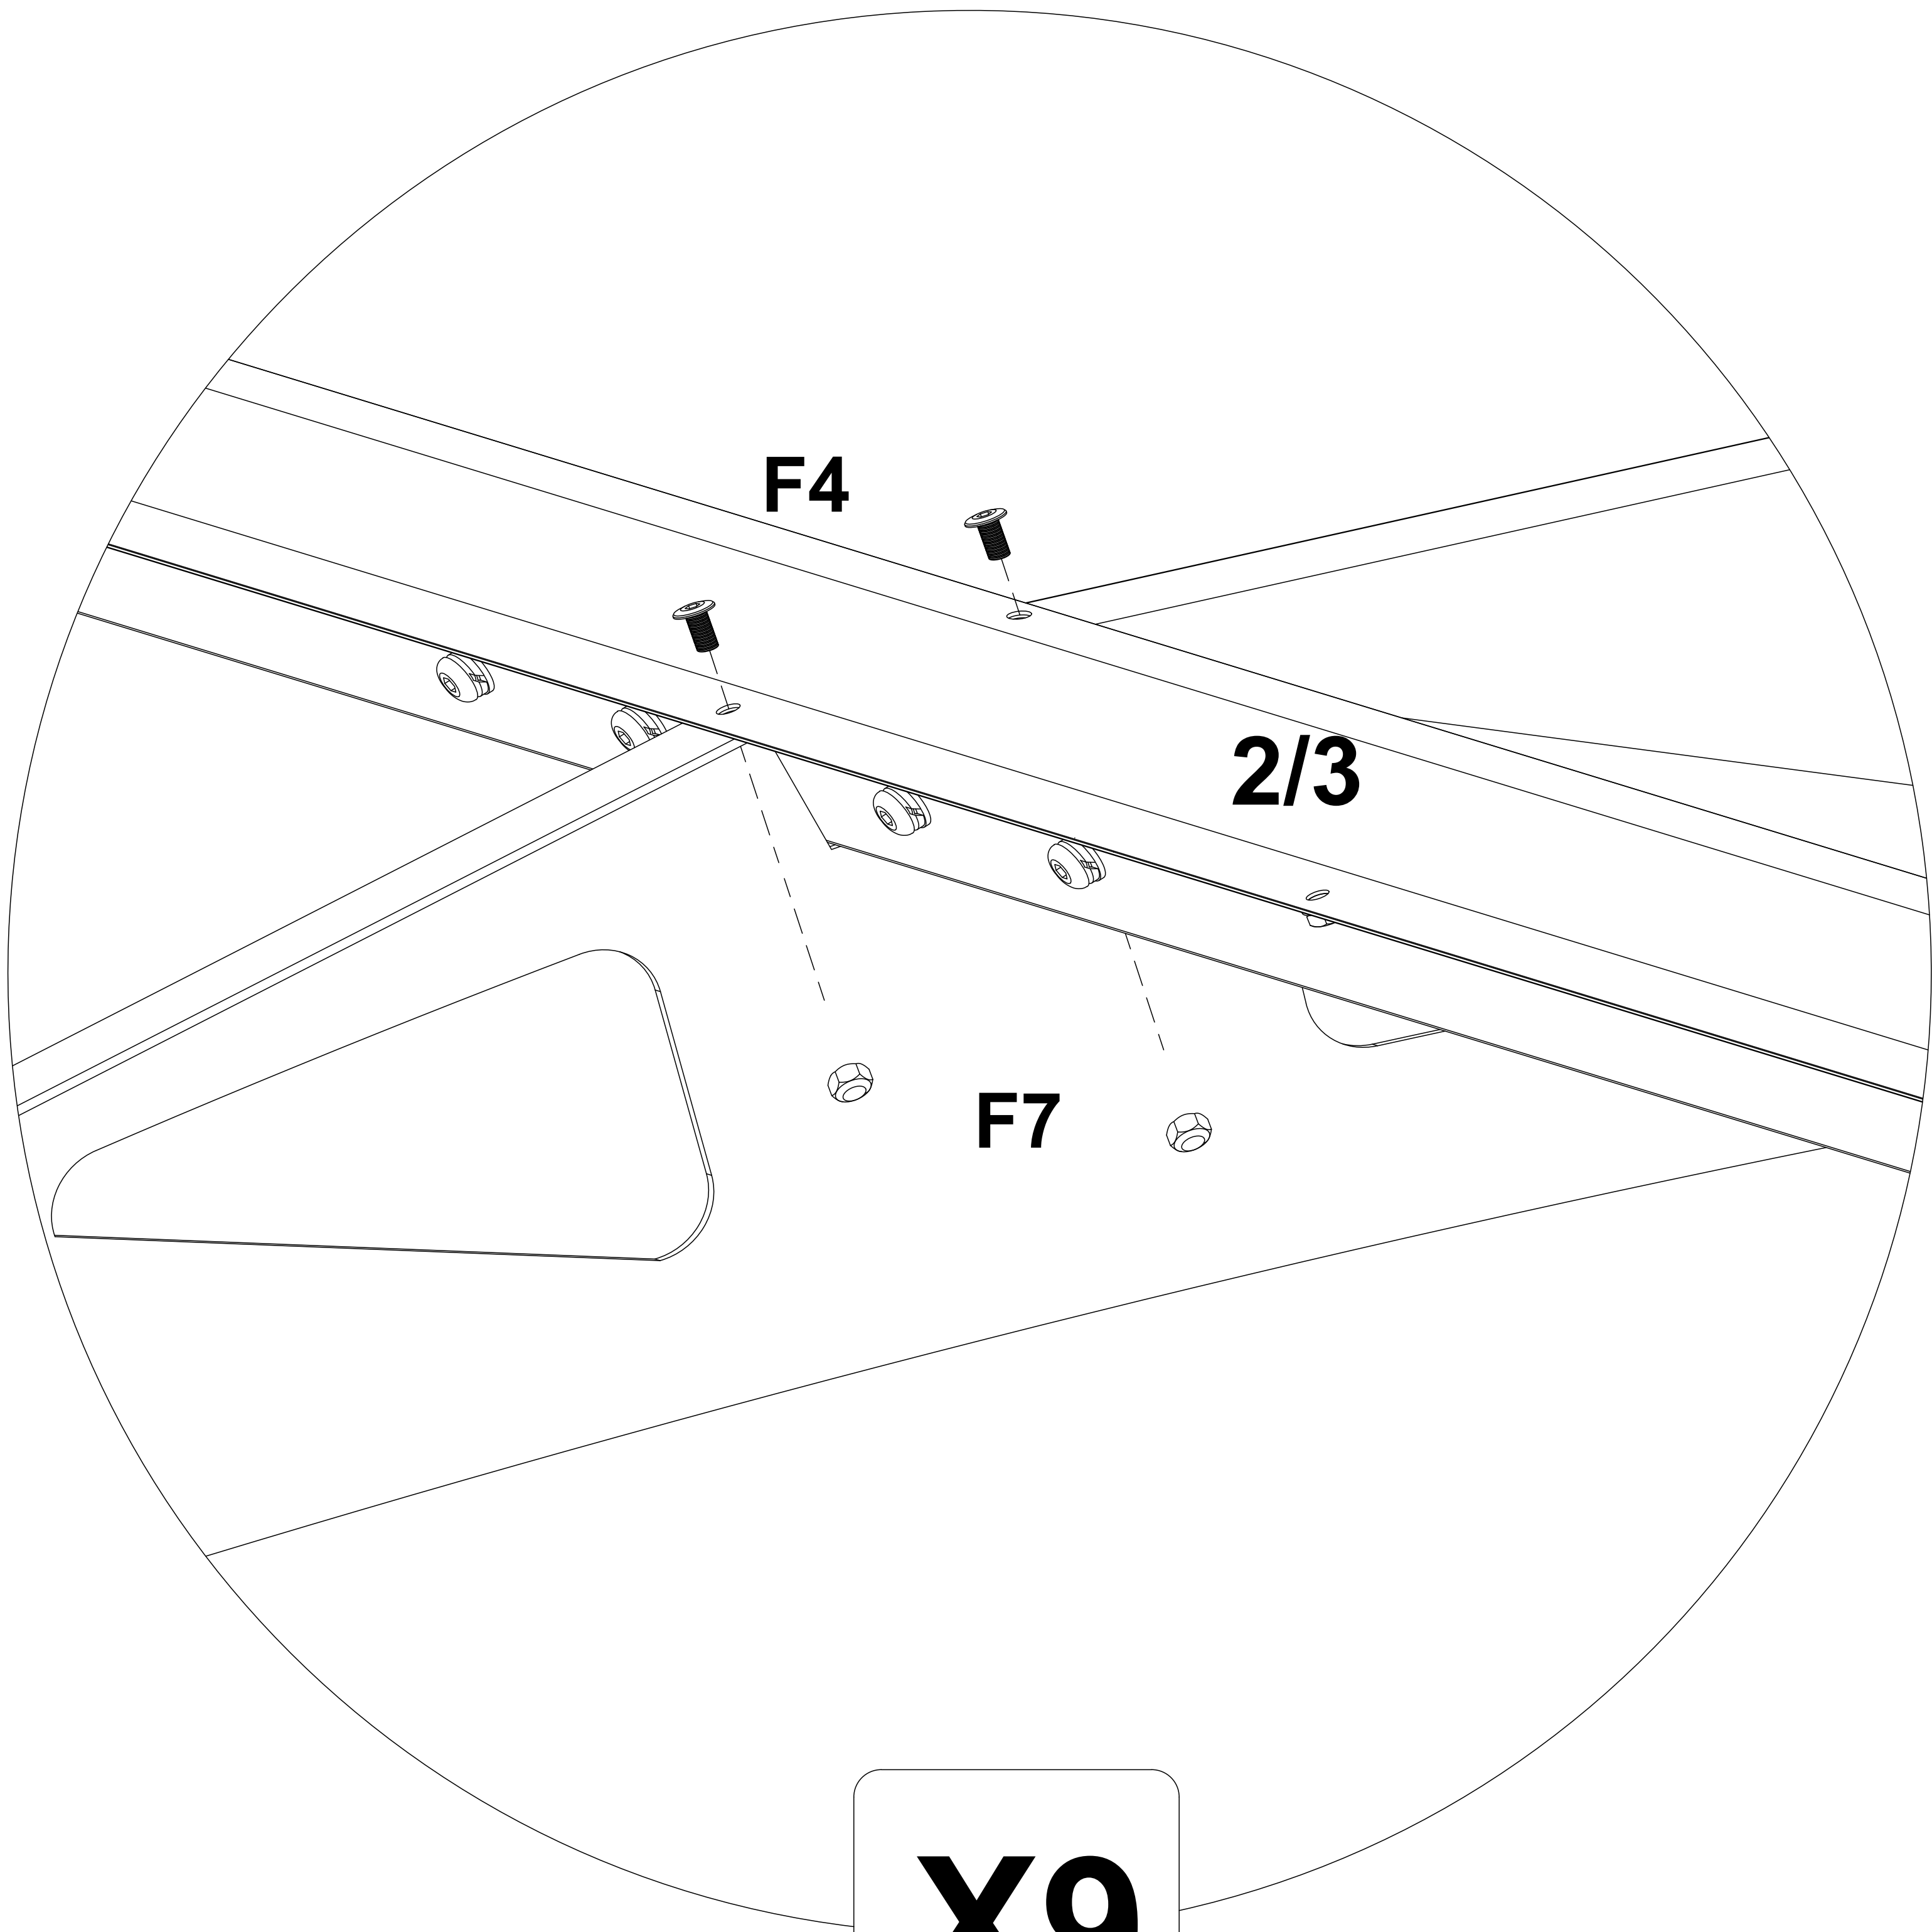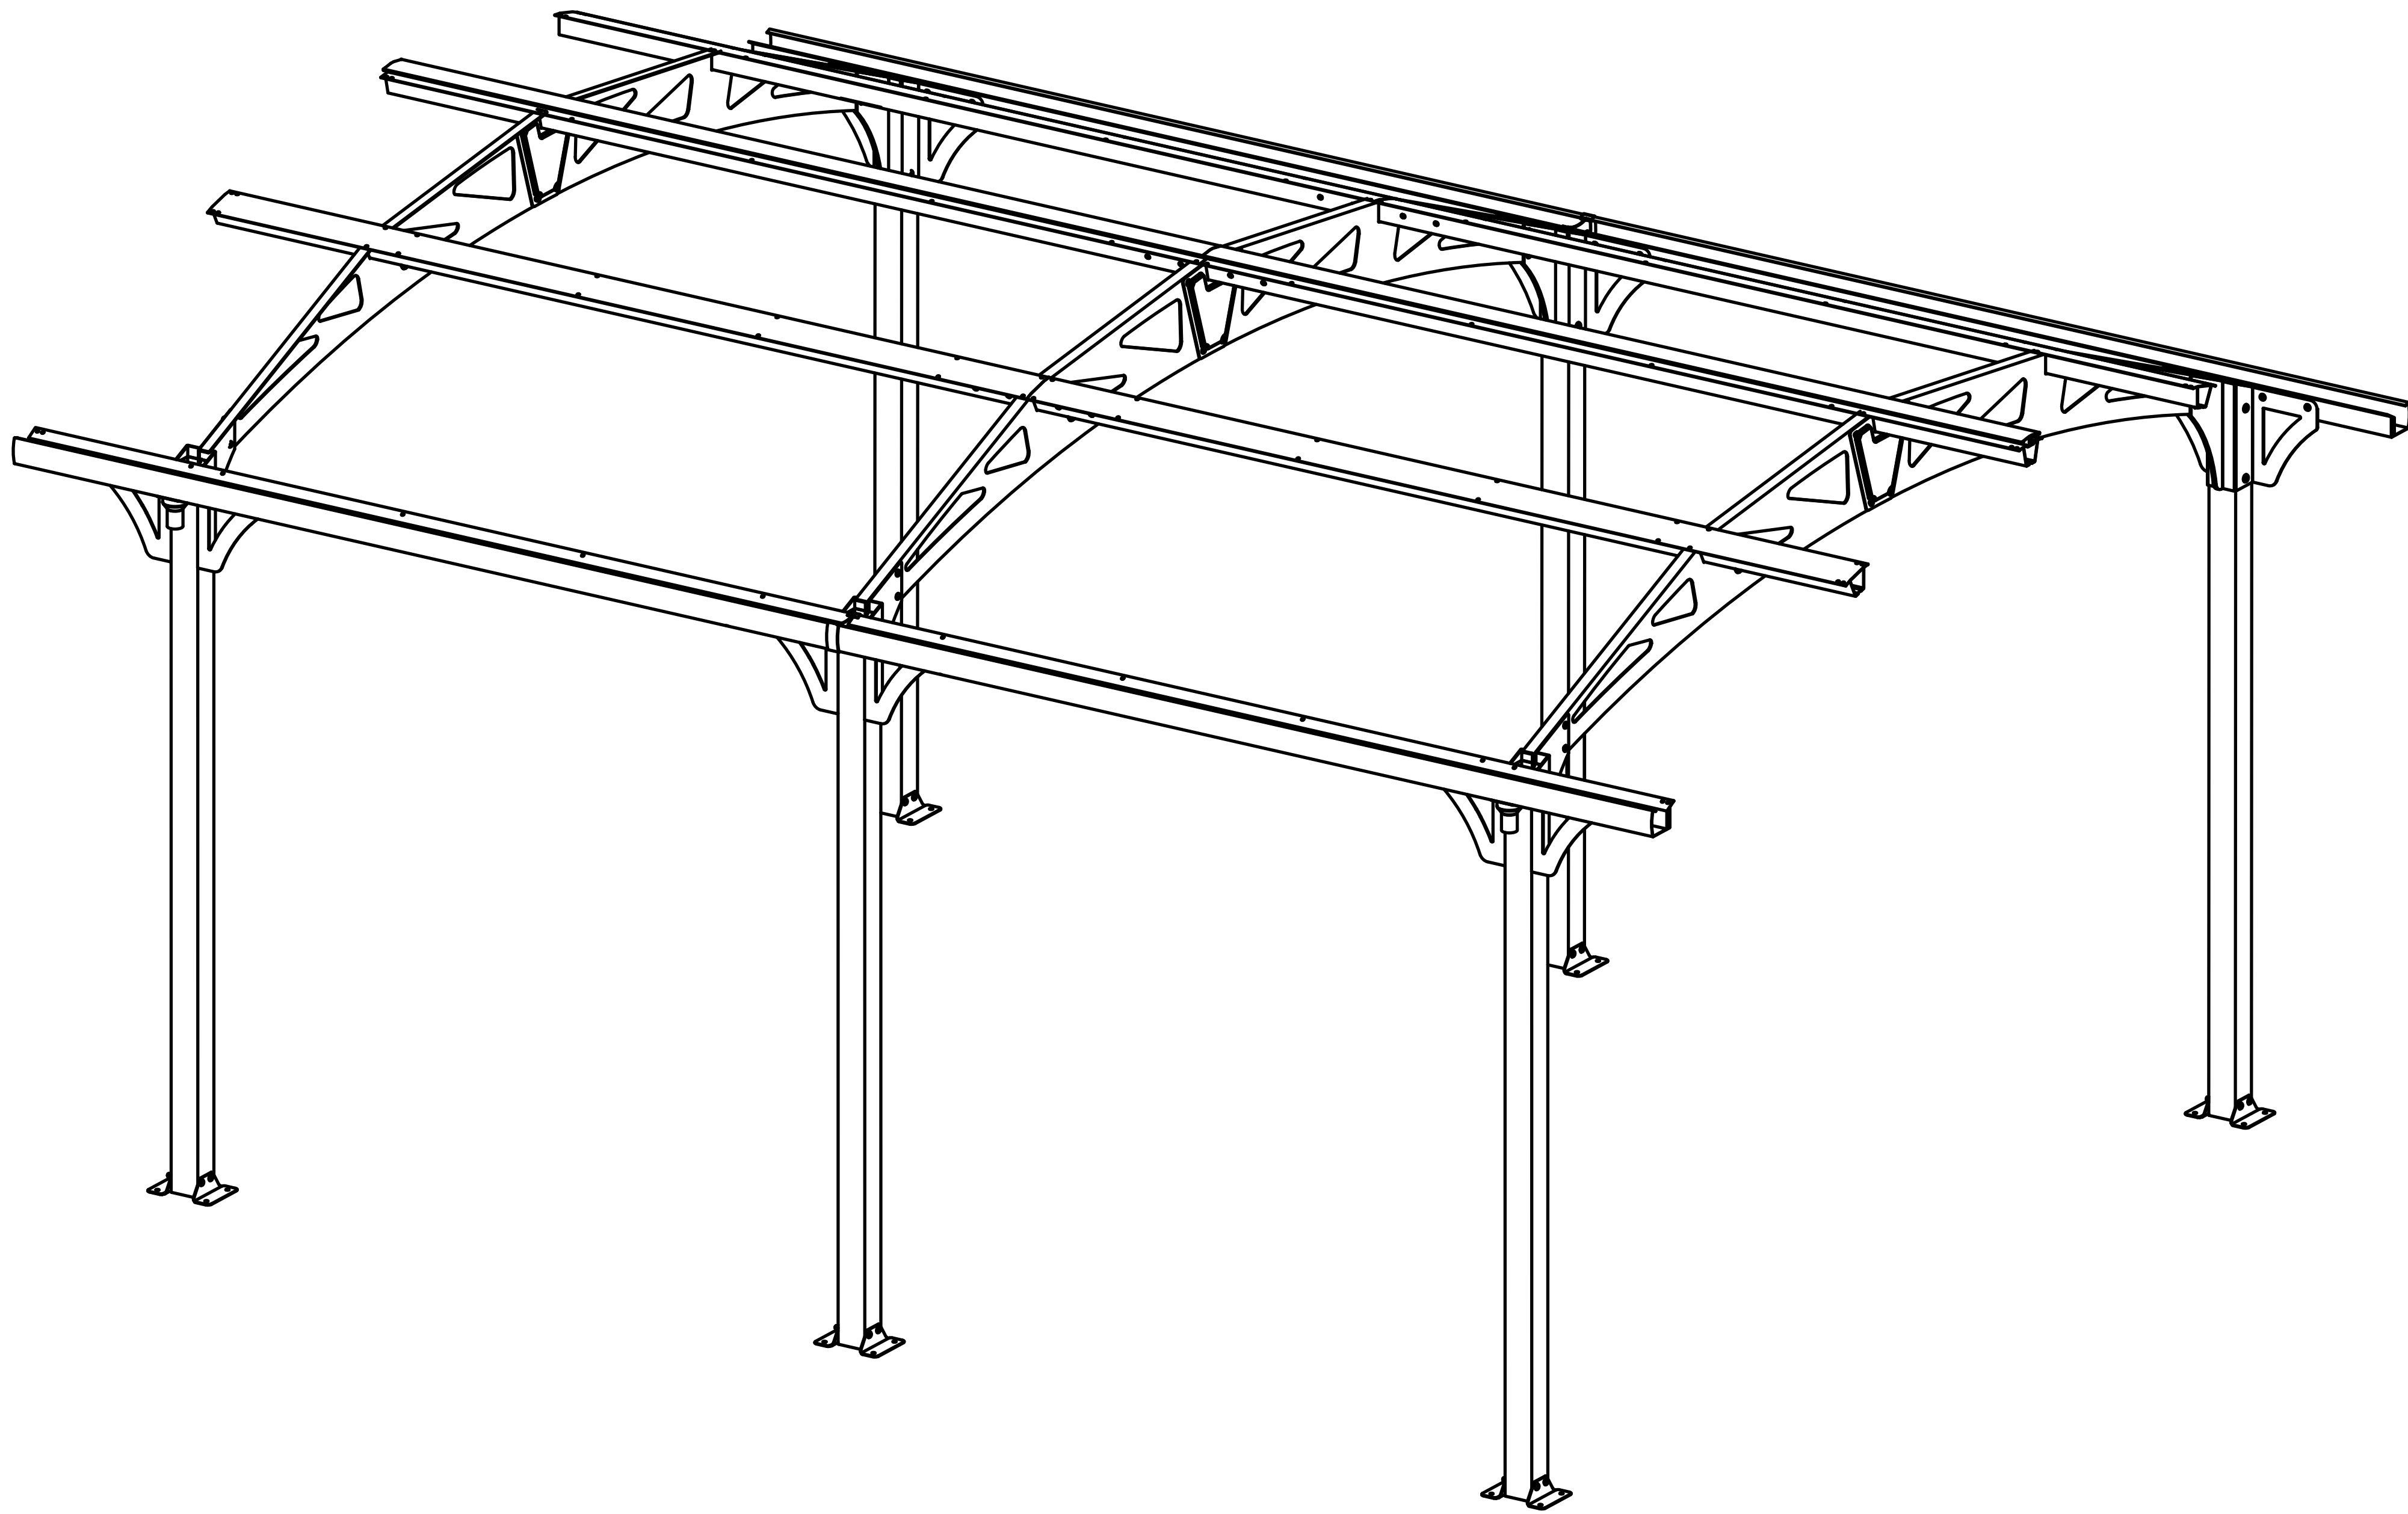






4mm

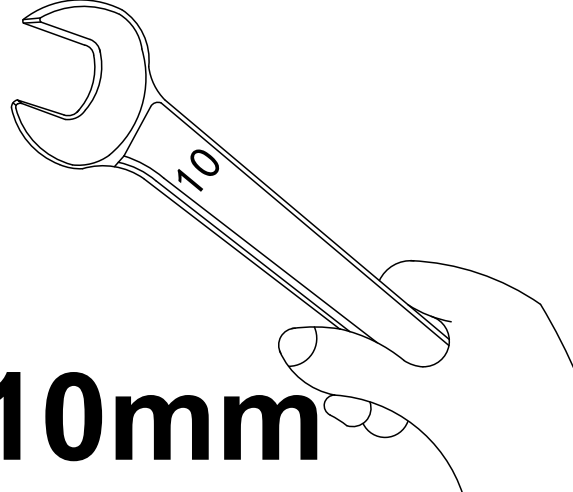

10mm

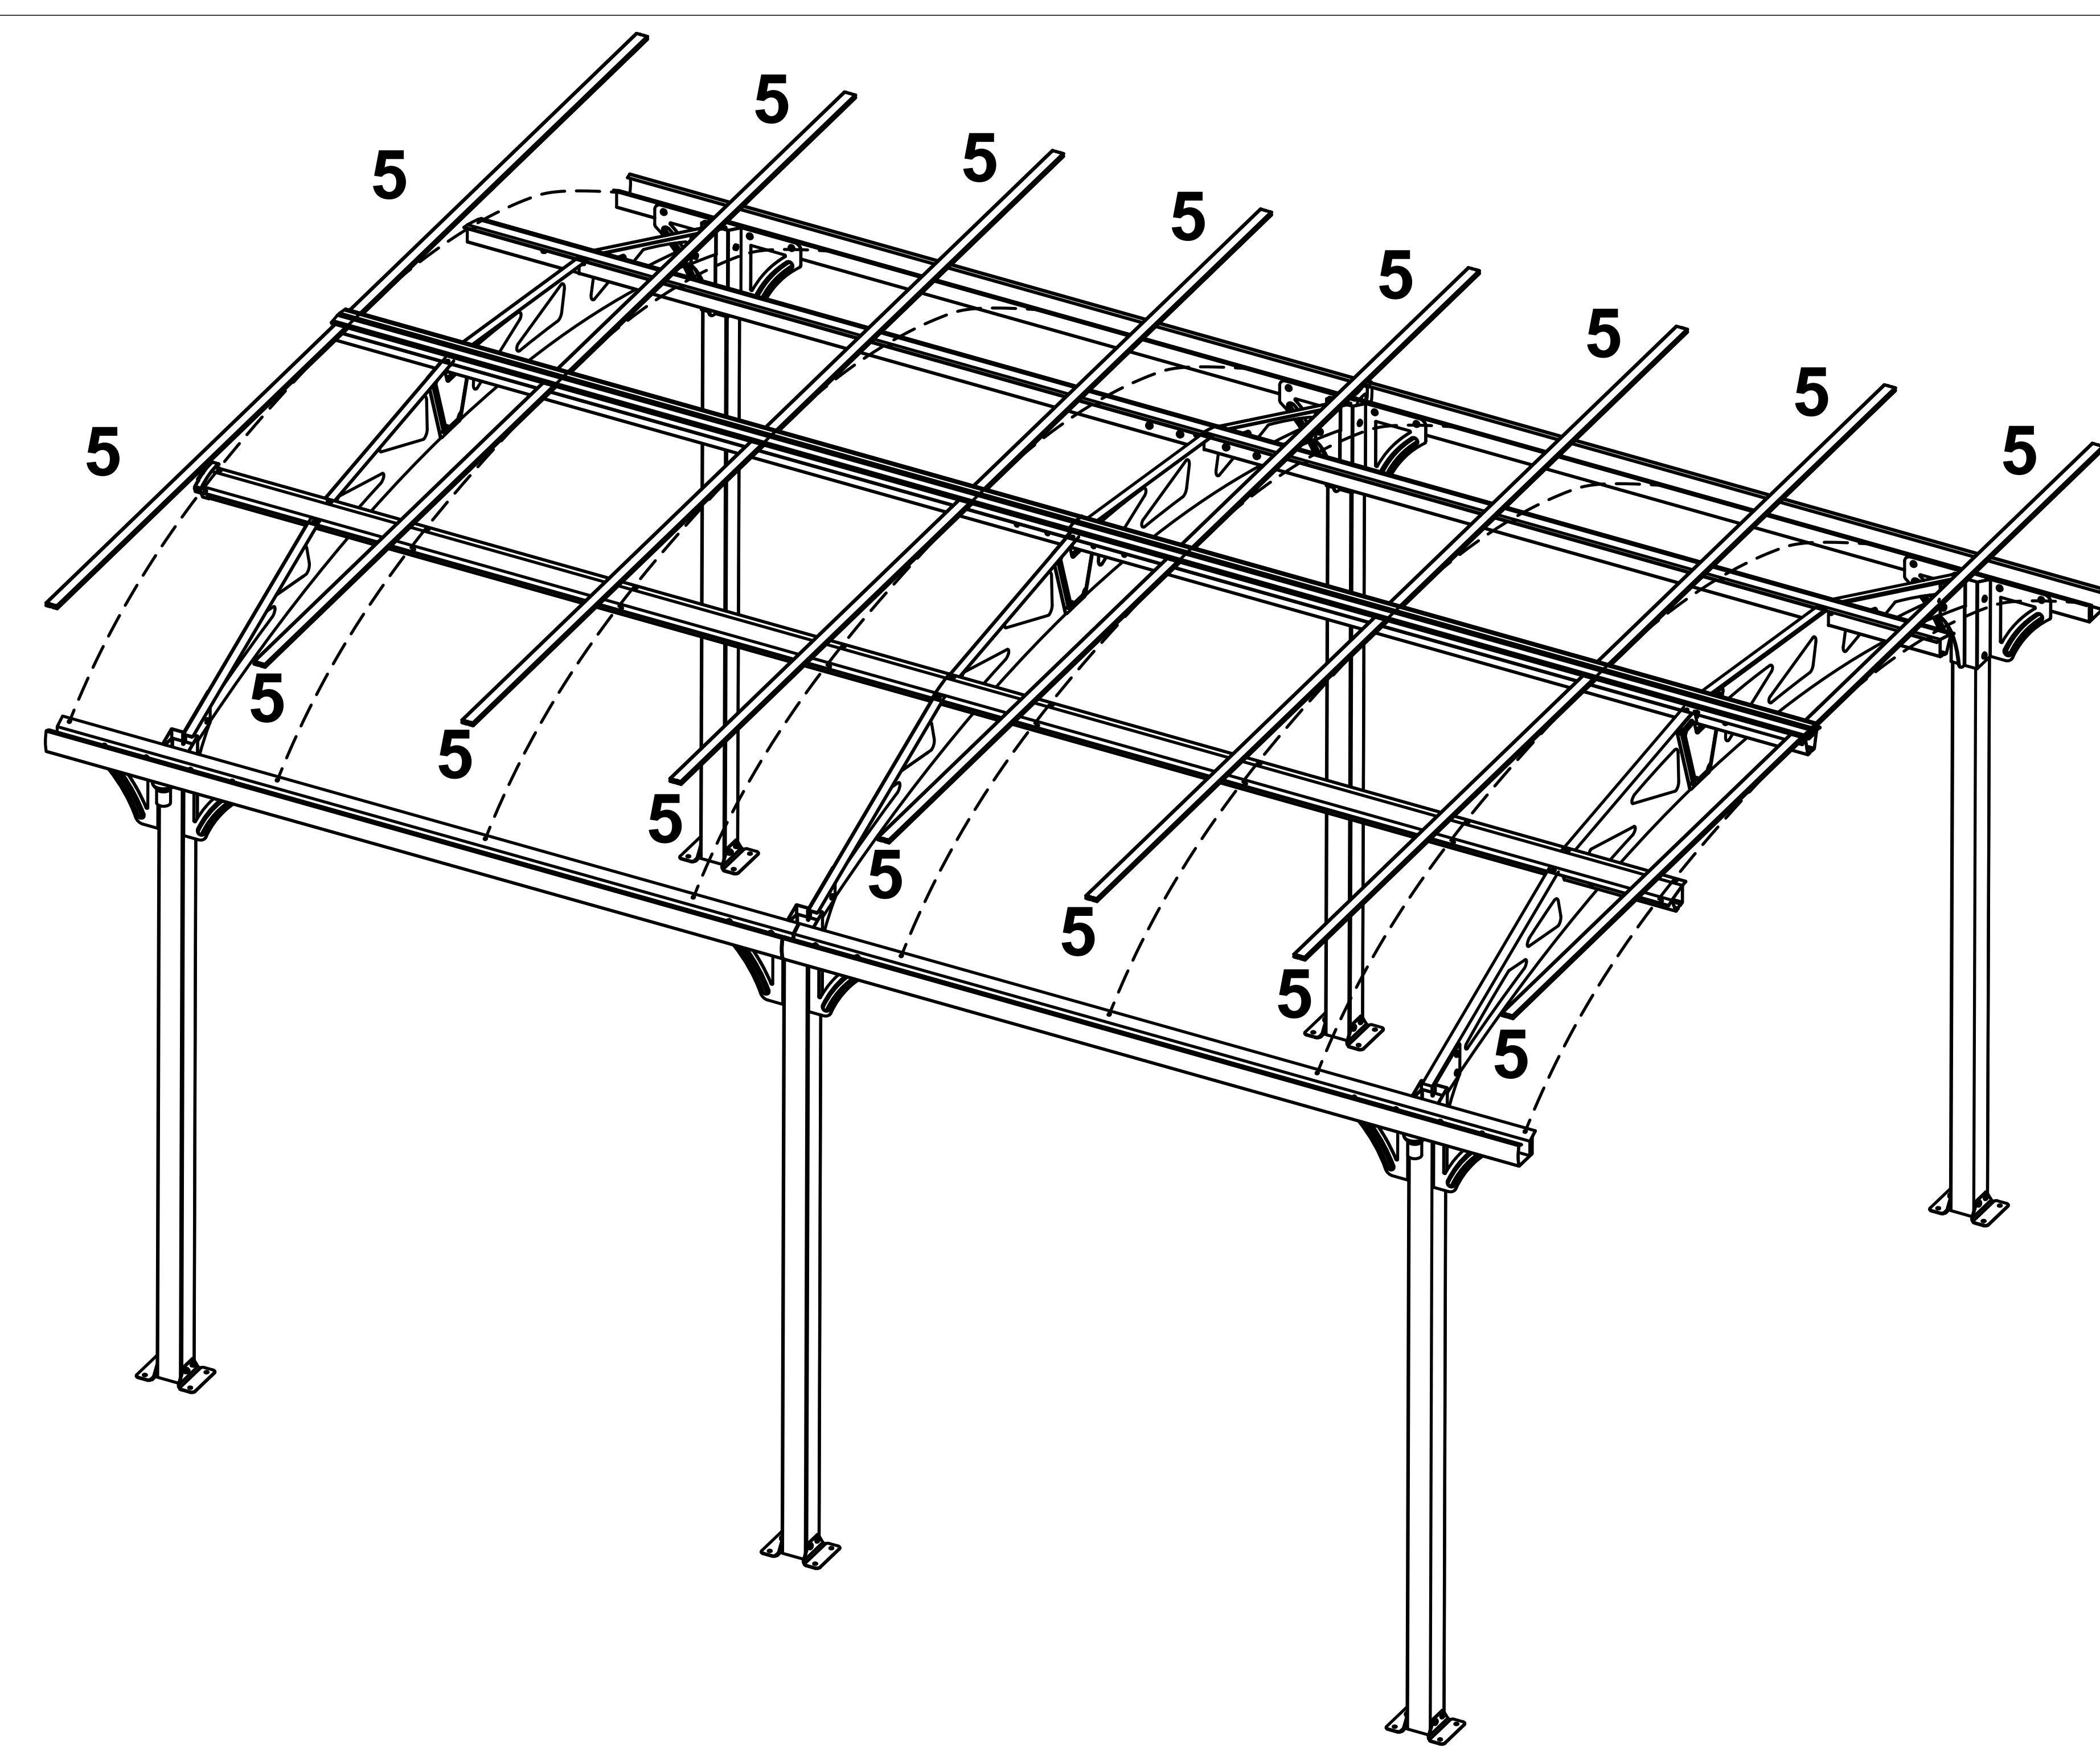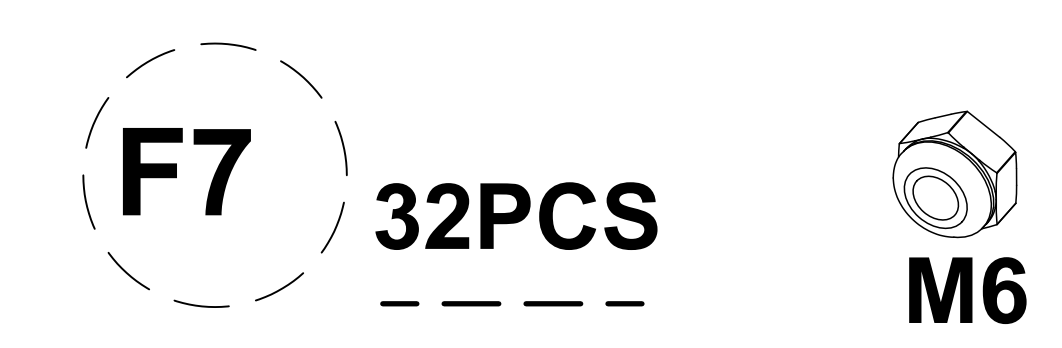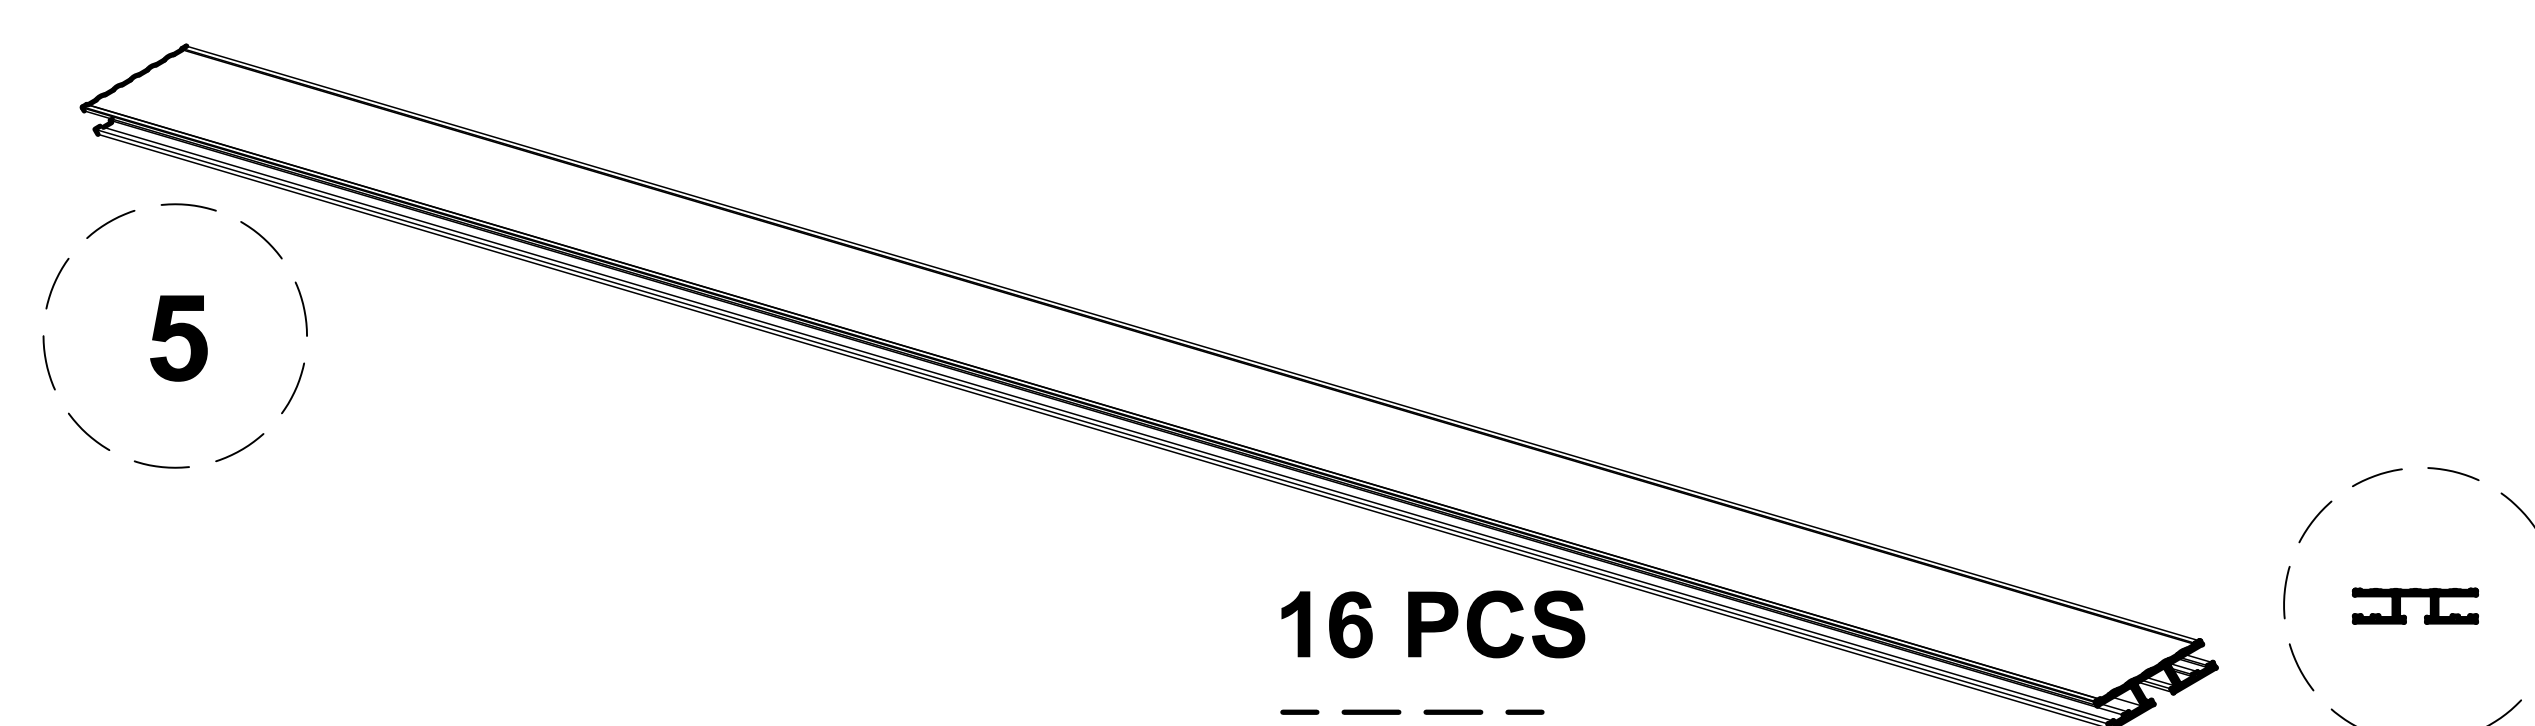

Note: Install the middle two screws first, and do not lock the screws first, then assembling the PC board P1 in the next step.

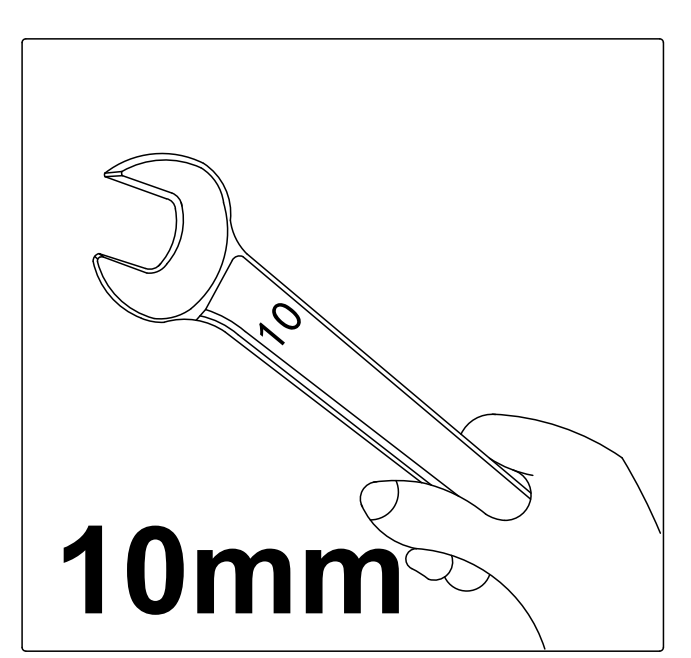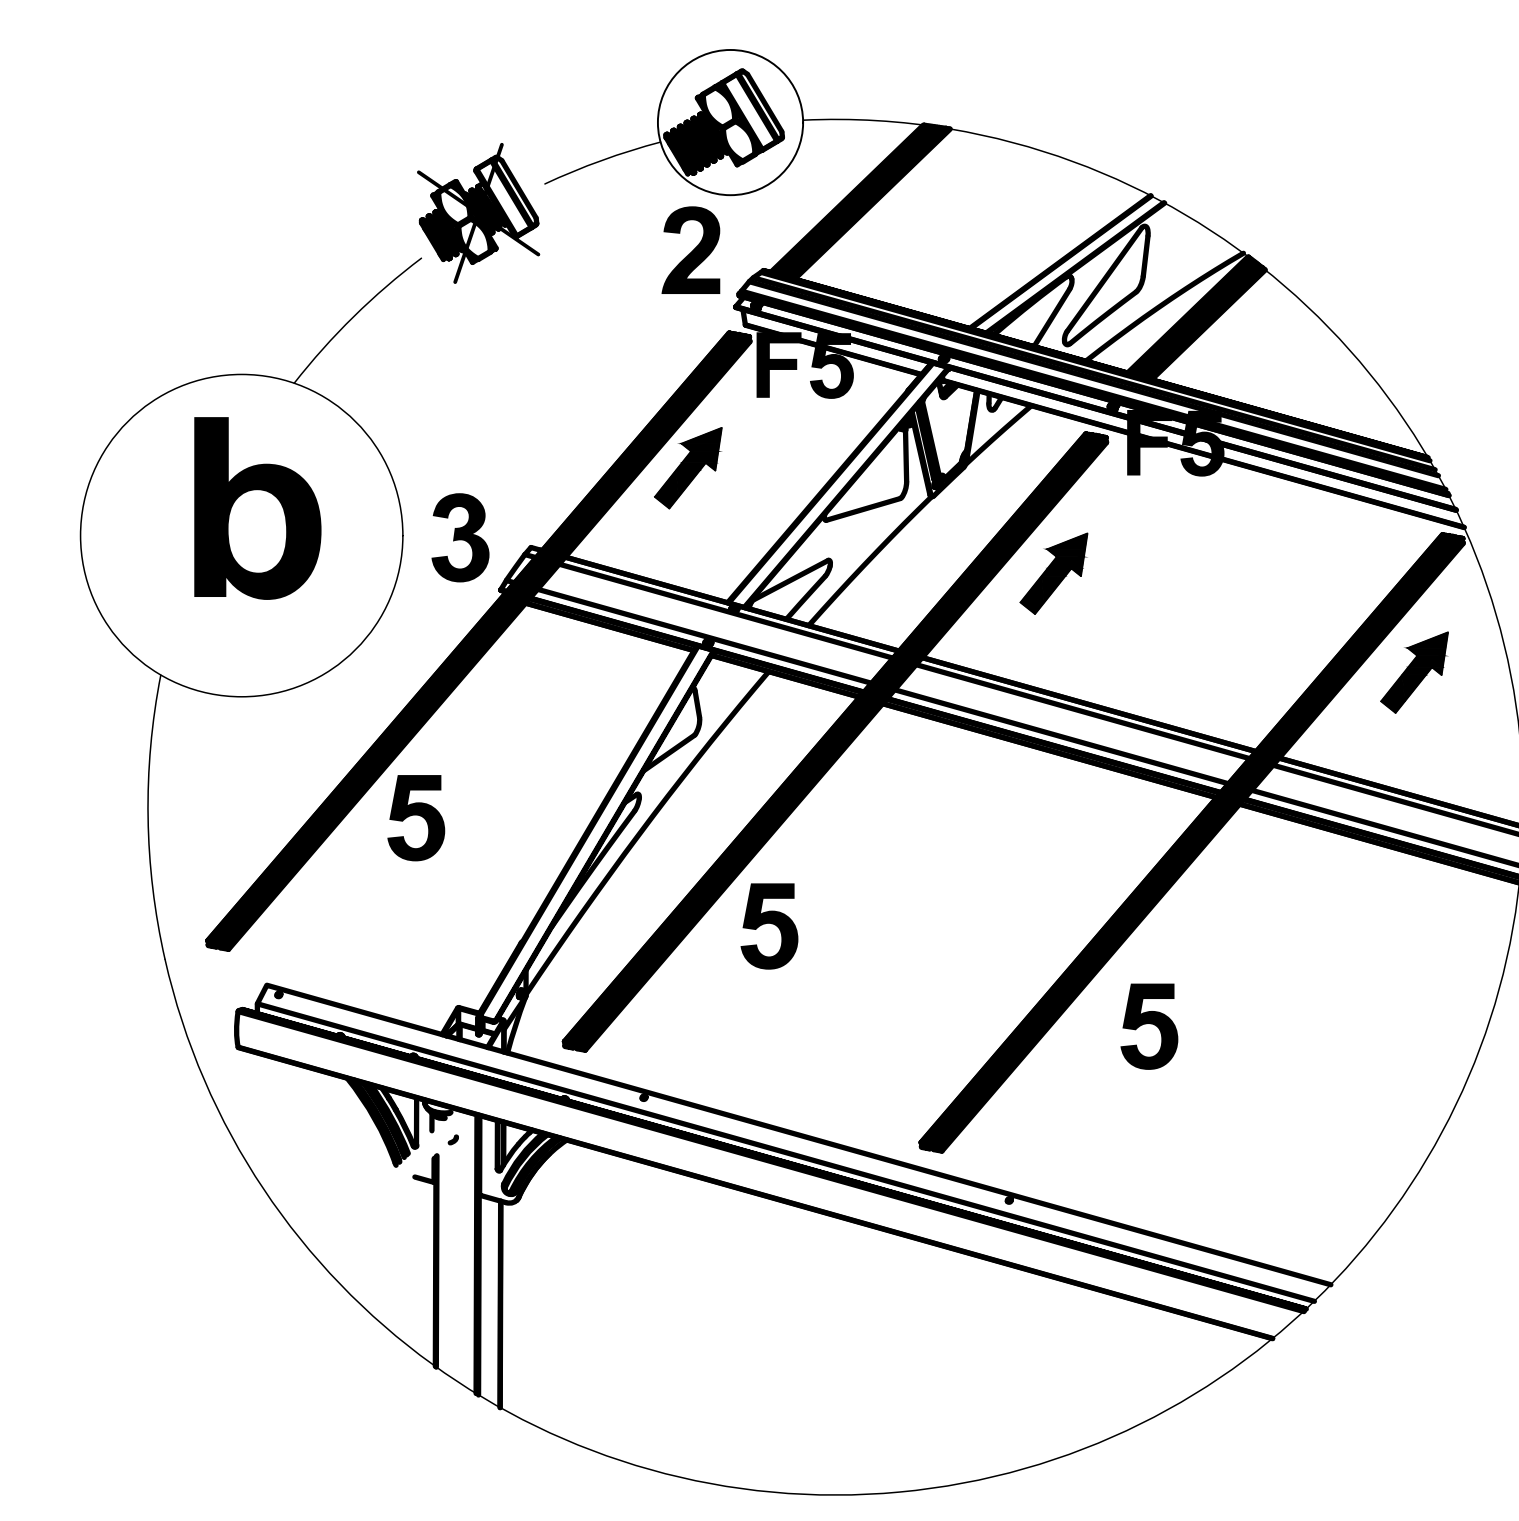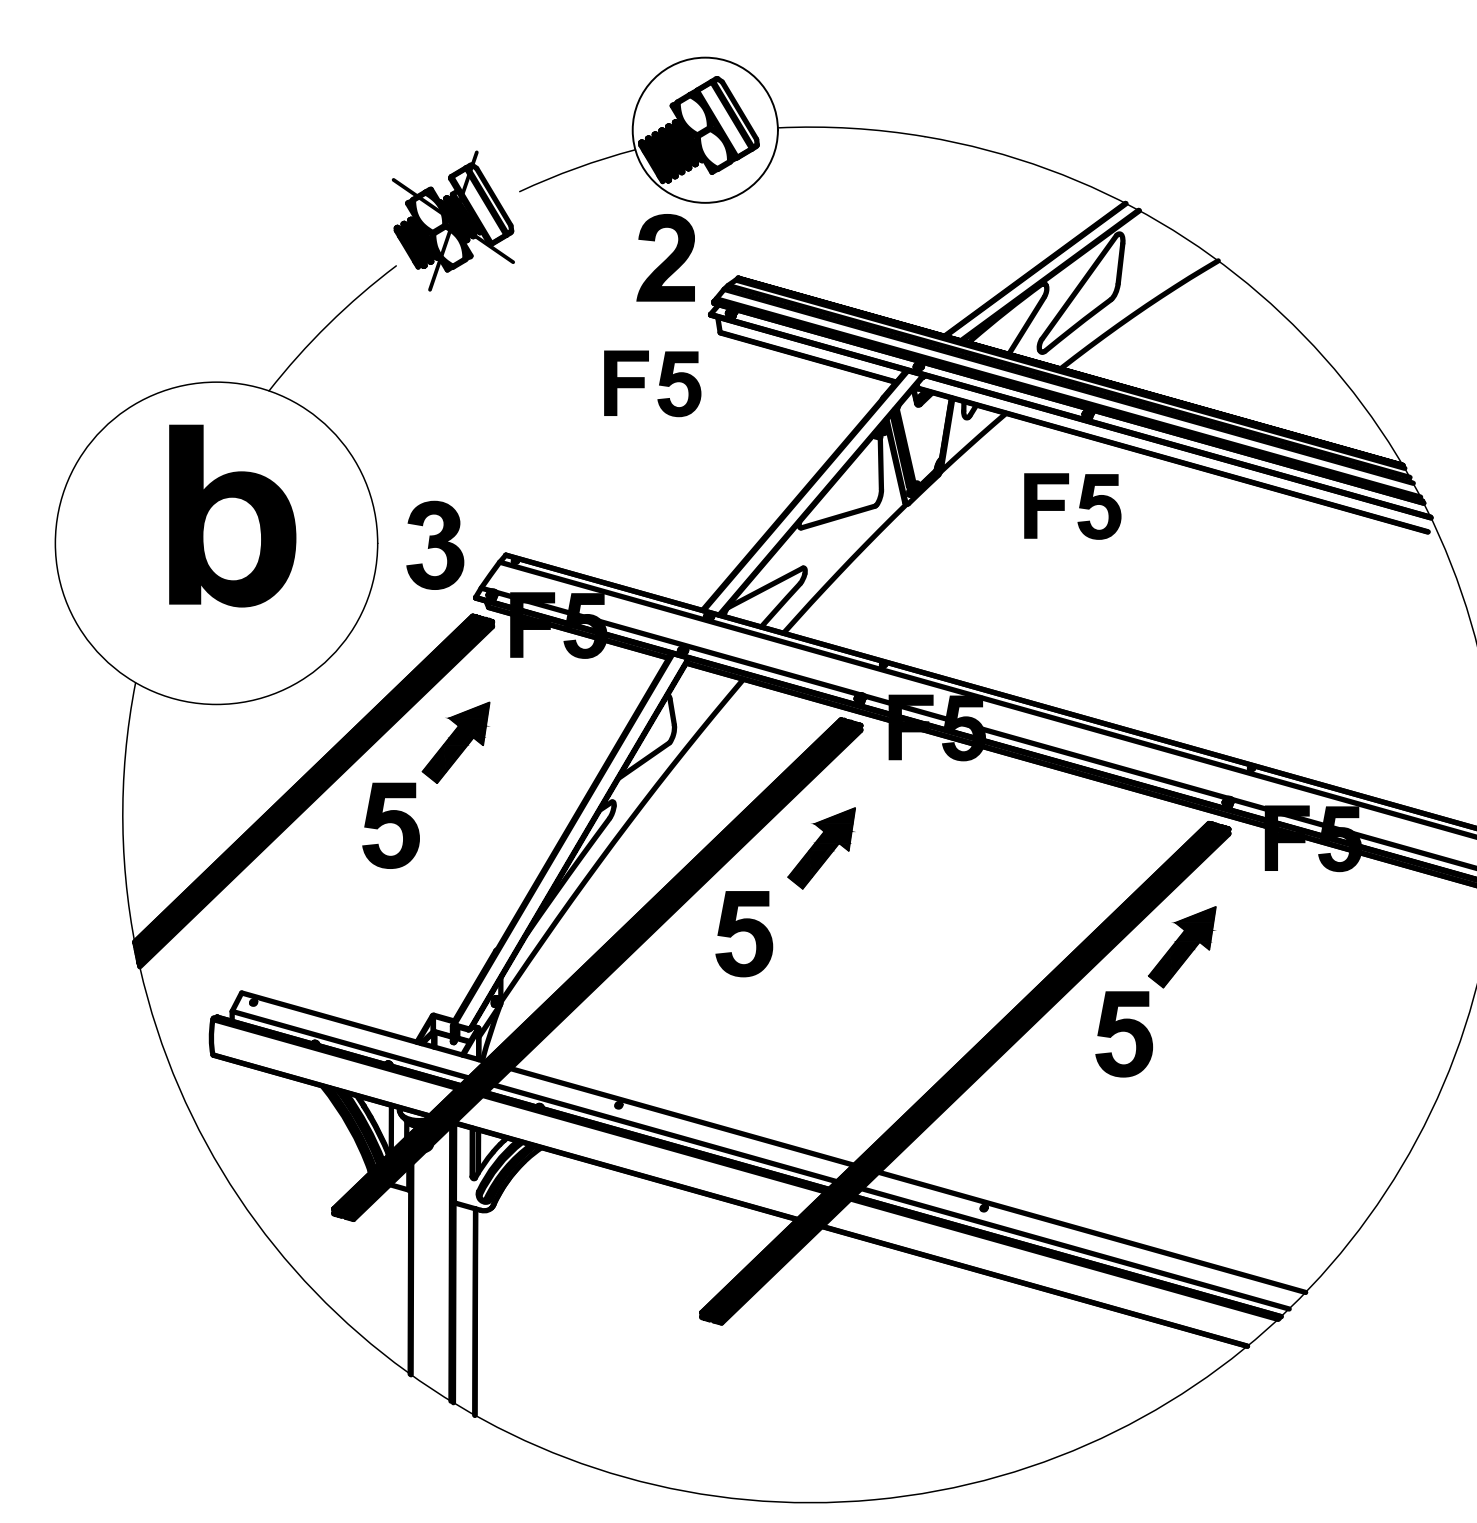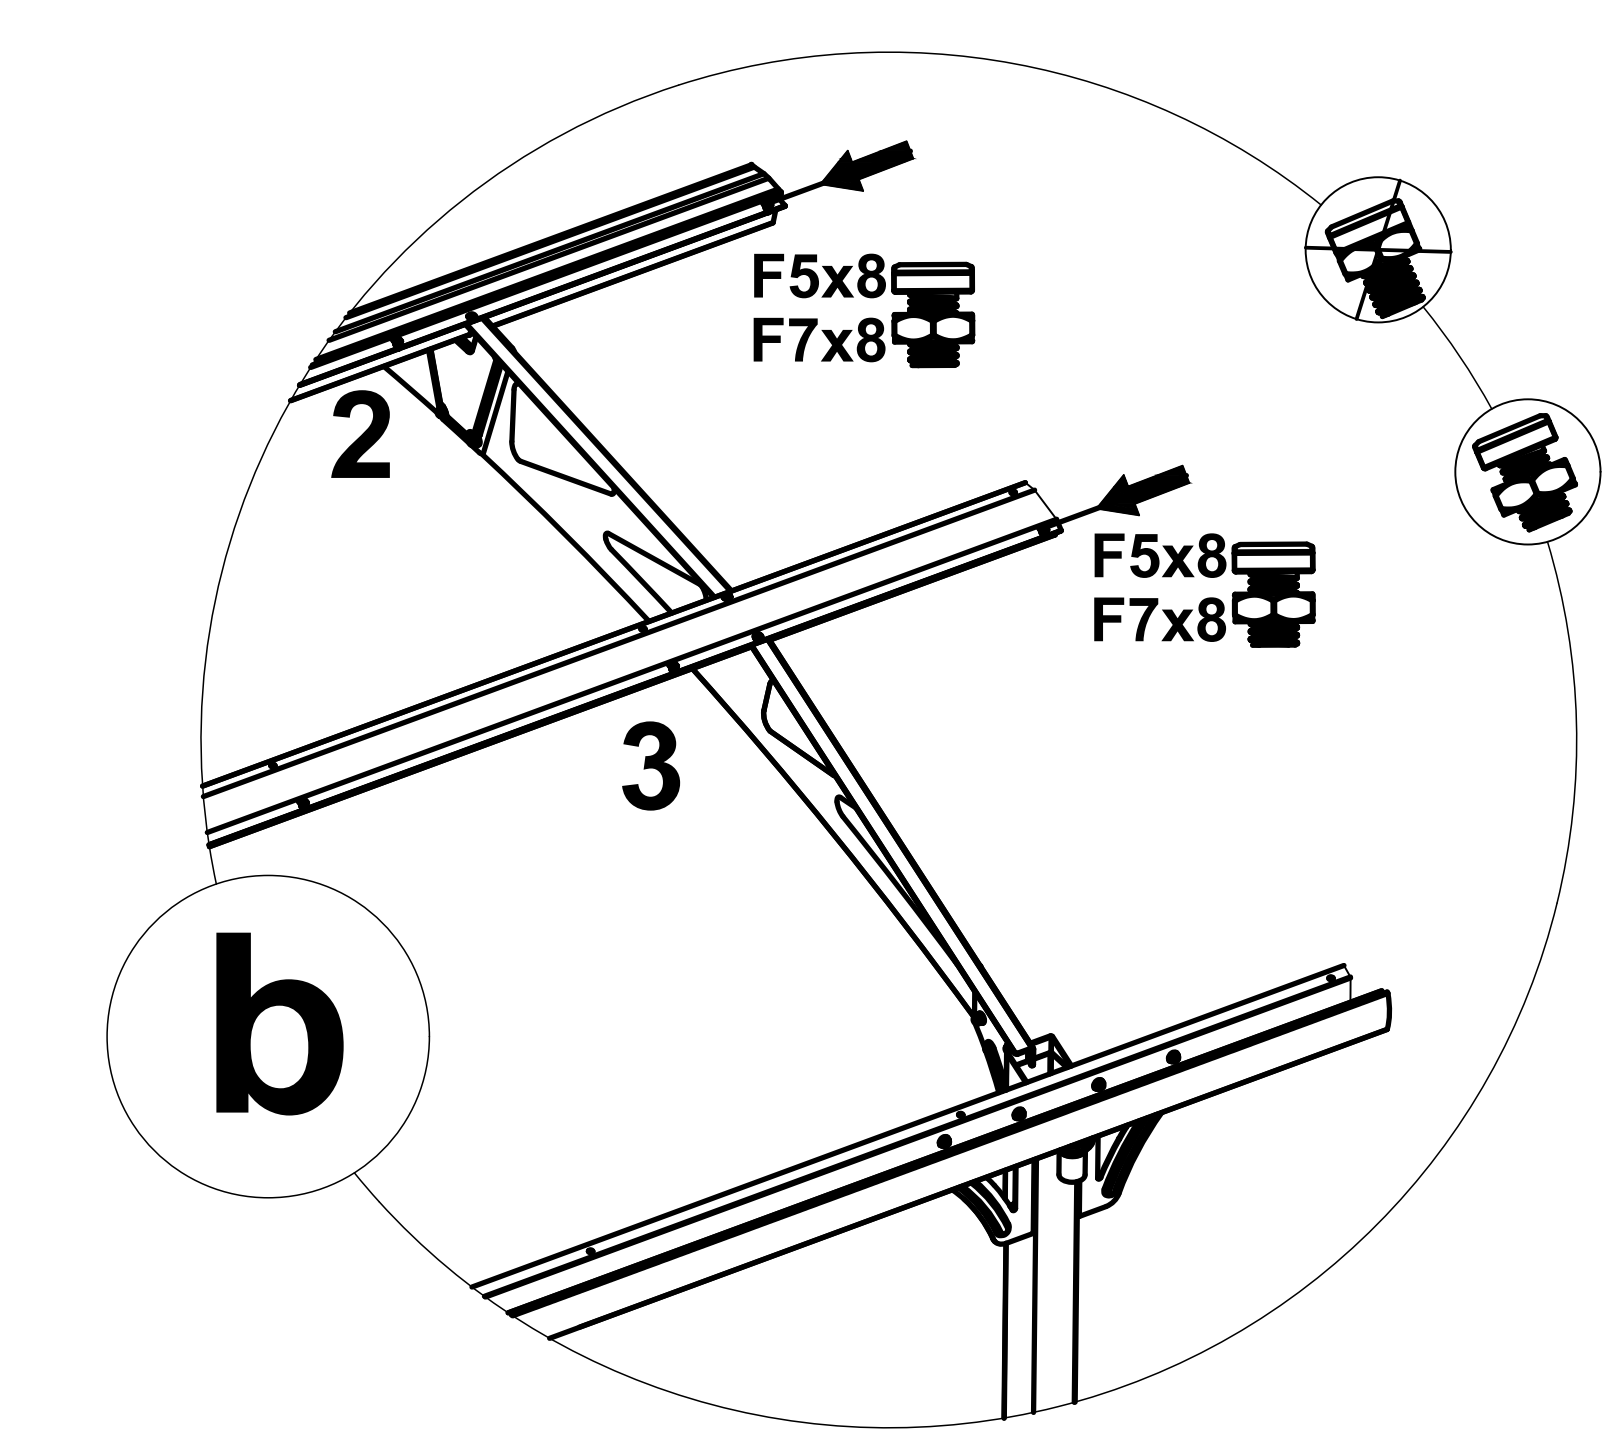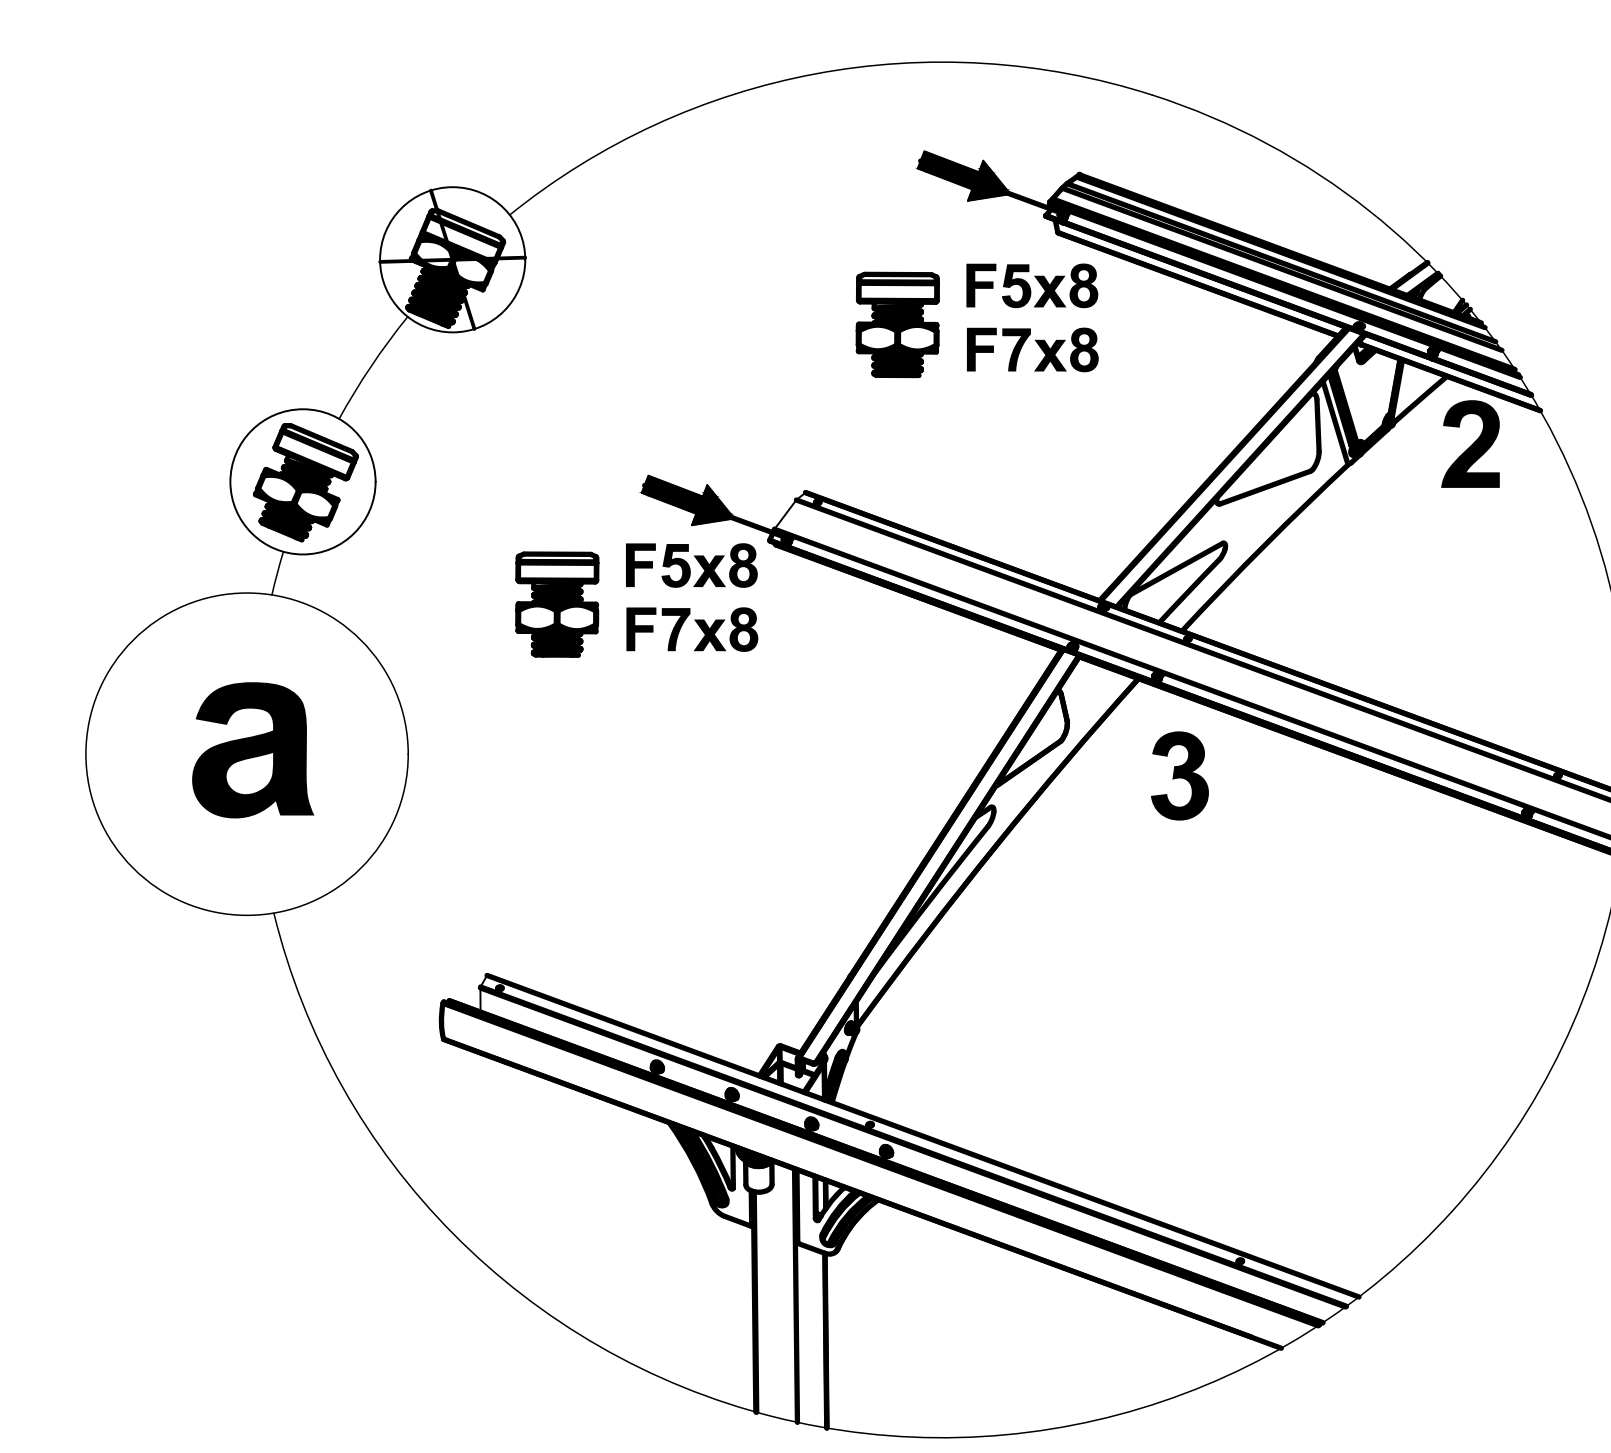


11



P1



14 PCS

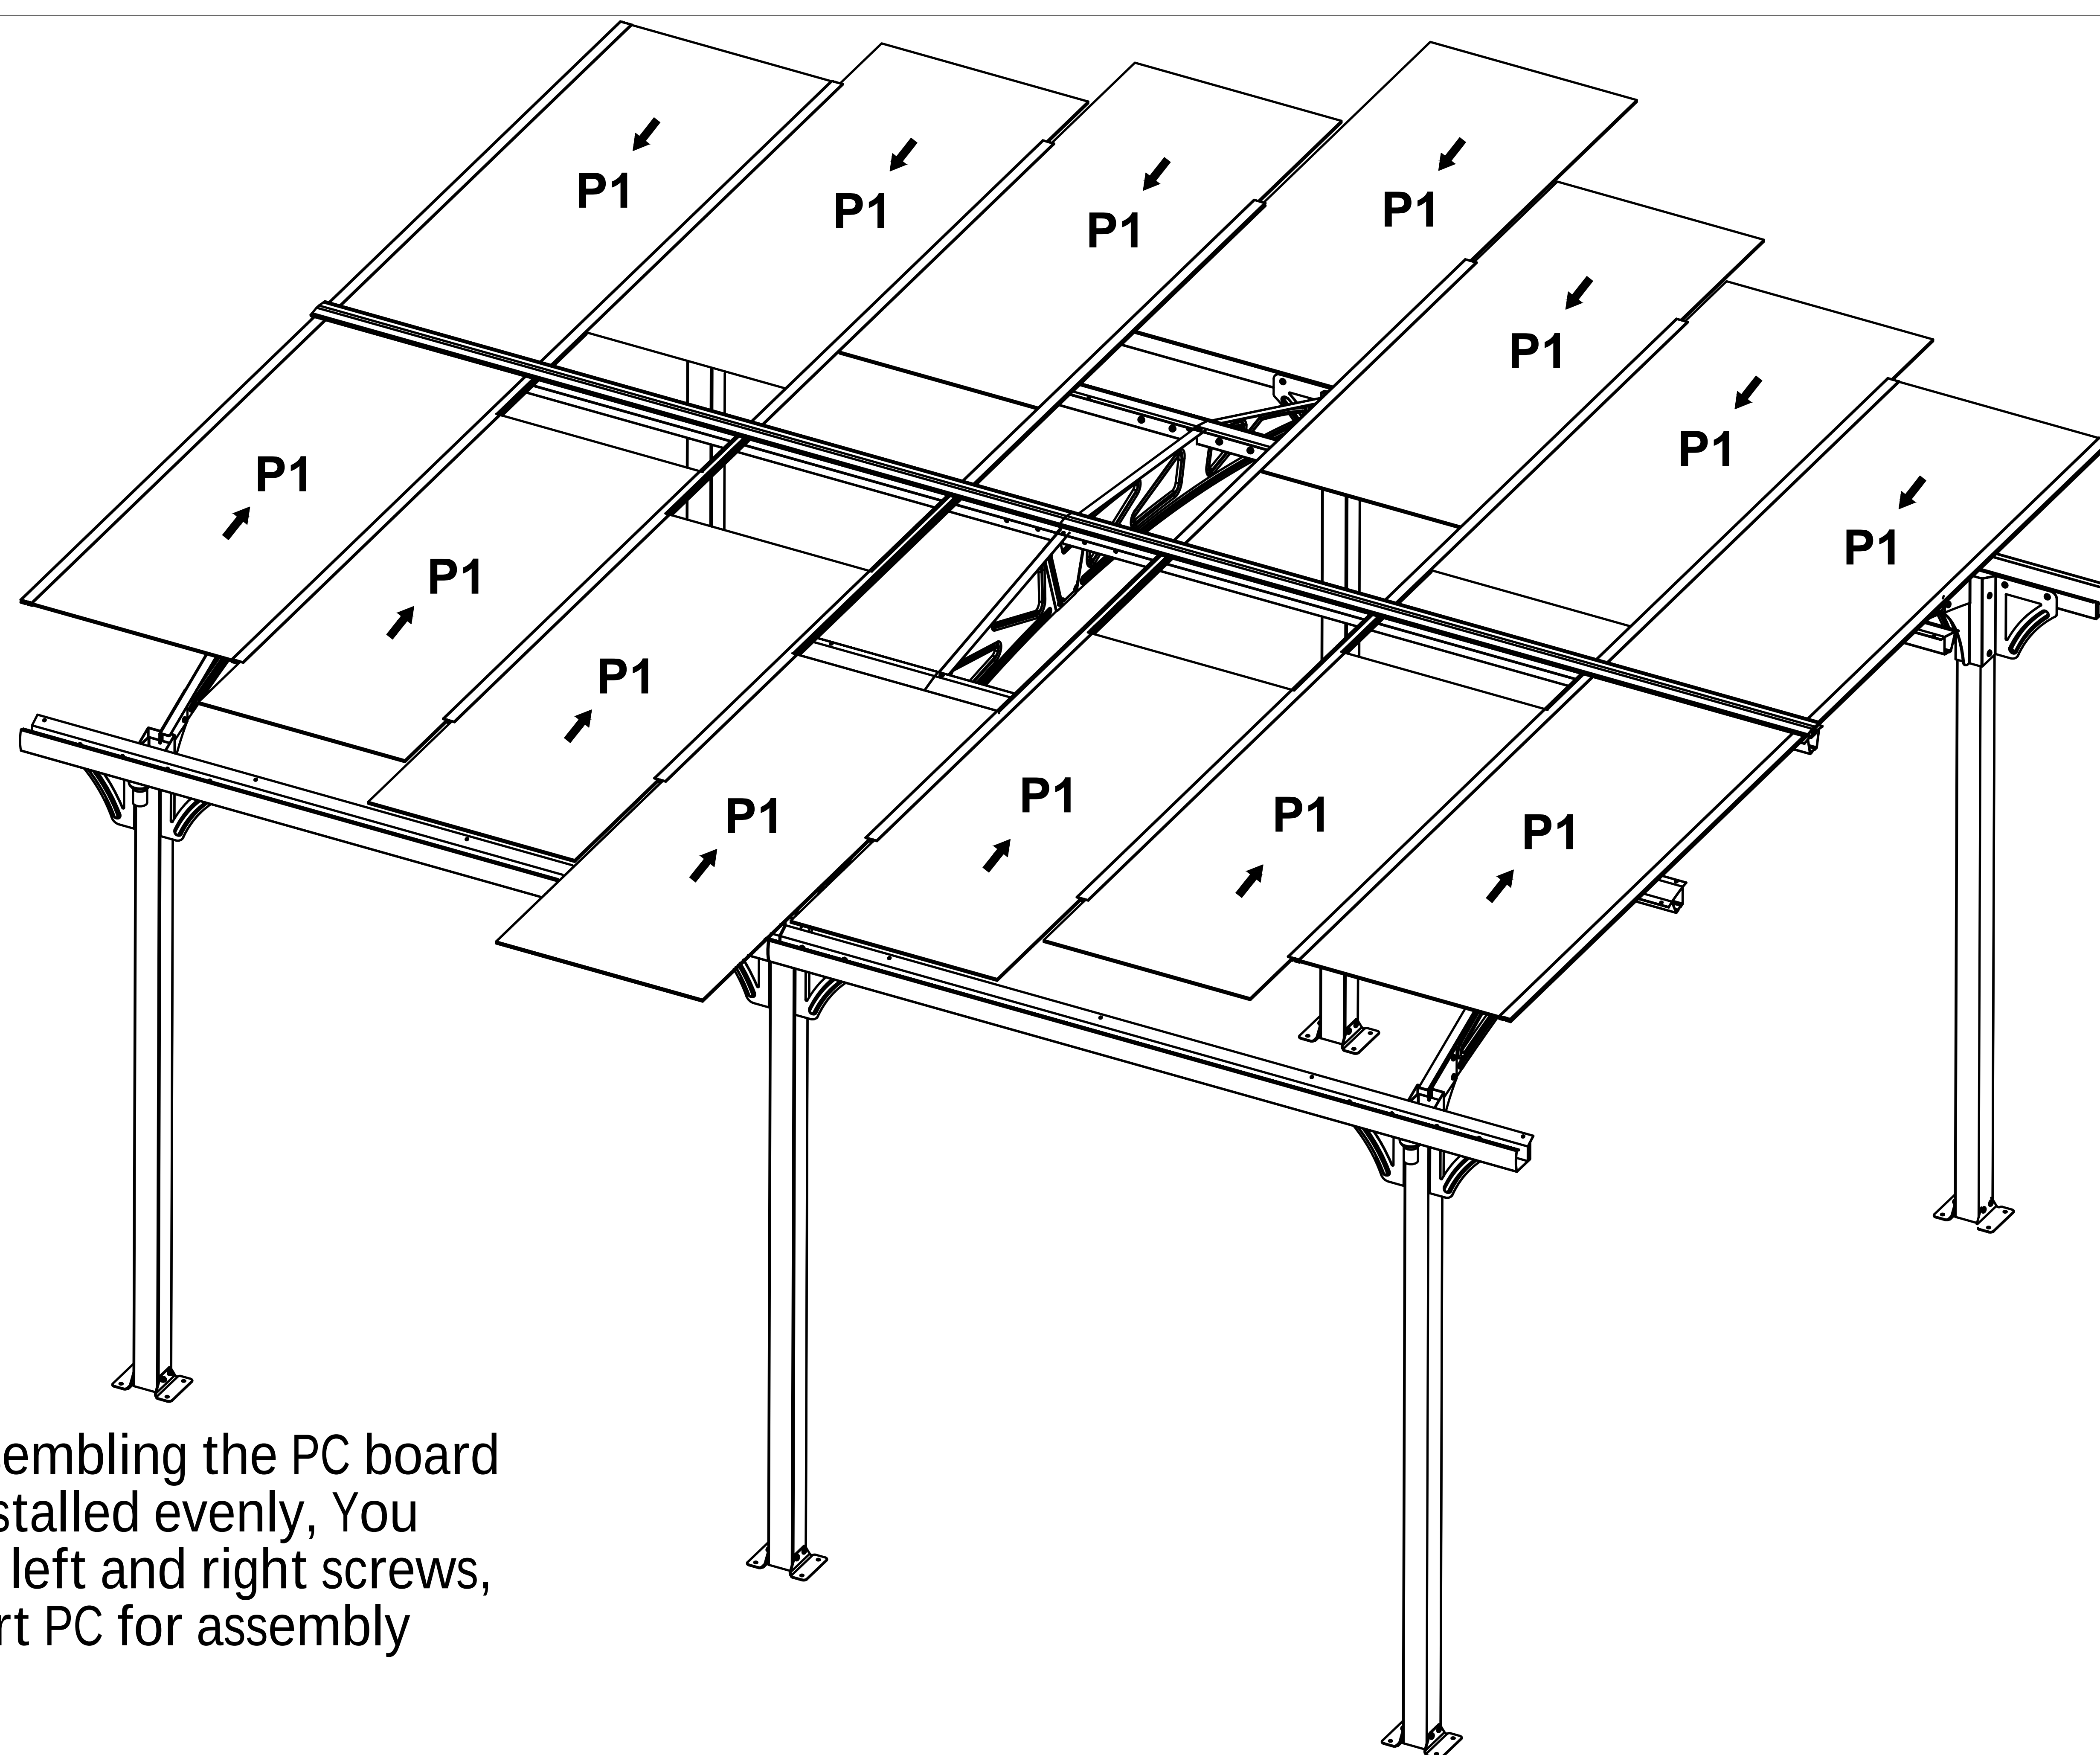

Note: When assembling the PC board P1, If it is not installed evenly, You need to exit the left and right screws, and then reinsert PC for assembly


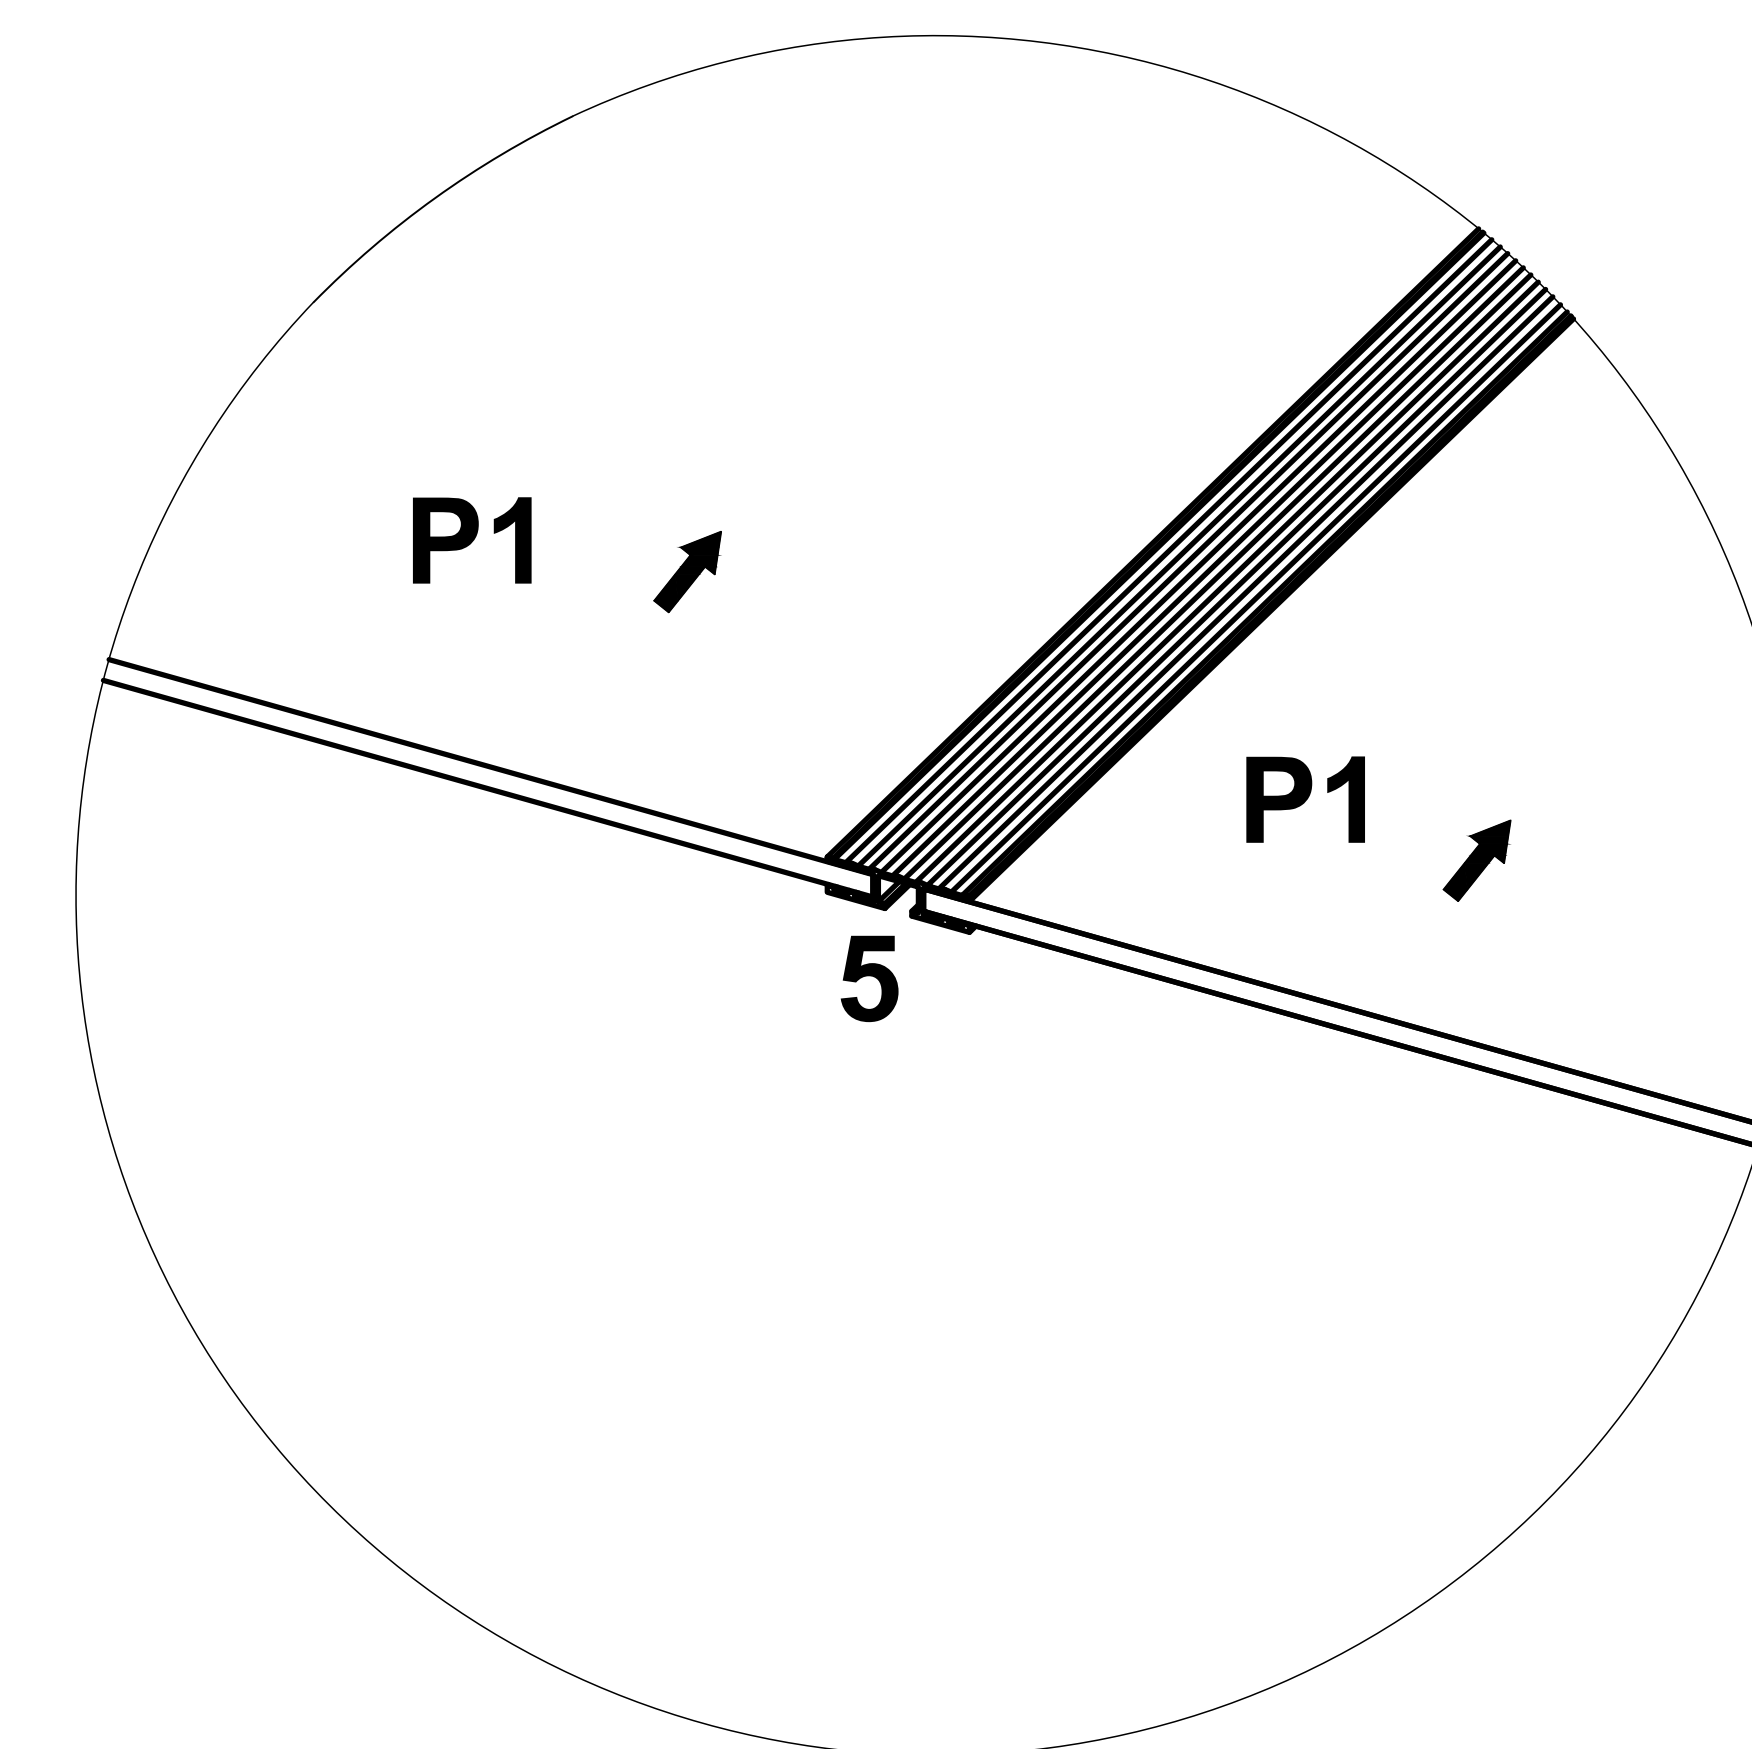
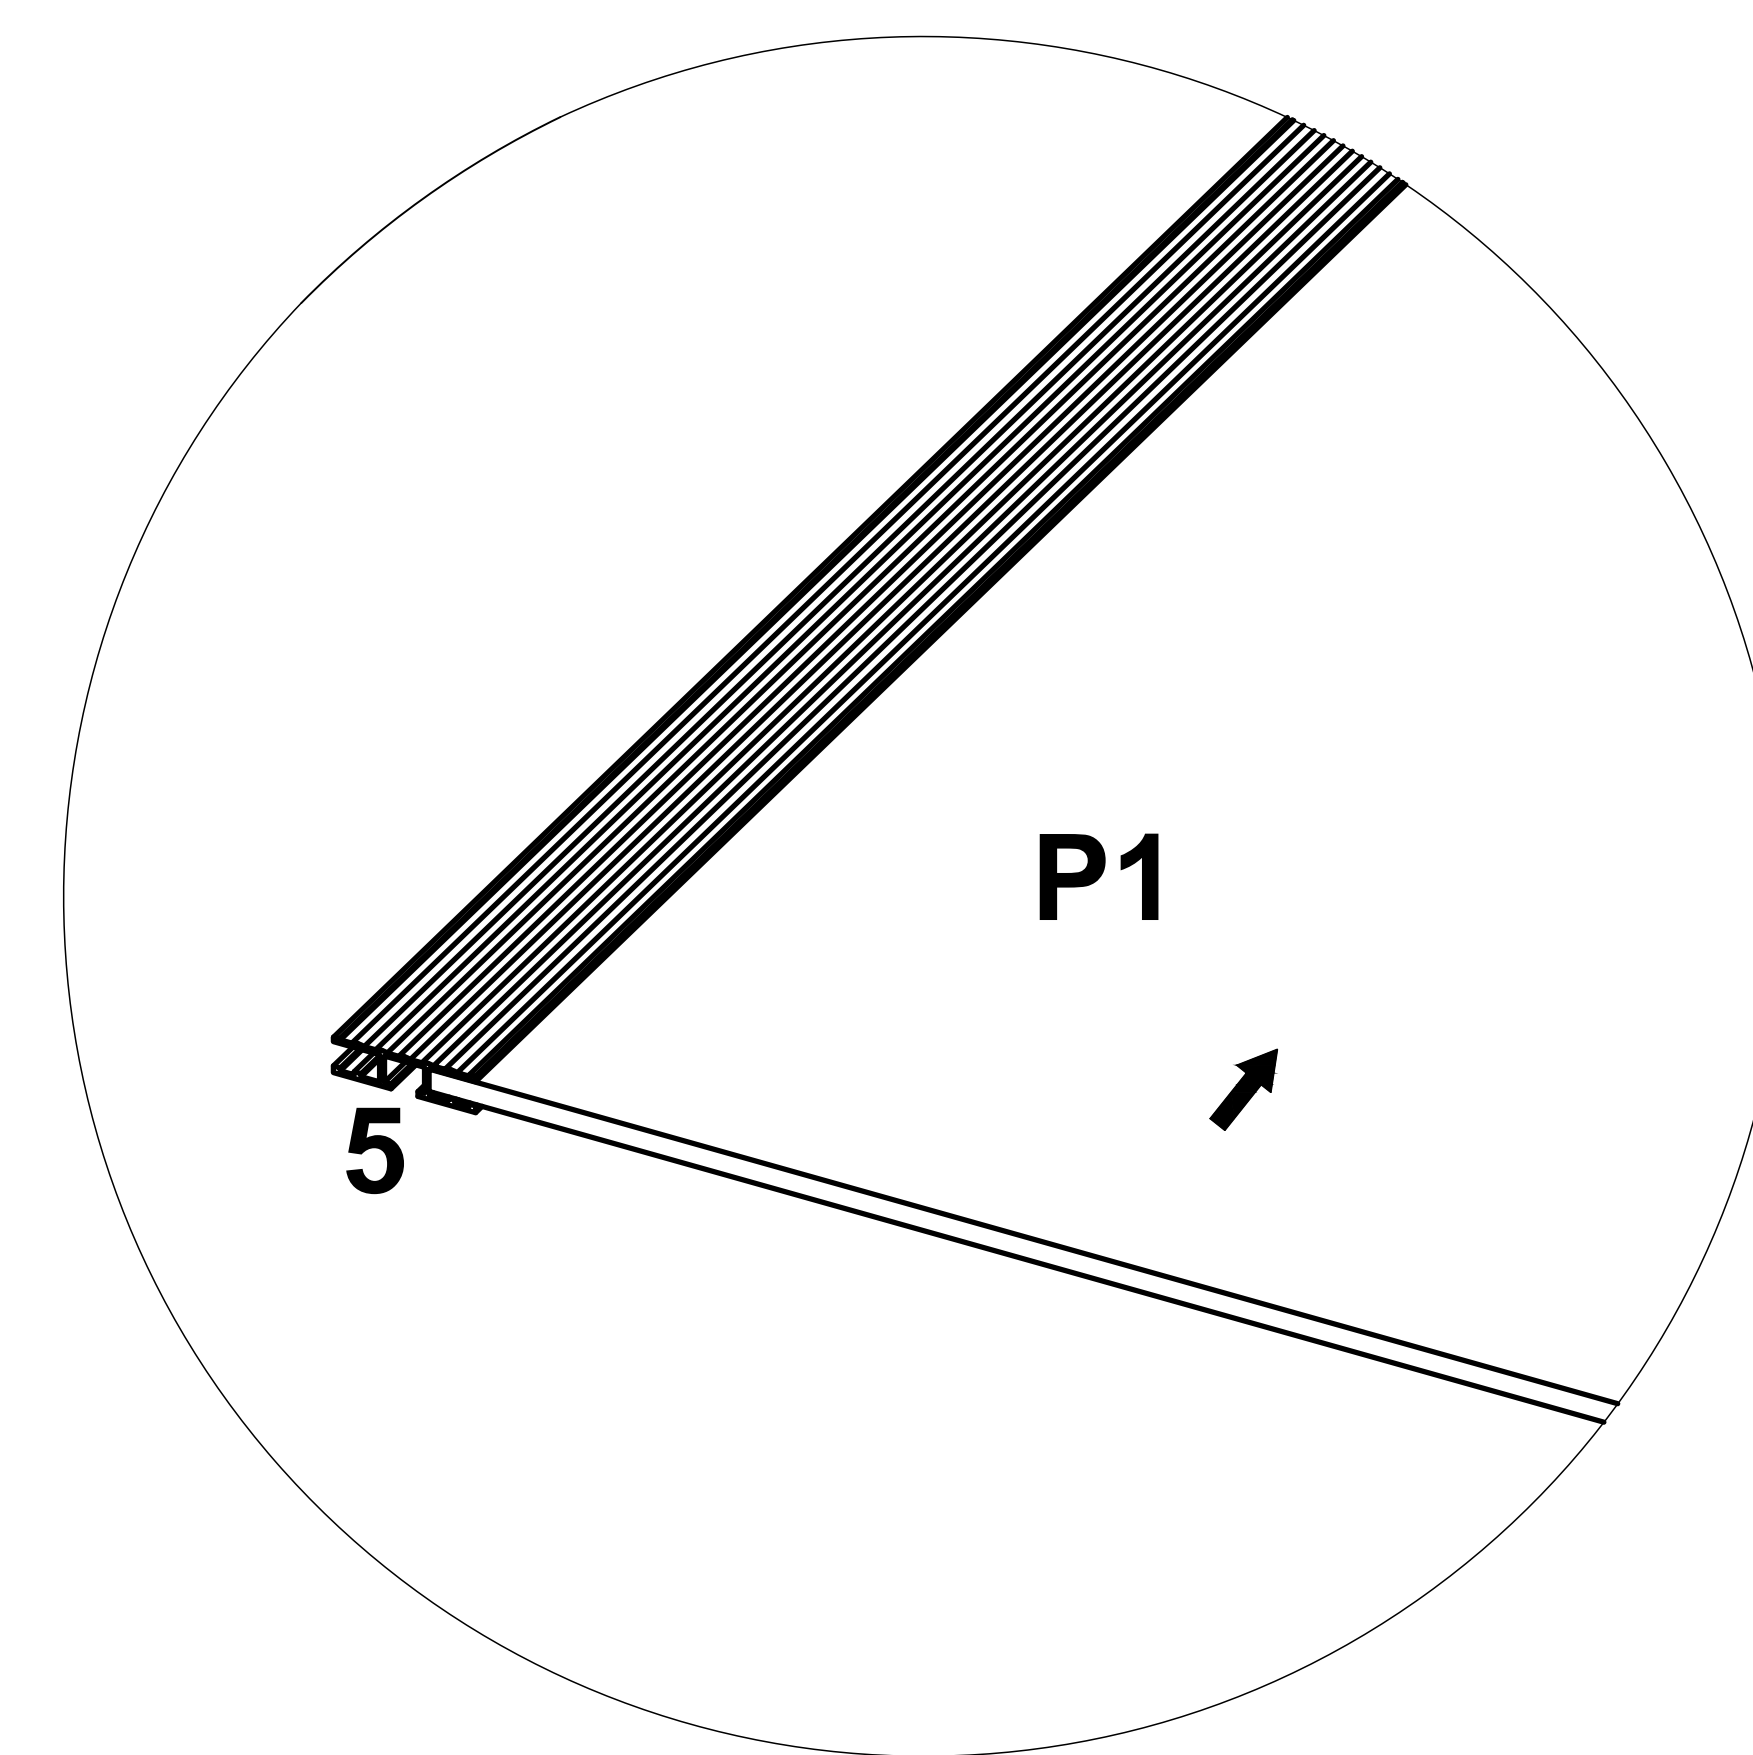


12


F5 16PCS



F7 16PCS

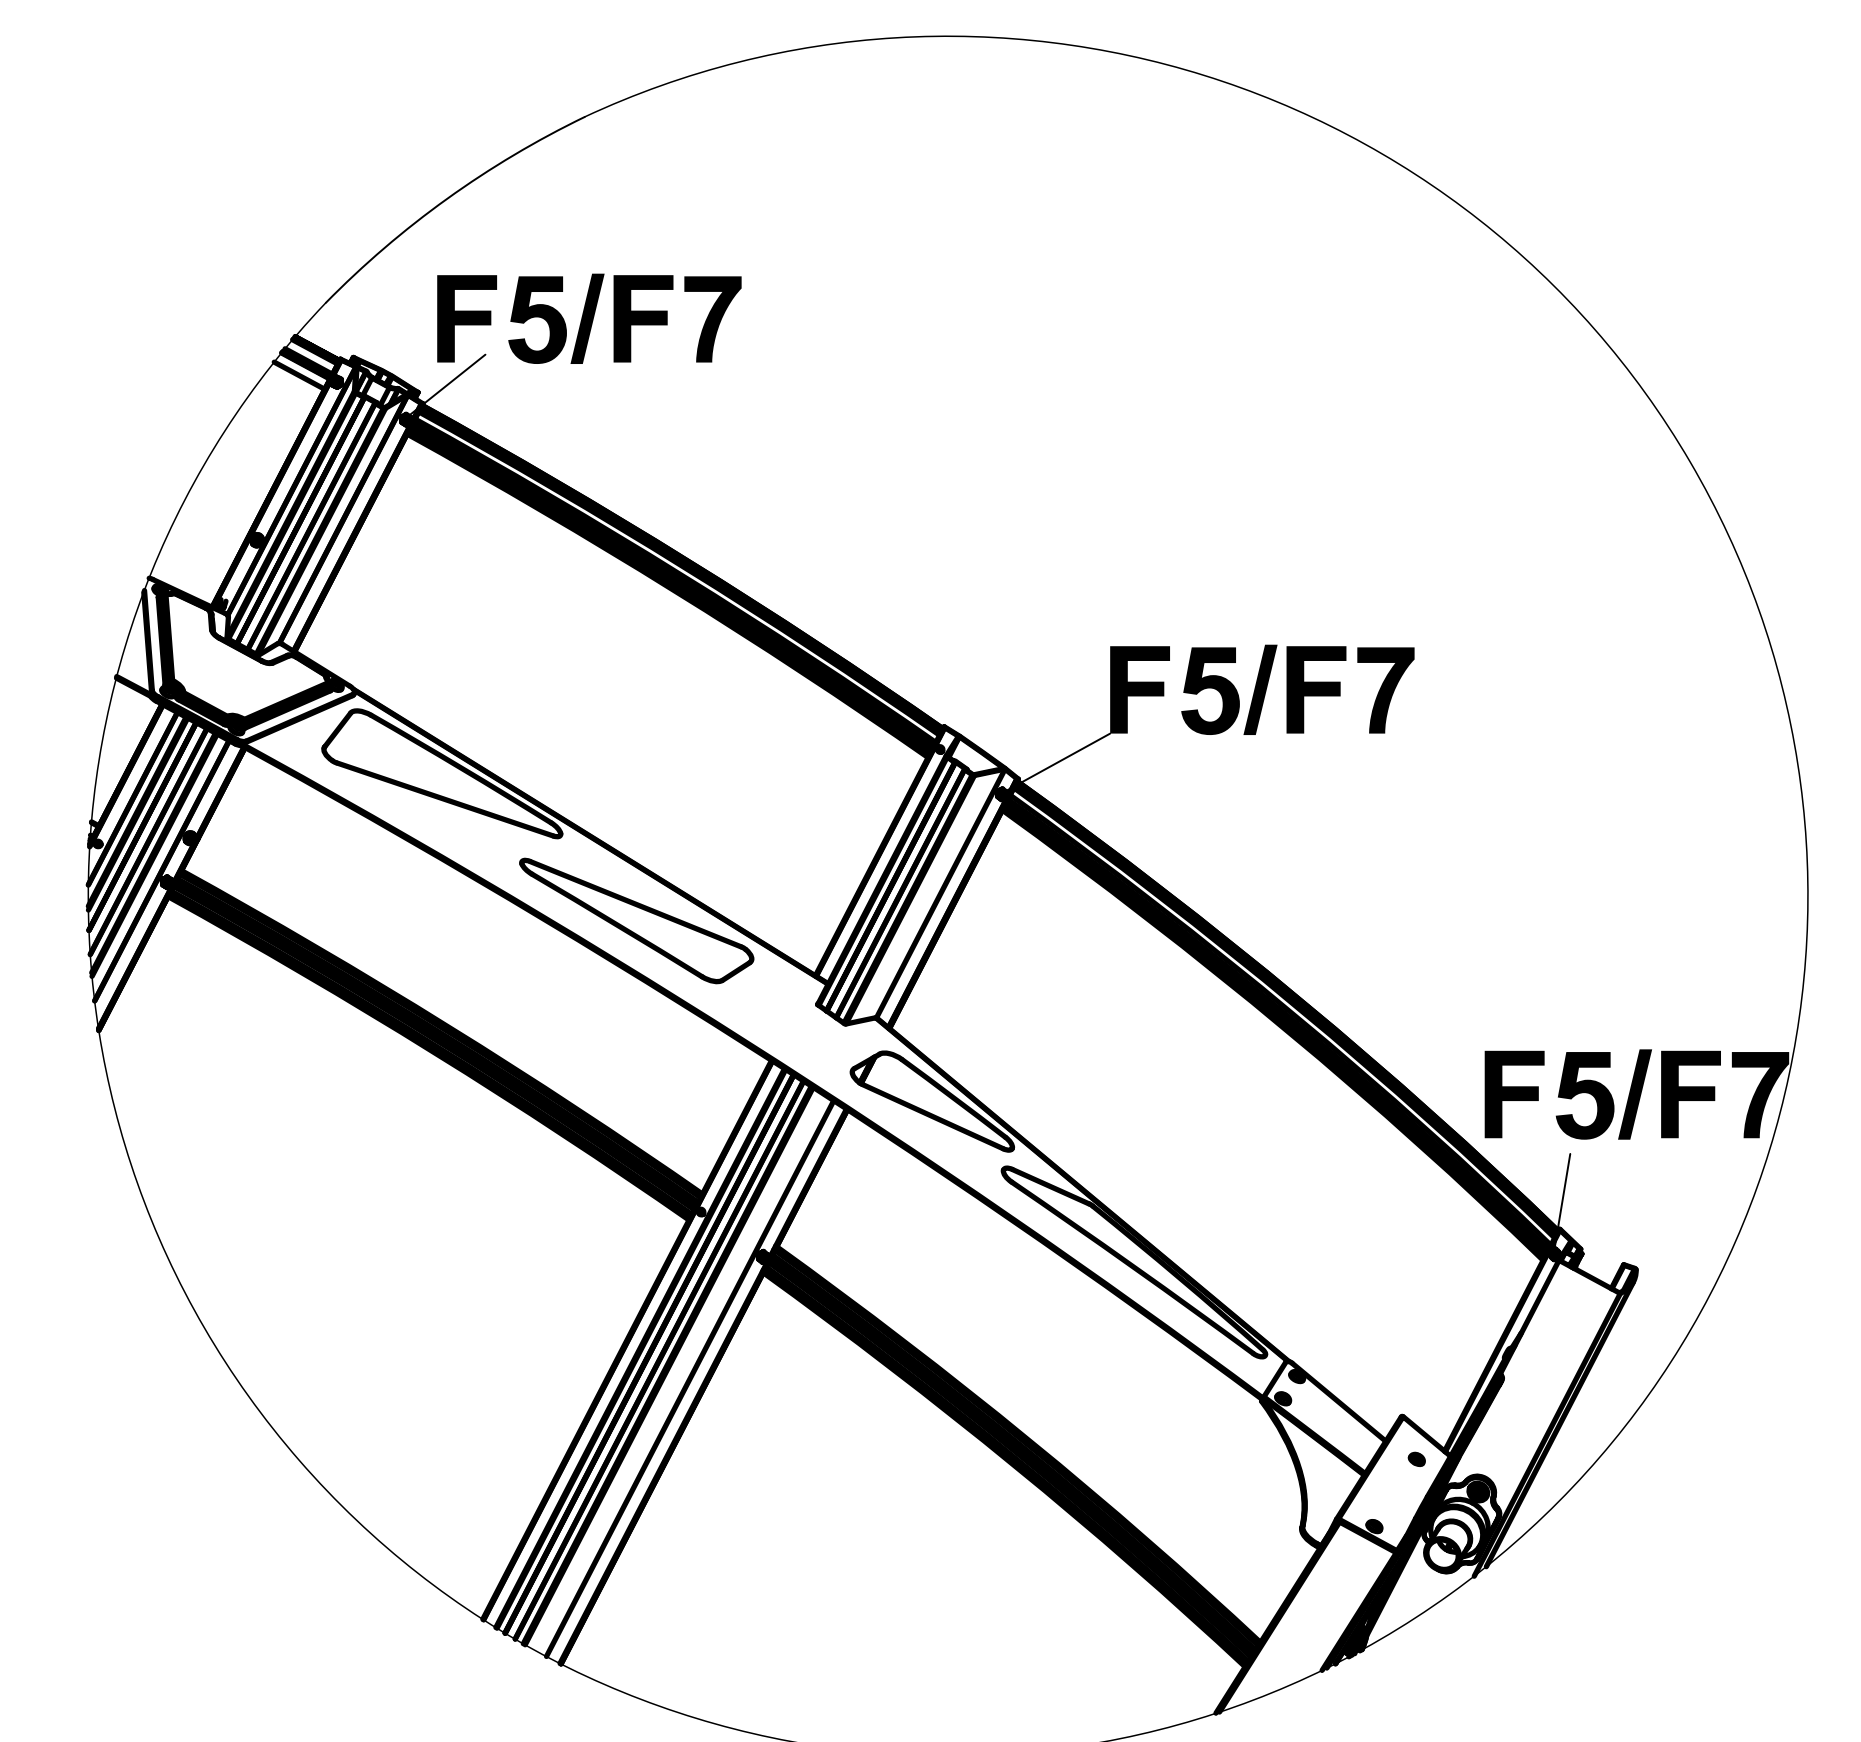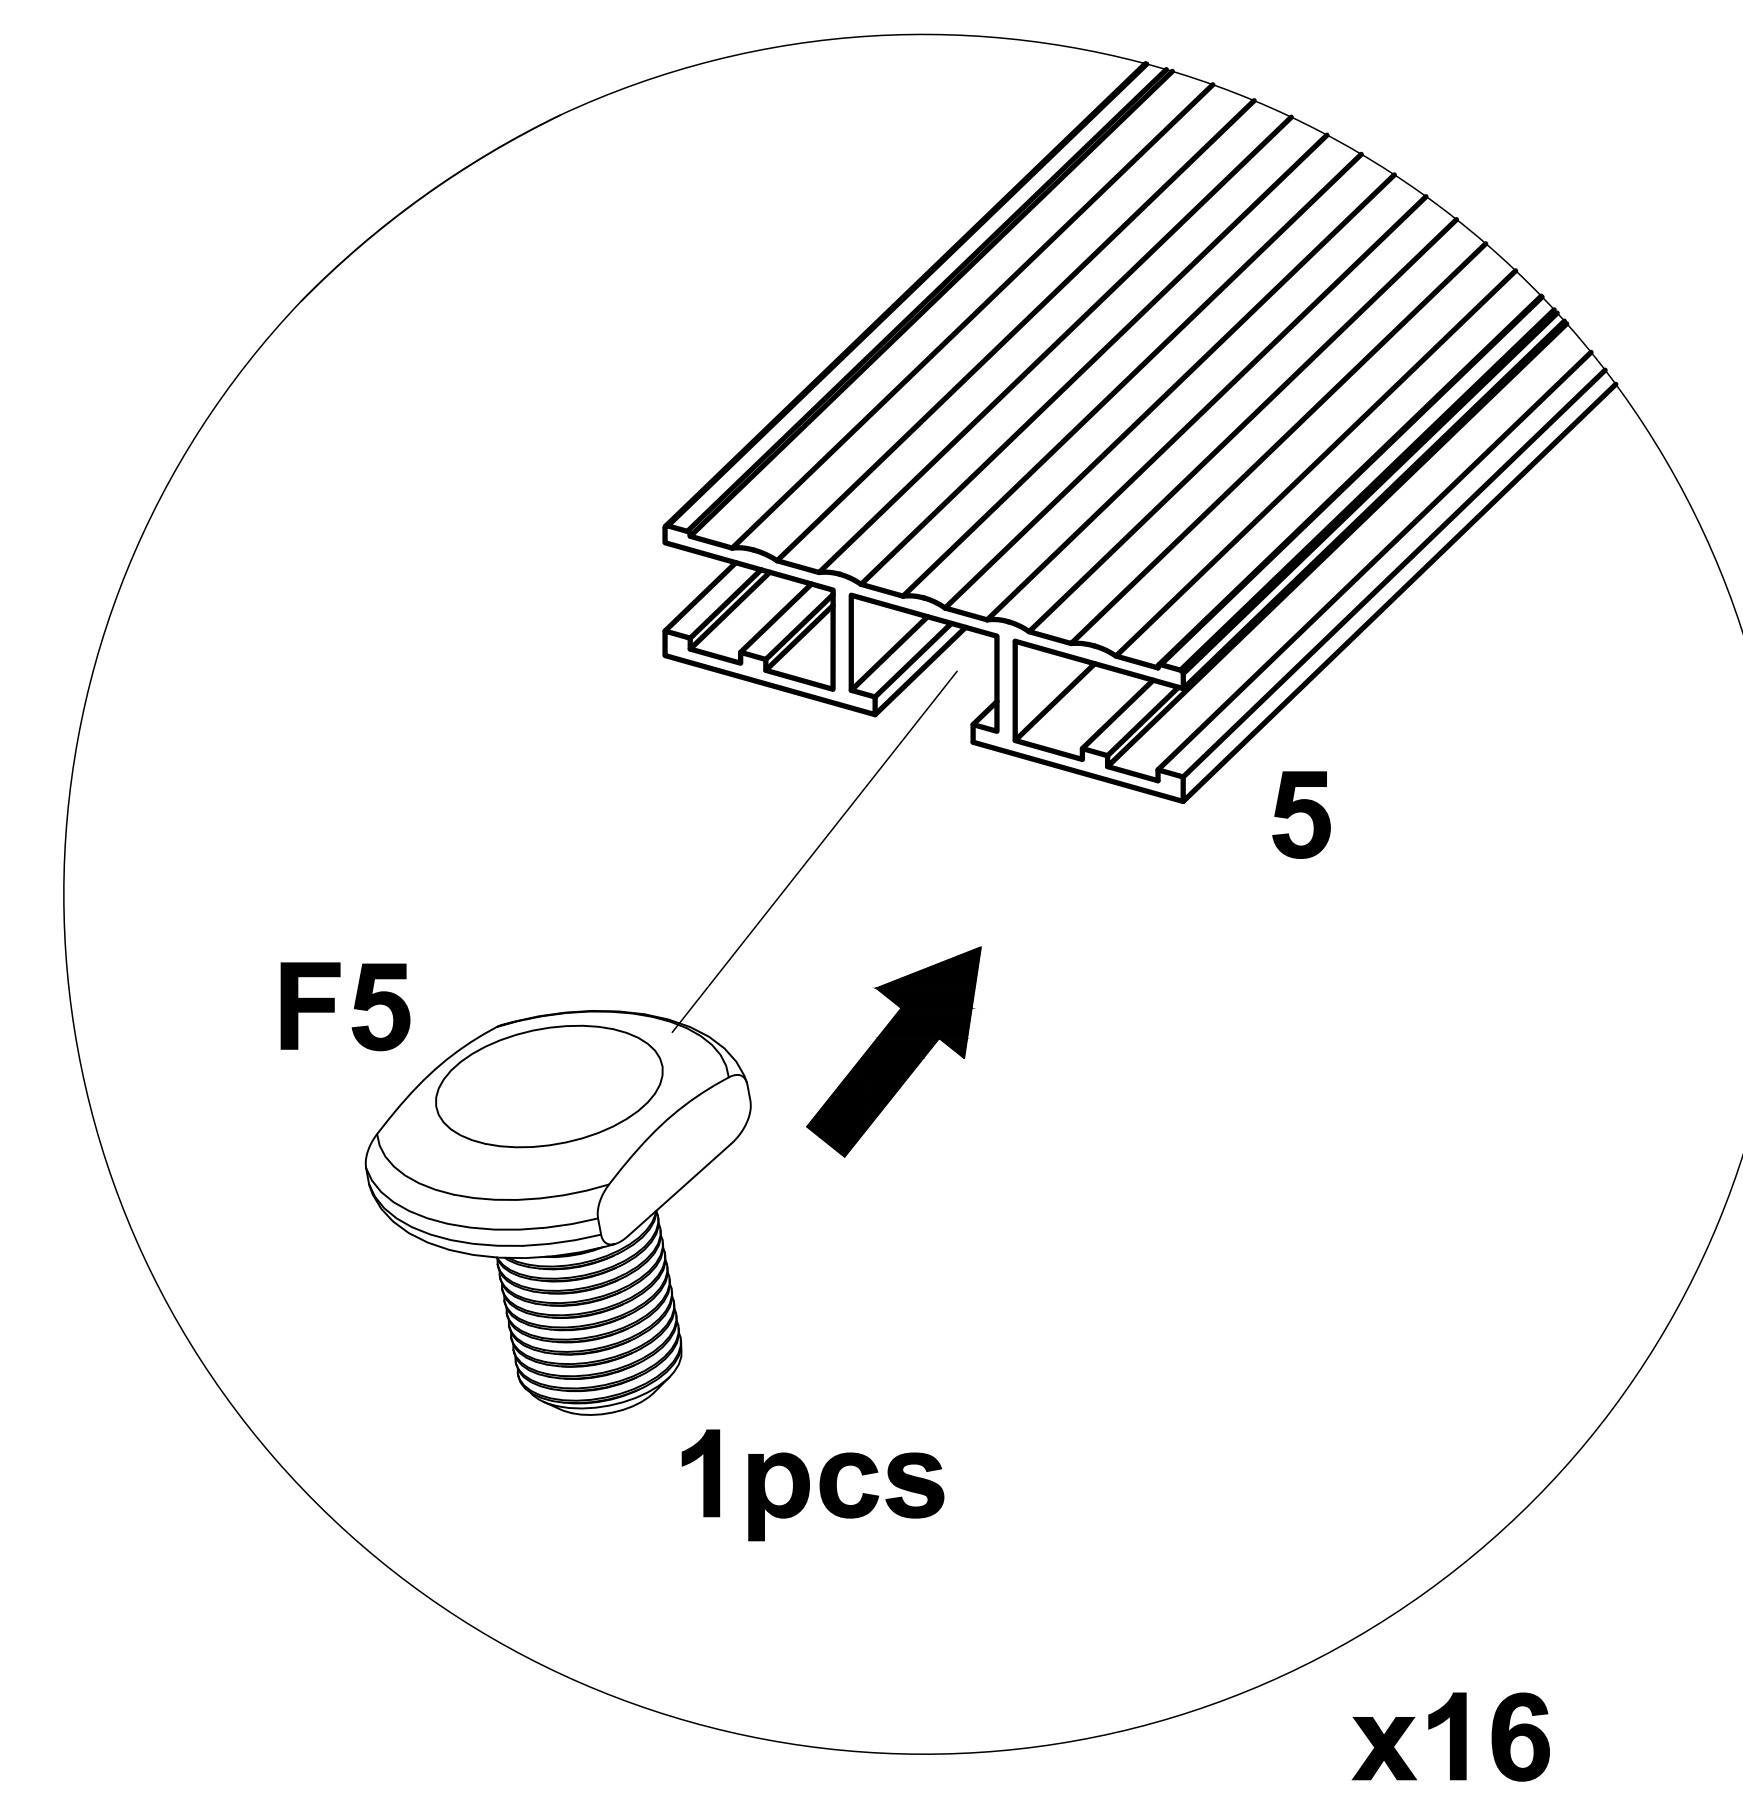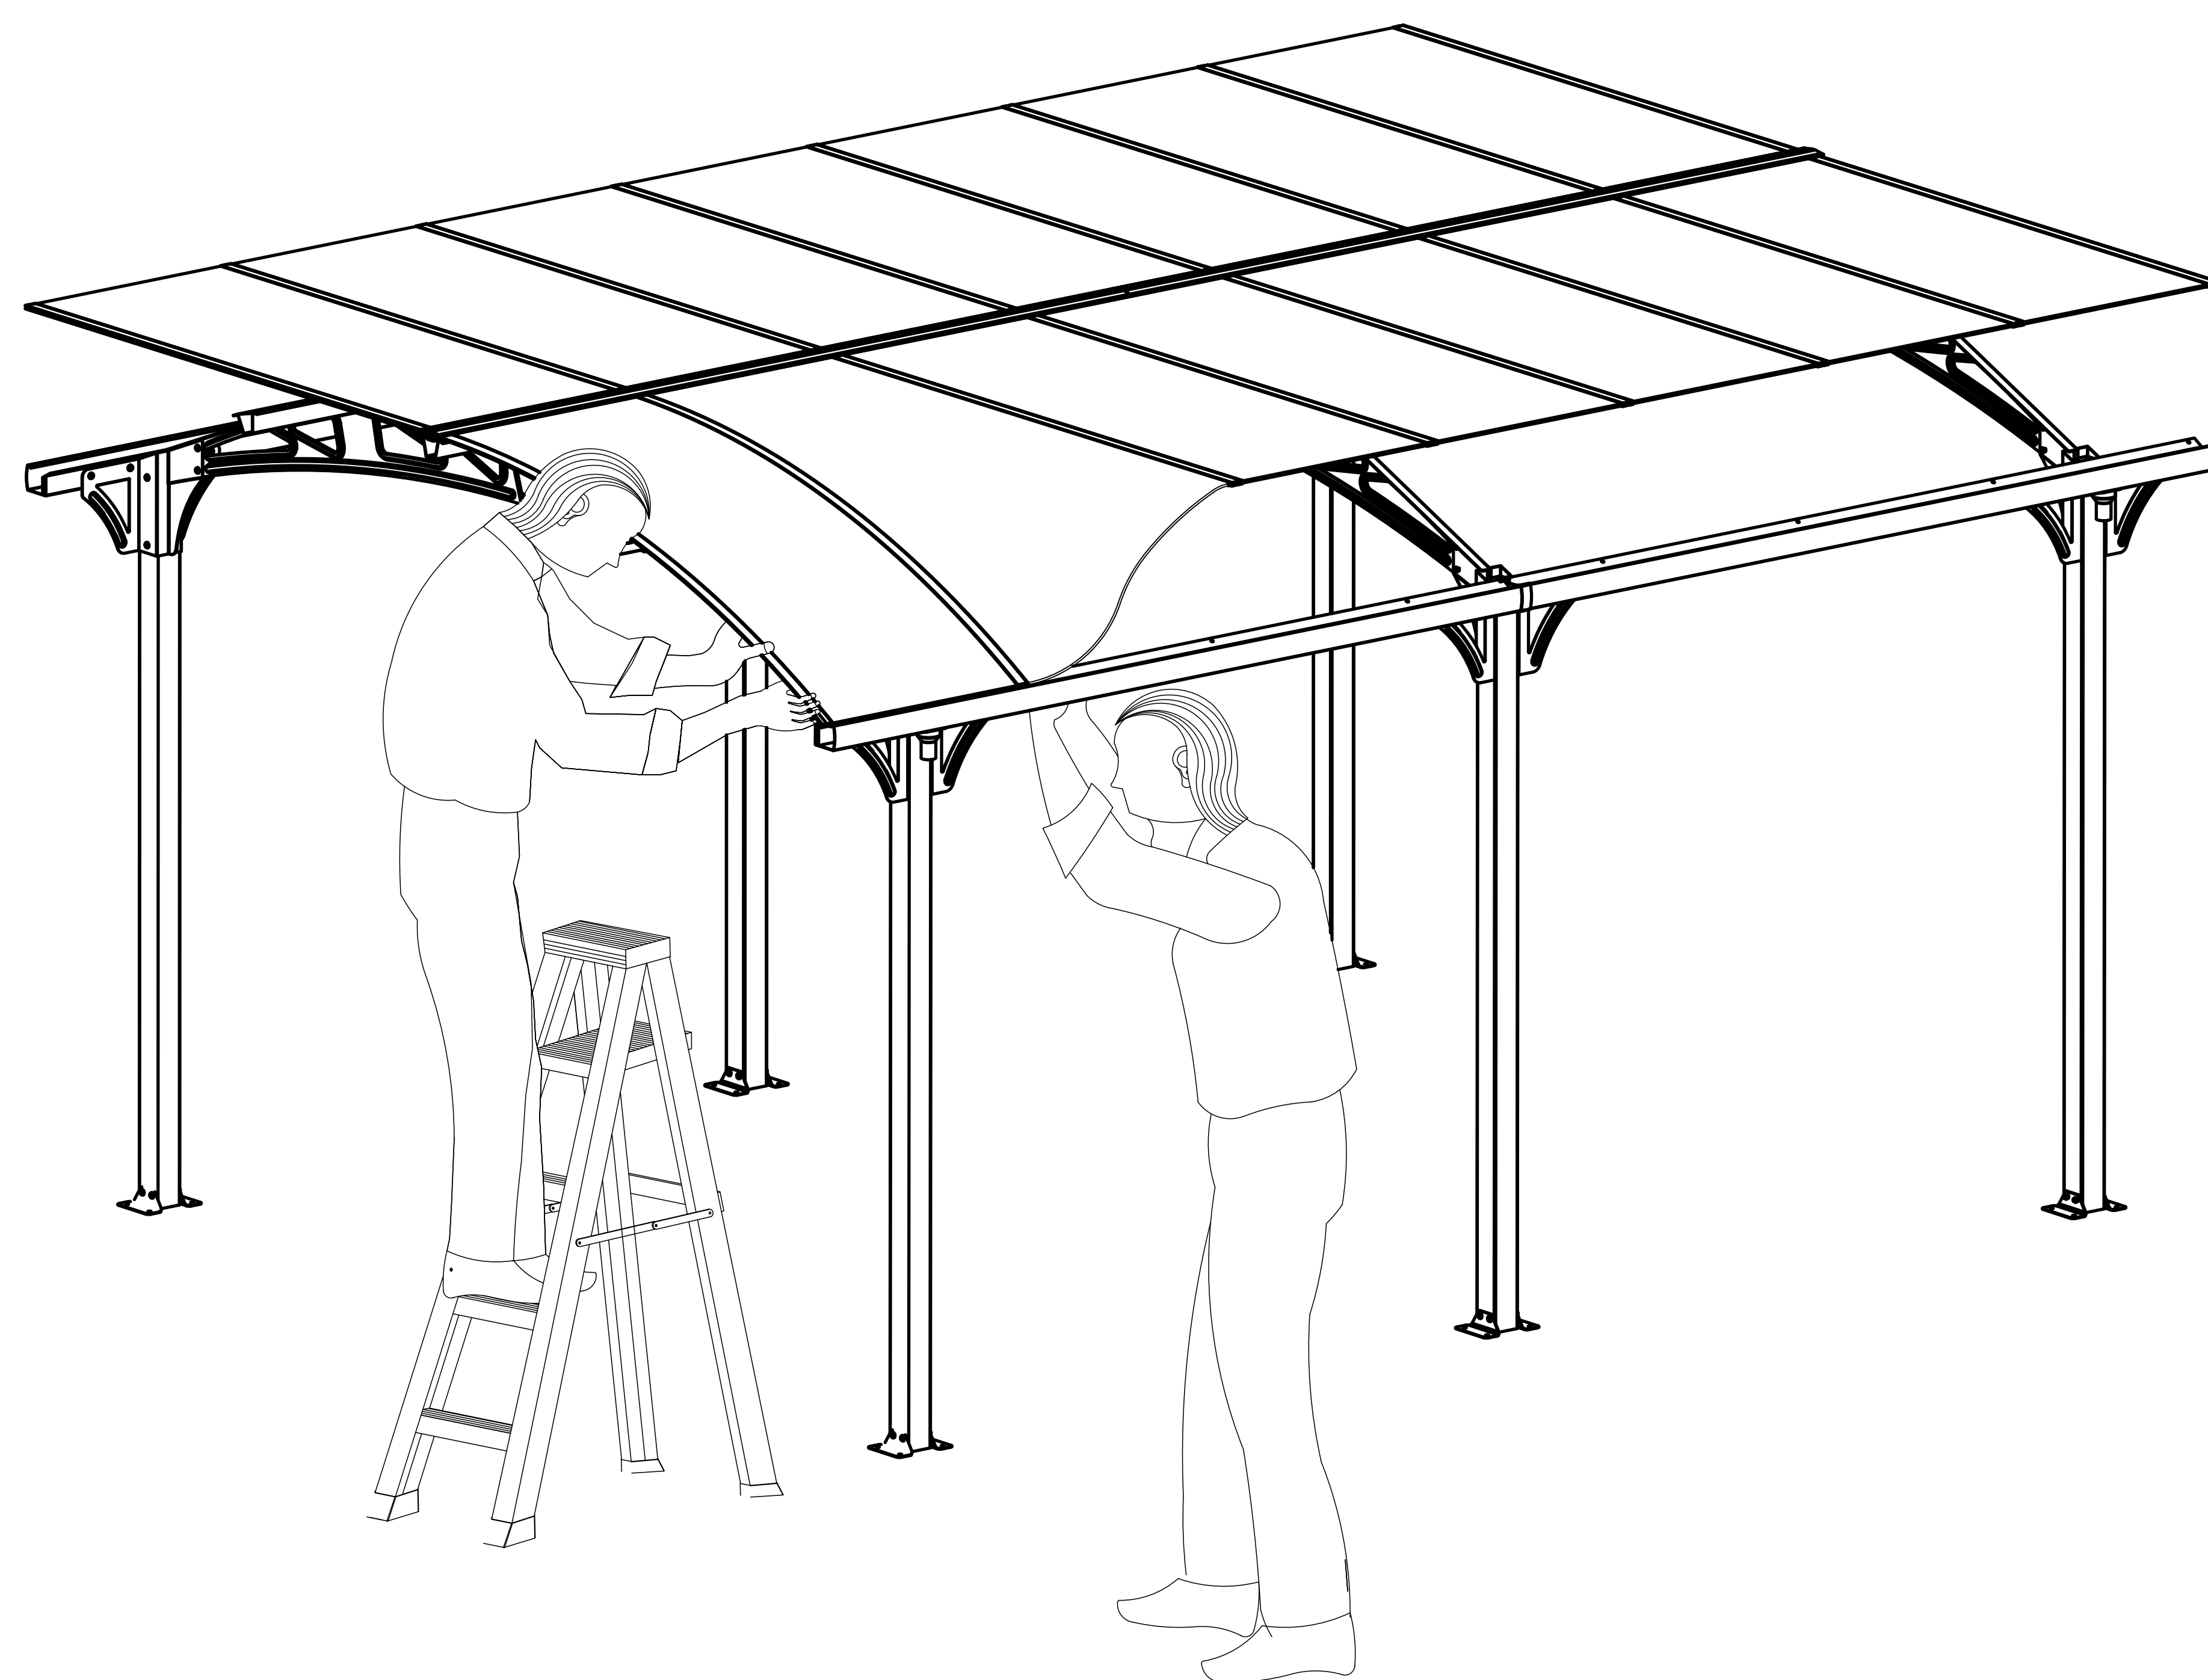


S1L

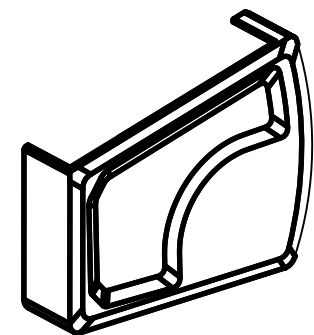


2 PCS

S1R



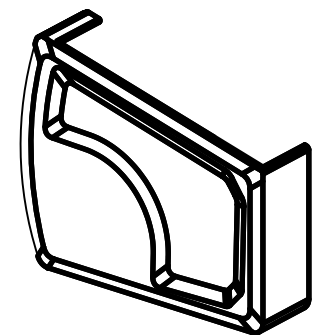


2 PCS


S3

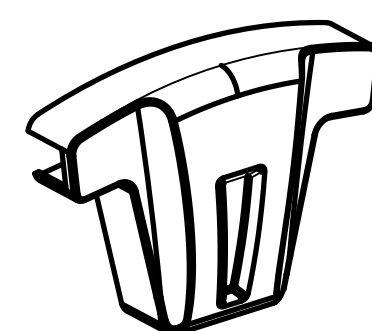

6 PCS

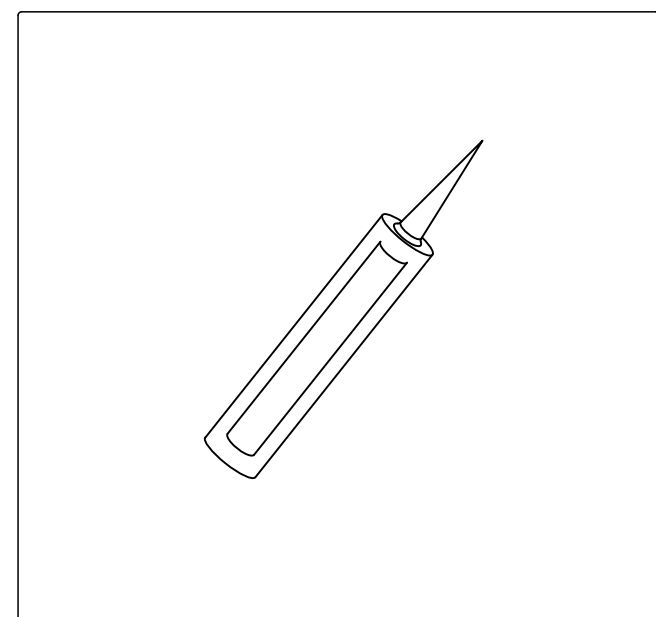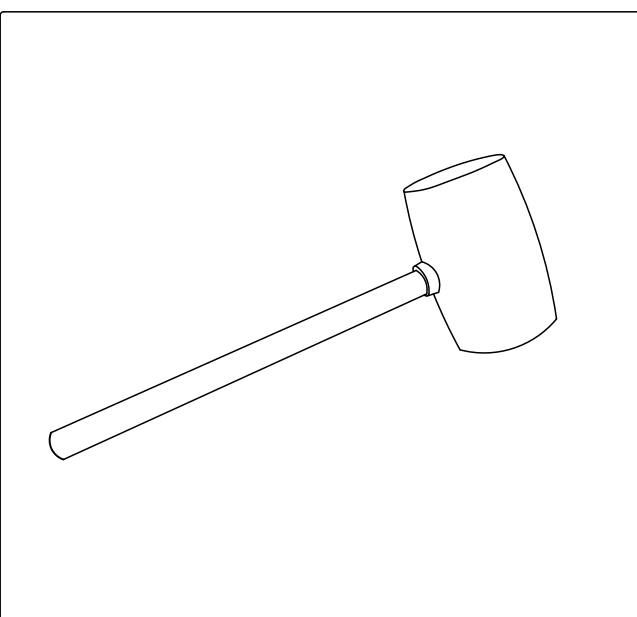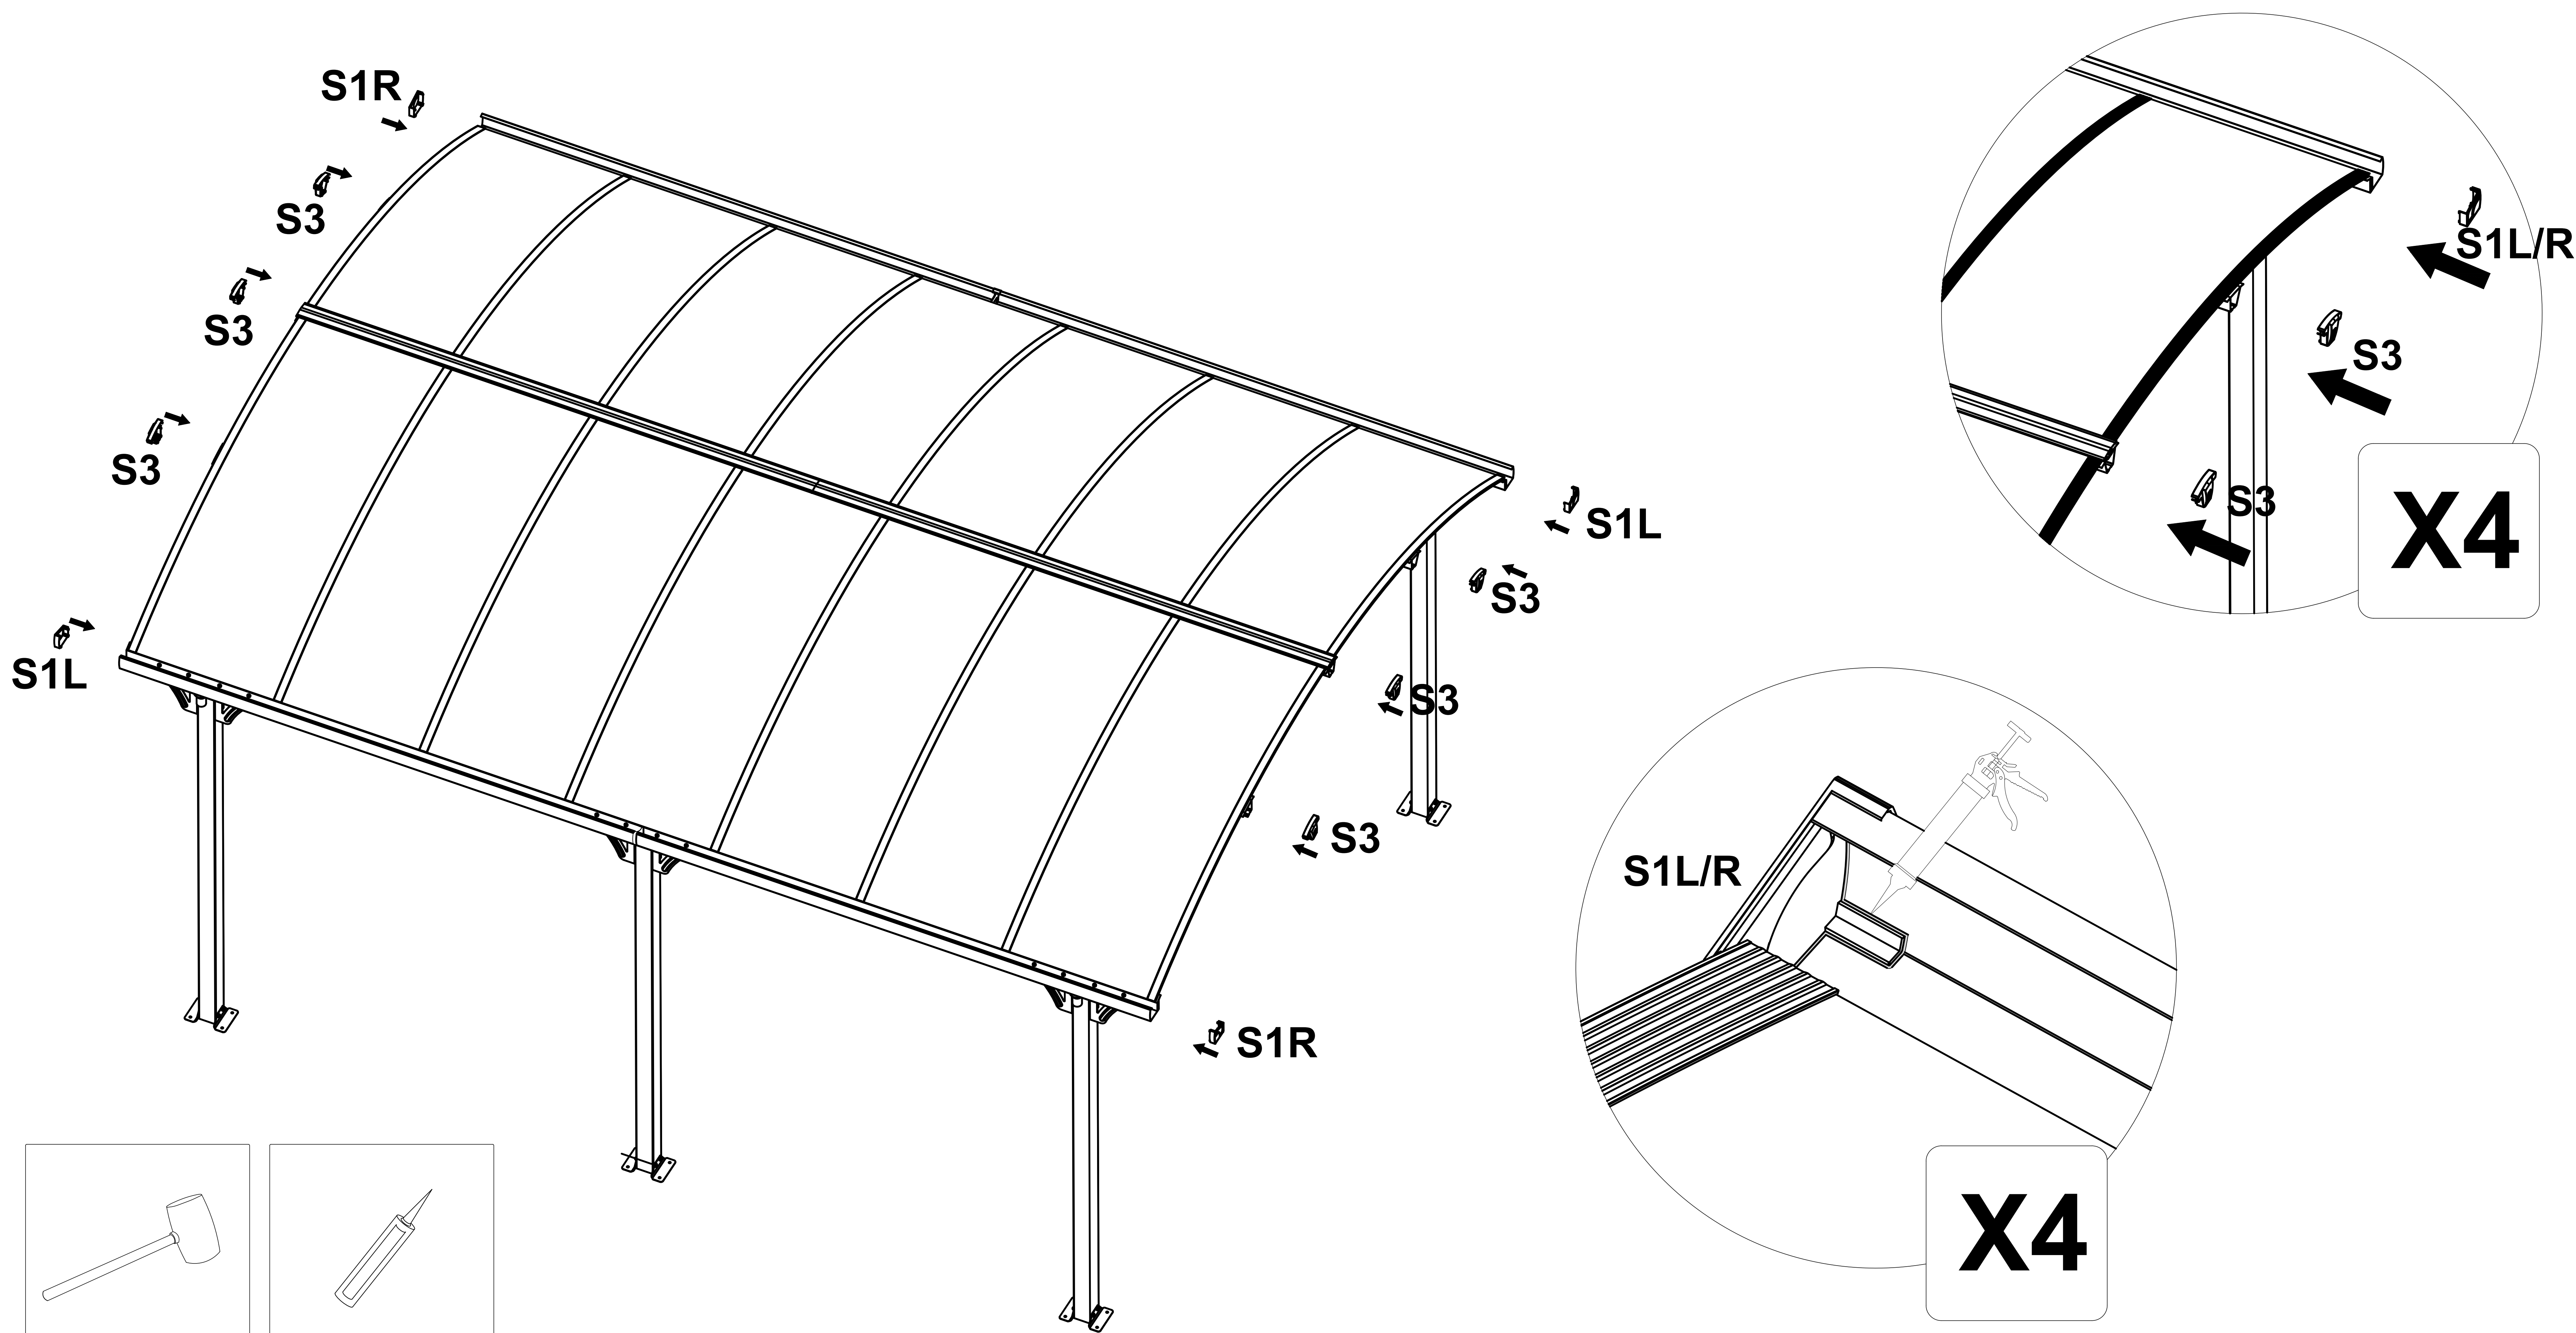

F9 12PCS

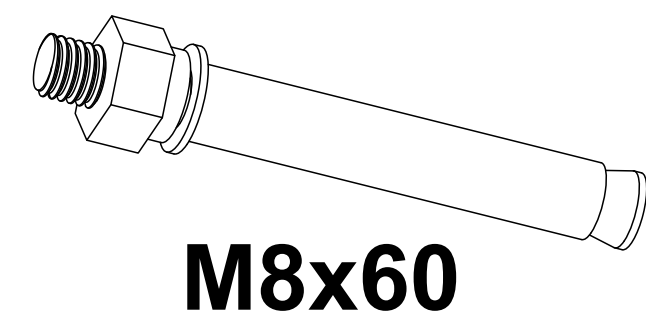

S6 12PCS

