

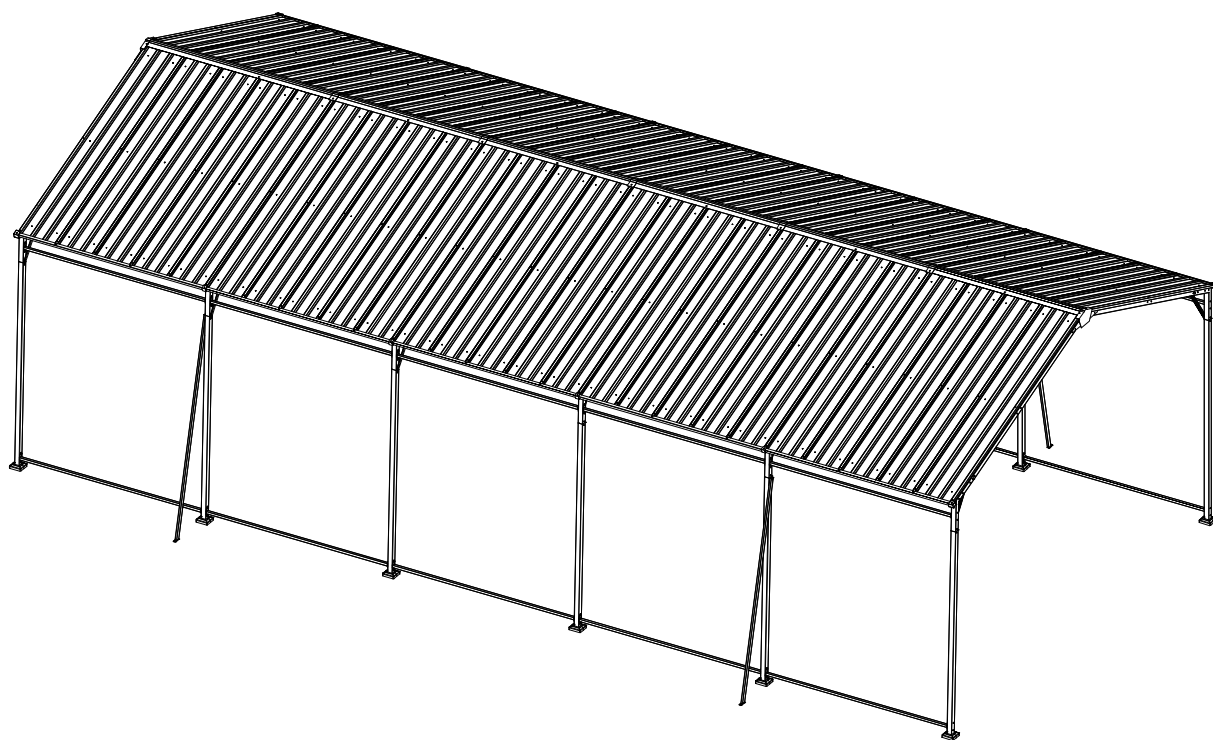
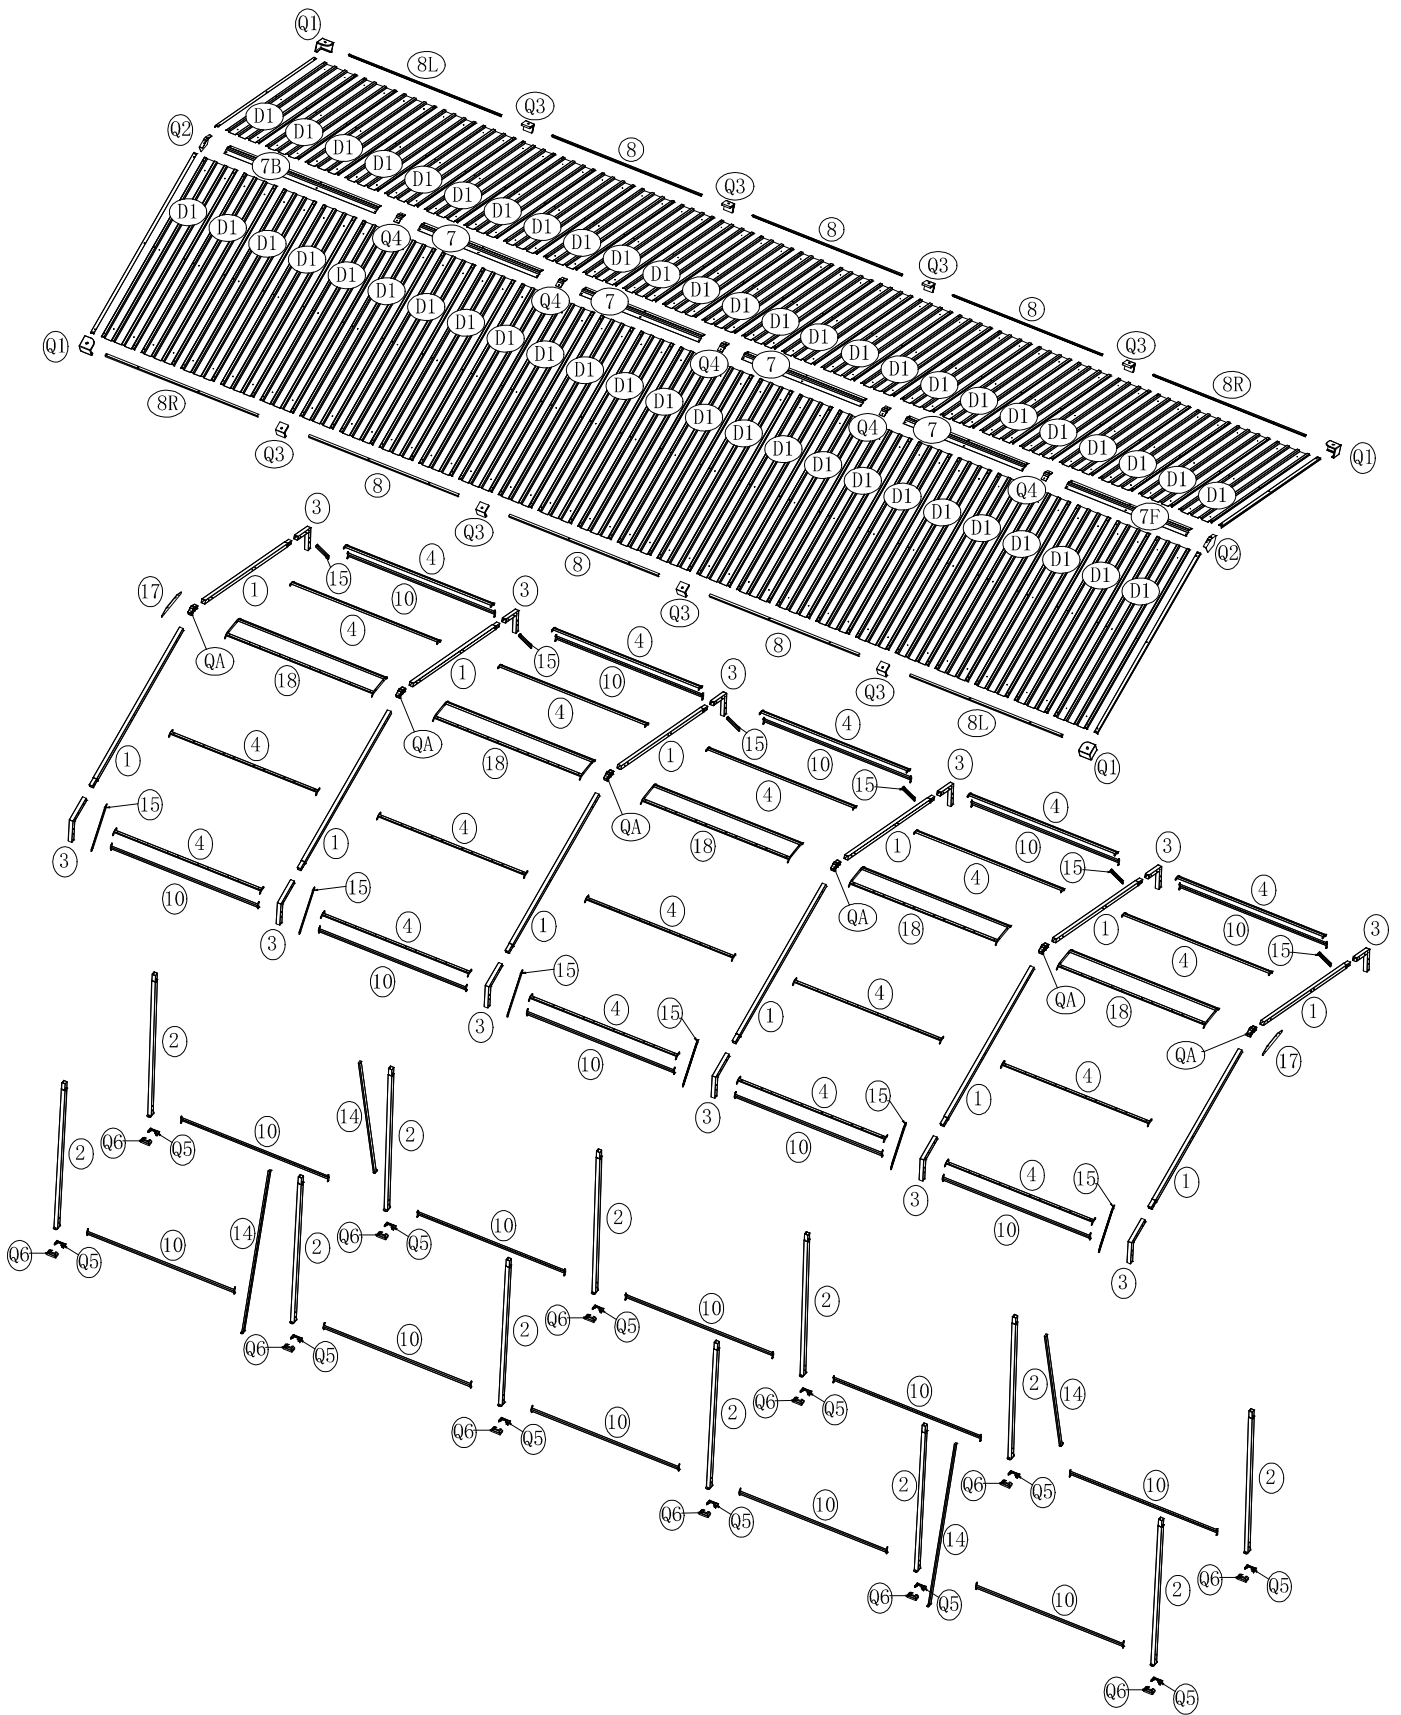





























NO.	PART.	Qty.		NO.	PART.	Qty.
1	 1805mm	12		17		2
2	 1808mm	12		18	 1550mm	5
3		12		D1	  2058mm	50
4	 1550mm	20		QA		6
7	 1256mm	4		Q1		4
7F	 1274mm	1		Q2		2
7B	 956mm	1		Q3		8
8	 1574mm	6		Q4		5
8L	 1604.5mm	2		Q5		12
8R	 1604.5mm	2		Q6		12
9	 2066mm	4		Q9		176
10	 1550mm	20		Q32	 M4x14mm	240+10
14	 1761.5mm	4		Q13	 M5x16mm	250+10
15	 466mm	12		Q15	 M6x55mm	172+4

NO.	PART.	Qty.		NO.	PART.	Qty.
Q16	 M6x65mm	4+1		Q22		2
Q17	 M6	176+5		Q23		1
Q18		240+10		Q24		1
Q19		250+10		Q25		1
Q20		176+10		Q26		1
Q21	 M8x50mm	28		Q27		1


NO.	PART.	Qty.
1	 1805mm	12
3		12
QA		6
Q15	 3/6x55mm	12
Q17	 M6	12
Q20		12

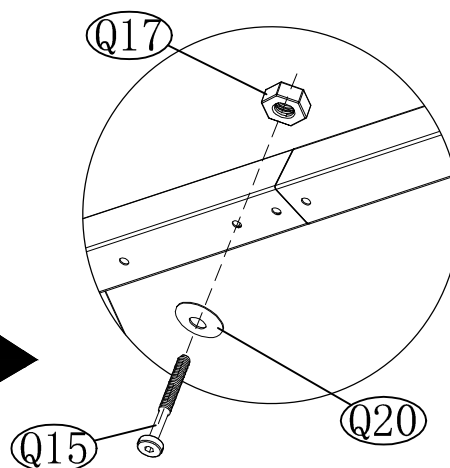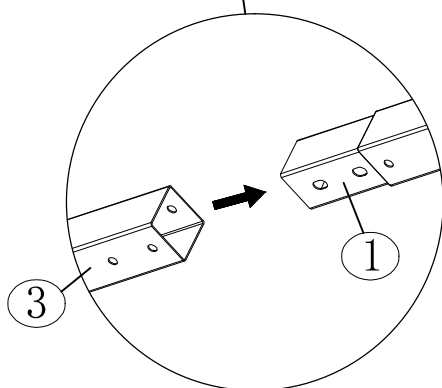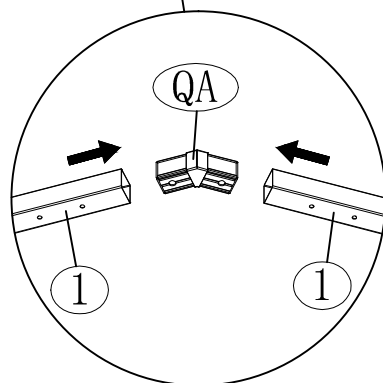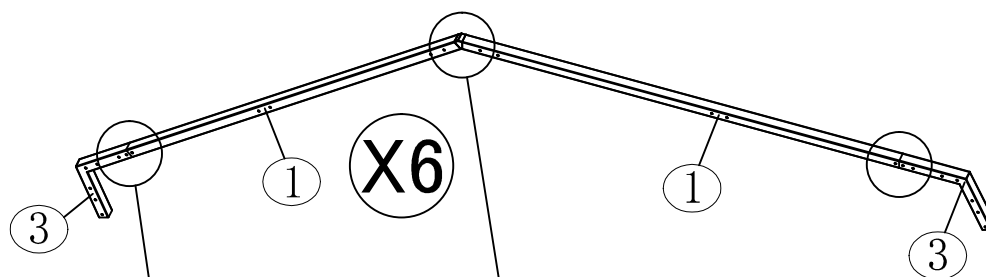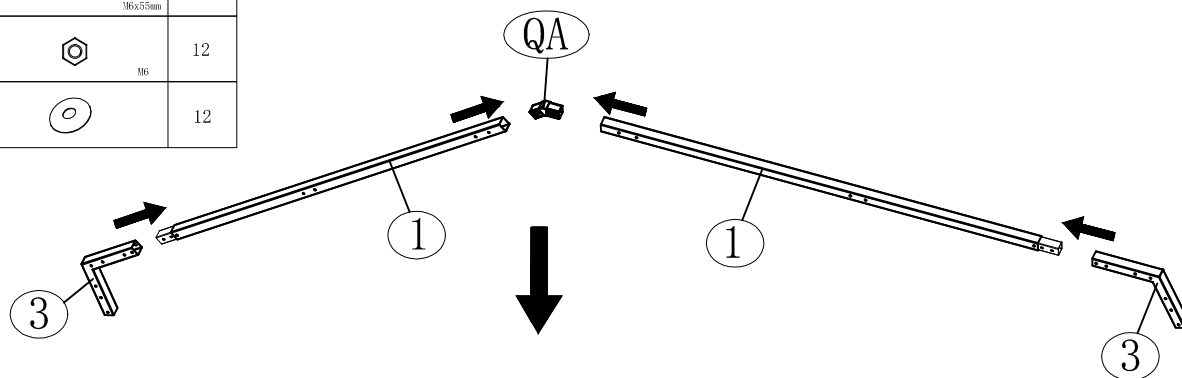


NO.	PART.	Qty.
17		2
18	 1550mm	5
Q15	 36x55mm	24
Q17	 M6	24
Q20		24

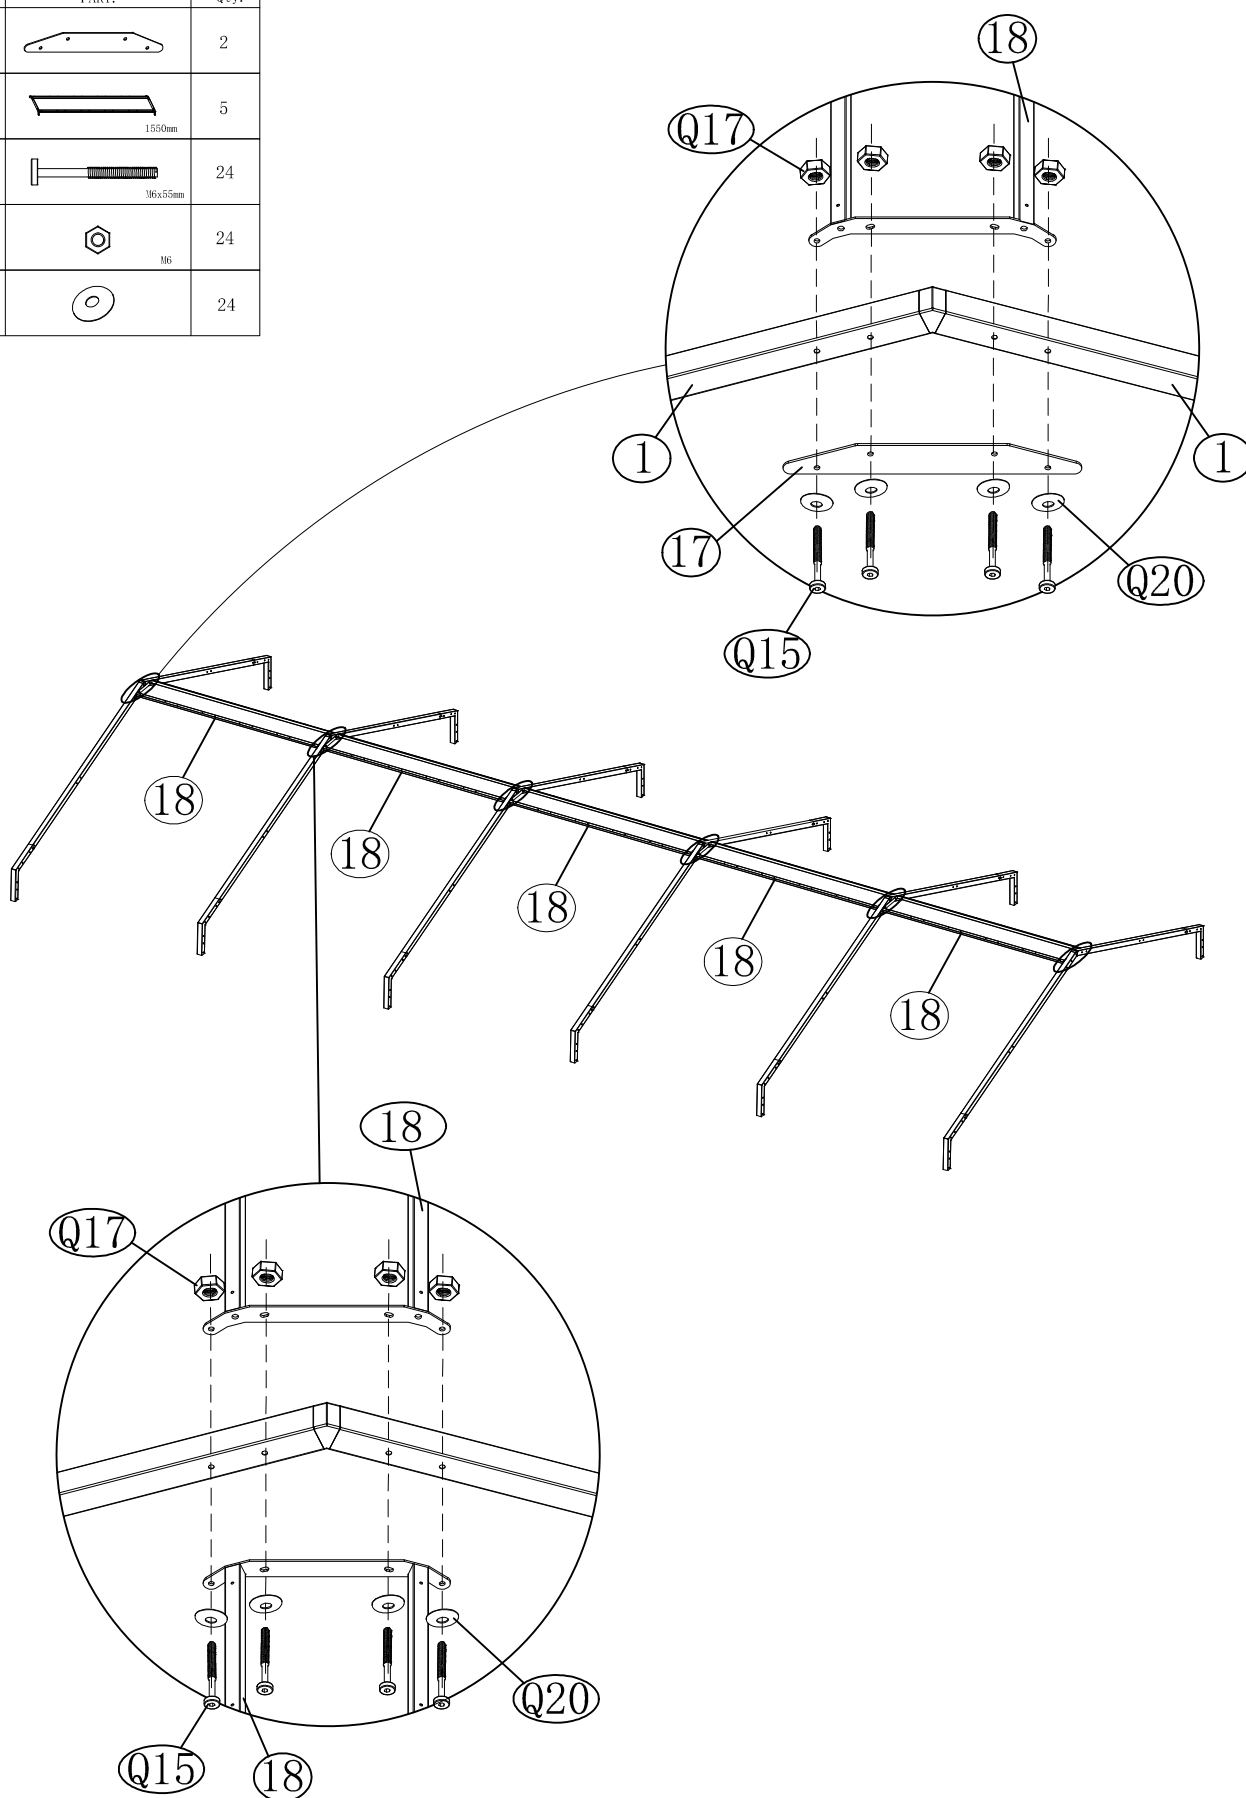


NO.	PART.	Qty.
4	 1550mm	12
Q15	 3/6x55mm	24
Q17	 M6	24
Q20		24

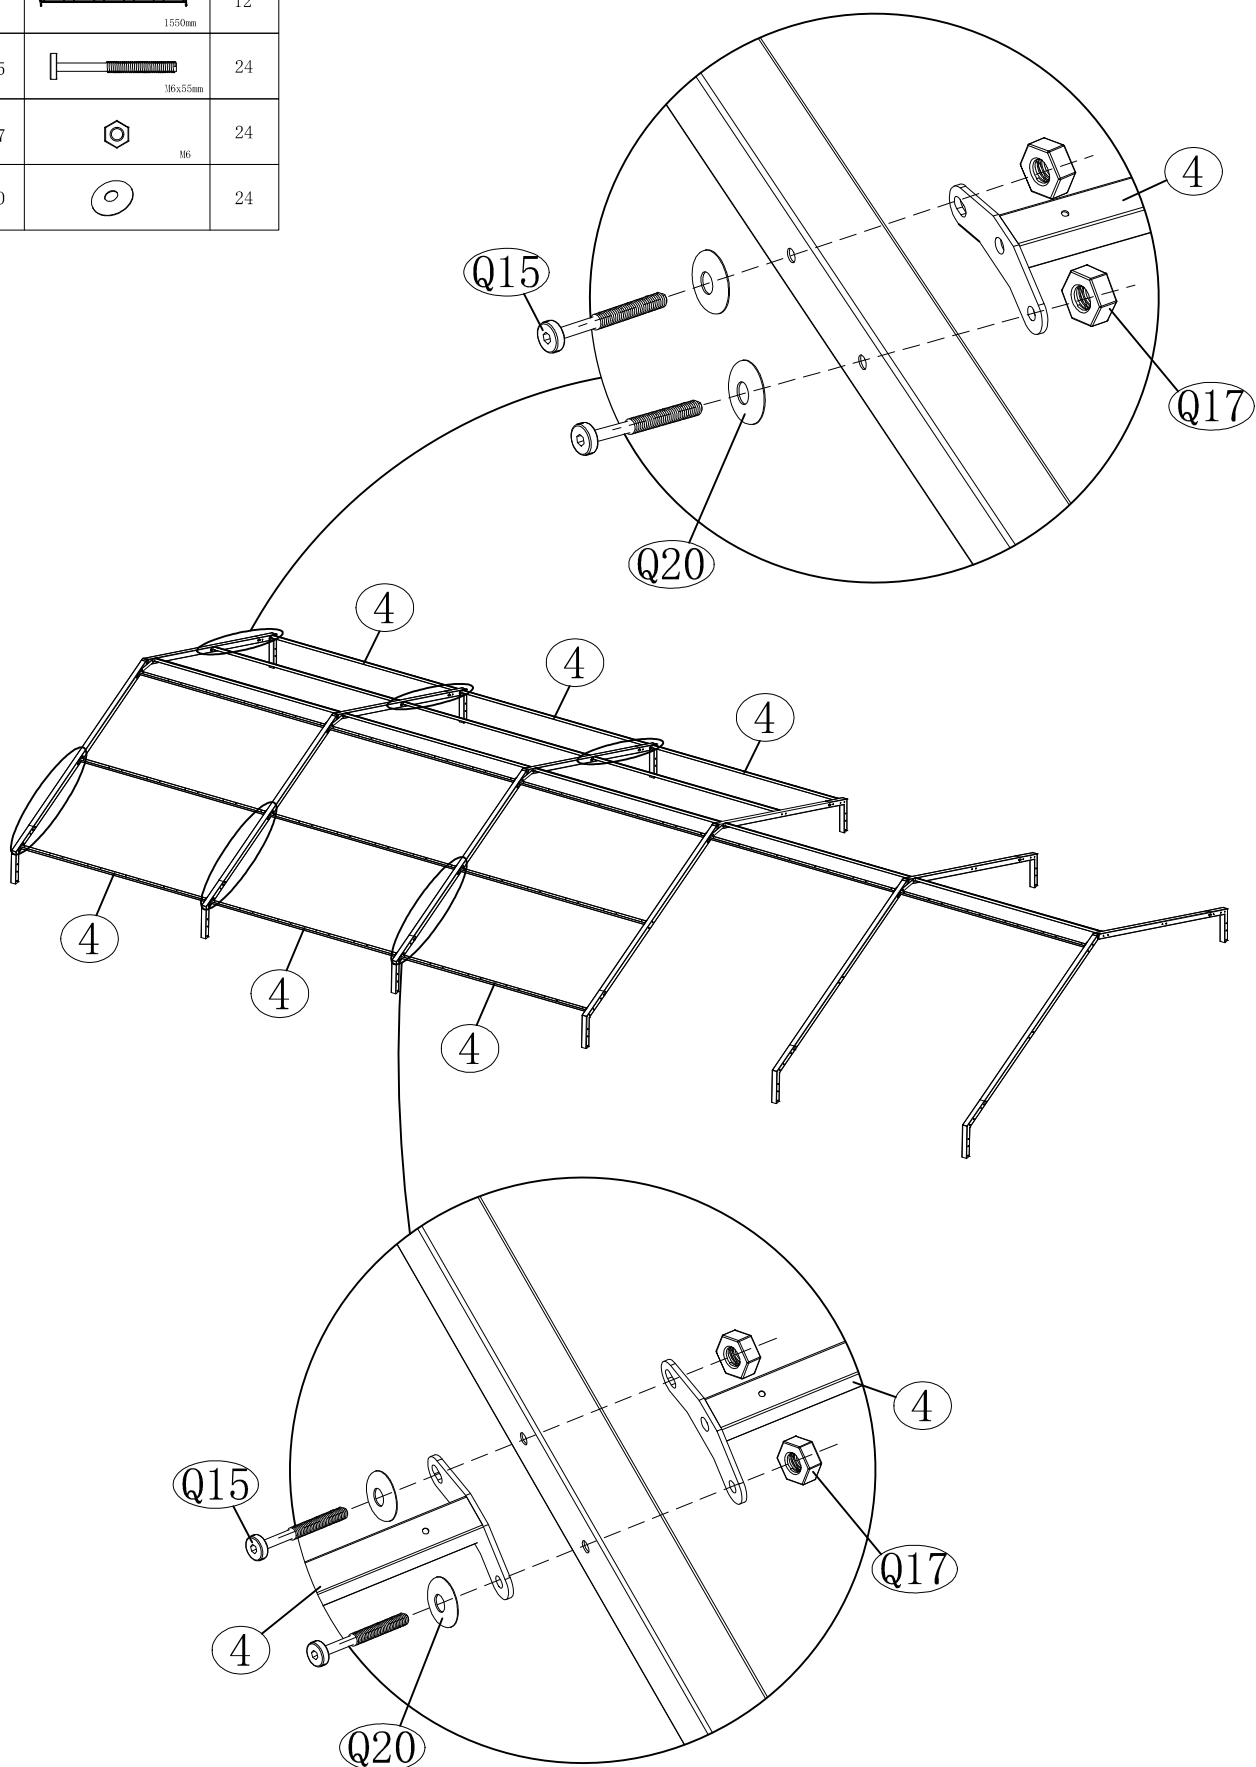


NO.	PART.	Qty.
4	 1550mm	8
Q15	 3/6x55mm	24
Q17	 M6	24
Q20		24

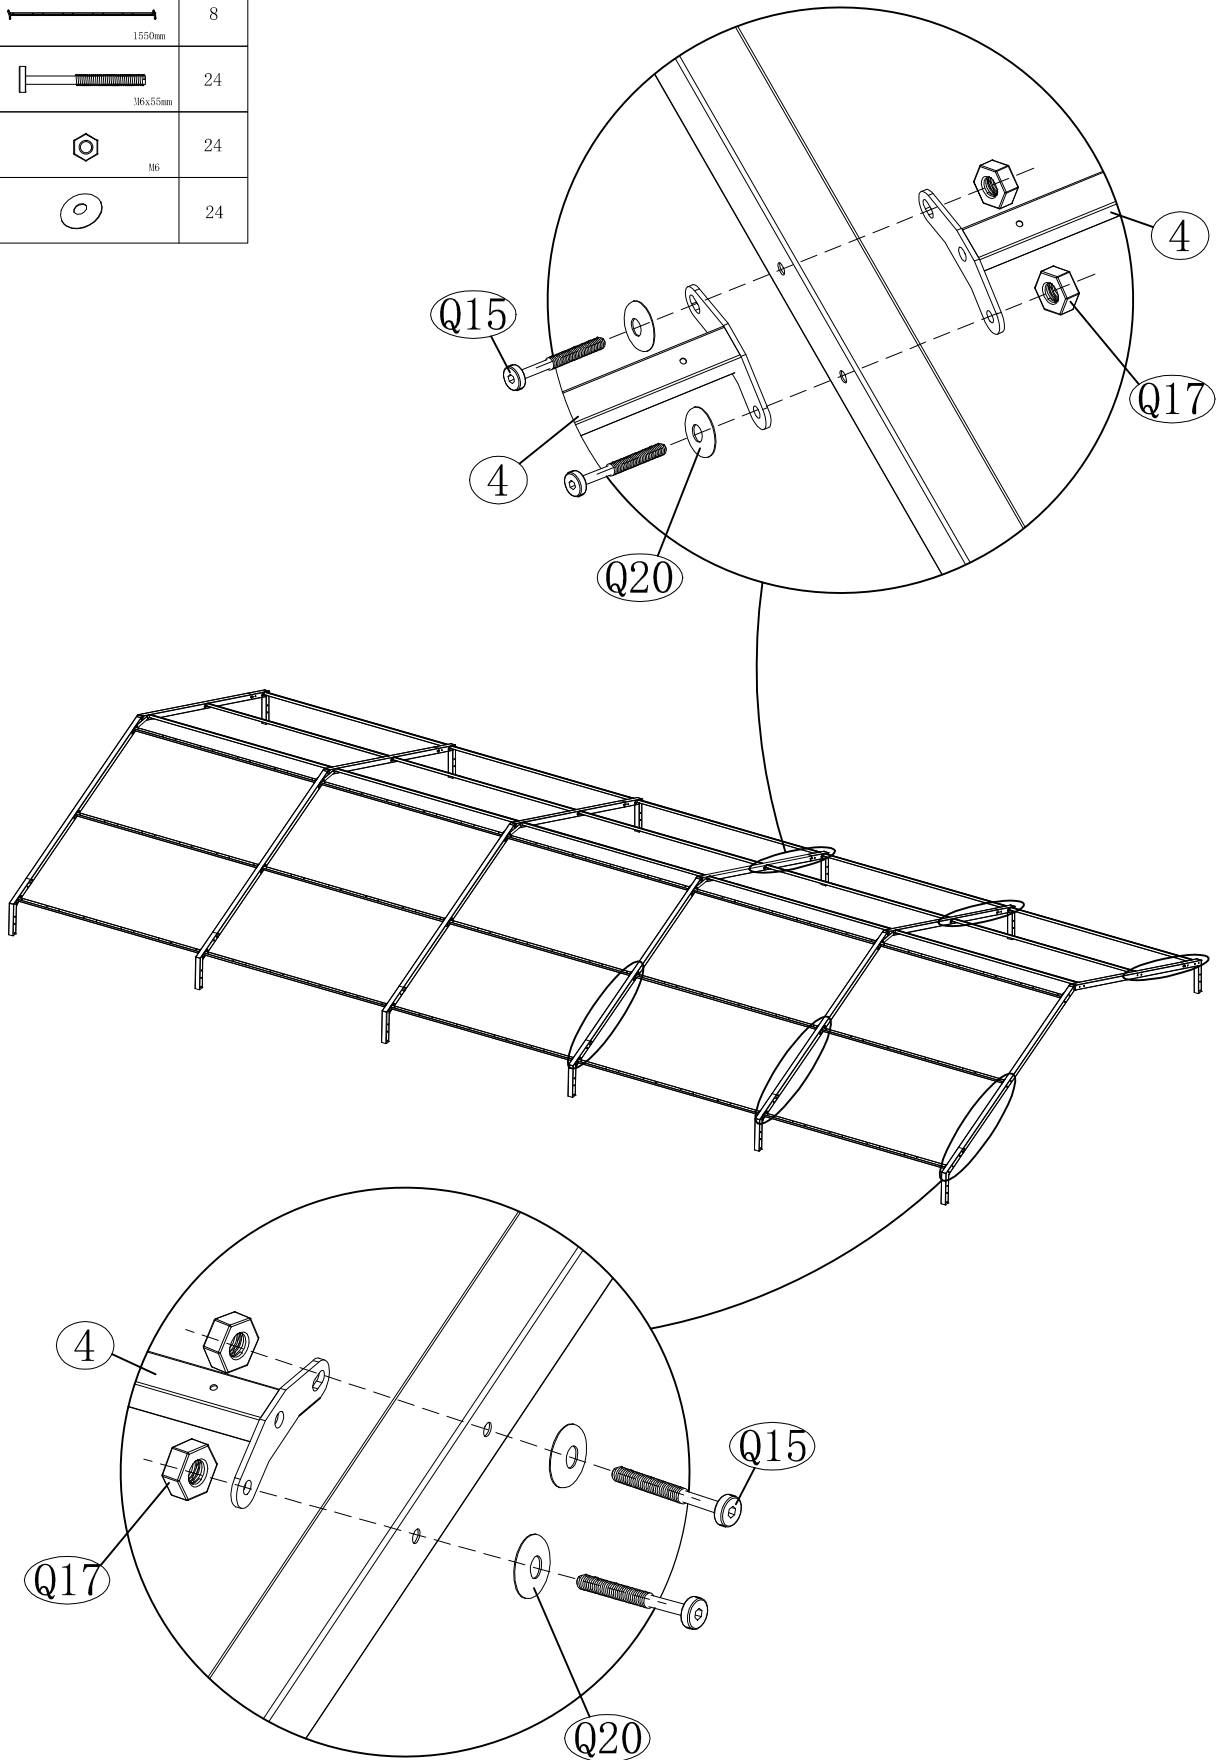


NO.	PART.	Qty.
10	 1550mm	10
Q15	 M6x55mm	20
Q17	 M6	20
Q20		20

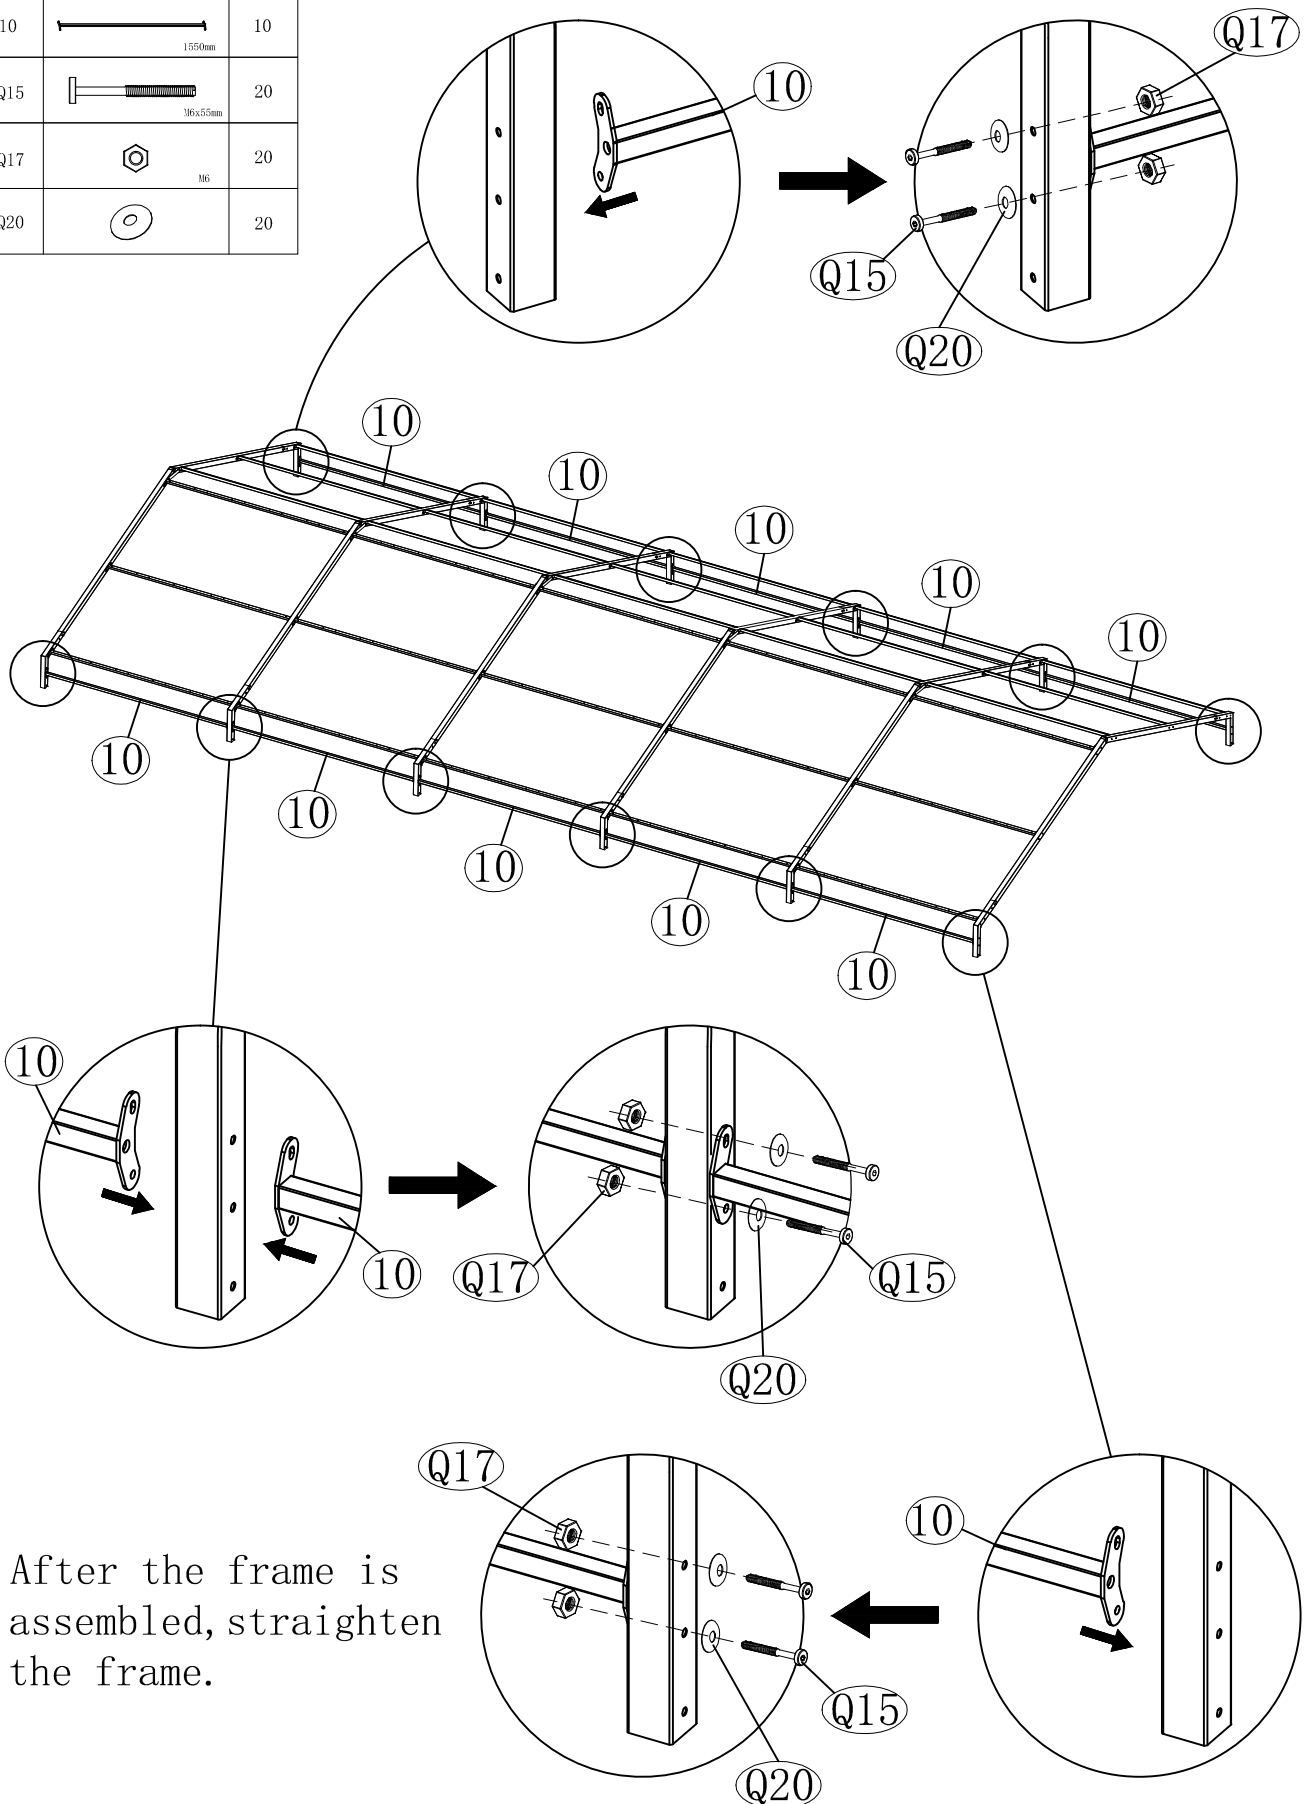


NO.	PART.	Qty.
D1	 2058mm	2
Q13	 M5 x 16mm	10
Q19		10

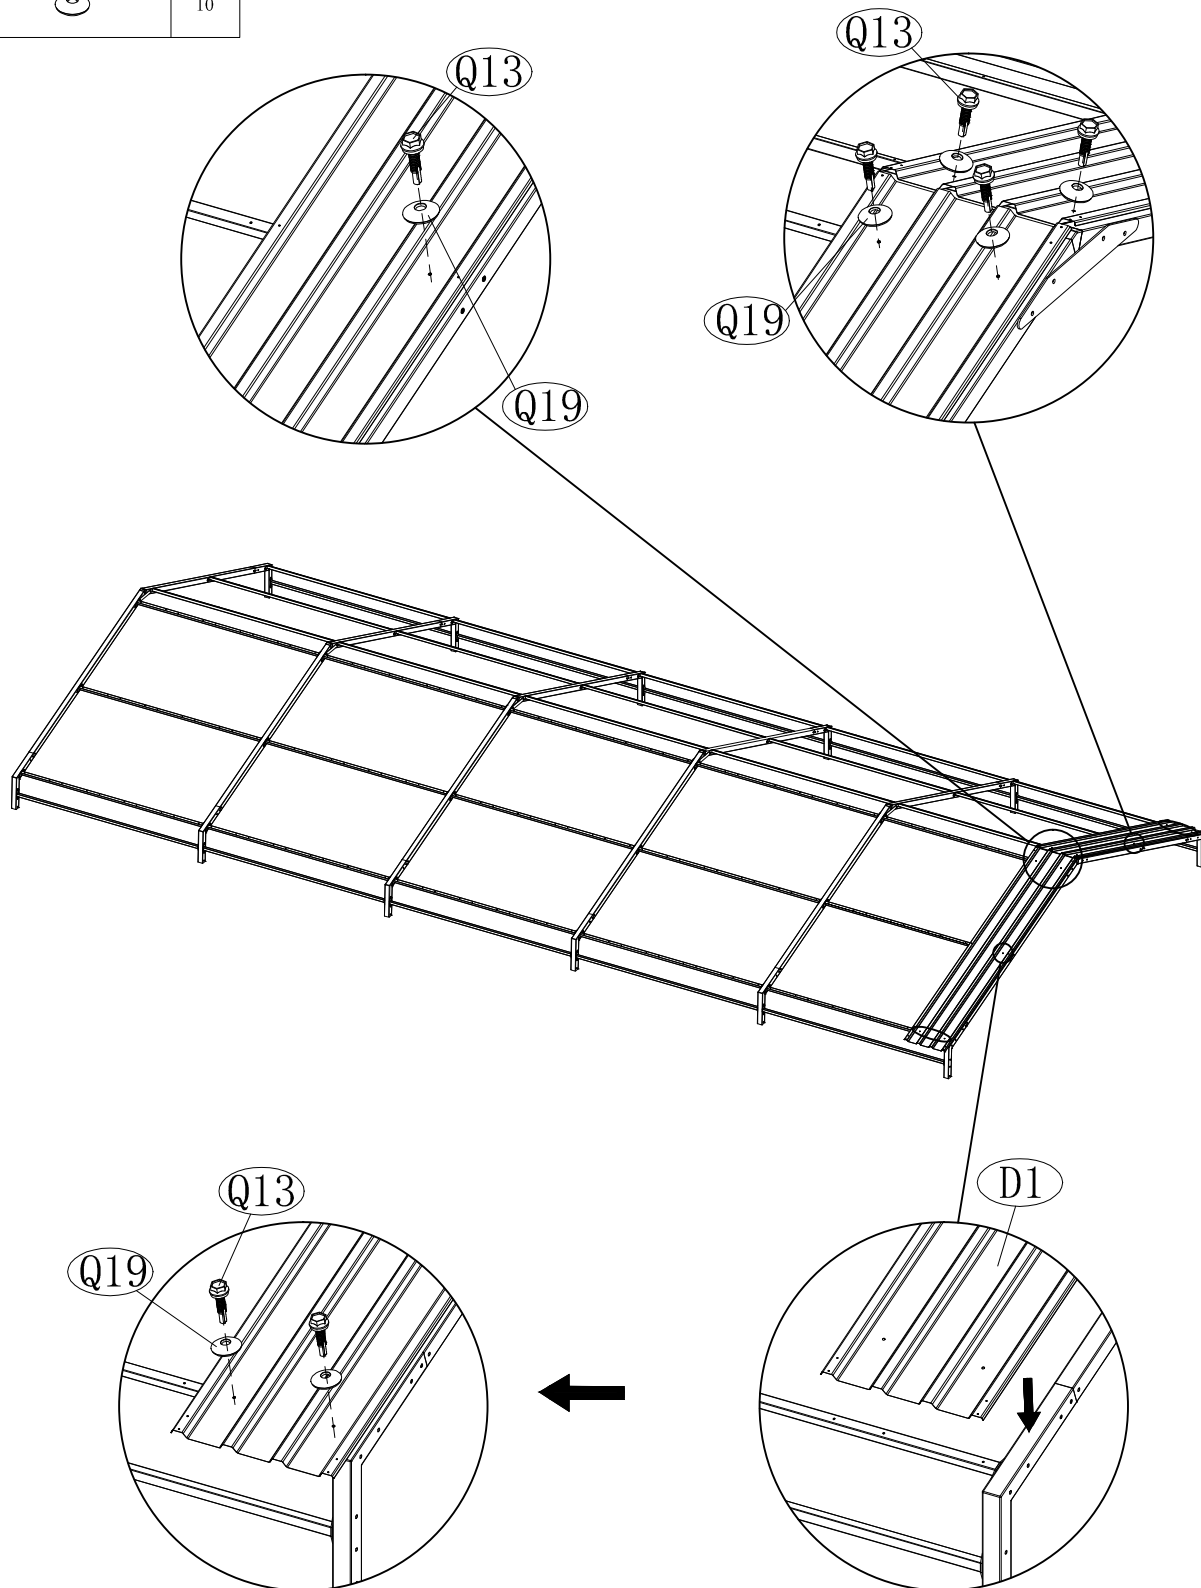


NO.	PART.	Qty.
D1	 2058mm	8
Q32	 M4x14mm	28
Q13	 M5x16mm	40
Q18		28
Q19		40

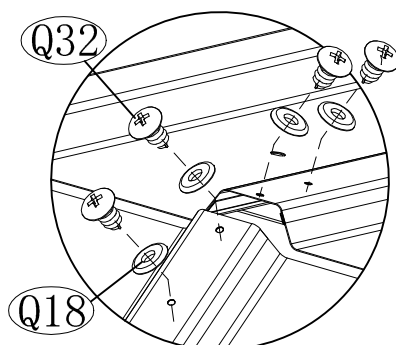


A1 x2

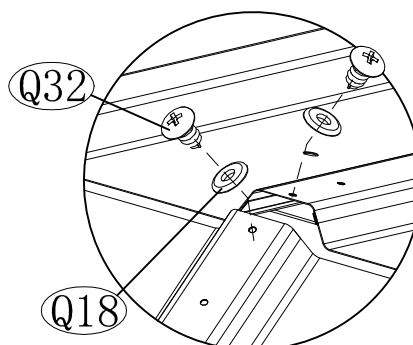


A2 x2

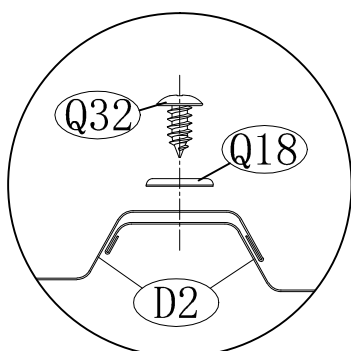



B x8

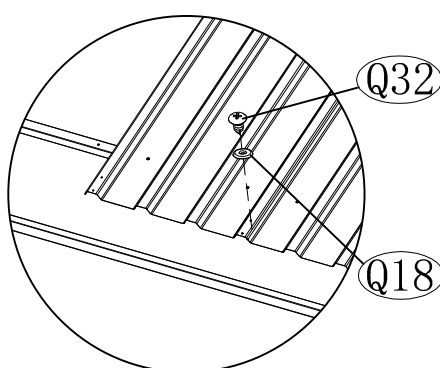

C x8

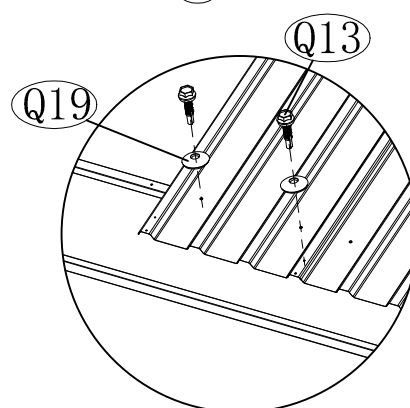




D x8

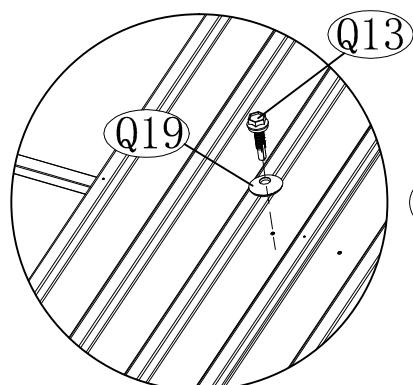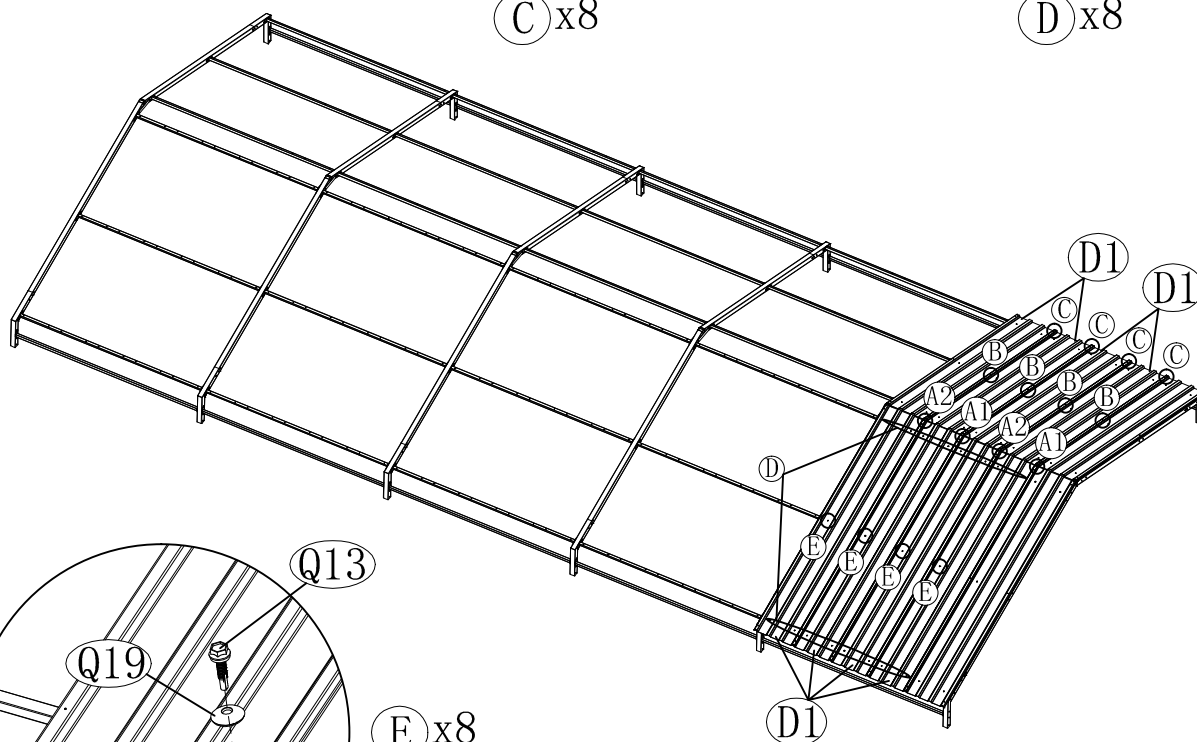


E x8

Nº.	PART.	Qty.
Q4		1
Q32	 Máx 14mm	2
Q18		2


Install plastic Q4 between the 4th and 5th pieces

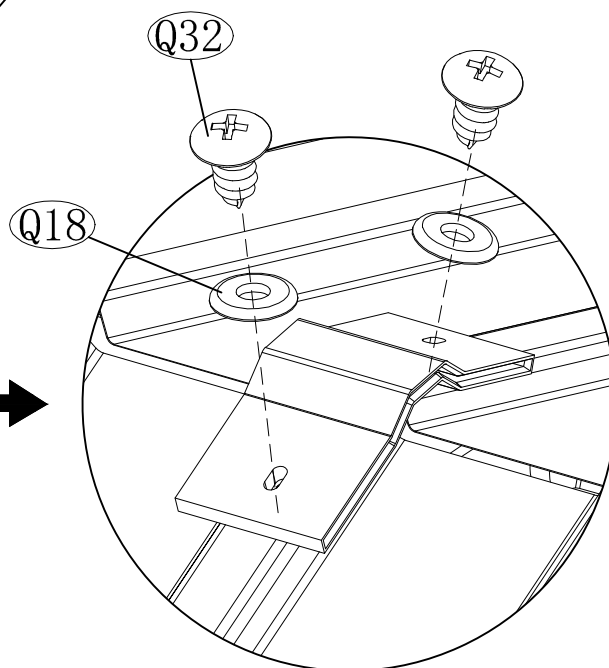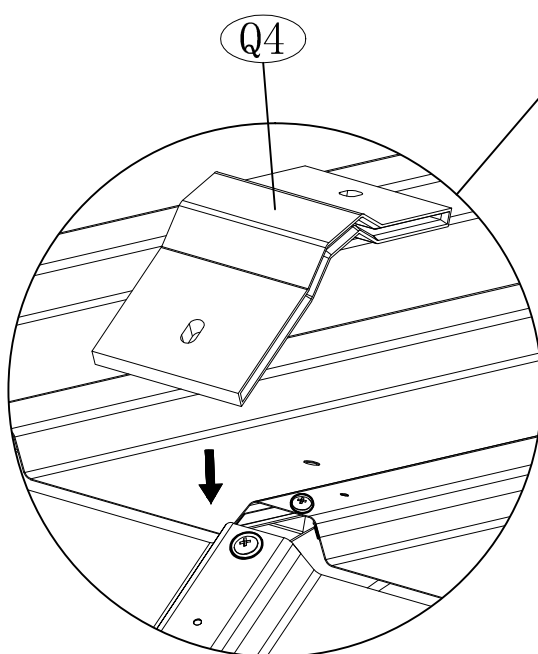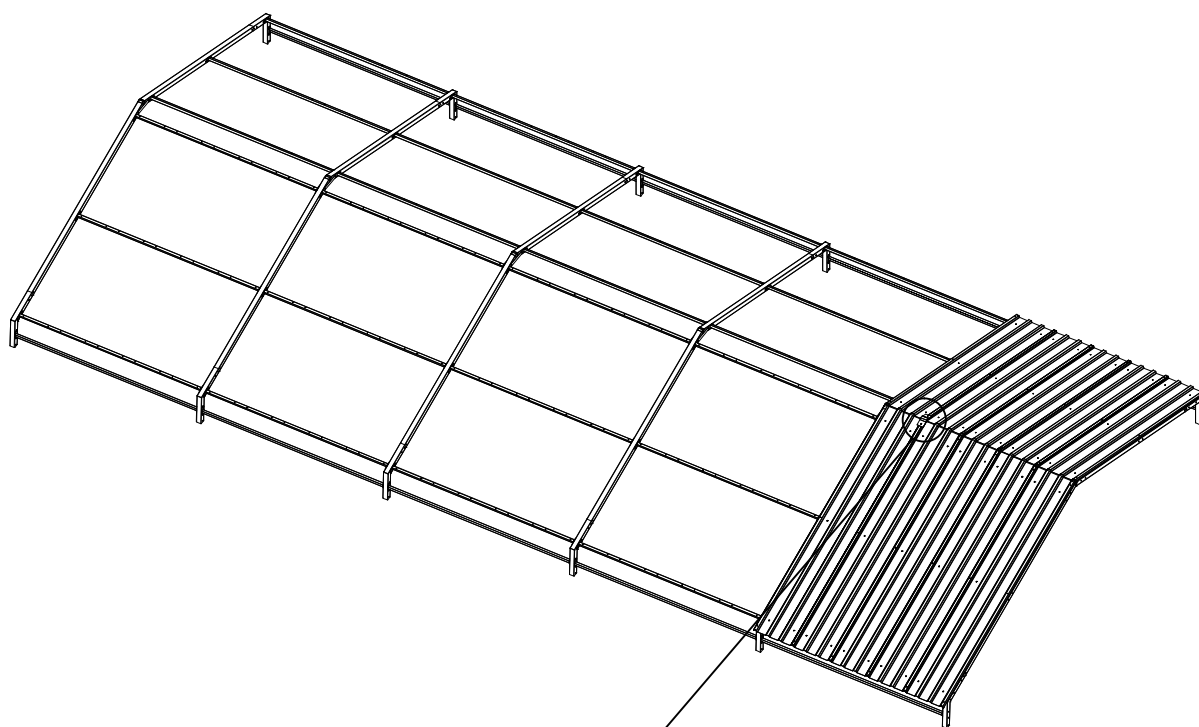


NO.	PART.	Qty.
D1	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

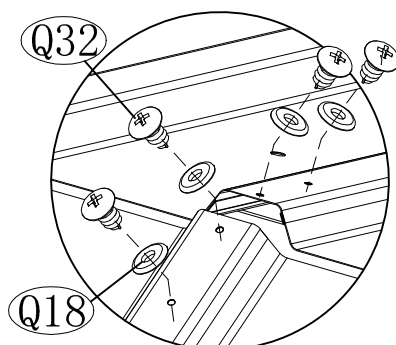


A1 x2

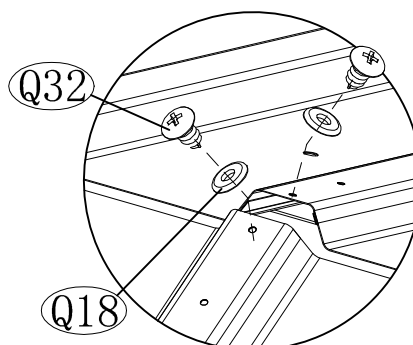


A2 x1

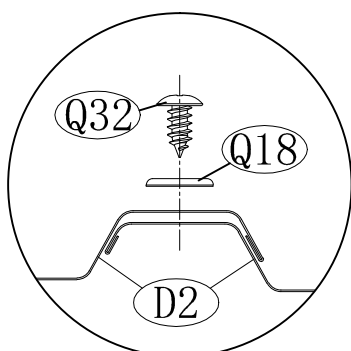



B x6

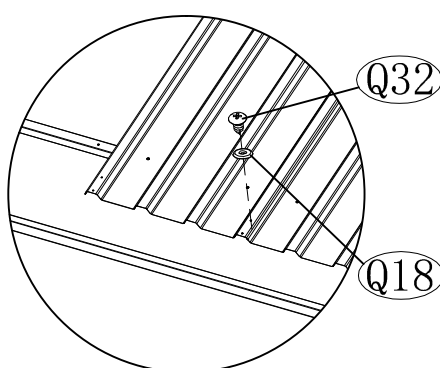

C x6

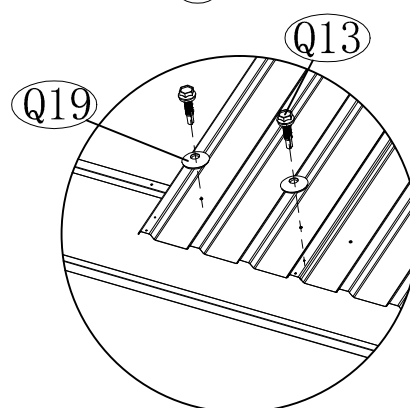


D x6





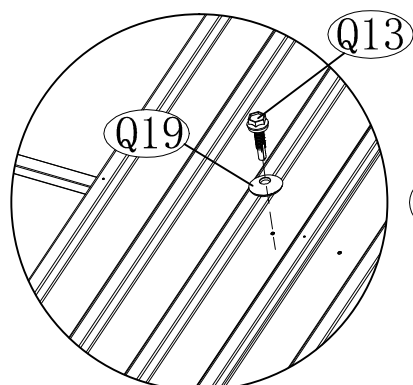
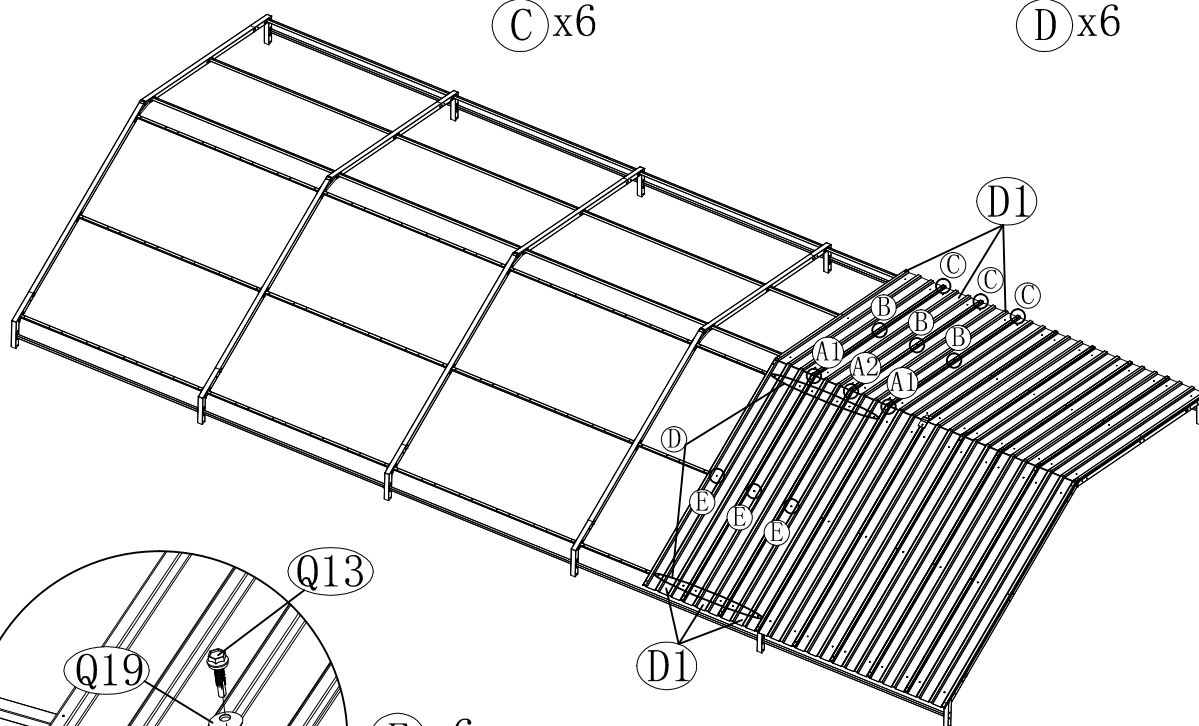


E x6

NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2



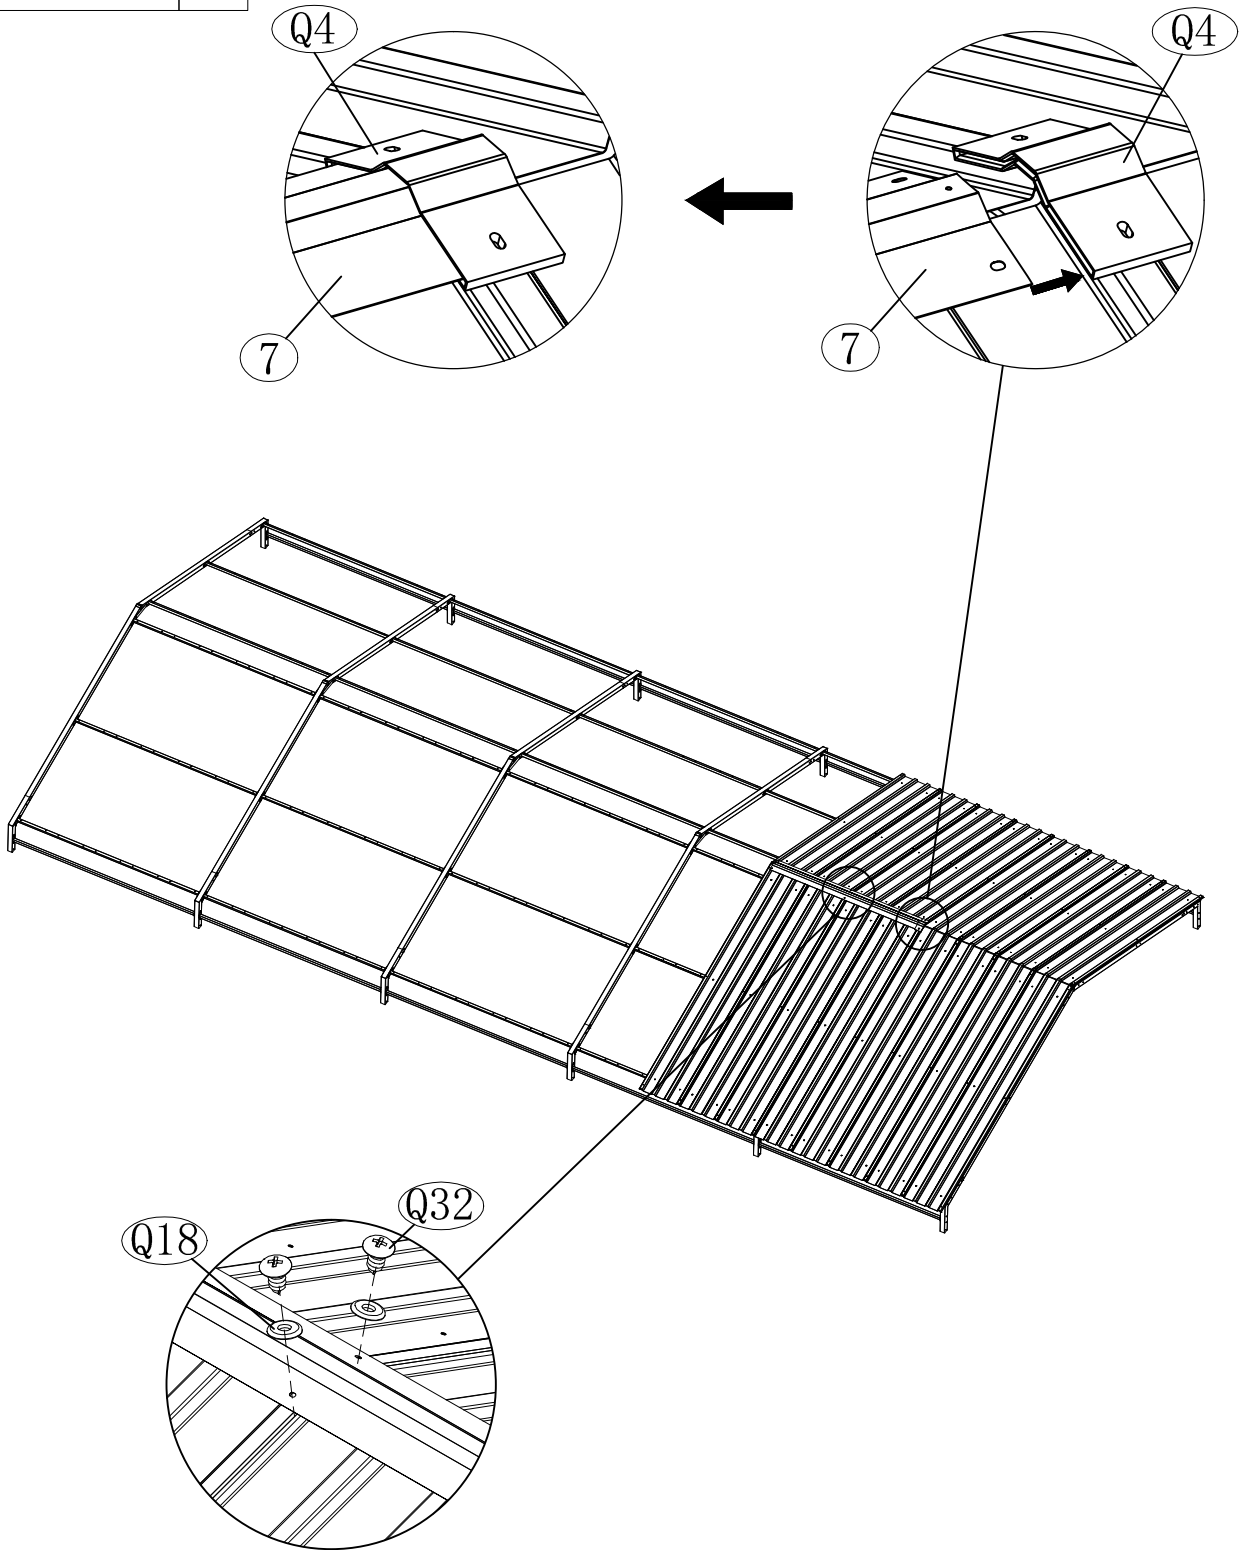


NO.	PART.	Qty.
D1	 2058mm	2
Q32	 M4x14mm	6
Q13	 M5x16mm	10
Q18		6
Q19		10

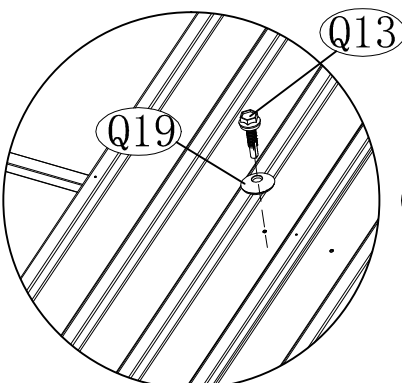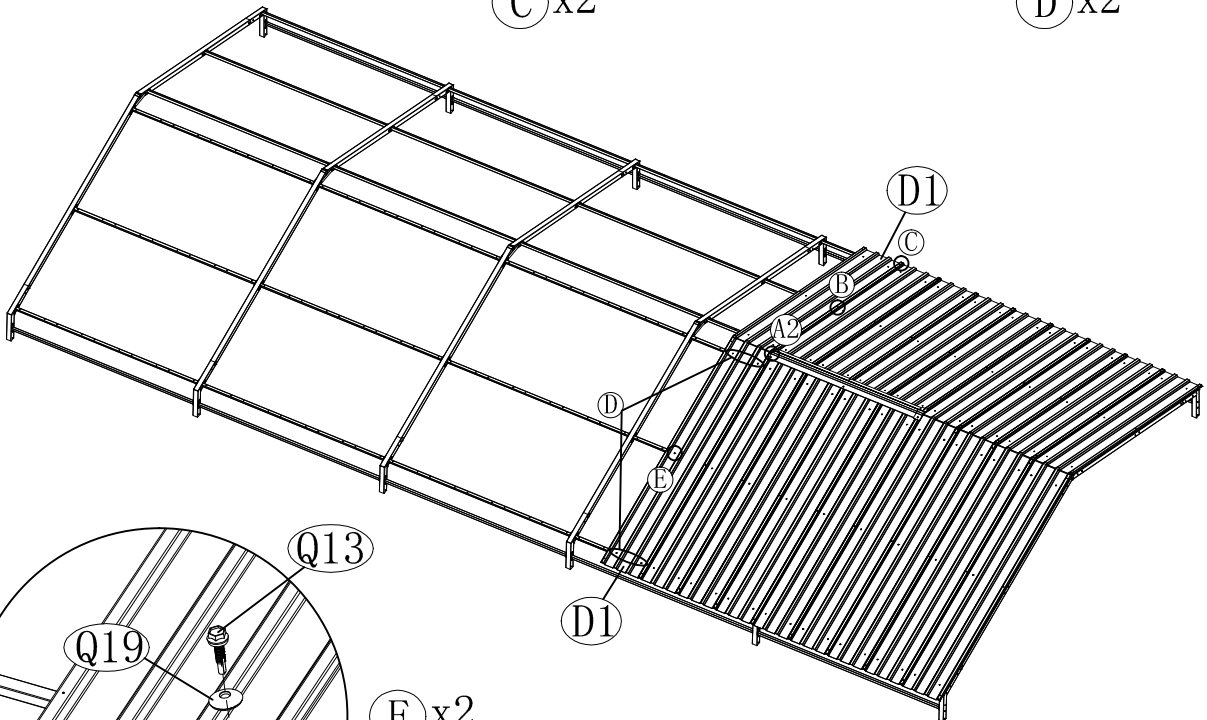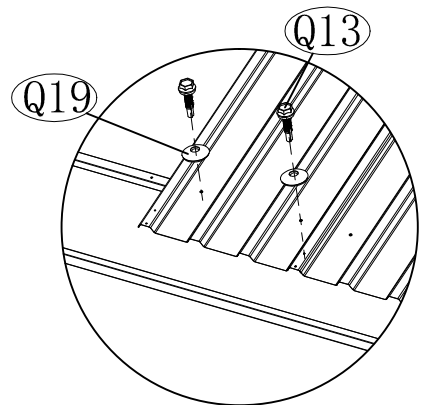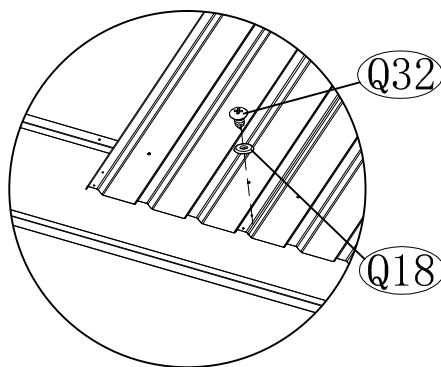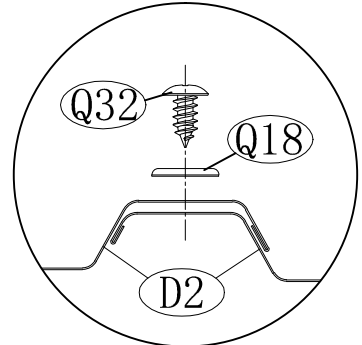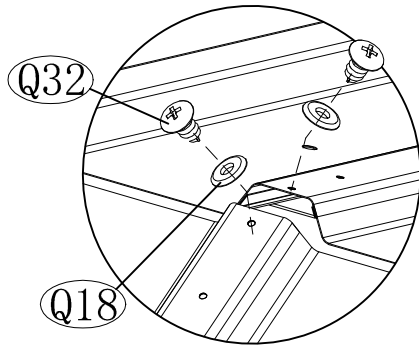


NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 8th and 9th pieces

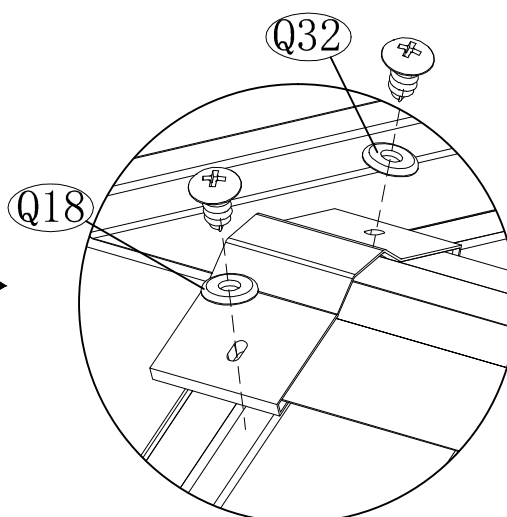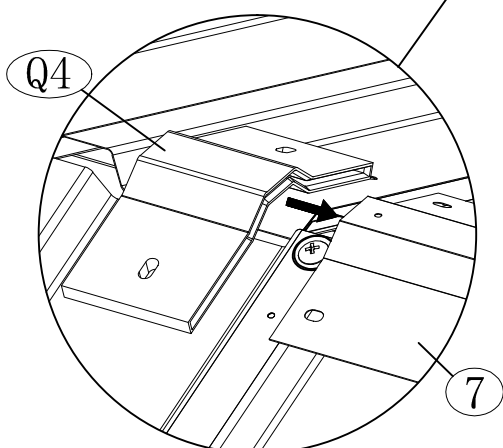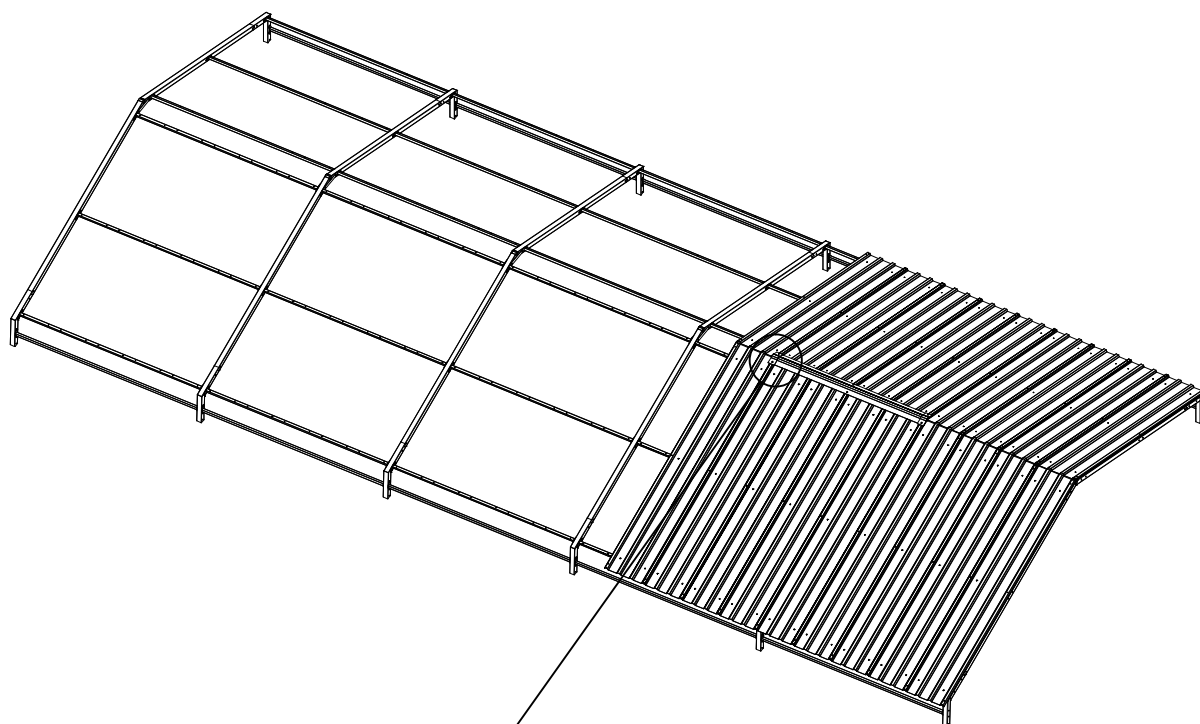


NO.	PART.	Qty.
D1	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

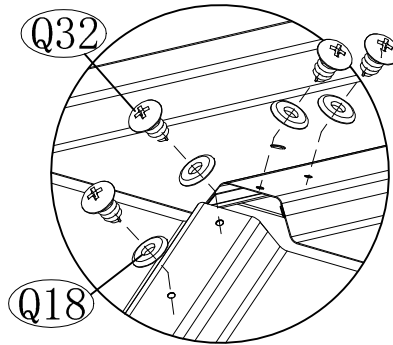


A1 x2

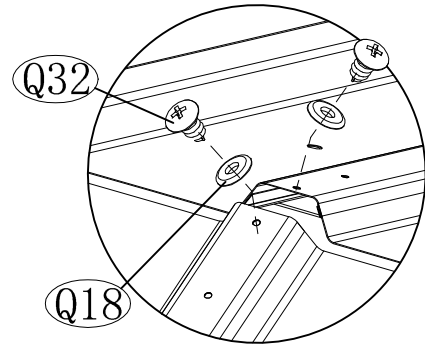


A2 x1

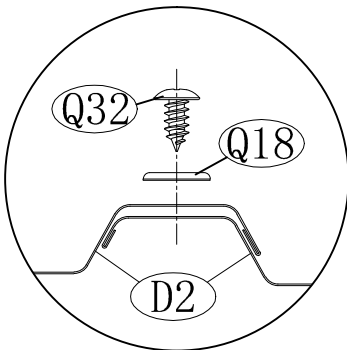



B x6

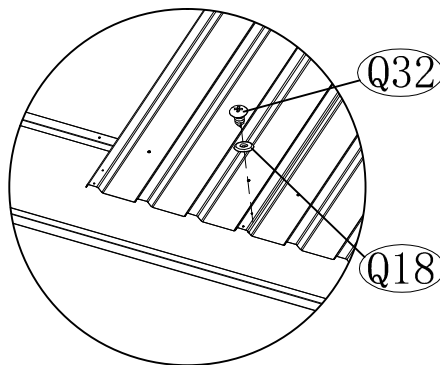

C x6

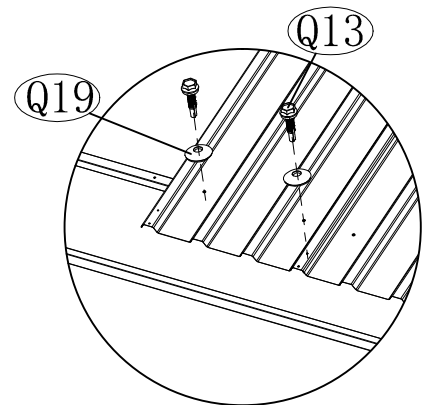


D x6

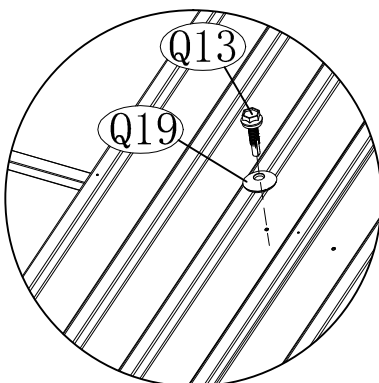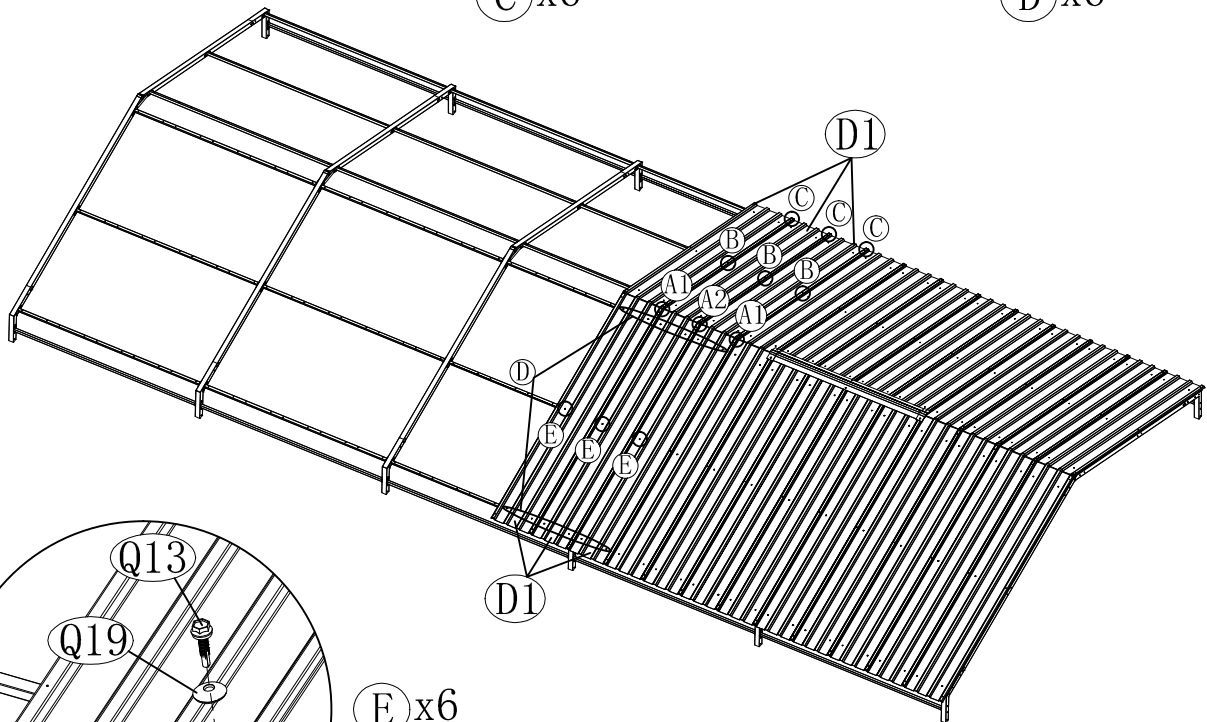


E x6


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

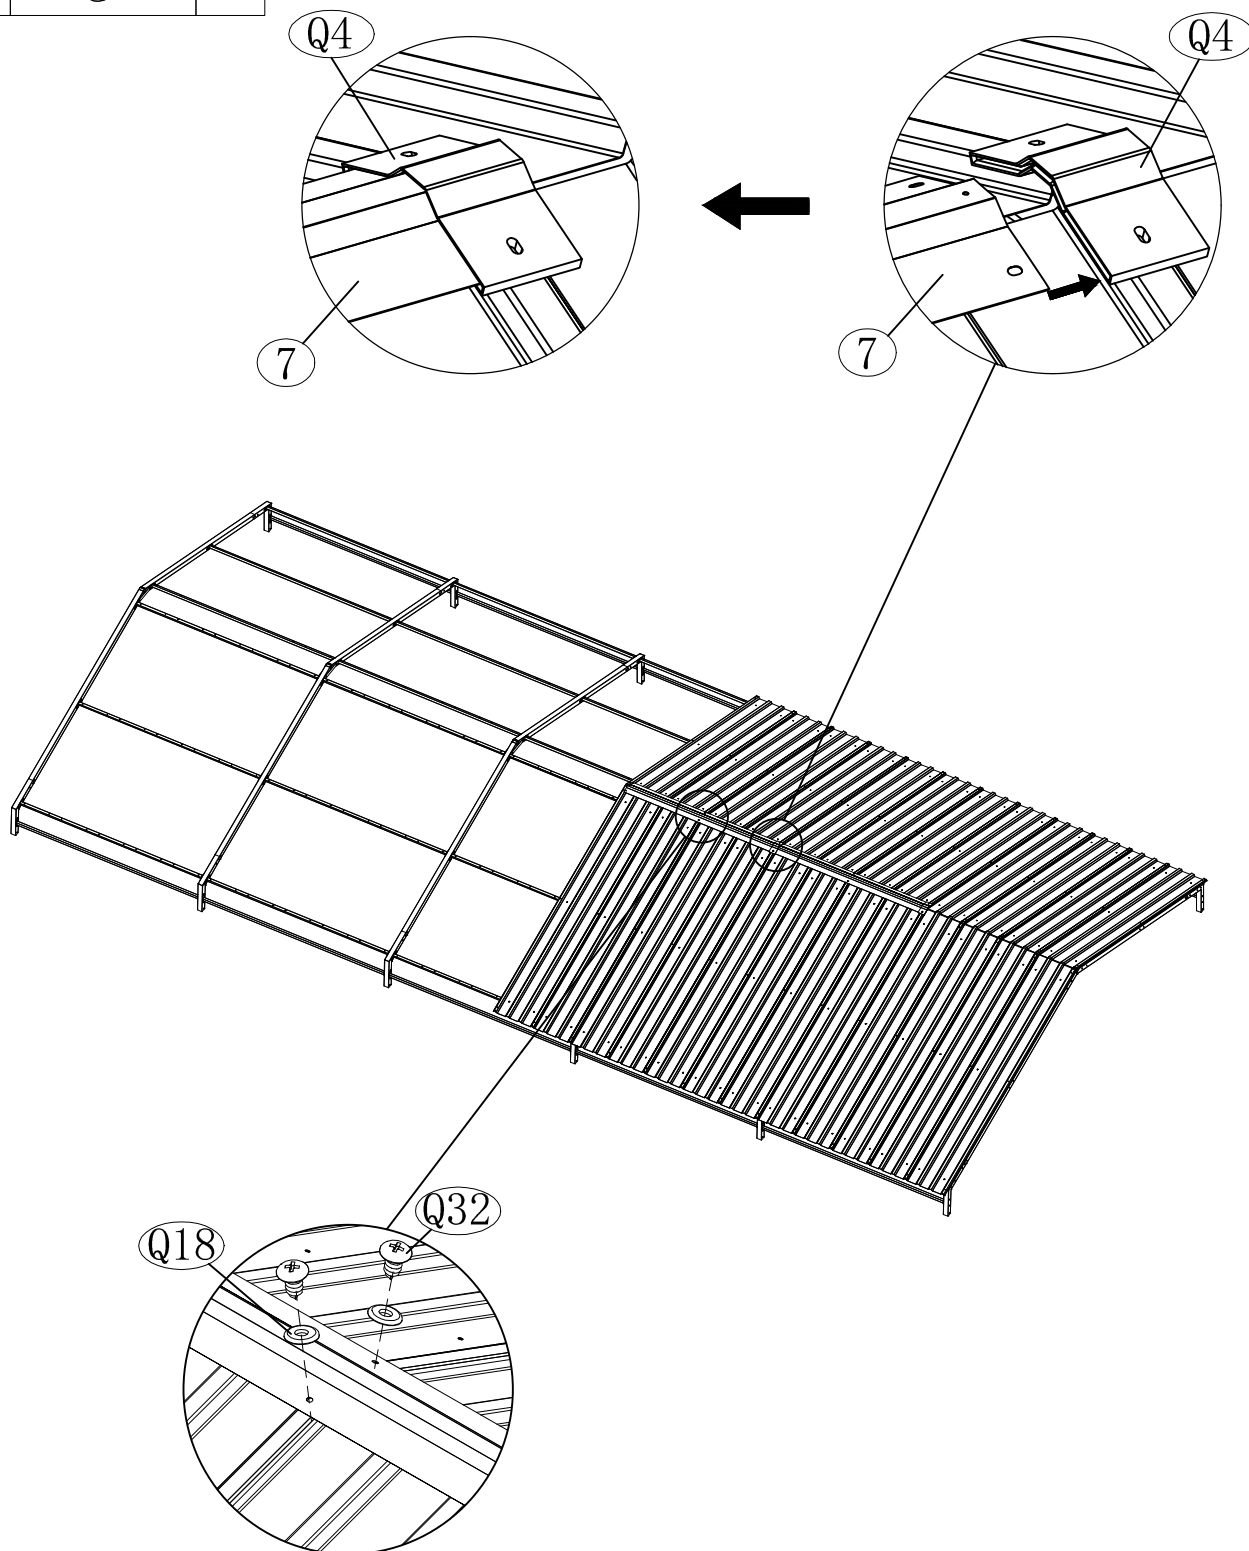


NO.	PART.	Qty.
D1	 2058mm	2
Q32	 M4x14mm	6
Q13	 M5x16mm	10
Q18		6
Q19		10

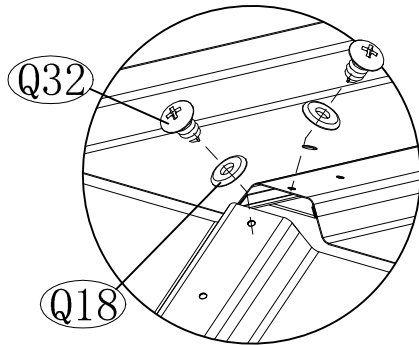


A2 x1

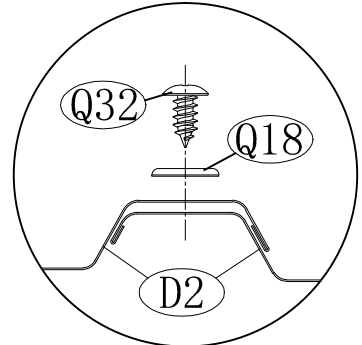



B x2

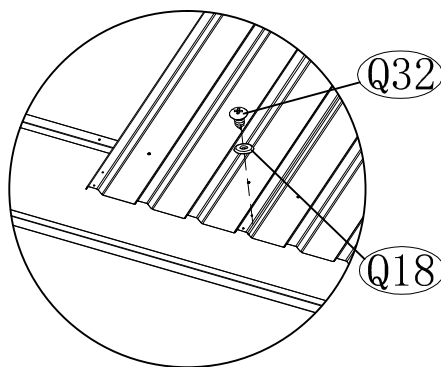

C x2

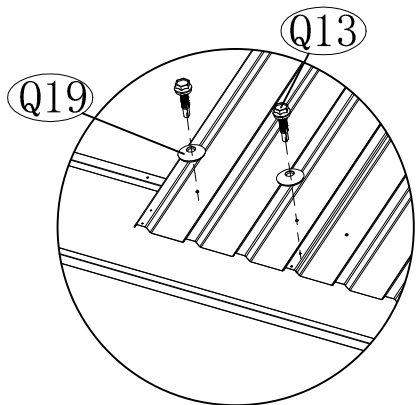



D x2

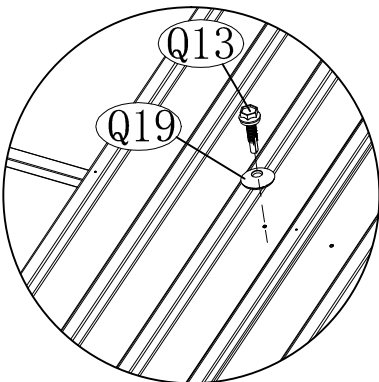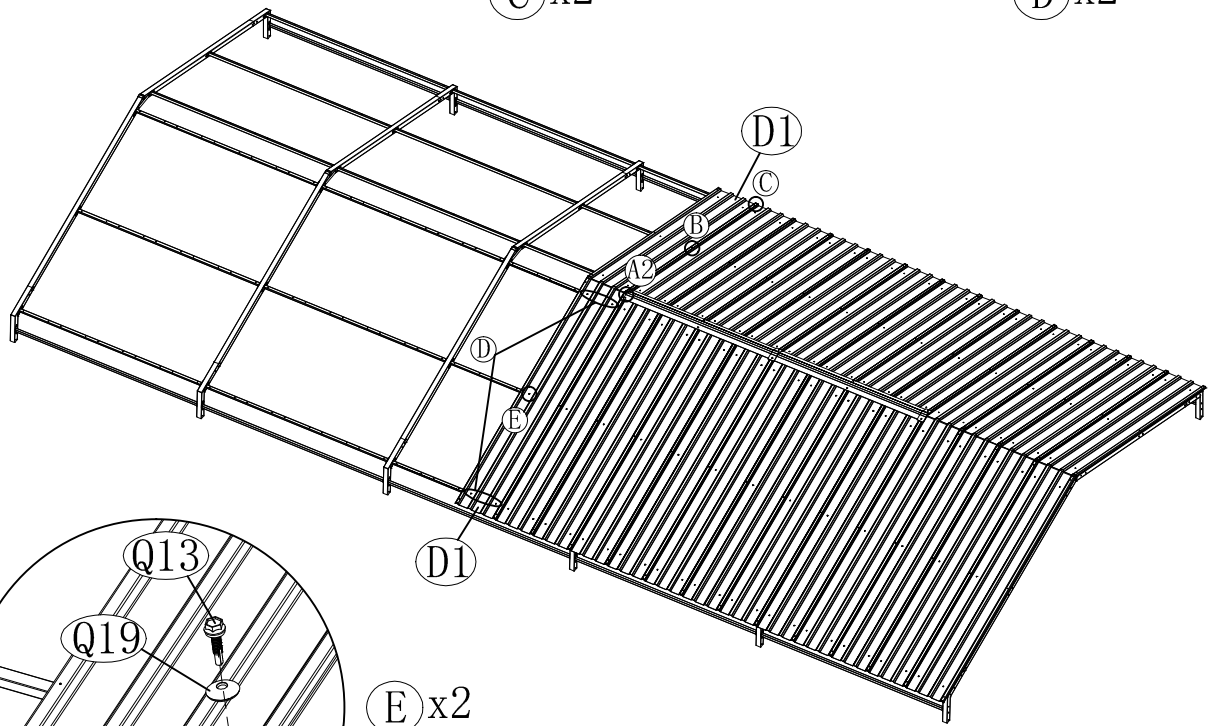


E x2

NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 12th and 13th pieces

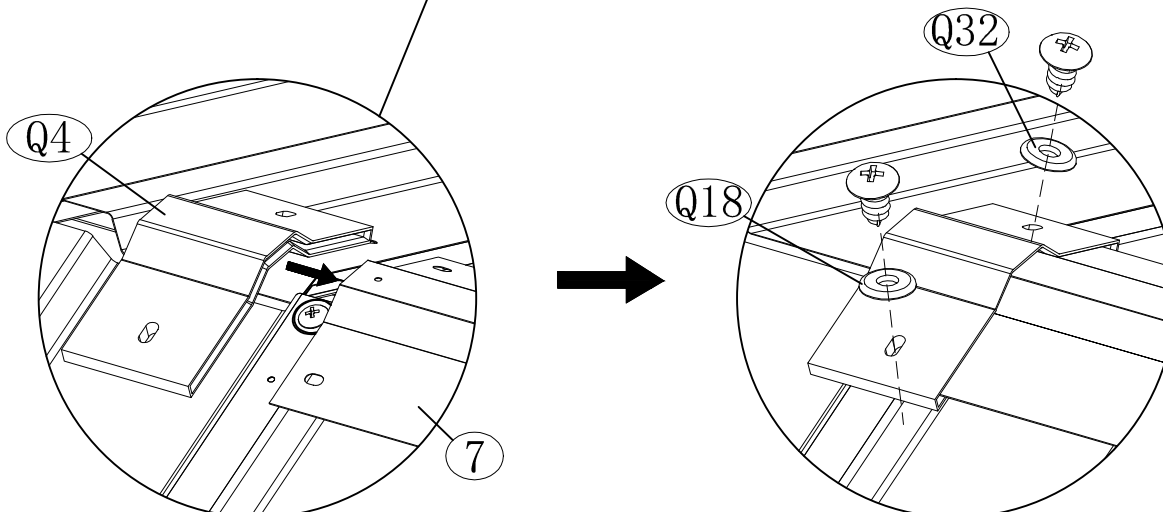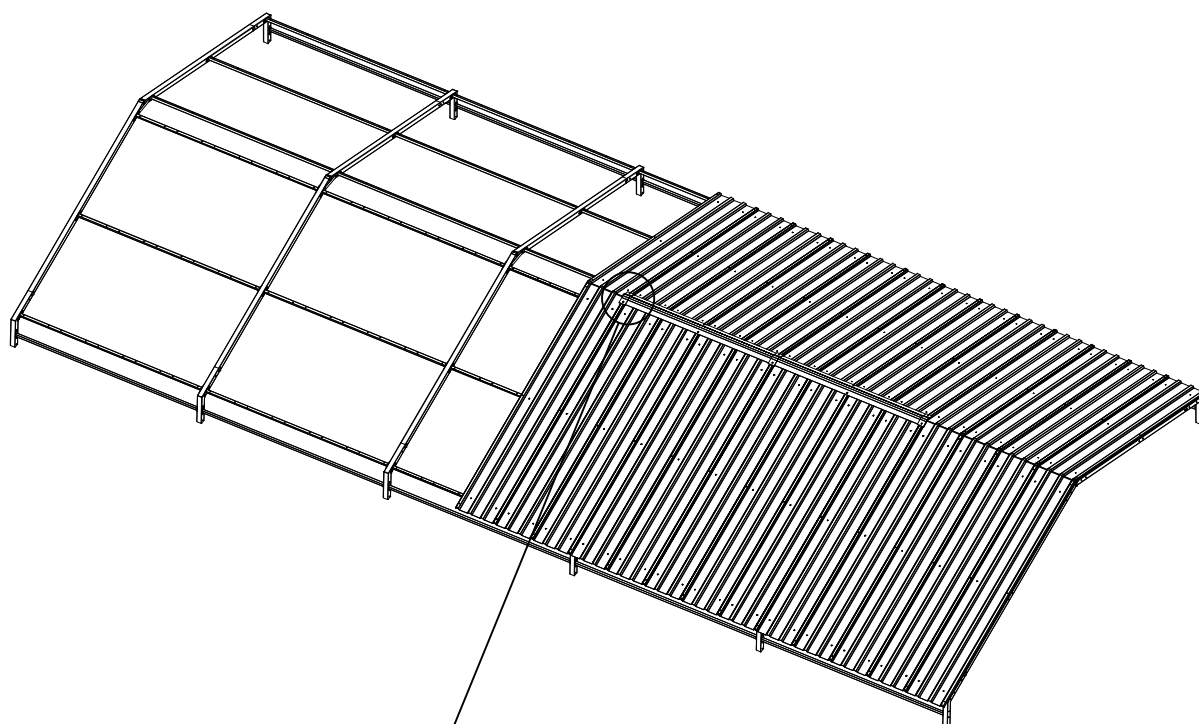


NO.	PART.	Qty.
D1	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

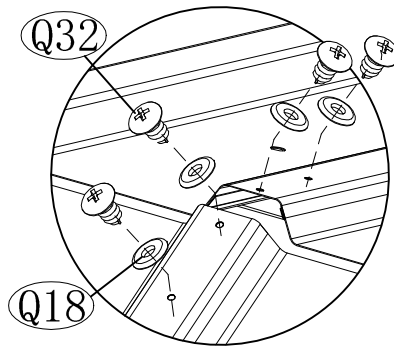


A1 x2

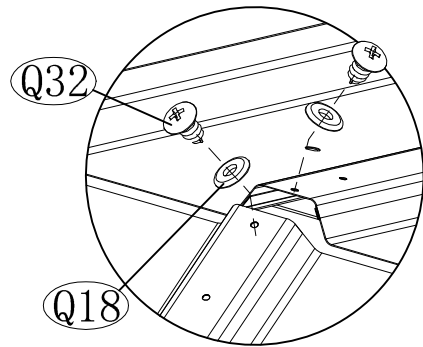


A2 x1

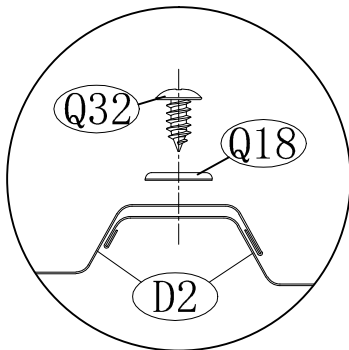



B x6

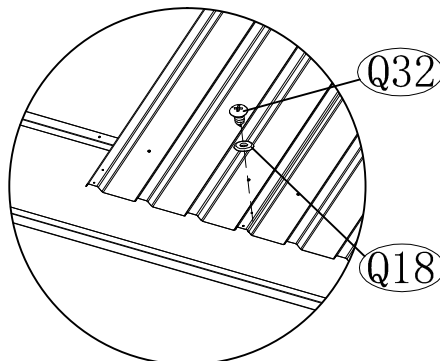

C x6

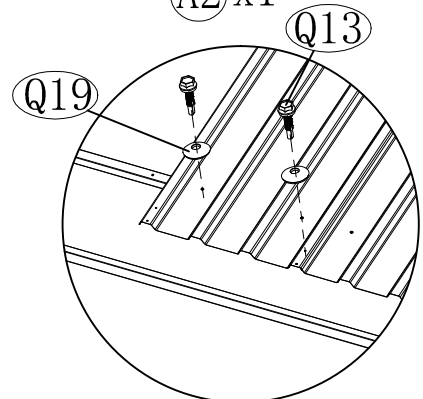


D x6

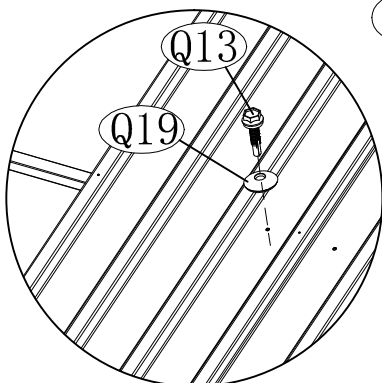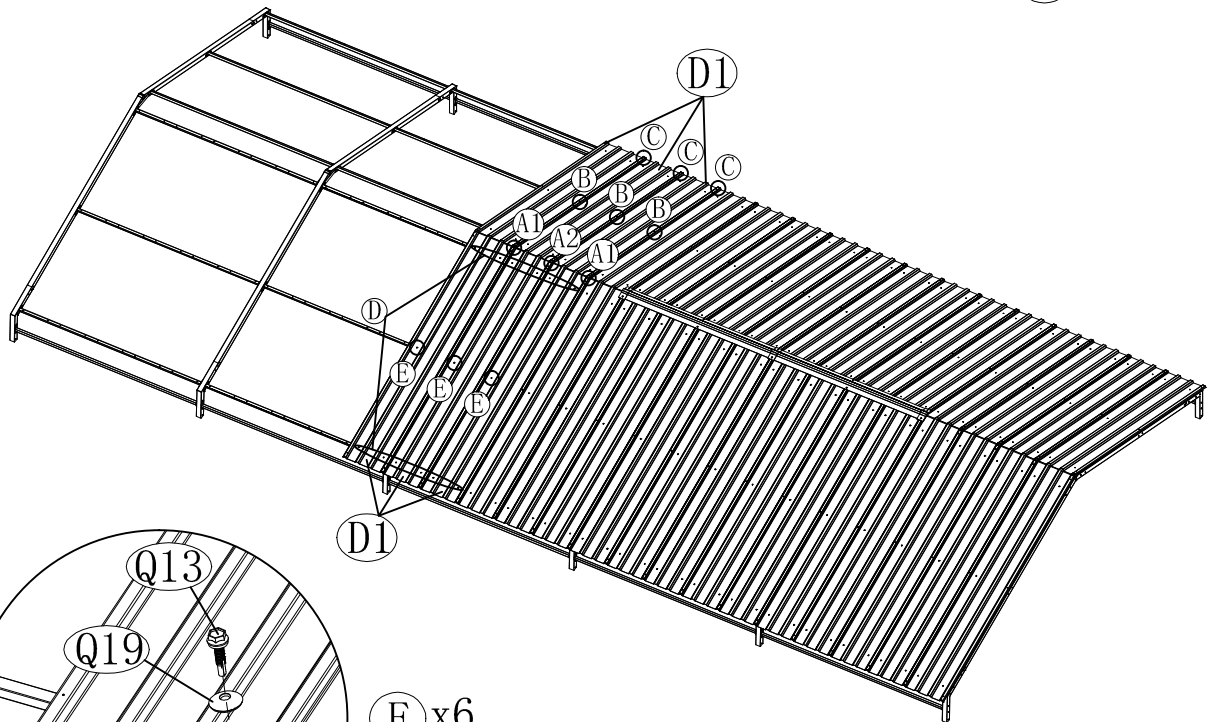


E x6


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

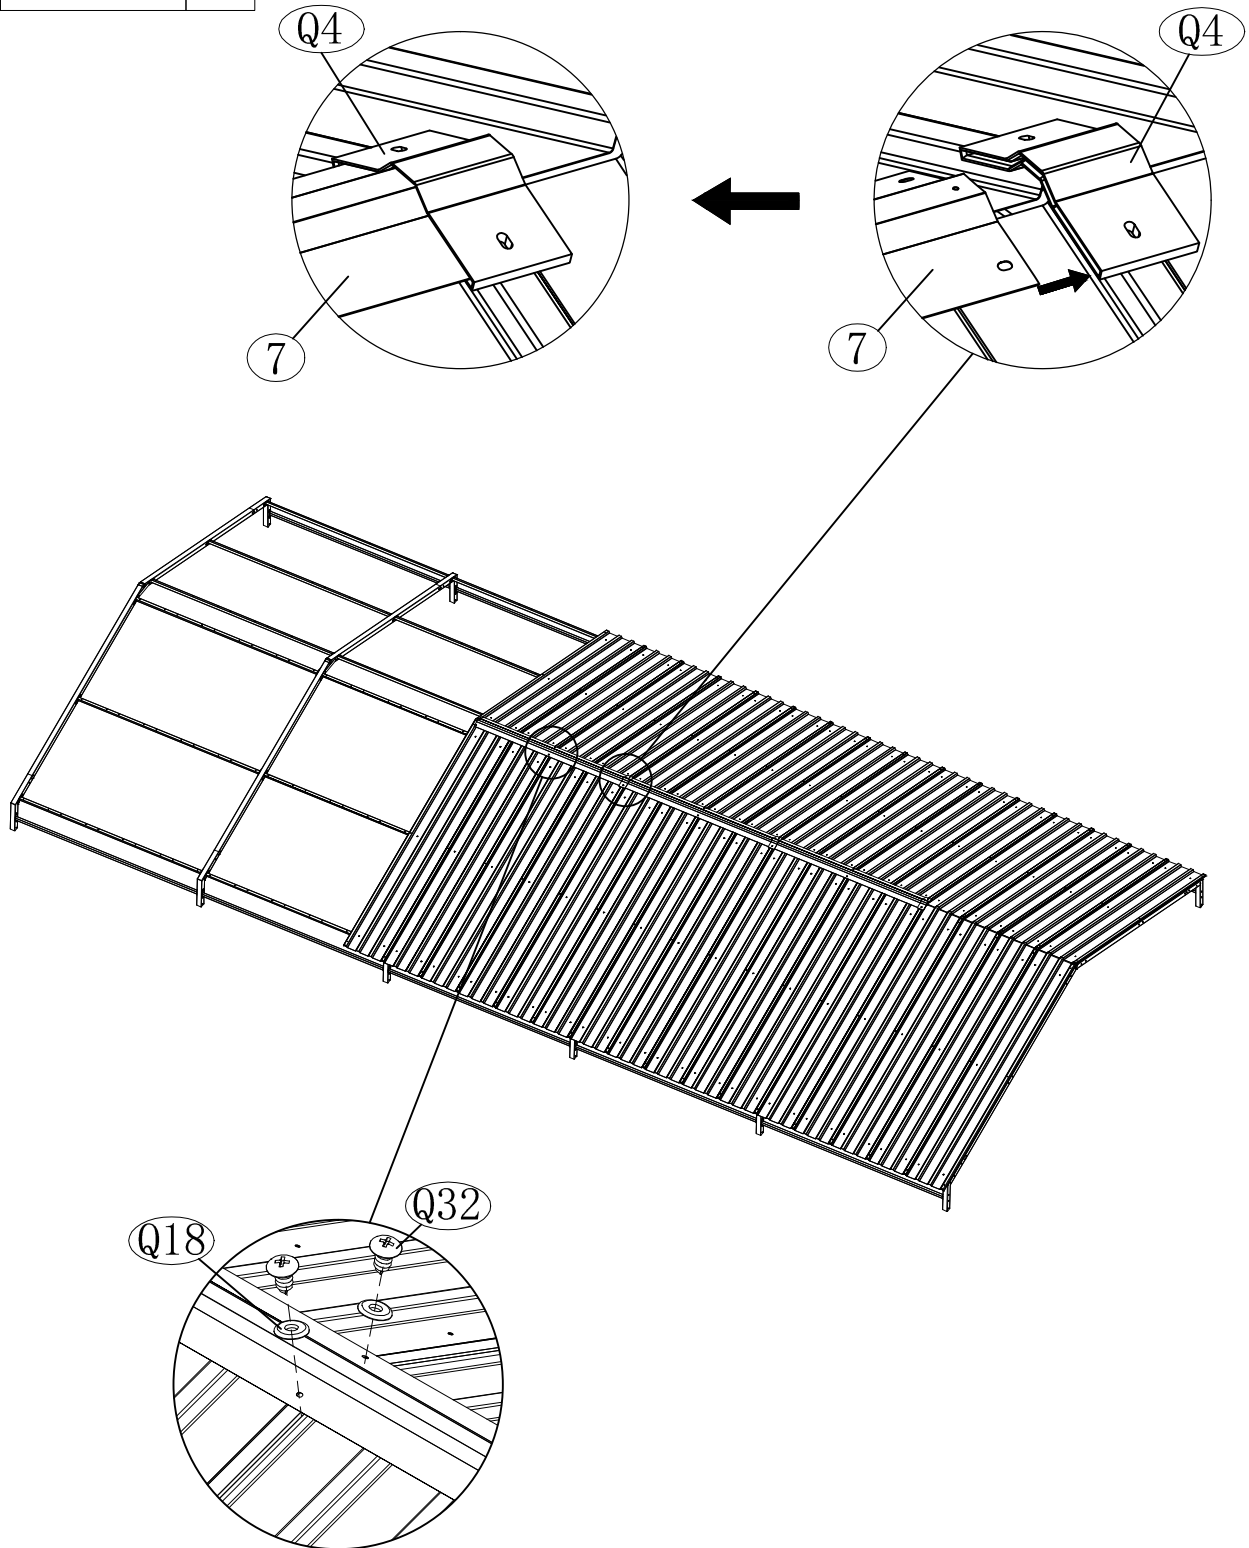


NO.	PART.	Qty.
D1	 2058mm	2
Q32	 M4x14mm	6
Q13	 M5x16mm	10
Q18		6
Q19		10

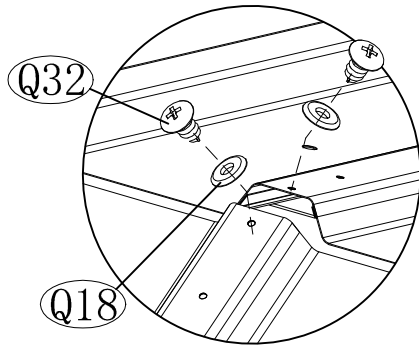


A2 x1

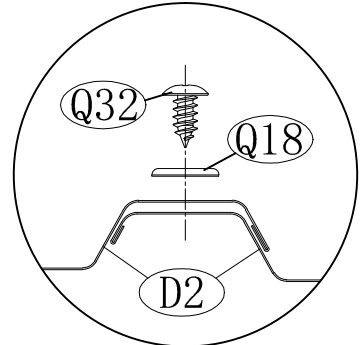



B x2

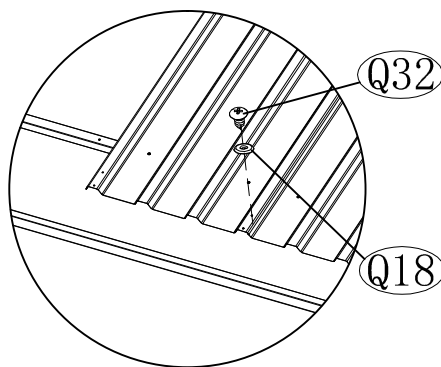

C x2

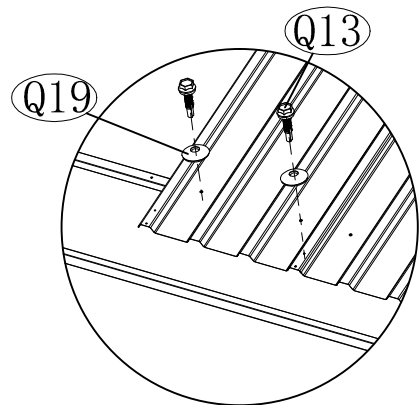



D x2

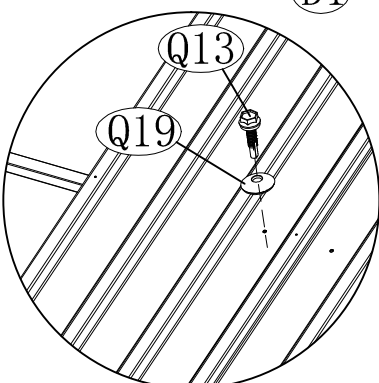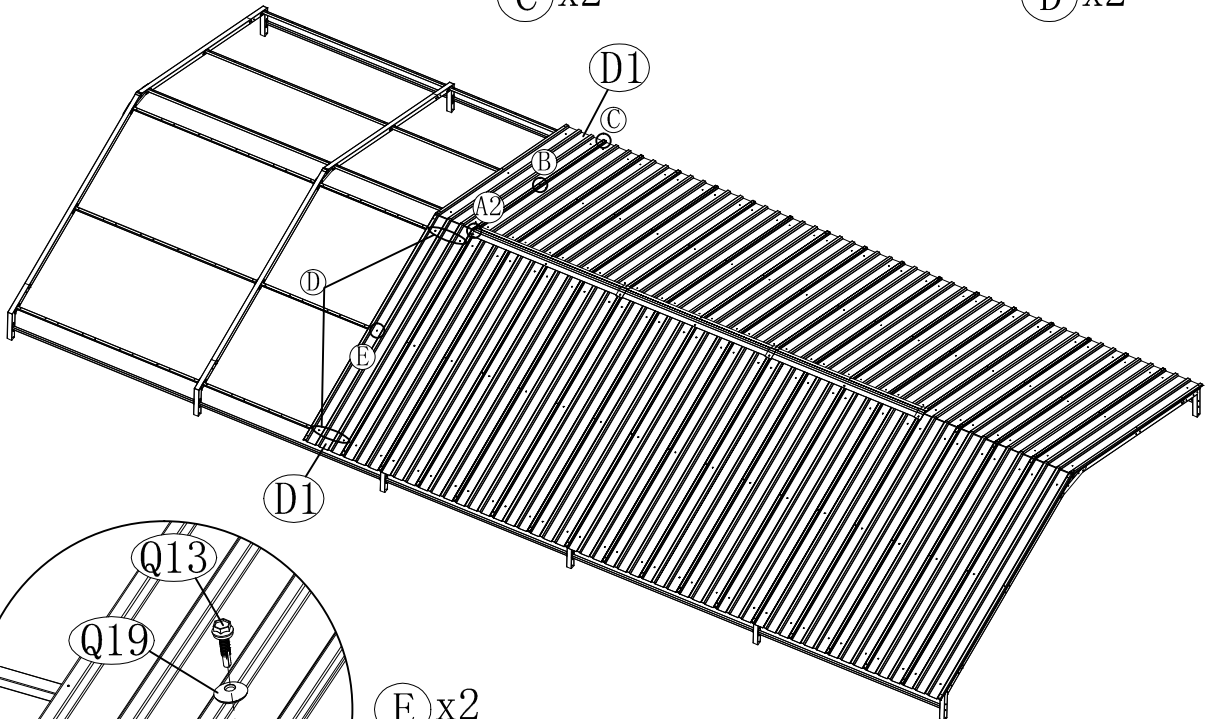


E x2

Nº.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 16th and 17th pieces

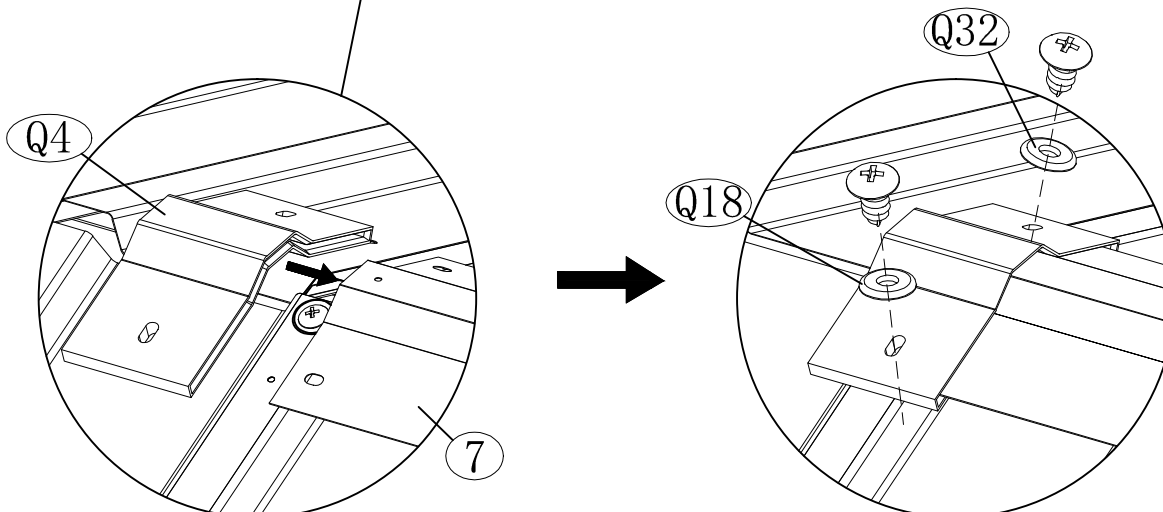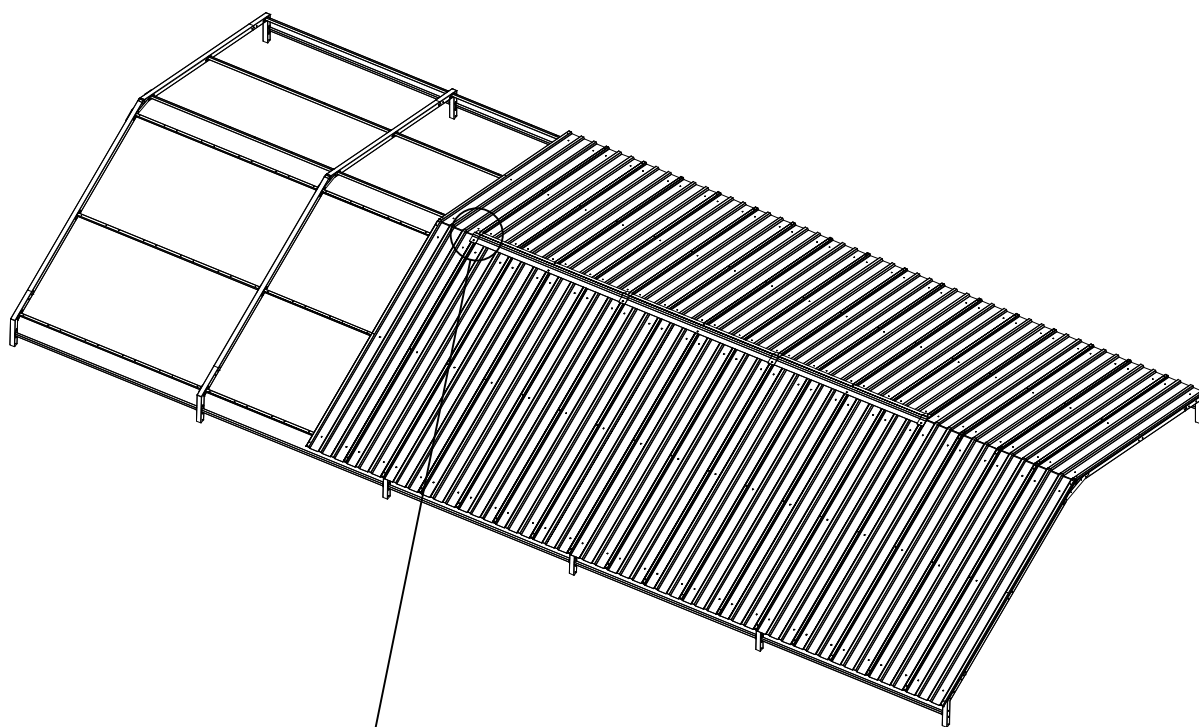


NO.	PART.	Qty.
D1	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

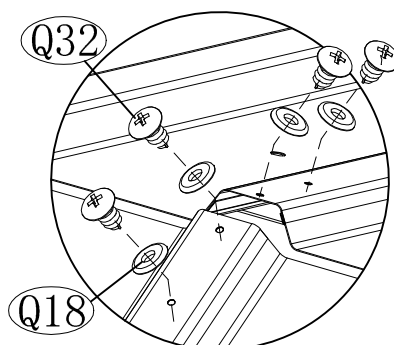


A1 x2

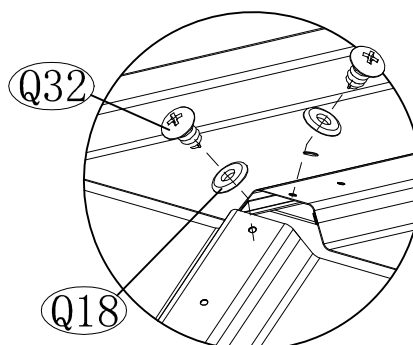


A2 x1

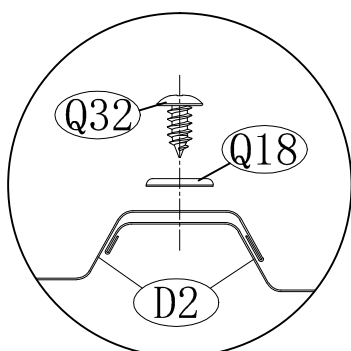



B x6

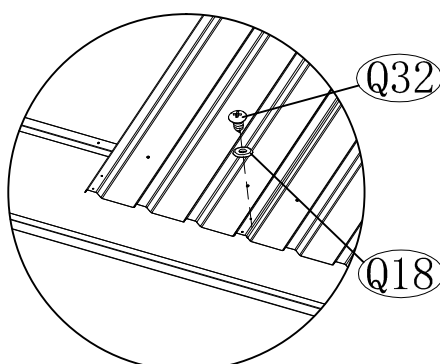

C x6

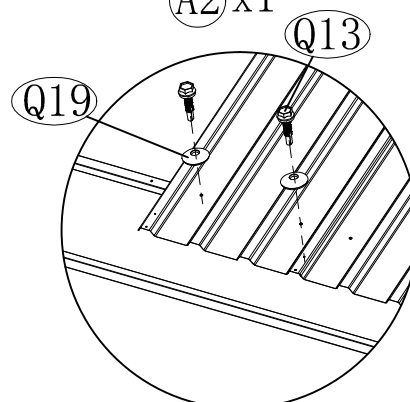


D x6

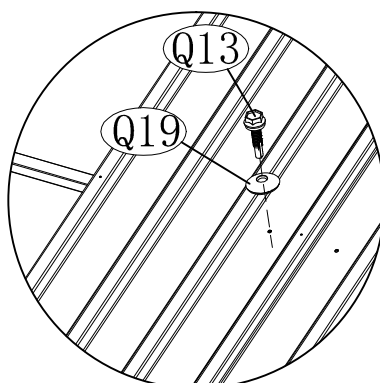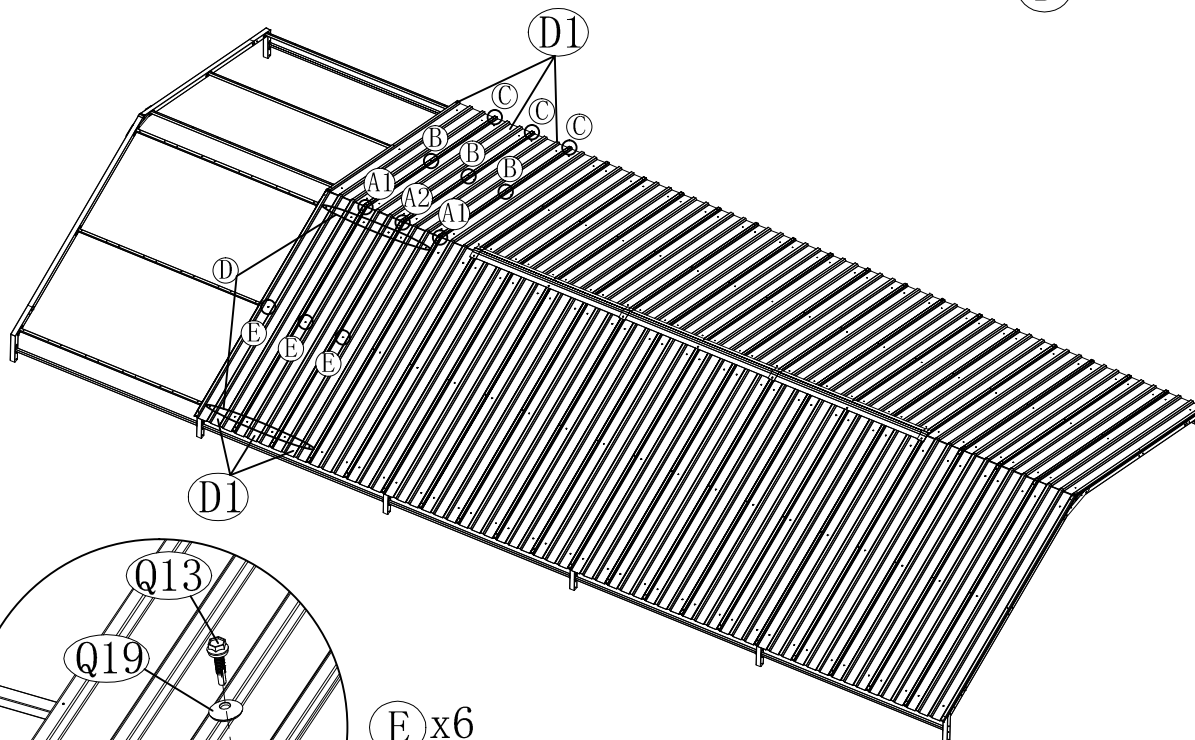


E x6


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

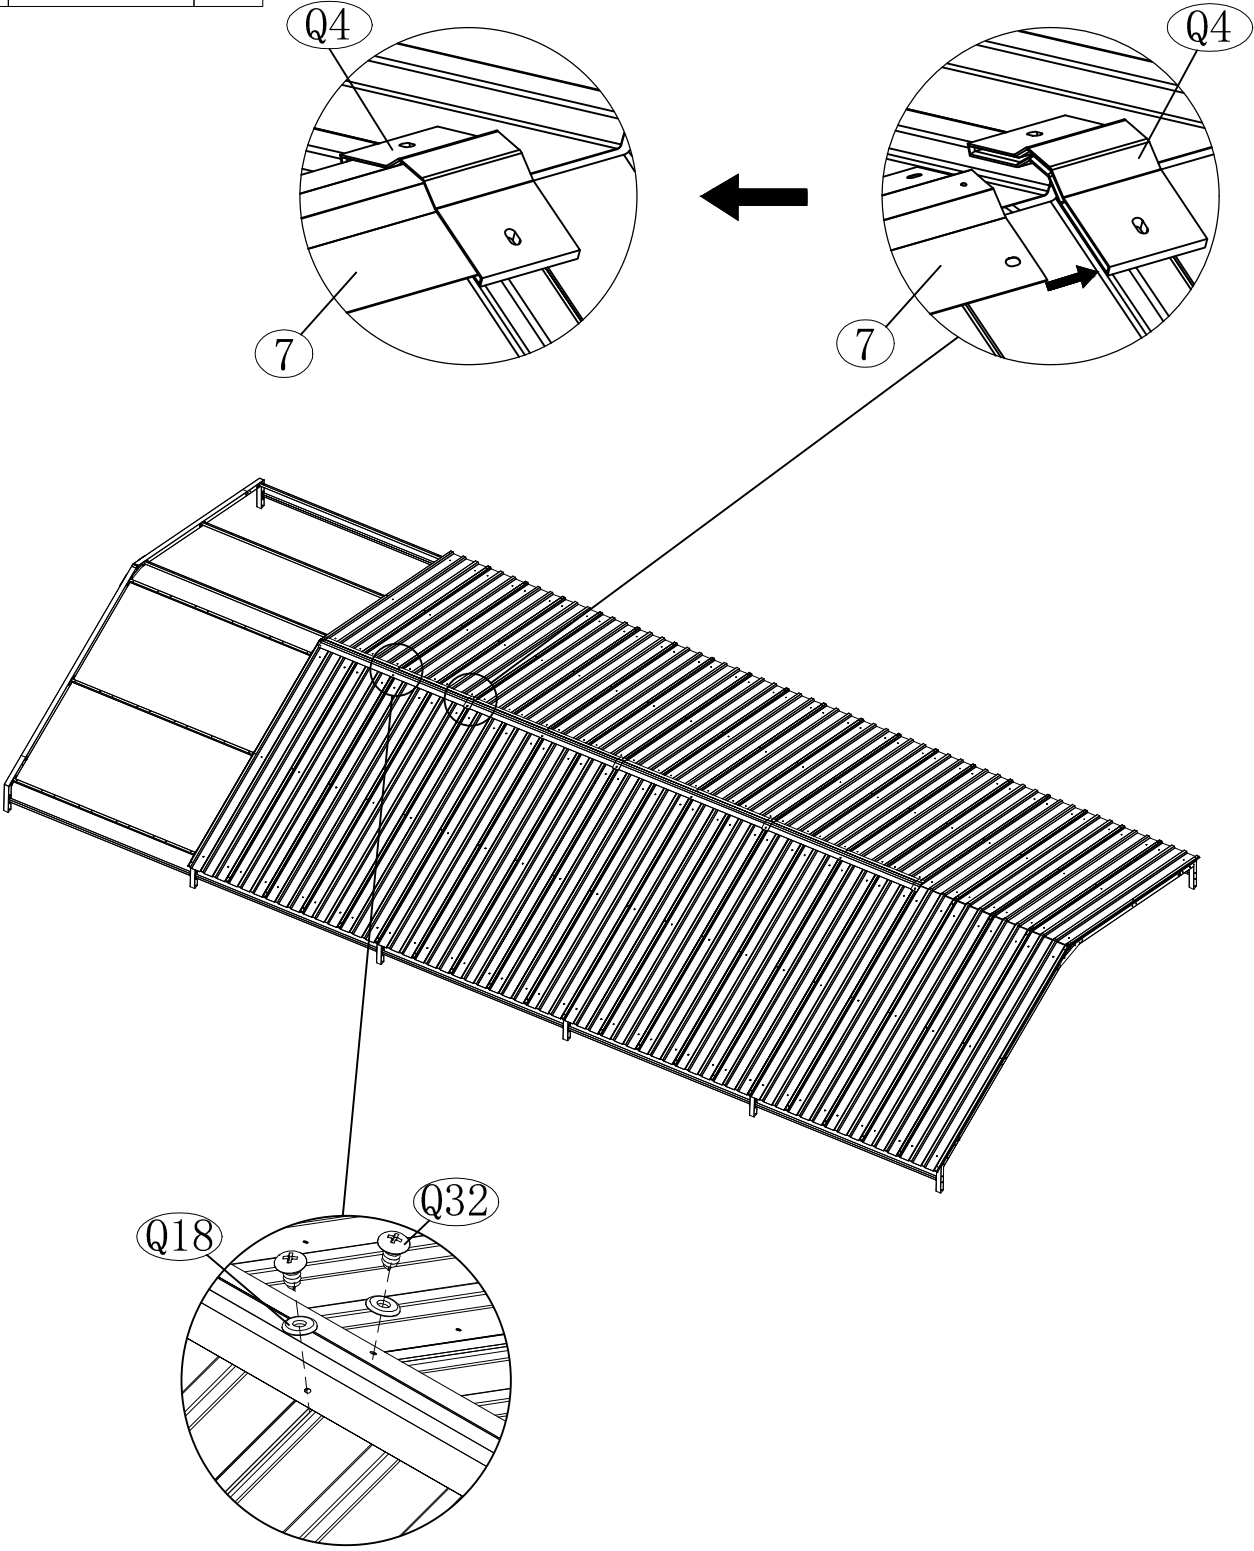


NO.	PART.	Qty.
D1	 2058mm	2
Q32	 M4x14mm	6
Q13	 M5x16mm	10
Q18		6
Q19		10

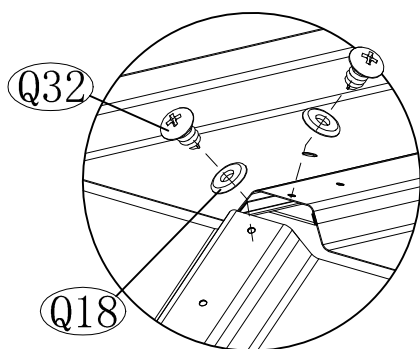


A2 x1

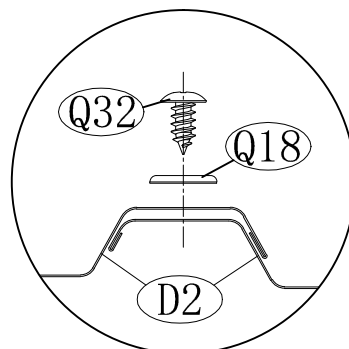



B x2

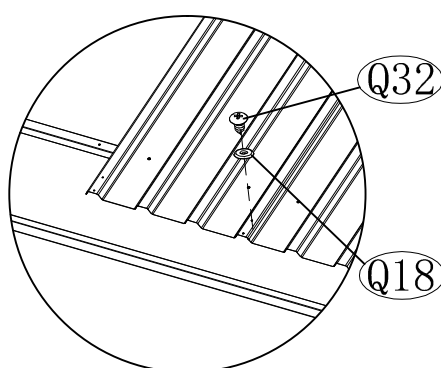

C x2

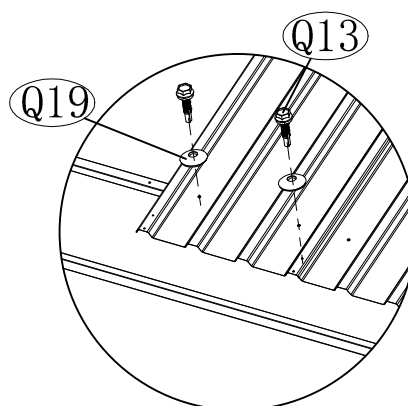



D x2

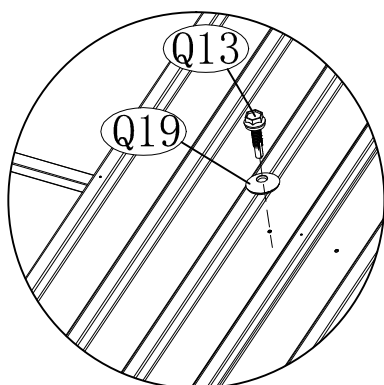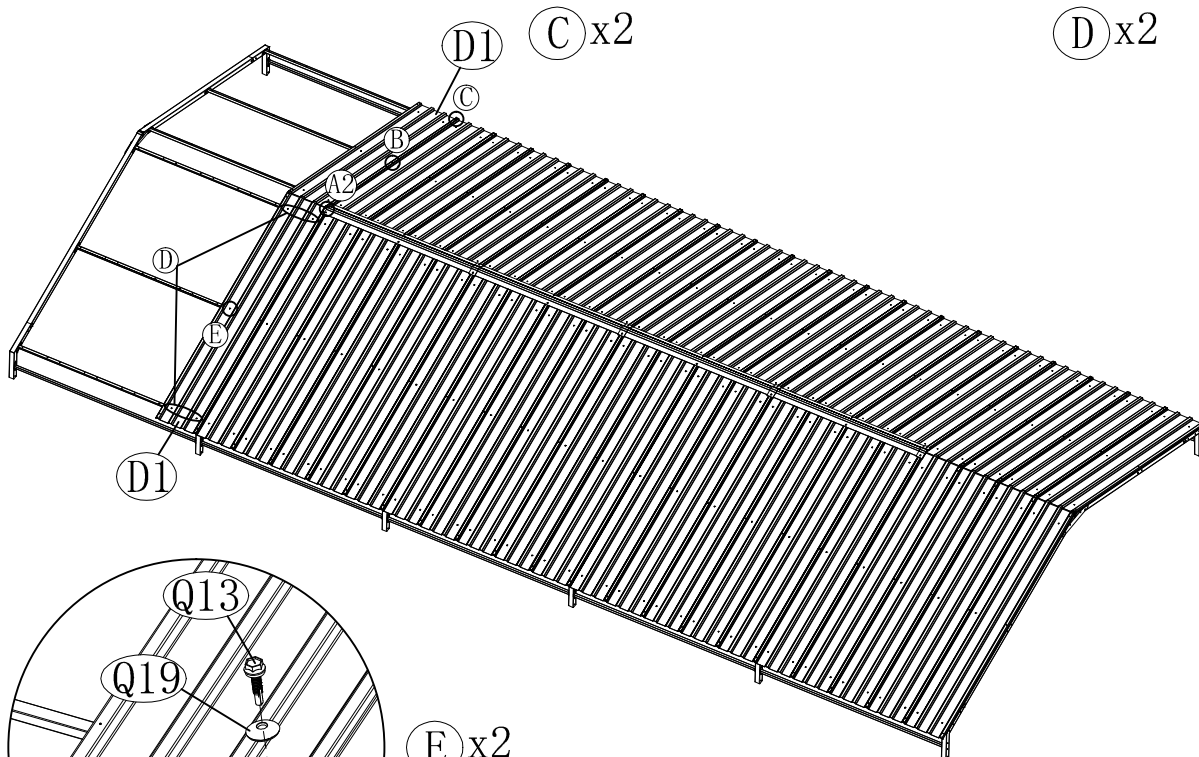


E x2

Nº.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 20th and 21th pieces

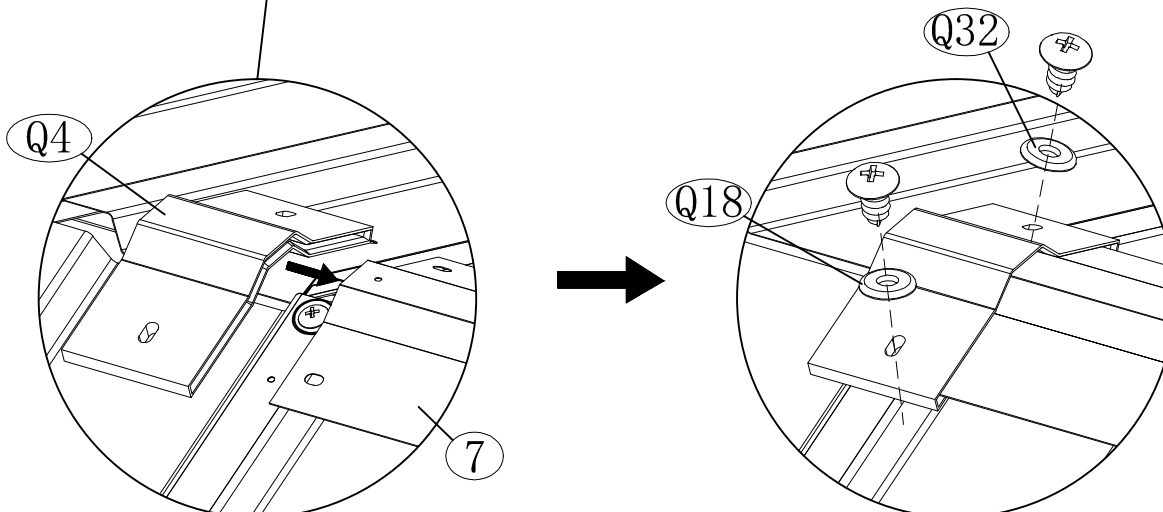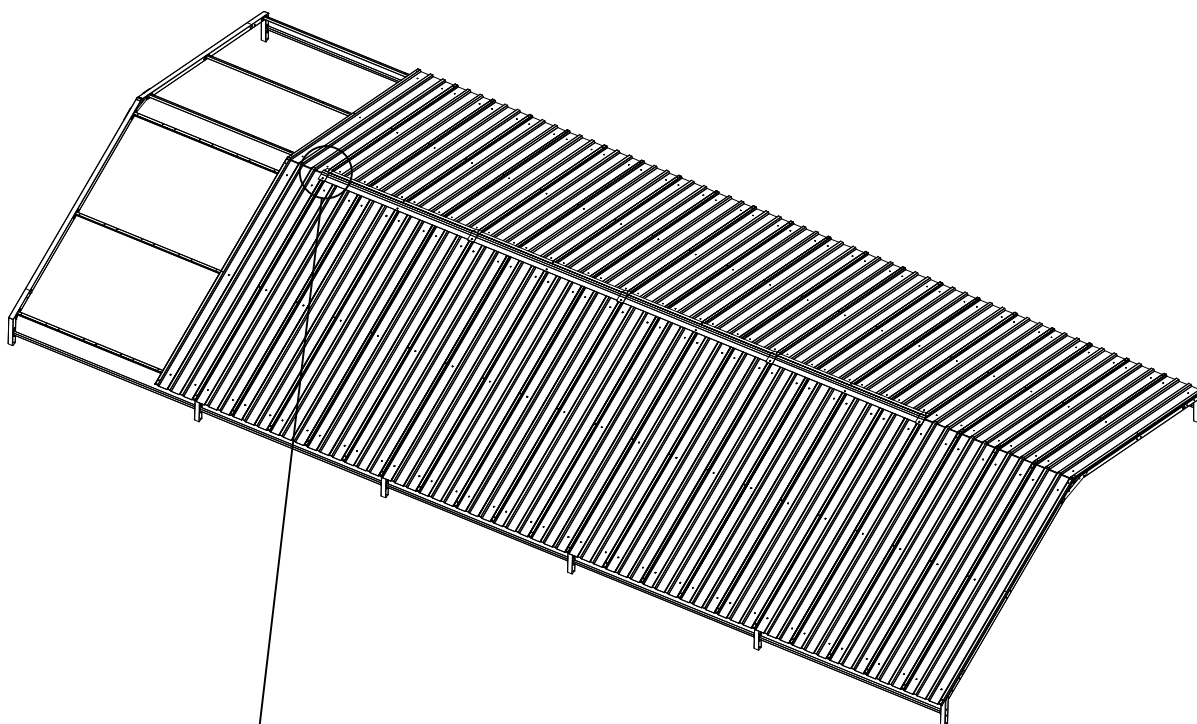


NO.	PART.	Qty.
D1	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

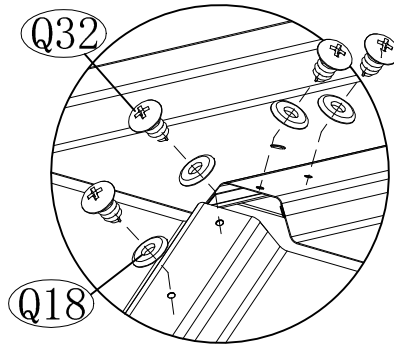


A1 x2

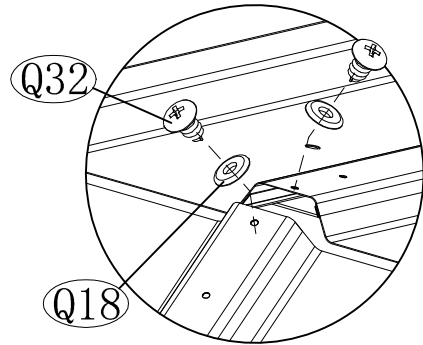


A2 x1

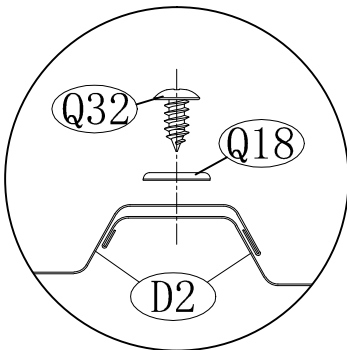



B x6

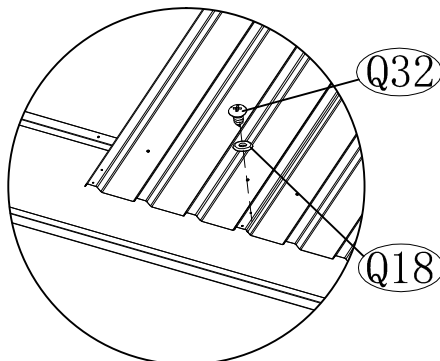

C x6

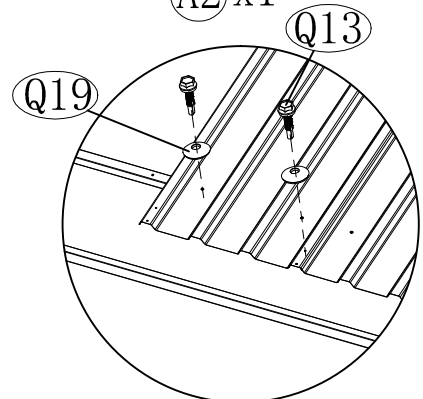


D x6

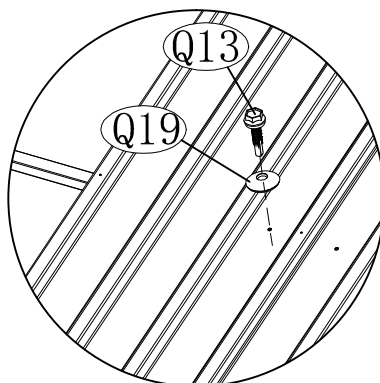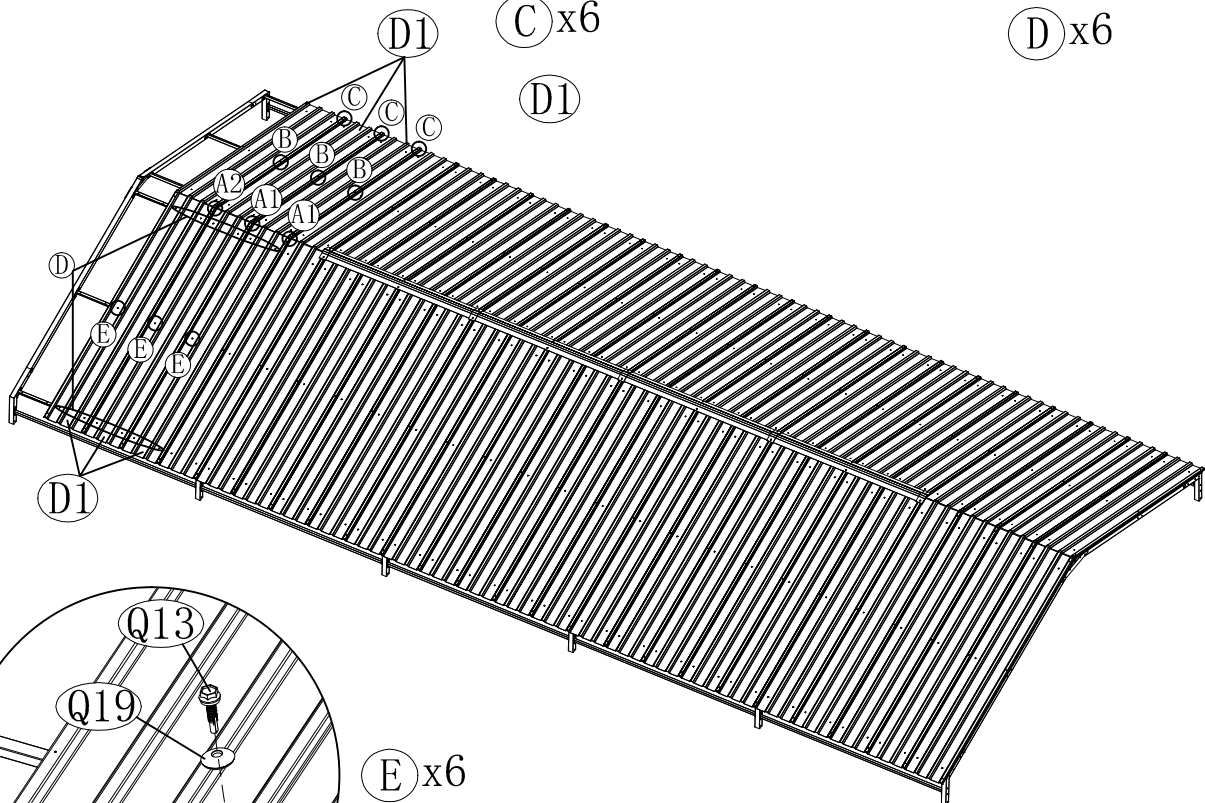


E x6


NO.	PART.	Qty.
D1	 2058mm	2
Q32	 M4x14mm	8
Q13	 M5x16mm	10
Q18		8
Q19		10

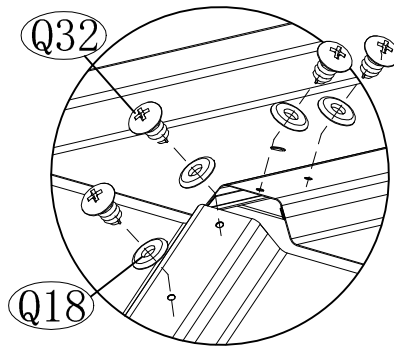


A1 x1

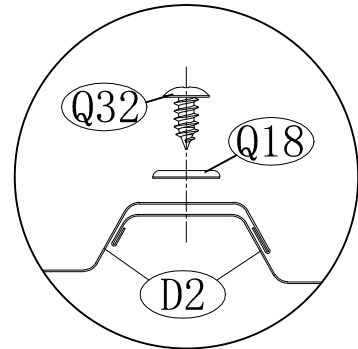



B x2

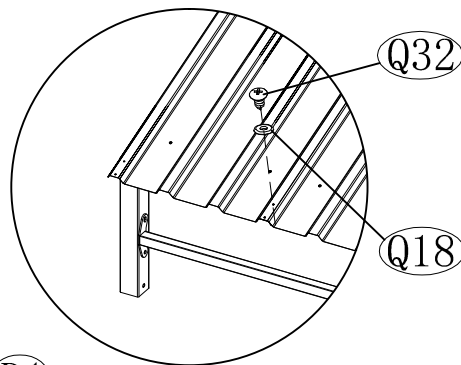

C x2

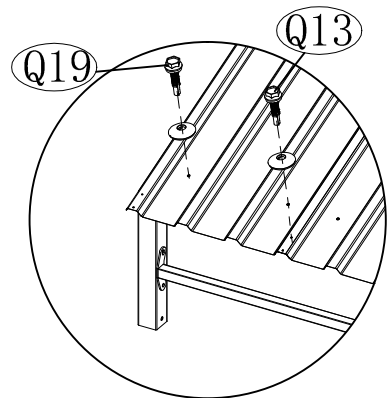


D x2

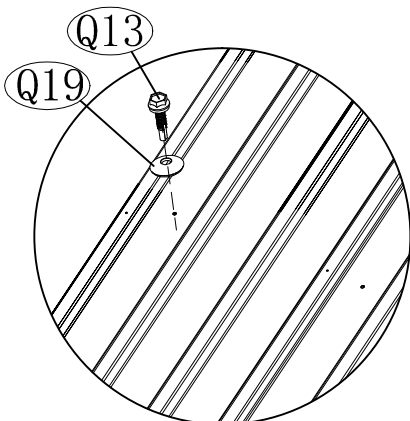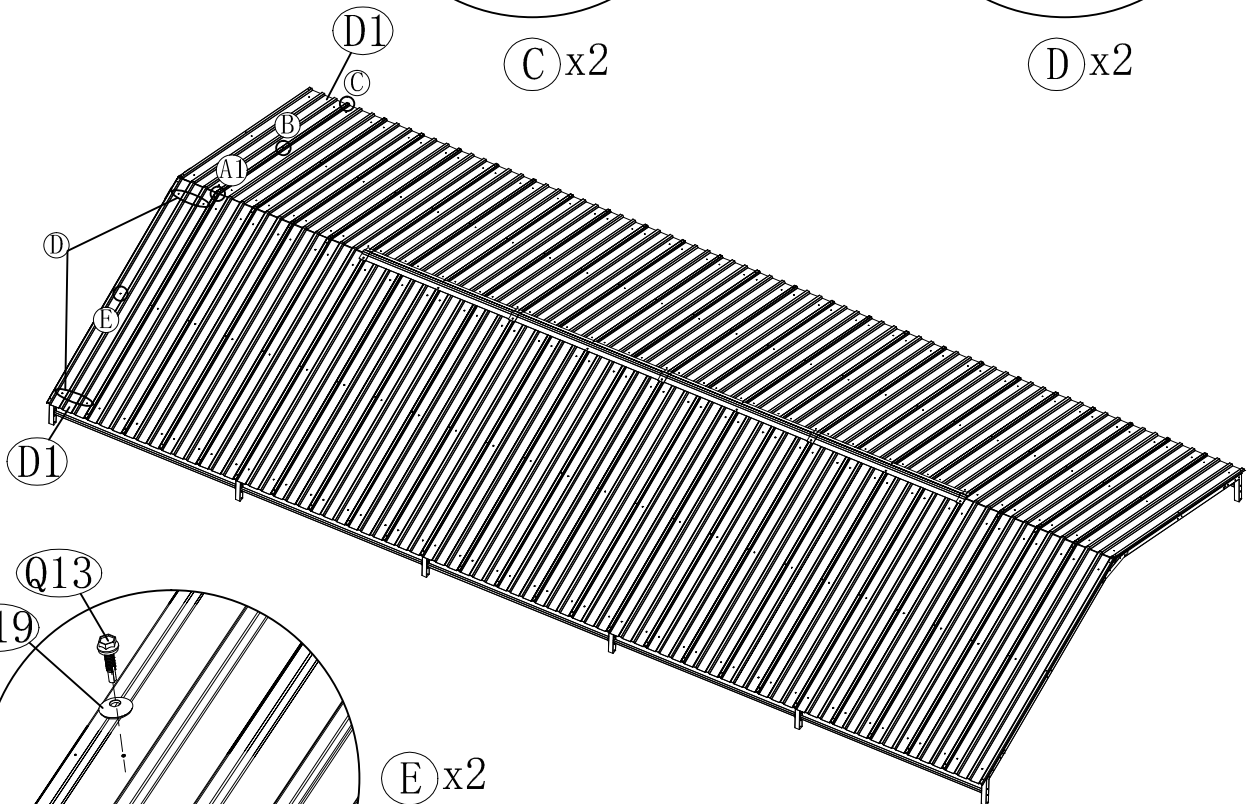


E x2


Nº.	PART.	Qty.
9	 2066mm	4
Q32	 M4x14mm	12
Q18		12

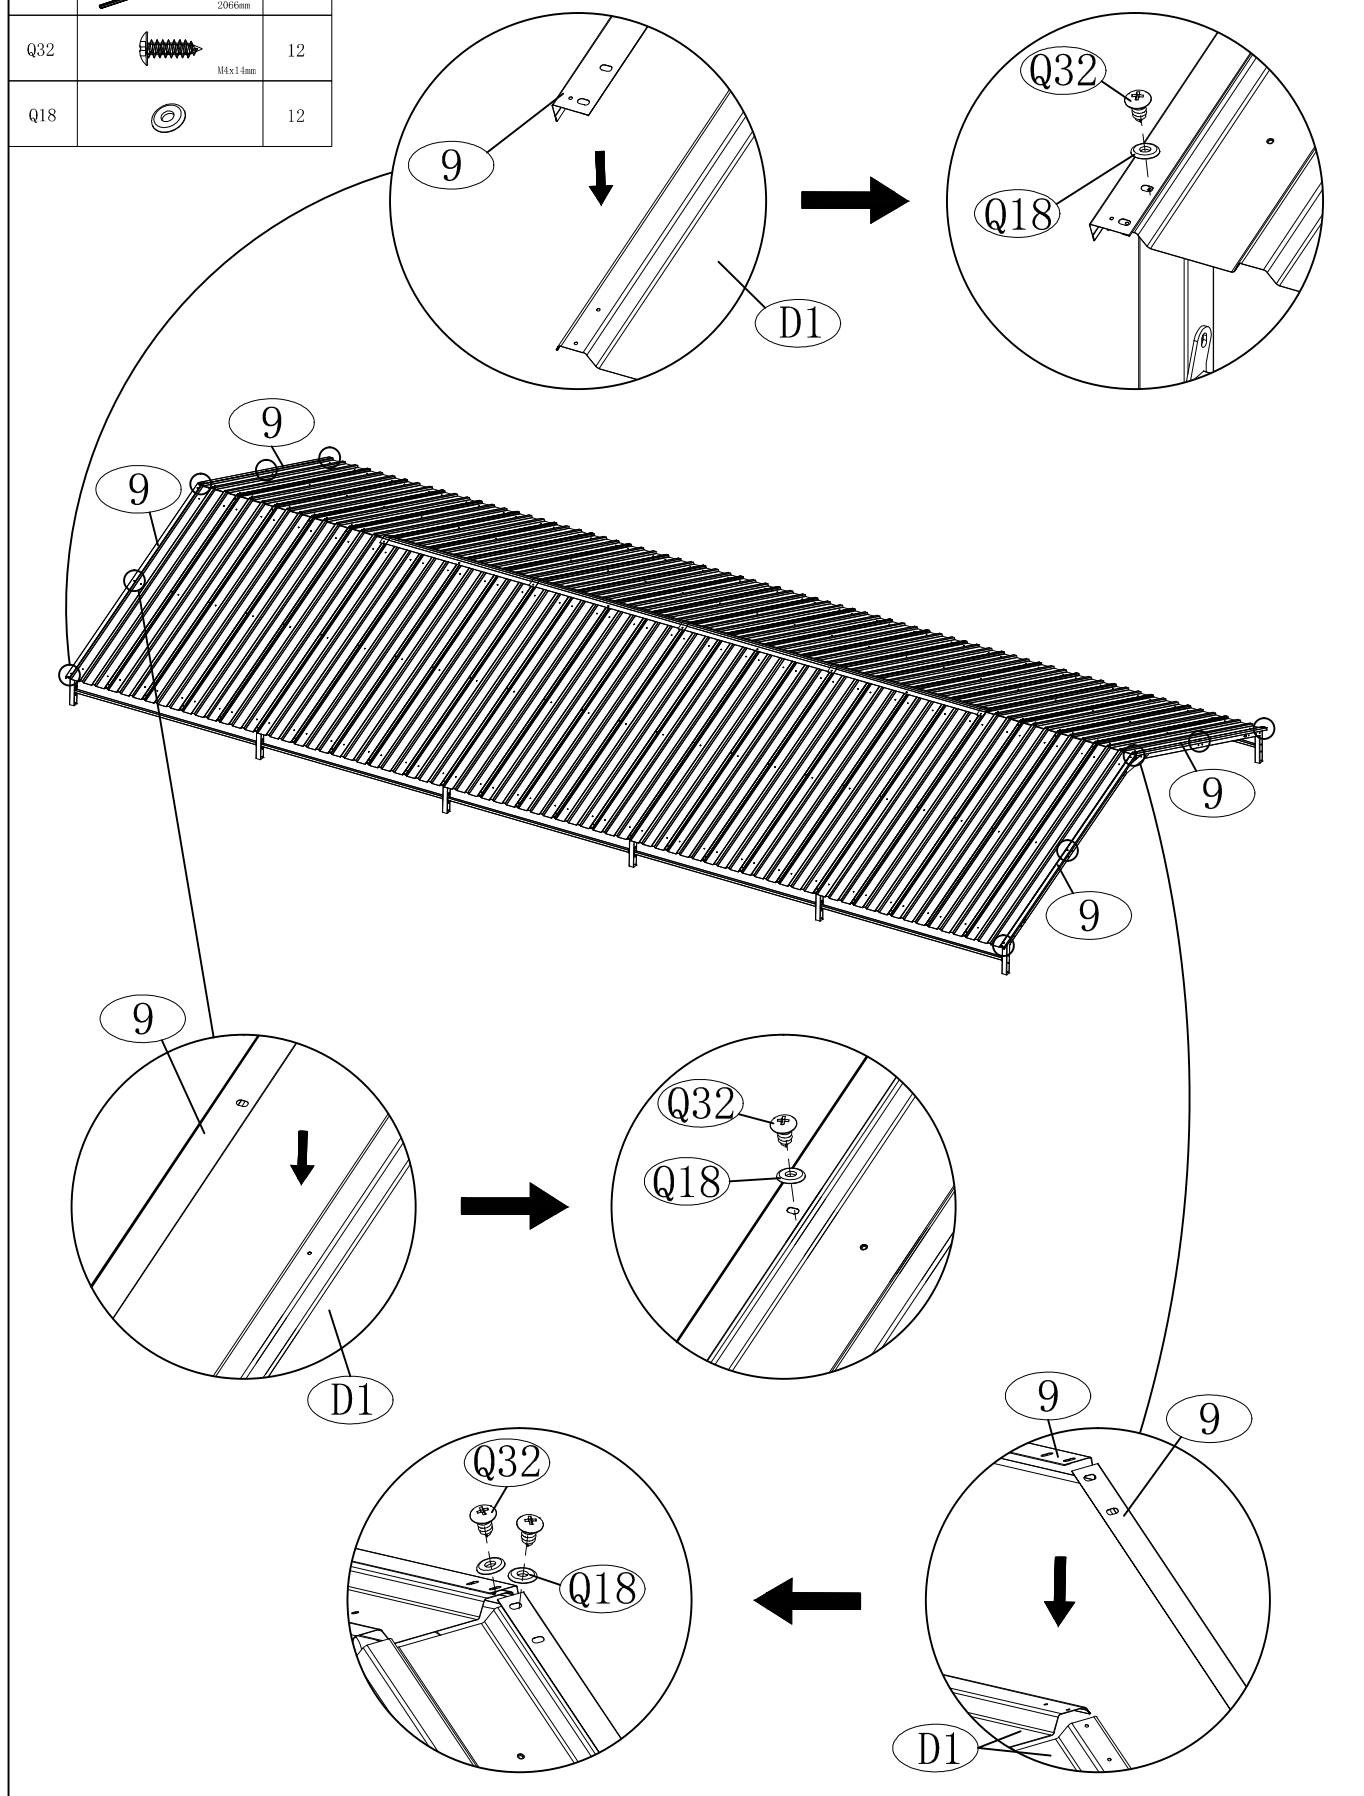


NO.	PART.	Qty.
7F	 1274mm	1
7B	 956mm	1
Q32	 M6x13mm	4
Q18		4

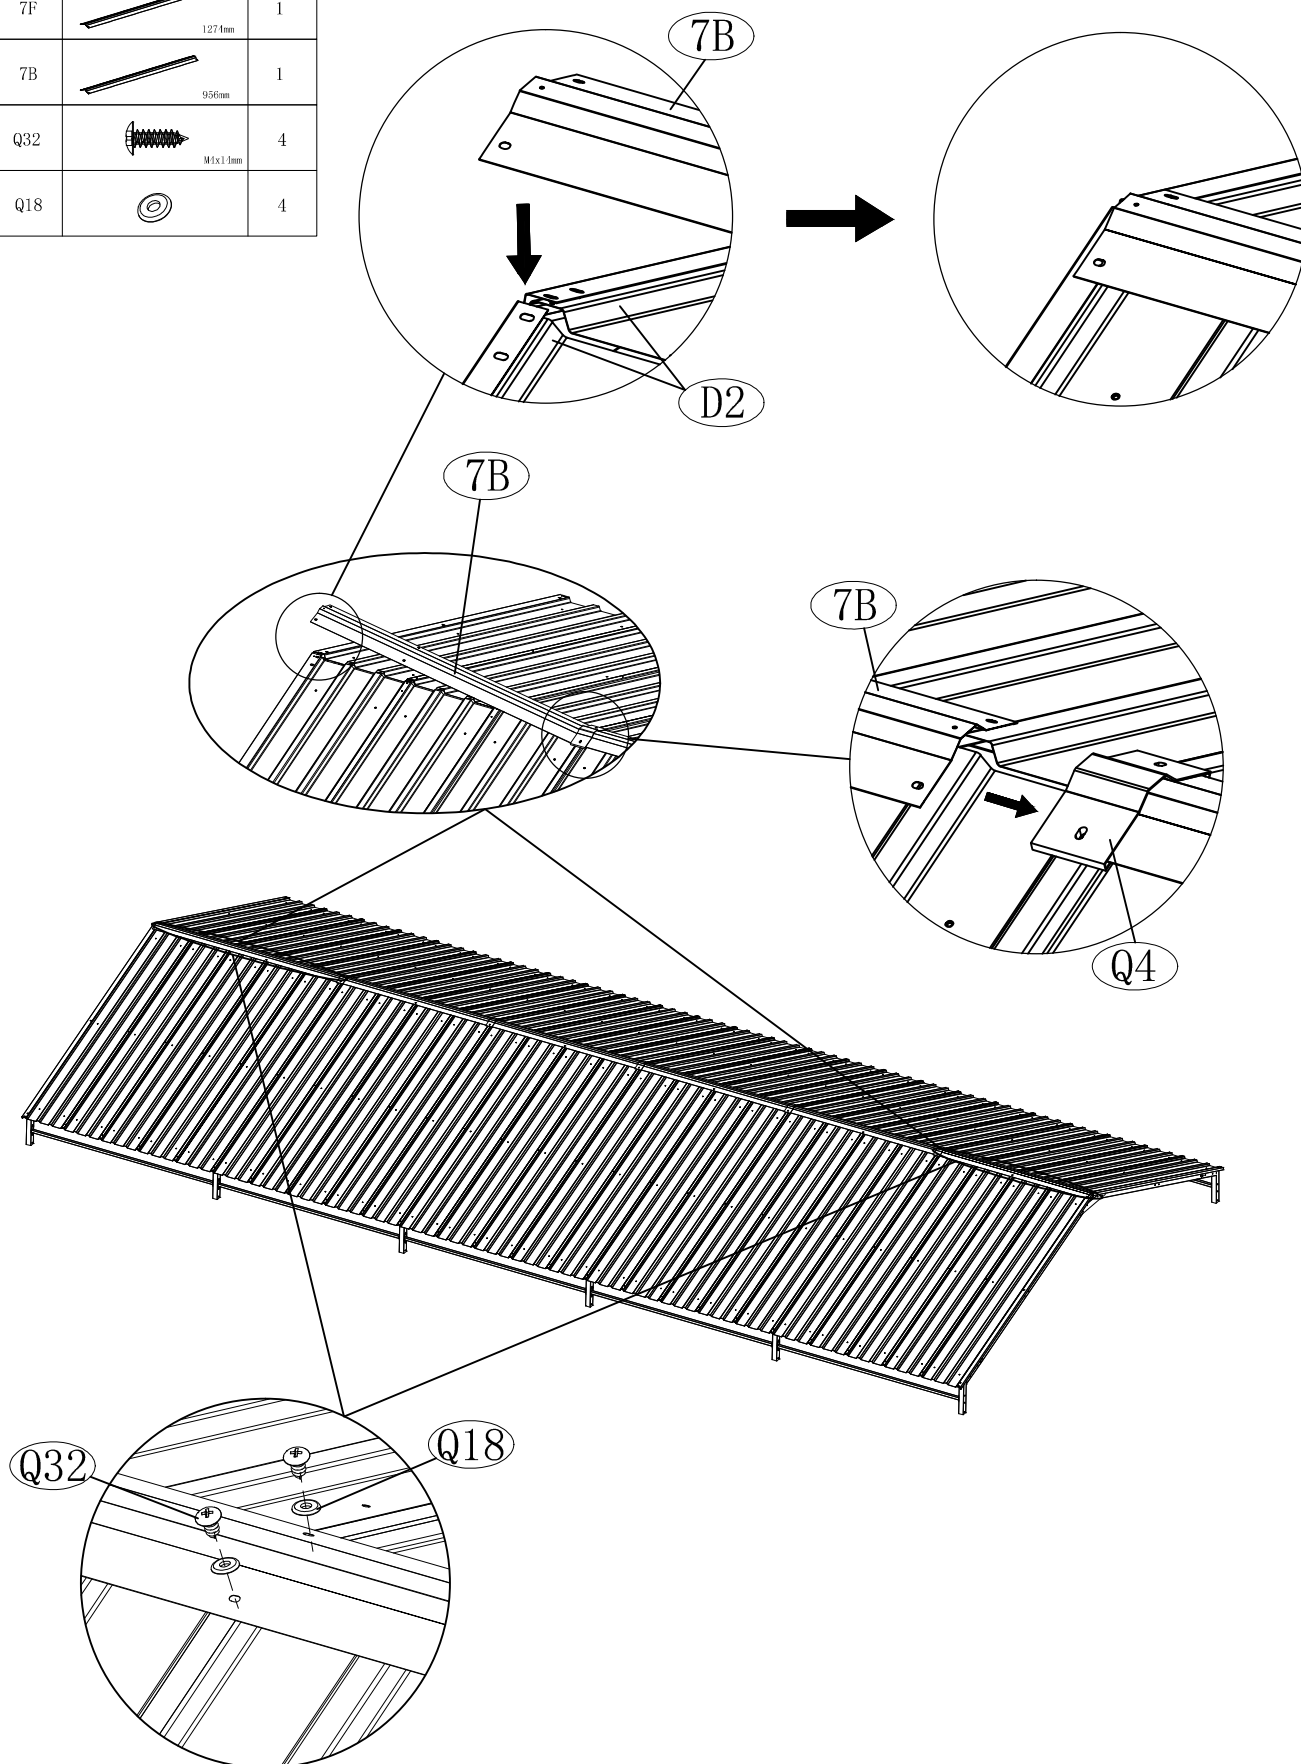


NO.	PART.	Qty.
Q2		2
Q32	 M4x14mm	4
Q18		4

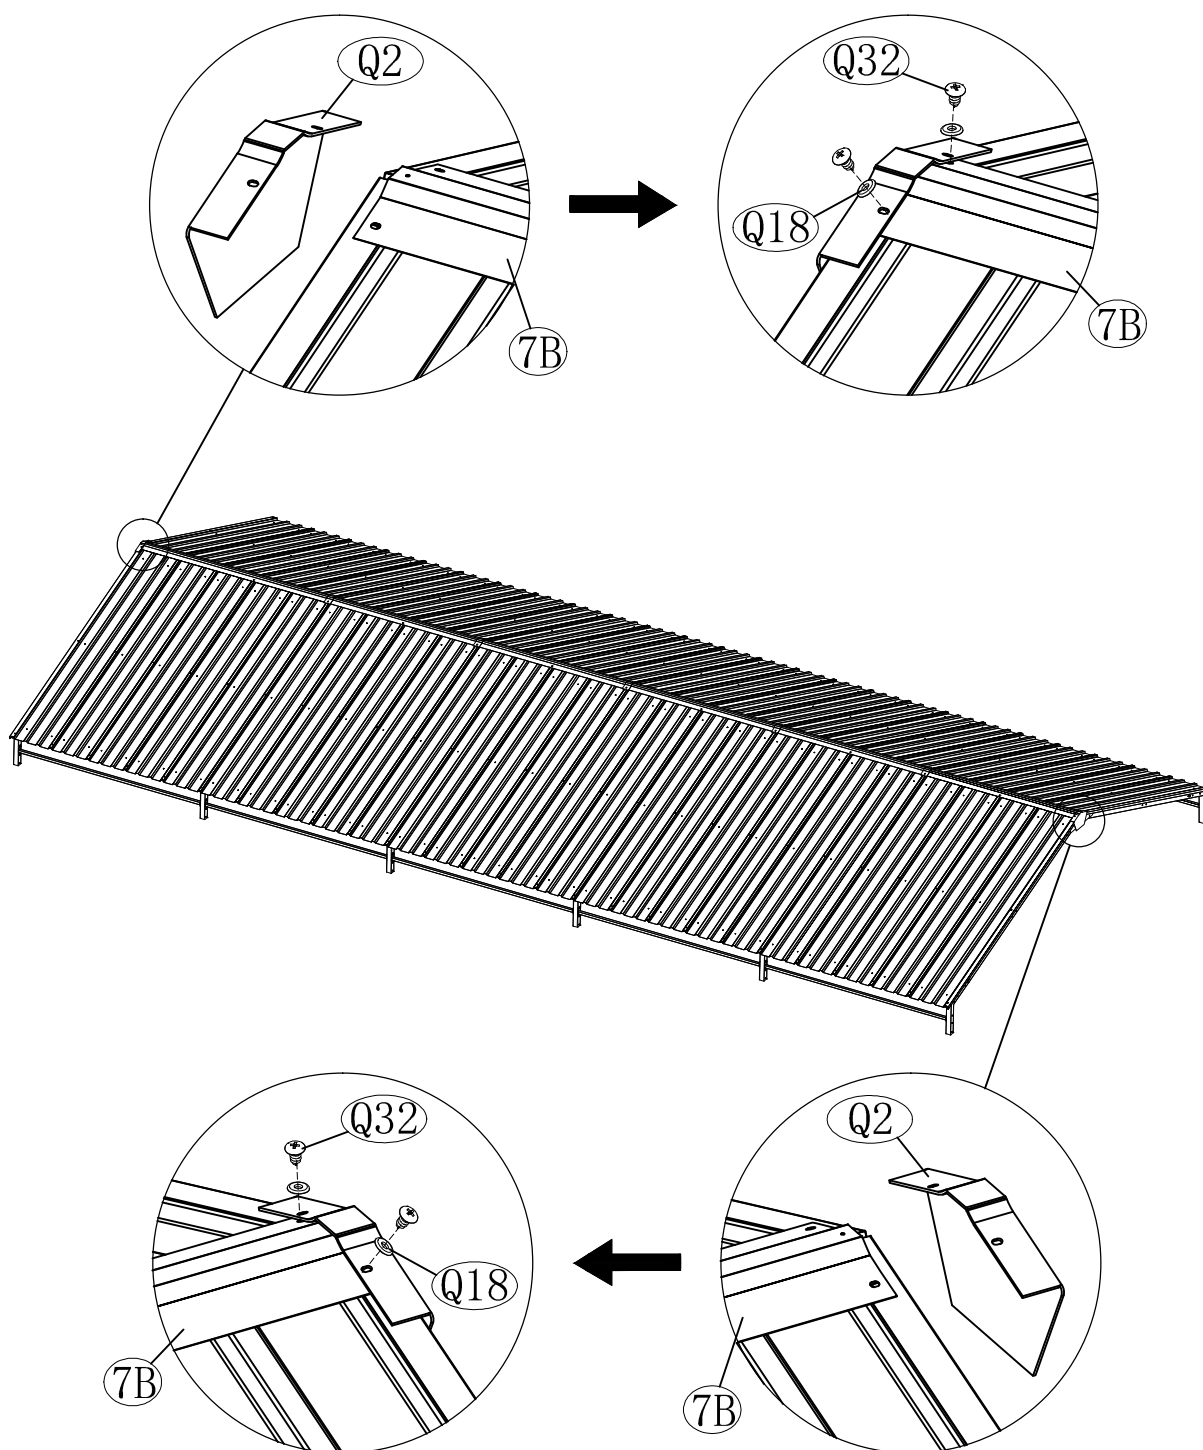


NO.	PART.	Qty.
8	 1574mm	6
Q3		8
Q32	 M4x14mm	20
Q18		20

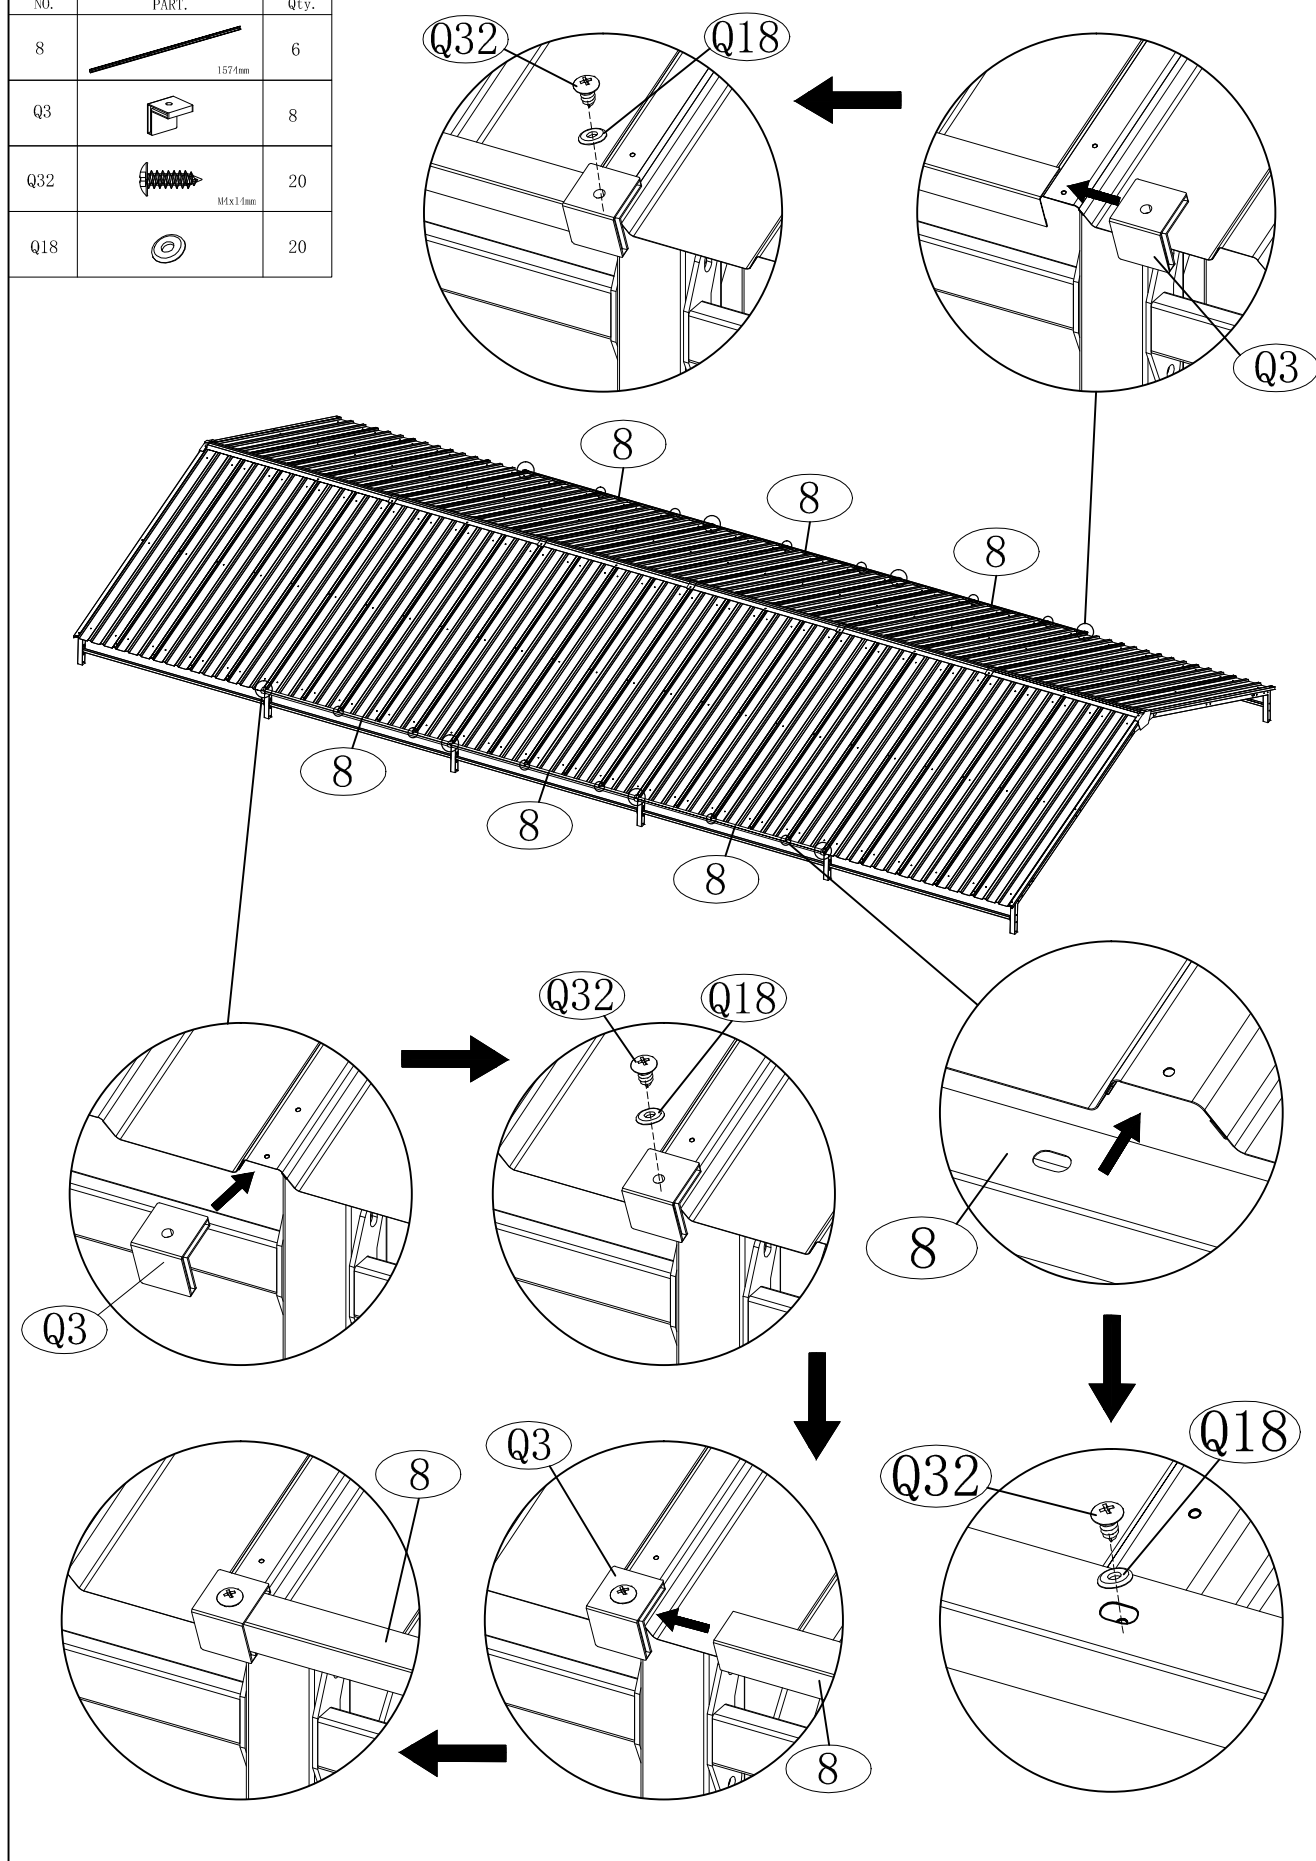




NO.	PART.	Qty.
8L	 1604, 5mm	2
8R	 1604, 5mm	2
Q1		4
Q32	 M4x14mm	12
Q18		12

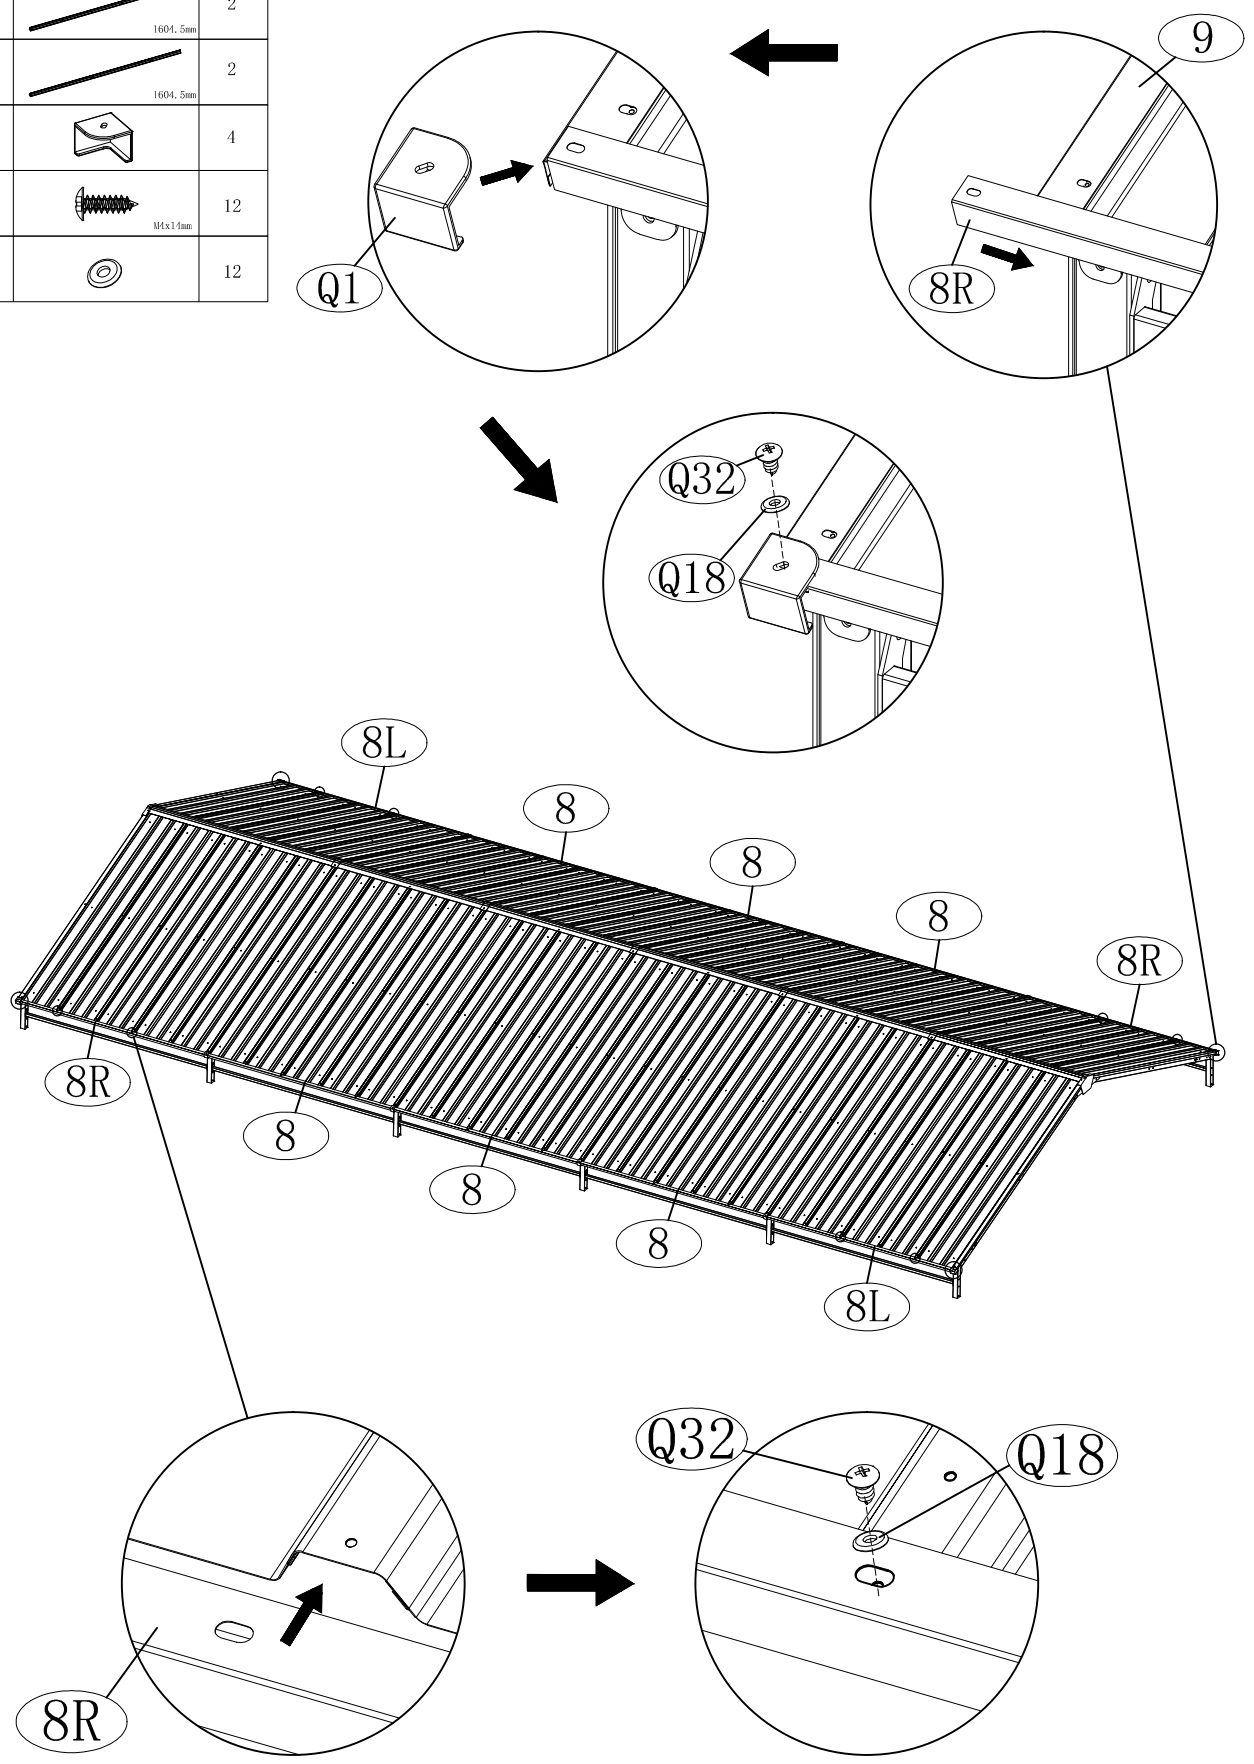






NO.	PART.	Qty.
2	 1808mm	12

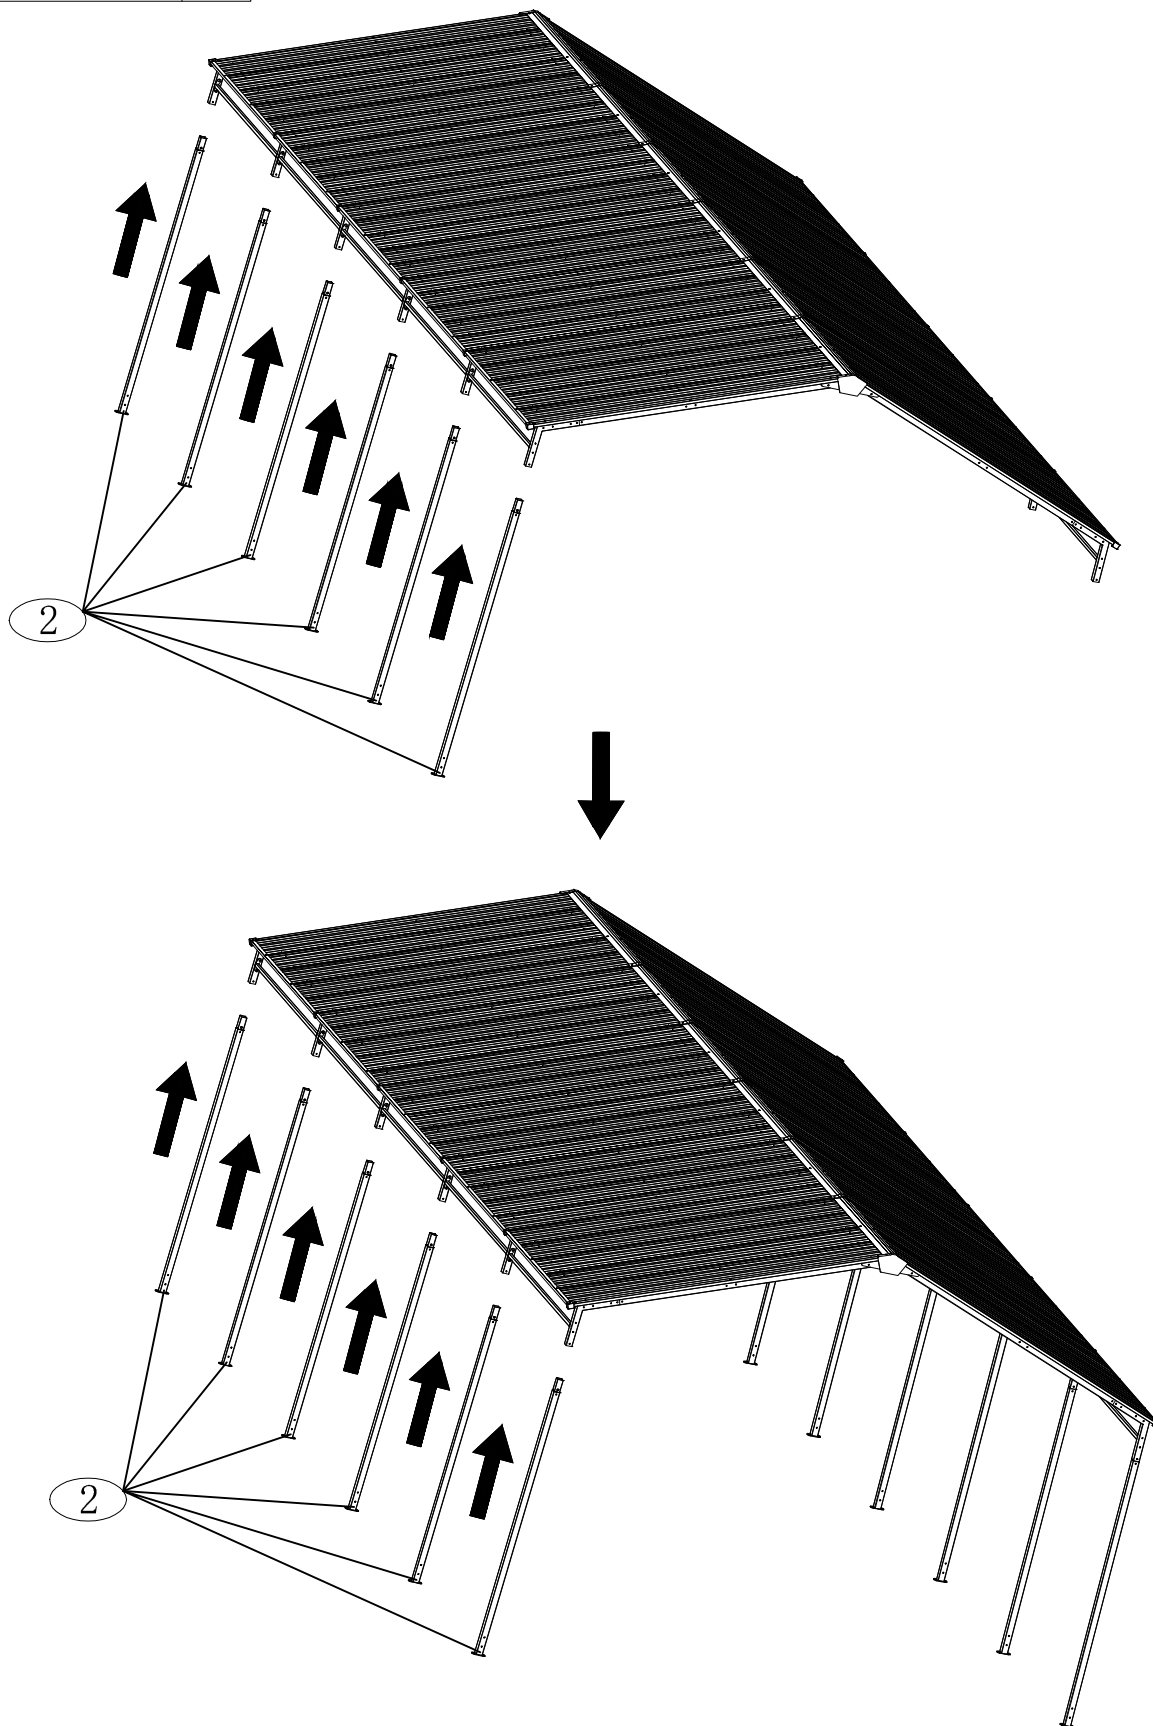




NO.	PART.	Qty.
15	 466mm	8
Q15	 M6x55mm	32
Q17	 M6	32
Q20		32

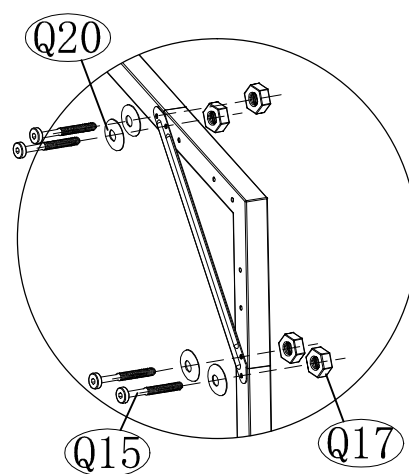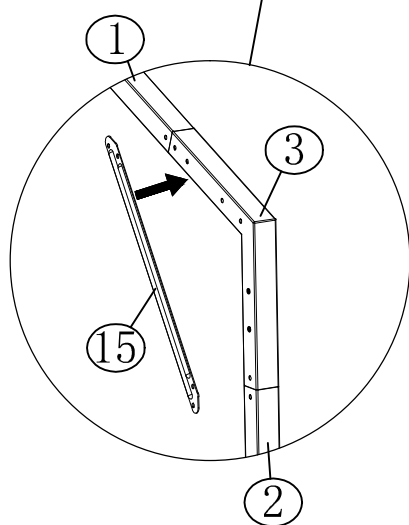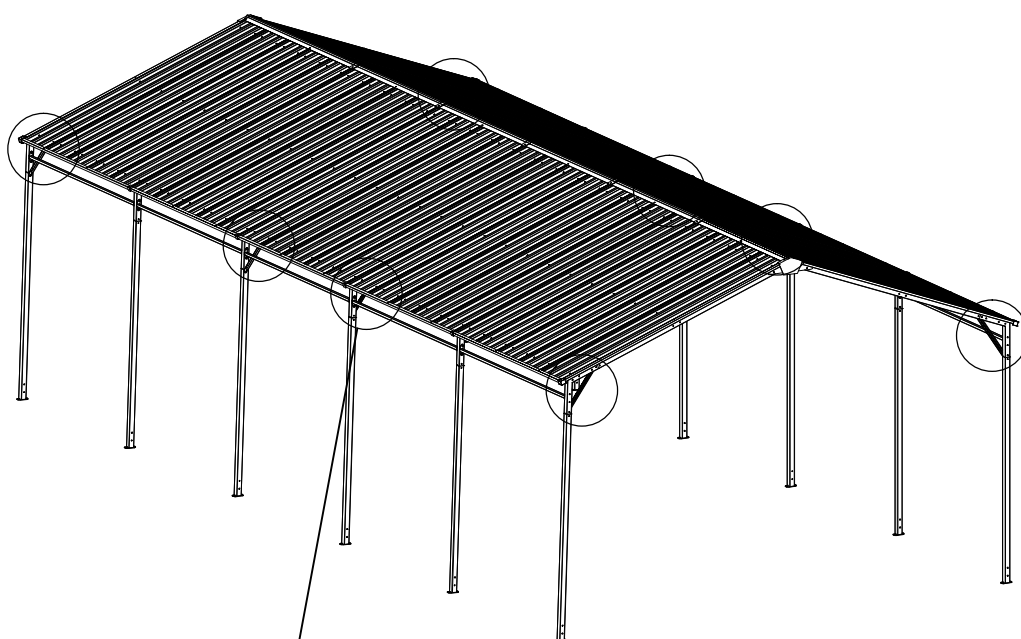



NO.	PART.	Qty.
10	 1550mm	10
Q15	 M6x55mm	24
Q17	 M6	24
Q20		24

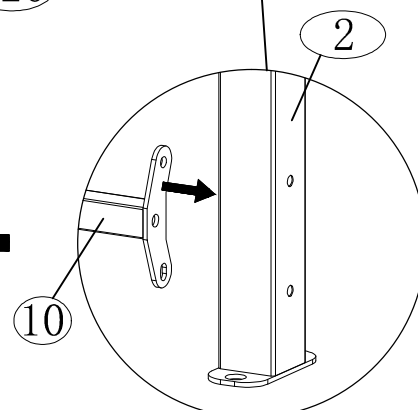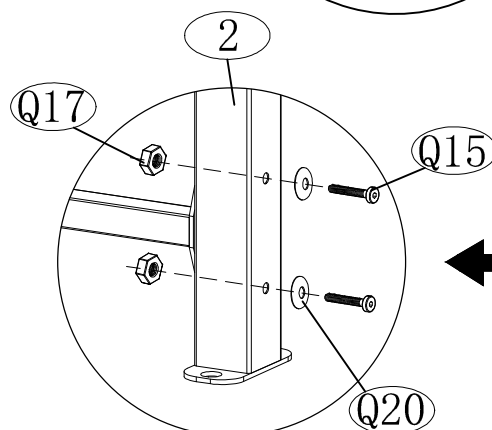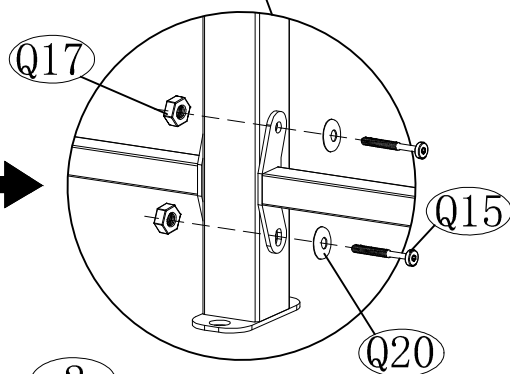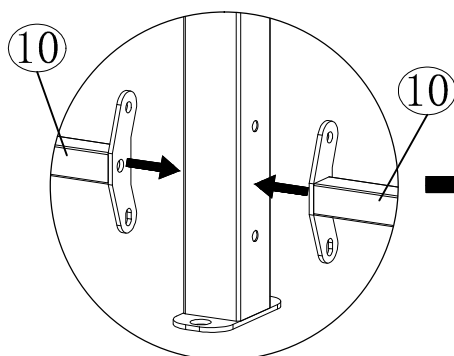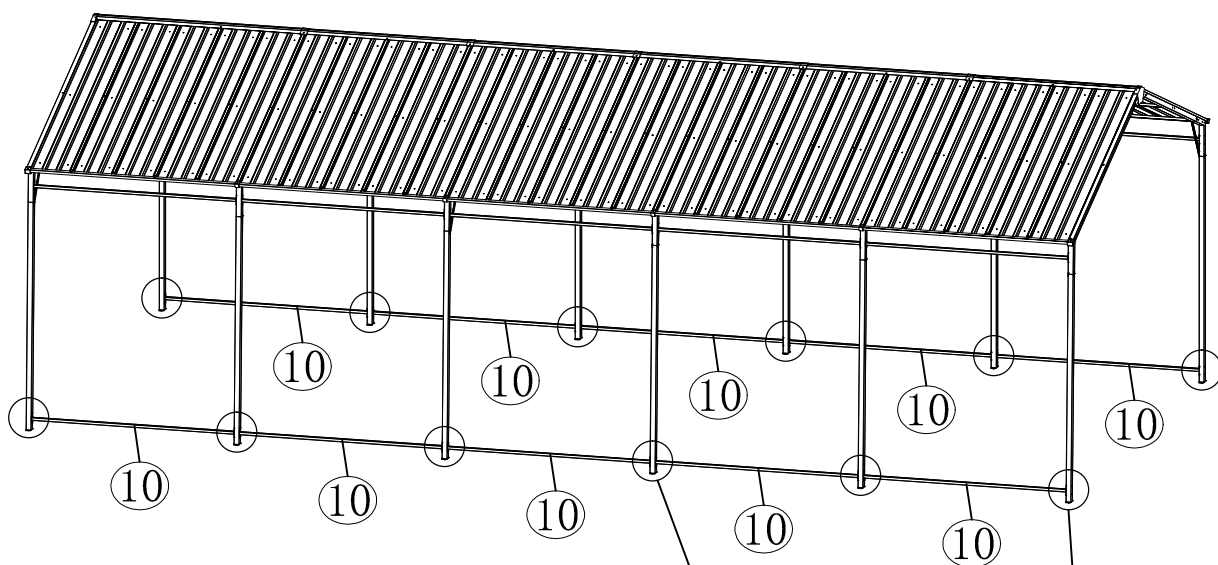


NO.	PART.	Qty.
14	 1822mm	4
15	 466mm	4
Q15	 M6x55mm	12
Q16	 3/6x65mm	4
Q17	 M6	16
Q20		16

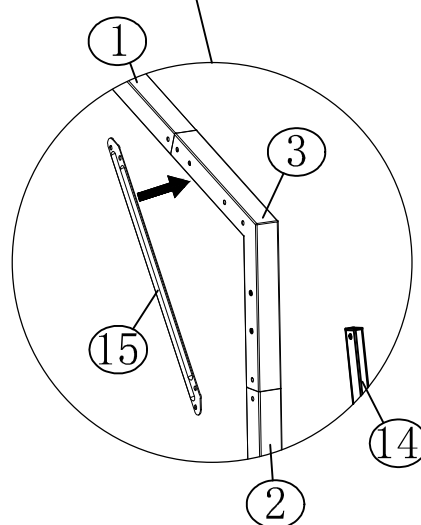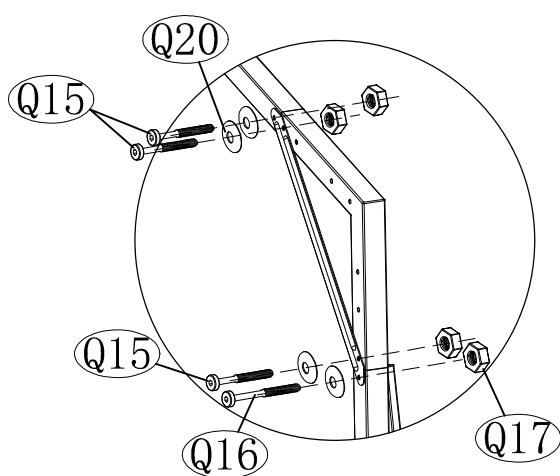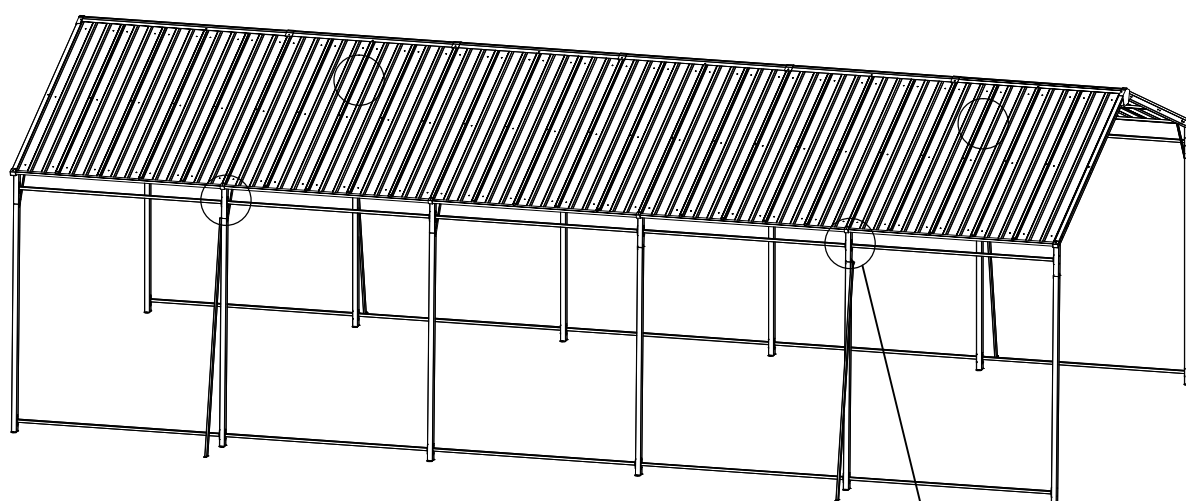

Nº.	PART.	Qty.
Q5		12
Q6		12
Q21	 M8 x 50mm	24


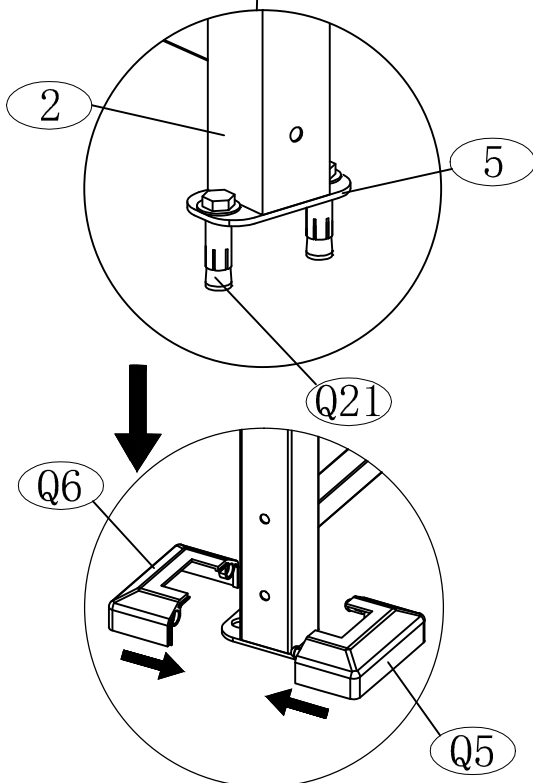
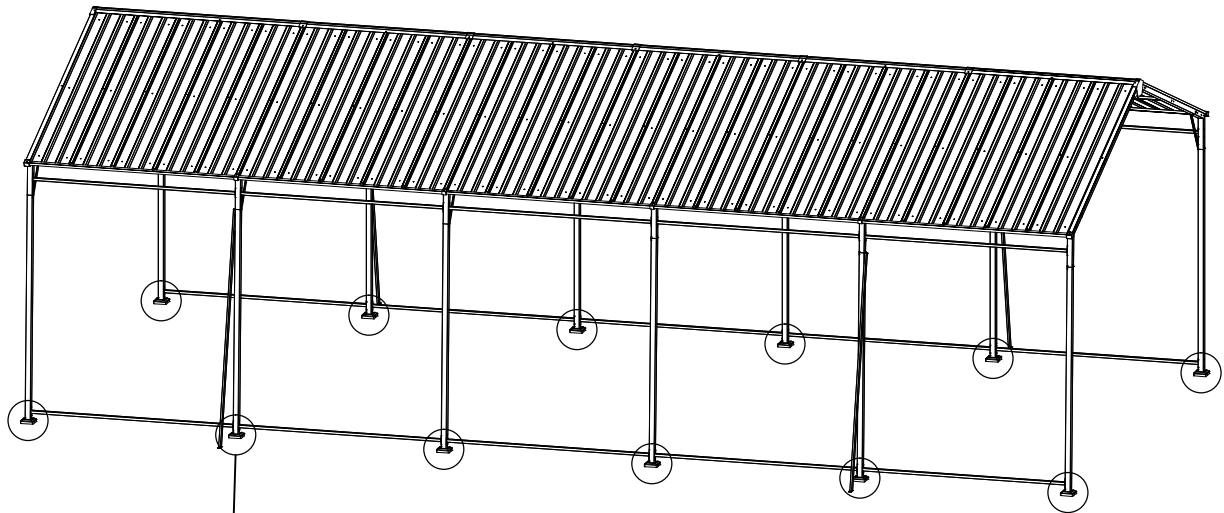


1. It is necessary to use ground nails and expansion screws, whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causing devastating injuries and property losses.

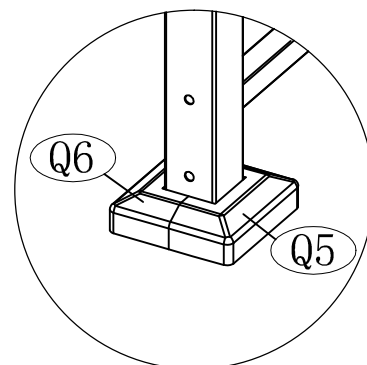

NO.	PART.	Qty.
Q21	 M8x50mm	4
Q9		176

Plastic screw cap is used to prevent the sharp end of the screw from scratching people .

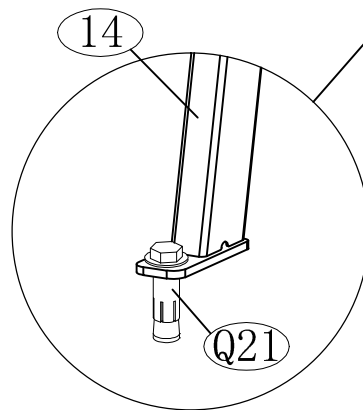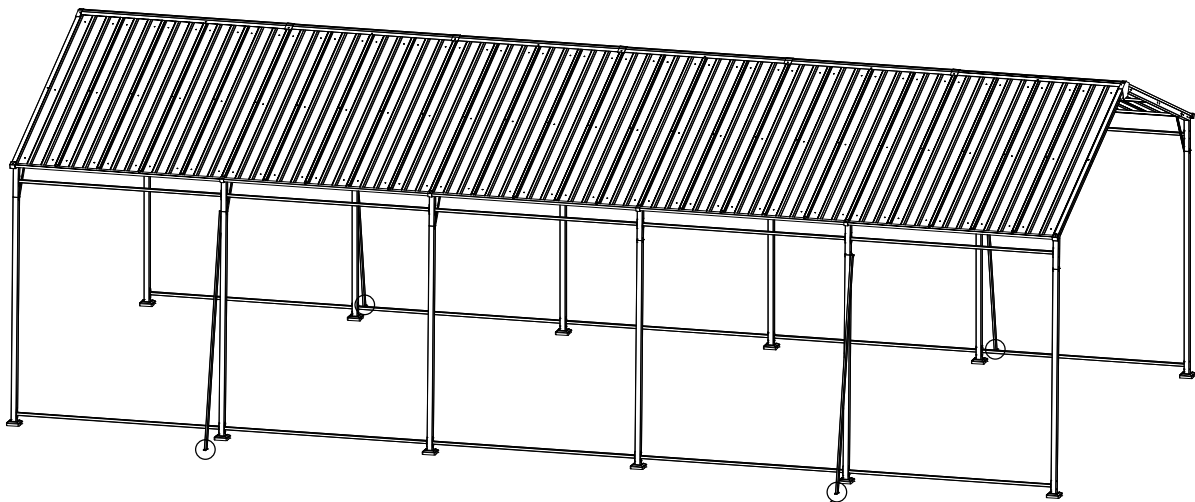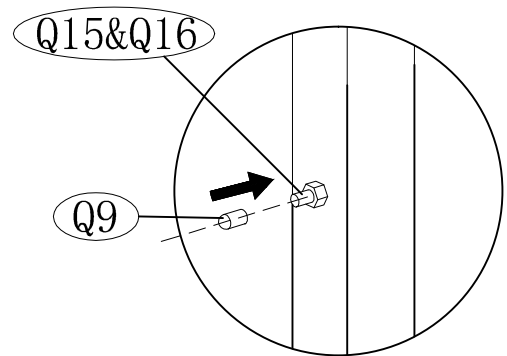

1. It is necessary to use ground nails and expansion screws, whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causing devastating injuries and property losses.