
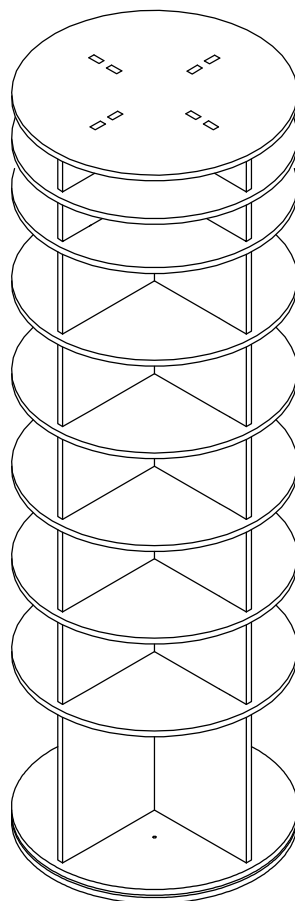
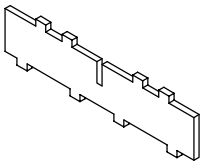
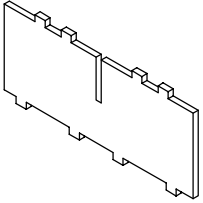
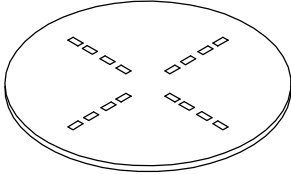
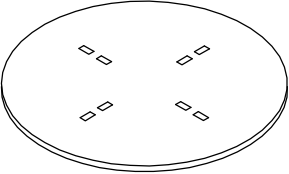
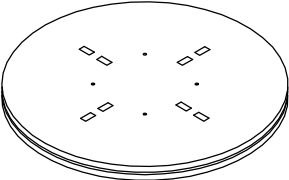



Assembly Instructions

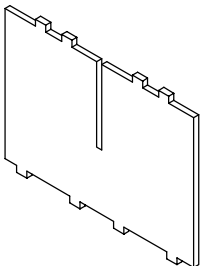


Be sure to align with the hole position during installation
and do not install it forcefully.

 X4	 X10	 X7	 X1
 X1	 X2		


1.

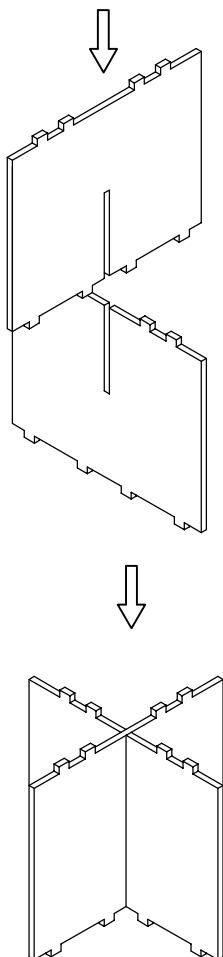


2.

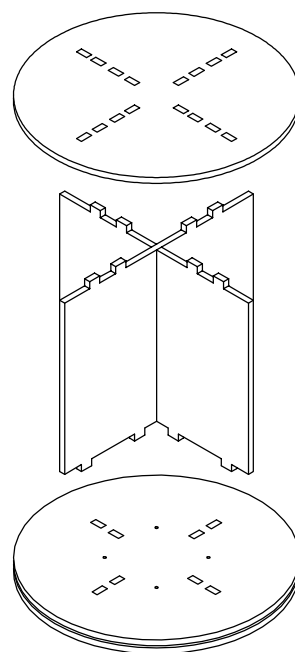


3.

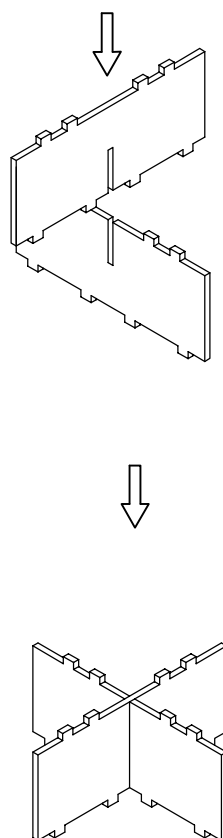


4.

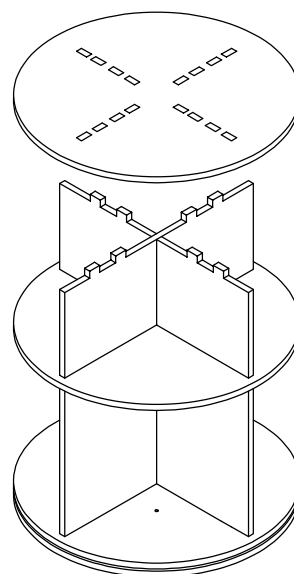


5.

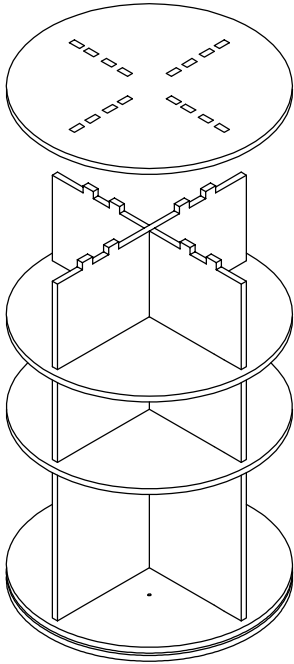


6.

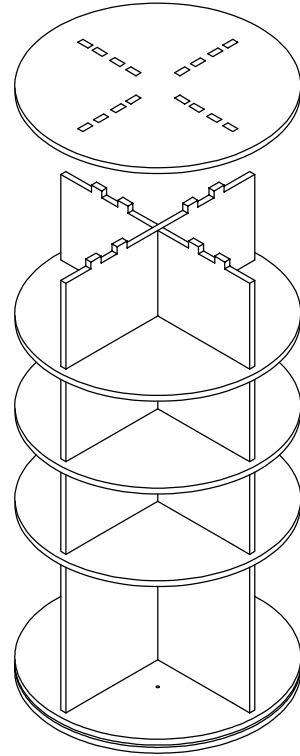



7.

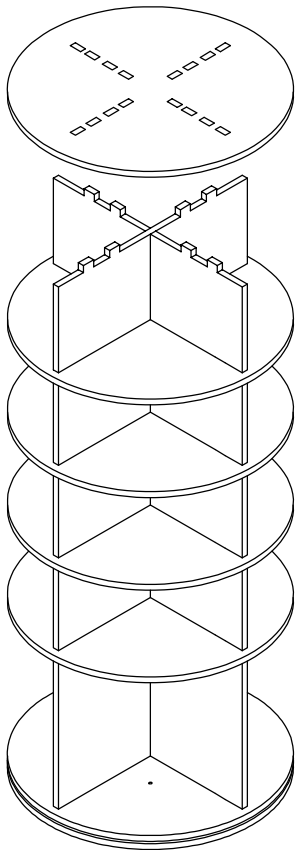


8.

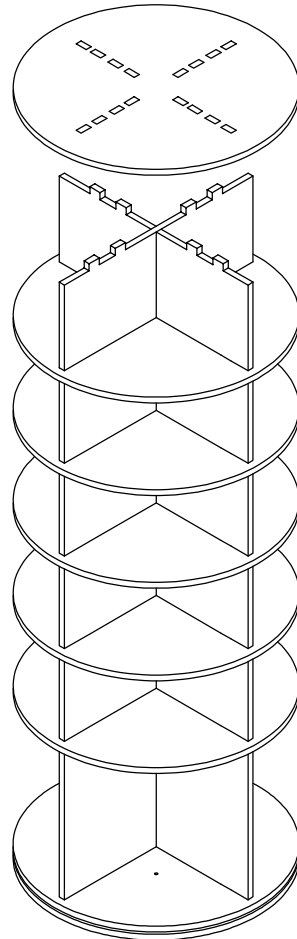


9.

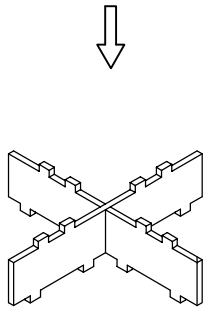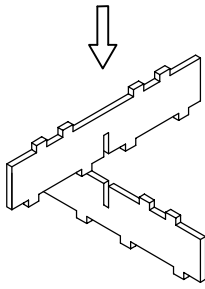

10.

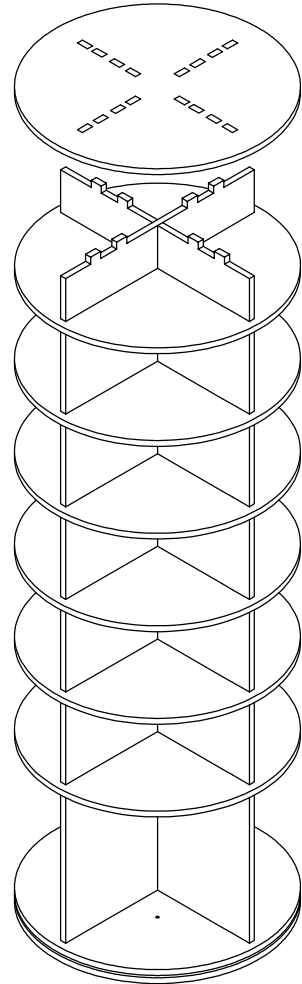

11.

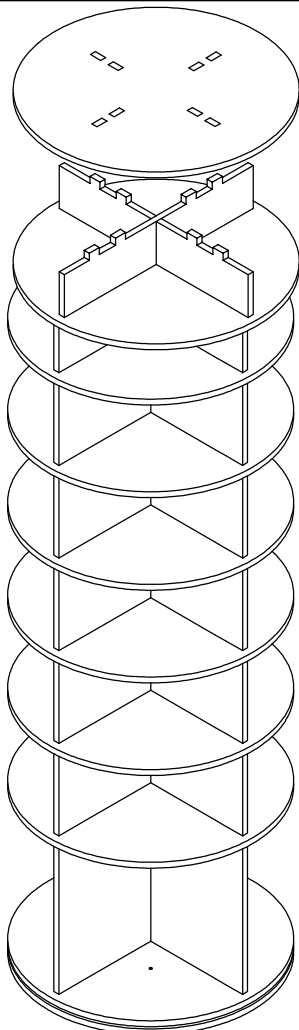

12.

