


ASSEMBLY INSTRUCTIONS

W697121852


W697121853

W697121854







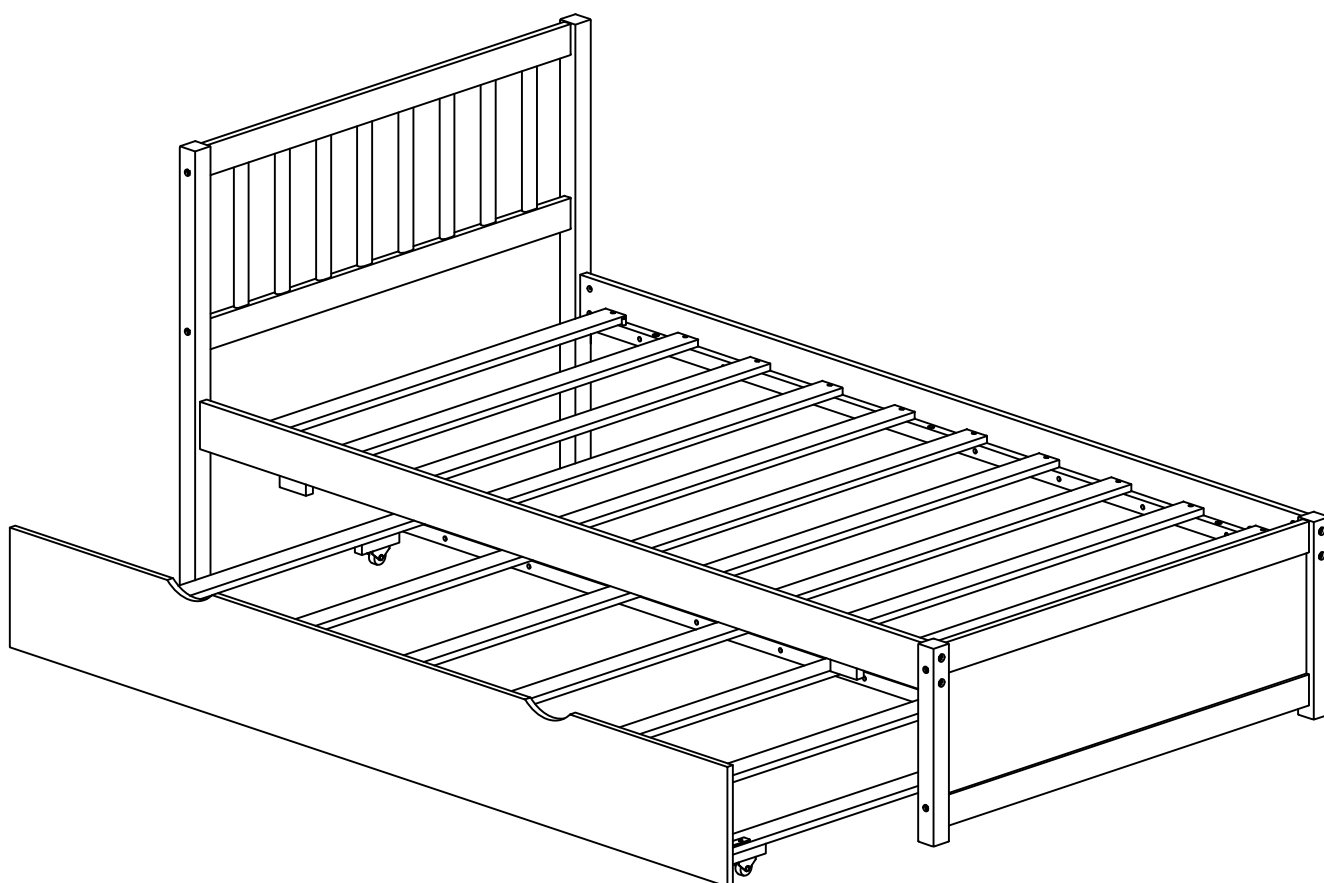








YX7104

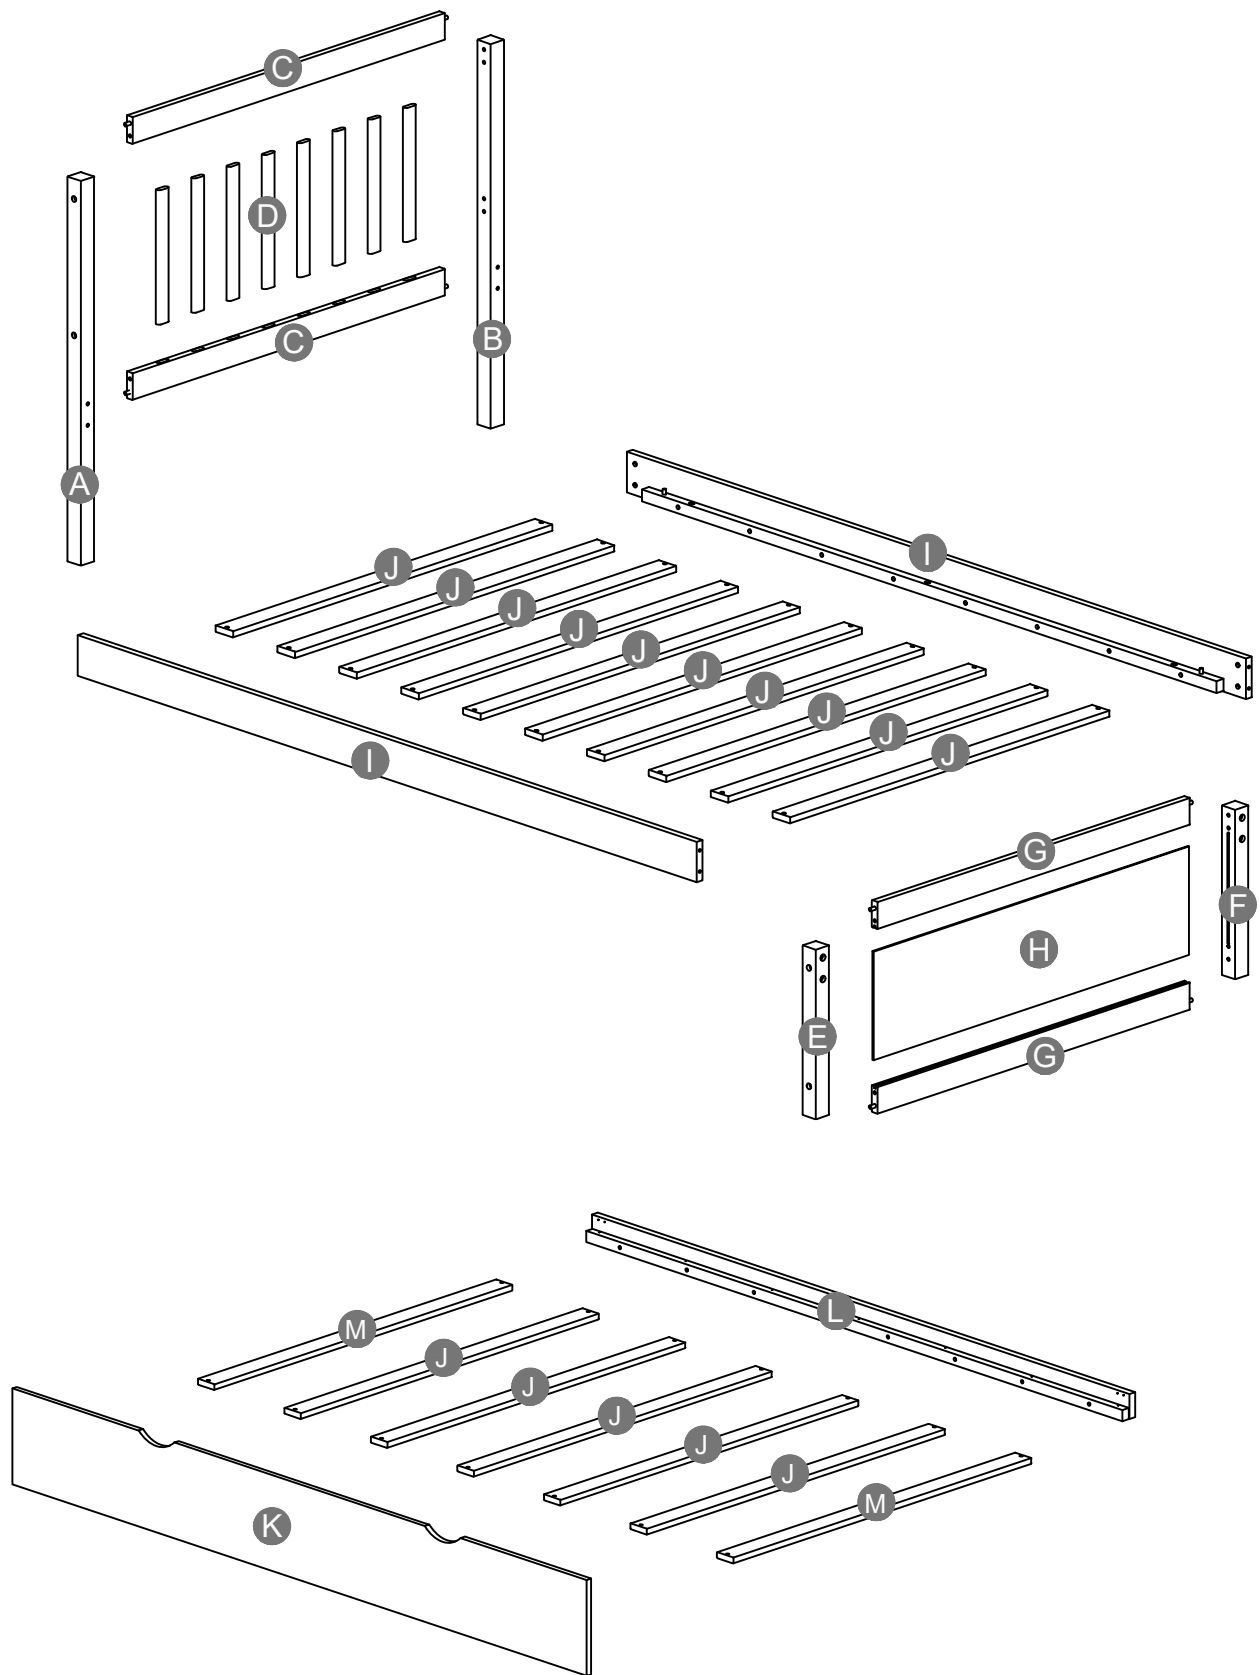










Detail View




Part List

A  Headboard leg (Left)-1pc	B  Headboard leg (Right)-1pc	C  Horizontal bar HB-2pcs
D  Vertical bar HB-8pcs	E  Footboard leg (Left)-1pc	F  Footboard leg (Right)-1pc
G  Horizontal bar FB-2pcs	H  Footboard panel-1pc	I  Side rail-2pcs
J  Slat-10pcs + Trundle Slat-5pcs	K  Trundle front panel - 1pc	L  Trundle back panel-1pc
M  Trundle Slat-2pcs		


Hardware List

1  (Spare Hardware-2pcs) (Ø12)1/4"*70mm	2  (Spare Hardware-2pcs) 1/4"*15mm	3  Ø8*25mm
Hex-Head bolts (18pcs)	Horizontal-Hole bolts(18pcs)	Wood dowel (6pcs)
4  (Spare Hardware-4pc) Ø4*25mm	5  (1/4")4*60mm	6  (Ø12)1/4"*55mm
Wood screws (46 pcs)	Allen key (1pc)	Hex-Head bolts (2pcs)
7  120*120*18*2mm	8  35*18*18*2mm	9  (Spare Hardware-2pcs) Ø4*12mm
Metal bracket (2pcs)	Metal bracket (2pcs)	Wood screws (18 pcs)
10  100*62*19mm	11  70*38*19mm	
Wheels (4pcs)	Stopper (2pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




(Phillip head screwdriver)

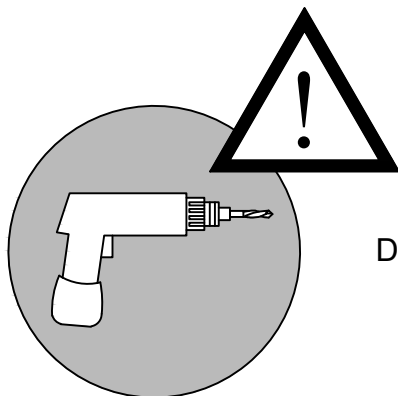



DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !



Remark: We recommend you assemble your bed in the flat ground.

STEP 1:

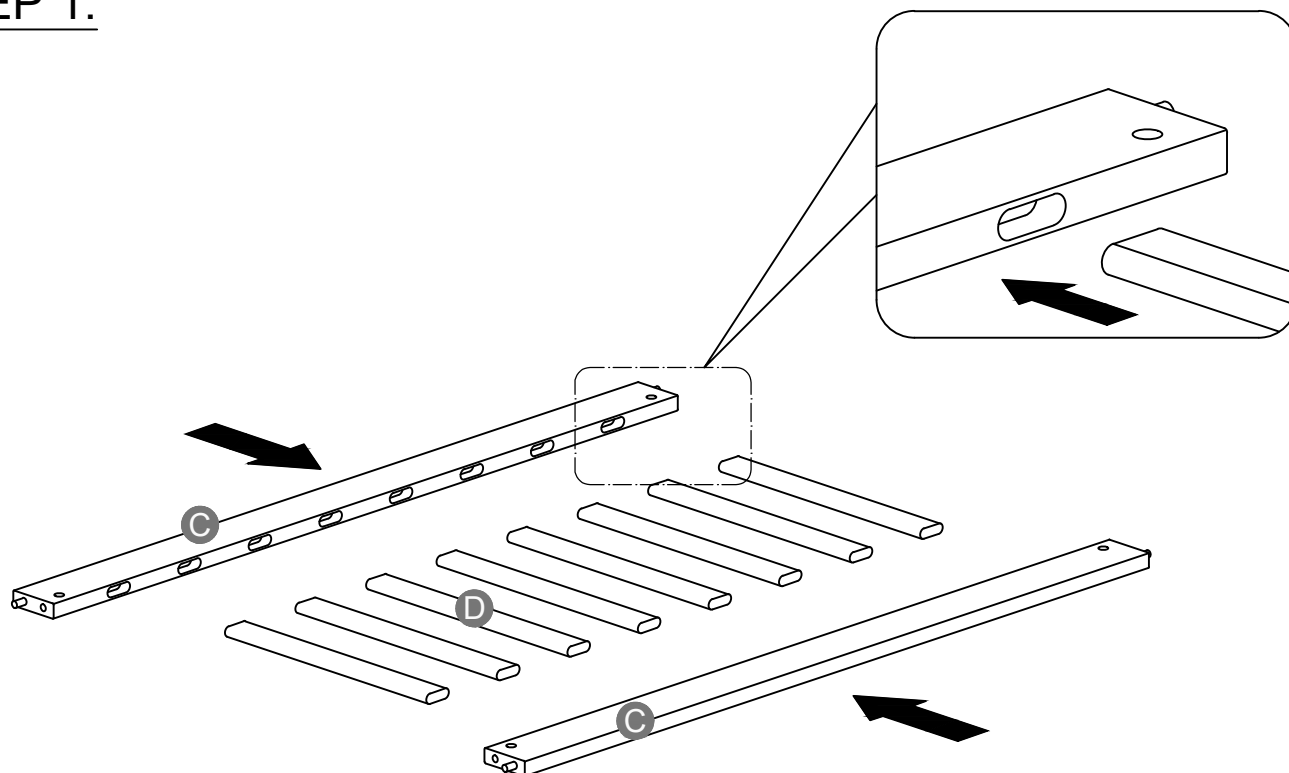


STEP 2:


1	2
 (Ø12)1/4"*70mm	
4pcs	4pcs

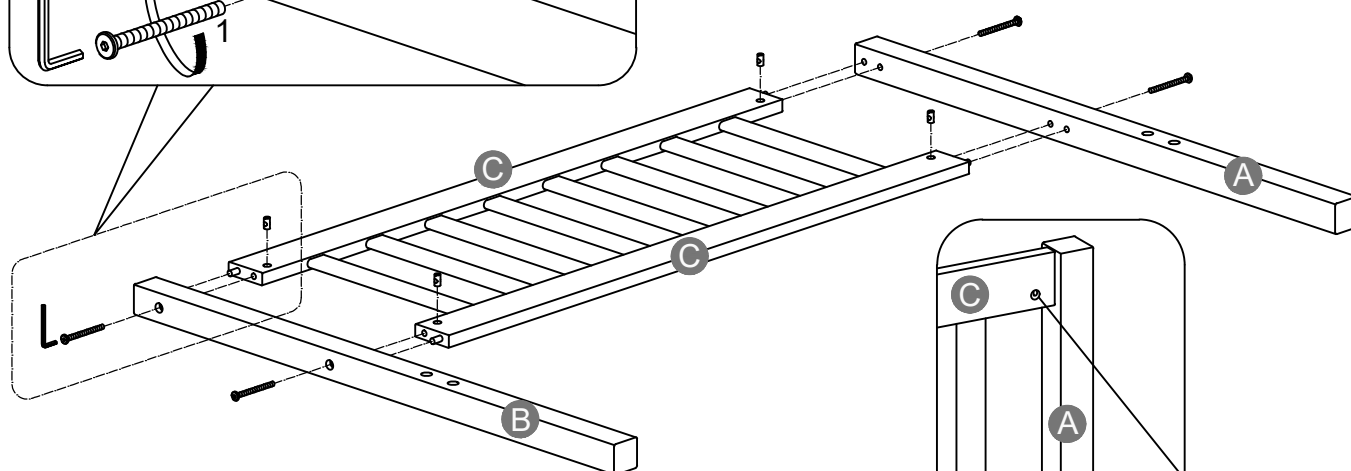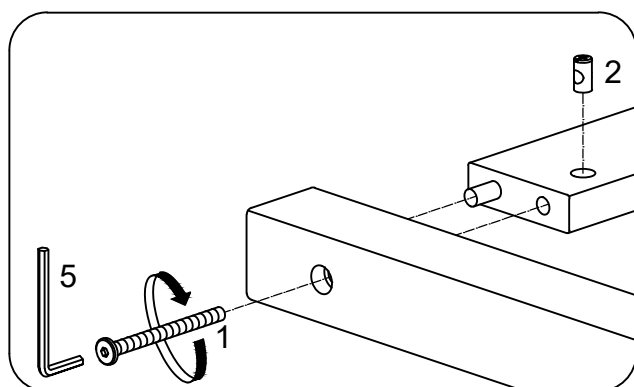


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

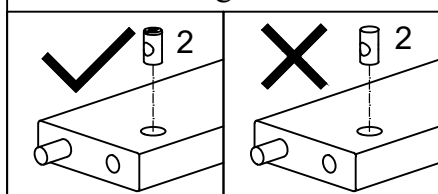


Make sure bars A,B,C are connected together on the same side (front-front, back-back)

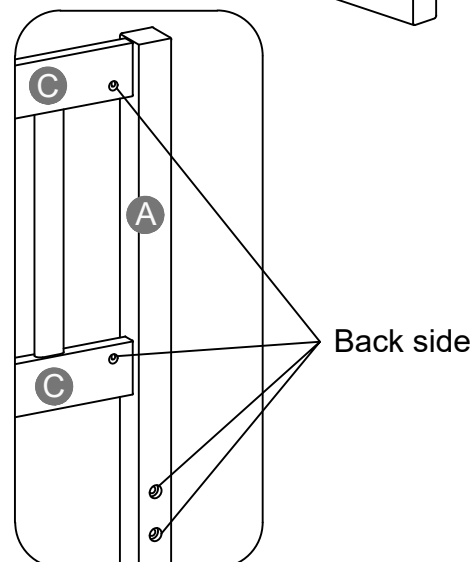

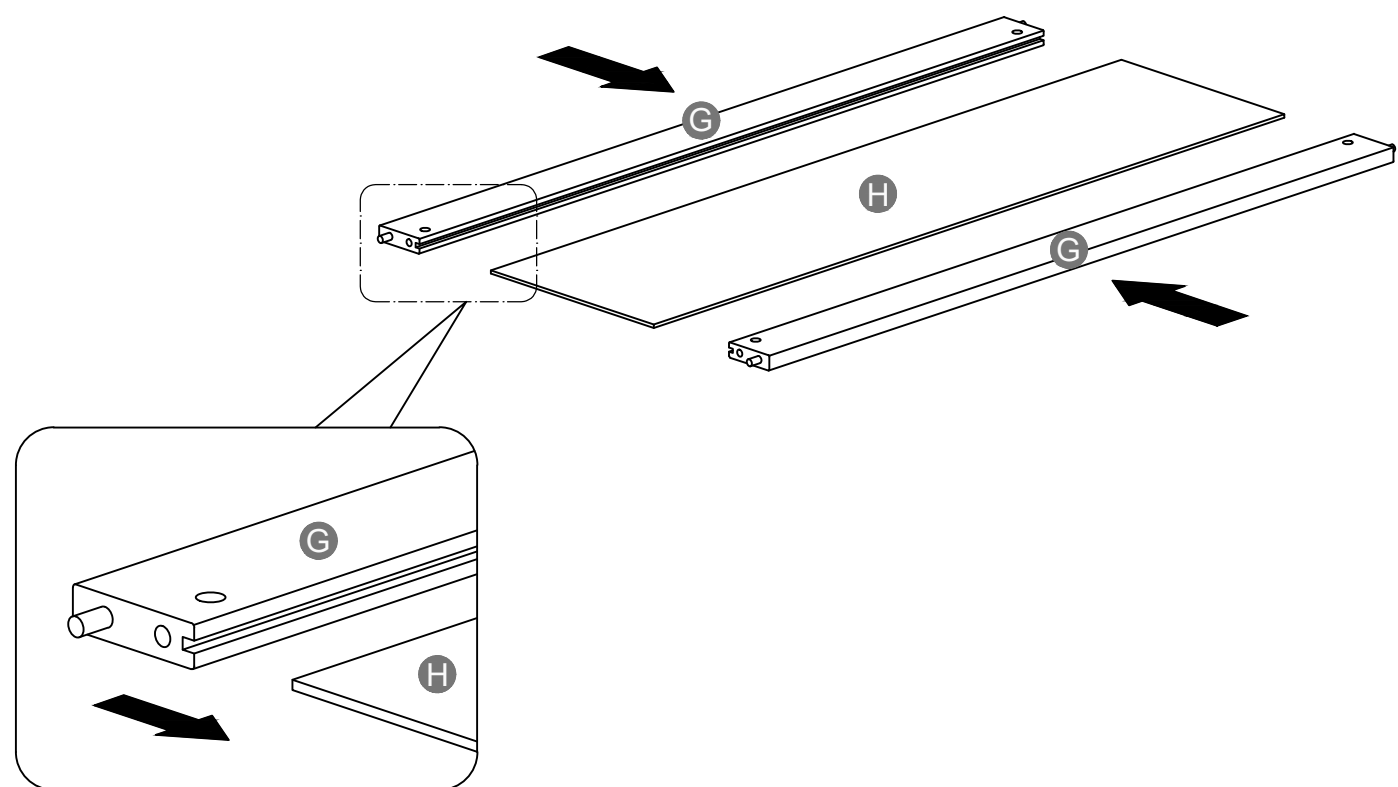

STEP 3:

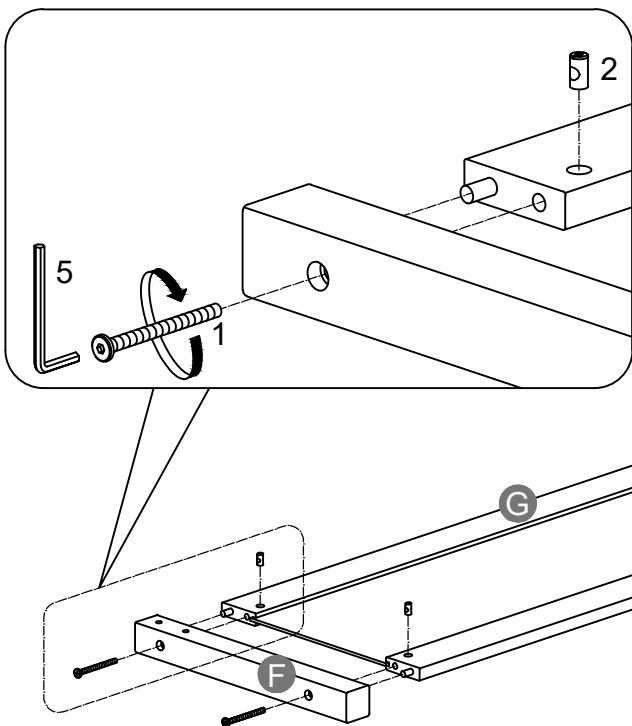


STEP 4:




1	2
 (Ø12)1/4"*70mm	
4pcs	4pcs


Note:Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

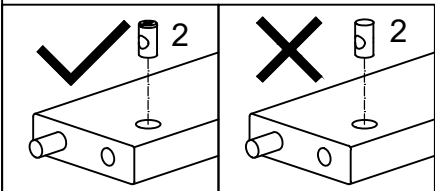

Make sure bars E,F,G are connected together on the same side (front-front, back-back)

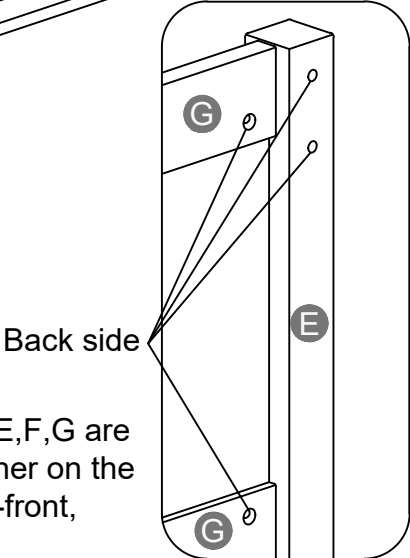

STEP 5:

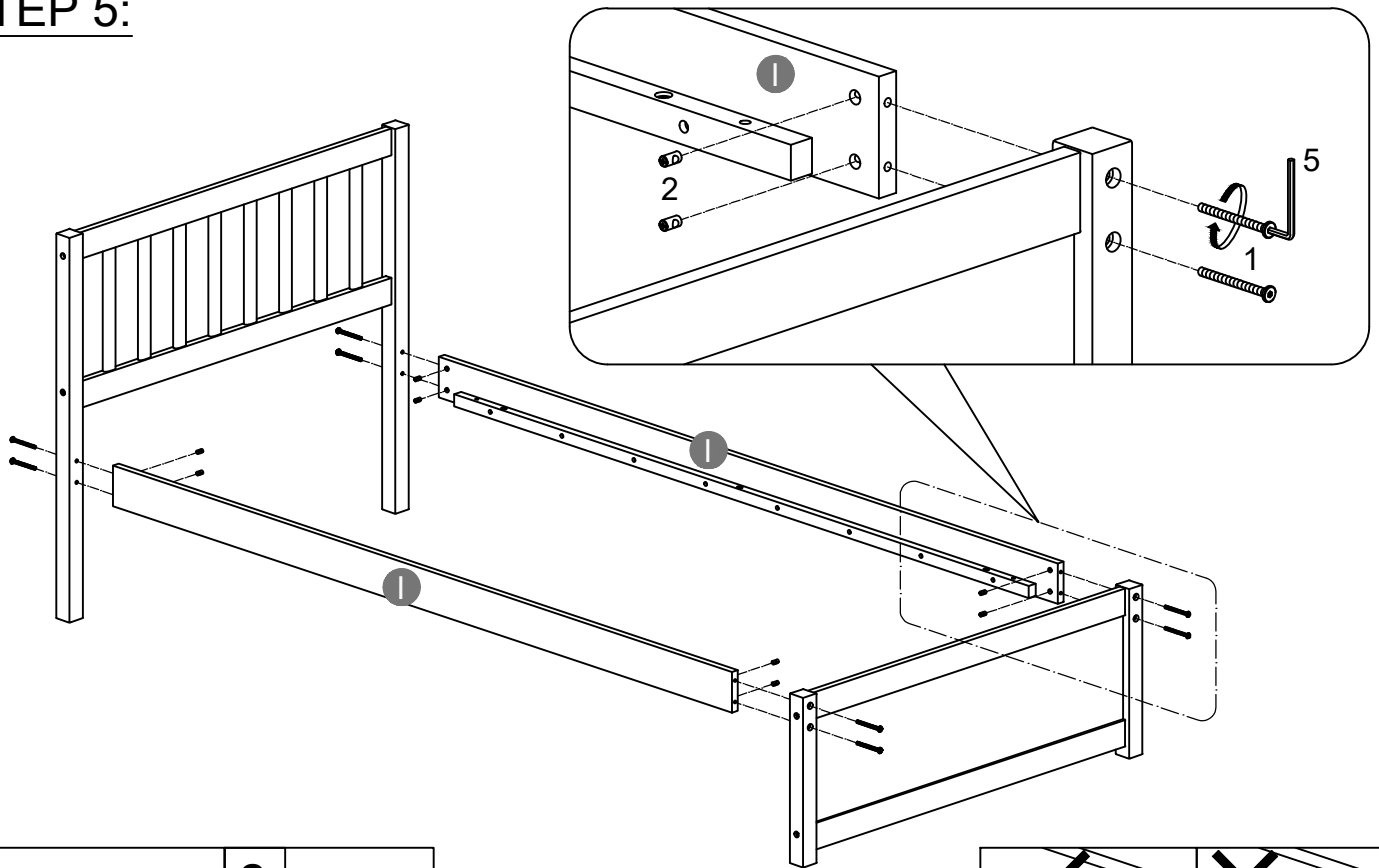

1

(Ø12)1/4"*70mm


8pcs

2




8pcs


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

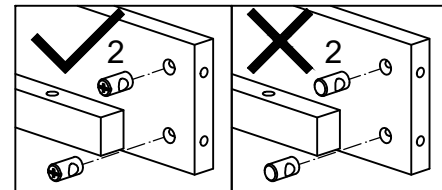

STEP 6:

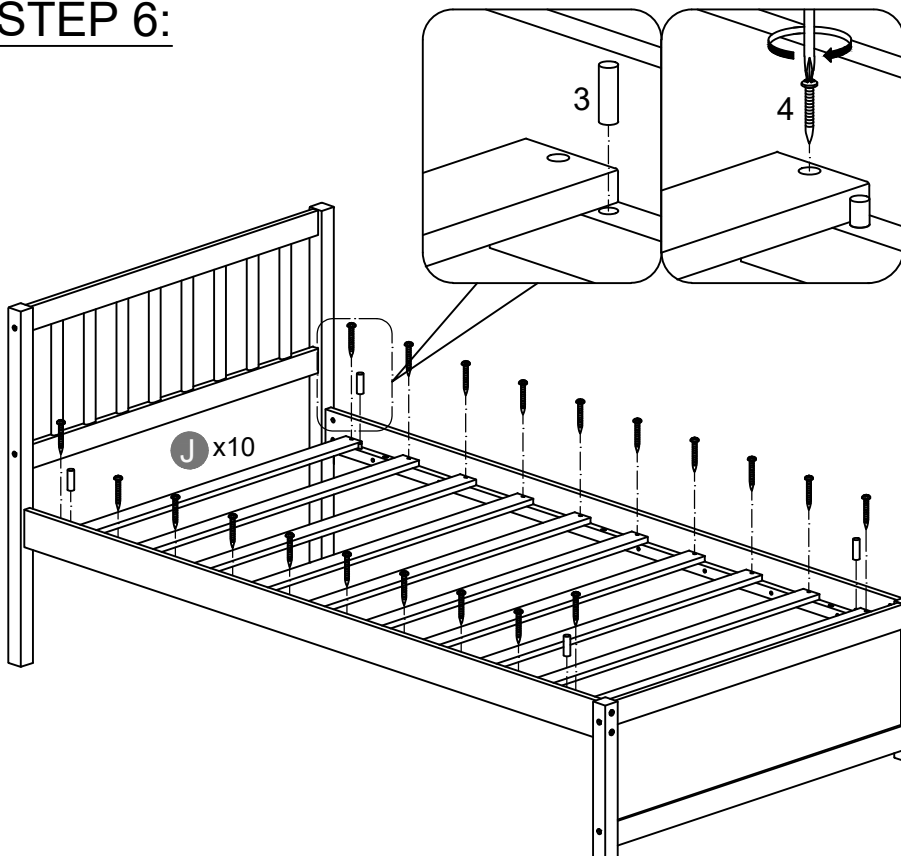

3





4pcs

4



20 pcs

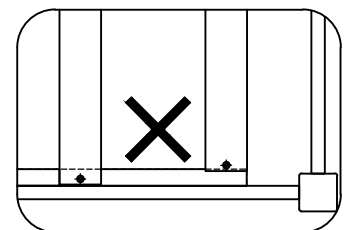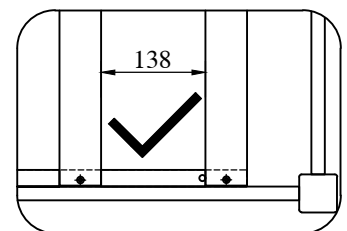

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 7:

4






8 pcs

10



4pcs


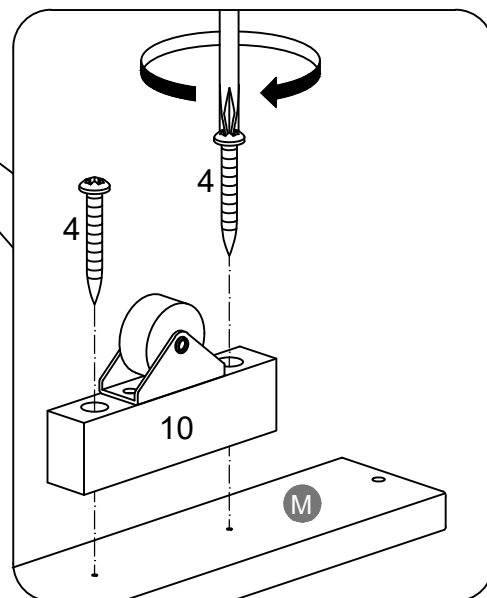
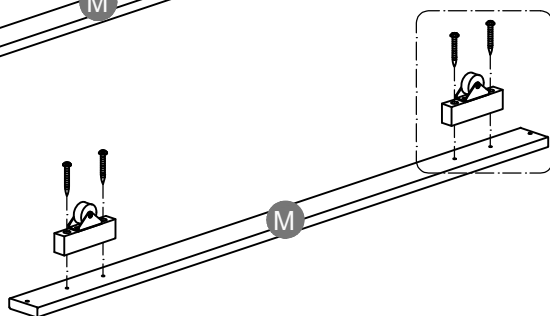
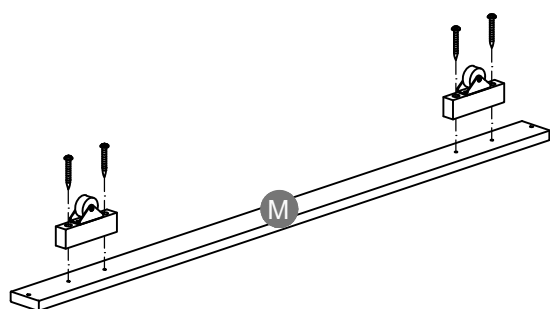


STEP 8:

4






14 pcs

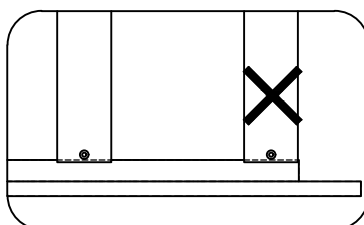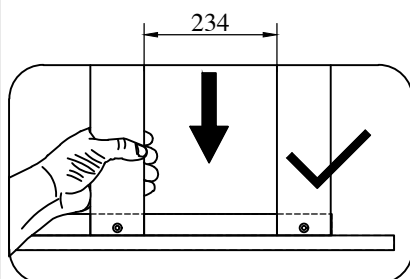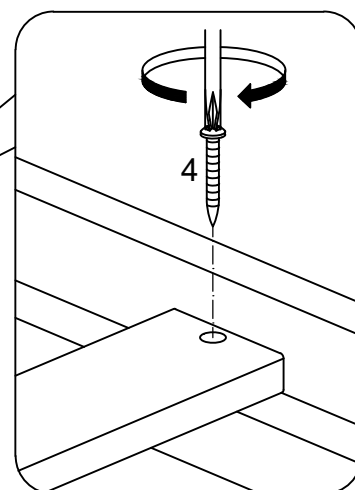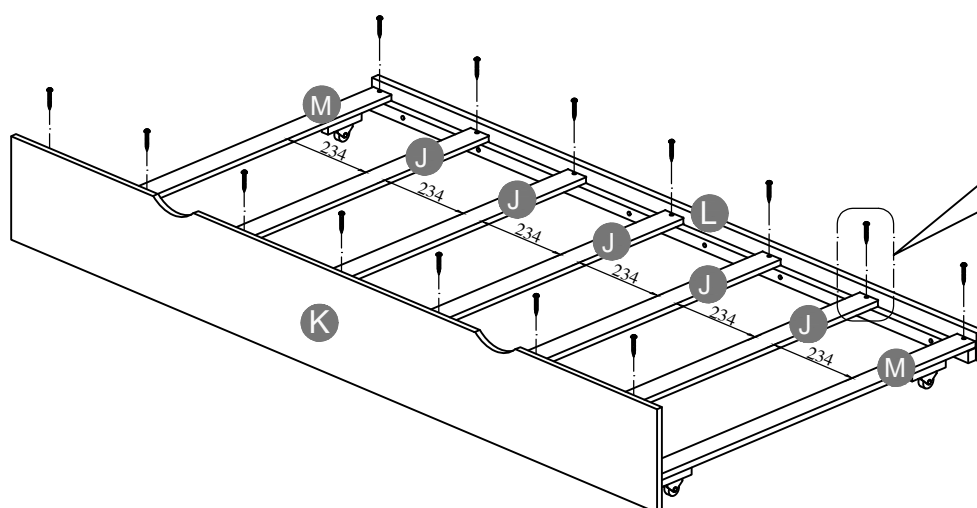


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw


STEP 9:


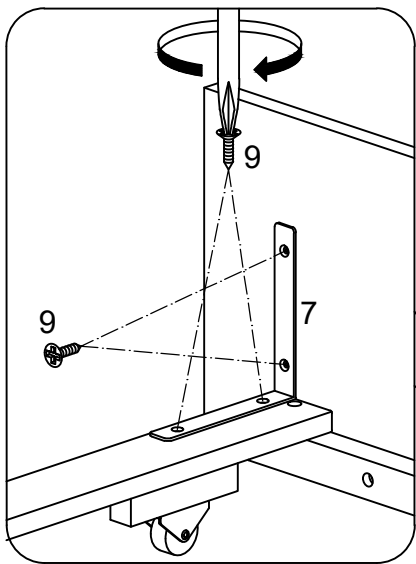



7		9	
2pcs		8 pcs	

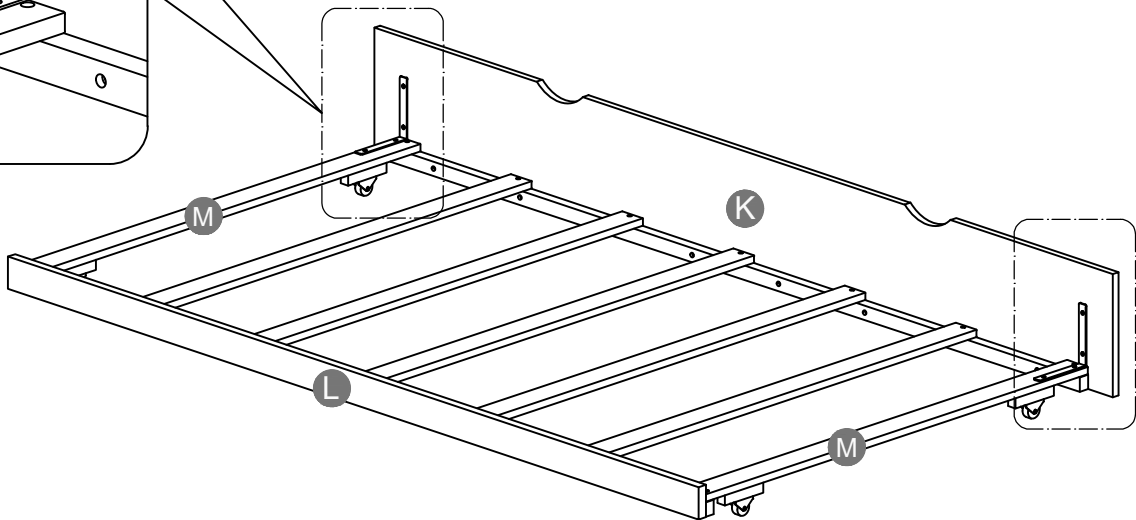




STEP 10:

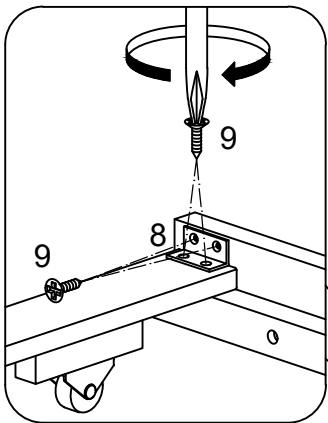


8		9	
2pcs		8 pcs	


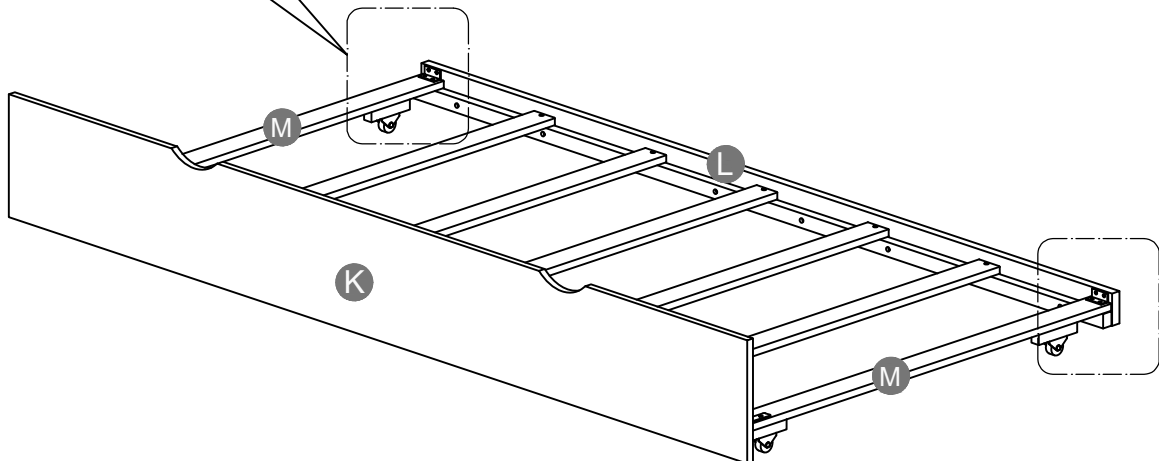


STEP 11:

6	 (Ø12)1/4"*55mm 2pcs
3  2pcs	11  2pcs

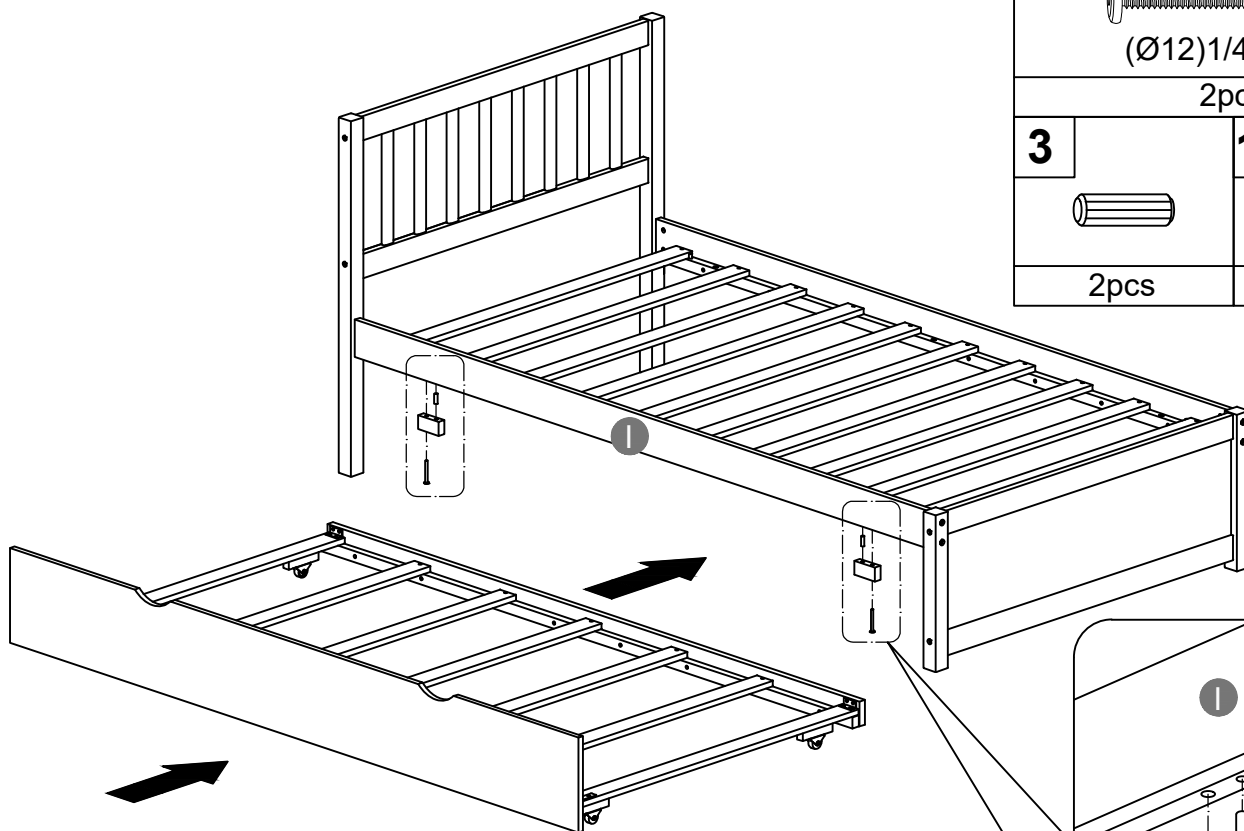

Push Trundle under the bottom of Bed.

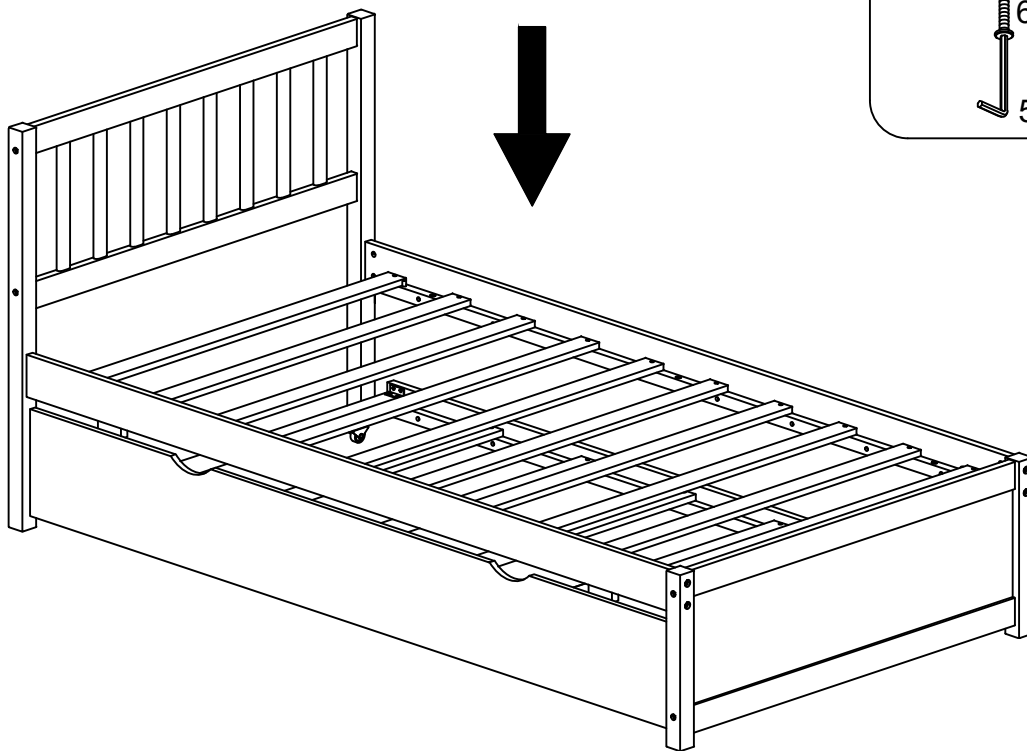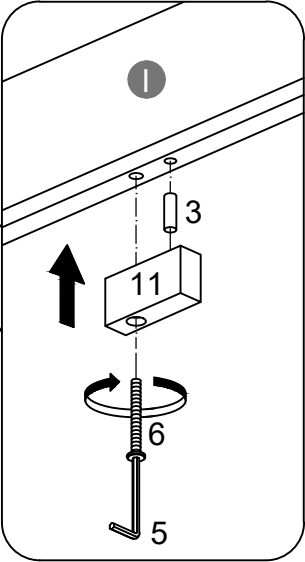

Make sure to tighten all the screws of the bed.