


# Kitchen Islands Carts

Assembly Instructions - Please keep for future reference

WF297003

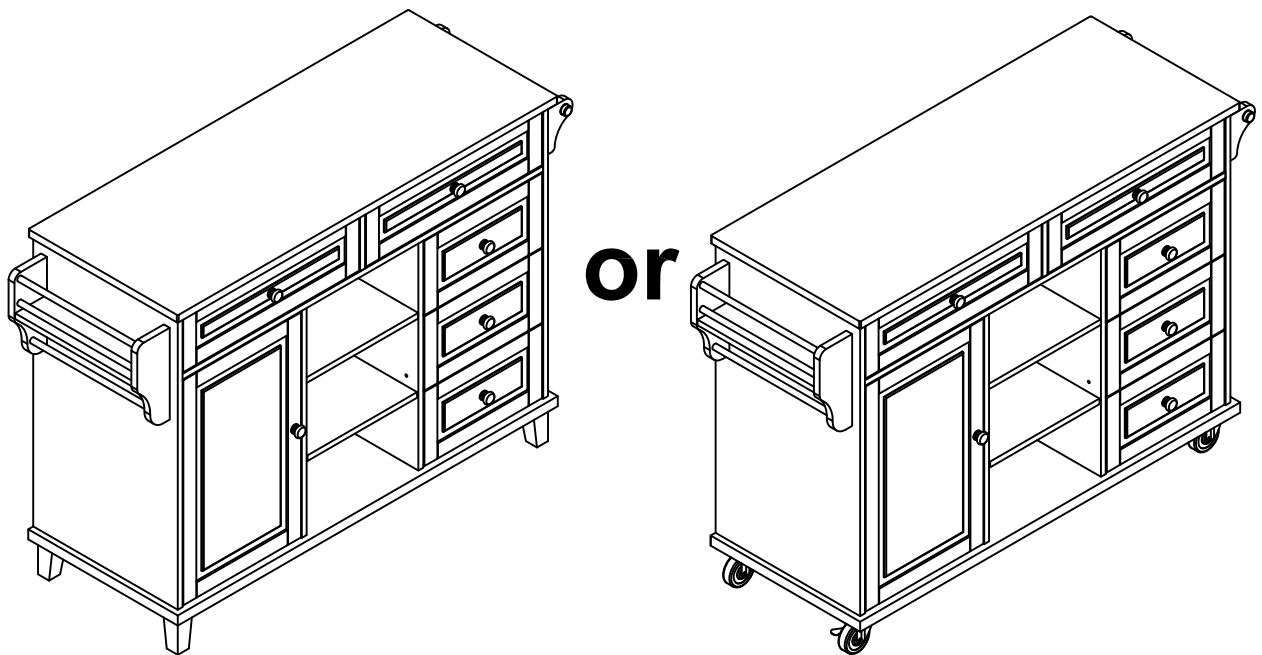

## Dimensions

Width-46 inch

Depth-18 inch

Height-36.25 inch

**Important – Please read these instructions fully before starting assembly**

Issue 1 - 10/13/22



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose






















Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


# Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>(A)</b>  Dowel x43	<b>(B)</b>  Cam Bolt x44	<b>(C)</b>  Cam lock x24	<b>(D)</b>  Male Camlock x20
<b>(E)</b>  4*50mm Screw x15	<b>(F)</b>  4*35mm Screw x25	<b>(G)</b>  Handle x6	<b>(H)</b>  4*18mm Bolt x6
<b>(I)</b>  Door Hinge x2	<b>(J)</b>  3.5*14mm Screw x12	<b>(K)</b>  Drawer slide 14" x10	<b>(L)</b>  3.0*12mm Screw x60
<b>(M)</b>  Shelf Support Pin x8	<b>(N)</b>  6*32mm Bolt x8	<b>(O)</b>  6*90mm Bolt x6	<b>(P)</b>  Flat Washer x6
<b>(Q)</b>  Lock Washer x6	<b>(R)</b>  Allen Key x1	<b>(S)</b>  Locking Caster x2	<b>(T)</b>  Caster x3
<b>(U)</b>  6*15mm Bolt x20			



## Tools required



Phillips screwdriver  
(medium & large)



## Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

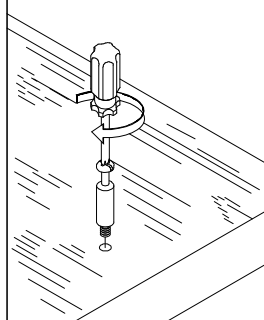

## Step 2

Push the male camlock into the entry hole.

2

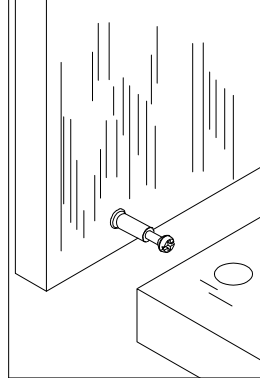


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

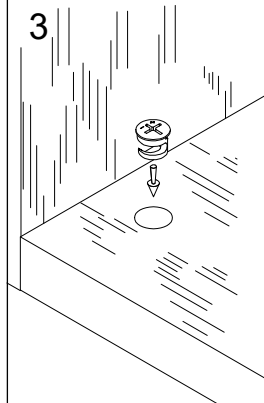


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

4

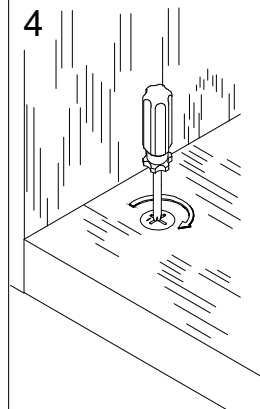

# Adjusting Hinges

## Hinge adjustment:



a: To move the top panel up or down, loosen screws shown and move top panel to suit

b. To move the top panel in or out, loosen screws shown and move top panel to suit.



Retighten screws

C: To move the top panel left or right, adjust screws shown.


a:

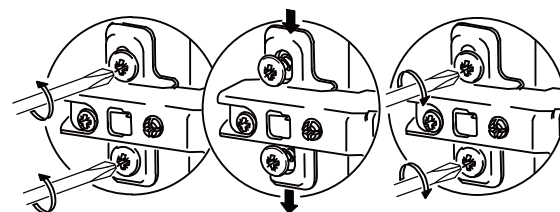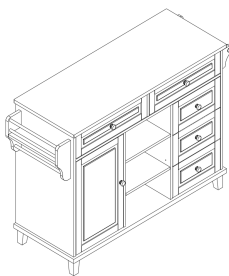


b:

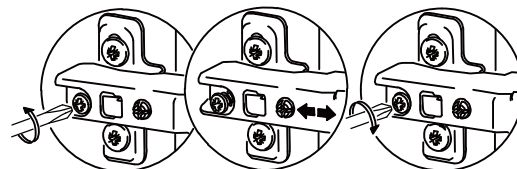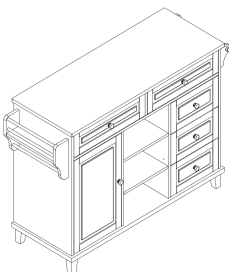

c:

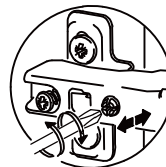


# Assembly Instructions

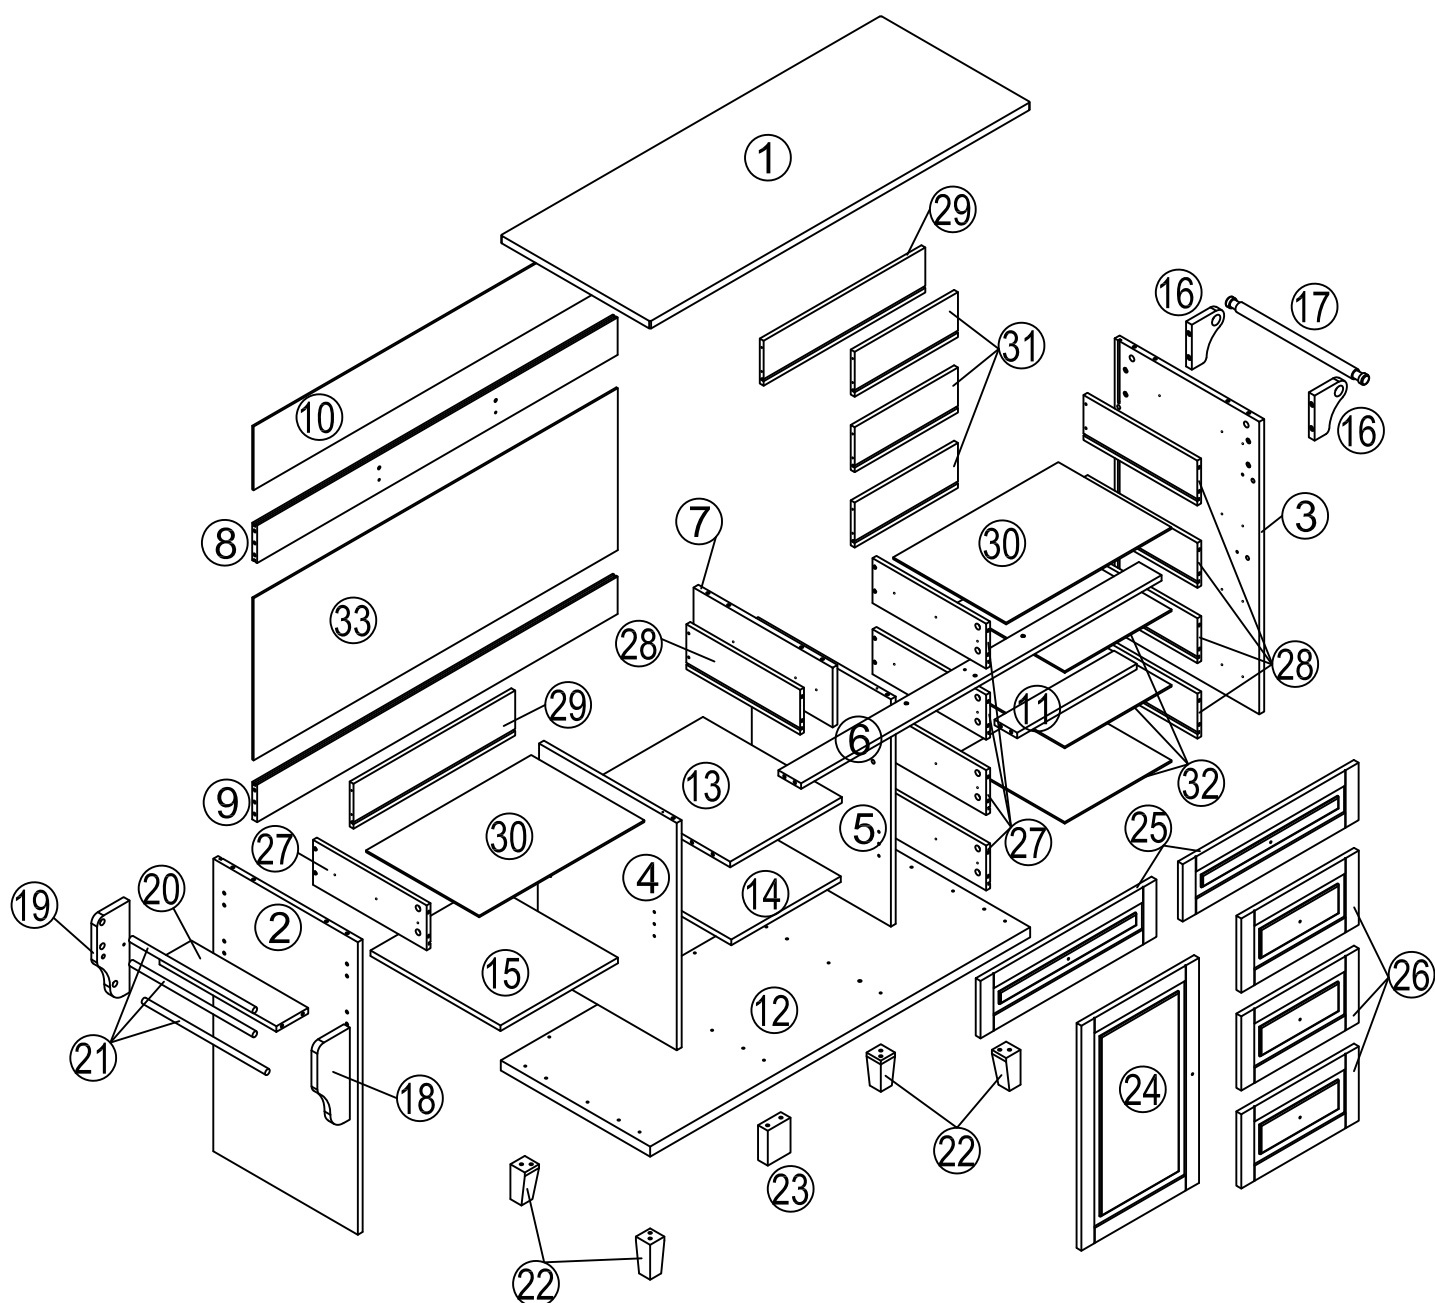


# Assembly Instructions

## Step 1

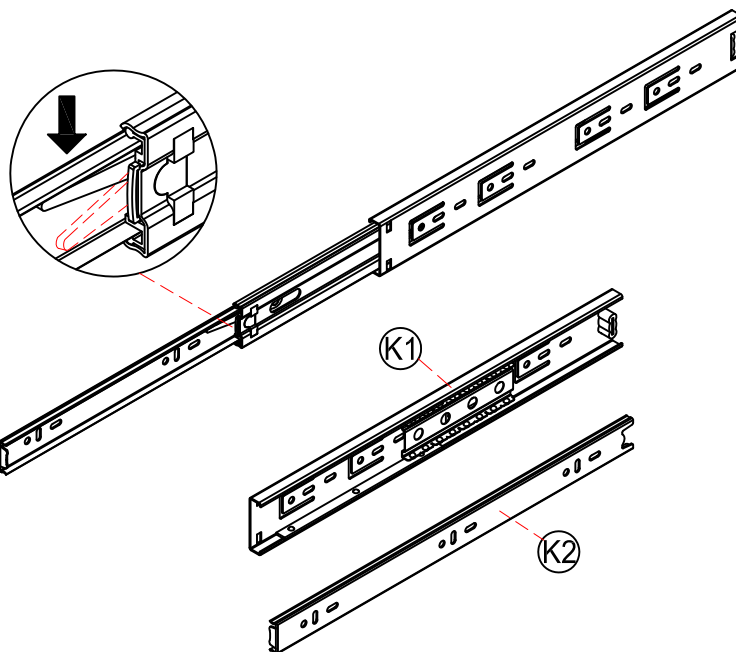


(K)




Drawer slide 14" x10

## Step 2

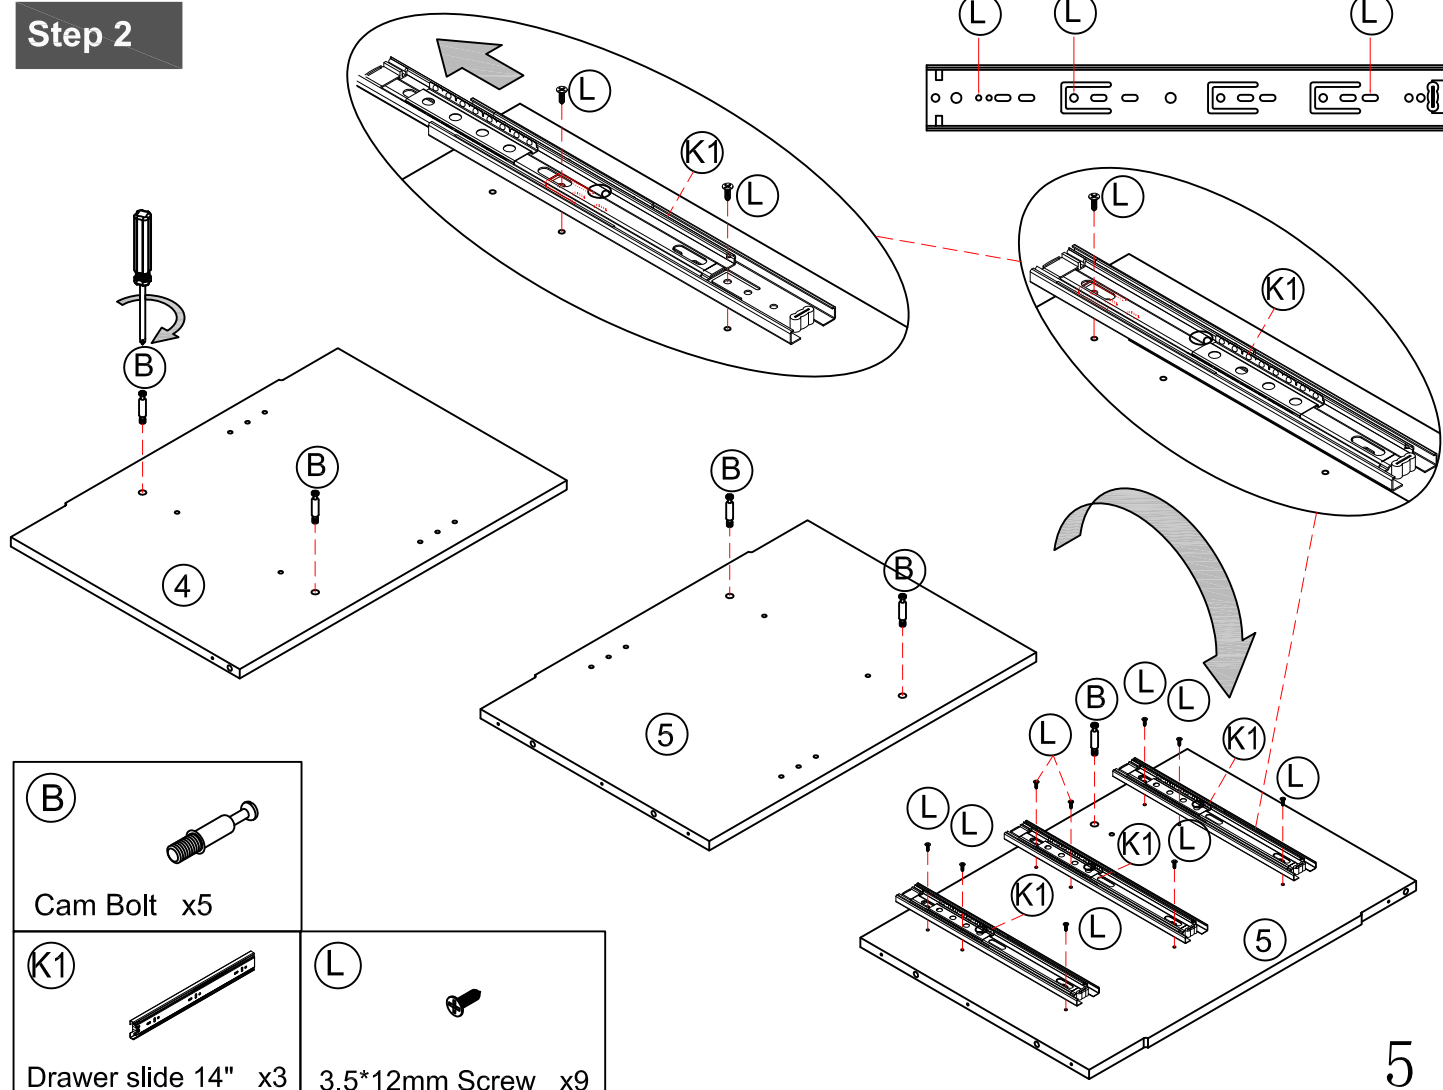


(B)



Cam Bolt x5

(K1)



Drawer slide 14" x3


(L)





3.5\*12mm Screw x9

# Assembly Instructions

## Step 3

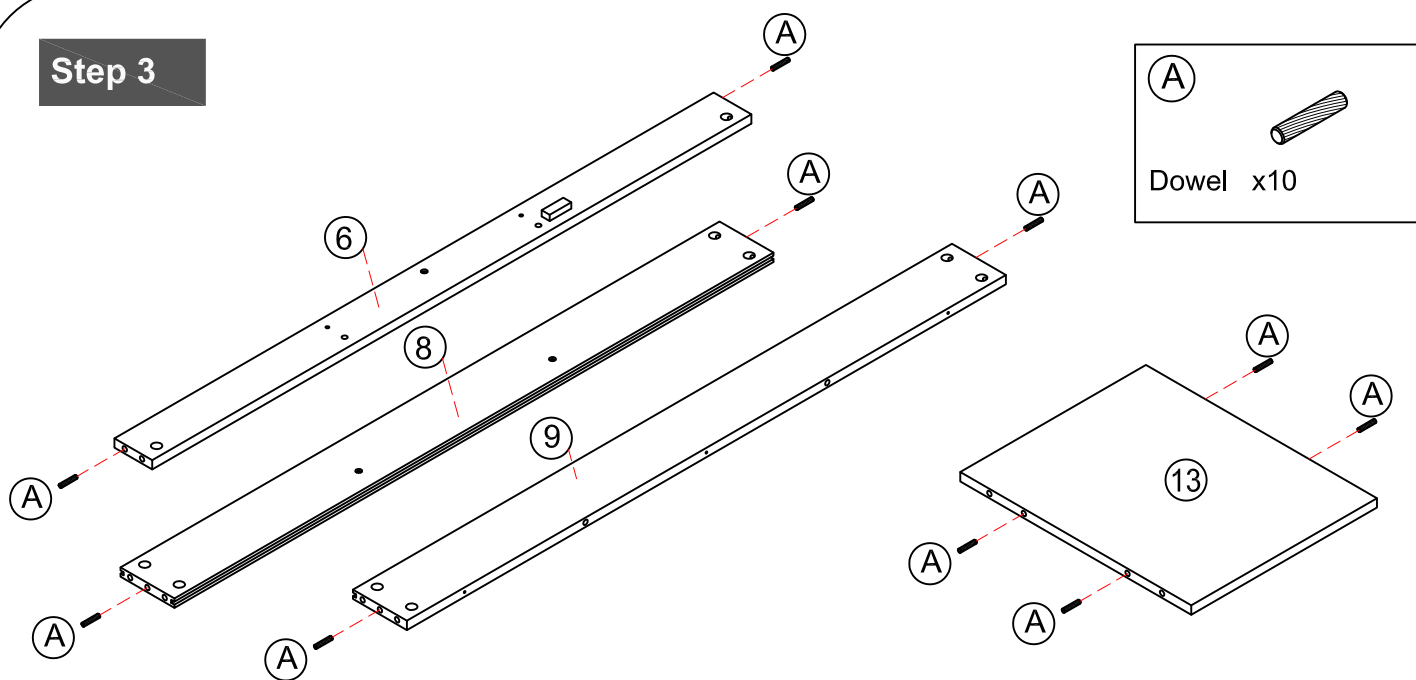


## Step 4

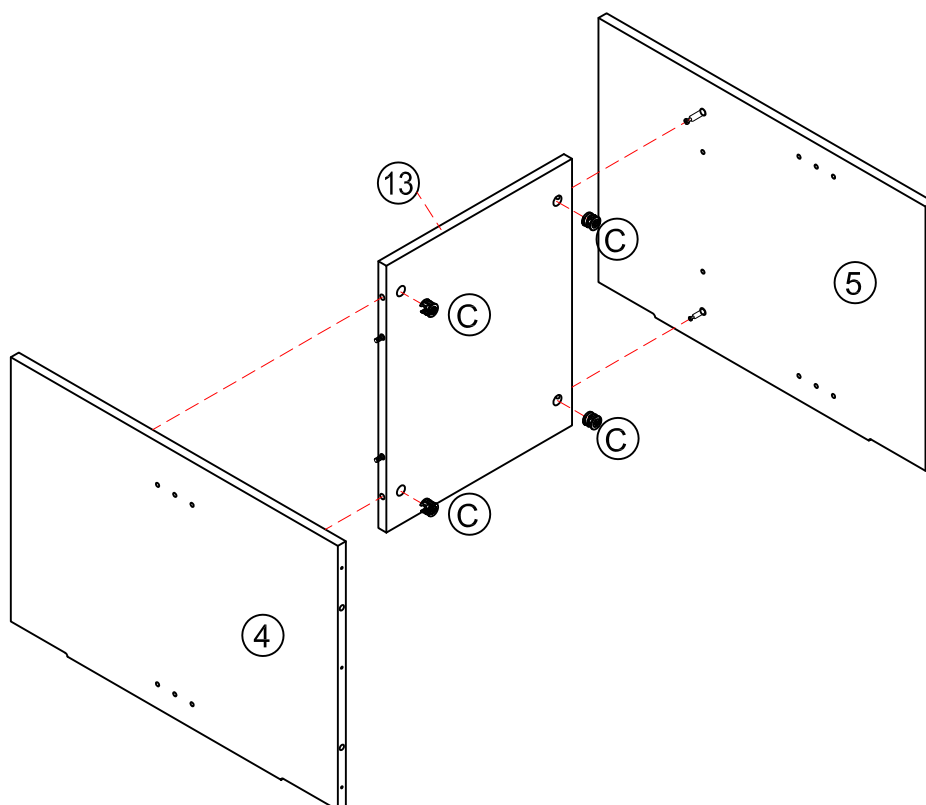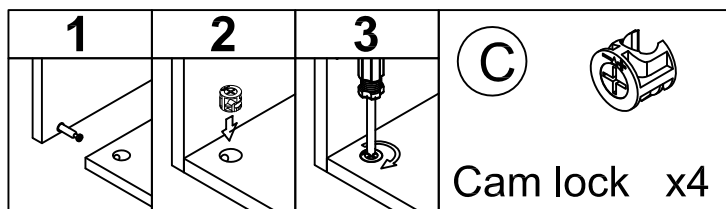

# Assembly Instructions

## Step 5

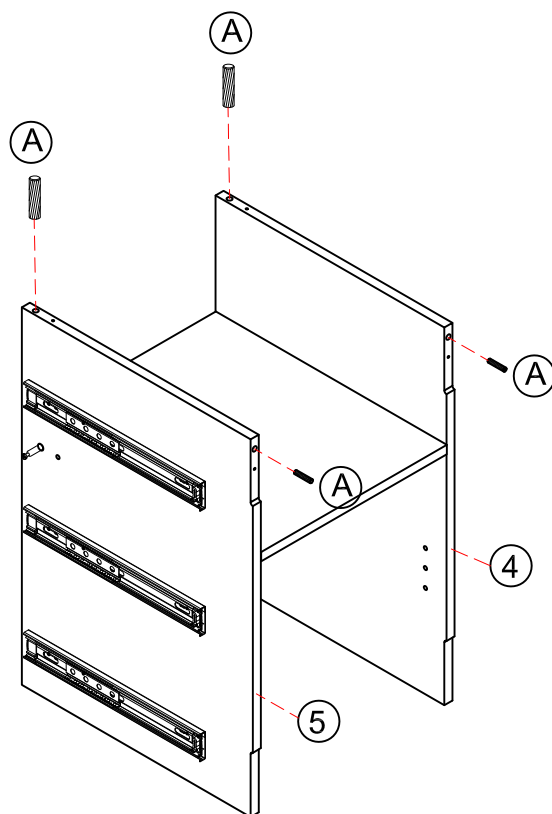


(A)



Dowel x4

## Step 6

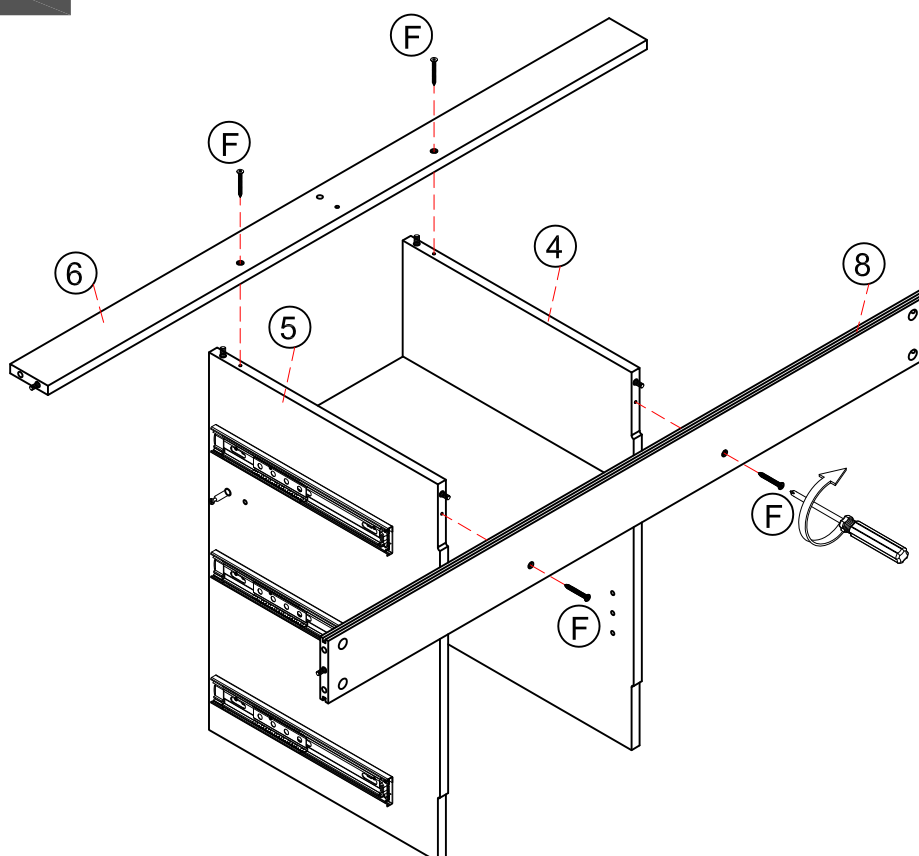

(F)




4\*35mm Screw x4





# Assembly Instructions

## Step 7


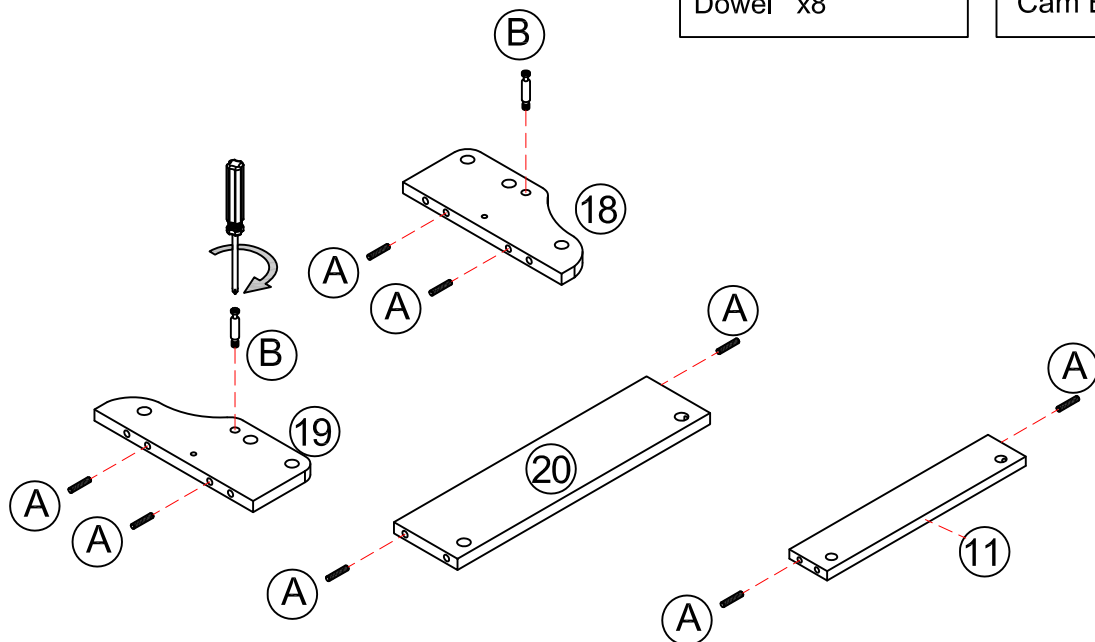


## Step 8

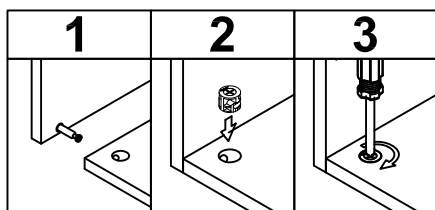
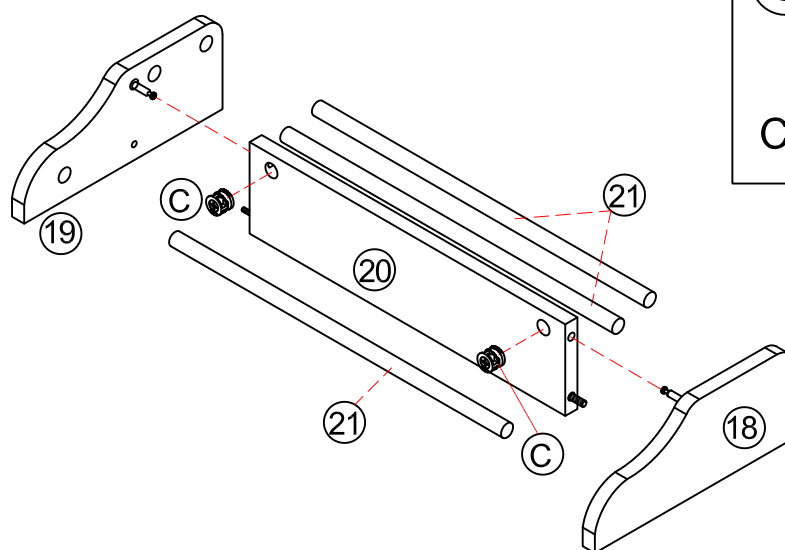


# Assembly Instructions

## Step 9

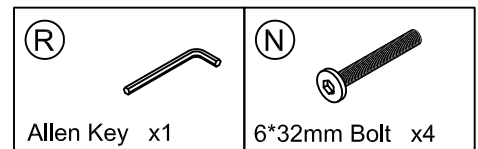
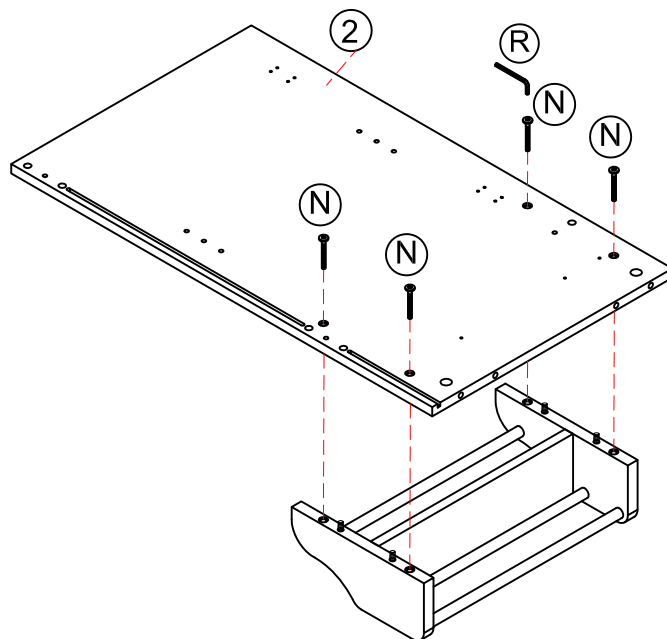


## Step 10

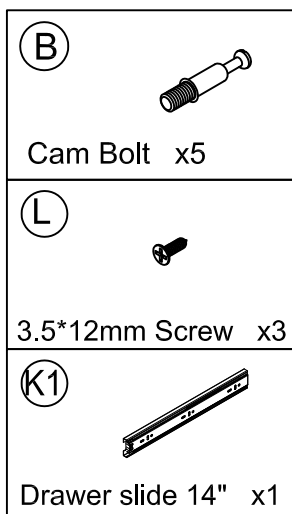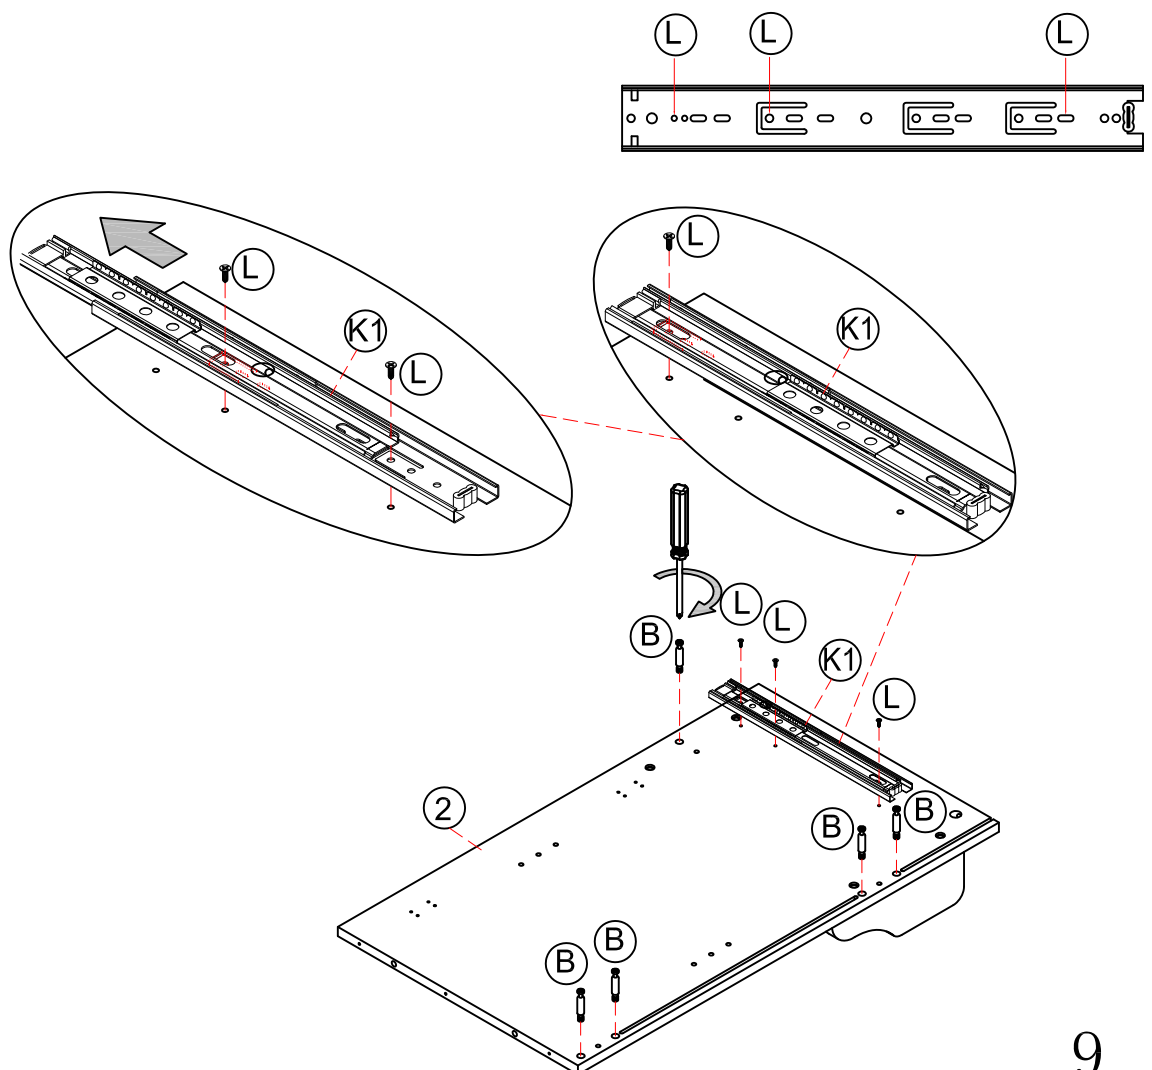


# Assembly Instructions

## Step 11

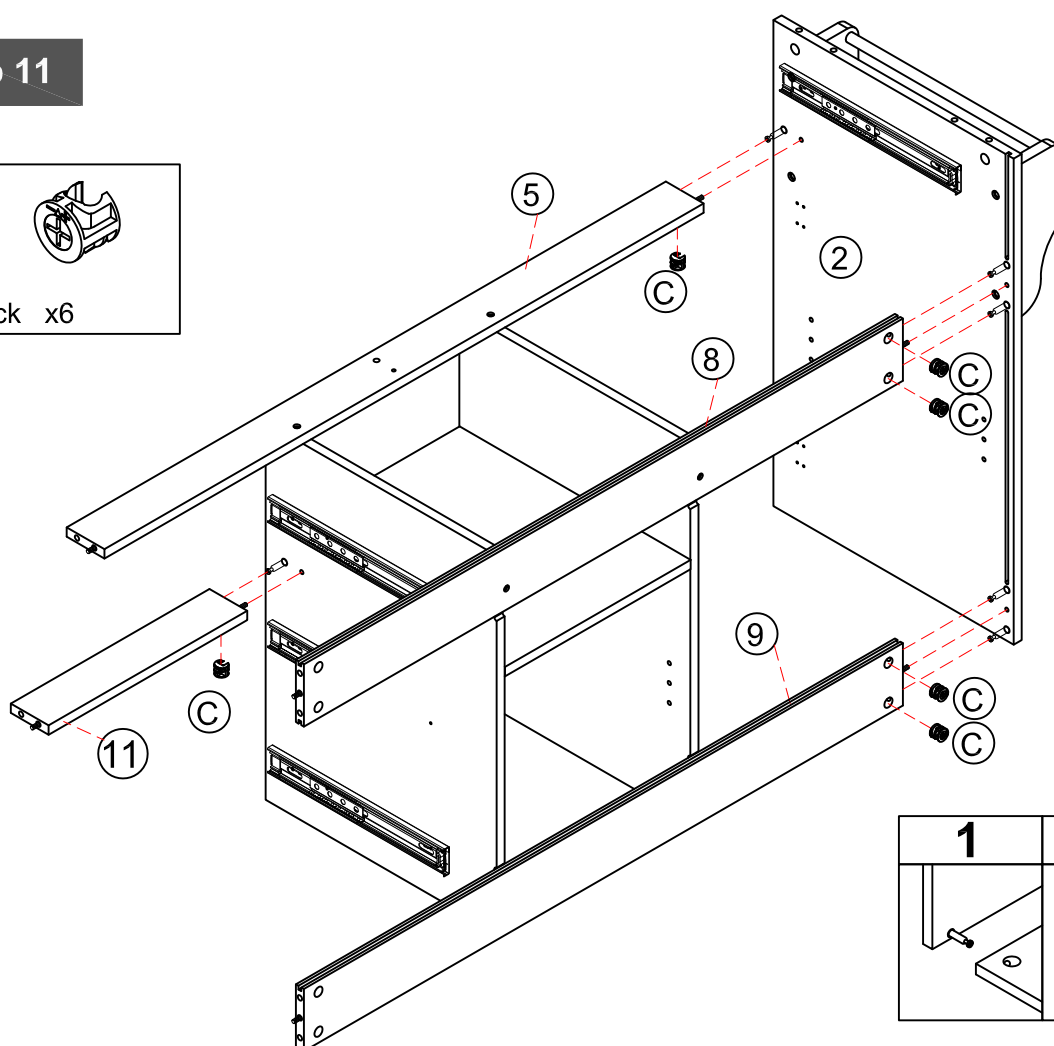
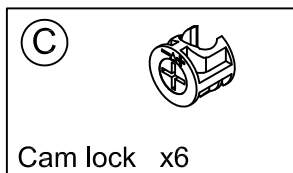


## Step 12



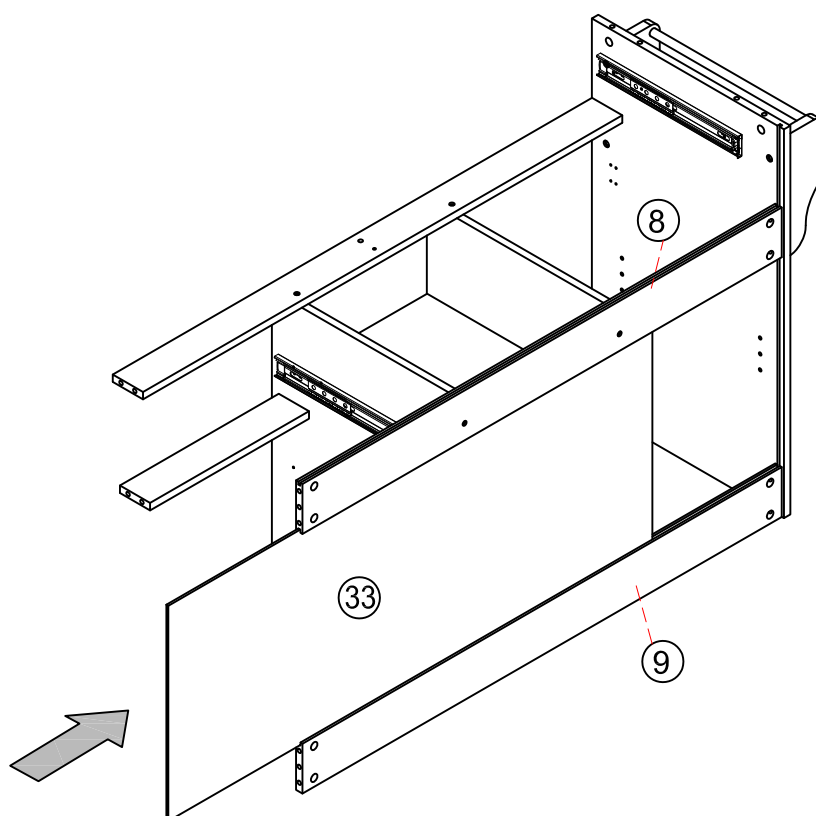


# Assembly Instructions

## Step 13


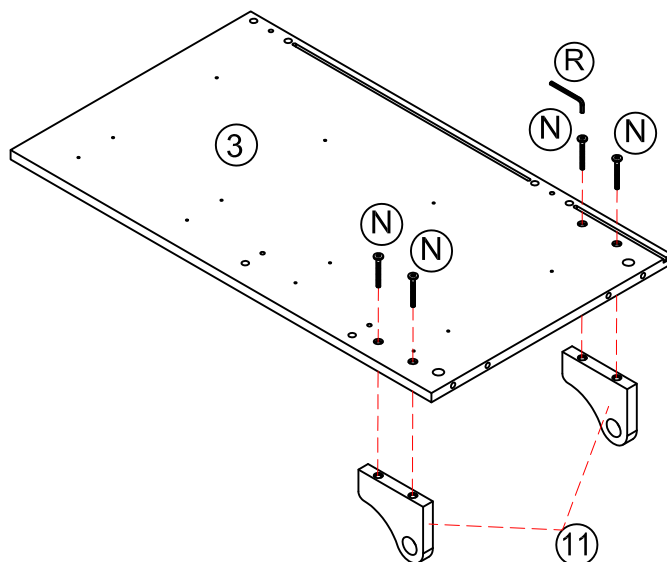
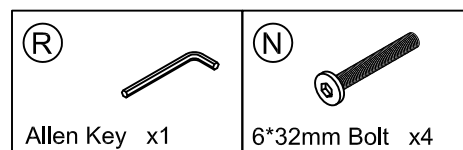


## Step 14

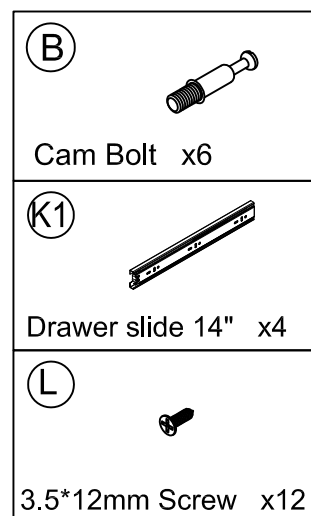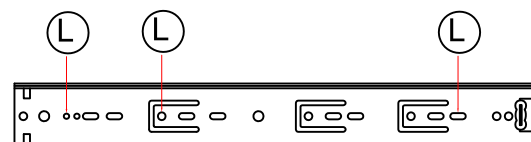
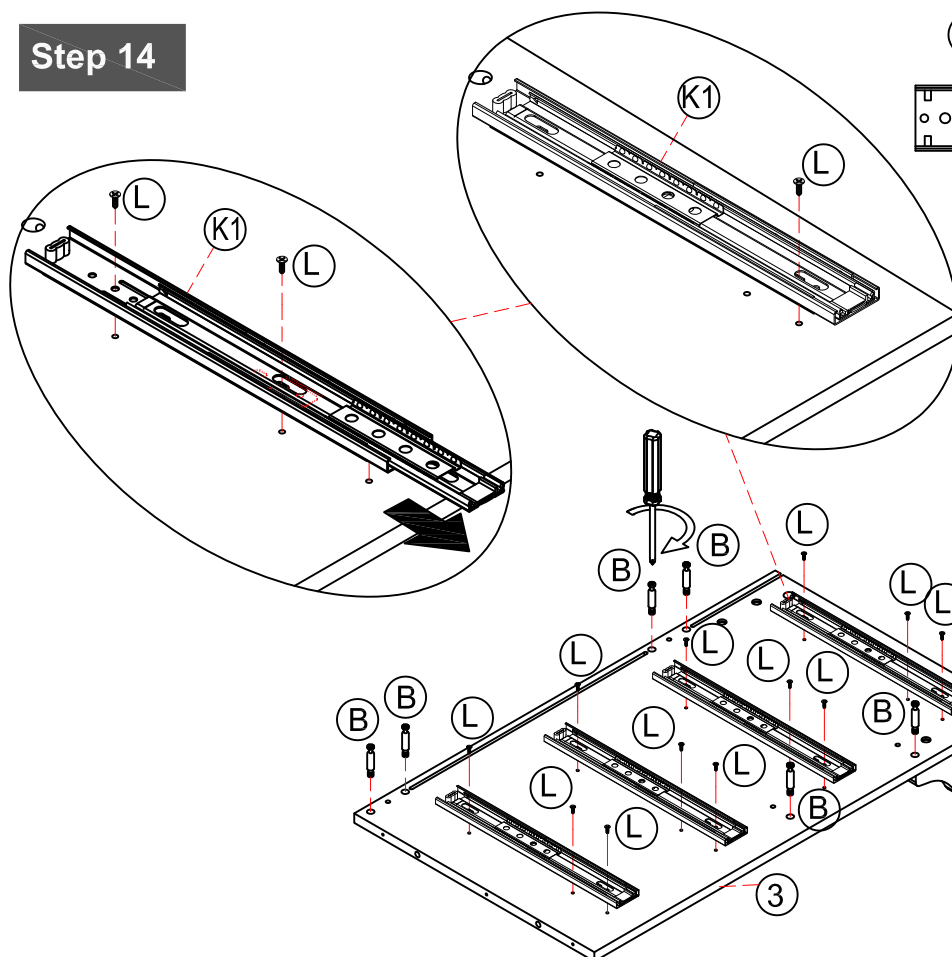


# Assembly Instructions

## Step 15

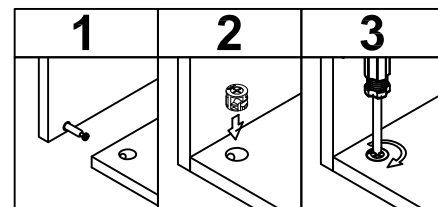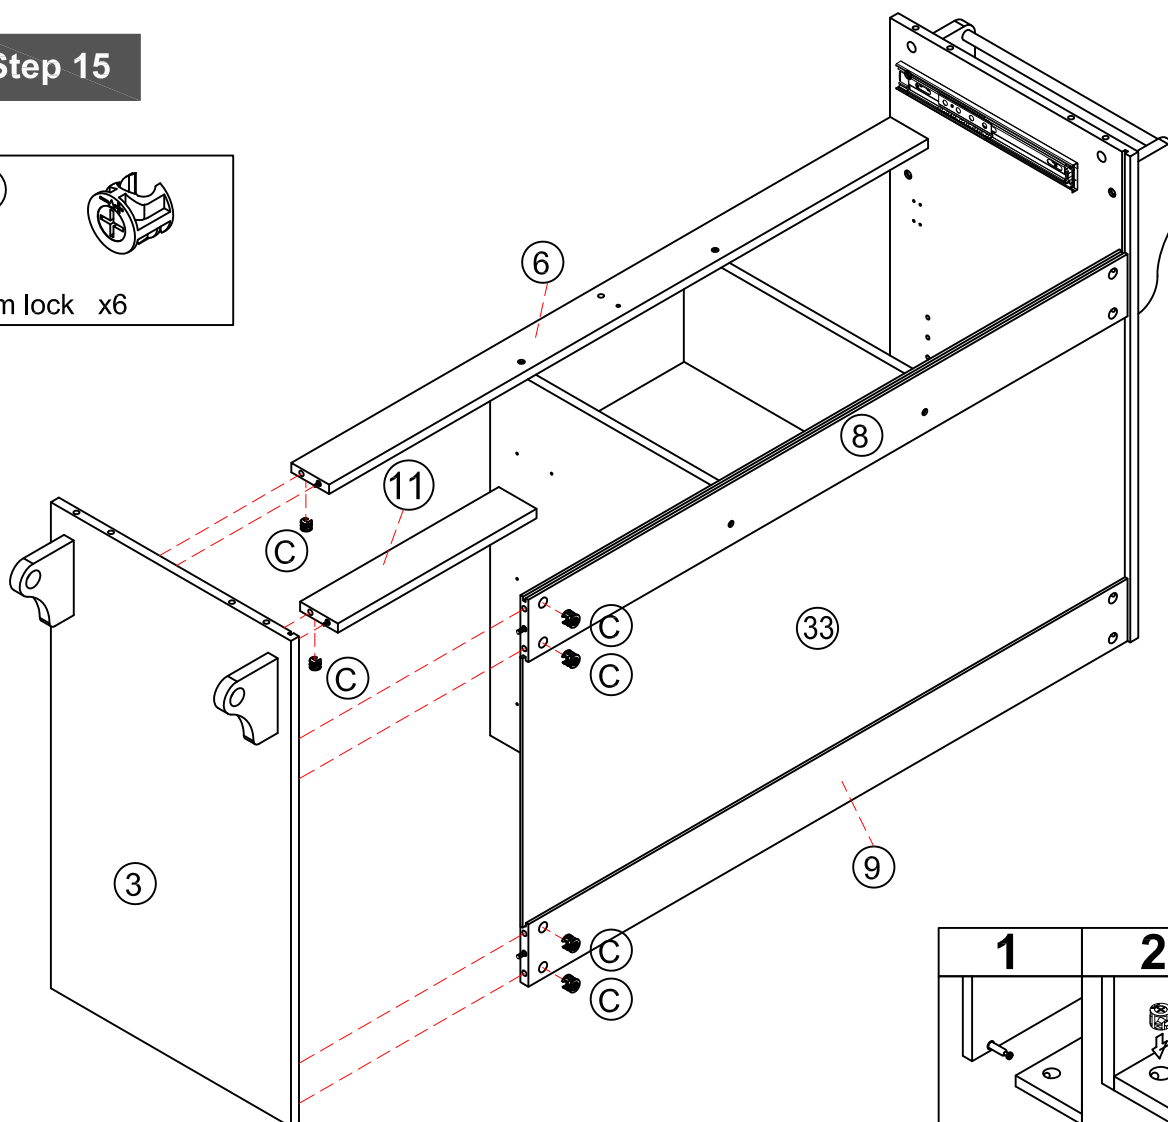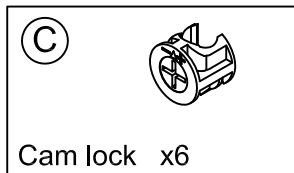


## Step 16

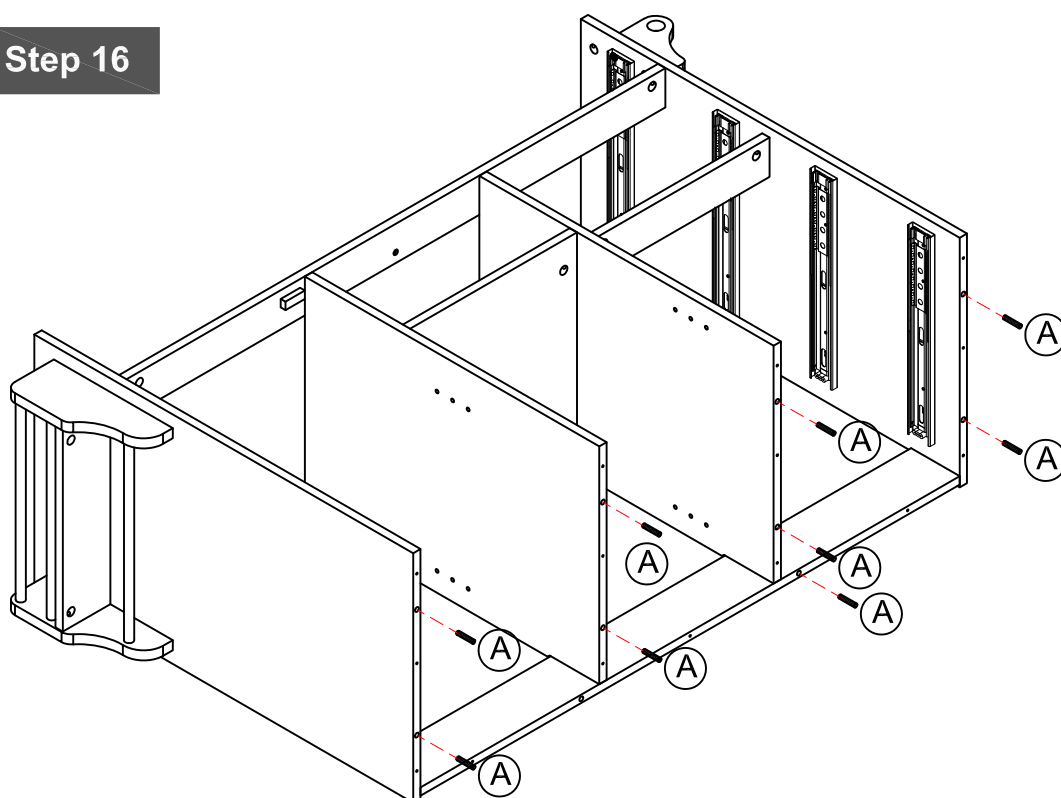
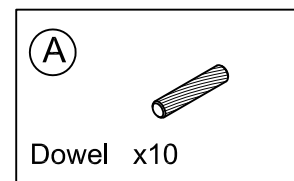


# Assembly Instructions

## Step 17

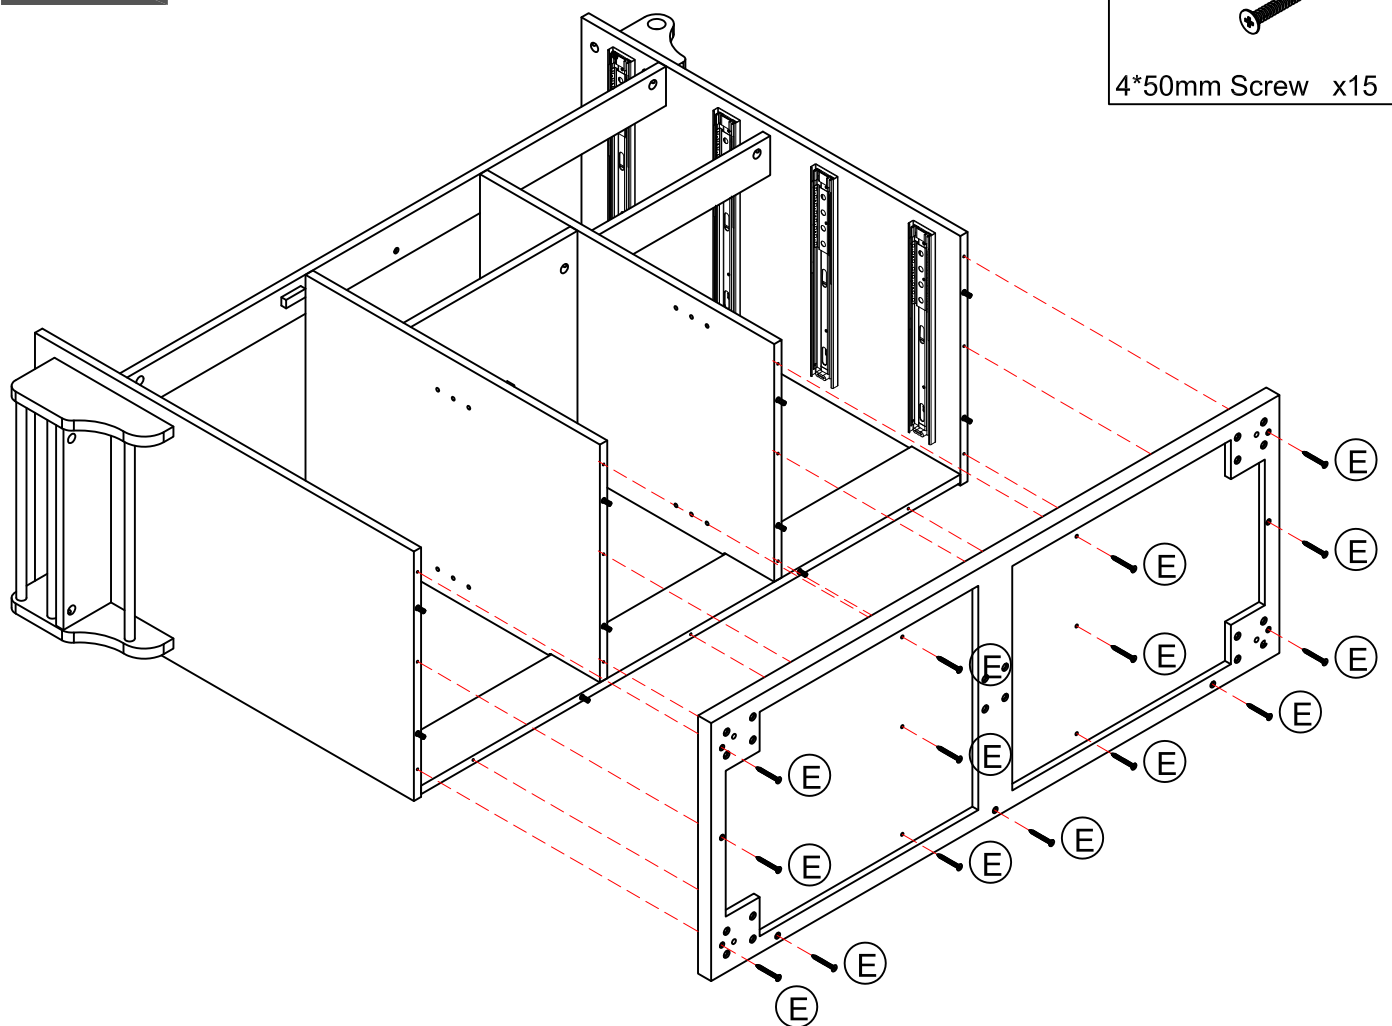



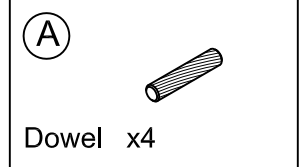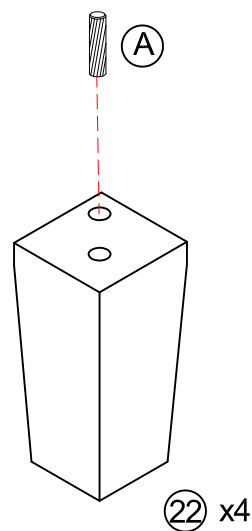


## Step 18







# Assembly Instructions

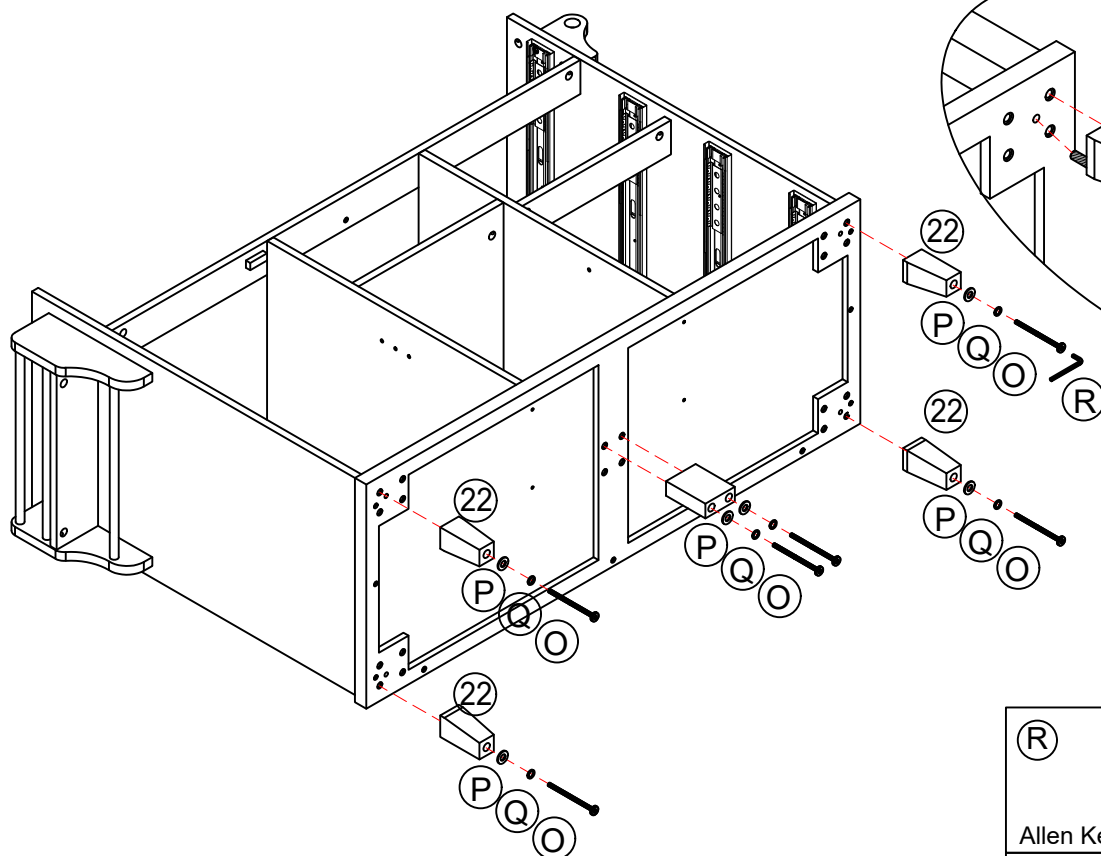
## Step 19

<p>○</p>  <p>6*90mm Bolt x6</p>	<p>○</p>  <p>Flat Washer x6</p>	<p>○</p>  <p>Lock Washer x6</p>	<p>○</p>  <p>Allen Key x1</p>
--	--	--	--




or

<p>○</p>  <p>Allen Key x1</p>	<p>○</p>  <p>Caster x3</p>
<p>○</p>  <p>Locking Caster x2</p>	<p>○</p>  <p>6*12mm Bolt x20</p>

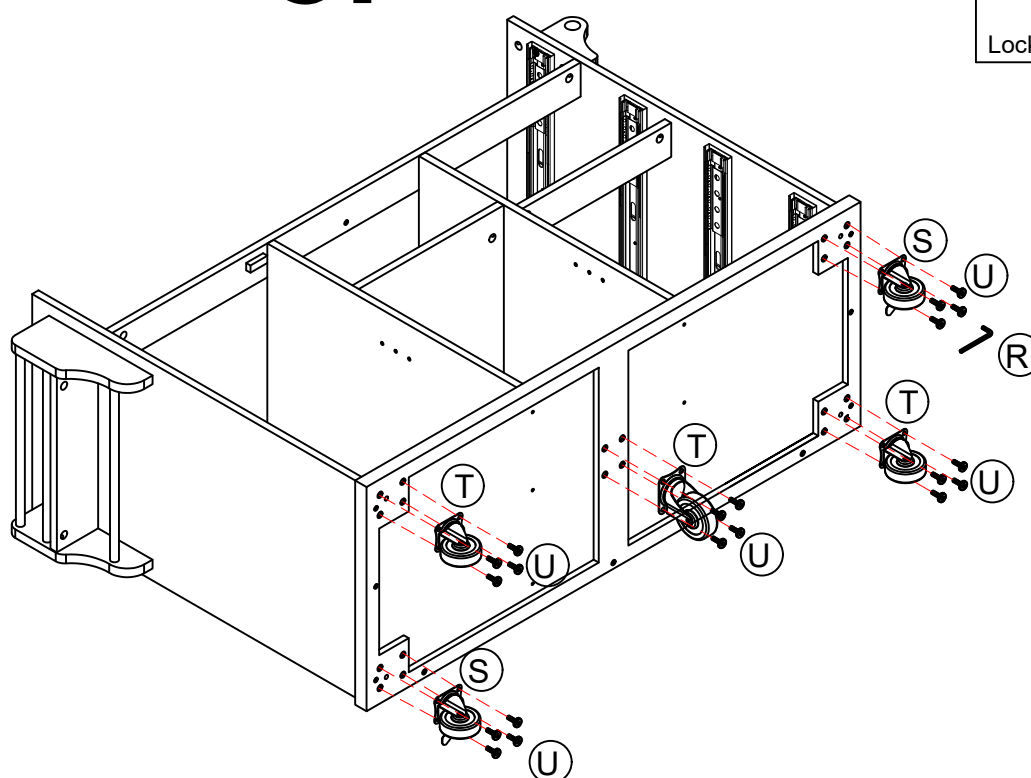


# Assembly Instructions

## Step 20

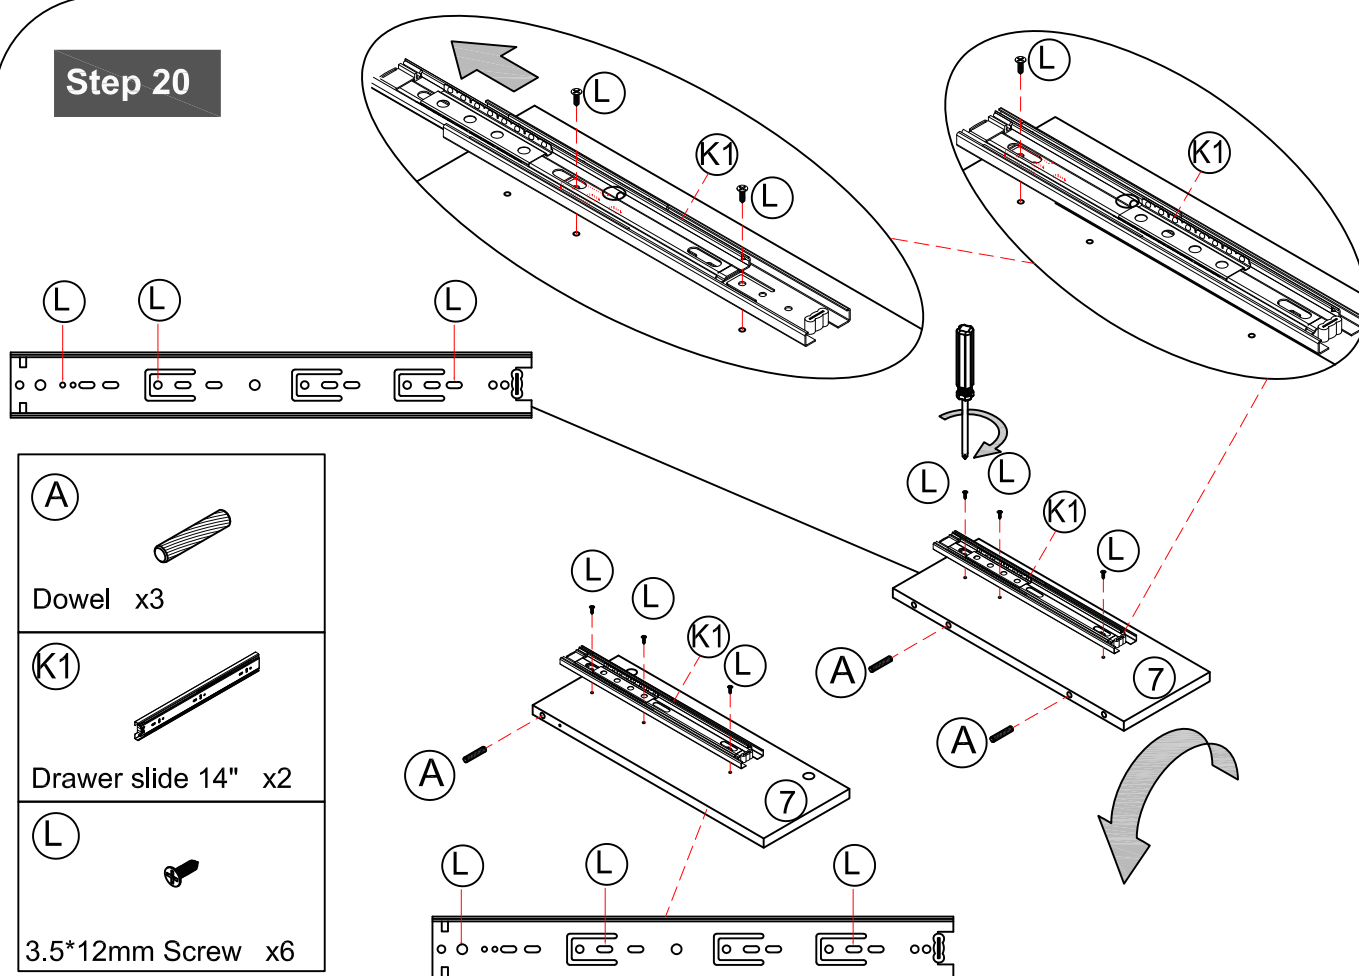

## Step 21

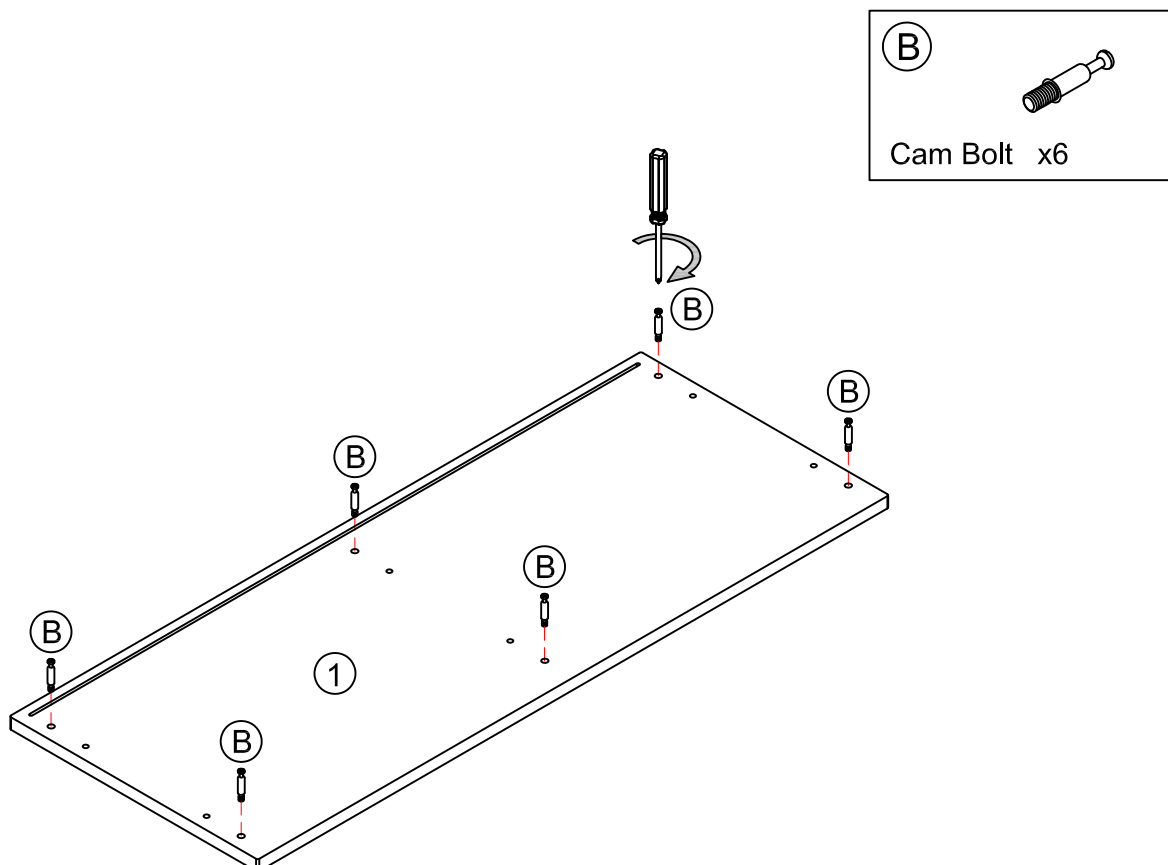





# Assembly Instructions

## Step 22

(C)



Cam lock x2

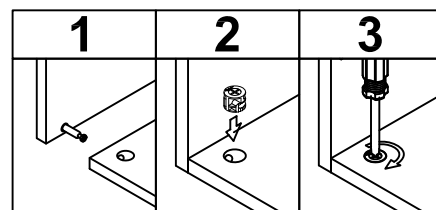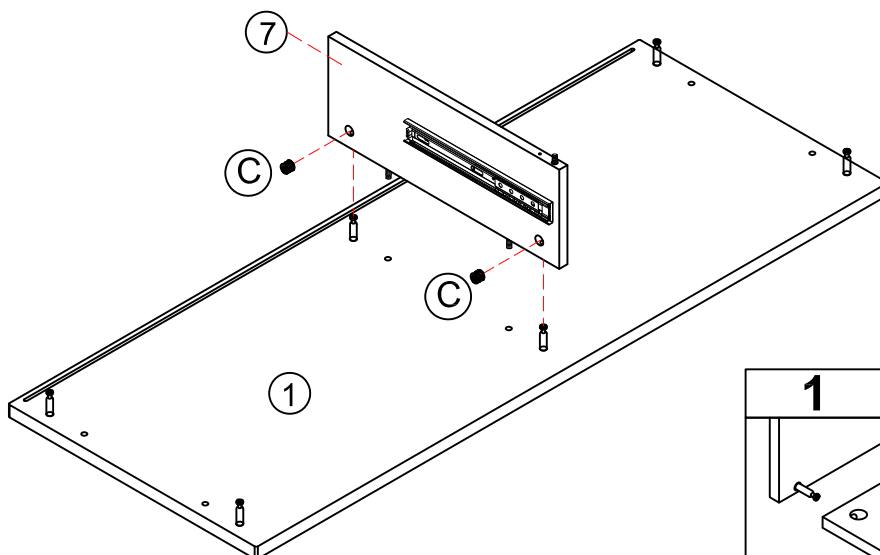


## Step 23

(A)



Dowel x4

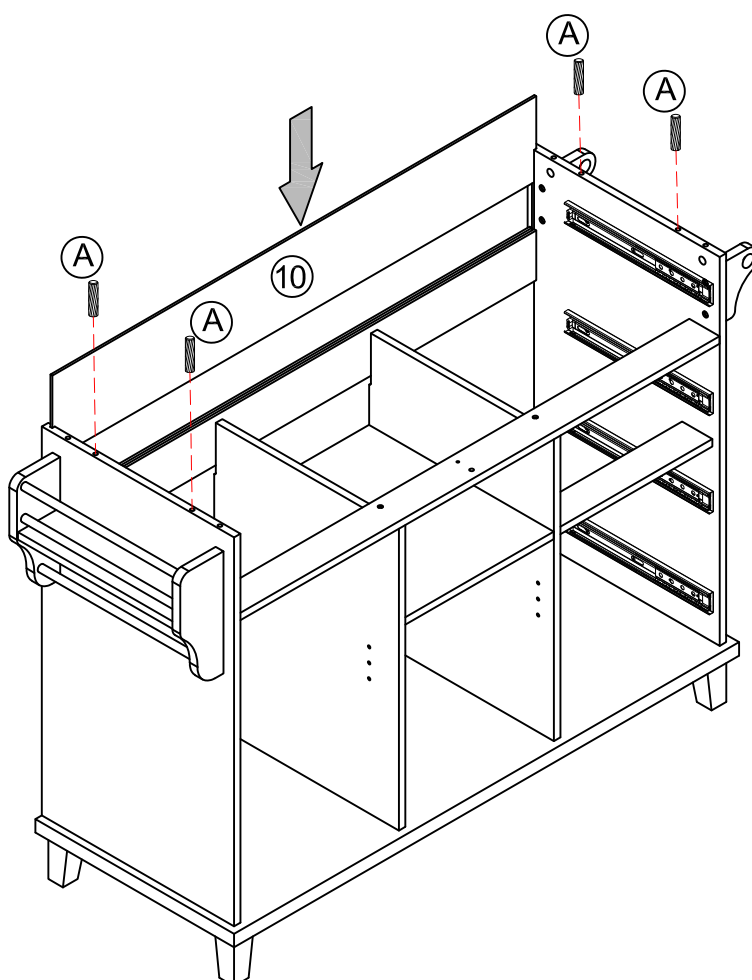

# Assembly Instructions

## Step 24

C





Cam lock x4

F




4\*35mm Screw x1

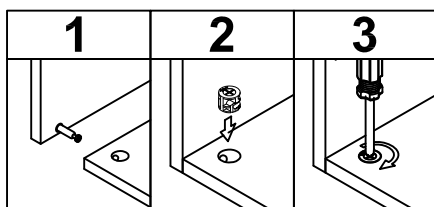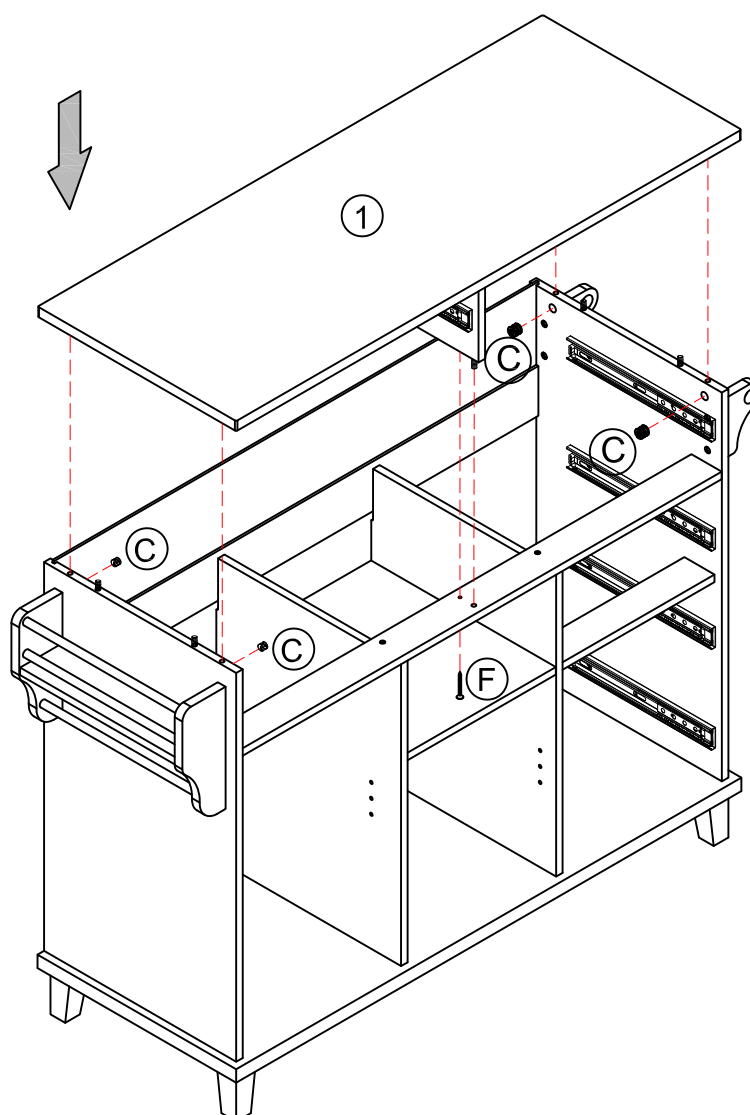

# Assembly Instructions

## Step 25


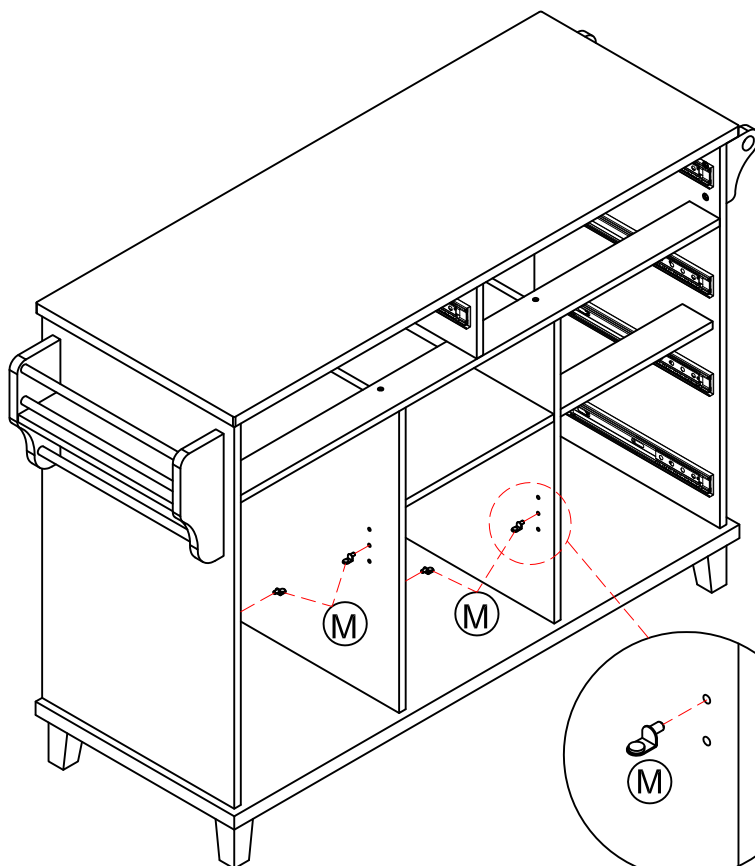


(M)




Shelf Support Pin x8

## Step 26

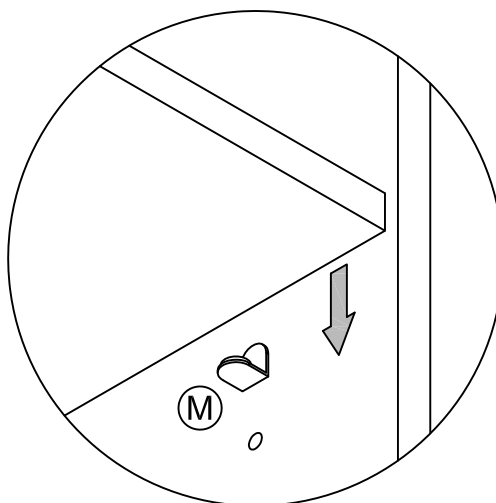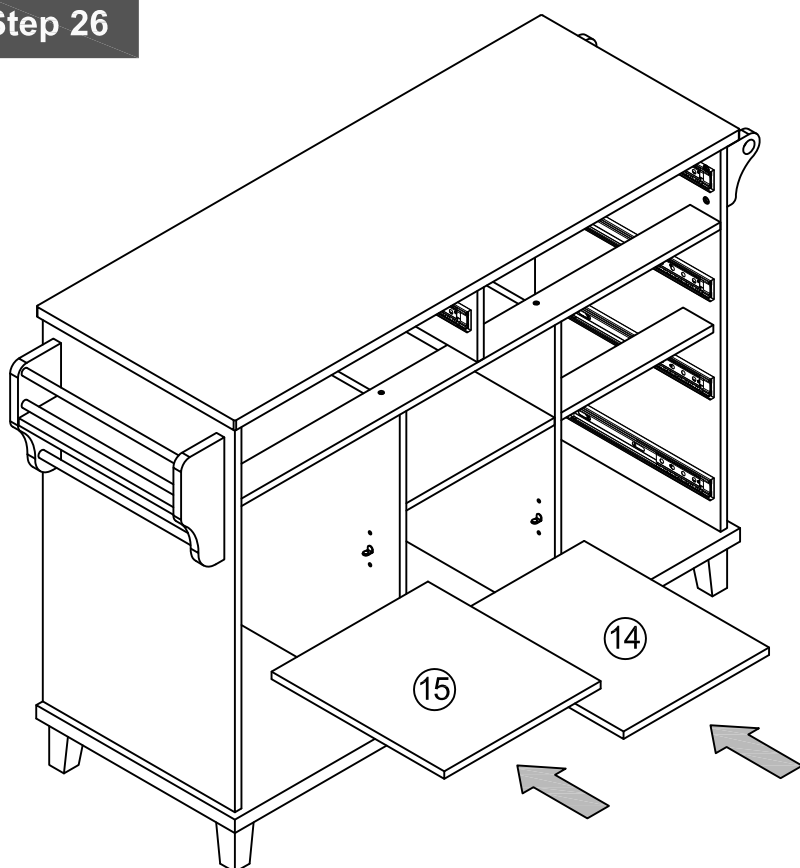


# Assembly Instructions

## Step 27

(B)   
Cam Bolt x20


(K2)   
Drawer slide 14" x10

(L)   
3.0\*12mm Screw x30

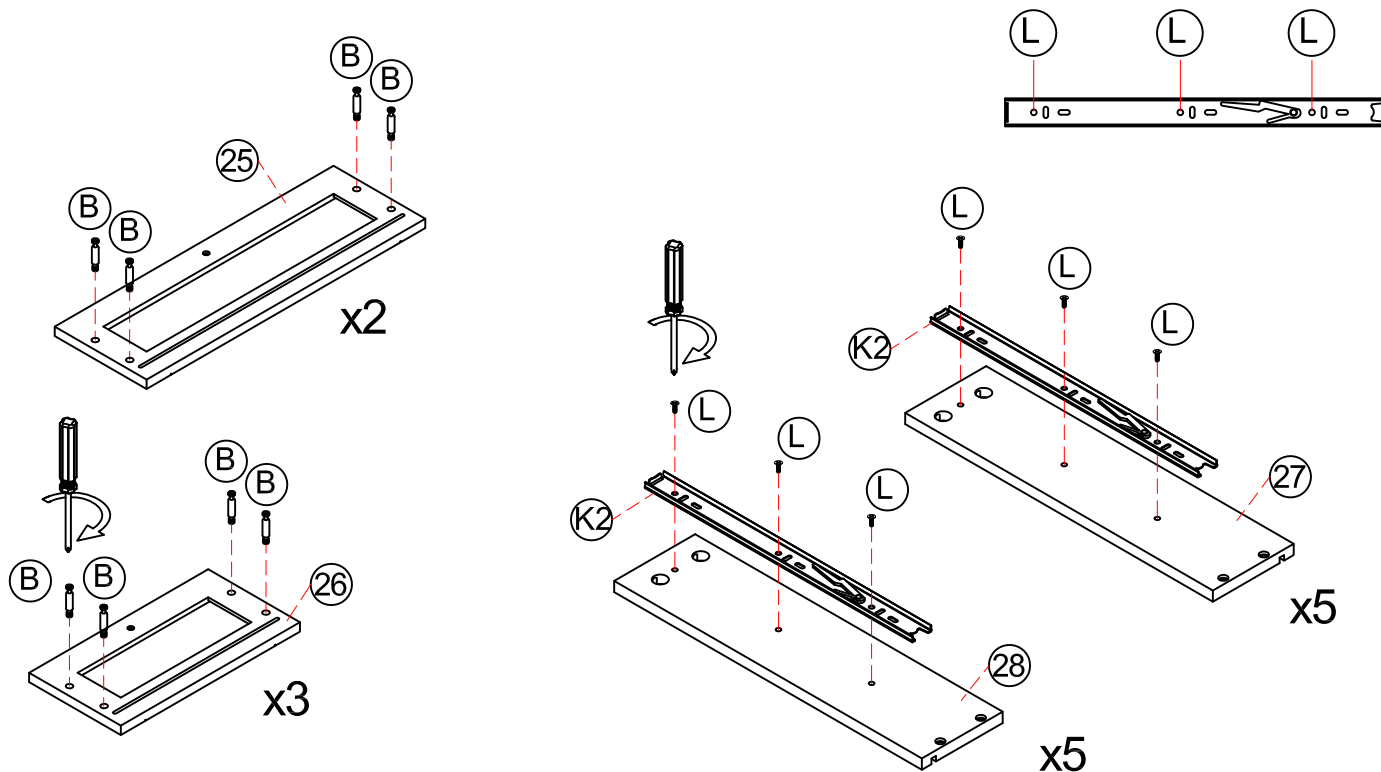

## Step 28




(F)   
4\*35mm Screw x20

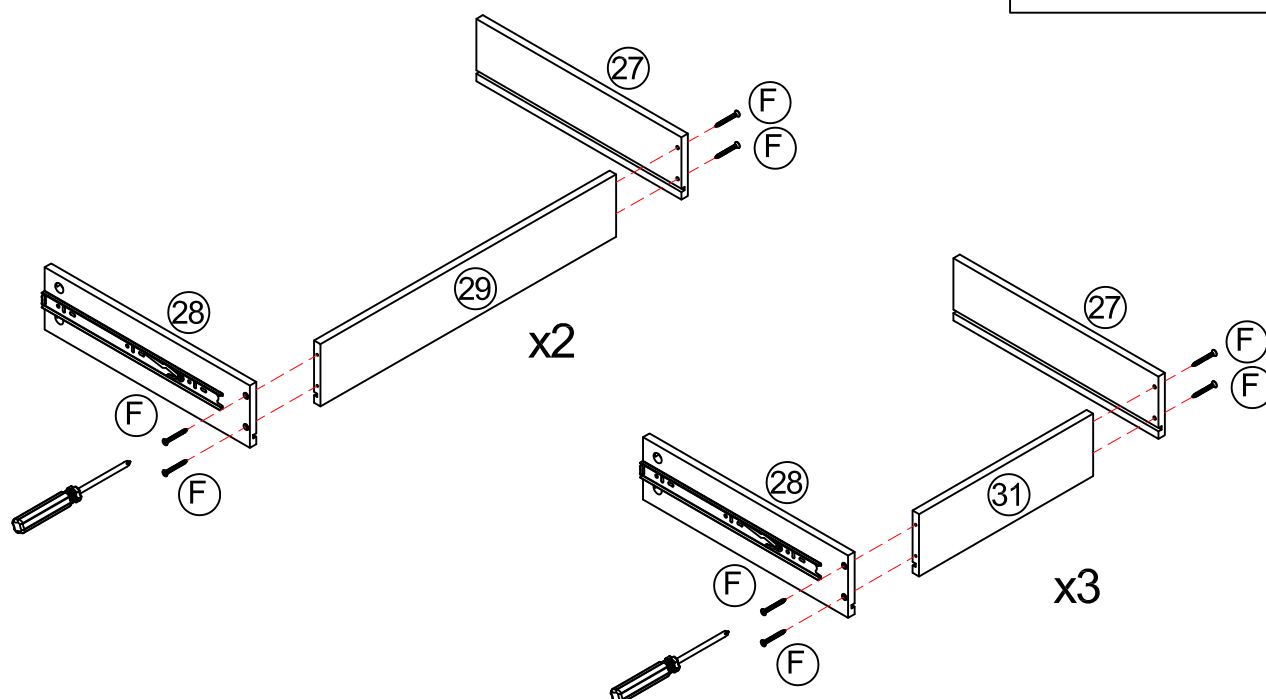

# Assembly Instructions




## Step 29

<p>(G) Handle x3</p>	<p>(H) 4*18mm Bolt x3</p>	<p>(D) Male Camlock x12</p>
----------------------	---------------------------	-----------------------------

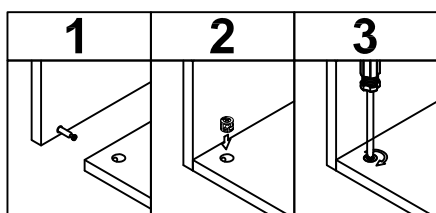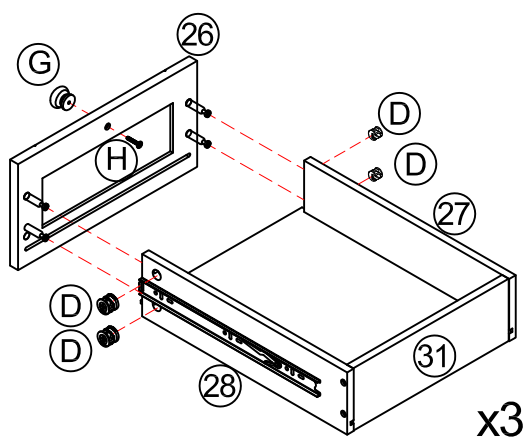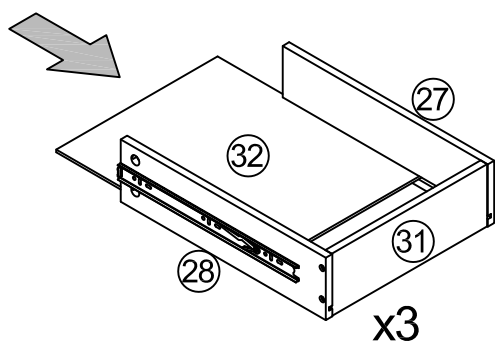


## Step 30

<p>(G) Handle x2</p>	<p>(H) 4*18mm Bolt x2</p>	<p>(D) Male Camlock x8</p>
----------------------	---------------------------	----------------------------

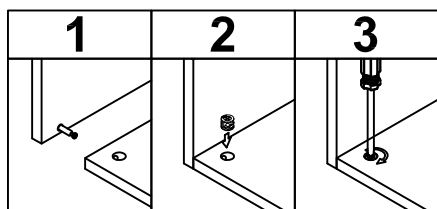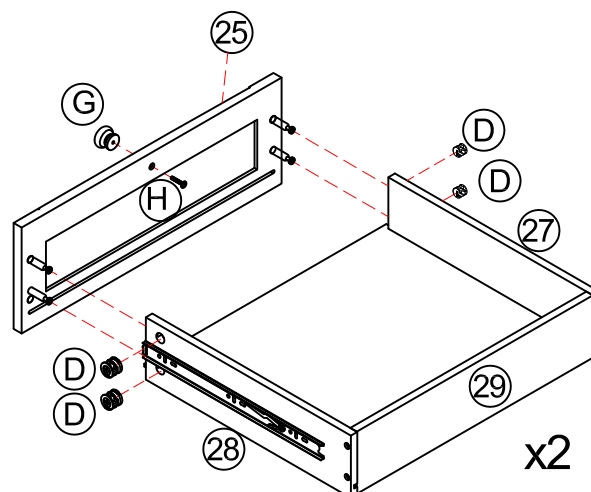
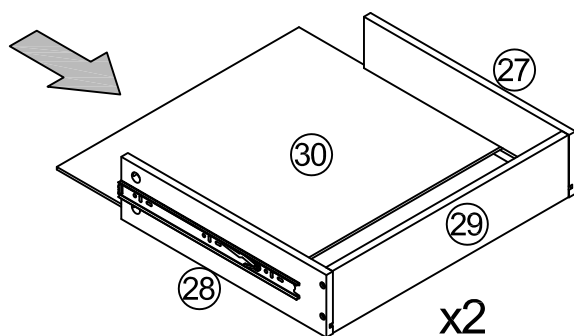


# Assembly Instructions

## Step 31

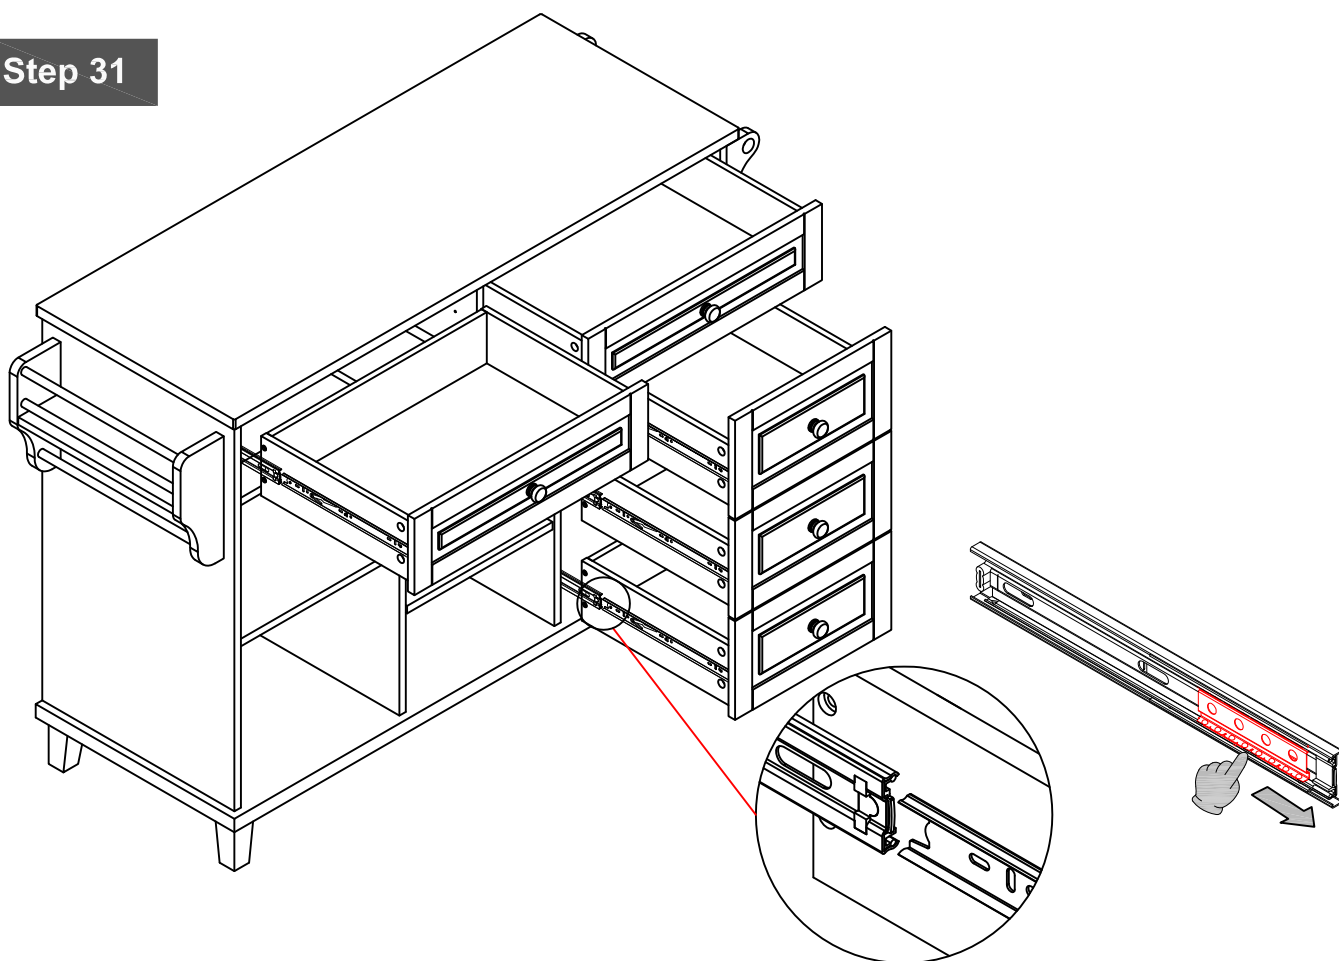

## Step 32

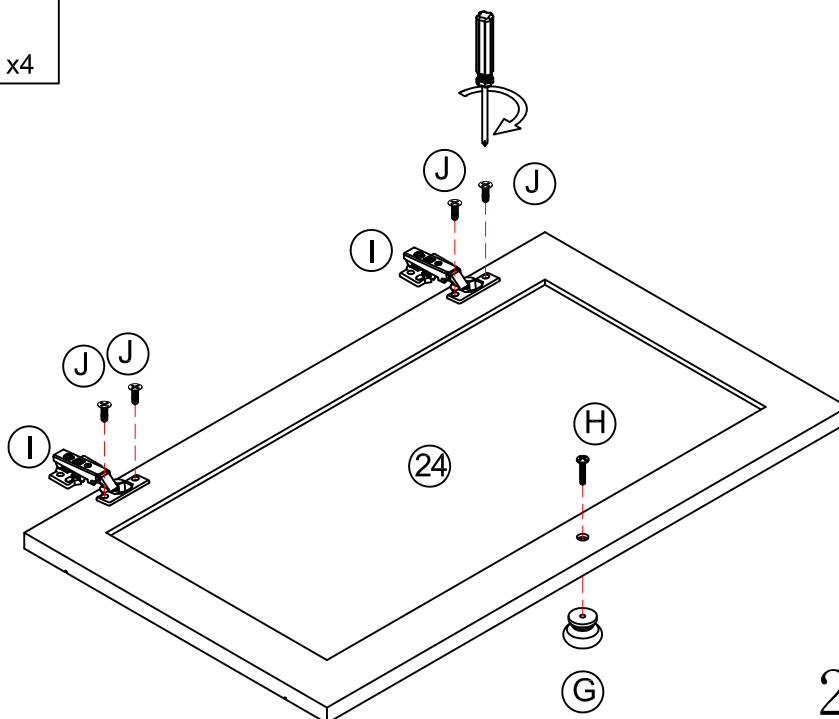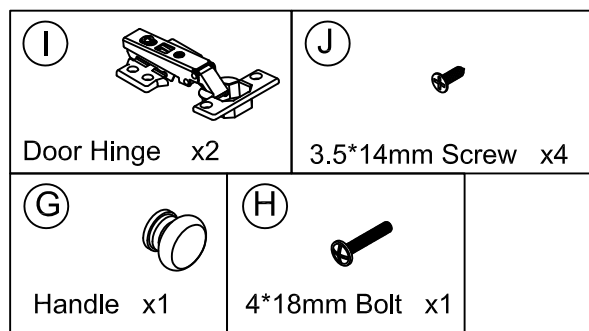

# Assembly Instructions

## Step 33

J



3.5\*14mm Screw x8

