

Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.







Please look in carton for hardware packs and legs.



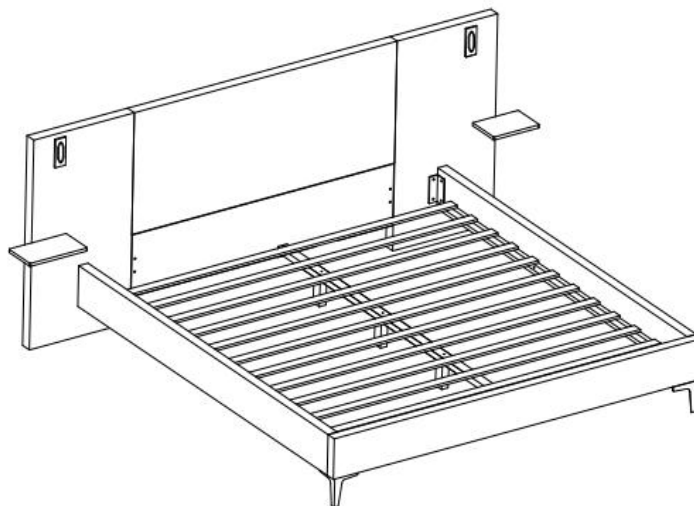

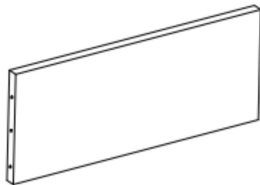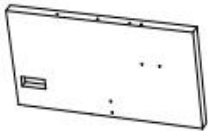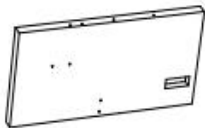

Upholstered Bed

N769P264793/N769P264794





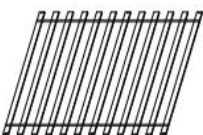


Parts List **N769P264793**

Label	Picture	Description	QTY
A		Headboard A	1
B		Headboard B	1
E		Bedhead side-E	1
F		Bedhead side-F	1
G		Parcel shelf-G	1
H		Parcel shelf-H	1













L		Midfoot	3
M		Metal feet	2
N		Iron Bracket	2
O		L-Iron	4
P		Bedside lamp	2
Q		Small L-Iron	4

Parts List **N769P264794**

C		Bedhead side	2
D		Bed End	1
I		Side tray	2
J		Middle Pallet	1
K		Bed Slat	1


Hardware

N769P264793

Label	Picture	Description	QTY
①		Bolt Ø1/4" x 1"	21
②		Bolt Ø1/4" x 1-1/2"	21
③		Bolt Ø1/4" x 1/2"	17
④		Bolt Ø5/16" x 3/4"	5
⑤		Spring Washer Ø1/4"	23
⑥		Spring Washer Ø1/4"	37
⑦		Spring Washer Ø5/16"	5
⑧		Spring Washer Ø5/16"	5
⑨		Screw #8×1"	7
⑩		Flat head screw	5
⑪		Allen Wrench 4.0×21×57	1
⑫		Screwdriver (Not provided)	1

Assembly Preparation

Before
Beginnin
g
Assembly
:

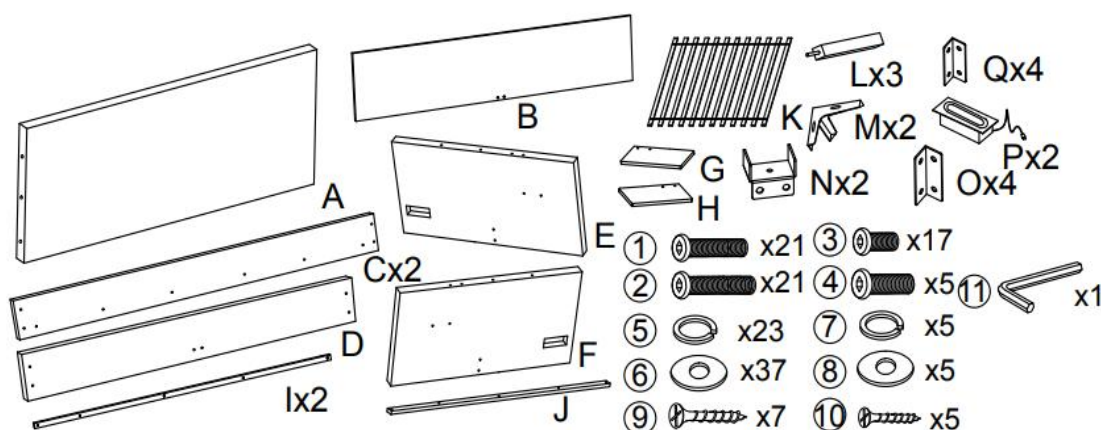

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

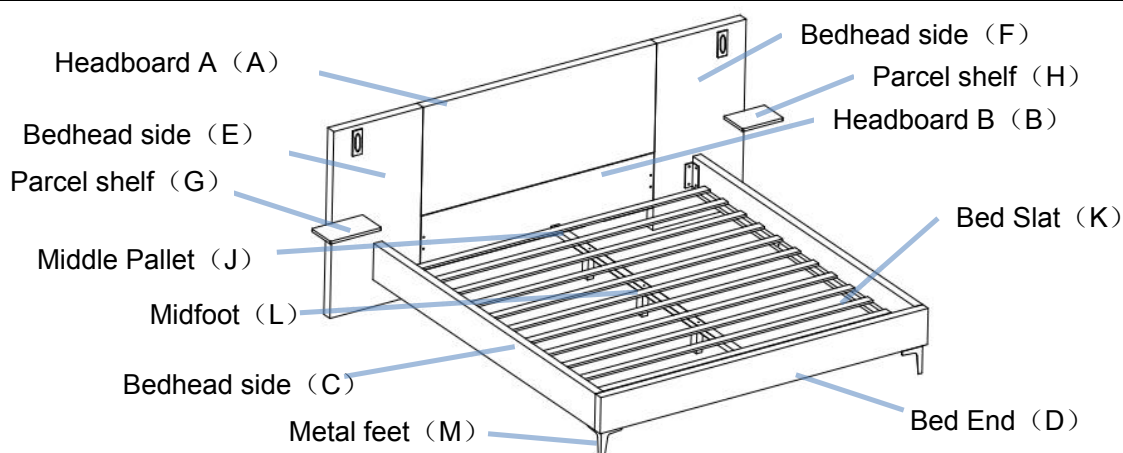


This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

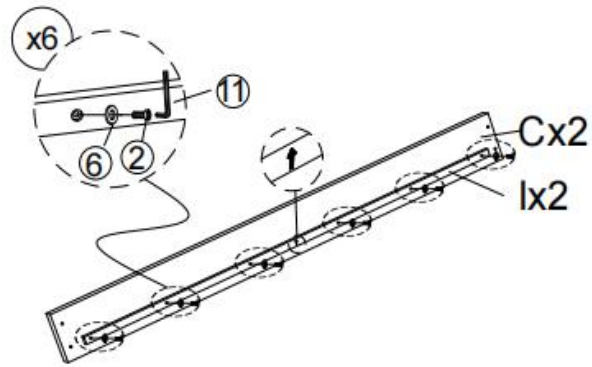


Attached Side tray (I) to Bedhead side (C) by using Bolt (②) ,Flat Washer (⑥) and Allen Wrench (⑪), as pictured above.

Step 2

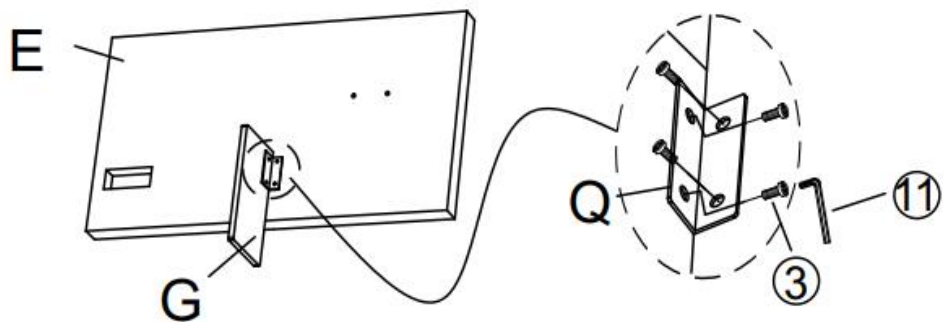


Attach Small L-Iron(Q) to Bedhead side(E) and Parcel shelf(G) by using Bolt (③) and Allen Wrench (⑪), as pictured above.

Step 3

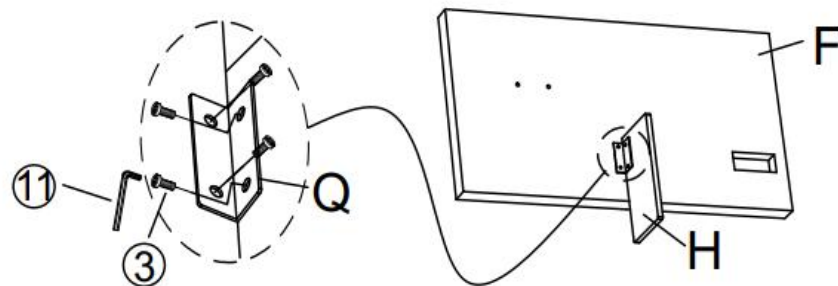


Attach Small L-Iron(Q) to Bedhead side(F) and Parcel shelf(H) by using Bolt (③) and Allen Wrench (⑪), as pictured above.

Step 4

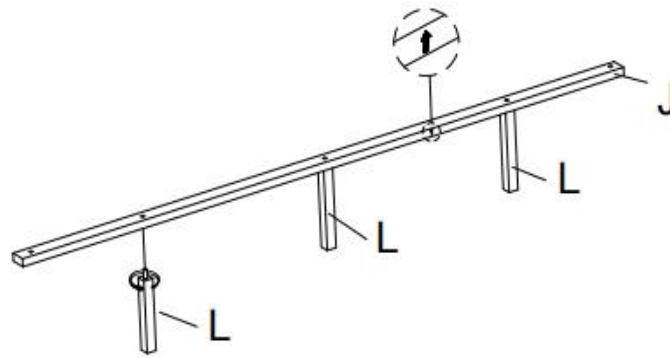


Attach Midfoot(L) to Middle Pallet(J), as pictured above.

Step 5

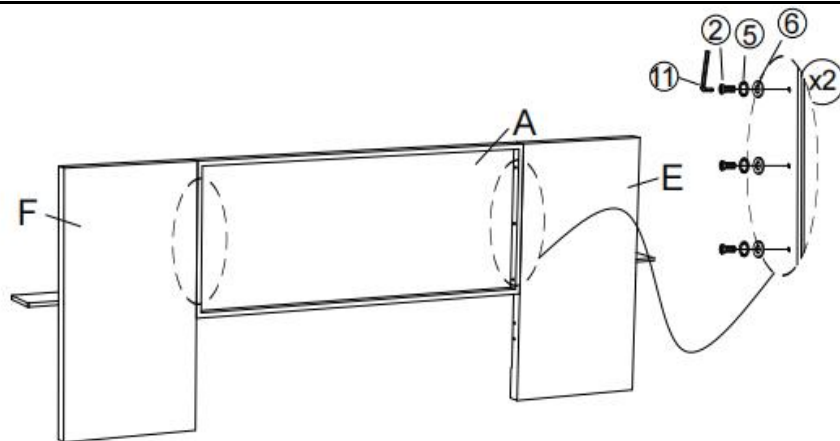


Attached Headboard A (A) to Bedhead side (E&F) by using Bolt (②), Spring Washer (⑤), Flat Washer (⑥) and Allen Wrench (⑪), as pictured above.

Step 6

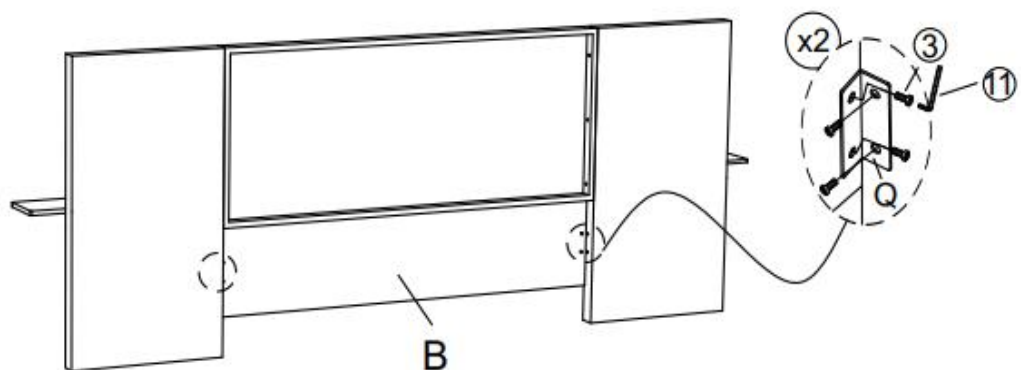


Attach Small L-Iron(Q) to Bedhead side(E&F) and Headboard B(B) by using Bolt (③) and Allen Wrench (⑪), as pictured above.

Step 7

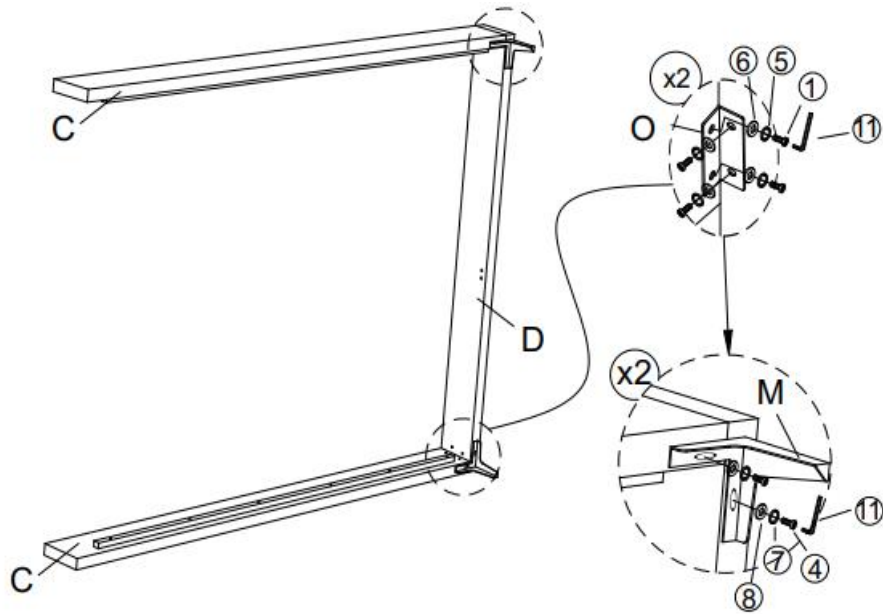


Attach L-Iron(O) to Bedhead side(C) and Bed End(D) by using Bolt (①) ,Spring Washer (⑤), Flat Washer (⑥) and Allen Wrench (⑪); attach Metal feet(M) to Bedhead side(C) and Bed End(D) by using Bolt (④) ,Spring Washer (⑦), Flat Washer (⑧) and Allen Wrench (⑪),as pictured above.

Step 8

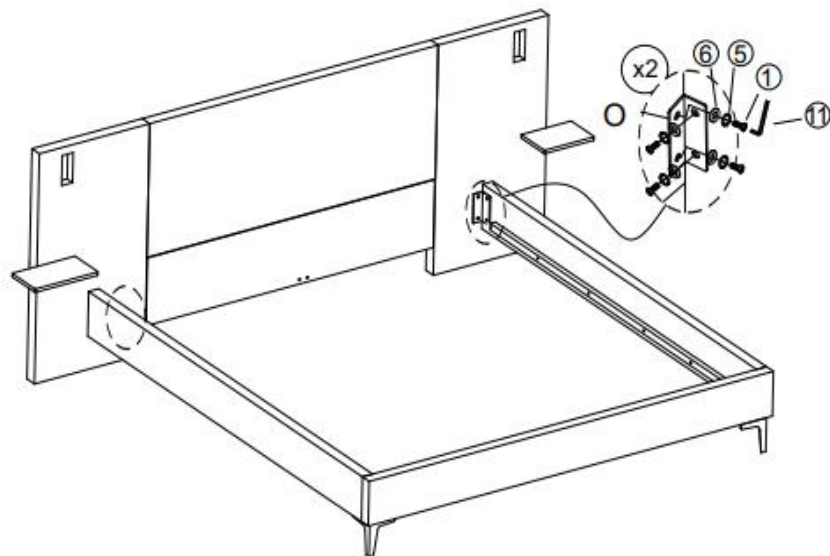


Attach L-Iron(O) to Bedhead side(C)and Bedhead side(E&F) by using Bolt (①) ,Spring Washer (⑤), Flat Washer (⑥) and Allen Wrench (⑪), as pictured above.

Step 9

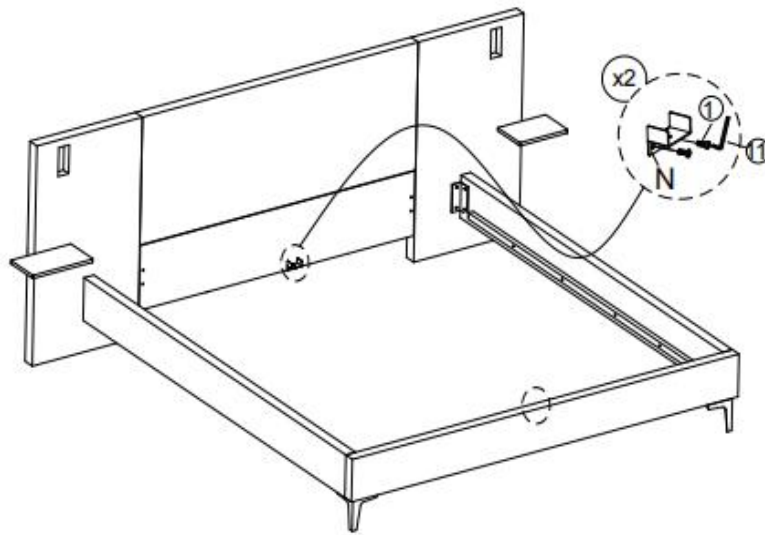


Attach Iron Bracket (N) to Headboard B(B) and Bed End(D) by using Bolt (①) and Allen Wrench (⑪), as pictured above.

Step 10

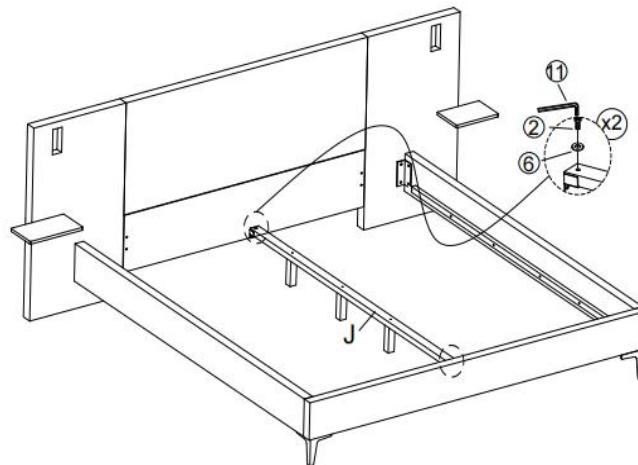


Attach Middle Pallet(J) to Iron Bracket(N) by using Bolt (②) ,Flat Washer(⑥) and Allen Wrench (⑪), as pictured above.

Step 11

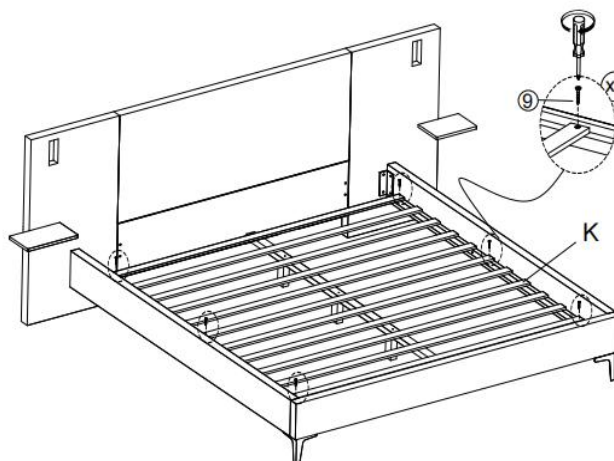


Attach Bed Slat (K) to Side tray (I) by Screw(⑨), as pictured above.

Step 12

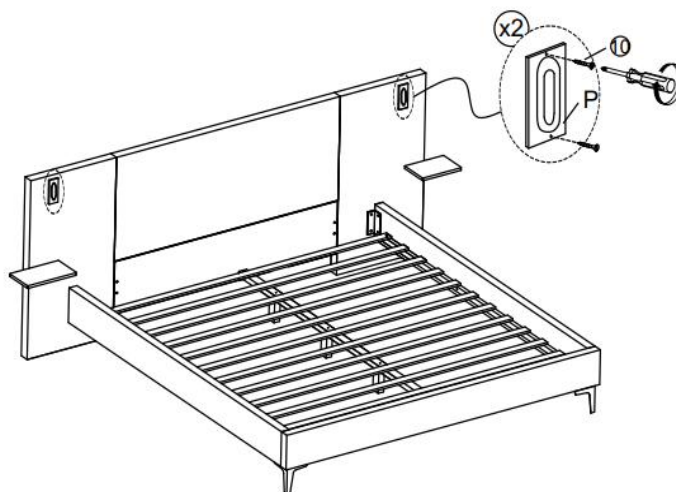

Attach Bedside lamp(P) to Bedhead side (E&F) by Screw (10) , as pictured above.

Step 13

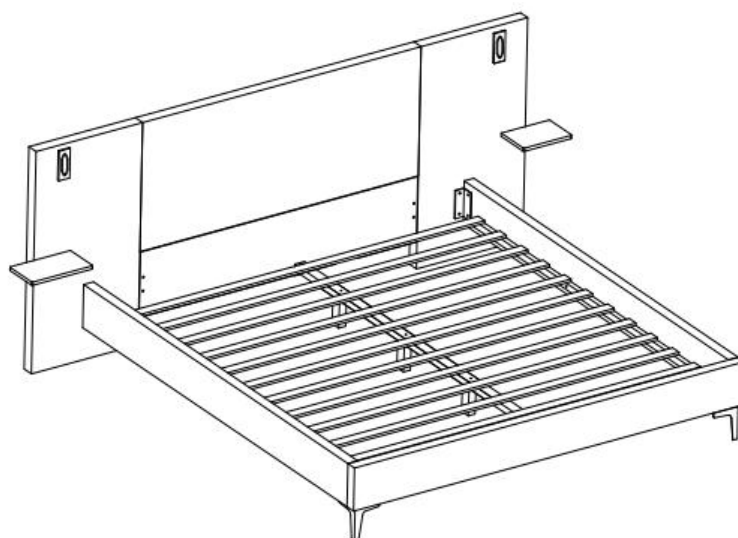

Your Upholstered Bed is ready for use.
This Upholstered Bed can only be used on a flat, level surface.