

Hall Tree

Assembly Instructions - Please keep for future reference



Dimensions

Width-31.4inch
Depth-11.8inch
Height-80.7inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions





















To help prevent product toppling over please follow the below steps:-

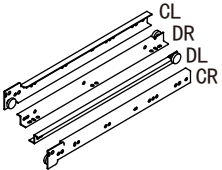Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>(A)</p>  <p>Cam Bolt x 56+2</p>	<p>(B)</p>  <p>Cam Lock x 56+2</p>	<p>(C)</p>  <p>8*30mm Dowel x 11+2</p>	<p>(D)</p>  <p>Hinge x 3</p>
<p>(E)</p>  <p>Tipping shoe rack x 3</p>	<p>(F)</p>  <p>3.5*40mm Screw x 8+1</p>	<p>(G)</p>  <p>4*11mm Screw x 6+1</p>	<p>(H)</p>  <p>Shake hands x 8</p>
<p>(J)</p>  <p>250mm Drawer slide x 2</p>	<p>(K)</p>  <p>Shoe rack stopper x 6+1</p>	<p>(L)</p>  <p>Shoe frame outer pivot x 6+1</p>	<p>(M)</p>  <p>Shoe rack inner pivot x 6+1</p>
<p>(N)</p>  <p>Couple x 6</p>	<p>(P)</p>  <p>3.5*14mm Screw x 78+3</p>	<p>(Q)</p>  <p>Light Belt x 38+5</p>	<p>(R)</p>  <p>Rebound device x 1</p>
<p>(S)</p>  <p>Anti fall component x 2</p>	<p>(T)</p>  <p>Bulkhead Pins x 12+2</p>	<p>(U)</p>  <p>Perfect Fit x 58</p>	<p>(V)</p>  <p>Screwdriver x 1</p>


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

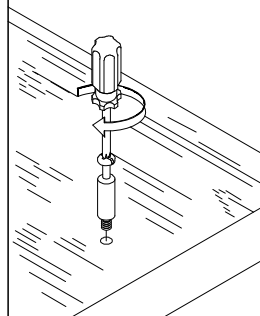

Step 2

Push the male camlock into the entry hole.

2

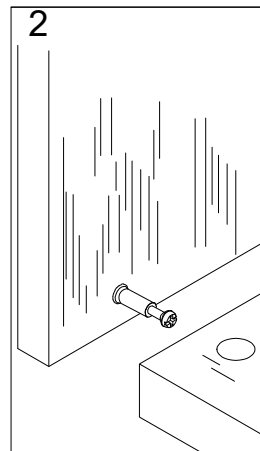


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

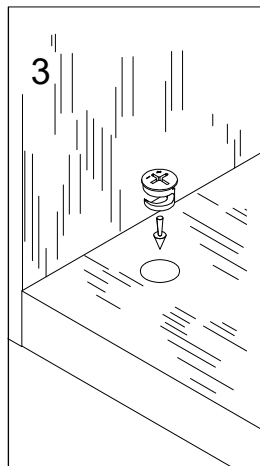


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.


4

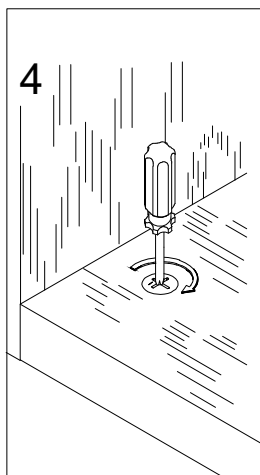

Assembly Instructions

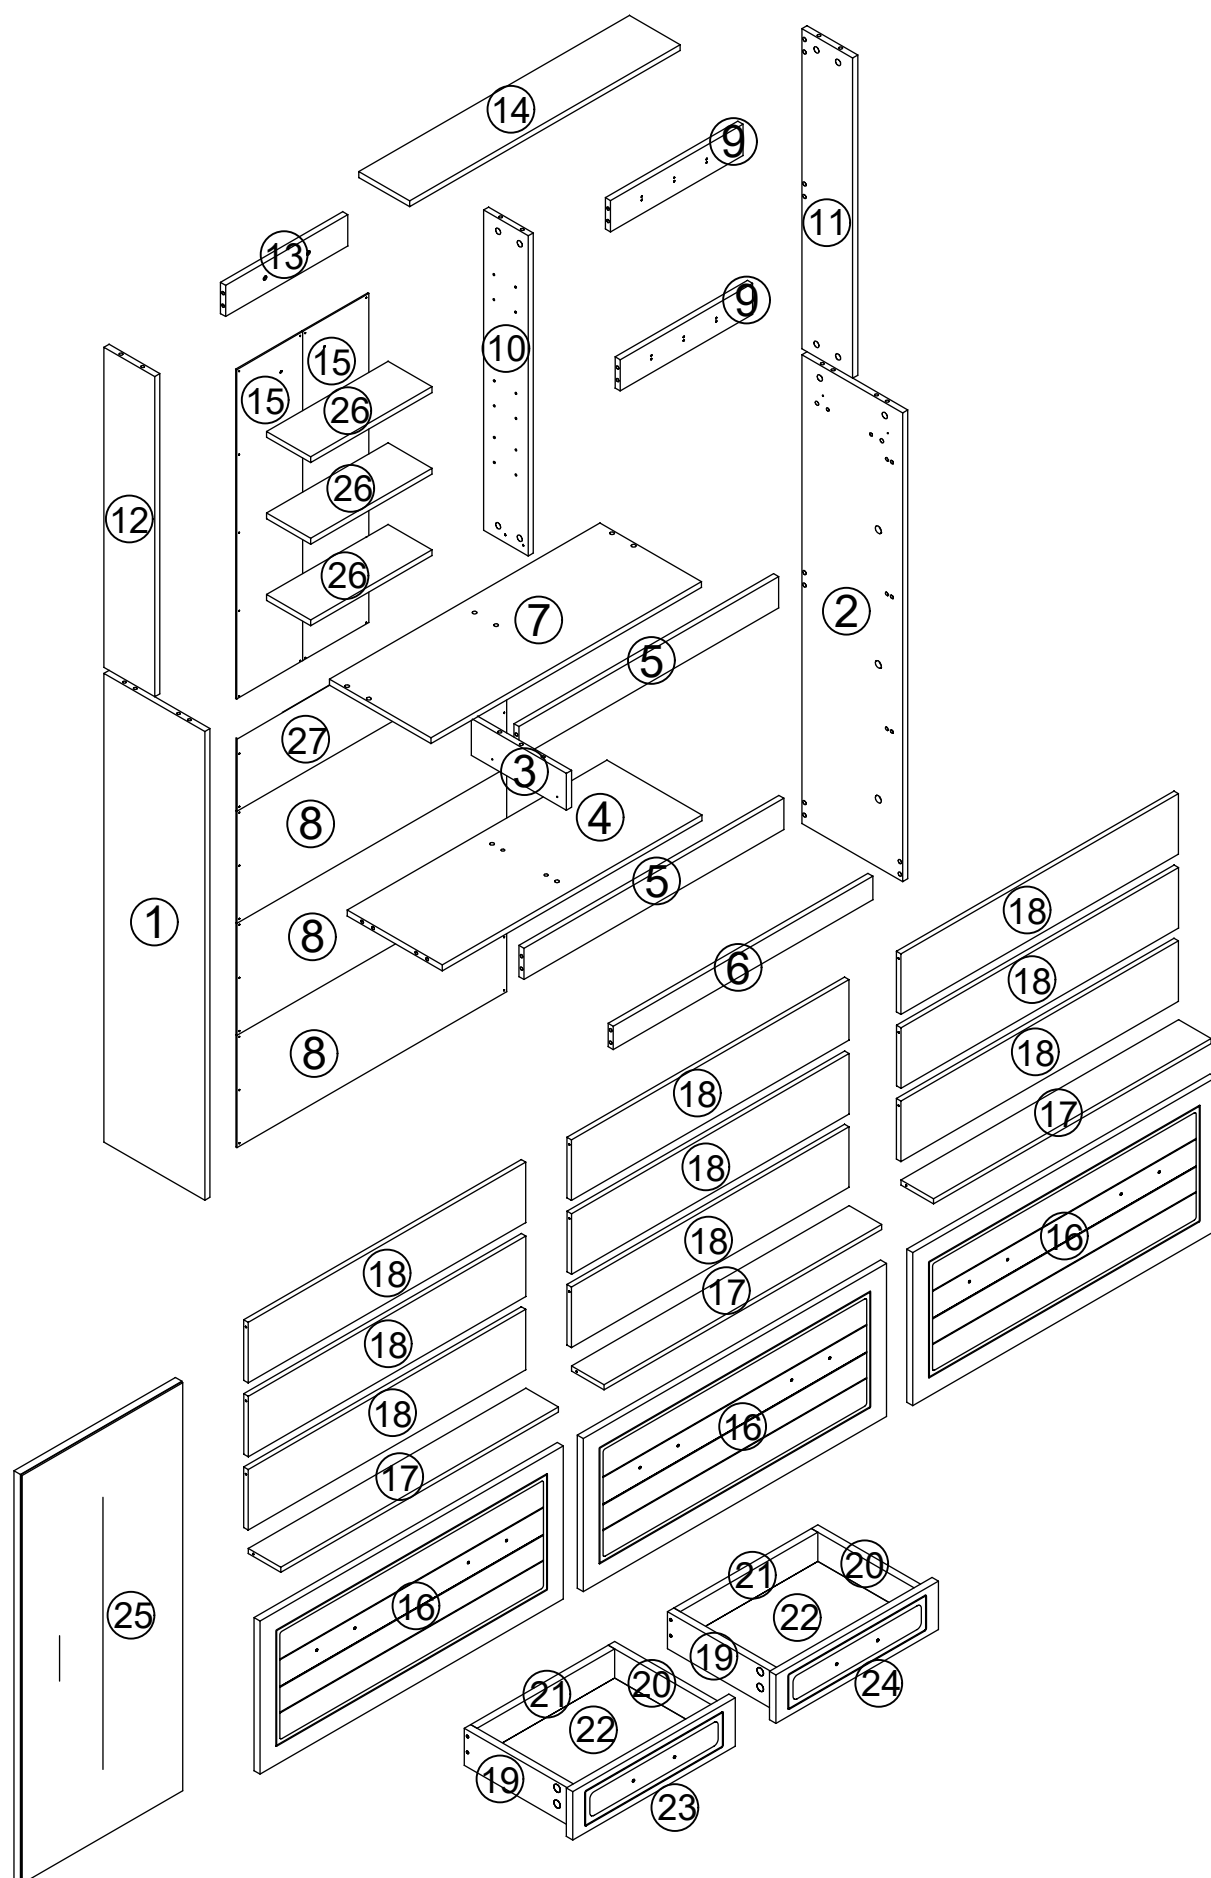


Assembly Instructions

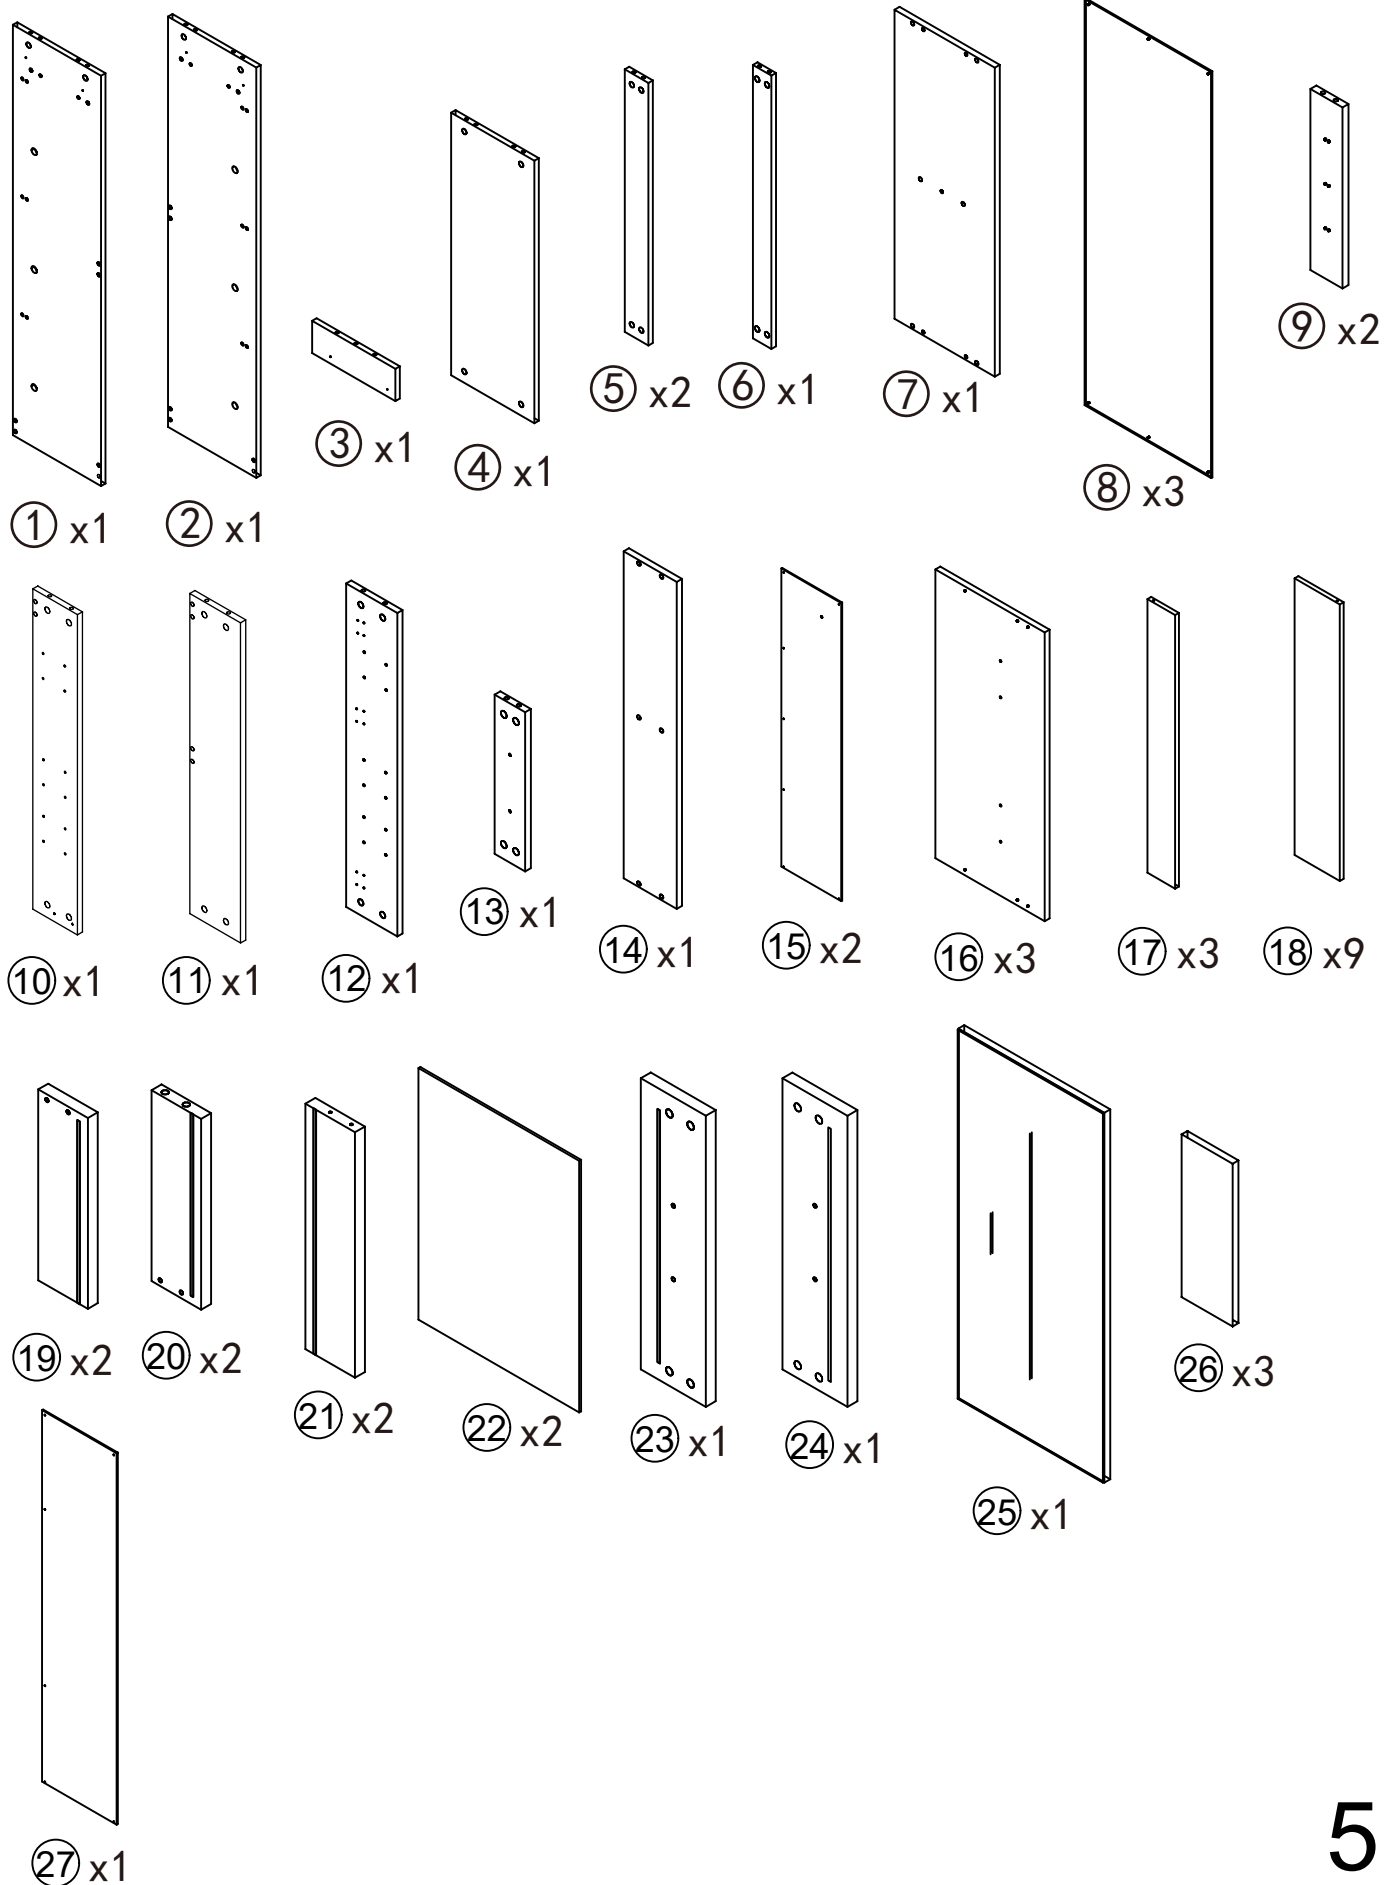

Assembly Instructions

Step 1

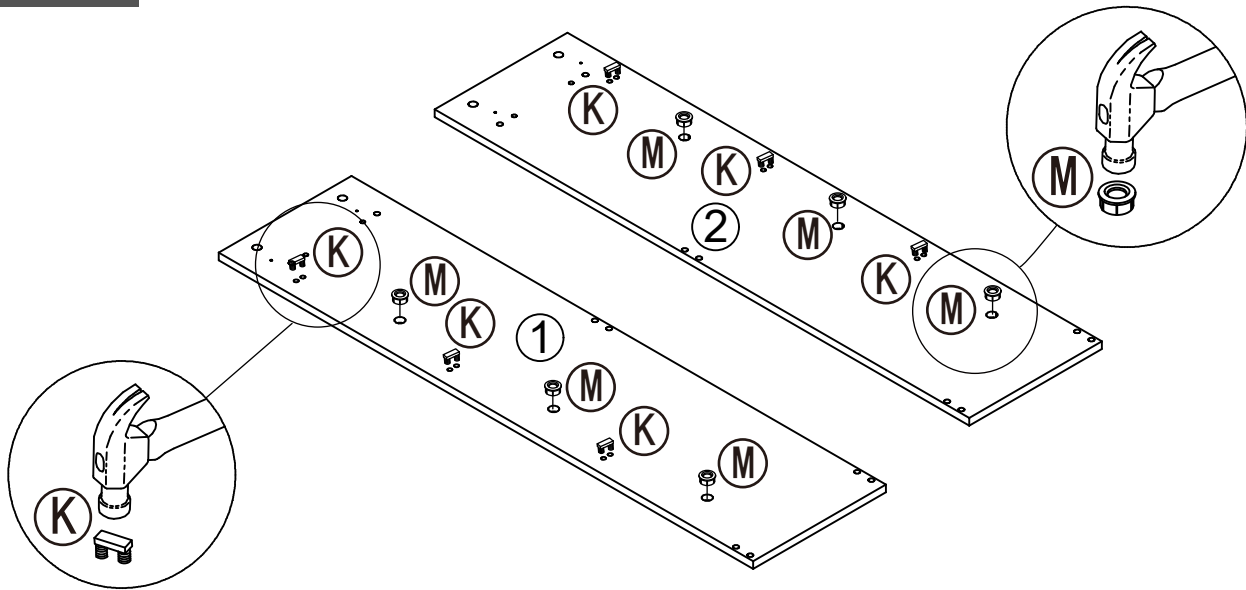

(K)




Shoe rack stopper x 6

(M)




Shoe rack inner pivot x 6

Step 2

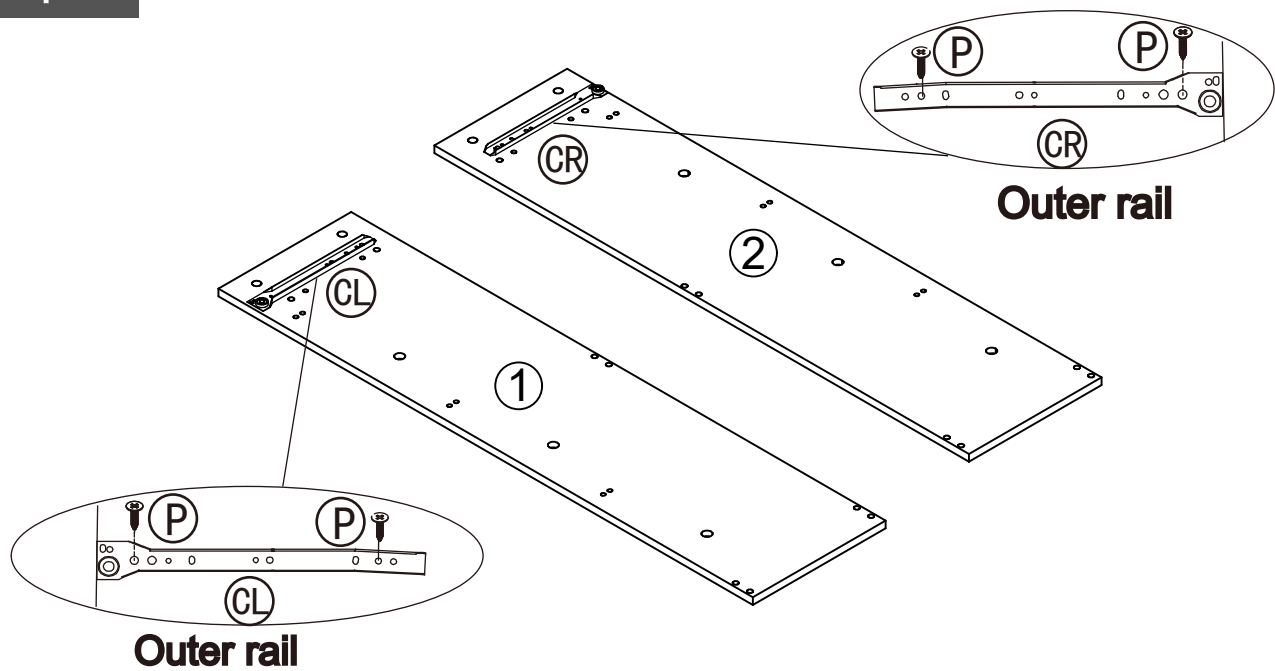


(CL)



x 1

(CR)



x 1


(P)




3.5*14mm Screw x 4

Assembly Instructions

Step 3

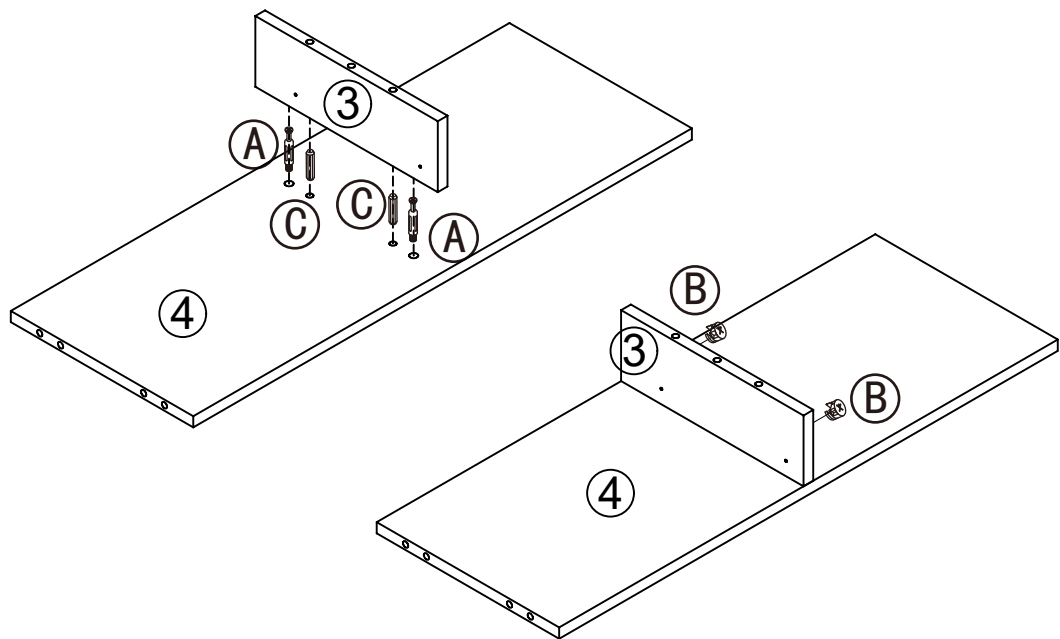

(A)




Cam Bolt x 2

(B)




Cam Lock x 2

(C)




8*30mm Dowel x 2

Step 4

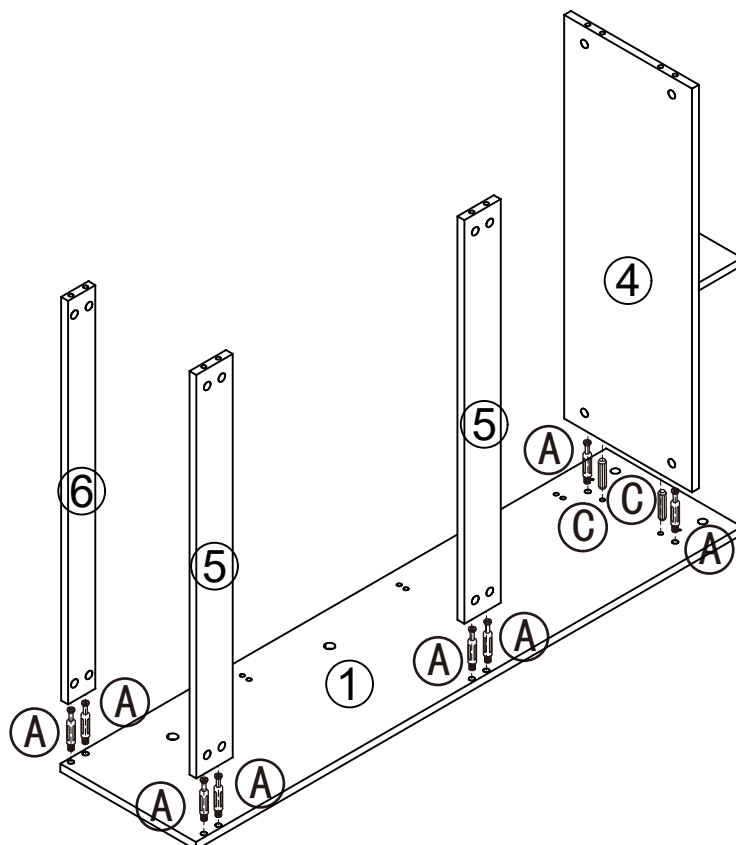


(C)



8*30mm Dowel x 2


(A)



Cam Bolt x 8

Assembly Instructions

Step 5

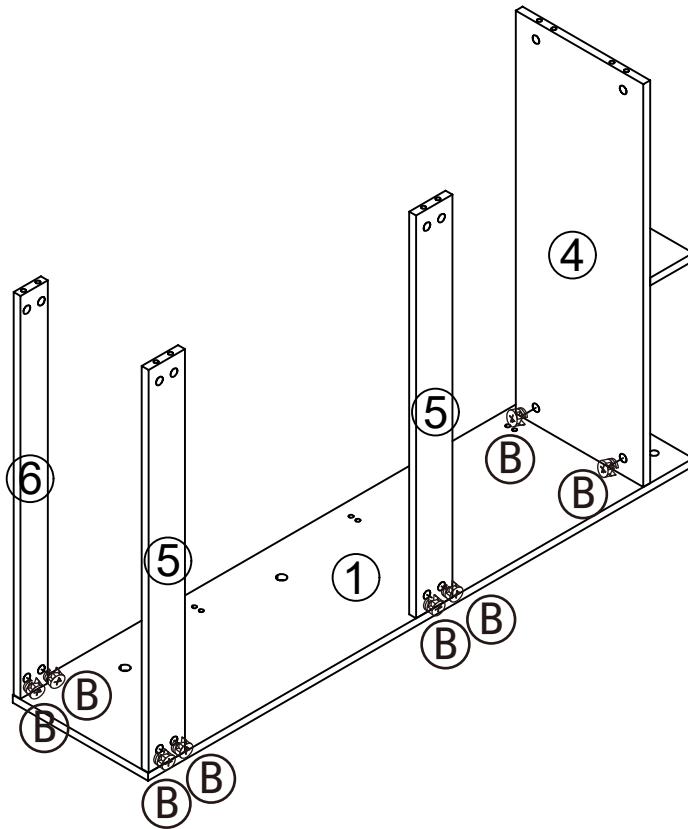


(B)




Cam Lock x 8

Step 6

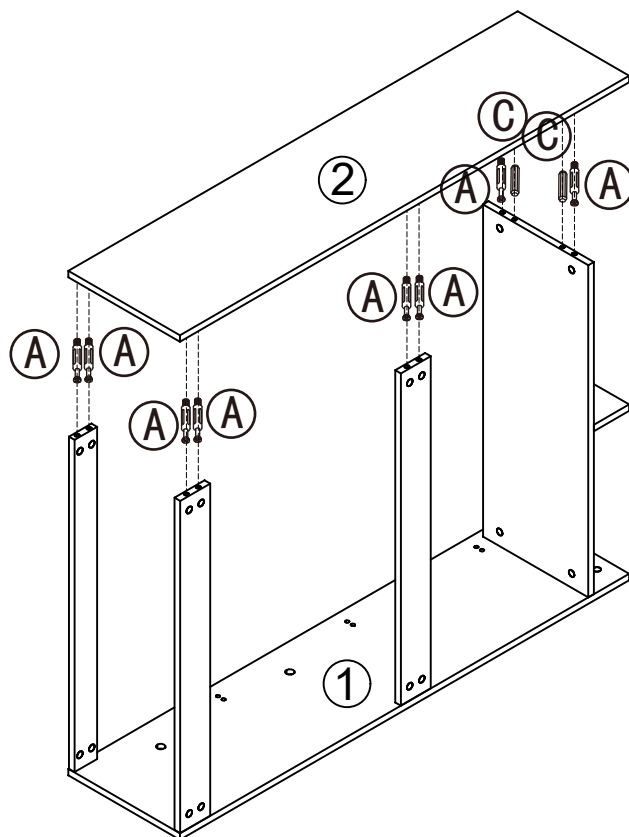


(C)



8*30mm Dowel x 2


(A)



Cam Bolt x 8

Assembly Instructions

Step 7

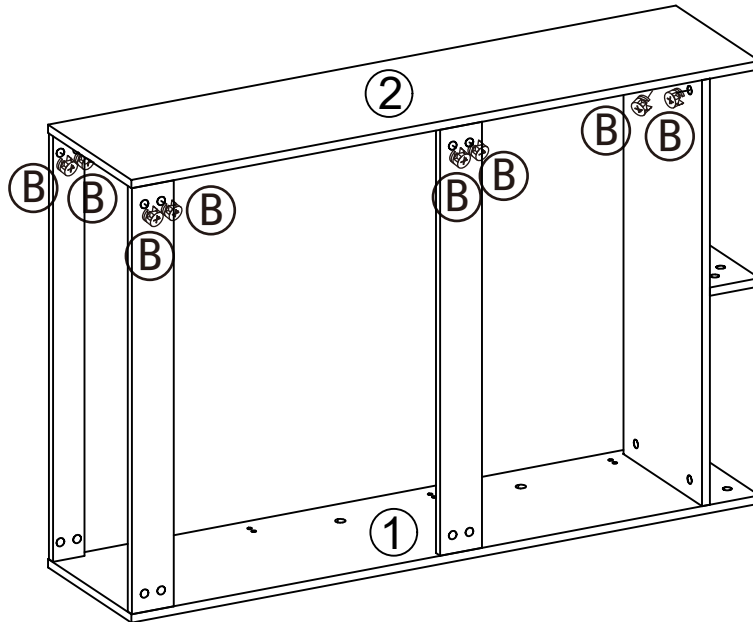


(B)




Cam Lock x 8

Step 8

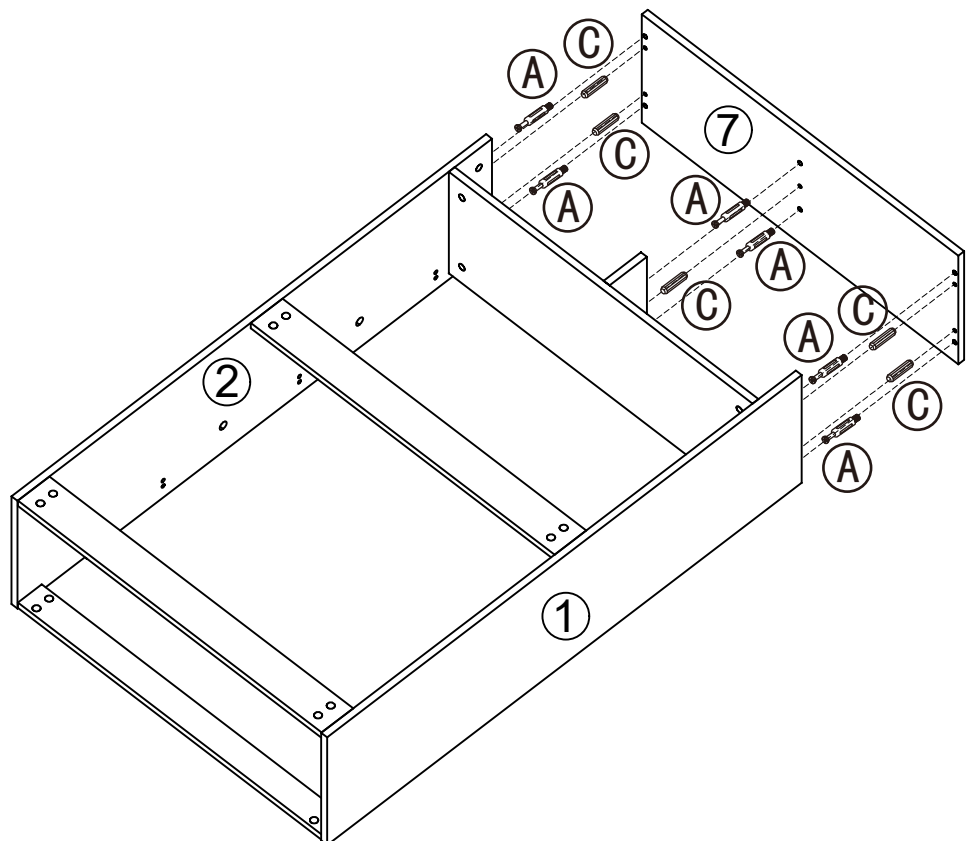


(C)



8*30mm Dowel x 5


(A)





Cam Bolt x 6

Assembly Instructions

Step 9

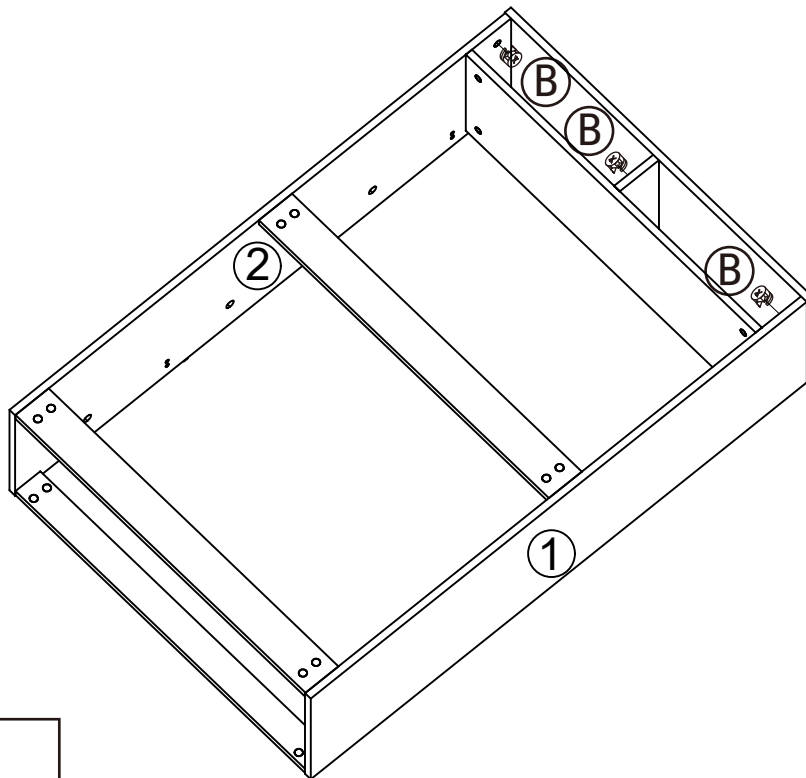



Step 10

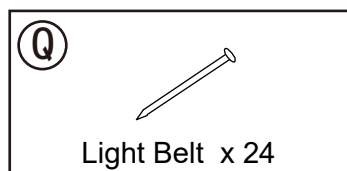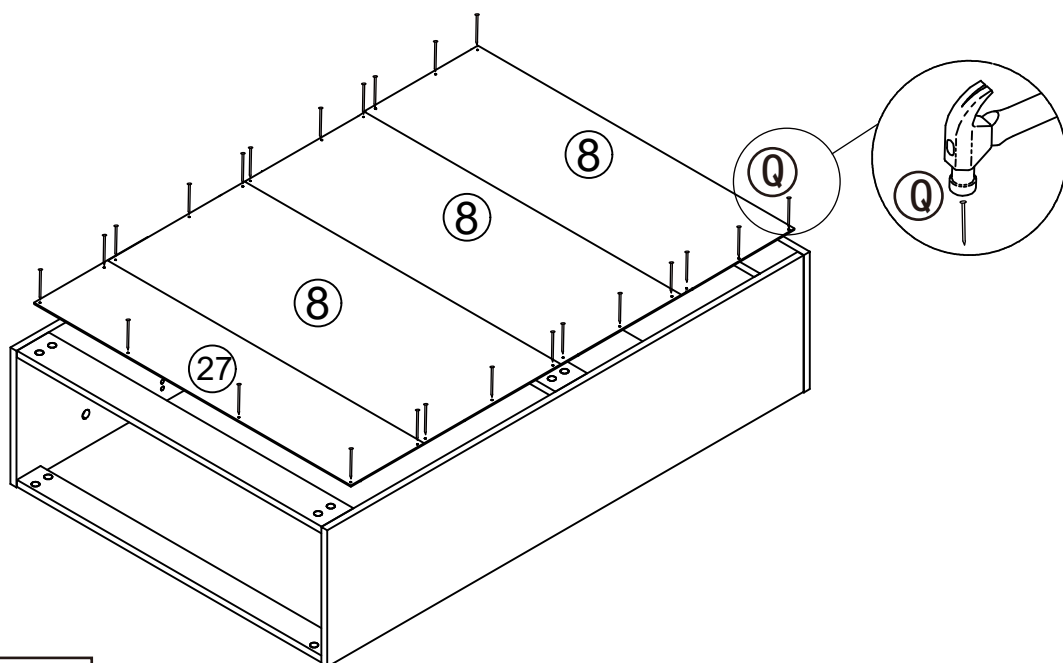



Assembly Instructions

Step 11

X2

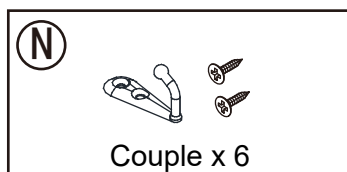
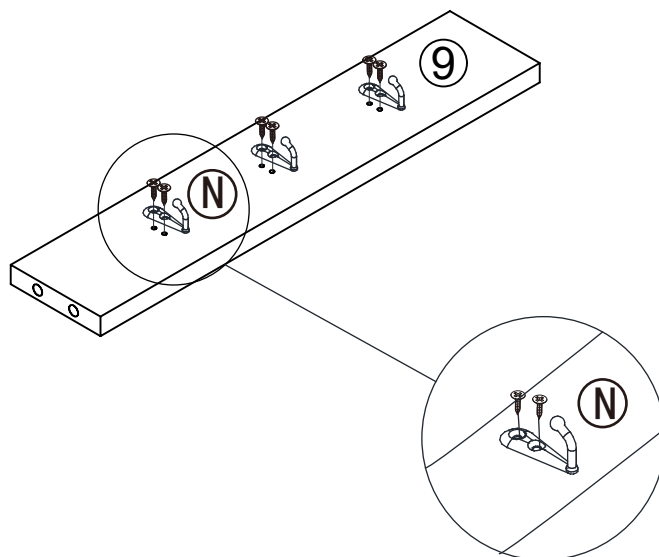


Step 12

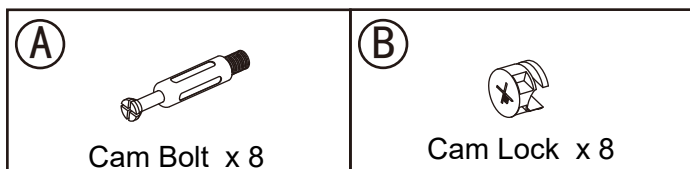
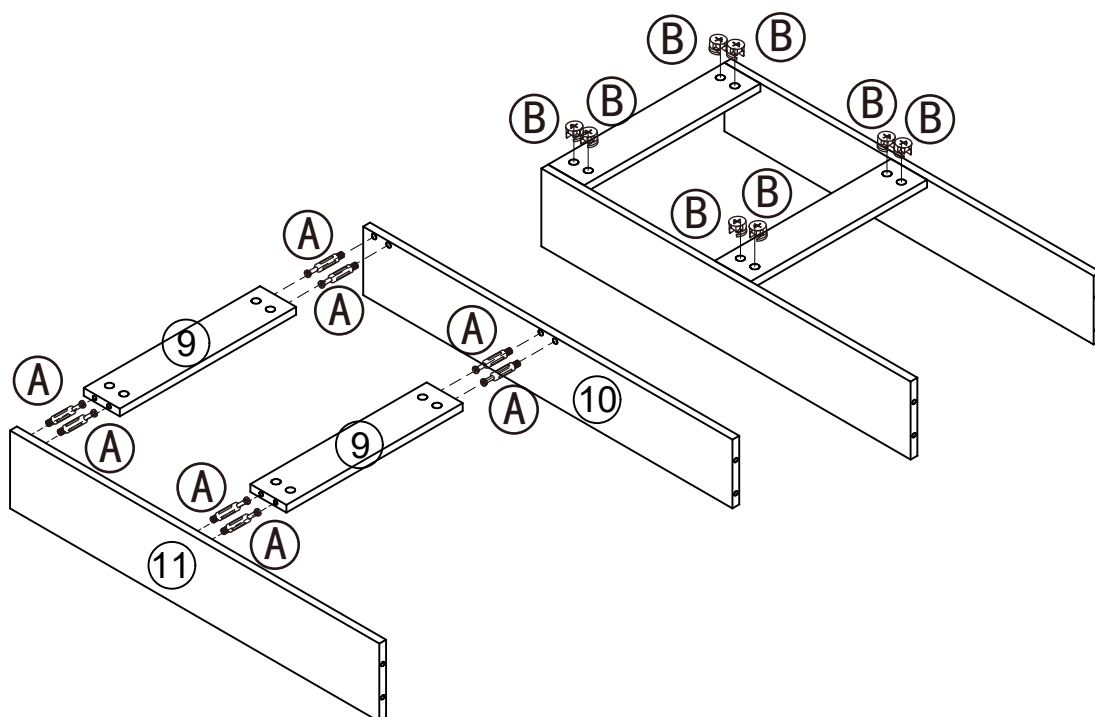


Assembly Instructions

Step 13

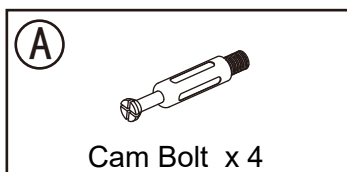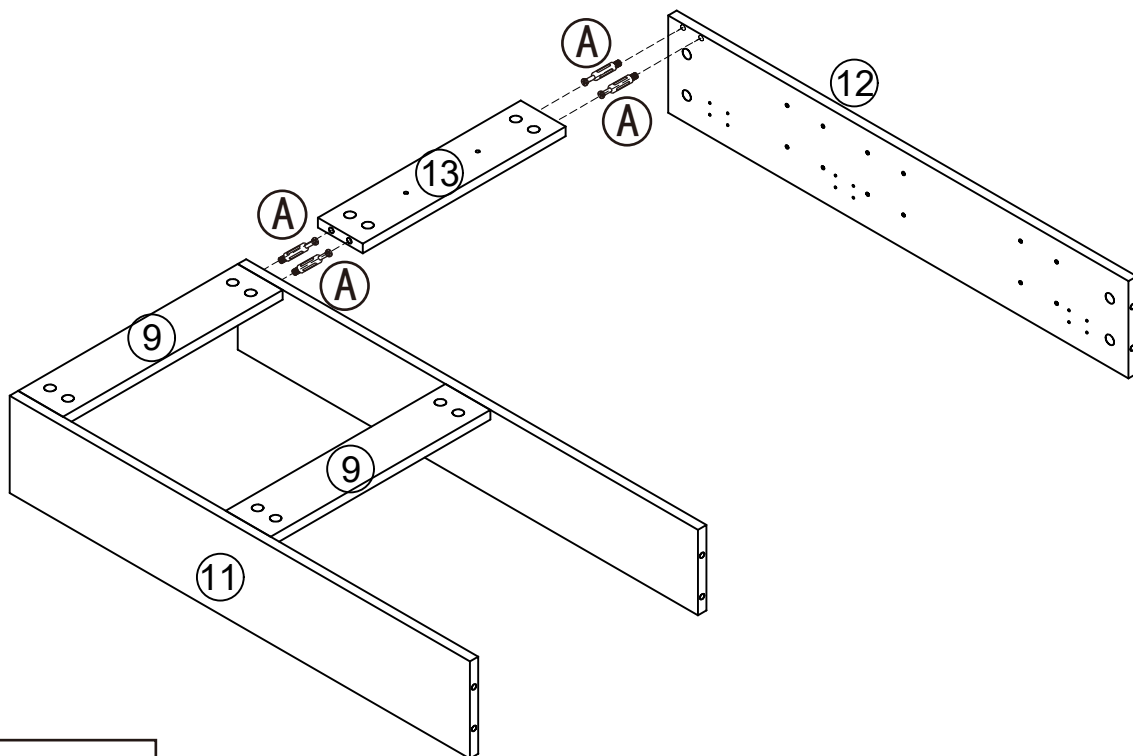


Step 14

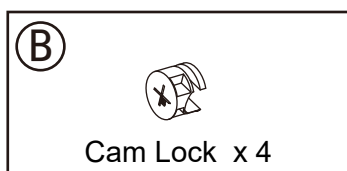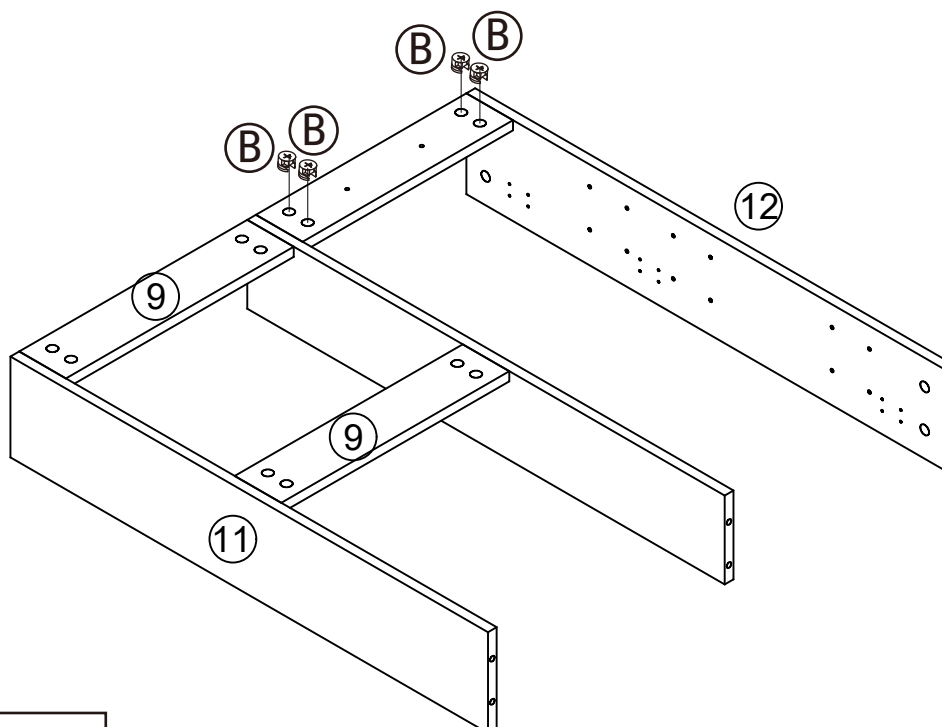


Assembly Instructions

Step 15

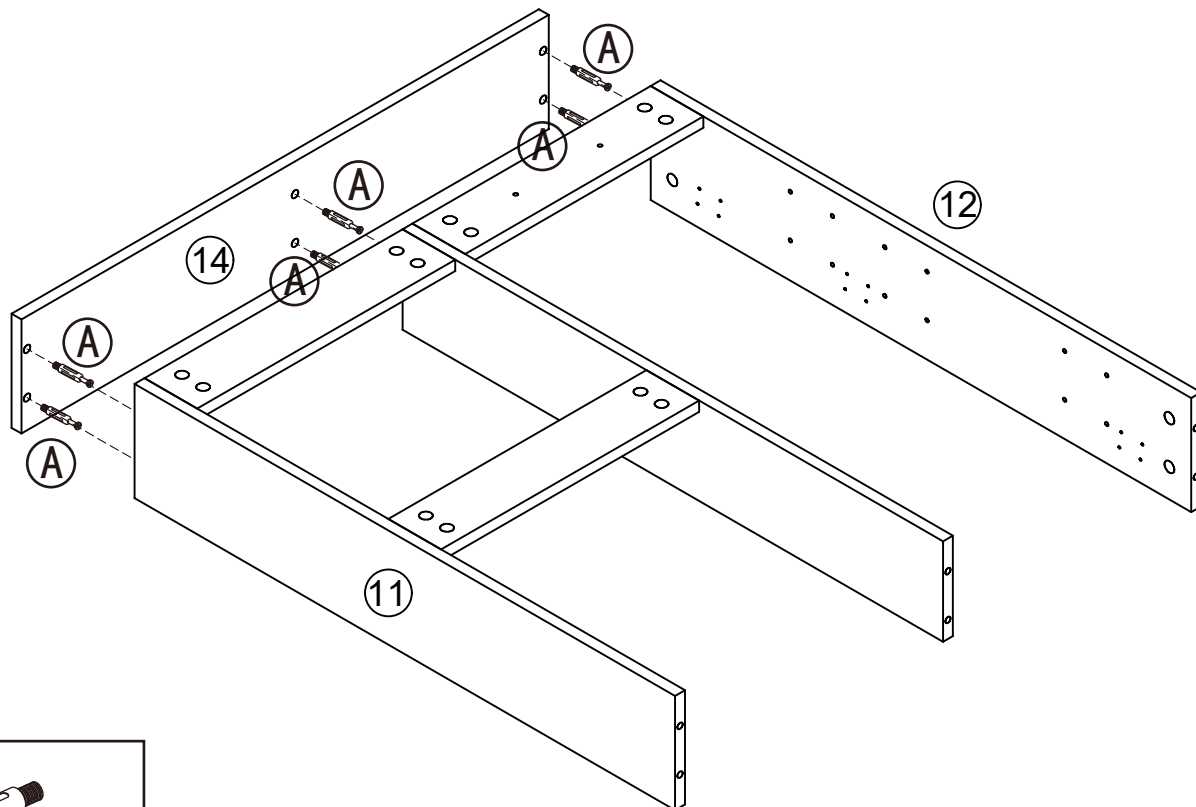


A



Cam Bolt x 6

Step 16

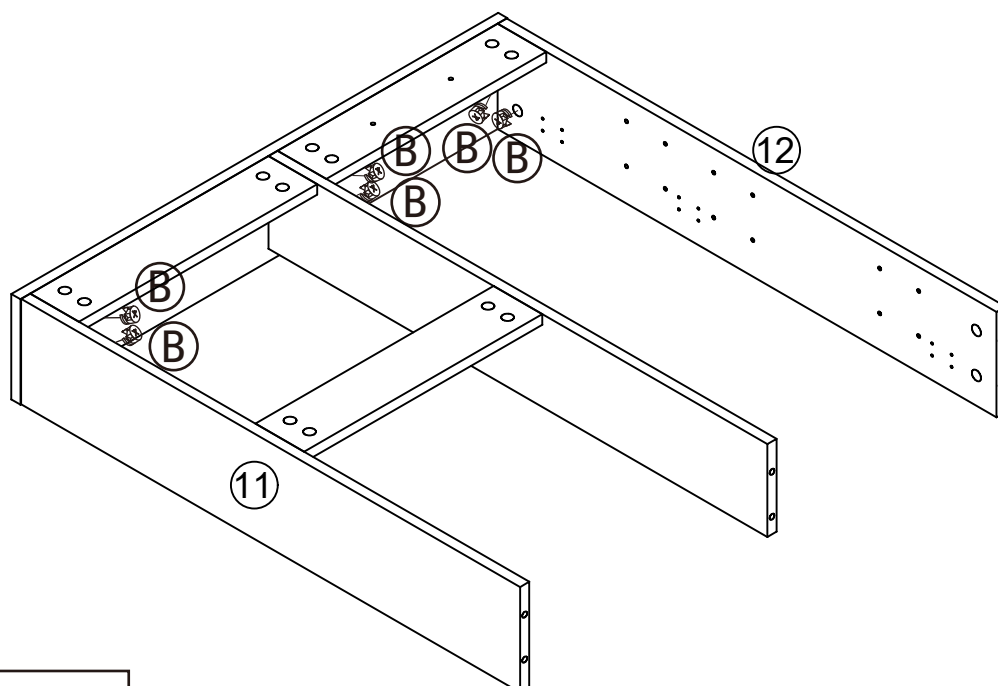


B




Cam Lock x 6

Assembly Instructions

Step 17

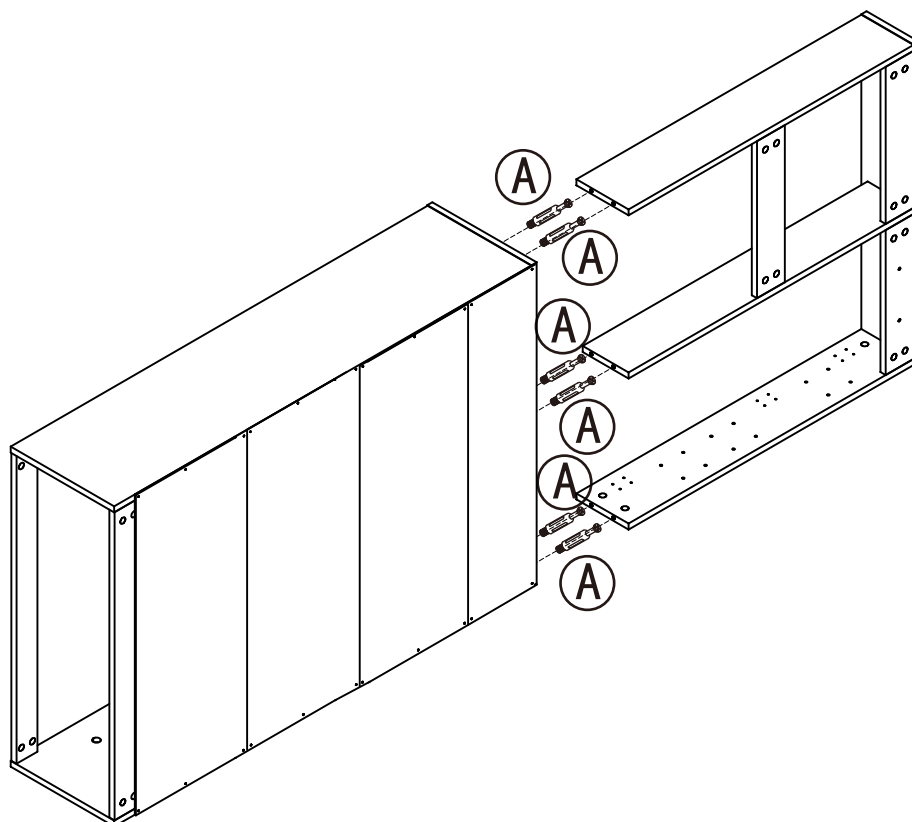


A



Cam Bolt x 6

Step 18

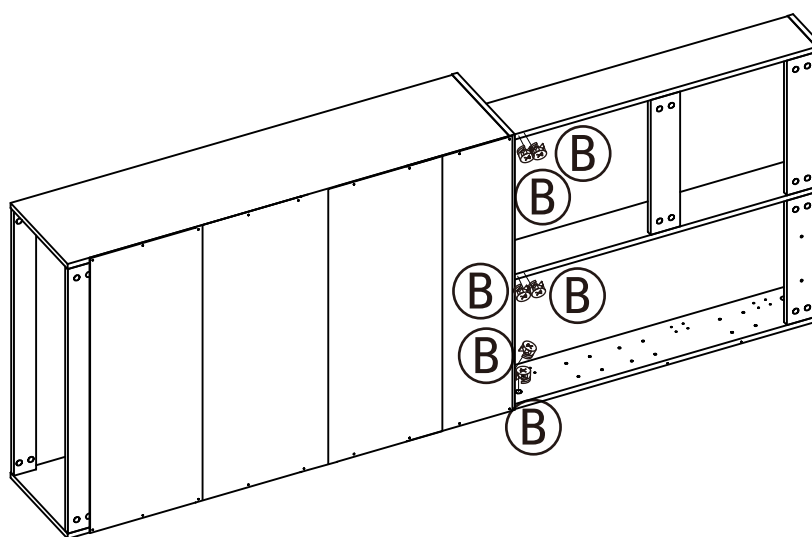


B




Cam Lock x 6

Assembly Instructions

Step 19

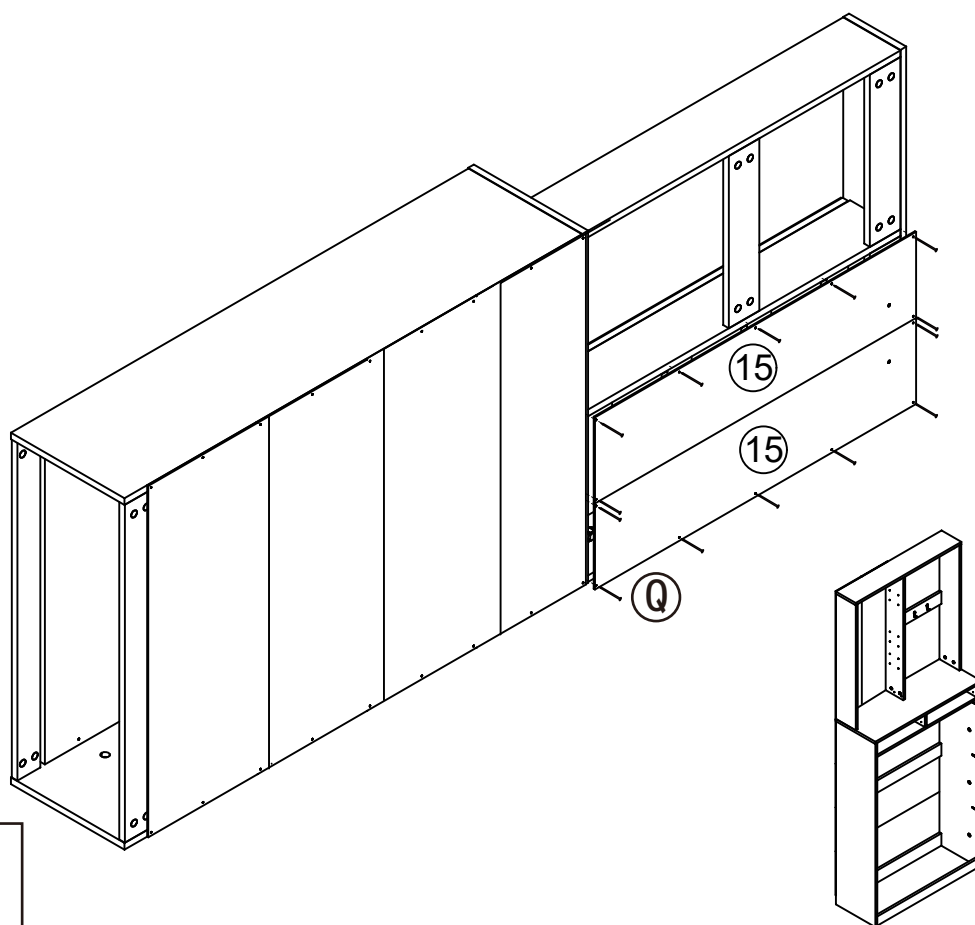


Q




Light Belt x 14

Step 20 X3

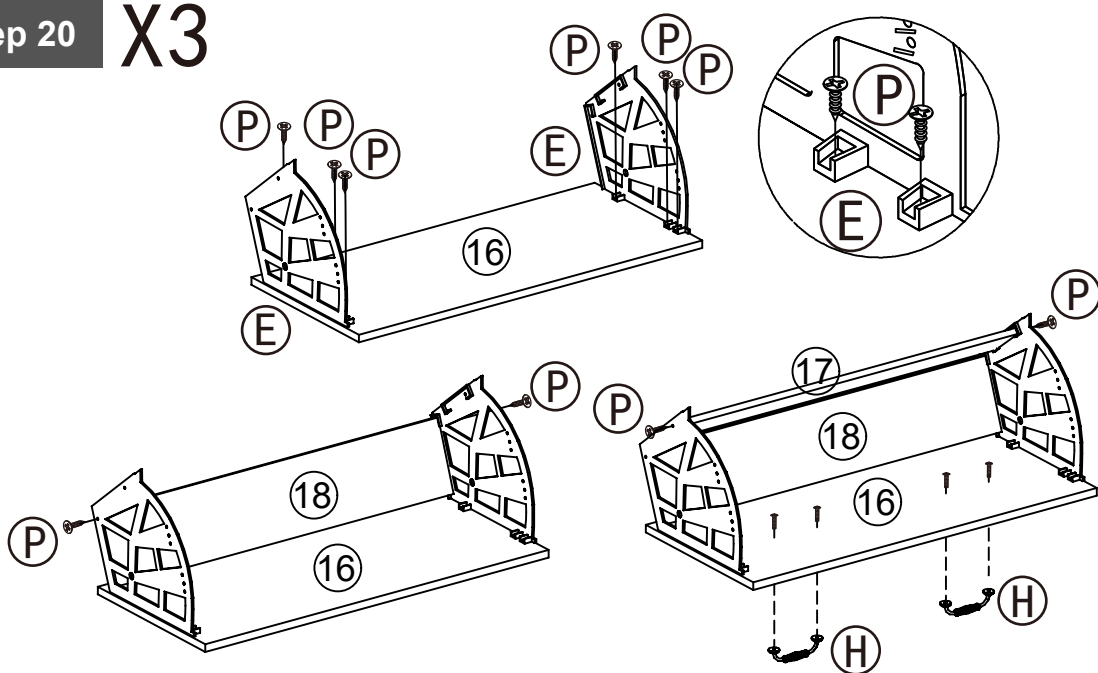

E



Tipping shoe rack x 3

H



Shake hands x 6


P





3.5*14mm Screw x 30

Assembly Instructions

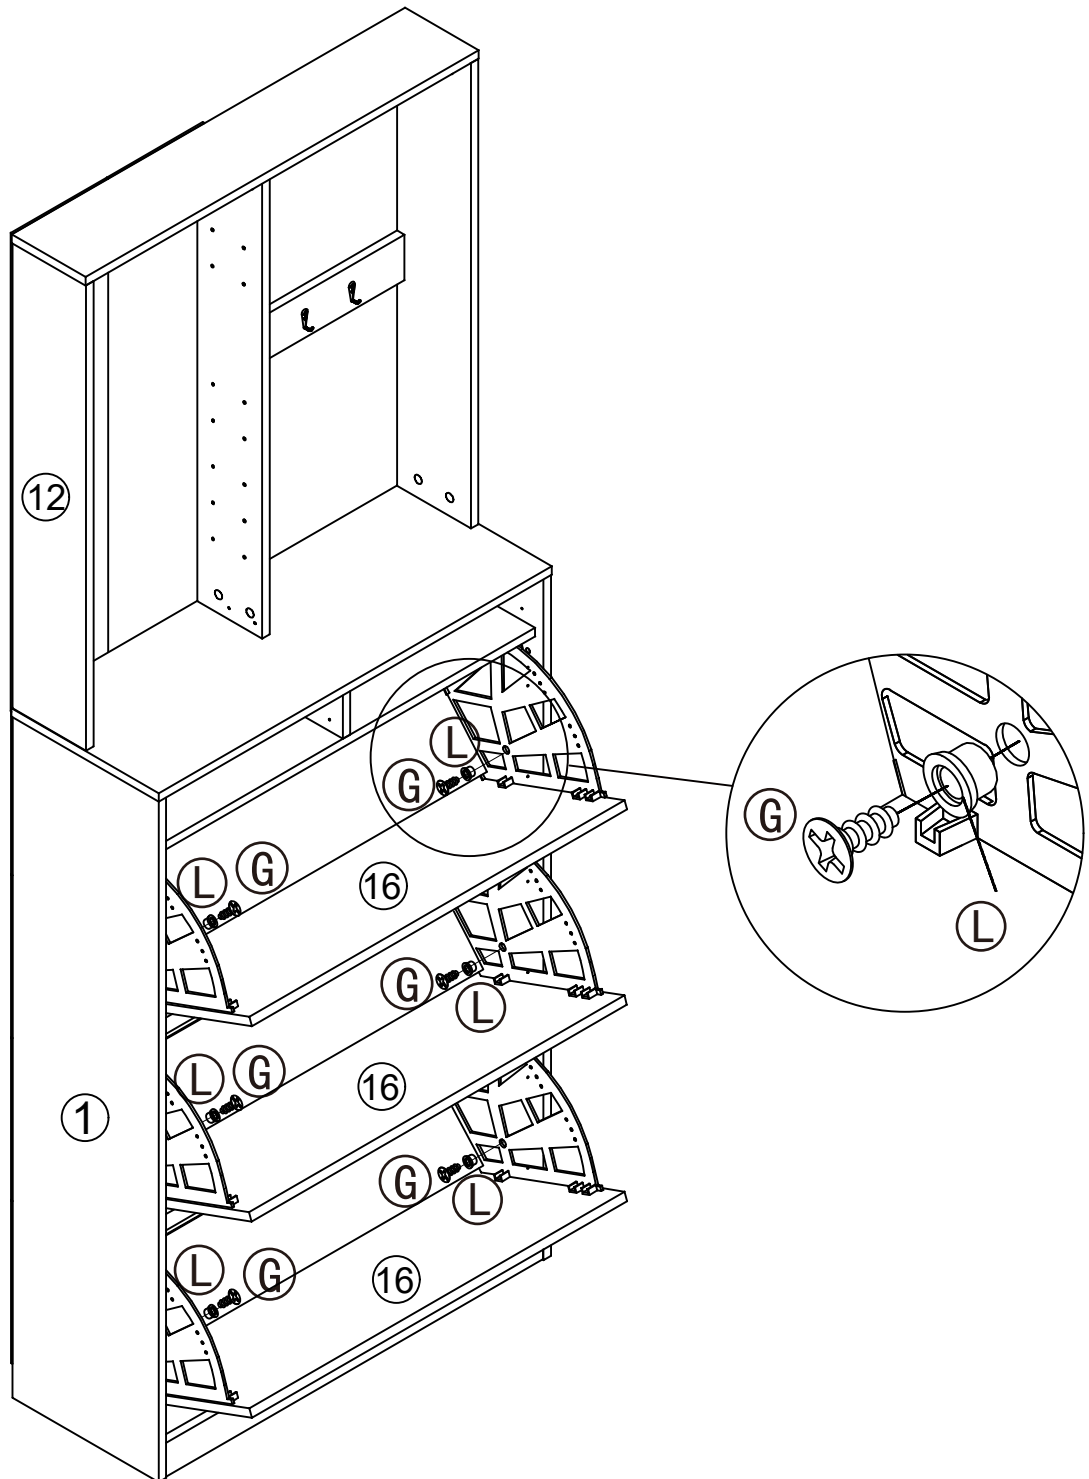
Step 21



	
4*11mm Screw x 6	Shoe frame outer pivot x 6

Assembly Instructions

Step 22

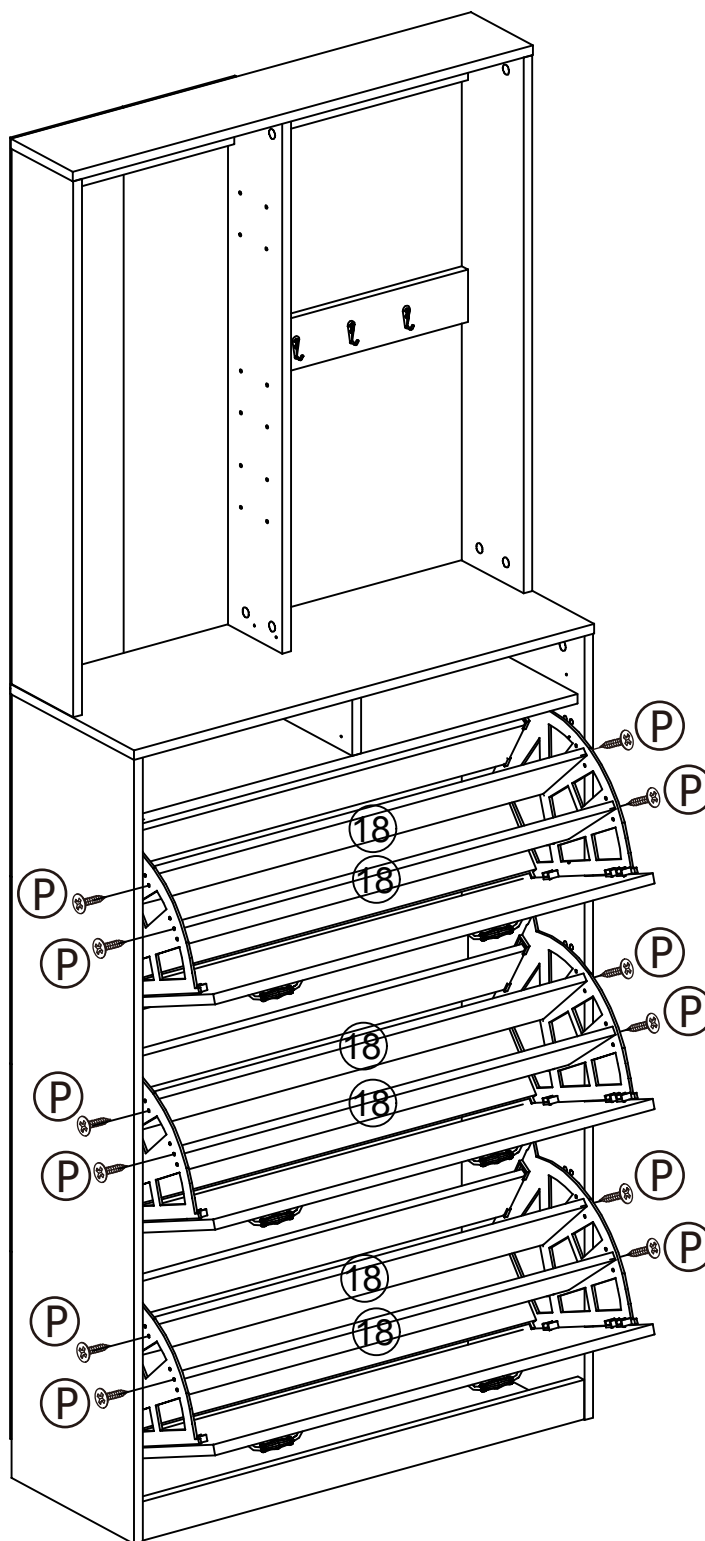


(P)



3.5*14mm Screw x 12




Assembly Instructions

Step 23

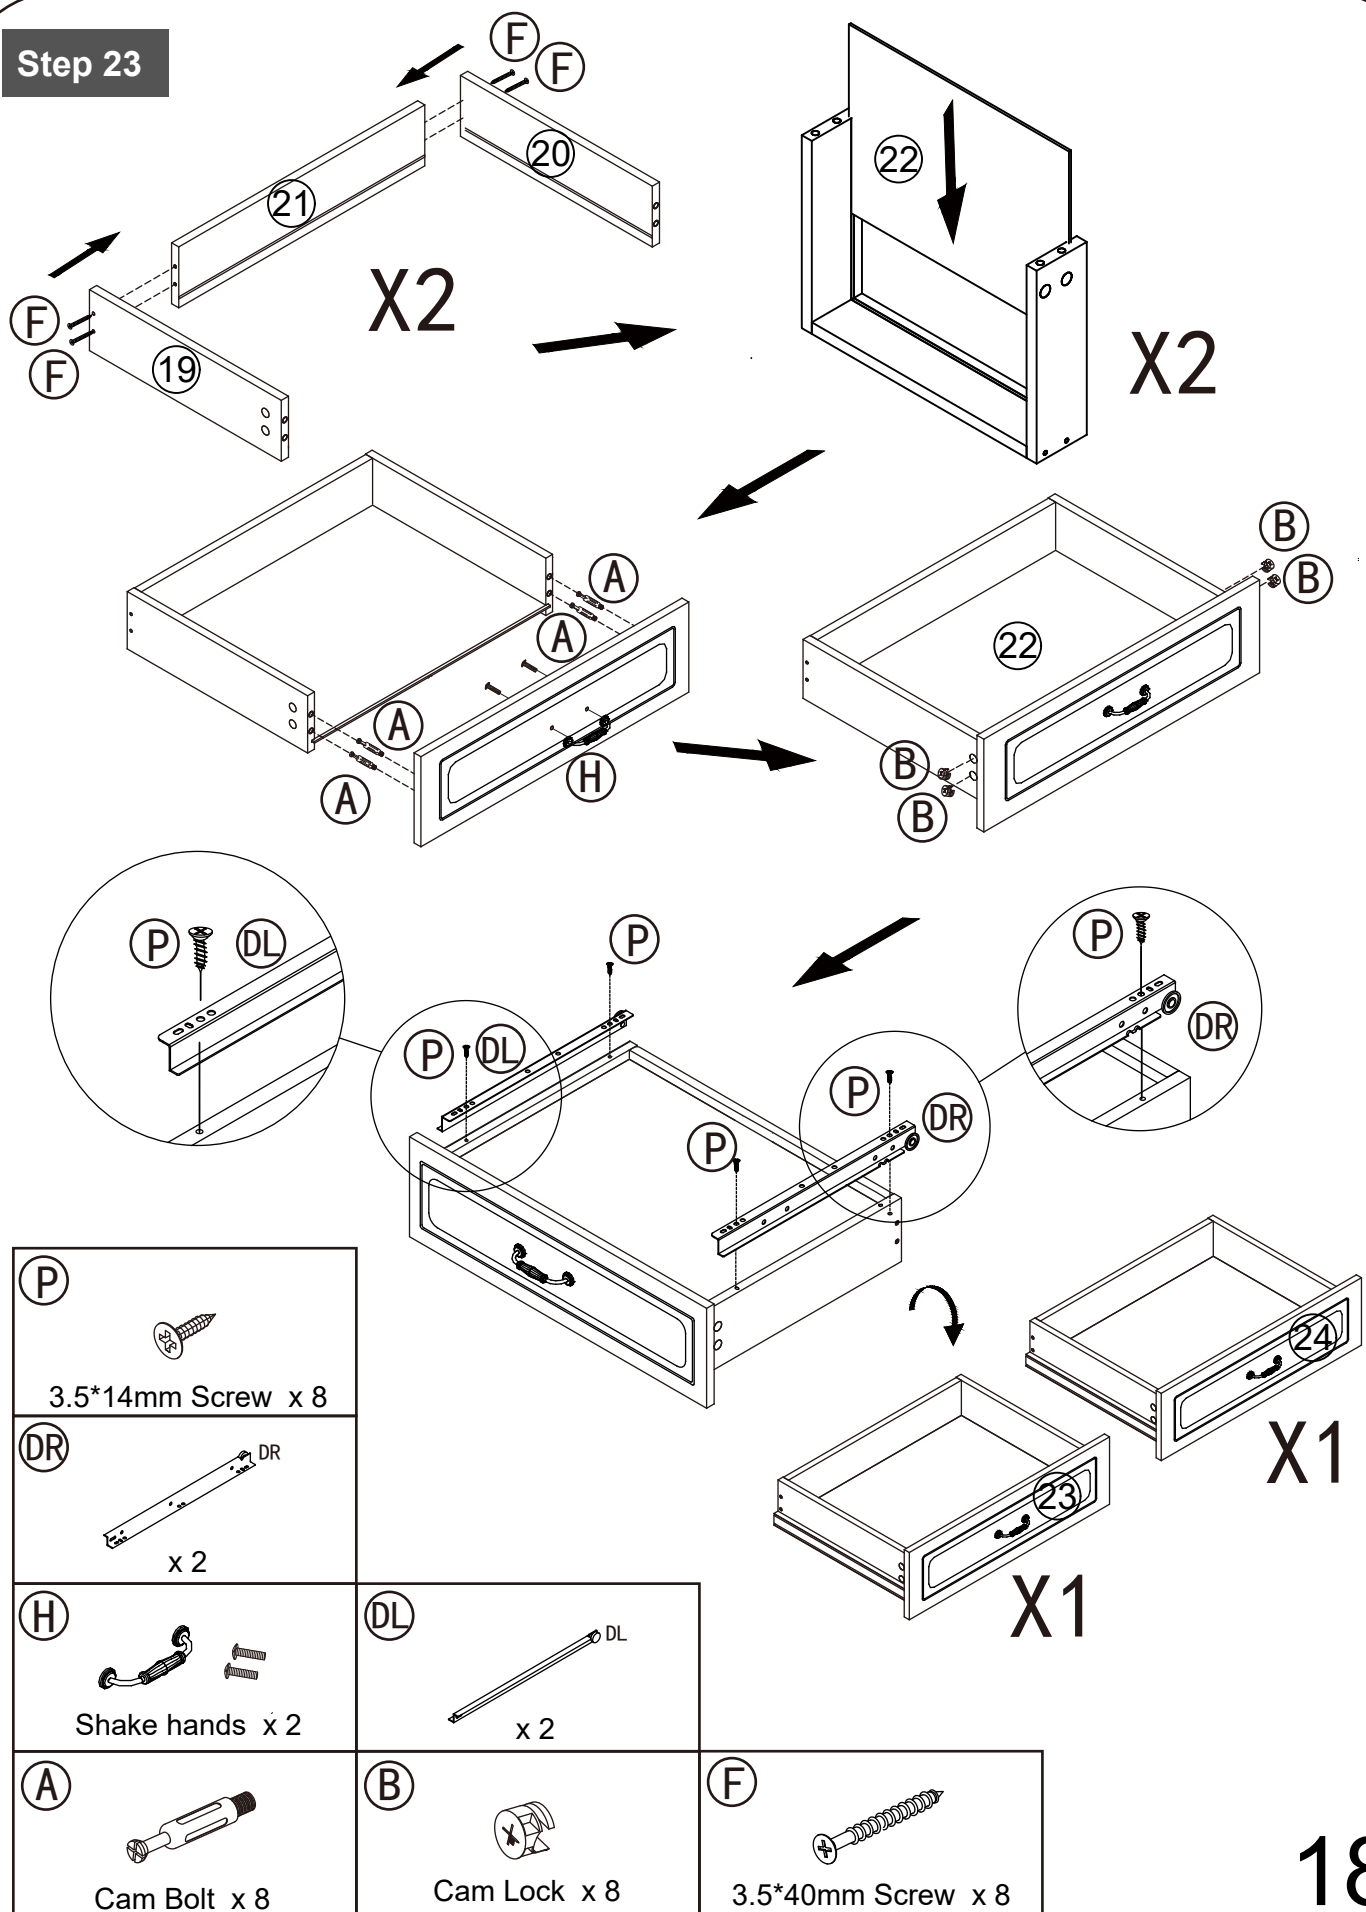


Assembly Instructions

Step 24

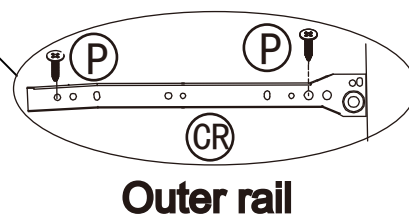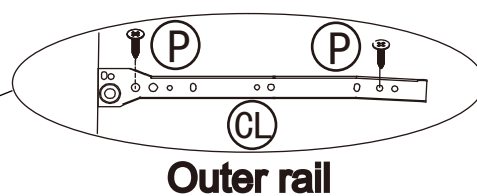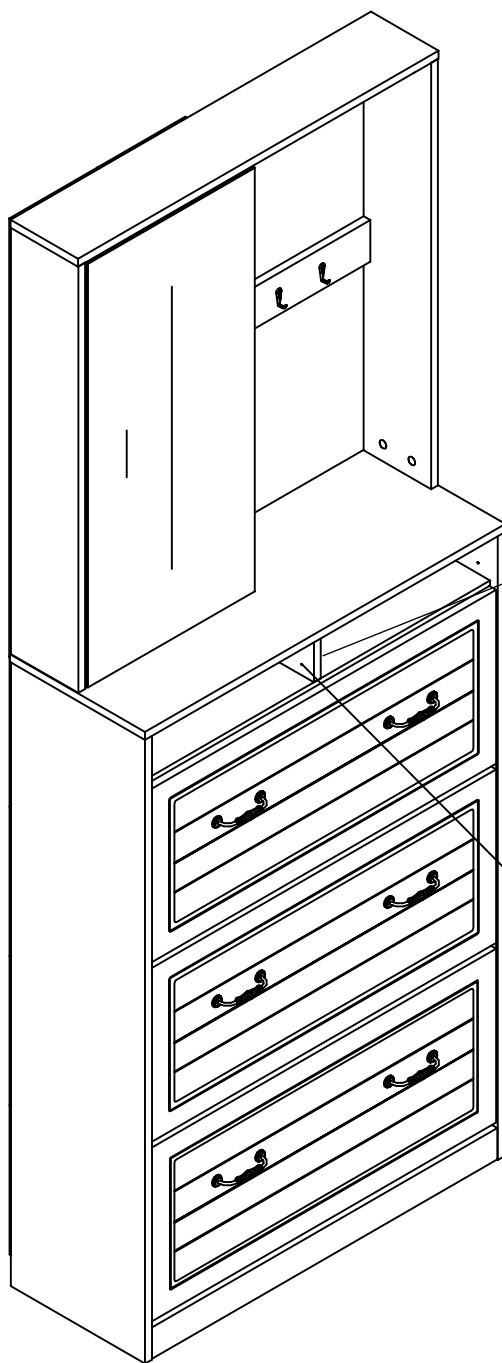


CL



x 1

CR



x 1


P




3.5*14mm Screw x 4

Assembly Instructions

Step 25

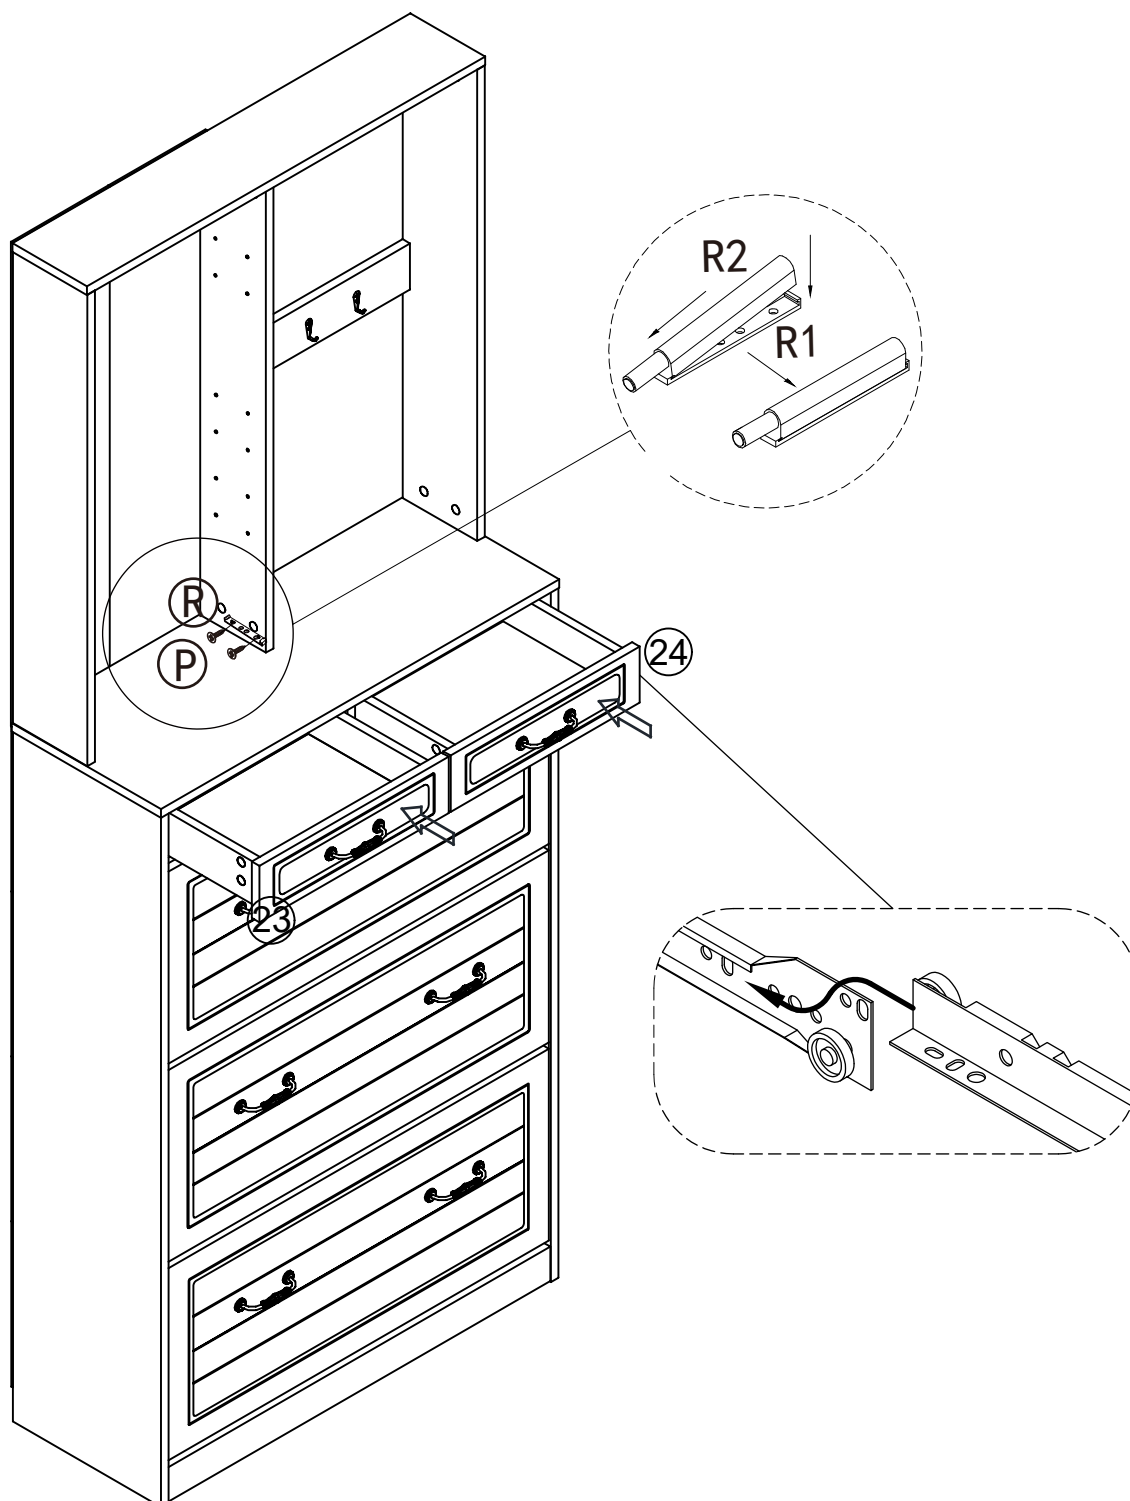

(R)



Rebound device x 1


(P)





3.5*14mm Screw x 2

Assembly Instructions

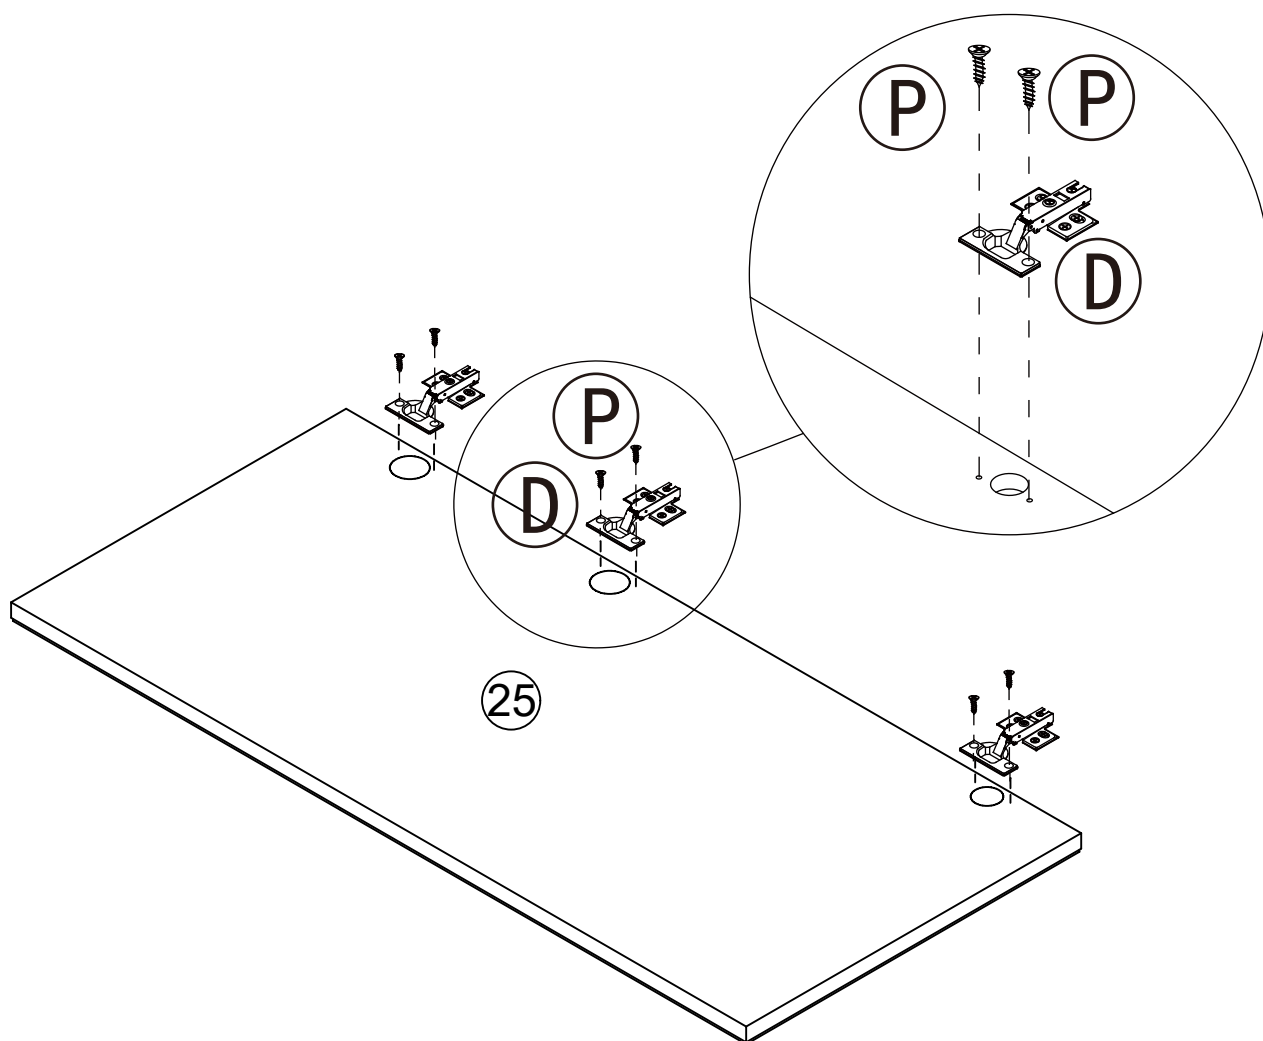
Step 26




 Hinge x 3	 3.5*14mm Screw x 6
--	---

Assembly Instructions


Step 27

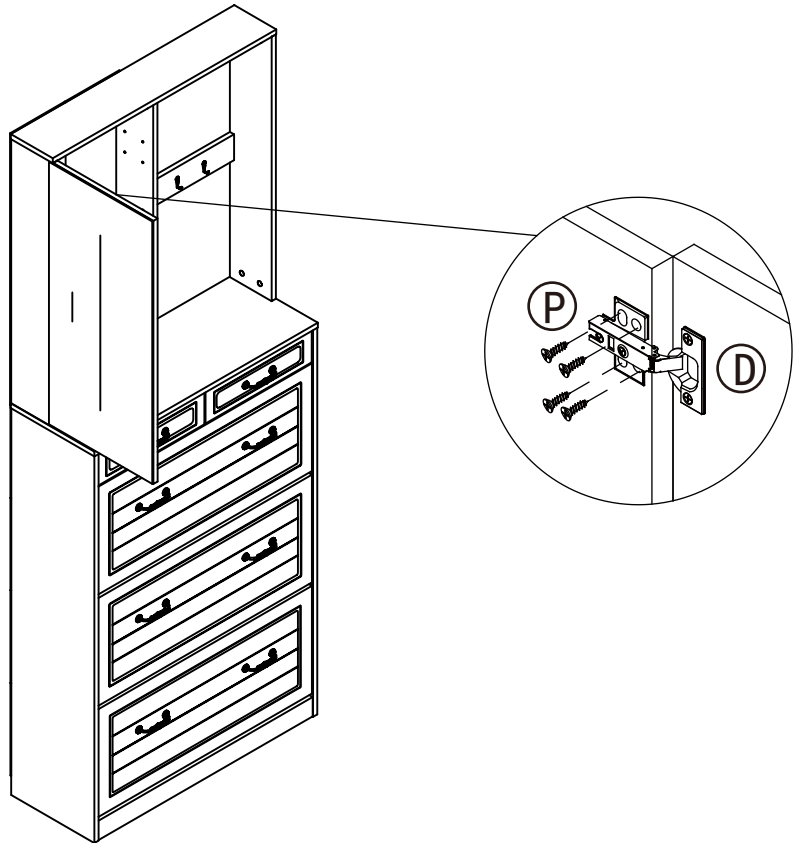

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

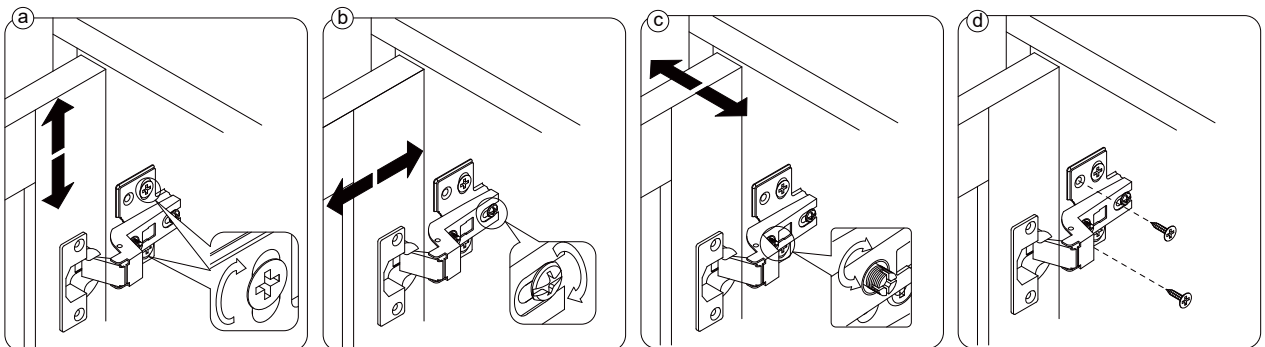


1. To adjust the doors up and down, please refer to step (a)
2. To adjust the distance between the doors and side panels, please refer to step(b)
3. To adjust the gap between two doors, please refer to step (c)
4. After the adjustment finished, please tight the screws, refer to step (d)

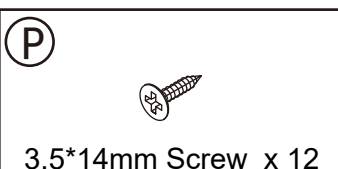

Assembly Instructions

Step 28

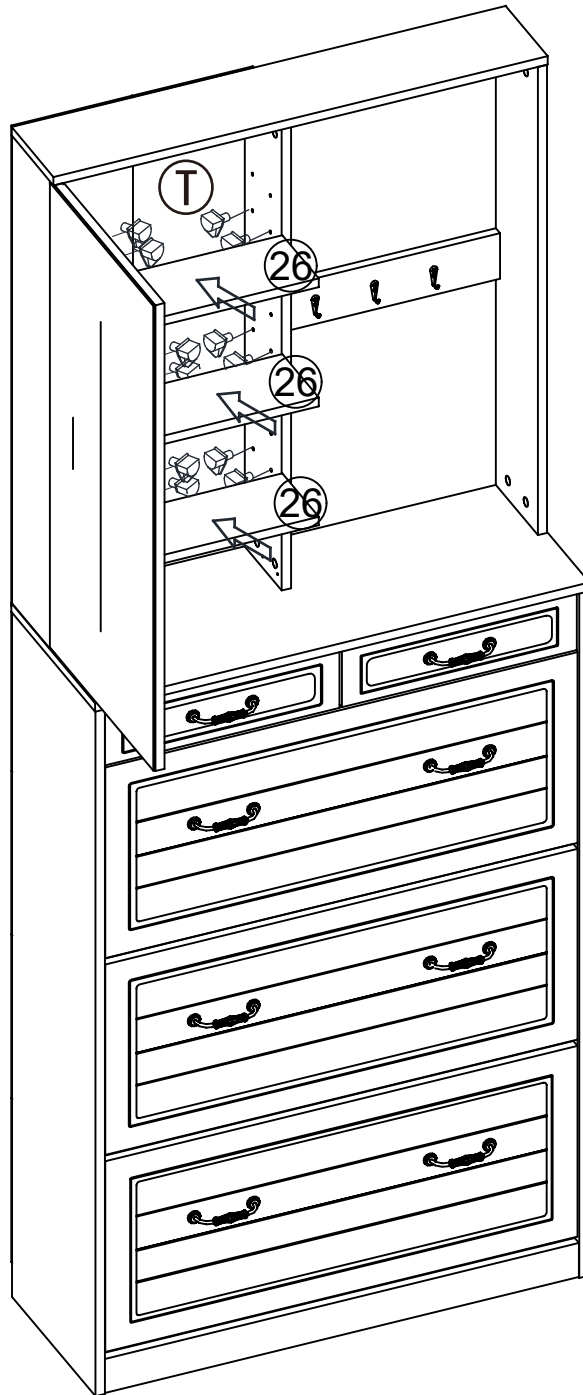

T




Bulkhead Pins x 12


Assembly Instructions

Step 29




1. Drill two holes with a depth greater than 45mm on the wall using an electric drill (measure the actual distance between the two holes in step 3)

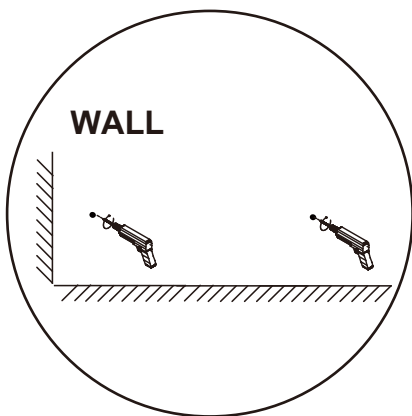

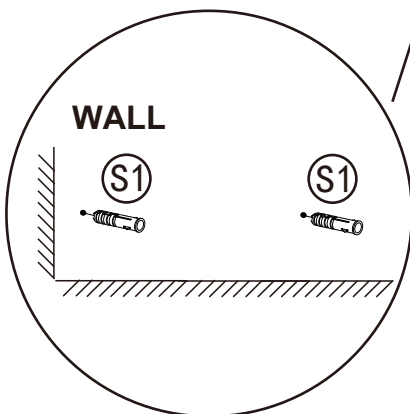

2. Place "S1" into the two holes in the step 1

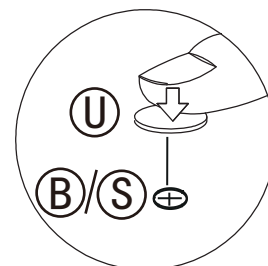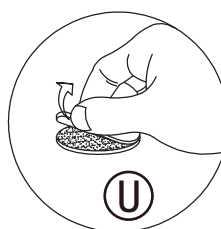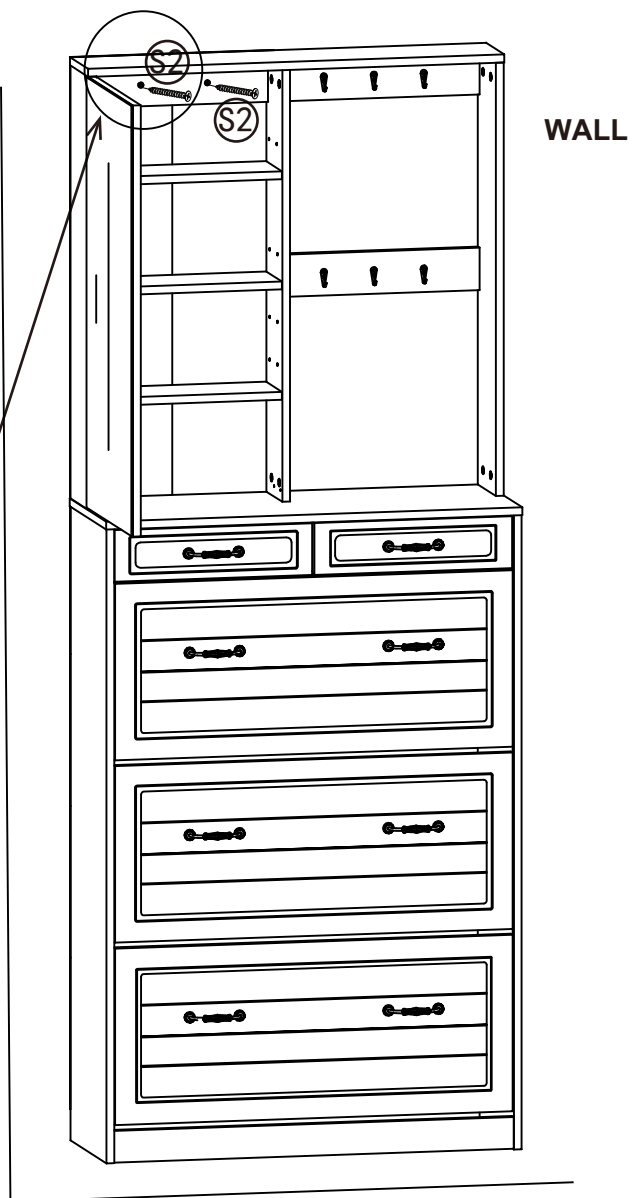

3. Align the holes on "S2" with the two holes opened in the step 1, and fix the cabinet body to the wall



<p>(S)</p>  <p>S1 S2</p> <p>Anti fall component x 2</p>	<p>(B)</p>  <p>Perfect Fit x 58</p>
---	---

Assembly Instructions

Step 30

