
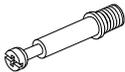
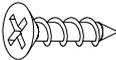
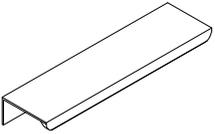
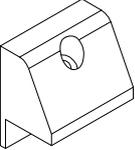
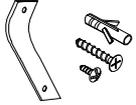
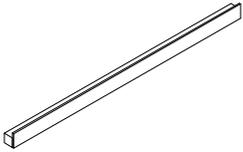
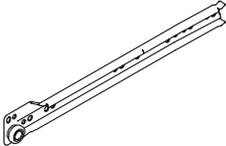
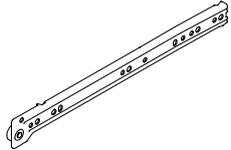
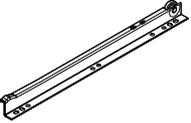


**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.























**Hardware:**

<b>B</b> X36 	<b>C</b> X36 	<b>D</b> X28 	<b>E</b> X24 	<b>F</b> X24 
<b>G</b> X8 	<b>H</b> X4 	<b>I</b> X4 	<b>J</b> X28 	<b>K</b> X2 
<b>L</b> X18 	<b>M</b> X18 	<b>N</b> X5 	<b>O</b> X1 	<b>P</b> X2 
<b>Q</b> X10 	<b>R</b> X1 	<b>S</b> X10 	<b>CL</b> X2 	<b>CR</b> X2 
<b>DL</b> X2 	<b>DR</b> X2 			

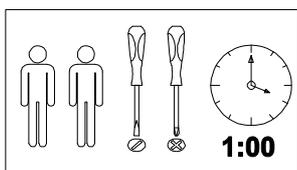


**Tools required for assembly:** Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)




**panels:**

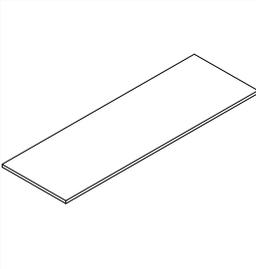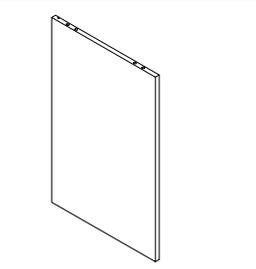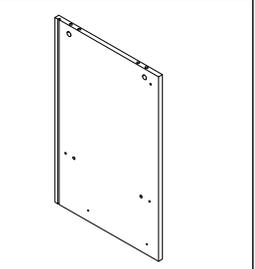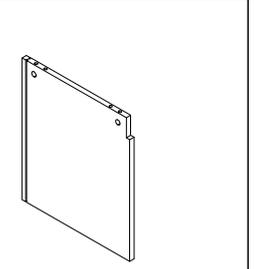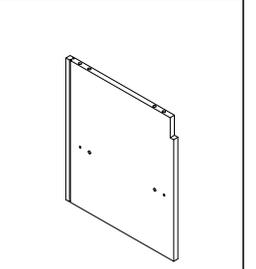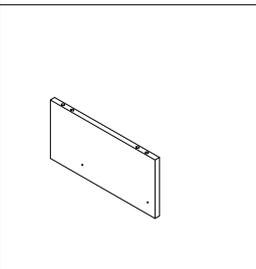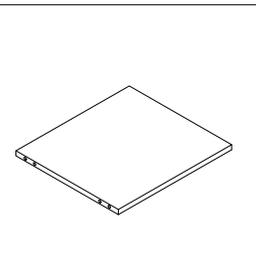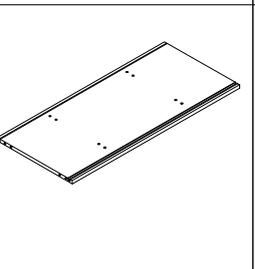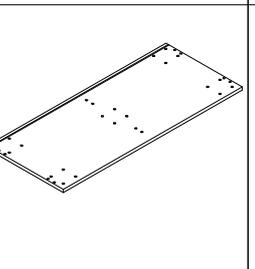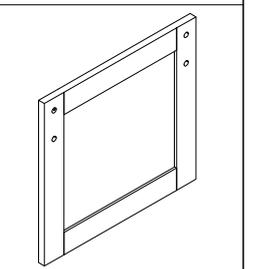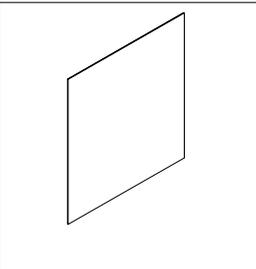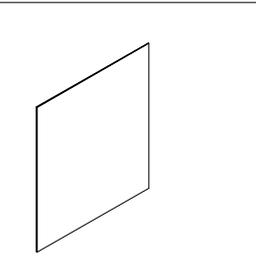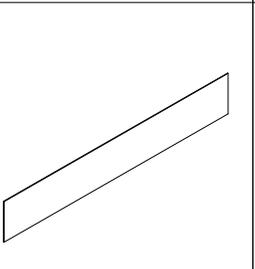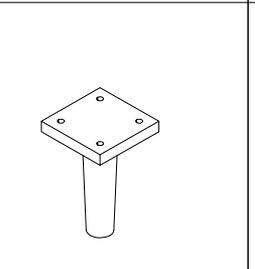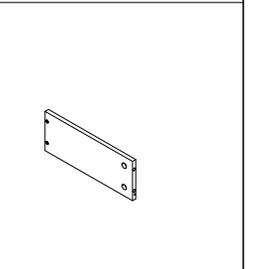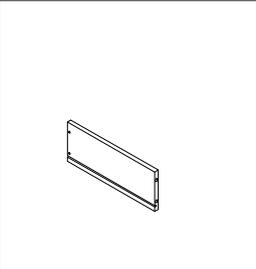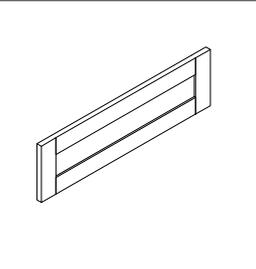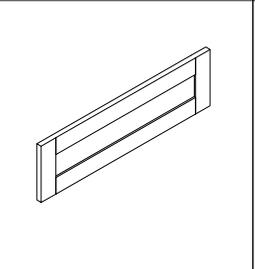
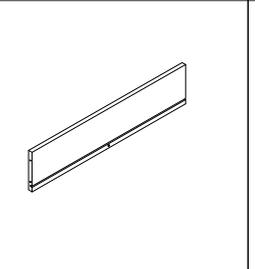
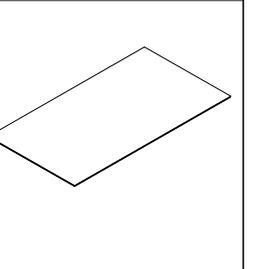
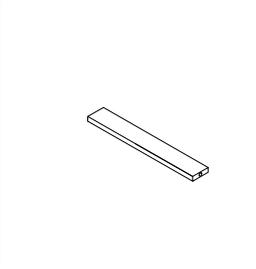
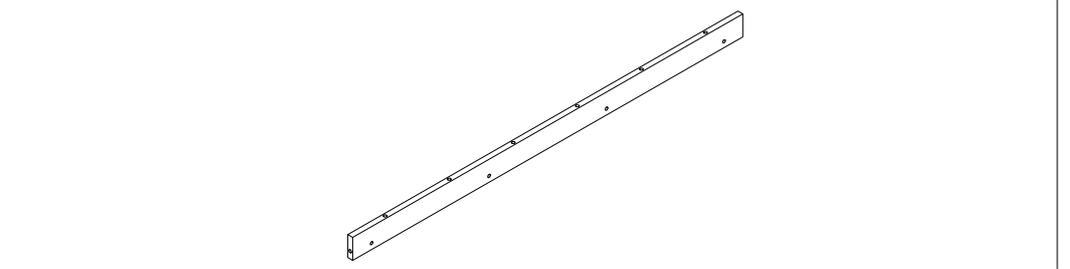
① X1 	② X1 	③ X1 	④ X1 	⑤ X1 
⑥ X1 	⑦ X1 	⑧ X1 	⑨ X1 	⑩ X2 
⑪ X2 	⑫ X1 	⑬ X1 	⑭ X5 	⑮ X2 
⑯ X2 	⑰ X1 	⑱ X1 	⑲ X2 	⑳ X2 
㉑ X2 	㉒ X1 			

**panels:**

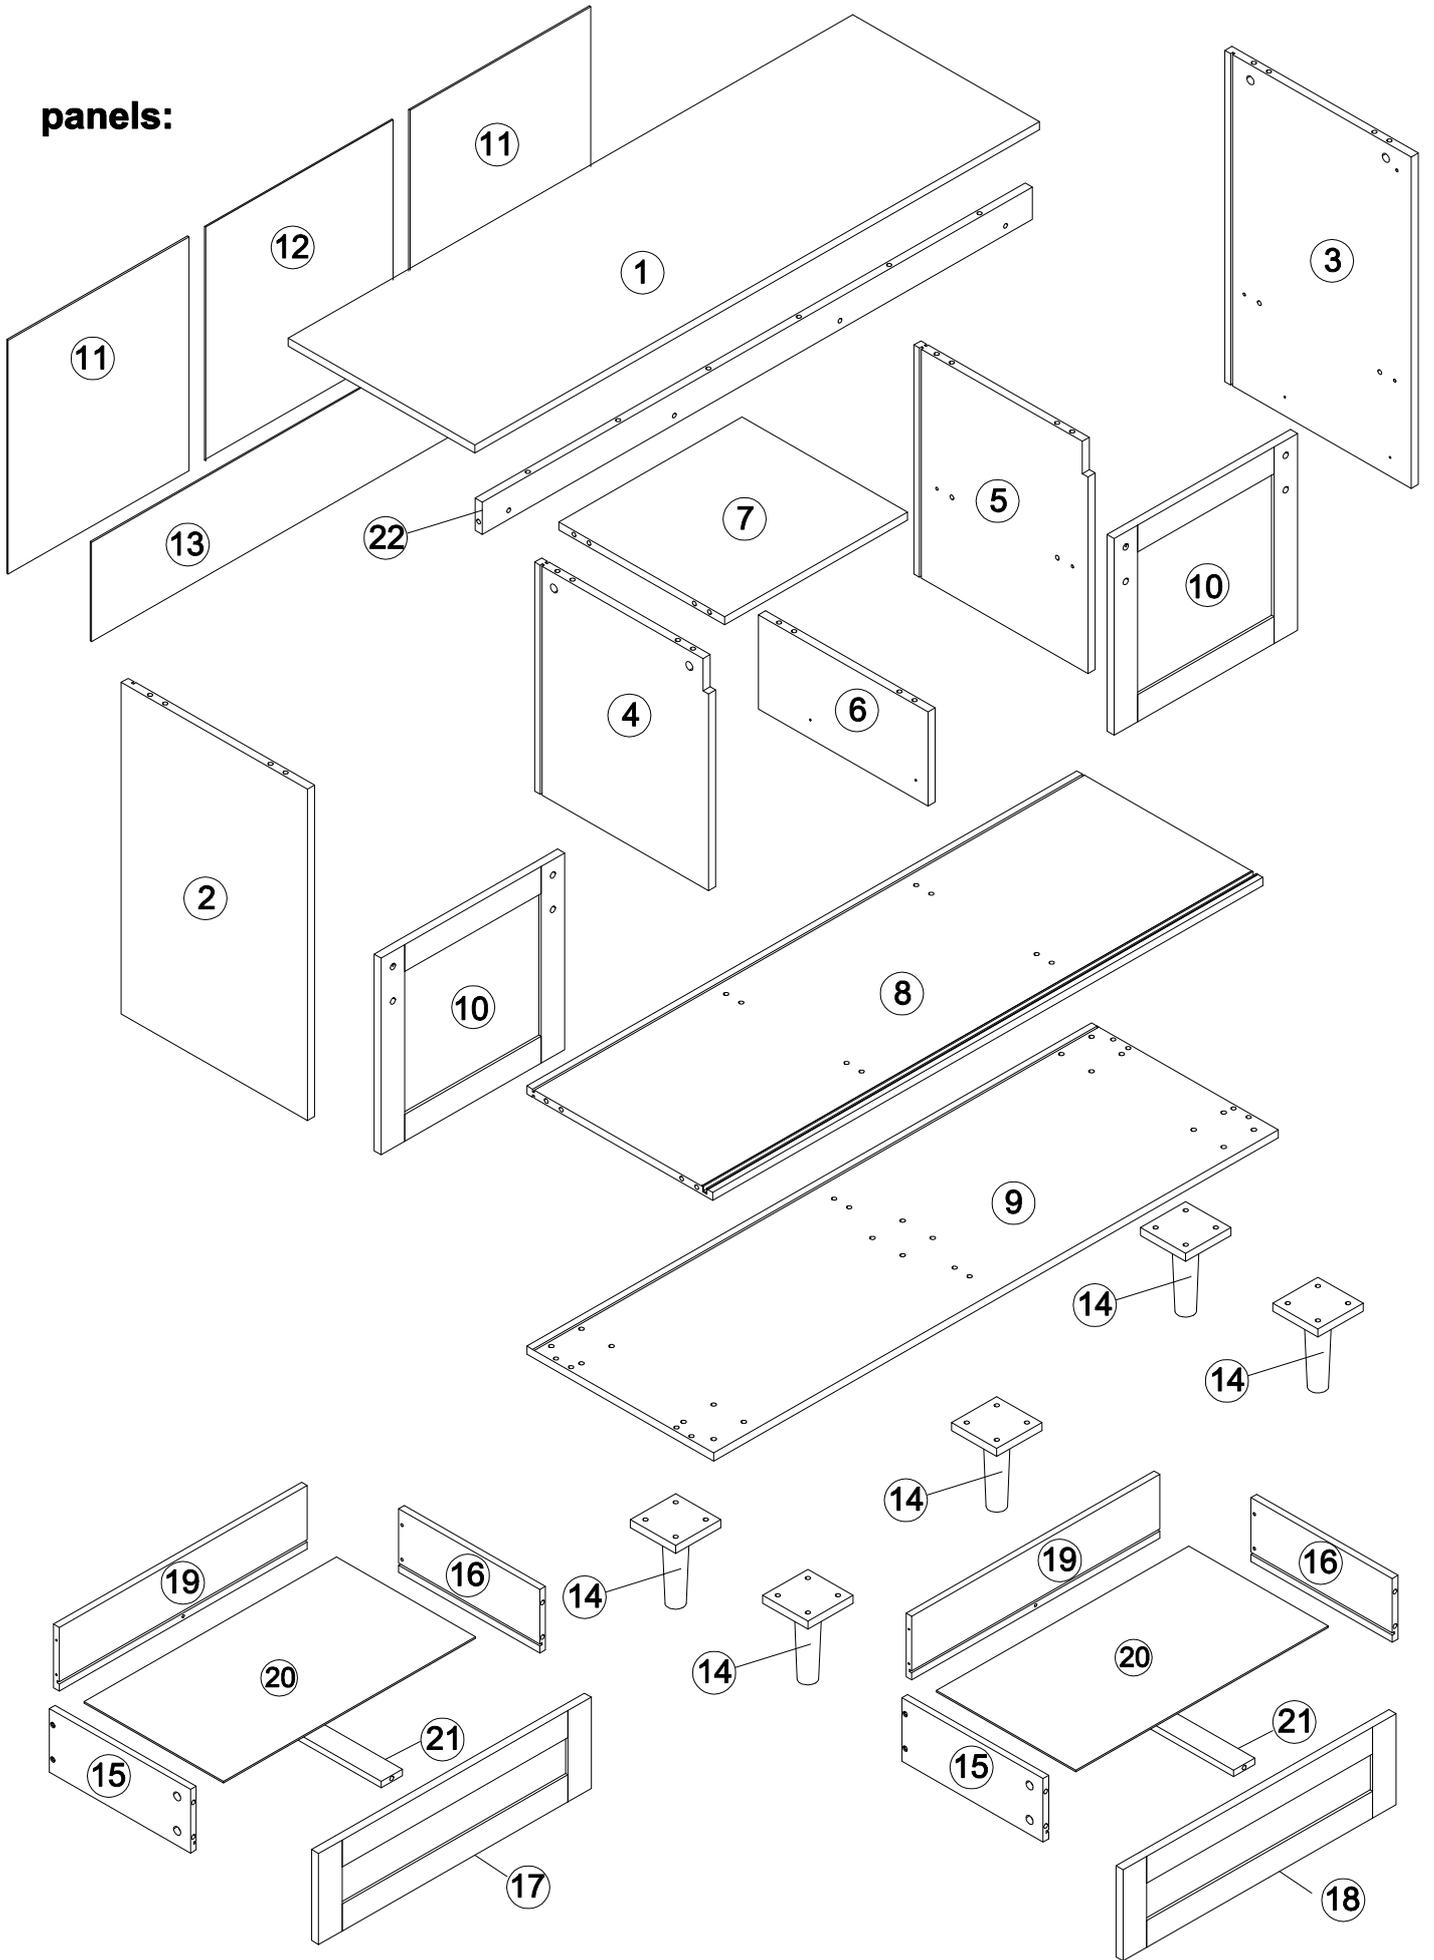





# STEP 1

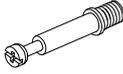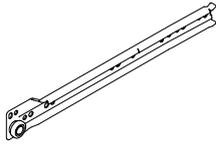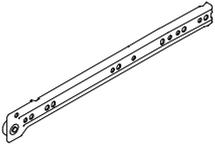Ⓒ X6	Ⓐ X4	ⒸⓁ X1	ⒸⓇ X1
			

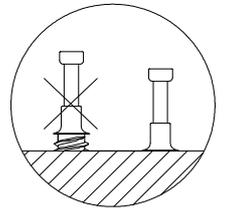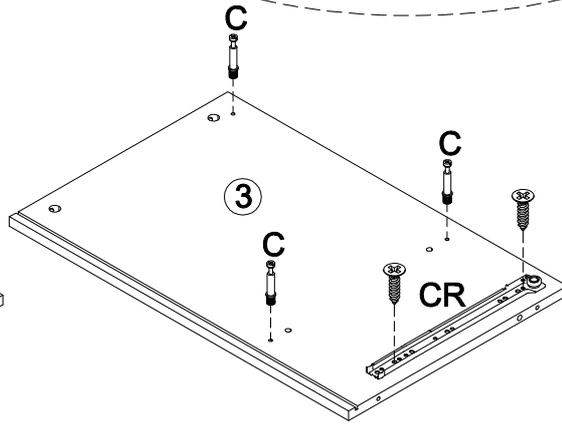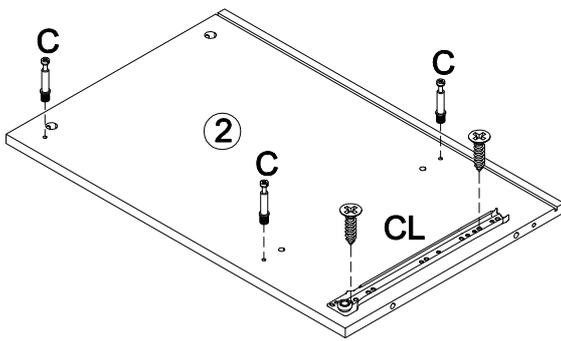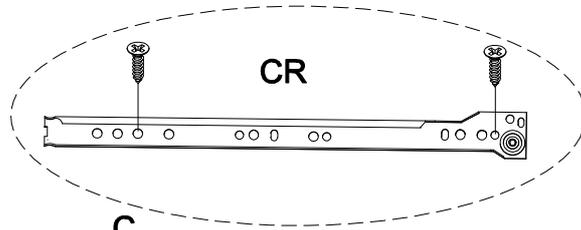
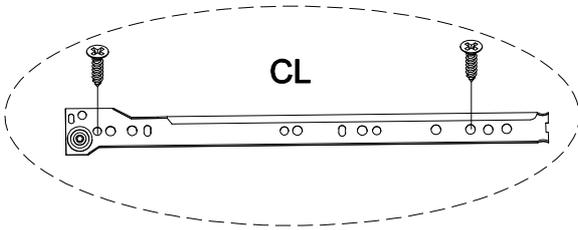






# STEP 2

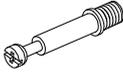Ⓒ X4

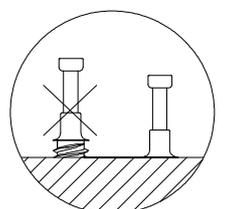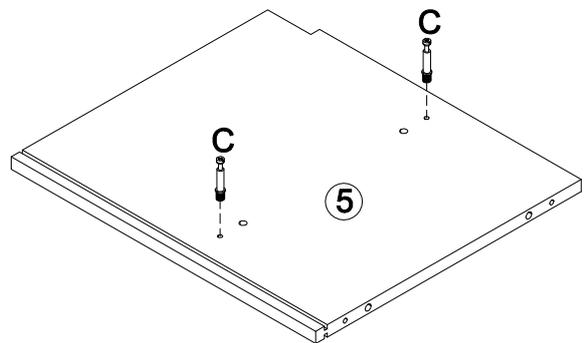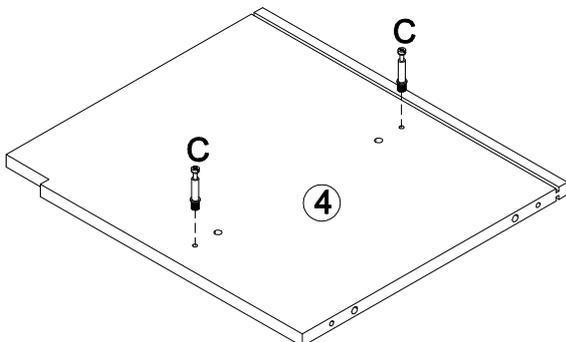


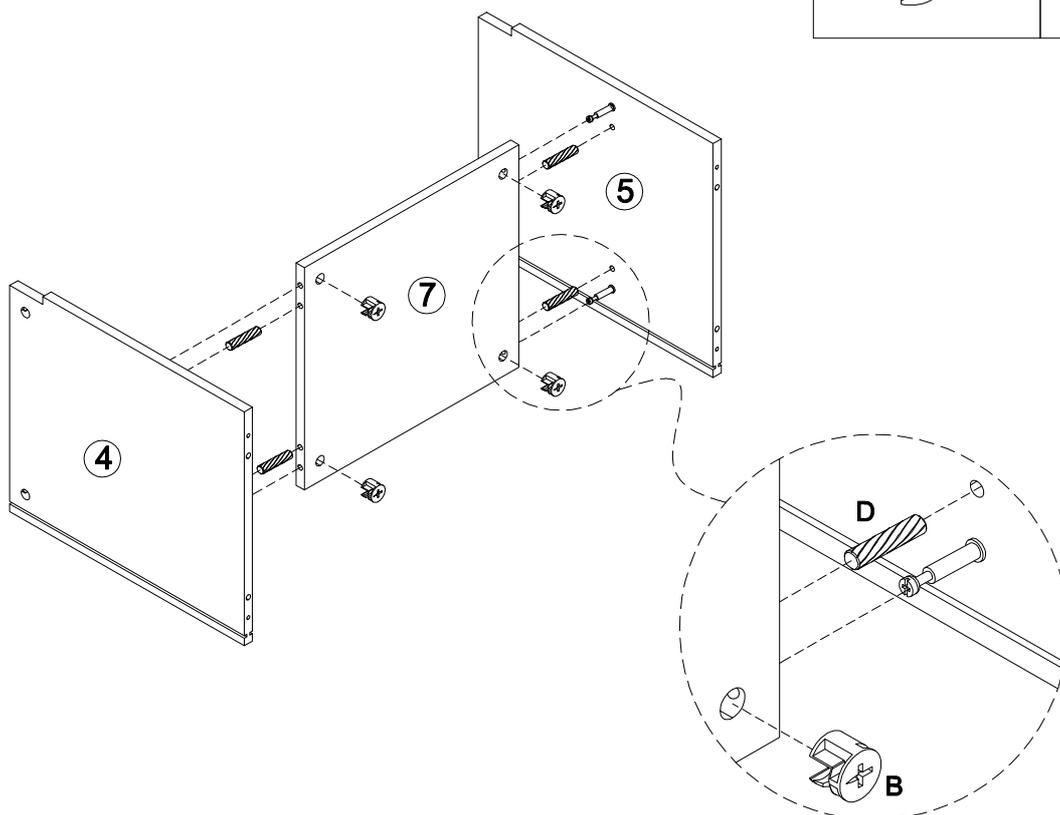
### STEP 3
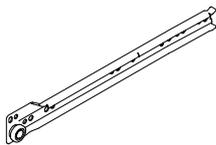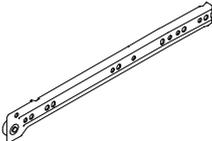
<b>J</b> X4	<b>CL</b> X1	<b>CR</b> X1
		

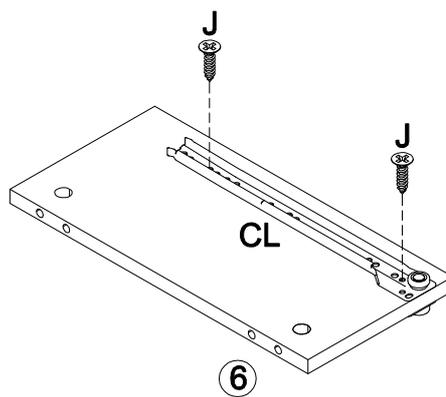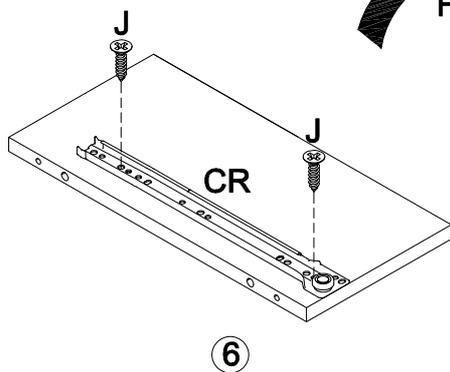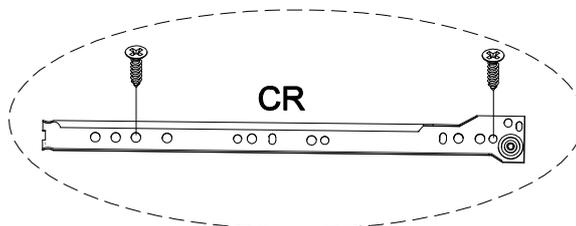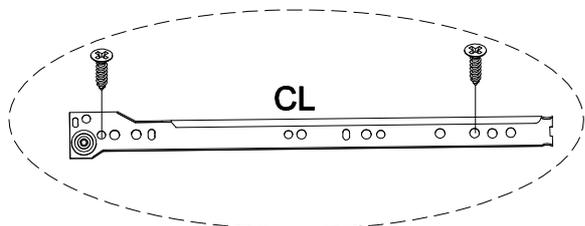


### STEP 4

<b>B</b> X6	<b>D</b> X4
	




# STEP 5

Q X4	D X4
	

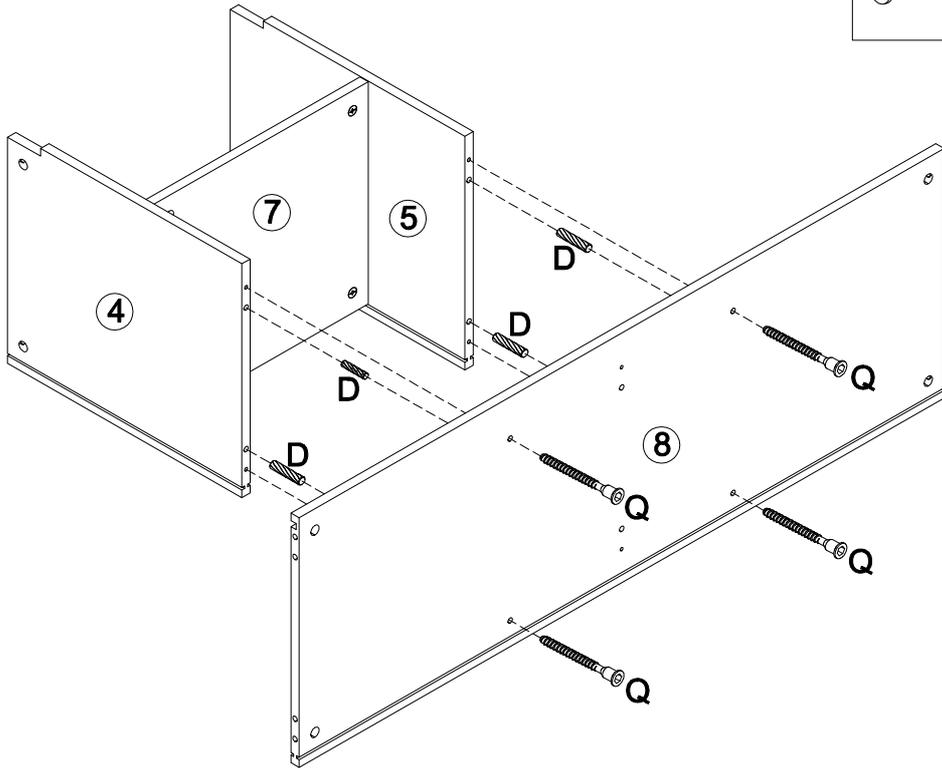


# STEP 6

O X1	E X4	F X4
		

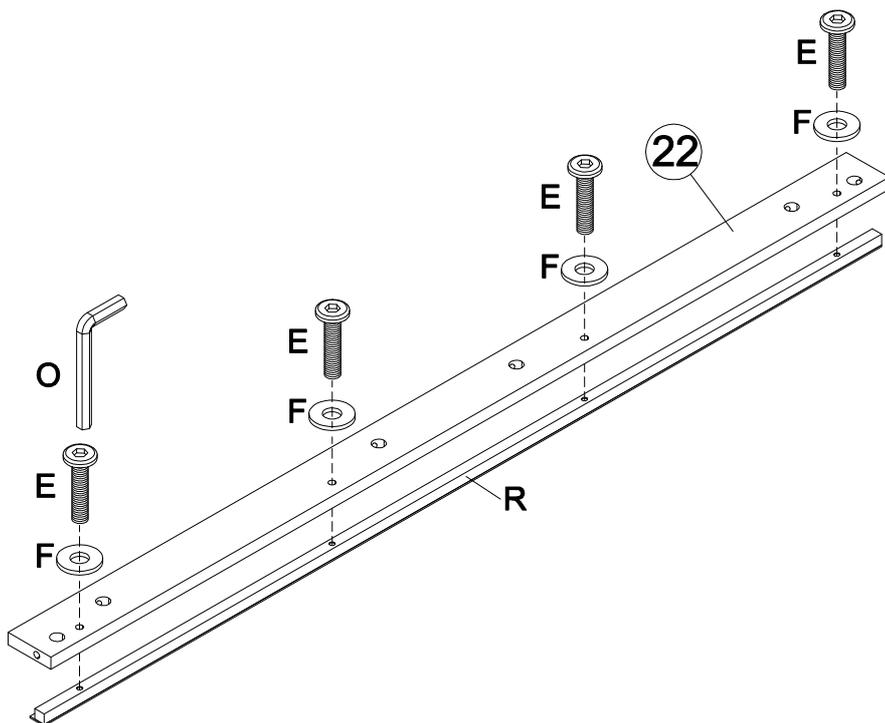


# STEP 7

<b>B</b> X6	<b>D</b> X4
	

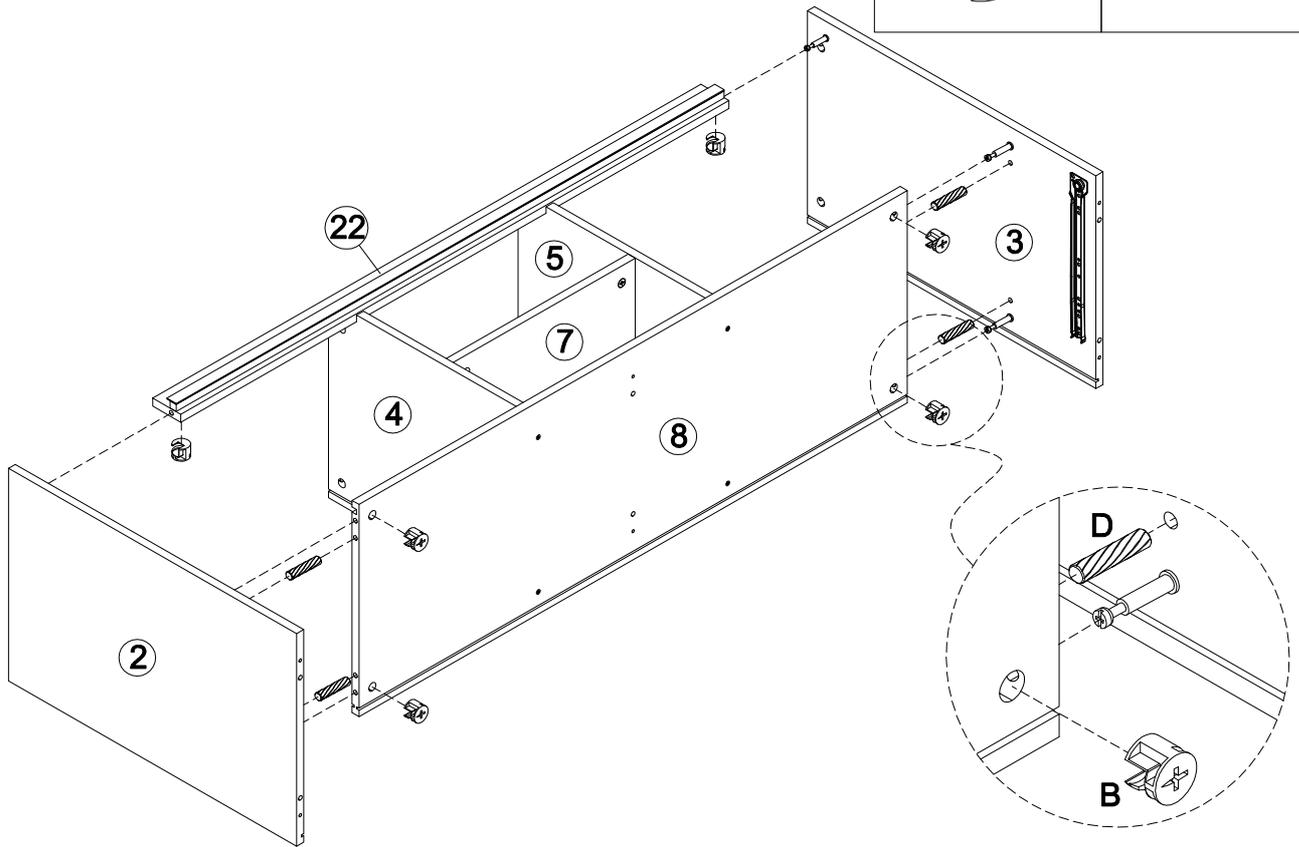


# STEP 8

<b>C</b> X2

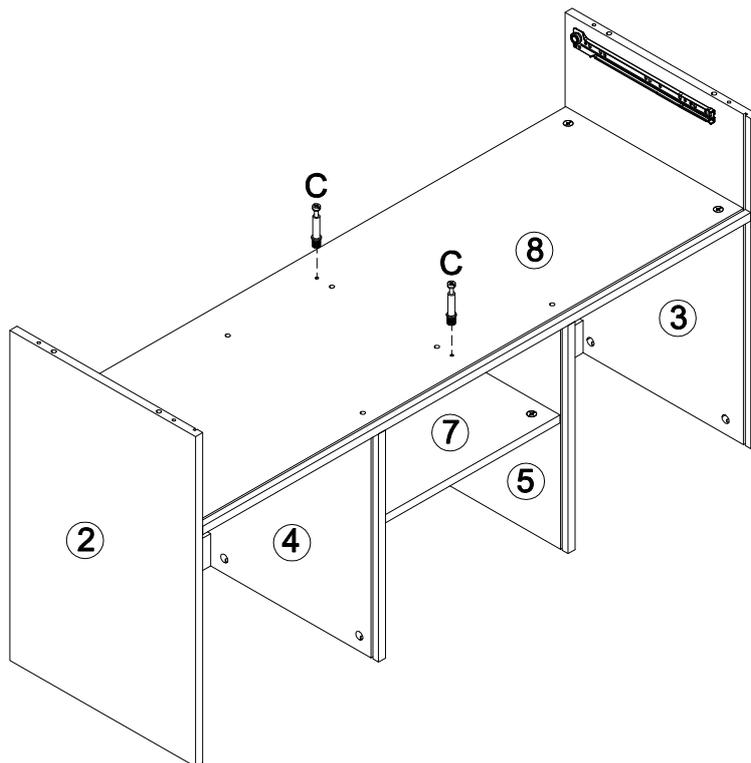



# STEP 9


<b>B</b> X2	<b>D</b> X2
	

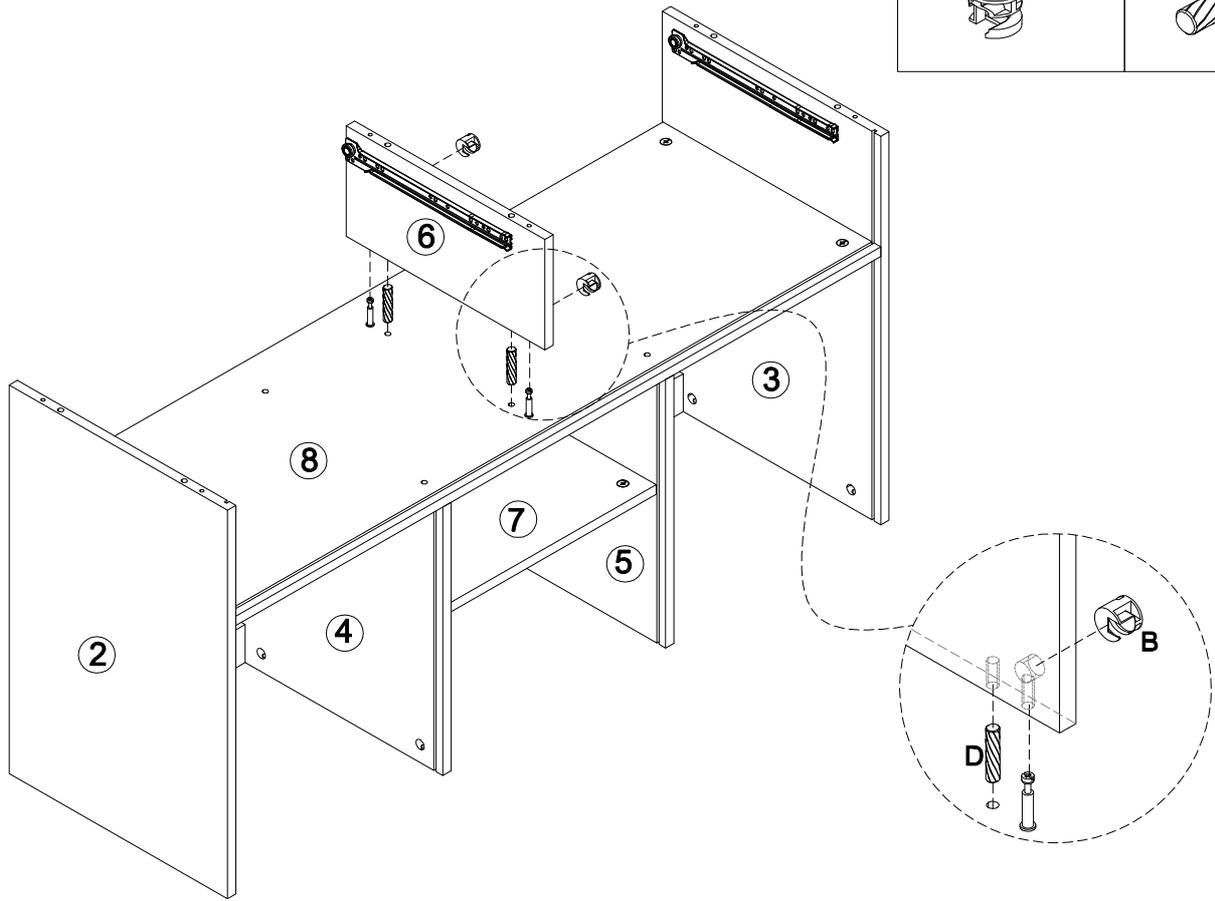


# STEP 10

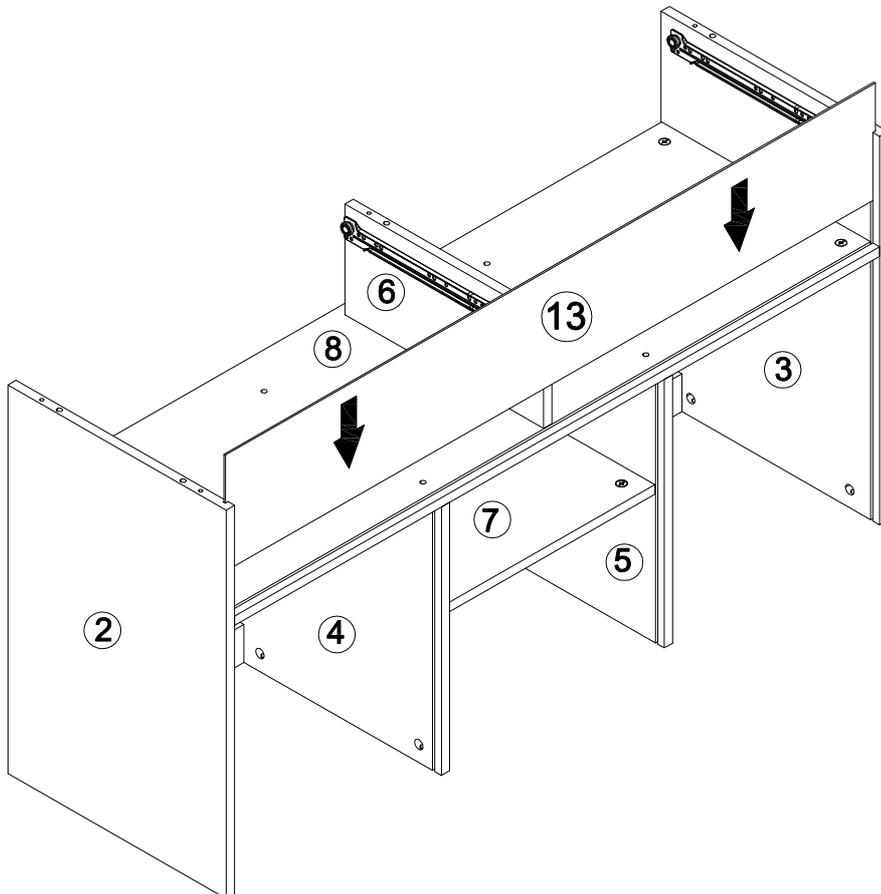


# STEP 11

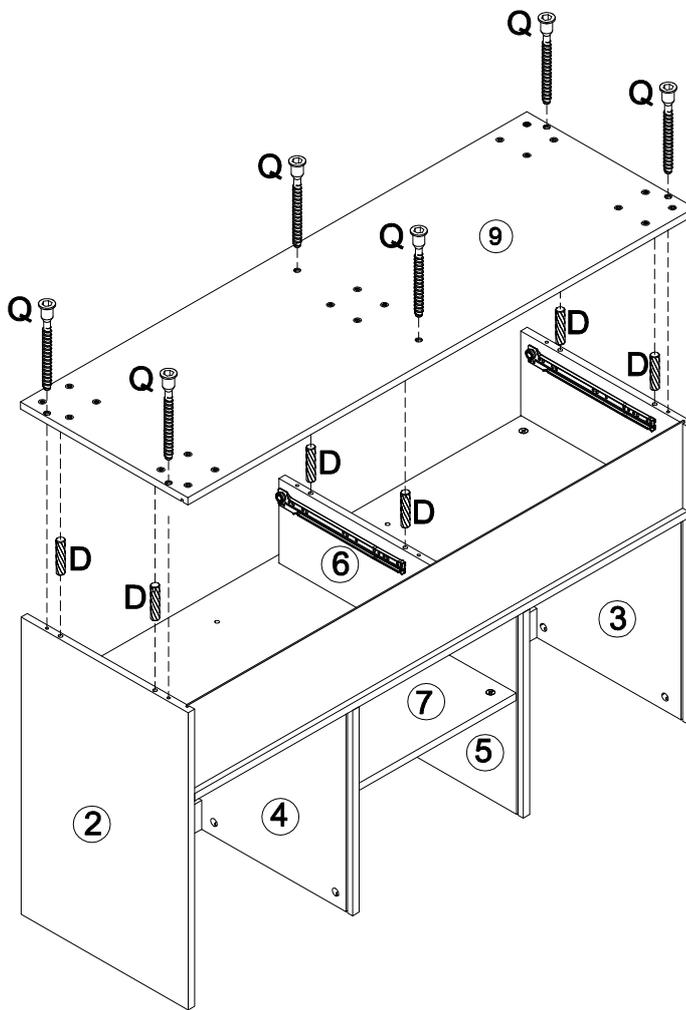



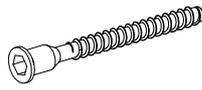
Q X6	D X6
	

# STEP 12

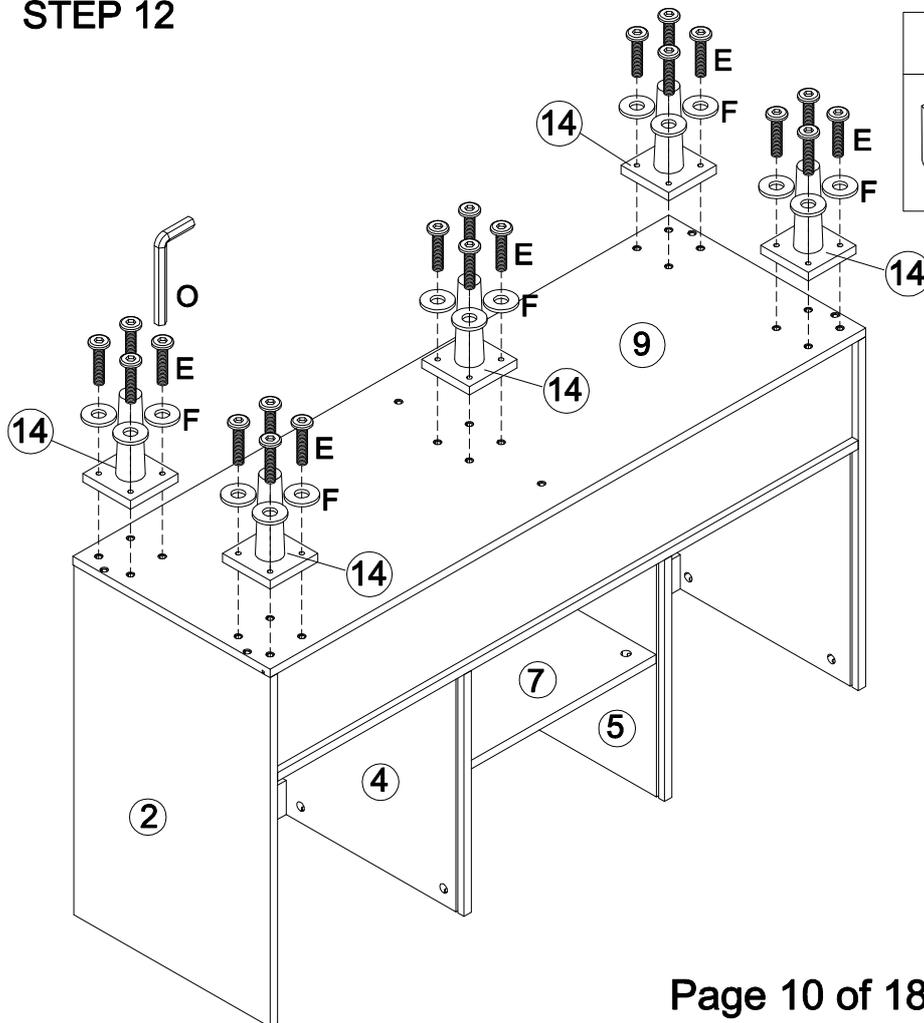


O X1	E X20	F X20
		

# STEP 13

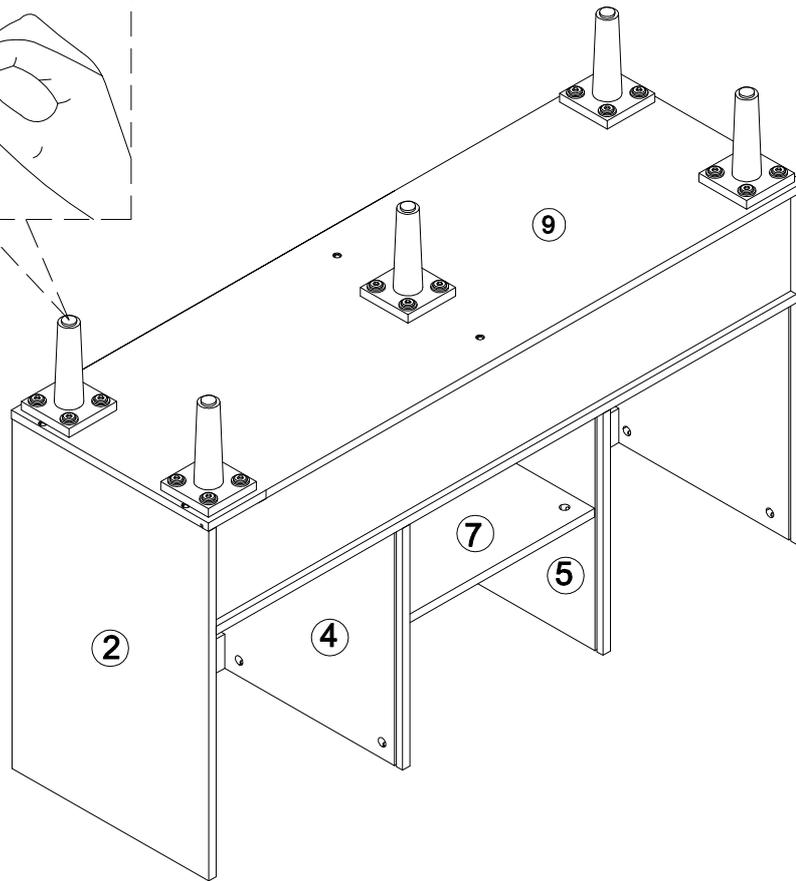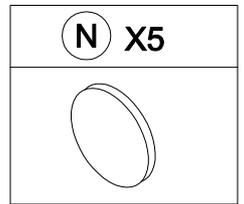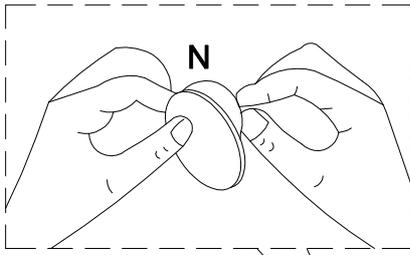


# STEP 14

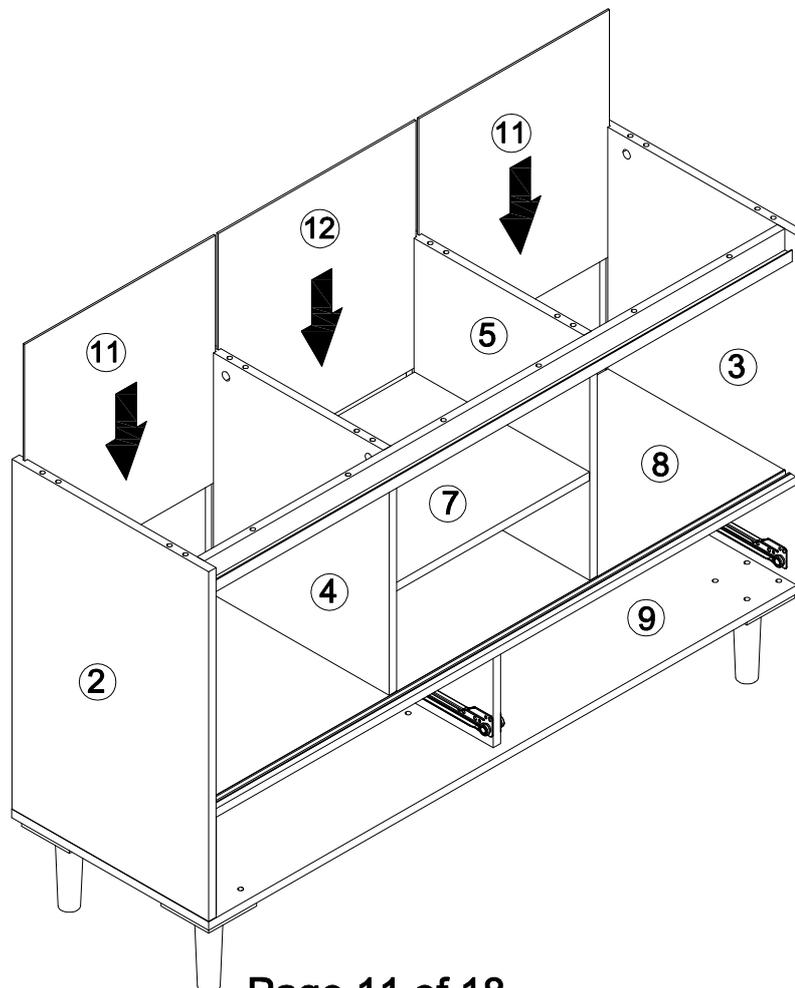



# STEP 15

<b>C</b> X14

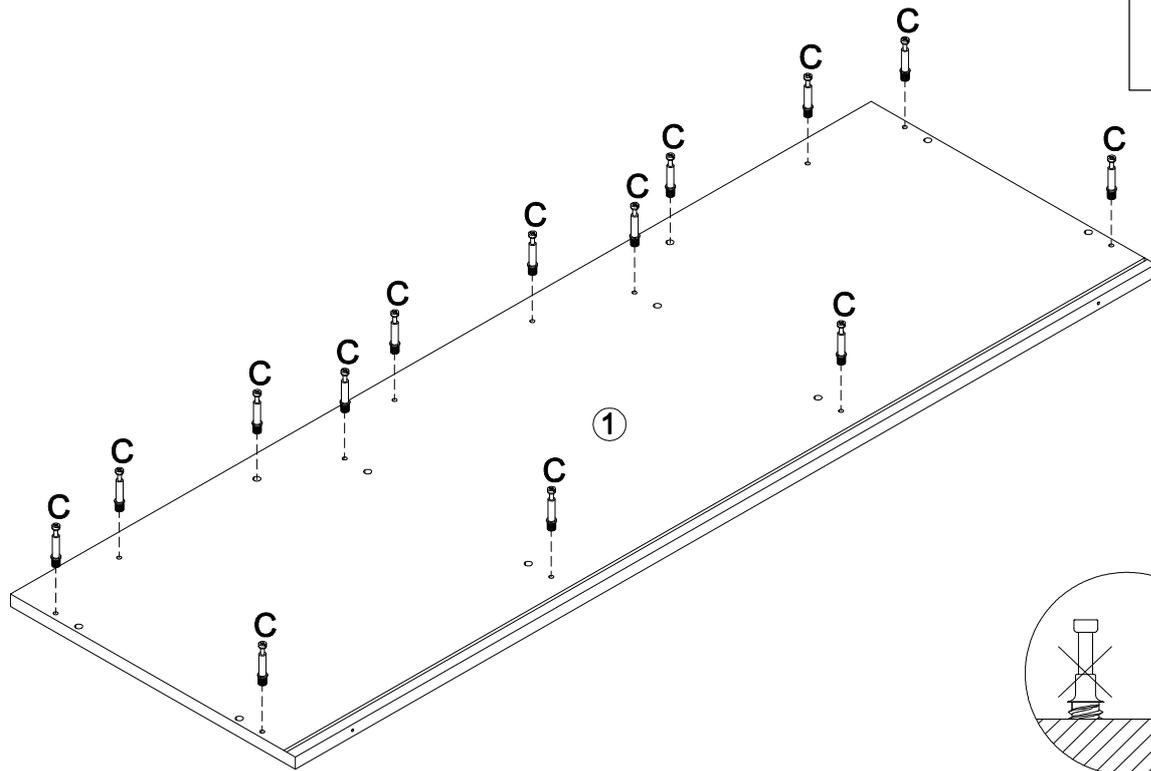



# STEP 16



<b>B</b> X14	<b>D</b> X8
	

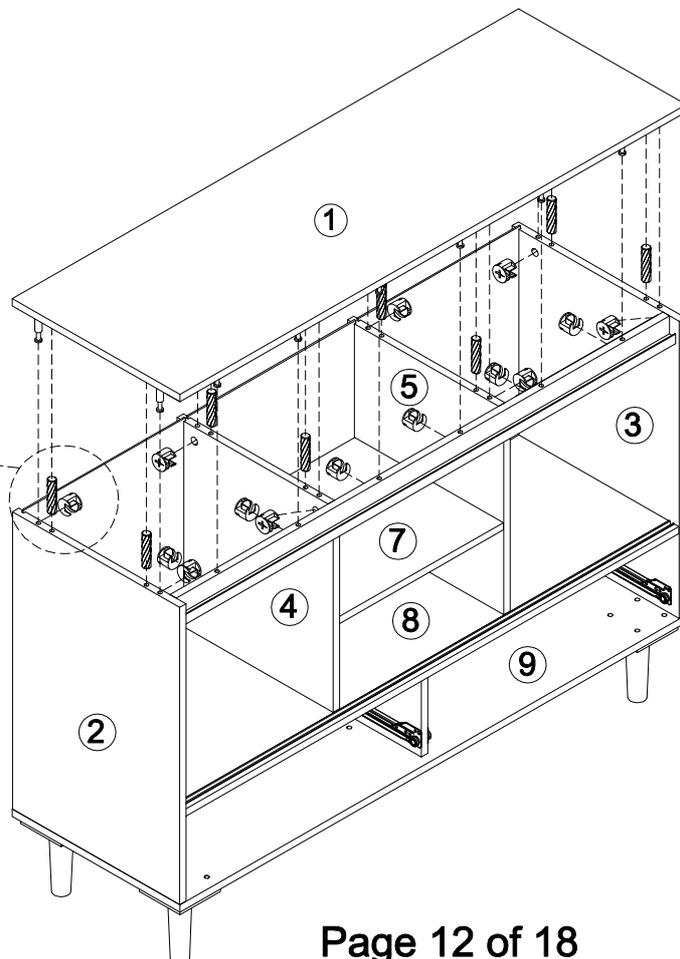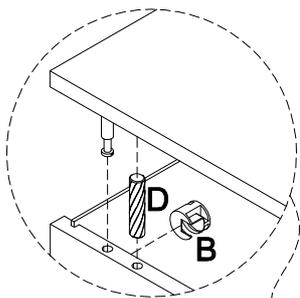

# STEP 17

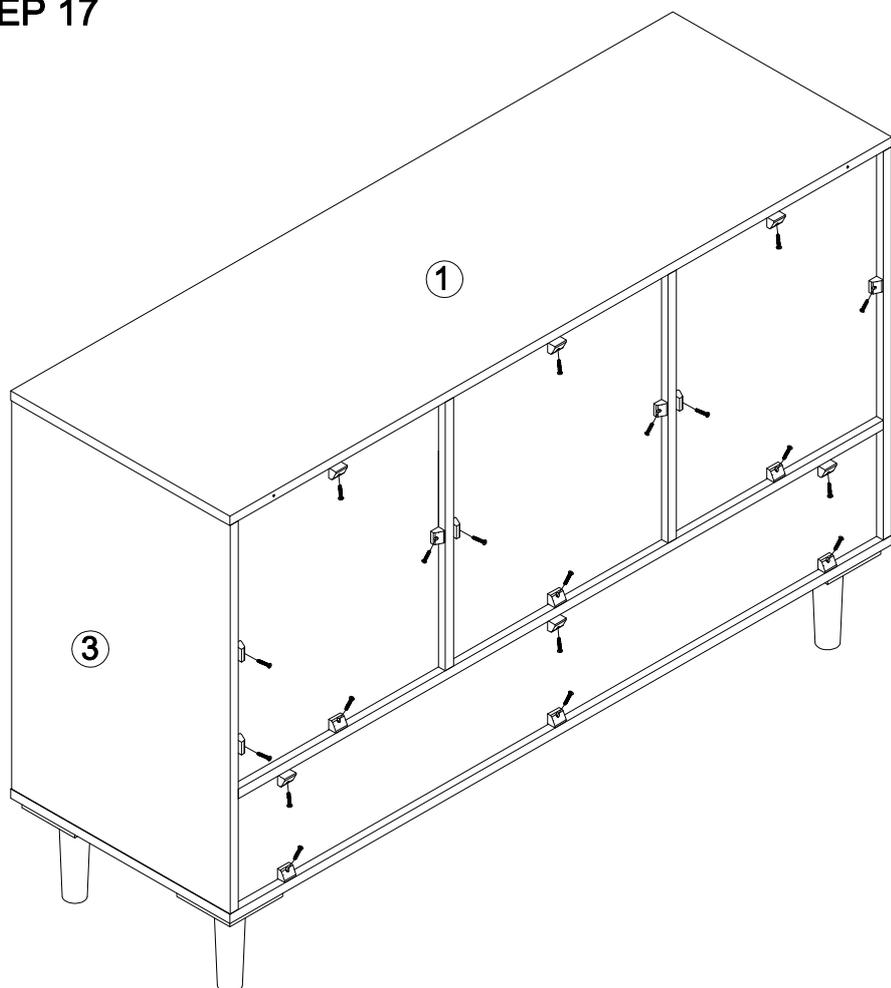


<b>L X18</b>	<b>M X18</b>

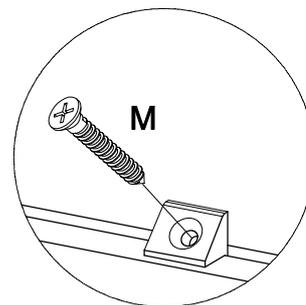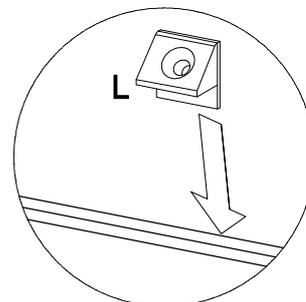


# STEP 18



<b>O X1</b>	<b>J X8</b>	<b>G X8</b>	<b>H X4</b>	<b>I X4</b>

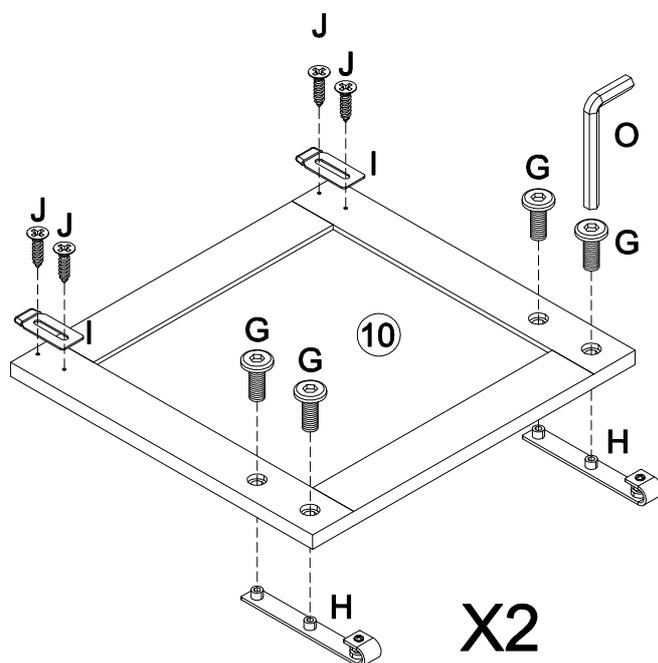


# STEP 19

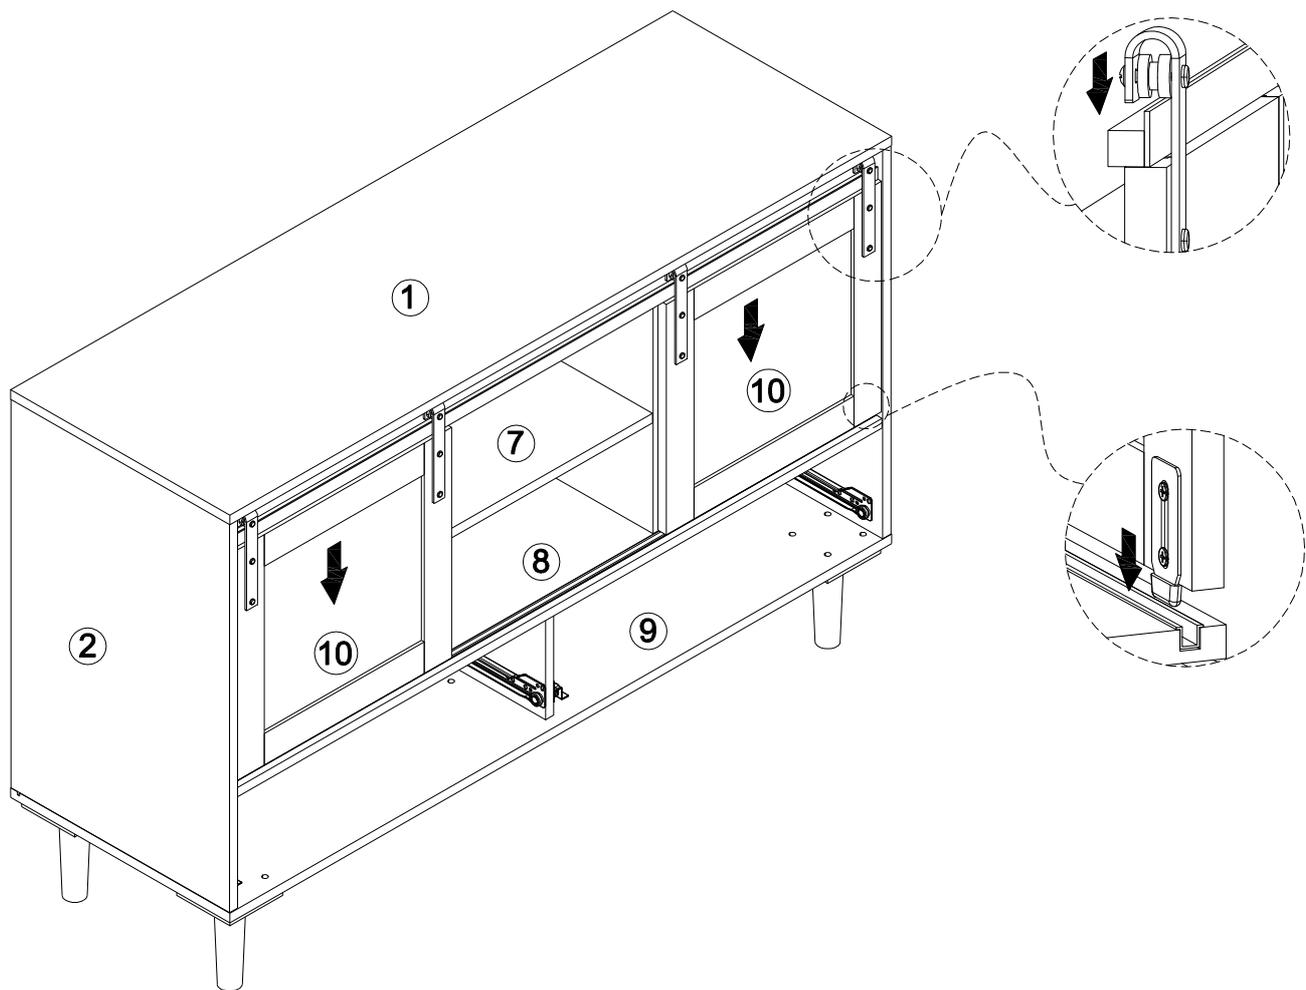




STEP 20

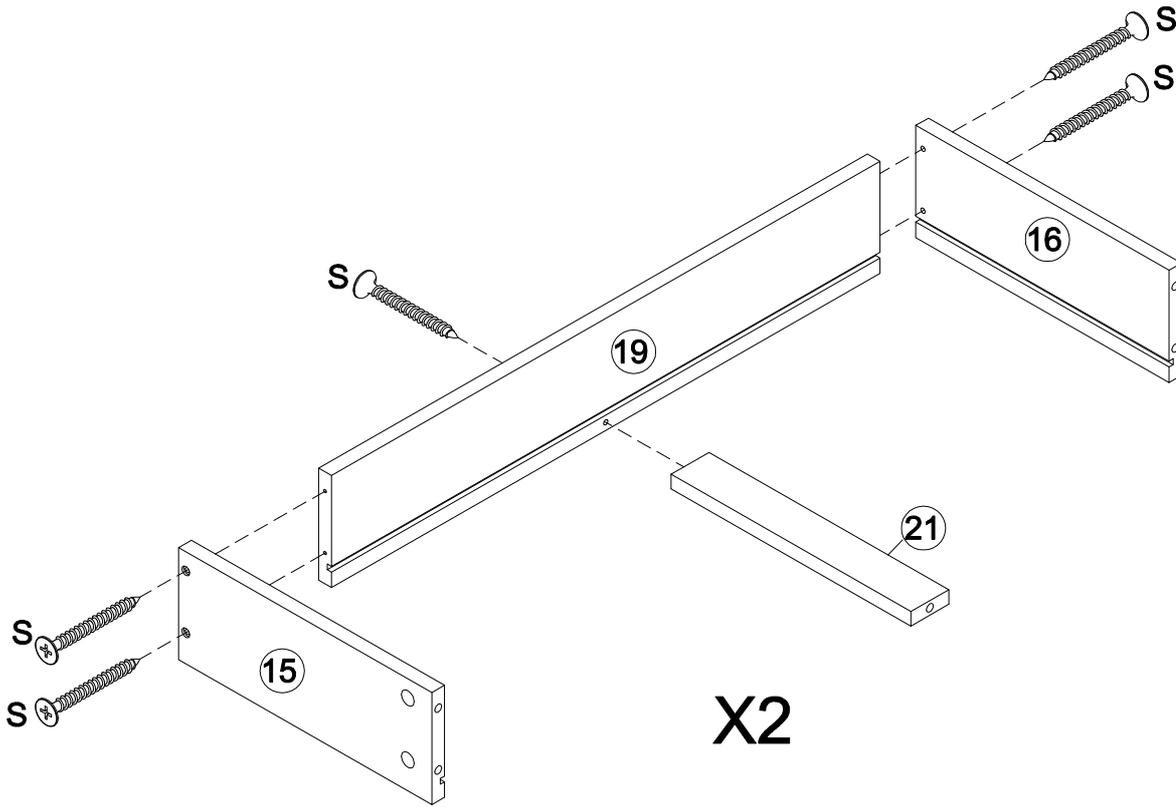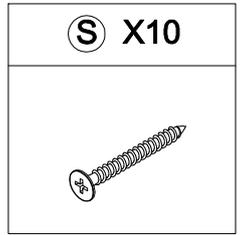


STEP 21

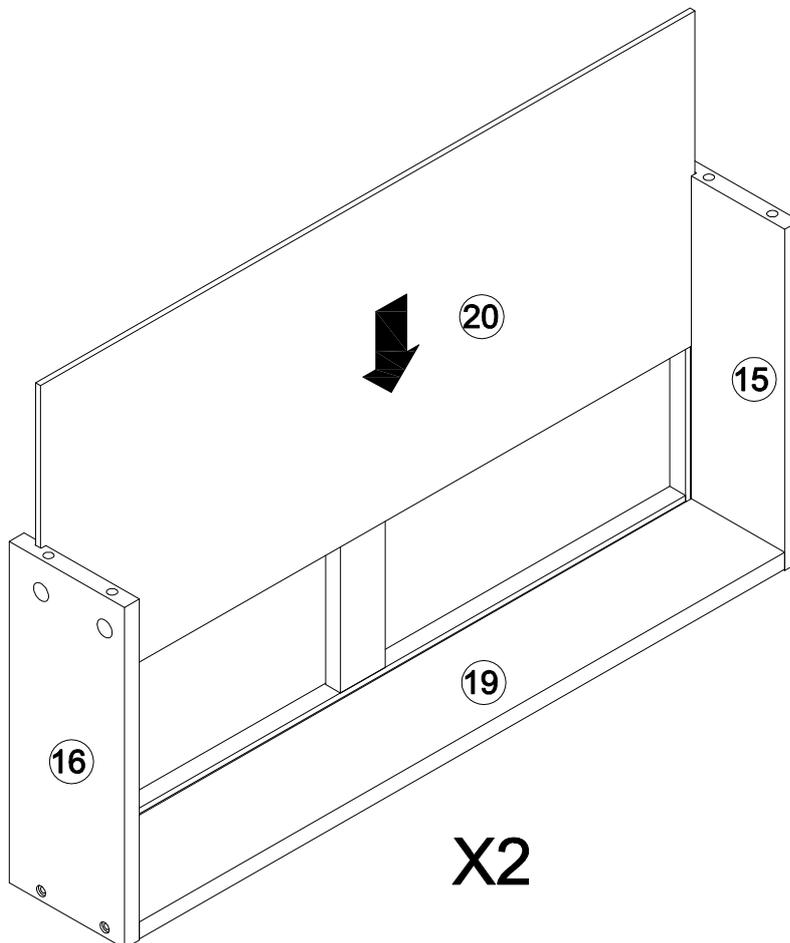


STEP 22
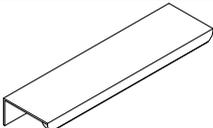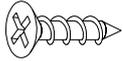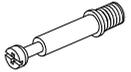
<b>K</b> X2	<b>J</b> X4	<b>C</b> X10
		

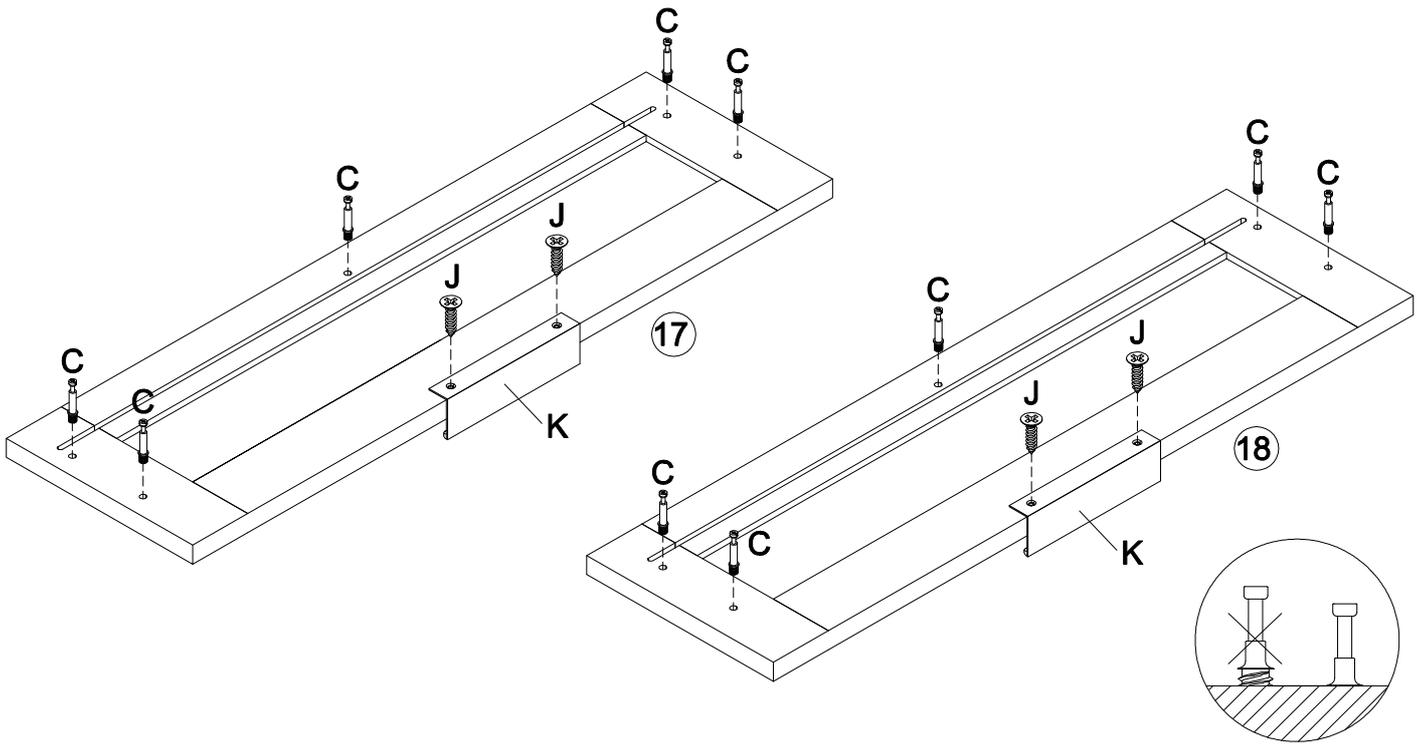


STEP 23


<b>B</b> X14

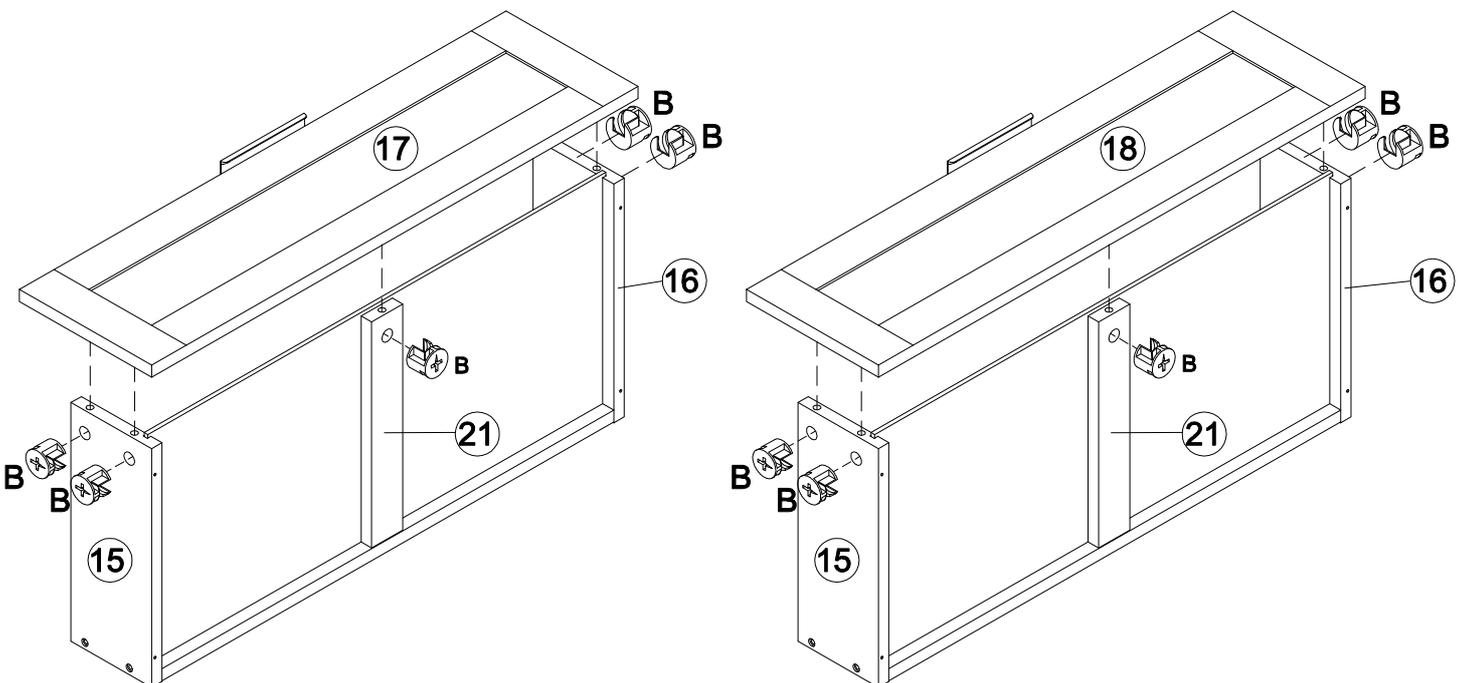
STEP 24

(J) X8	(DL) X2	(DR) X2
		
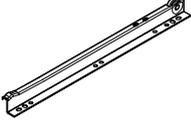
# Drawers x2

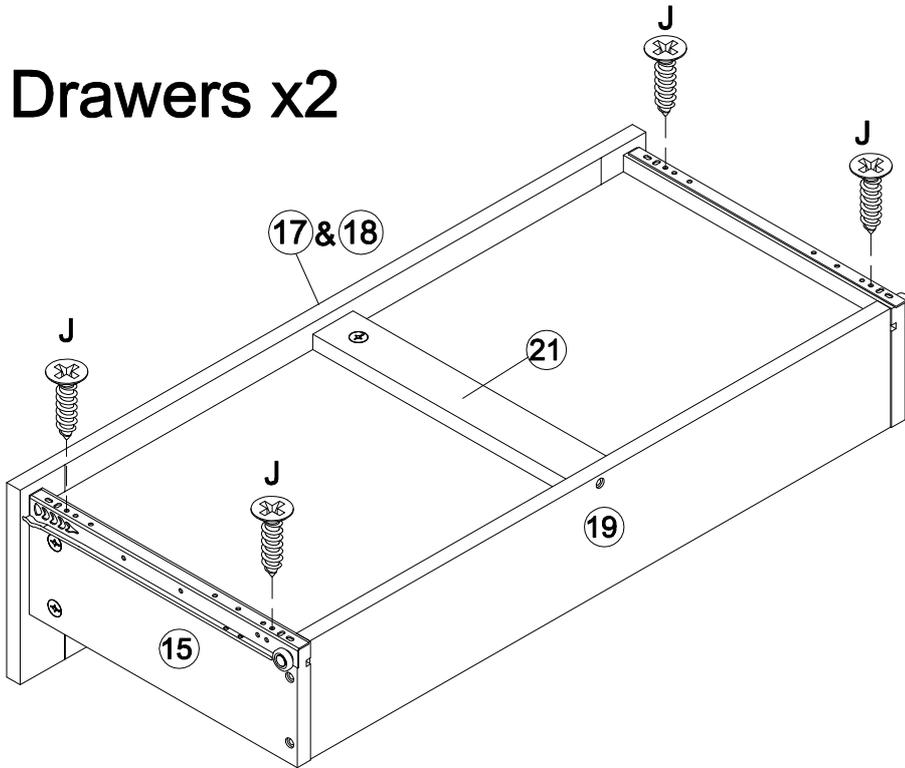

STEP 25

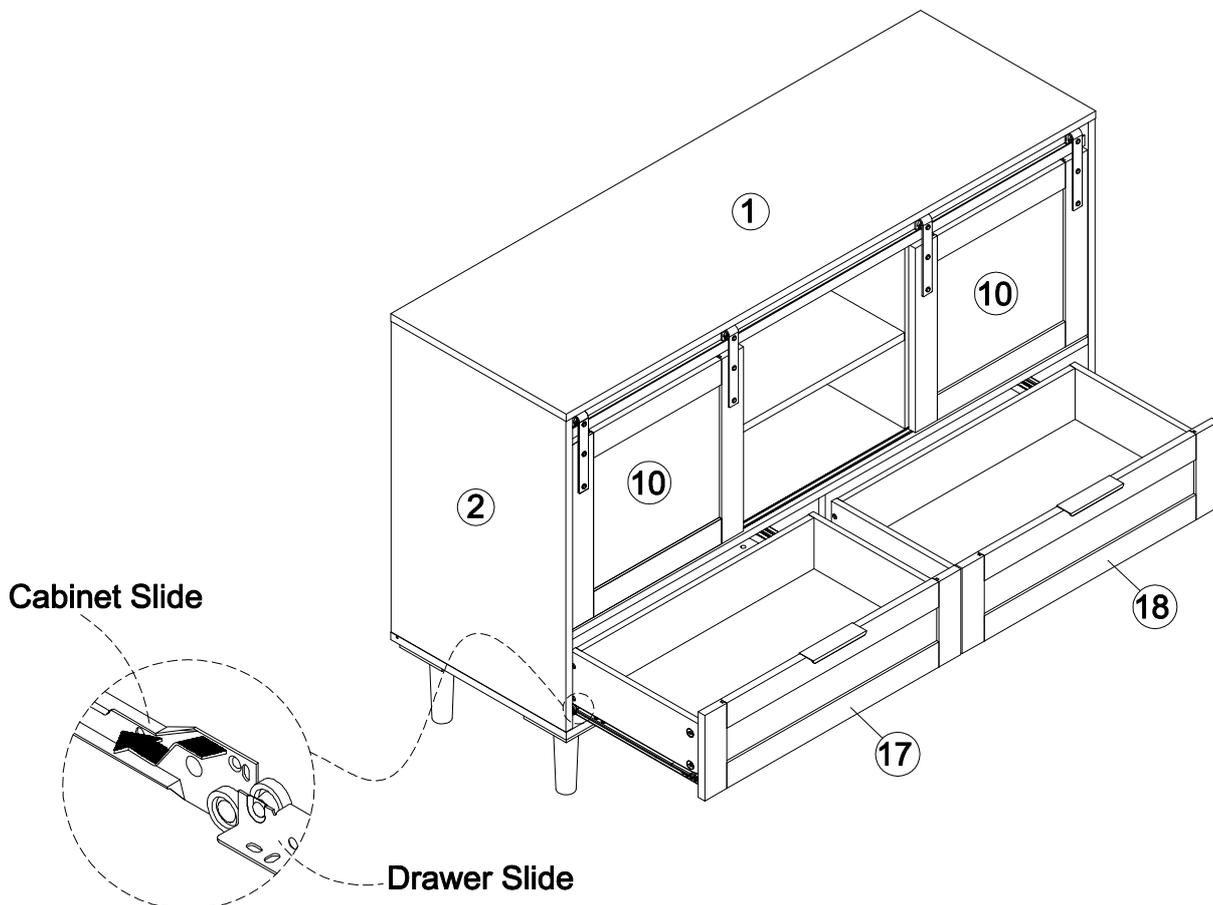

STEP 26

