





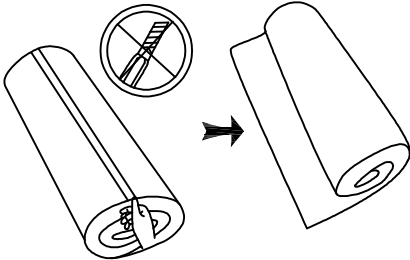
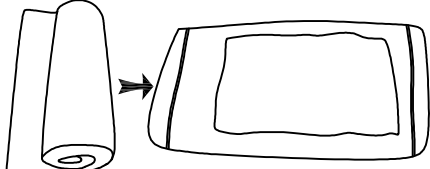
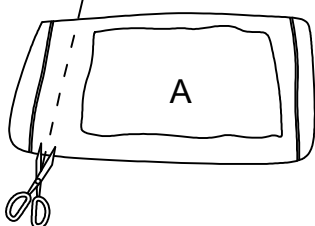



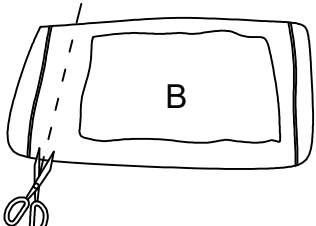



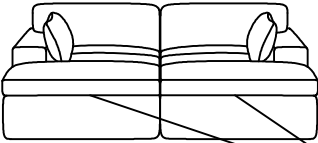
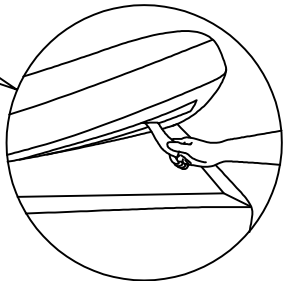
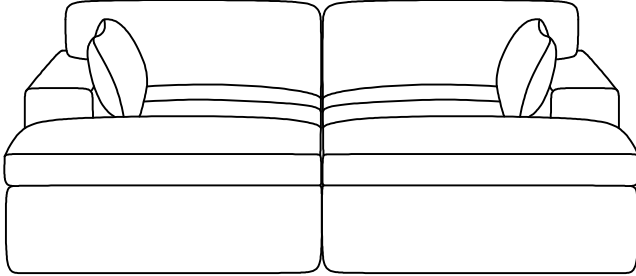



Assembly Instruction

A BOX	 x1	 x1	 x1
B BOX	 x1	 x1	 x1
STEP:1 Do not use knife  Tear off the tape		STEP:2 	
STEP:3  →  x1  x1  x1		STEP:4  →  x1  x1  x1	
STEP:5  Tear off the protective film of the velcro. 		  The sofa cushions need 72hours to decompress and fully inflate before using them.	